

# Basic Operations



<b>Menu Operations.....</b>	<b>2-2</b>	<b>Advanced Features.....</b>	<b>2-23</b>
Accessing Handset Functions.....	2-2	Main Menu .....	2-23
Icons/Notifications.....	2-3	Desktop Icons .....	2-23
Navigating through Menus .....	2-6	Text Entry .....	2-24
<b>Multitask .....</b>	<b>2-8</b>	Templates .....	2-25
Activating Another Function.....	2-8	Dictionaries.....	2-25
Toggling Functions.....	2-8	Phone Book .....	2-26
<b>Text Entry .....</b>	<b>2-9</b>		
Overview .....	2-9		
Entering Characters in 5-touch Mode.....	2-10		
Editing Text .....	2-12		
Editing Templates .....	2-13		
Using Dictionaries .....	2-13		
Entering Characters in 2-touch Mode.....	2-14		
Entering Characters in T9 Input Mode.....	2-14		
<b>Phone Book .....</b>	<b>2-17</b>		
Overview.....	2-17		
Creating Phone Book Entries.....	2-18		
Using Phone Book .....	2-19		
Phone Book Settings .....	2-20		

## 2



## Accessing Handset Functions

- Descriptions in this guide are based on the default menu theme, **Big Character Menu**. If menu theme is changed, handset operations will differ from descriptions in this guide.

### From Main Menu

Press **MENU** to open Main Menu. Use **UP** to select an item and press **ENTER** to open sub menus.



Main Menu

### Tip

- Handset returns to Standby after 15 seconds of inactivity.

## Using Softkeys & Multi Selector

Press Softkeys or use Multi Selector in Standby to access assigned functions.

### Softkeys

- **[M]**: Open Mail menu.
- **[Y]** (Press and hold): Open Yahoo! Keitai menu.
- **[F]**: Access the function assigned to the key.

### Multi Selector

- **[1]**: Open S! Quick News List.
- **[2]**: Open Phone Book Search window.
- **[3]**: Open Received Calls window.
- **[4]**: Open Redial window.

## Keyword Search

 
 
Enter keywords to search for menu items. Note that menu theme must be set to **Basic Menu** or **Original theme**.

- See P. 2-23 for details on changing menu theme.



### 2 Enter keyword **→** **[ENTER]**

<Example> Enter "mail"

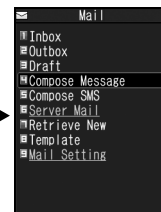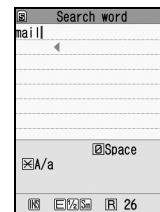

Corresponding results appear.

### 3 Select an item **→** **[ENTER]**

Press **[Y]** to toggle results.

### Tip

- If menu theme is changed, handset operations will differ from descriptions in this guide.

 


# Menu Operations

## From Original Menu

Assign often-used functions to Original Menu for quick access. Note that menu theme must be set to **Basic Menu** or **Original theme**.

- See P. 2-23 for details on changing menu theme.

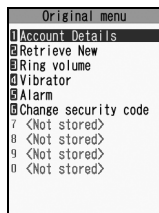

Press to toggle between Main Menu and Original Menu.

### Tip

 
 
- If menu theme is changed, handset operations will differ from descriptions in this guide.

## Enter Menu Item Number

Enter these numbers for direct menu access. Note that menu theme must be set to **Basic Menu** or **Original theme**.

- See P. 14-20 for menu item numbers.
- See P. 2-23 for details on changing menu theme.

<Example> Access **Select ring tone** (menu no. 13)

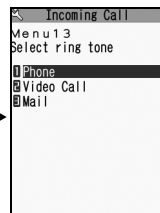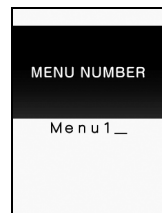

### Tip

- If menu theme is changed, handset operations will differ from descriptions in this guide.

## Icons/Notifications

Add functions to Icon window and use them as shortcuts. Notifications appear to inform you of missed calls, new messages, etc. Select a notification to check the information. The following shortcuts are set by default.

- TV
- Photo Mode
- Pedometer
- Loupe



Icons



# Menu Operations

2

Basic Operations

## Icons

Icon	Function
	S! Quick News List
	Photo Mode
	TV
	Quick Search
	Call Phone Number
	Compose S! Mail
	Compose SMS
	Access Webpage (Yahoo! Keitai)
	Access Webpage (PC Site Browser)
	Play Melody

Icon	Function
	Show Image
	Play Video
	S! Appli
	Inbox Folder
	Movie Mode
	Voice Mode
	Schedule
	To Do List
	Text Memo
	Bar Code Reader

Icon	Function
	Text Reader
	Music Player
	Life History Viewer
	Calculator
	Dictionary
	Receive IR Transmission
	Original Menu
	PC Site Browser
	Pedometer
	Loupe



# Menu Operations

## Notifications

Icon	Function/Information
 Miss	Missed Calls
 Msg	Answering Machine Play/delete messages.
 Msg	Answering Machine (Video Message) Play/delete Video Messages.
 VM	Voice Mail
 New	New Messages
 Miss	Missed Alarm
 ALARM	Missed program
 REC FINISH	Timer Recording Finished

Icon	Function/Information
 MAX	Maximum Call Cost Limit Reached
 UPDATE	Software Update
 UPDATE	New S! Info Channel
 Miss	S! Info Channel Reception Failure
 New	New Weather Info.
 Miss	Weather Info. Reception Failure
 Get	View Content Keys

Notifications disappear after accessing the functions/information. Answering Machine and Voice Mail notifications disappear after message is played back.

## Adding Icons

Add up to 15 icons.

- 1 From a function → → **Add desktop icon** →

## Accessing Icons & Notifications

- 1



Icon Window

- 2 → **Select an icon** →

■ Scrolling Icons





# Menu Operations

 
2

Basic Operations

## Navigating through Menus


### Scrolling Pages

Use or to scroll next/previous pages.

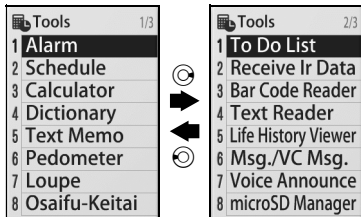

### Selecting Menu Items Using Keypad

 Use keypad to enter number corresponding to menu item.

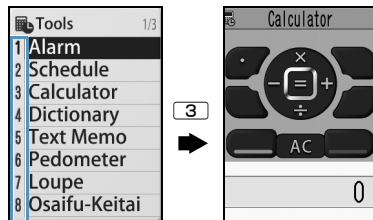

Menu Numbers

## Return to Previous Window or Standby

Press to cancel operation and return to previous window.

Press to return to Standby.

● May not apply to all functions/windows.

## More Features

### Advanced

#### Main Menu

- Change Menu Theme

▶ P. 2-23

#### Desktop Icons

- Delete Notifications
- Edit Title of a Desktop Icon
- Change Icon Image
- Check Icon Information
- Change Order of Desktop Icons
- Delete Desktop Icons
- Reset Desktop Icons
- Change Theme of Desktop Icons
- Show/Hide Desktop Icons

▶ P. 2-23

### Customize

#### Display Settings

- Set Softkey Color

▶ P. 13-3

#### Desktop Icons

- Set Desktop Theme
- Change Icon Design of a Theme
- Change Order of Icons of a Theme
- Copy Icons to Another Theme
- Move Icons to Another Theme
- Delete Icons of a Theme



# Menu Operations

- Set New Message Indicator in 3D

(▶ P. 13-6)

## Menu Display Settings

- Set Menu Theme
- Change Icon Design (Original Theme)
- Change Background (Original Theme)
- Reset Original Theme Settings
- Save Last Selected Menu Item to Memory
- Add a Menu Item to Original Menu
- Change Order of Original Menu Items
- Cancel Original Menu Items
- Reset Original Menu
- List View and Details View

(▶ P. 13-7)

## Shortcut Key

- Change Function Assigned to Shortcut Key

(▶ P. 13-25)



Activate one function per group at one time.

Function Group	Function
Mail Group	Mail
Yahoo! Keitai Group	Yahoo! Keitai
S! Appli Group	S! Appli
Settings Group	Settings, Optional Services
Tools Group	Data Folder, Tools, Phone Book, Own Data, Camera
TV & Music Group	TV, Music

- In **Big Character Menu**, function categorization differs. Therefore, some functions that are inaccessible simultaneously in other Menu settings may be accessed.
- See P. 14-2 for available combinations of functions that can be activated at the same time.
- Transmission fees are incurred while accessing functions during a voice call.

## Activating Another Function

Activate another function without exiting current function.

### 1 While using a function → MENU →

- ▶ To Activate Function from Main Menu

MENU → Select another function → ●

- ▶ Mail Function



- ▶ To Access Yahoo! Keitai Portal

 


- ▶ To Activate Function Assigned to Shortcut Key



## Toggling Functions

### 1 When multiple functions are active → MENU

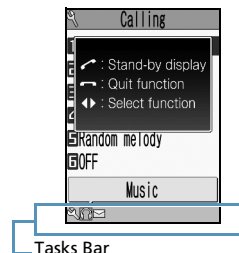

Task Switch Window

To go to Standby, press [Z].

Press MENU to reopen Task Switch window.

### 2 → Select a task indicator → ●

#### Tip

- To End Multitask:  
[Task Switch] window → [Z] → Quit selected or Quit all function → ●
- Alternatively, press and hold MENU to end Multitask and return to Standby.





# Text Entry

Handset has three text input methods:

 
5-touch, 2-touch and T9 Input.

- This guide mainly explains Japanese text entry in 5-touch mode.

## Overview

### Text Entry Window

A text entry window consists of Character Entry Pane, Guide Pane and Status Pane. Indicator and key descriptions are as follows:

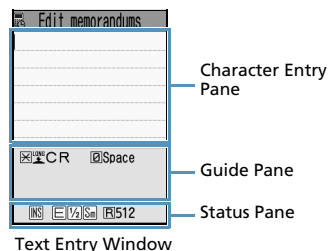

### Character Entry Pane

	Cursor
◀	End mark (end of text)

### Guide Pane

▲▼ CHG	⌚ to convert characters
▲▼ All	⌚ to search Phone Book
▲▼ Search	
◀▶	⌚ to specify a text range to copy/cut
▲▼ Area	
☒ LONG CR	Press and hold ⌘ to insert line feed
☒ A/a	⌘ to switch case of each character, or to add dakuten ( ' )/handakuten ( " )
☒ AA → aa	⌘ to cancel Caps Lock mode
☒ aa → Aa	⌘ to set Shift mode
☒ Aa → AA	⌘ to set Caps Lock mode
↶ Back	↶ to cycle characters on a key in reverse order (e.g. え → う)
☒ Space	⌘ to enter a space in alphanumeric entry mode for 5-touch mode

### Status Pane

2 5	Text input method (2-touch/T9 Input mode) (No indicator for 5-touch mode)
INS OVR	Insert/Overwrite mode
漢 力 ㇿ ㇾ	Character entry mode
ㇿ	Kuten code input mode (P. 2-25)
1/2 1/2	Double-byte/Single-byte mode
Sm	Lower case input mode
SHIFT CAPS LOCK	Shift/Caps Lock mode
R	Bytes remaining for text entry
In	Number of entered characters (appears when entering text to USIM Phone Book/SMS message)




In some instances, a second window opens with text entry window.







Text entry window

## Referring to Dictionary from a text entry window



## Switching Windows

Press  and select **Change Window** to switch windows.


## Changing Text Input Methods

- 1** [Text Entry] window  $\Rightarrow$    $\Rightarrow$  **CHG input method**  $\Rightarrow$    $\Rightarrow$  Select a text input method  $\Rightarrow$    
Alternatively, press and hold .

## Toggling Character Entry Modes

- 1 [Text Entry] window** ➡   
Press  to toggle entry modes.  
Kanji/hiragana ➡ Katakana ➡  
Alphanumerics ➡ Numbers

### Tip



- In 2-touch mode, press  to toggle single-byte and double-byte modes.

## Interruptions during Text Entry

## When Battery Runs Out

Battery alarm sounds and **Recharge Battery** appears. Text is automatically saved. Access the same function to continue text entry. Text may not be saved depending on the function.

### When is Pressed

A message appears asking whether to end text entry. Select **YES** and press  to end text entry without saving the text. To continue text entry, select **NO** and press .

## When a Voice Call Arrives

Answer the call. After call ends, text entry window returns.

## Entering Characters in 5-touch Mode

Press a key multiple times to cycle through letters assigned to that key.

- For key assignment, see P. 14-10.

## Kanji, Hiragana & Katakana

Enter a reading (in hiragana) and convert to kanji, katakana, etc.

## Using Word Prediction

Enter a character and Word Prediction suggests words starting with that character. Word Prediction also suggests word selection for words to follow. Switch to kanji/hiragana mode to use Word Prediction.

 


# Text Entry


<Example> Entering “携帯電話”

1 [Text Entry] window → 2 (four times)

“け” is entered in Character Entry Pane.  
Suggestion list shows predictions for words beginning with “け” in Guide Pane.

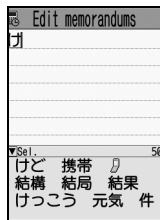

2 → Select “携帯” →

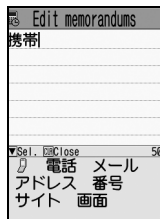 


“携帯” appears in Character Entry Pane.  
A suggestion list of words that follow “携帯” appears in Guide Pane.

■ When Required Word Does Not Appear

→ CLEAR

Continue hiragana (reading) entry in Character Entry Pane to narrow down selection.

 3 → Select “電話” →

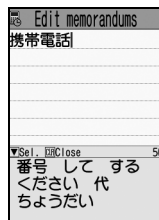

■ To Exit Suggestion List

→ CLEAR or /R

## Tip

 
- Handset has a learning feature that adds entered words to the suggestion list. Press and hold CLEAR to delete an added word from the suggestion list.

## Converting Hiragana

If the required suggestion does not appear or word prediction is set to off, convert to Kanji as shown below:

<Example> Entering “佐々木”

1 [Text Entry] window → 3 (once)  
→ → 3 (once) → 2 (twice)

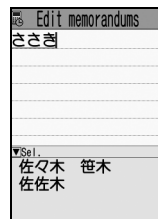

2 /R

■ To Determine Entered Hiragana without Converting It

→

3 Select a word →

■ To Change Conversion Range

→



# Text Entry

## Dakuten ( ` ) & Handakuten ( ˆ )

<Example> Entering “が”

- 1 [Text Entry] window ⇨ [2] (once)  
⇨ [✖] ⇨ [●]

 
## Switching to Lower Case

<Example> Change “つ” to “つ”

- 1 [Text Entry] window ⇨ [4] (three times)  
⇨ [✖] ⇨ [●]

## Pictographs & Symbols

- 1 [Text Entry] window ⇨ [✉]

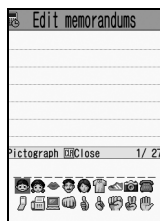

- 2 Select a pictograph/symbol ⇨ [●]  
Press [✉] or [✉] to toggle pictograph/symbol categories.

## To Toggle Full-Screen List and Continuous Entry



- 3 [CLEAR]

The pictograph/symbol list window is closed.

## Emoticons

- 1 [Text Entry] window ⇨ [✉] ⇨  
**Face Mark** ⇨ [●]
- 2 Select an emoticon ⇨ [●]

## Common Phrases (Templates)

- 1 [Text Entry] window ⇨ [✉] ⇨  
**Common phrases** ⇨ [●]
- 2 Select a folder ⇨ [●] ⇨ Select a phrase ⇨ [●] (twice)

## Alphanumerics, Numbers & Katakana

Enter alphanumerics, numbers or katakana in kanji/hiragana input mode.

- 1 [Text Entry] window ⇨ Enter hiragana ⇨ [✉] ⇨ Select a character ⇨ [●]

## Editing Text

### Deletion & Correction

- 1 [Text Entry] window ⇨ Move cursor to the left of the character to delete ⇨ [CLEAR]  
 ■ To Delete All Characters to the Right of Cursor  
 ⇨ Press and hold [CLEAR]  
 ■ To Delete Entire Text  
 ⇨ Move cursor to the end of text ⇨ Press and hold [CLEAR]

- 2 Position cursor ⇨ Enter correct characters

## Copy, Cut & Paste

- Only one entry can be stored on clipboard. If you copy or cut new text, the previously copied or cut text is overwritten.
- Copied or cut text can be pasted repeatedly until you copy or cut new text, or turn handset power off.

- 1 [Text Entry] window ⇨ [✉] ⇨  
**Copy or Cut** ⇨ [●]

 


# Text Entry

- 2 Move cursor to beginning of characters ➡ ●
- 3 Move cursor to end of characters ➡ ●
- 4 Position cursor ➡ [P] ➡ **Paste** ➡ ●

## Editing Templates

- 1 [MENU] ➡ **Settings** ➡ ● ➡ **Input Support** ➡ ● ➡ **Common Phrases** ➡ ●

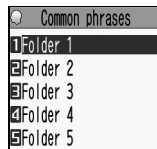

Templates (Common phrases) Window

- 2 Select a folder ➡ ●



Templates List


- 3 Select an entry ➡ [P] ➡ **Enter text** ➡ ●

## Using Dictionaries
 
### Saving Words to Own Dictionary

Save frequently used words to Own Dictionary. For each word, save a reading (in hiragana). When the reading is entered in a text entry window, the word appears among the suggestions.

- 1 [MENU] ➡ **Settings** ➡ ● ➡ **Input Support** ➡ ● ➡ **Own Dictionary** ➡ ●

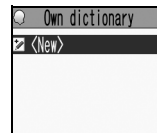

Own Dictionary Window

- 2 **<New>** ➡ ● ➡ **Enter word** ➡ ● ➡ **Enter reading** ➡ ●

### Tip

- To check saved words:  
Select a word ➡ ●

 


# Text Entry

## Using Downloaded Dictionaries

Download dictionaries from Yahoo! Keitai sites. Dictionary must be enabled in advance.

- 1 ⇒ **Settings** ⇒ ⇒ **Input Support** ⇒ ⇒ **DL Dictionary** ⇒

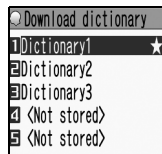

Downloaded Dictionary Window

- 2 Select a dictionary ⇒   
★ appears next to the enabled dictionary.

### Tip

- To disable a dictionary: [Downloaded Dictionary] window ⇒ Select a dictionary with ★ ⇒
- If an emoticon dictionary is enabled, its content is reflected in the emoticon list when entering emoticons.

## Entering Characters in 2-touch Mode

Each hiragana character is entered by combining two key presses.

- For combinations of character input keys, see P. 14-11.
- Procedures for selecting predicted words and for converting entered hiragana are the same as those used in 5-touch mode (P. 2-10).

### <Example> Entering “キャンプ”

- The following example is in Japanese text entry mode.

- 1 [Text Entry] window ⇒ (き) ⇒ (change to lower case mode) ⇒ (ゃ) ⇒ (change to upper case mode) ⇒ (ん) ⇒ (ふ) ⇒ (° )

- 2 ⇒

### Tip

- Pressing also adds dakuten (° ) and handakuten (° ) or toggles upper case and lower case.
- Press to toggle double-byte and single-byte modes.

## Entering Characters in T9 Input Mode

Press a key once for each character, and select the word from the suggestion list.

 
- For key assignment, see P. 14-12.
- When character entry mode is “Number,” 5-touch input method is automatically applied.

### <Example> Entering “春”

- The following example is in Japanese text entry mode.

- 1 [Text Entry] window ⇒ ⇒

Word predictions for the key combination appear.

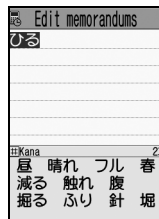

### ■ To Change Conversion Range



### ■ Toggle Kanji and Hiragana Suggestion Lists





# Text Entry

## ■ Toggle English and Japanese Suggestion Lists



## 2

Select word from among the suggestions in Guide Pane.

## ■ To Show Converted Words on Suggestion List



For example, if you specify “はる,” then “張る,” “貼る” and other words that have the same reading appear on the suggestion list.

## ■ To Show Predicted Words on Suggestion List



For example, if you specify “はる,” then “春休み,” “遥か” and other words that begin with the same reading appear on the suggestion list.

## ■ To Exit Suggestion List and Continue Character Entry



## 3

## Re-entering Words

 
Re-enter as shown below if the desired word does not appear.

### <Example> Entering “らんらんと”

- The following example is in Japanese text entry mode.

- 1 [Text Entry] window (row ら) (row わ) (row ら) (row わ) (row た) “らんらんと” does not appear in suggestion list.

## 2

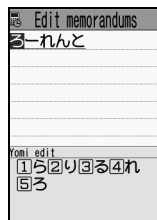

Cursor is on the first character of the word. The edit window opens in Guide Pane, where hiragana characters of row “ら” appear.

- 3 (ら) (ん) (ら) (ん) (と)



## ■ If No Correction is Necessary

- to move cursor to the next character

## ■ To End Re-entering a Word



The words predicted/converted from the re-entered word appear on the suggestion list.

## 4



## More Features

### Advanced

#### Text Entry

- Switch between Lower Case & Upper Case
- Switch between Single-byte & Double-byte
- Cycle Characters in Reverse Order
- Undo Last Operation
- Move Cursor to Top/End of Text
- Overwrite & Insert Modes
- Insert Line Feed
- Input a Space
- Use Dictionary
- Quote Text
- Use Kuten Codes

(▶ P. 2-24)

#### Templates

- Edit a Folder Name
- Reset a Folder Name
- Edit Templates
- Reset Templates

(▶ P. 2-25)

#### Dictionaries

- Edit Entries
- Delete Entries
- Edit Title
- View Information
- Delete Dictionaries

(▶ P. 2-25)

### Customize

#### Text Entry

- Set Text Input Method
- Set Word Prediction
- Set to Show T9 Suggestion Words in Kanji or Hiragana
- Clear Learning History
- Change Font Size

(▶ P. 13-25)





## Overview

Save phone numbers, e-mail addresses and other contact information to Phone Book.

### Contacts & Settings

#### Entry Items

- N · R Name & Reading
- Group
- 4 Phone Numbers
- 3 E-mail Addresses
- Address
- Birthday
- Memo
- Still Image
- Entry Number

#### Custom Settings

- Incoming Ringtone
- Incoming Image
- Illumination
- Vibration
- Outgoing Message

#### Others

- Secret Data



### Handy Functions

#### Speed Dial

Abbreviated dialing for numbers in Phone Book (P. 3-12).

#### Tomo-Den

Save frequently accessed Phone Book entries to Tomo-Den (P. 3-12).

#### Reject Calls

Reject calls from phone numbers not saved in Phone Book (P. 4-5).

## ● Back Up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, Phone Book data may be lost or altered. Damage to handset may also affect data recovery. SoftBank is not liable for damages from lost/altered Phone Book data.



### Creating Phone Book Entries

<Example> Enter a name, phone number, e-mail address and specify a group

1 **Phone** **Add to phonebook** **Phone**

2 Enter name Check reading

Reading is entered automatically. Edit as necessary.



Phone Book Entry Window

3 Select a group

4 Enter phone number Select an icon

To save additional numbers, select **<Not stored>** and repeat the same step.

5 Enter e-mail address Select an icon

To save additional addresses, select **<Not stored>** and repeat the same step.

6

### Setting Incoming Image

1 [Phone Book Entry] window

To Capture an Image with Camera **Photo mode** Capture image

To Select an Image in Data Folder **Select image** Select a folder Select a still image

### Tip

- To cancel selected image, select **Release This** and press .

### Creating Entries from Other Functions

Create entries from:

- Received calls
- Dialed Calls
- Redial
- Text Reader
- Bar Code Reader
- Receives/Sent Address List
- Yahoo! Keitai
- Phone Number Entry window

<Example> Create an entry from Received Calls

1 Select a record **Phone**

To Save As a New Entry **New**

To Add Another Entry **Add** Search Phone Book Select an entry (twice) Phone Book Entry window with the phone number automatically entered opens.

2 Enter other items ( **YES** )



## Resuming Phone Book Edit Operation

If battery is empty or if another function was activated while editing an entry, resume operation as follows:

- 1 ⇒ **Phone** ⇒ ⇒ **Add to phonebook** ⇒ ⇒ **Phone** ⇒ ⇒ **Recall** ⇒

- 2 Enter each item ⇒ (⇒ **YES** ⇒ )

### Tip

- Save entry before you exit Phone Book. Otherwise, all changes will be lost.

## Using Phone Book

 
### Dialing from Phone Book

- 1 ⇒ **Phone** ⇒ ⇒ **Phonebook** ⇒



Phone Book Entry List

- 2 or to switch tabs ⇒ ⇒  
Select an entry ⇒

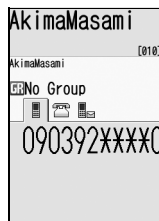

Entry Details


- 3 ⇒ **Select a phone number** ⇒  
  
Select a phone number and press to make a video call.

### Tip

 - Alternatively, select a phone number from Phone Book Entry List and press to make a call. If there are multiple entries, the first number is called.

## Specifying a Search Method

- 1

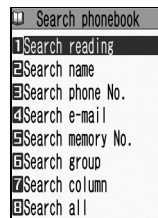

Phone Book Search Window

- 2 **Select a search method** ⇒

#### Search reading:

Enter a reading and press .

#### Search name:

Enter a name and press .

#### Search phone No.:

Enter a phone number and press .

#### Search e-mail:

Enter an e-mail address and press .

#### Search memory No.:

Enter three-digit entry number.

#### Search group:

Select a group to view saved entries.

#### Search column:

Press a key ( - or ) to access the tab corresponding to that key.



# Phone Book

2

Basic Operations

## Search all:

Phone Book is organized by tabs (Japanese syllabary order).



Phone Book Entry List

## Tip

- Phone Book entries saved on USIM Card are indicated by

## Accessing Entries from Other Functions

Access Phone Book entries from Received Calls, Dialed Calls, Redial and Received/Sent Address List.

### Access Entries from Received Calls

- 1 **Look-up phonebook**

### Access Entries from Dialed Calls

- 1 **Dialed Calls** **Look-up phonebook**

### Access Entries from Redial

- 1 **Look-up phonebook**

### Access Entries from Received Address List

- 1 Press and hold **Look-up phonebook**

### Access Entries from Sent Address List

- 1 Press and hold **Look-up phonebook**

 
## Phone Book Settings

### Customizing Handset Response

Set different ringtones, images, etc. per entry item or Group.

### Indicators

The following indicators appear for set items.

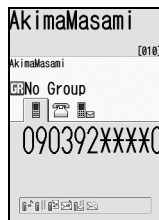

- Ringtone (Incoming Calls)
- Ringtone (Mail)
- Illumination (Incoming Calls)
- Illumination (Mail)
- Vibrator (Incoming Calls)
- Vibrator (Mail)
- Incoming Image (Calls)
- Outgoing Message (Incoming Calls)



## To Customize by Phone Number/E-mail Address

<Example> Set a ringtone for incoming voice calls

- 1 [Entry Details] ⇒ ⇒ Select a phone number ⇒ ⇒ **Ring tone/Image** ⇒
- 2 **Voice call (recv.)** ⇒
- 3 **Ring tone** ⇒ ⇒ Select a ringtone type ⇒ (⇒ Select a folder ⇒ ) ⇒ Select a ringtone ⇒

## To Customize by Group

<Example> Set illumination for incoming messages

- 1 [Phone Book Entry List] ⇒ ⇒ **Group setting** ⇒
- 2 Select a group ⇒ ⇒ **Ring tone/Image** ⇒
- 3 **Mail (recv.)** ⇒
- 4 **Illumination** ⇒ ⇒ Select a pattern ⇒

## Note

- Custom Settings are unavailable for secret Phone Book entries.
- Custom Settings are canceled when entry is set as secret.

## Tip

- To cancel Custom Settings, select an item with ★ and press .

## Restricting Calls to/from Specific Phone Numbers

Restrict calls to/from specific numbers in Phone Book. This can help manage personal calls and prevent nuisance calls.

- 1 [Entry Details] ⇒ ⇒ Select a phone number ⇒ ⇒ **Restrictions** ⇒
- 2 Enter Security Code ⇒
- 3 Select a restriction type ⇒ 

**Restrict dialing:**  
Permit outgoing calls to only one number. Note that the number can only be dialed from Phone Book.

## Call rejection:

Restrict incoming calls from a specified number.

## Call acceptance:

Receive incoming calls only from a specified number.

## Tip

- ★ indicates currently set restriction; to cancel, select the setting and press .

## When **Restrict dialing** is Set

The following operations are disabled:

- Dialing by Keypad
- Dialing from Received Calls
- Calling from Phone Book (except: calling specified number in Phone Book)

## Tip

- When **Restrict dialing** is set, all records on Redial, Dialed Calls and Sent Address List are deleted.
- Emergency numbers 110, 119 and 118 are available even when **Restrict dialing** is set.
- If you change or delete the specified number, the set restriction is canceled.  
Cancel **Restrict dialing** to edit or delete.



## Setting Secret Entries

Prevent others from accessing certain Phone Book entries.

- Phone Book entries set as secret only appear in Secret Mode or Secret Data Only Mode (P. 4-6).

**1** [Entry Details] → → **Set secret** →

### Tip

- To cancel Secret Setting: [Entry Details] → → **Release secret** →
- Entries saved while Secret Mode or Secret Data Only Mode is active are saved as secret entries.
- When a Tomo-Den entry is set as a secret entry, the entry's Tomo-Den setting is canceled.

## Managing USIM Phone Book

Phone Book entries can be copied between handset and USIM Card.

**1** → **Tools** → → **USIM Operation** → → **Enter Security Code** →

**2** **Copy** → → **Phone** → **USIM** or **USIM** → **Phone** → → **Phonebook** →

**3** **Search Phone Book**

**4** **Select an entry** →   
Repeat this step to specify other entries.

**5** → **YES** →

### Note

- Items that cannot be saved to USIM Phone Book are not copied.
- Phone Book entries set as secret cannot be copied.
- You must end copying of Phone Book entries to make/receive calls or send/receive messages.

## More Features

### Advanced

#### Creating Entries

- Save a Postal Code, Address & Memo
- Save Birthday
- Change Entry Number

(▶ P. 2-26)

#### Phone Book Search

- Change Index Tab of Phone Book Entry List
- Change Font Size
- Change Phone Number/E-mail Address Order
- Compose an S! Mail from Phone Book
- Compose an SMS Message from Phone Book (▶ P. 2-26)

#### Managing Phone Book

- Check Custom Ringtone/Image Settings by Item
- Cancel Custom Ringtone/Image Settings by Item
- Check Restriction Settings by Restriction Type
- Cancel Restriction Settings by Restriction Type
- Check Number of Phone Book Entries
- Edit a Phone Book Entry
- Copy a Phone Book Entry
- Delete Entries
- Delete Items from an Entry
- Delete an Entry from USIM Card

(▶ P. 2-27)

### Customize

#### Phone Book

- Set Preferred Search Method
- Change Group Name

(▶ P. 13-12)



# Advanced Features

## Main Menu

### Change Menu Theme

→ → Select a pattern → ● (→ YES or NO → ●)

Select from four menu themes: **Big Character Menu**, **Basic Menu**, **Simple Menu**, and **Original theme**. However, if menu theme is changed, handset operations will differ from descriptions in this guide.

## Desktop Icons

### Delete Notifications

● → Press and hold

Some notifications may not disappear depending on the type.

### Edit Title of a Desktop Icon

● → Select an icon → → **Edit Title** →

● → Enter title → ●

### Change Icon Image

● → Select an icon → → **CHG icon image** → ● → **Select icon image** → ● → Select a folder → ● → Select a file → ●  
 To reset icon image, select **Default icon image** and press ●.

### Check Icon Information

● → Select an icon → → **Icon info setting** → ●

### Change Order of Desktop Icons

● → Select an icon → → **Sort** → ●  
 → YES → ● → → Select a position → ●

### Delete Desktop Icons

● → Select an icon → → **Delete** → ●  
 ● To Select **Delete this**  
 → **Delete this** → ● → YES → ●  
 ● To Select **Delete selected**  
 → **Delete selected** → ● → Select icons → ●  
 ● → → YES → ●  
 ● To Select **Delete all**  
 → **Delete all** → ● → YES → ●

### Reset Desktop Icons

● → → **Reset desktop** → ● → YES → ●

### Change Theme of Desktop Icons

● → → **Change desktop** → ● → Select a theme → ● → YES → ●

### Show/Hide Desktop Icons

● → → **Display setting** → ● → **Display always or Display at use** → ● (→ ●)  
 When **Display at use** is set, Desktop Icons only appear when you press ● in Standby.



## Text Entry

### Start Here

[Text Entry] window ..... P. 2-9

### Functions Before Entering Text

#### Switch between Lower Case & Upper Case

[Text Entry] window → → **Lower case** or **Upper case** → ●

#### Switch between Single-byte & Double-byte

[Text Entry] window → → **Single-byte** or **Double-byte** → ●

### Functions While Entering Text

#### Cycle Characters in Reverse Order

[Text Entry] window → Input a character →

This procedure is available in 5-touch mode.

#### Undo Last Operation

[Text Entry] window → Press and hold

#### Move Cursor to Top/End of Text

[Text Entry] window → → **Jump** → ●  
→ **To beginning** or **To end** → ●

#### Overwrite & Insert Modes

[Text Entry] window → → **Overwrite** or **Insert** → ●

Text entry windows always open in **Insert** mode.

#### Insert Line Feed

[Text Entry] window → Press and hold   
 Press to add a space at the end of text.

#### Input a Space

[Text Entry] window → → **Space** → ●  
 Press to add a space at the end of text.

#### Use Dictionary

[Text Entry] window → → **Refer dic.** → ●

- To Enter a Word  
→ **Enter word** → ● → Enter word → ●  
→ Select a dictionary → ● → Select a word  
→ ● → Read descriptions of the word
- To Select Area  
→ **Select area** → ● → Move cursor to beginning of word → ● → Move cursor to end of word → ● → Select a dictionary → ● → Select a word → ● → Read descriptions of the word
- To Enter a Word from Search History  
→ **Reference history** → ● → Select a word → ● → Select a dictionary → ● → Select a word → ● → Read descriptions of the word





# Advanced Features

2

Basic Operations

## Quote Text

[Text Entry] window → → **Quote data** → ●

- To Quote from a Phone Book Entry  
→ **Quote phonebook** → ● → Search Phone Book → Select a data item to quote text from → ● →
- To Quote from Account Details  
→ **Account Details** → ● → Enter Security Code → ● → Select a data item → ● →
- To Scan Text by Text Reader  
→ **Text reader** → ● → Scan text with camera →
- To Scan Bar Code by Bar Code Reader  
→ **Bar code reader** → ● → Scan a bar code with camera → ●

## Use Kuten Codes

[Text Entry] window → → **Kuten code** → ● → Enter kuten codes (P. 14-13)

## Templates

### Start Here

[Templates (Common phrases)] window ..... P. 2-13  
[Templates List] ..... P. 2-13

### Edit a Folder Name

[Templates (Common phrases)] window →  
Select a folder → → **Edit folder name**  
→ ● → Enter folder name → ●

### Reset a Folder Name

[Templates (Common phrases)] window →  
Select a folder → → **Reset name** → ●  
→ **YES** → ●

### Edit Templates

[Templates List] → Select a template →   
→ **Edit** → ● → Edit phrase → ●

## Reset Templates

- [Templates List] → Select a template →
- To Select **Delete this**  
→ **Delete this** → ● → **YES** → ●
  - To Select **Delete all**  
→ **Delete all** → ● → Enter Security Code  
→ ● → **YES** → ●
- User entries are deleted, and preinstalled templates return to default.

## Dictionaries

### Start Here

[Own Dictionary] window ..... P. 2-13  
[Downloaded Dictionary] window .... P. 2-14

## Own Dictionary

### Edit Entries

[Own Dictionary] window → Select an entry → → Edit word → ● → Edit reading → ●



# Advanced Features

2

Basic Operations

## Delete Entries

[Own Dictionary] window → Select an entry → → **Delete** → ●

● To Select *Delete this*  
→ *Delete this* → ● → **YES** → ●

● To Select *Delete selected*  
→ *Delete selected* → ● → Select entries  
→ ● → → **YES** → ●

● To Select *Delete all*  
→ *Delete all* → ● → Enter Security Code  
→ ● → **YES** → ●

## Downloaded Dictionaries

### Edit Title

[Downloaded Dictionary] window →  
Select a dictionary → → **Edit title** → ●  
→ Edit title → ●

### View Information

[Downloaded Dictionary] window →  
Select a dictionary → → **Dictionary info**  
→ ●

## Delete Dictionaries

[Downloaded Dictionary] window →

Select a dictionary →

● To Select *Delete this*  
→ *Delete this* → ● → **YES** → ●

● To Select *Delete all*  
→ *Delete all* → ● → Enter Security Code →  
● → **YES** → ●

## Phone Book

### Start Here

[Phone Book Entry] window.....P. 2-18

[Phone Book Entry List] .....P. 2-19

[Entry Details] .....P. 2-19

## Creating Entries

### Save a Postal Code, Address & Memo

[Phone Book Entry] window → or   
→ ● → Enter content → ●

### Save Birthday

[Phone Book Entry] window → → ●  
→ Enter date of birth → ●

## Change Entry Number

[Phone Book Entry] window → → ●  
→ Change entry number → ●

## Phone Book Search

### Change Index Tab of Phone Book Entry List

[Phone Book Entry List] → → **Change Display** → ● → **Alphabet, Memory No. or Group** → ●

### Change Font Size

[Phone Book Entry List] / [Entry Details] →  
 → **Standard font, Big font** → ●

### Change Phone Number/E-mail Address Order

[Entry Details] → Select a phone number/e-mail address → → **Move to top** → ●

This procedure is available when more than one phone number/e-mail address is saved to a Phone Book entry.



## Advanced Features

### Compose an S! Mail from Phone Book

[Entry Details] → → Select an e-mail address → → Compose S! Mail

### Compose an SMS Message from Phone Book

[Entry Details] → → Select a phone number → → **Compose SMS** → → Compose SMS message

## Managing Phone Book

### Check Custom Ringtone/Image Settings by Item

[Phone Book Entry List] → → **Ring tone/image** → → Select an item with ★ →

Select another item with ★ to view that setting.

### Cancel Custom Ringtone/Image Settings by Item

[Phone Book Entry List] → → **Ring tone/image** → → Select an item with ★ → → Select an item with ★ → → **Release settings** → → YES →

When the same ringtone/image is set for multiple entries, canceling the setting for one entry cancels setting for all entries.

### Check Restriction Settings by Restriction Type

[Phone Book Entry List] → → **Restrictions** → → Enter Security Code → → Select a restriction type with ★ → → **Check settings** →

### Cancel Restriction Settings by Restriction Type

[Phone Book Entry List] → → **Restrictions** → → Enter Security Code → → Select a restriction type with ★ → → **Release settings** → → YES →

### Check Number of Phone Book Entries

[Phone Book Entry List] → → **No. of phonbook** →

### Edit a Phone Book Entry

[Entry Details] → → **Edit phonebook** → → Edit each item → → YES → Select and edit the entry number. The edited entry is saved as a new entry and the original entry remains as before.

### Copy a Phone Book Entry

[Entry Details] → → **Copy to USIM** or **Copy from USIM** → → YES →

### Delete Entries

[Phone Book Entry List] → Select an entry → → **Delete data** →

- To Select **Delete this** → **Delete this** → → YES →
- To Select **Delete selected** → **Delete selected** → → Select entries → → YES →
- To Select **Delete all** → **Delete all** → → Enter Security Code → → YES → → YES →



#### Delete Items from an Entry

[Entry Details] → → Select an item → → Delete data → ● → Delete phone No., Delete mail add., Delete address, Delete birthday, Delete memorandums or Delete image → ● → YES → ●

#### Delete an Entry from USIM Card

→ Tools → ● → USIM Operation → ● → Enter Security Code → ● → Delete → ● → USIM → ● → Phonebook → ● → Search Phone Book → Select an entry → ● → → YES → ●