 


# Music Player & S! Appli

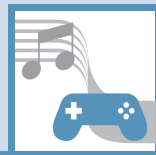

<b>About Music Player .....</b>	<b>9-2</b>
Playback Windows .....	9-3
Downloading Music .....	9-4
<b>Music Playback.....</b>	<b>9-5</b>
Playing Music.....	9-5
Using Playlists .....	9-6
<b>S! Appli.....</b>	<b>9-8</b>
About S! Appli.....	9-8
Downloading S! Appli.....	9-8
Activating S! Appli .....	9-8
<b>Advanced Features .....</b>	<b>9-10</b>
Music Player.....	9-10
S! Appli .....	9-11

# 9

 


# About Music Player

Use Music Player to play and organize songs on handset.

- Access the Internet to download music.
- Also play videos with Music Player.
- Some files are unplayable depending on their format.

- Fully charge battery beforehand. Play unavailable on low charge, even when is pressed and held with handset closed.
- Alarm notification, received calls, etc. while playing music will pause play. For videos, select the same video to resume watching.

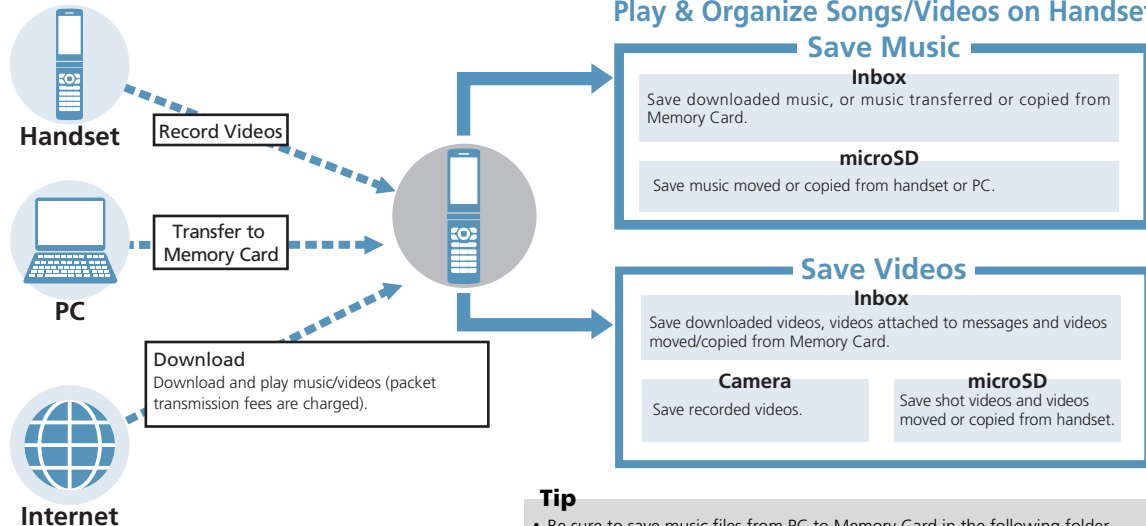


### Tip

- Be sure to save music files from PC to Memory Card in the following folder.  
 ¥PRIVATE¥MYFOLDER¥My Items¥Music




## Playback Windows

 Normal Screen Mode

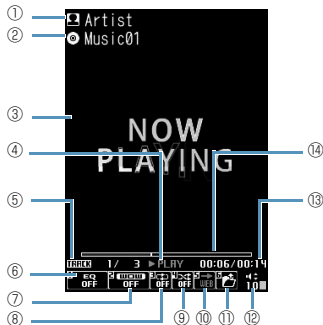

Full Screen Mode (For Video Playback)

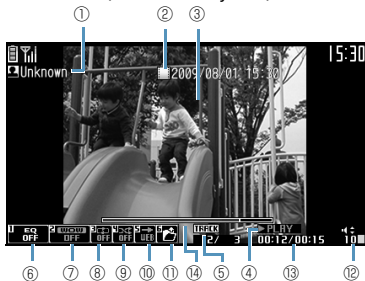 

①	Artist Name <Creator> <sup>1</sup>
②	Title
③	Playback Image
④	Playback Status ▶PLAY Play      ⏸PAUSE Pause ⏩FF Fast Forward      ⏪REW Rewind ▶SLOW Slow Play <sup>2</sup> ⏪PLAY Fast Play <sup>2</sup>
⑤	Current Track/Total Tracks in Folder (Current File Number/Total Files in Folder)
⑥	Equalizer EQ OFF OFF Bass Bass / Treble Treble Treble Reducer Treble Reducer Pop Jazz Rock Techno Classical For each genre of music Speed For audio playback
⑦	Sound Effect (WOW) OFF (WOW) (WOW) (WOW) Bass correction (WOW) (WOW) Surround (WOW) (WOW) (WOW) Bass correction/ (WOW) (WOW) (WOW) surround (WOW) (WOW) (WOW) User settings
⑧	Repeat Mode OFF OFF Repeat All <sup>3</sup> Repeat One <sup>3</sup>
⑨	Shuffle Mode ON <sup>3</sup> OFF









⑩	To Web Connect to the URL in the song.
⑪	Song/file Selection
⑫	Volume
⑬	Elapsed Playback Time/Total Playback Time
⑭	Playback Position ⏮ indicates the current playback position. Use ⏮ to move playback position during pause.

- 1 Descriptions in < > apply to video playback.
- 2 Only available when playing videos.
- 3 Only available when playing music.



## Downloading Music

- Check the fees, expiration date, etc. on the download site.

- 1**  ⇒ *TVIMusic* ⇒  ⇒ *Music* ⇒  
  - ▶ To Select from a Genre and Download  
*Download Music* ⇒  ⇒ *YES* ⇒ 
  - ▶ To Search for Music and Download  
*Search Music* ⇒  ⇒ *YES* ⇒ 

 
- 2** Follow onscreen instructions



## Playing Music


1 ⇒ **TV/Music** ⇒ ⇒ **Music** ⇒

2 Select a folder ⇒

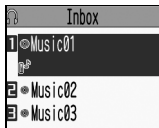

Song List

 3 Select a song ⇒

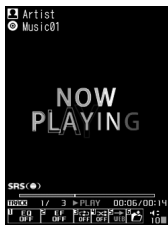

Music Player Playback Window  
(Video Player Playback Window)

### Tip

- Alternatively, in Standby, press and hold to start Music Player. Play resumes from where it was paused last.
- To play videos downloaded or recorded with camera:  
 ⇒ **Data Folder** ⇒ ⇒ **Videos** ⇒   
⇒ Select a folder ⇒ ⇒ Specify a video to play
- When video is about to be played the first time, a confirmation appears asking whether to play video in Full Screen Mode all the time. Select **YES** or **NO** and press . Confirmation no longer appears.

## Available Keys during Playback

### While Handset is Open

Pause/Play	
Adjust Volume	or press and hold
	or
Play from Beginning Play Previous Song or Video	or press and hold
Play Next Song/Video	or press and hold

Rewind	Press and hold
Fast Forward	Press and hold
Move Playback Position	during pause
Open/Close Menu	
Select a Song/File	or <b>6</b>
Set Equalizer <sup>1</sup>	<b>1</b>
Set Sound Effect <sup>1</sup>	<b>2</b>
Set Repeat Mode <sup>1</sup>	<b>3</b>
Set Shuffle Mode <sup>1</sup>	<b>4</b>
Access the Internet	<b>5</b>
Toggle Normal Screen and Full Screen <sup>2</sup>	<b>9</b>
End Playback	<b>CLEAR</b>

1 The setting toggles each time you press the key.

2 Available when playing videos.



## While Handset is Closed

Adjust Volume	77- Or  Music
Playing from Beginning Play Previous Song or Video	Press and hold  77-
Play Next Song/Video	Press and hold Music

## Using Playlists

Use playlists to play songs by genre or by artist, or gather your favorite songs and arrange them in your favorite order.

- Songs saved on memory card can also be added to playlists.

## Creating a Playlist

- 1 ⇒ **TVIMusic** ⇒ ⇒ **Music** ⇒ ⇒ **Playlist** ⇒



Playlist Window

- 2 ⇒ **Create playlist** ⇒

 
- 3 **Select a folder** ⇒ ⇒ **Select a song** ⇒   
Repeat this step to specify other songs.

- 4 **When all songs are specified** ⇒ ⇒ **Enter playlist name** ⇒

## Playing a Playlist

- 1 **[Playlist] window** ⇒ **Select a playlist** ⇒

To play a playlist from the beginning, select a playlist and press .

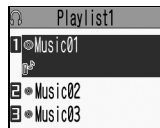

Playlist Song List

- 2 **Select a song** ⇒   
Songs play back in the listed order.

## Tip

- To play all songs, select **All tracks(phone)** in Playlist window and press (twice).

## More Features

### Advanced

#### Playing Music/Video

- Resume Playback
- Use Menu
- File Information
- Repeat
- Set Preferred Sound Effect
- Change Video Playback Speed
- Use a Different Function While Playing Music
- Check Operation Methods

▶ P. 9-10

#### Organizing Songs

- Set a Song as Ringtone
- Search for Songs
- Change Order of Songs
- Check Storage Capacity

▶ P. 9-10

#### Playlists

- Add Songs to Playlist
- Change Order of Playlist Songs
- Cancel Playlist Songs
- Edit a Playlist Name
- Copy a Playlist
- Check Playlist Information
- Delete Playlists


▶ P. 9-11



## Customize

### Playback Window

- Change Design of Playback Window
- Set Image Display Size

 P. 13-24)



## About S! Appli

S! Appli are applications designed for SoftBank handsets. Download games and other applications.

## About Lifestyle-Appli

Handset includes Osaifu-Keitai®-compatible S! Appli "Lifestyle-Appli" (P. 10-3). Change Lifestyle-Appli settings as any other S! Appli.

## About Network S! Appli

Since network S! Appli require network (Internet) connection, transmission fees are incurred. A confirmation may appear when an application is connecting to the network. Follow onscreen instructions.

### Tip

- For information on transmission fees, contact SoftBank Mobile Customer Center, General Information (P. 14-53).

## About License Information

To check Java™ and JBlend™ license information:

- 1 **MENU** ⇒ **S! Appli** ⇒ **Information** ⇒ **Information** ⇒ **Information**

## Downloading S! Appli

- 1 **MENU** ⇒ **S! Appli** ⇒ **S! Appli List** ⇒ **Download S! App** ⇒ **YES** ⇒ **YES**
- 2 **Select an S! Appli** ⇒ **(twice)**
  - ▶ **To Activate S! Appli Right Away**  
**YES** ⇒ **Select an S! Appli** ⇒ **NO**
  - ▶ **To Activate S! Appli Later**  
**NO** ⇒ **NO**

### Note

- Check the battery level before downloading S! Appli. If the battery level is low, download may fail.
- If you replace USIM Card due to damage or loss, downloaded S! Appli are no longer available.
- If you initialize handset when using an S! Appli moved to Memory Card, the S! Appli will no longer be usable.

You will need to download it again.

- When using an S! Appli moved to Memory Card, using the procedures below will resave the S! Appli to your handset and the S! Appli in Memory Card will no longer be usable.
    - Download the same S! Appli with no Memory Card inserted
    - Download the same S! Appli with different Memory Card inserted
- Use an S! Appli resaved to handset as it is in handset, or again move it to Memory Card.

### Tip

- For how to download Lifestyle-Appli, see P. 10-2.
- See S! Appli's Help menu or the download site for operational information.

## Activating S! Appli

- 1 **MENU** ⇒ **S! Appli** ⇒ **S! Appli List** ⇒ **S! Appli List**



S! Appli List

- 2 **Select an application** ⇒ **NO**

### Tip

- S! Appli is paused when a call arrives. When the call ends, a prompt appears. Select **Resume** to resume the S! Appli.
- To end S! Appli:  
While running, **End** ⇒ **End** ⇒ **End**





## More Features

### Advanced

#### S! Appli

- Check S! Appli Information
- Check Storage Capacity
- Delete an S! Appli

[▶ P. 9-11](#)

### Customize

#### When Running S! Appli

- Set Sound Volume
- Set Vibration
- Set Backlight
- Set Blinking of Backlight
- Allow/Prohibit S! Appli to Connect to Network
- Allow/Prohibit S! Appli to Write Personal Information
- Reset Security Settings of S! Appli

[▶ P. 13-24](#)

#### S! Appli

- Reset S! Appli Settings
- Delete All S! Appli

[▶ P. 13-24](#)



# Advanced Features

## Music Player

### Start Here

- [Music Player Playback] window..... P. 9-5
- [Video Player Playback] window..... P. 9-5
- [Song List] ..... P. 9-5
- [Playlist] window..... P. 9-6
- [Playlist Song List] ..... P. 9-6

## Playing Music/Video

### Resume Playback

⇒ *TV/Music* ⇒ ● ⇒ *Music* ⇒ ● ⇒

*Resume play* ⇒ ●

### Use Menu

[Music Player Playback] window/ [Video Player Playback] window ⇒ ⇒ Select an item ⇒ ●\*

\*Press to toggle.

### File Information

[Music Player Playback] window / [Video Player Playback] window ⇒ ⇒ *File property* or *Video info* ⇒ ●

### Repeat

[Music Player Playback] window ⇒ ⇒ *Action setting* ⇒ ● ⇒ *Repeat setting* ⇒ ● ⇒ *All repeat* or *Single repeat* ⇒ ●

### Set Preferred Sound Effect

[Music Player Playback] window ⇒ ⇒ *Action setting* ⇒ ● ⇒ *Sound effect* ⇒ ● ⇒ *SRS\_WOW* ⇒ ● ⇒ Select user setting 1 to 3 ⇒ ⇒ Set level for each effect ⇒ ● ●  
● To return sound effect to initial state  
⇒ Select user setting 1 to 3 ⇒ (twice) ⇒ ●

### Change Video Playback Speed

[Video Player Playback] window ⇒ ⇒ *Play menu* ⇒ ● ⇒ *Fast* or *Slow* ⇒ ●  
 Press to return to normal speed.

### Use a Different Function While Playing Music

[Music Player Playback] window ⇒ ⇒ *Switch to BGM* ⇒ ● ⇒ Activate another function  
 Press and hold in Standby during BGM playback to end Music Player.

### Check Operation Methods

[Video Player Playback] window ⇒ ⇒ *Help* ⇒ ●

## Organizing Songs

### Set a Song as Ringtone

[Song List] ⇒ Select a song ⇒ ⇒ *Select ring tone* ⇒ ● ⇒ Select ringtone item ⇒ ●

### Search for Songs

[Song List] , [Playlist] window or [Playlist Song List] ⇒ ⇒ *Search* ⇒ ● ⇒ *Title* ⇒ ● ⇒ Enter condition ⇒ ●  
 Select a song from search results and press ● to play it.

### Change Order of Songs

[Song List] / [Playlist Song List] ⇒ ⇒ *Sort* ⇒ ● ⇒ Select a criterion ⇒ ●

### Check Storage Capacity

[Song List] ⇒ ⇒ *Memory info* ⇒ ●



## Playlists

### Add Songs to Playlist

[Playlist Song List] → → **Edit playlist** → → **Add music** → → Select a folder → → Select songs → → → **YES** →

The songs you specified are added at the end of the playlist.

### Change Order of Playlist Songs

[Playlist Song List] → Select a song → → **Edit playlist** → → **Sort playlist** → → Select a position →

### Cancel Playlist Songs

[Playlist Song List] → Select a song → → **Edit playlist** → → **Release settings** →

- To Select **Release this**  
→ **Release this** → → **YES** →
- To Select **Release selected**  
→ **Release selected** → → Select songs → → → **YES** →
- To Select **Release all**  
→ **Release all** → → Enter Security Code → → **YES** →

### Edit a Playlist Name

[Playlist] window → Select a playlist → → **Edit playlist name** → → Edit playlist name →

### Copy a Playlist

[Playlist] window → Select a playlist → → **Copy to playlist** →

### Check Playlist Information

[Playlist] window → Select a playlist → → **Playlist info** →

### Delete Playlists

[Playlist] window → Select a playlist → → **Delete playlist** →

- To Select **Delete this**  
→ **Delete this** → → **YES** →
- To Select **Delete selected**  
→ **Delete selected** → → Select playlists → → → **YES** →
- To Select **Delete all**  
→ **Delete all** → → **YES** →

## S! Appli

### Start Here

[S! Appli List] ..... P. 9-8

### Check S! Appli Information

[S! Appli List] → Select an S! Appli → → **Properties** →

### Check Storage Capacity

[S! Appli List] → → **Memory Info** →

### Delete an S! Appli

[S! Appli List] → Select an S! Appli → → **Delete** → → **YES** →

