

USIM Card	1-2
About USIM Card	1-2
USIM Card Installation	1-3
USIM PINs	1-3
Parts & Functions	1-4
Handset	1-4
One-push Open Button	1-6
Key Operations in Standby	1-6
Display	1-8
About Battery	1-11
Before Charging	1-11
Battery Installation	1-13
Charging Battery	1-14
Handset Power On/Off	1-15
Manner Mode	1-16
Minding Mobile Manners	1-16
Manner-related Features	1-16
Activating Manner Mode	1-16
Activating Emission OFF Mode	1-17
Activating Drive Mode	1-17
Standby Options	1-17
Information Window	1-17
Standby Window	1-18

 
Handset Menus	1-19
Main Menu	1-19
Menu Numbers	1-20
S! Familiar Usability	1-21
One Touch Site Button	1-22
Using One Touch Site Button	1-22
Adding Websites	1-23
Private Menu	1-23
Opening Private Menu	1-23
Customizing Private Menu	1-24
Simple Mode	1-24
Activating Simple Mode	1-25
Simple Mode Menu	1-25
Passwords	1-26
Phone Password	1-26
Center Access Code	1-26
Call Barring Password	1-26
View Blind	1-27
My Number	1-27

USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use 831P or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.

USIM Card



- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If 831P is dropped/subjected to shock, 831P returns to Standby. This is not malfunction. If **Insert USIM** appears, re-insert USIM Card properly then restart 831P.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/831P with USIM Card inserted is lost or stolen, contact SoftBank Customer Center or Global Call Center (☎ P.16-32).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli (BookSurfing®, etc.) may be unusable while a different or replacement USIM Card is inserted into 831P.
- Returned USIM Cards are recycled.

Note

 
- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

USIM Card Installation

- Remove battery (☞ P.1-13) then follow steps below.


Inserting

- 1 With IC chip down, insert USIM Card

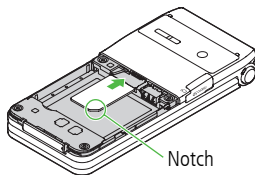

Removing

 - 1 Slide out USIM Card gently

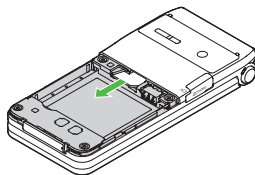

Note

- Do not force USIM Card into or out of 831P; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

USIM PINs

There are two USIM Card security codes: *PIN* & *PIN2*.

- PIN and PIN2 are set to 9999 by default.
- PIN/PIN2 can be changed (☞ P.10-3).

PIN	4 to 8-digit code used to prevent unauthorized handset use. ● When PIN Entry is <i>ON</i> (☞ P.10-2), PIN entry is required each time handset is turned on (with USIM Card inserted).
PIN2	Required to clear call costs or set maximum cost (☞ P.15-9).

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unblocking Key (PUK/PUK2) (☞ P.10-3).

 
- For information on PUK/PUK2, contact SoftBank Customer Center, General Information (☞ P.16-32).

Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Customer Center, General Information (☞ P.16-32).

Parts & Functions

Handset

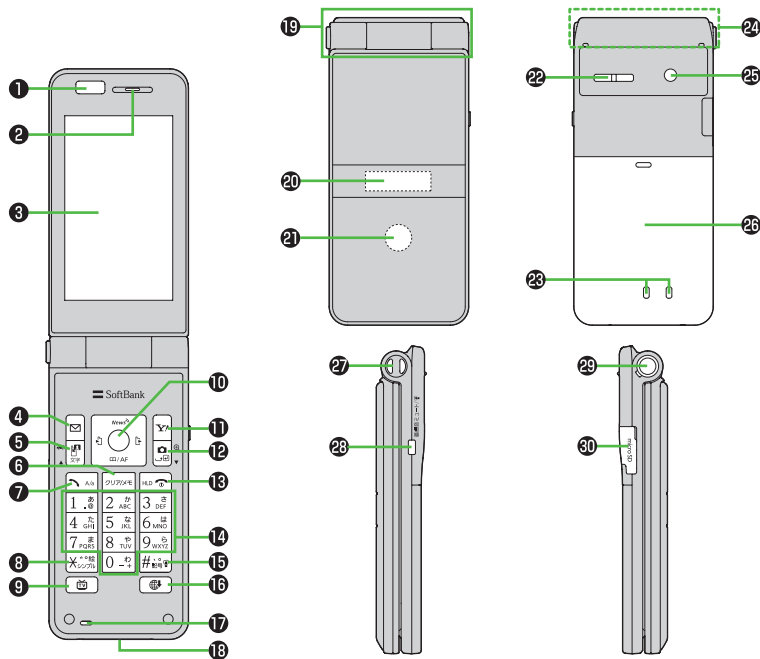


Using Earphone/Microphone

Connect following accessories (A) and (B) to External Port.

- (A) Earphone/microphone
- (B) Stereo Earphone Conversion Cable

<Operation>

 - ① Connect flat plug (A) to flat terminal (B)
- ② Connect plug (B) to External Port

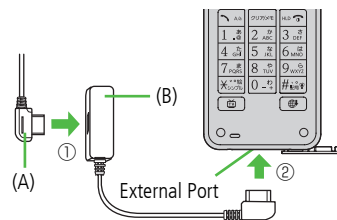



- Do not press answer button on earphone/microphone when connecting. Doing so may cause earphone/microphone to malfunction. In that case, pull out earphone/microphone, and connect again.

1 Infrared Port

- Transfer data via Infrared

 2 Earpiece**3 Main Display****4  Mail Key**

- Open Messaging menu
- Execute Left Softkey function ( P.ix)

5  Video Call/Input Mode/Drive Mode Key

- Initiate Video Call
- Toggle input mode in text entry windows
- Toggle Drive Mode

6  Clear/Memo Key

- Delete characters
- Cancel menus
- Open Answer Phone message list; Activate/cancel Answer Phone

7  Send Key

- Initiate or answer calls
- Toggle upper/lower case in text entry windows






8  * /Pictograph/Simple Mode Key

 
- Enter "*" "
- Access pictographs in text entry windows
- Toggle Simple Mode


9  TV Key

- Activate TV

10 Multi Selector

- Scroll up/down/left/right to navigate menus and text ( P.ix)
-  Open/Select Standby Window (Unavailable in Simple Mode)
-  Open Phone Book; set Auto Focus Lock
-  Open Incoming Call Logs
-  Open Outgoing Call Logs


11  Yahoo! Keitai Key

 
- Open Yahoo! Keitai Main Menu
- Execute Right Softkey function ( P.ix)

12  Camera/Line Break Key

- Activate Camera; activate Magnifying Loupe
- Enter a line break
- Toggle letters in reverse order in a text entry window

 13  End/Escape & Power Key

 - Turn handset power on/off ( P.1-15)
- End calls; return to Standby
- Place Call on hold

14  0 - 9 Keypad

- Enter phone number/text

15  # /Symbol/Manner Key

- Enter "#"
- Access symbols in text entry windows
- Toggle Manner Mode

16  One Touch Site Button

- Access saved URLs

17 Microphone**18 External Port**

- Connect AC Charger (sold separately) or other accessories here

19 Hinge**20 External Display****21 Notification Light/Charging Indicator**

- Flashes for incoming transmissions; flashes while Camera/Video Camera is active
- Lights in red for charging

22 Speaker**23 Charging Terminals****24 Antenna****25 Camera****26 Battery Cover****27 Strap Eyelet****28  Side Key**

- Press to mute ringer [Open Position]
- Open Private Menu (Unavailable while Simple Mode is active)
- Toggle View Blind on/off [Closed Position]
- Toggle External Display
- Activate/cancel Manner Mode

29 One-push Open Button

 
- ( P.1-6)

30 Memory Card Slot

- Insert Memory Card here ( P.8-14)

One-push Open Button



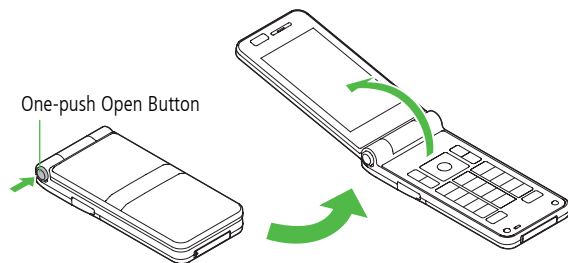







Press One-push Open Button to open handset.







 - Close handset by hand. When difficult to close, open handset all the way once, then close.
- Customize handset to answer/end calls, etc. by opening/closing handset (☞ P.15-10).
- Be careful not to drop handset when opening handset by One-push Open Button.

Key Operations in Standby

Press (less than one second) or press and hold (more than one second) a key in Standby to execute operation.

Key Operations		Functions
	Short Press	Initiate a call
	Long Press	
	Short Press	Show Standby Window*1*2
	Long Press (2+ sec)	Turn off power
	Short Press	Open Main Menu
	Long Press	Activate/cancel Keyguard
	Short Press	Open Answer Phone message list
	Long Press	Activate/cancel Answer Phone
	Short Press	Open Messaging Menu
	Long Press	Create S! Mail Composition window
	Short Press	Access Yahoo! Keitai
	Long Press	Open Yahoo! Keitai Menu
	Short Press	Open Calendar
	Long Press	Toggle Drive Mode
	Short Press	Activate Camera
	Long Press	Activate Magnifying Loupe
	Short Press	Activate TV
	Long Press	Activate Program Guide
	Short Press	Access saved URL
	Long Press	Open saved URL list

Key Operations		Functions
	Short Press	Show/select Standby Window*1*2
	Long Press	Increase earpiece volume
	Short Press	Open Phone Book
	Long Press	Decrease earpiece volume
	Short Press	Open Incoming Call Logs
	Long Press	Open the latest unread message ● Open Incoming Mail folder for read messages
	Short Press	Open Outgoing Call Logs
	Long Press	Open Sent Messages folder
[1]	Short Press	Enter "1"
	Long Press*3	Open Phone Book page "あ"; dial the number set to Speed Dial*2
[2]	Short Press	Enter "2"
	Long Press*3	Open Phone Book page "か"; dial the number set to Speed Dial*2
[3]	Short Press	Enter "3"
	Long Press*3	Open Phone Book page "さ"; dial the number set to Speed Dial*2
[4]	Short Press	Enter "4"
	Long Press*3	Open Phone Book page "た"; dial the number set to Speed Dial*2
[5]	Short Press	Enter "5"
	Long Press*3	Open Phone Book page "な"; dial the number set to Speed Dial*2

Key Operations		Functions
[6]	Short Press	Enter "6"
	Long Press*3	Open Phone Book page "は"; dial the number set to Speed Dial*2
[7]	Short Press	Enter "7"
	Long Press*3	Open Phone Book page "ま"; dial the number set to Speed Dial*2
[8]	Short Press	Enter "8"
	Long Press*3	Open Phone Book page "や"; dial the number set to Speed Dial*2
[9]	Short Press	Enter "9"
	Long Press*3	Open Phone Book page "ら"; dial the number set to Speed Dial*2
[0]	Short Press	Enter "0"
	Long Press*3	Open Phone Book page "わ"
[*]	Short Press	Enter "*"
	Long Press	Toggle Simple Mode
[#]	Short Press	Enter "#"
	Long Press	Toggle Manner Mode
[]	Short Press	Open Private Menu*2
	Long Press	Toggle View Blind on/off

 
*1 **Standby Window** setting (☞ P.15-4) applies

*2 Unavailable in Simple Mode

*3 One Touch Key setting (☞ P.15-5) applies

Display

Main Display Indicators

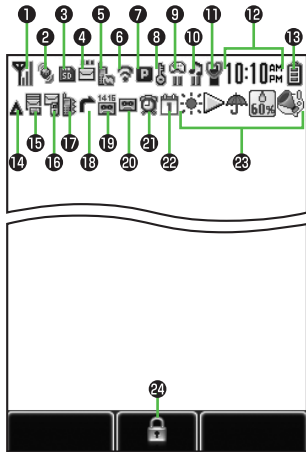

1 Signal Strength

- Strong Moderate Weak Low
- Out-of-Range
- Emission OFF Mode
- (Red) Only Packet Transmission Available

2 New S! Quick News Information

3 Memory Card

- Inserted Unusable
- Unsupported Write-protected

Call

- Video Call Voice Call

4 Secret Mode Active

- Unread Message

5 Software Update (Notification/Updating/Result)

- Digital TV Active
- New S! Information Channel Info

6 PC Site Browser Active

- Infrared Active
- USB Cable Connected

7 Network Service

- 3G Packet Transmission Available
- GSM Packet Transmission Available

Data Transmission

- Packet Transmission in Progress (PC)
- Dial-up Connection Established on PC
- 3G Packet Transmission Enabled
- GSM Packet Transmission Enabled
- 3G Packet Transmitting
- GSM Packet Transmitting

8 Secure Content

- S! Addressbook Back-up Synchronizing
- Auto Sync Settings Active

9 S! Appli Active S! Appli Paused

10 Music/Video Playback

- BGM Playing BGM Paused
- Streaming Streaming Paused

11 Manner Mode

- User Mode

- Drive Mode

12 Time

13 Battery Level

- Level 3 Level 2 Level 1
- (Red) Level 0

14 Roaming

15 Unread Message on Server

16 Messaging Lock

- Phone Book Lock

- Messaging & Phone Book Lock

17 Mute Active

- Vibration Active

- Mute & Vibration Active

18 Call Forwarding or Voice Mail Active

19 Voice Message

20 Answer Phone Active

- Answer Phone Full

- New Message Recorded

- New Message Recorded & Answer Phone Full

21 Alarm Set

22 Schedule Set (➔ P.11-3)

23 Weather Indicator (➔ P.7-14)

24 Multi Selector

 
- Keyguard Locked

- Password Lock Active

- Keyguard & Password Lock Active

External Display Indicators


- Upon closing handset, External Display lights up and goes out in 15 seconds.

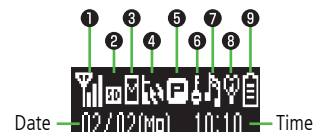

↓ (Side key)



 ↓ (Side key)

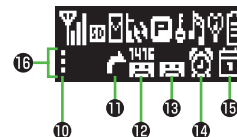

1 Signal Strength

Strong Moderate Weak Low

Out-of-Range

Emission OFF Mode

Only Packet Transmission Available

2 Memory Card

Inserted Unusable

Unsupported Write-protected

3 Unread Message**4 Software Update
(Notification/Updating/Result)**

Digital TV Active

5 Network Service

3G Packet Transmission Available

GSM Packet Transmission Available

Data Transmission

Packet Transmission in Progress (PC)

Dial-up Connection Established on PC

3G Packet Transmission Enabled

GSM Packet Transmission Enabled

3G Packet Transmitting

GSM Packet Transmitting

6 Secure Content

S! Addressbook Back-up Synchronizing

7 Music/Video Playback

BGM Playing BGM Paused

Streaming Streaming Paused

8 Manner Mode

User Mode

Drive Mode

9 Battery Level

Level 3 Level 2 Level 1

Level 0

10 Secret Mode Active**11 Call Forwarding or Voice Mail Active****12 Voice Message****13 Answer Phone Active**

Answer Phone Full

New Message Recorded

New Message Recorded &
Answer Phone Full

14 Alarm Set**15 Schedule Set****16 Indicators Corresponding to
Information Window**

When information appears in Main Display (P. 1-17), Indicators corresponding to the information appear in bottom of External Display.

Missed Call

Incoming Call Notification

New Message

New Answer Phone Message

New Voice Mail

Software Update Results

About Battery


Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

Charging Time & Operating Time Estimates

		3G Mode	GSM Mode
Charging Time		130 minutes*	
Standby Time		370 hours*	280 hours*
Talk Time	Voice Call	180 minutes*	
	Video Call	100 minutes*	—

* Approximate value

- 3G Mode/GSM Mode:  P.2-8
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.
- Battery may swell as service life nears end; this is not a problem.

Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

Battery Time


 
 
- Using handset in poor conditions may shorten battery time.
 - Extreme temperatures
 - Impaired handset, battery or Charging Terminals
 - Signal is weak/handset is out-of-range
 - 831P is left mid-operation (not in Standby)
 - Viewing TV, playing music or using S! Appli, etc.
- Extending battery time


Example:

 - Select shorter Main Display backlight time (☞ P.15-4); select **OFF** or shorter time for Keypad Backlight (☞ P.15-5).
 - Select **Silent** for Key Tone Volume (☞ P.15-3)

When Battery Runs Out

- Unless a Call is in Progress

 
A message appears and warning tone sounds. Warning tone ends automatically after two minutes; press ,  or  to cancel warning tone manually. Charge or replace battery.

 - If Manner Mode is active/Warning Tone **Off**, nothing sounds.
 - When handset is closed, press  (Side Key) to cancel warning tone.
- During a Call

A message appears and warning tone sounds via Earpiece or Speaker. After 90 seconds, call ends and 831P shuts down in 30 seconds. Charge or replace battery.

Battery Strength Indicator


- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☞ P.1-9, P.1-10) or a message appears on Display.

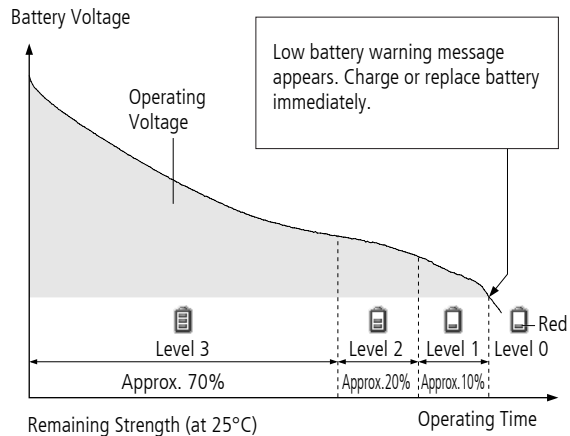

Battery Installation


- Always turn off handset power before removing battery.

 1 Press and slide to remove cover

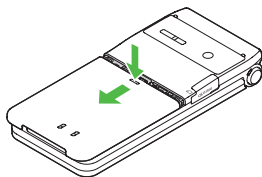


2 Insert Battery

 Align battery contacts with handset pins.

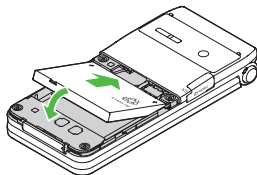


Remove Battery

 Lift battery out as shown.

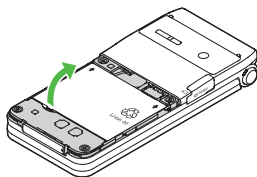

3 Replace battery cover

 Cover should click into place.

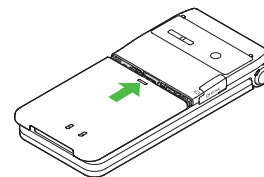

Note

- When battery is removed just after changing handset settings, changes may not take effect.
- Lithium-ion batteries are valuable and recyclable resources.
 - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
 - To avoid fire or electric shock, do not:
 - Short-circuit battery
 - Disassemble battery

 


Li-ion 00

Charging Battery

Use only specified AC Charger (sold separately).

Charging Time: Approximately 130 minutes

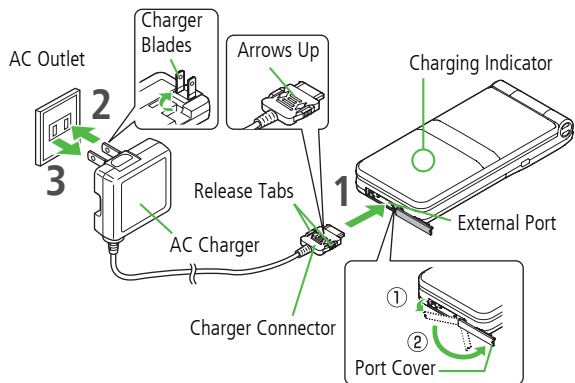

1 Connect AC Charger to handset

Insert Charger Connector (printed side up) into External Port.

2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

 
 
3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

Note

- For details, read AC Charger instructions.
- Desktop Holder (not included) can be used for charging.

Handset Power On/Off

- 1 **Press and hold**  **for 3+ seconds**
Handset enters Standby.
 - Enter PIN if PIN Entry is On (👉 P.10-2)
- 2 **Press and hold**  **for 2+ seconds**
Handset shuts down.





 



Standby

- The First Time 831P Powers Up...**
Setup window appears; enter date and time.
Enter date → Enter time (24 hours)
Day of the week is set automatically.
- If unentered, **2009/01/01 00:00** is set by default.
 - To change date and time: 👉 P.15-7

Note

- Standby Display takes a few moments to appear.
- If **Insert USIM** appears, clean and properly re-insert USIM Card then restart 831P.
- After a period of inactivity, Display turns off.

Retrieving Network Information

- When , ,  or  is pressed for the first time, 831P initiates Network Information retrieval;  to retrieve it.
- Update Network Information to use messaging, Internet, etc.
 - Update Network Information manually: **Main Menu ▶ Connectivity ▶ Retrieve NW Info ▶ **

Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.


- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.


Manner-related Features



Manner Mode (☞ Right)	Press Manner key to mute 831P tones and activate vibration for incoming transmissions.
Vibration Alert (☞ P. 15-2)	Activate in public places, meetings, etc. for silent call/message alerts.
Ringer Volume (☞ P. 15-2)	Mute call/message tones.
Emission OFF Mode (☞ P. 1-17)	Suspend all 831P transmission.
Answer Phone (☞ P. 2-12)	Use to handle incoming calls when inappropriate/unsafe to answer.
Drive Mode (☞ P. 1-17)	While driving, send a voice message informing the caller that you cannot answer the call. (Handset does not ring.)

Activating Manner Mode

Press one key to mute 831P tones, activate Answer Phone and vibration for incoming transmissions.

- Manner Mode settings can be changed (☞ P. 15-6).
- When Manner Mode is active,  appears.

1 In Standby, press and hold 

- To cancel: Press and hold  again
- To activate/cancel while handset is closed: Press and hold  [Side Key]



Note


- Shutter click, Auto Answer tone, and incoming tone via Earphone (**Volume 1**) sound even in Manner Mode.
- Media Player files are initially muted in Manner Mode; adjust volume in Playback window.
- When Alarm Priority is set to **Alarm prioritized** (☞ P. 11-6), Alarm sounds even if Manner Mode is active.

Tip

- **Settings** ● Set Manner Mode Type (☞ P. 15-6)

Activating Emission OFF Mode

Temporarily suspend all 831P transmissions; when active, all calls/messages and incoming information are blocked.

- When Emission OFF Mode is **ON**,  appears.

Main Menu ► Settings ► Call Settings
► Emission OFF Mode


1 **ON** or **OFF**



Note

- Emission OFF Mode disables Infrared transmissions.
- Emergency numbers (110, 119, 118) cannot be dialed.

Activating Drive Mode

Handset does not ring for incoming transmission. Voice guidance informs the caller you are unavailable and Answer Phone activates.


- When Drive Mode is active,  appears.

- In Standby, press and hold 
 - To cancel: Press and hold  again

Standby Options

Information Window


 
 

 
 


In Standby, Information window opens for missed calls, messages, Answer Phone messages, etc.

-  to select an item

- To close Information window: ,  [Exit] or 



Events

Call	Missed calls ( P.2-10)
Message	New messages ( P.12-11) When Feeling Mail is received, a pictograph that shows emotion set by sender, and sender name, mail address or phone number appear
Answer Phone	Recorded caller messages ( P.2-12)
Voice Mail	Unanswered call forwarded to Voice Mail Center ( P.2-15)
Missed Call	If Missed Call Notification is active, Information window opens for calls missed while handset is off, out-of-range, engaged, etc. ( P.2-16)
Update Results	Received software update results ( P.16-11)
New S! Information Channel	Received S! Information Channel updates ( P.7-14)
S! Information Channel	Failed to receive S! Information Channel updates ( P.7-14)

New Weather	Received weather forecast updates (☞ P.7-14)
Weather	Failed to receive weather forecast updates (☞ P.7-15)

Note

- Call operations are available while Information window is open.

Standby Window

Access S! Quick News or Shortcuts from Standby Window.

- S! Quick News: ☞ P.7-2



S! Quick News

Show/Hide Standby Window

Press to show/hide Standby Window. When hidden, press to show Standby Window. Press to deselect a shortcut icon or ticker.

- Set Standby Window On/Off: ☞ P.15-4

Changing Templates

<Default> S! Quick News

Set to appear both or either S! Quick News/Shortcuts.

- 1 In Standby, → [Menu] → **Change Templates**
- 2 Select an item

Transparency

Set transparency level of Standby Window.

In Standby, → [Menu] → **Background of Panel** → Select a level

Adding Content & Changing Settings

Add or Set S! Quick News in Standby Window.

- 1 In Standby, → highlight ticker → [Menu]

2 Add Content

Add S! Quick News → **S! Quick News** or **S! Loop**

831P connects to the Network.

Follow onscreen instructions.

Settings

S! Quick News Settings → **Auto Refresh** or **Display Setting**

Go to P.15-14 and follow steps.

Accessing Functions from Shortcuts



- 1 In Standby, → Select an icon
The selected function name appears at top of panel.
 - To deselect:
- 2 to access function



Adding Shortcuts


Add frequently used functions to Shortcuts.

- Preset items are as follows: Panasonic Site; Sound Settings; Display Settings; Pictures (Data Folder); Alarms; Calculator; Calendar

 

1 In Standby,  → highlight target →  [Menu] → **Set Shortcut**

2 **Applications, Bookmarks** or **Phone Book** → highlight an item →  [Entry]

Moving Icons


In Step 1, highlight an icon to move →  [Menu] → **Move Shortcut** → Select a position

Deleting Icons

In Step 1, highlight an icon to move →  [Menu] → **Remove Shortcut** → 

Handset Menus

 Main Menu

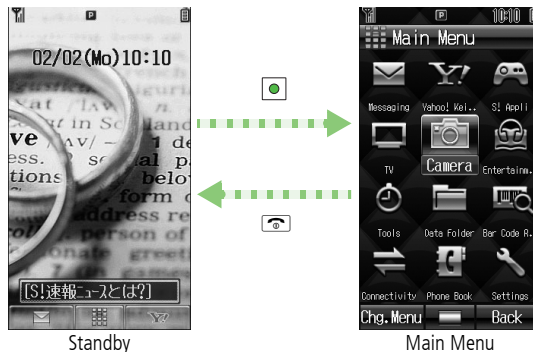













- 1 In Standby,  Main Menu appears.
- 2  to highlight an icon →  Selected function menu appears.
 - To return to Standby: 

Tip

Settings

- Change Main Menu Theme
- Change Main Menu Background
- Change Main Menu Icons (👉 P.15-5)

Main Menu Icons

Messaging  Create new/view received messages	Yahoo! Keitai  Enjoy Mobile Net & PC Site browsing...	S! Appli  Download, set and use S! Appli
TV  View TV	Camera  Capture images or record video clips	Entertainment  Use Media Player & E-Books
Tools  Set Alarm or save Calendar entries...	Data Folder  Open files saved on 831P/Memory Card	Bar Code Reader  Scan barcodes and QR Codes to retrieve information
Connectivity  Use Infrared	Phone Book  Save entries to call or send messages...	Settings  Adjust/customize handset settings

Menu Numbers

 
Use keypad to select functions or menu items.

Unnumbered Menu Items

When numbers do not appear, select items as shown.

■ Main Menu

 to select **Settings** from Main Menu

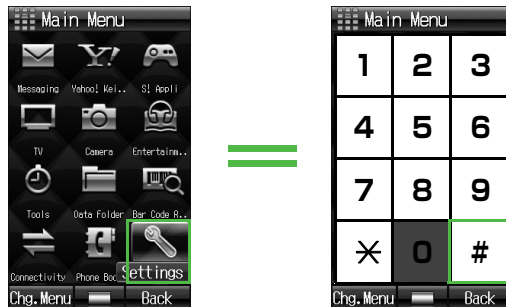

Main Menu Item Key Assignments

■ Top Menu Opened from Main Menu

[2] to select *Display Settings*



Settings Menu Item Key Assignments

Numbered Menu Items

Press key corresponding to menu number to select a menu.

In Display Settings (from *Settings* Top Menu), [5] to select *Themes*



S! Familiar Usability

Download S! Familiar Usability applications that mimic the interface design of other handsets.

Downloading S! Familiar Usability

Download S! Familiar Usability applications from websites.

Main Menu ► Data Folder ► S! Familiar Usability





1 Download S! Familiar Usability

831P connects to the Network, and the website providing S! Familiar Usability applications appears.

Follow onscreen instructions.

- To manage S! Familiar Usability applications in Data Folder: P.8-8

Setting S! Familiar Usability

- 1 In Standby, 
- 2  [Chg.Menu] → *S! Familiar Usability*
- 3 Highlight a theme →  [Set] → 

Note


- Other functions are not available while switching. For approximately 30 seconds after switching is complete, all calls/messages may be blocked.
- S! Familiar Usability does not completely remake handset.
- Alternatively, **Main Menu** ► **Settings** ► **Display Settings** ► **Change Menu Theme** ► **S! Familiar Usability**.

One Touch Site Button

Press **One Touch Site Button** to access a preset website. In addition, add frequently used bookmarks to **One Touch Site Button**.

- Add up to ten websites from Bookmarks.
- Transmission fees apply.

Using One Touch Site Button

- 1 In Standby, 
 - Confirmation appears. Press  [OK] to connect to the Network.
 - To show confirmation each time: Check **Show Every Time**
- Follow onscreen instructions.

Changing Preset Website

In Standby, press and hold  → Select a website

- Alternatively, **Main Menu** ► **Settings** ► **Phone Settings** ► **Key Settings** ► **One Touch Site Button** ► **Select Connected Site** ► Select a website.

Adding Websites

Add websites from Yahoo! Keitai/PC Site Browser Bookmarks.

- 1 In Standby, press and hold . Pre-saved websites appear.
- 2 [Edit] → **Yahoo! Keitai** or **PC Site Browser**
- 3 Highlight a bookmark → [Entry]



Note

- If saved bookmarks are edited in Yahoo! Keitai/PC Site Browser, follow above steps again.
- Alternatively, **Main Menu** ▶ **Settings** ▶ **Phone Settings** ▶ **Key Settings** ▶ **One Touch Site Button** ▶ **Select Connected Site** ▶ [Edit] ▶ **Yahoo! Keitai** or **PC Site Browser** ▶ Highlight a bookmark → [Entry].

Tip

- Settings** ● Hide Confirmation when Pressing One Touch Site Button (☞ P.15-5)

Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.




Opening Private Menu

 
- 1 In Standby, (Side Key) Private Menu appears.
 - To return to Standby: [Back]
- 2 Select a menu




Private Menu

Customizing Private Menu

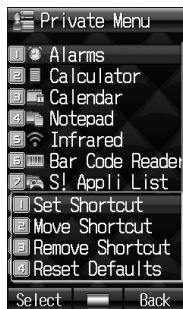

 - 1 In Standby,  (Side Key)
- 2 Highlight target →  [Menu] → **Set Shortcut**
- 3 Select an item
- 4 Highlight an item →  [Entry]





Changing Menu Order

After Step 1, highlight a function →  [Menu] → **Move Shortcut**
→ Select a position

Deleting Functions



After Step 1, highlight a function →  [Menu] → **Remove Shortcut** → 

 
Reset Private Menu

After Step 1,  [Menu] → **Reset Defaults** → 


Simple Mode

Activate **Simple Mode** to limit menu options to basic ones. **Enlarge fonts in Messaging, Phone Book, Call Log and Browser menus, and maximize volume.**

- 831P is limited to basic operations ( P.1-25).
- Font size cannot be changed.
- To change volume:  P.1-25

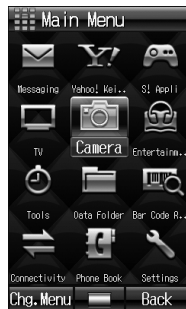

Normal Mode Window

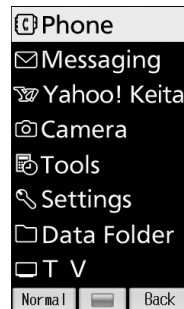  

 



Simple Mode Window



Font Size: Large

Earpiece Volume: Volume 6

Activating Simple Mode

- 1 In Standby, press and hold  → 
- To cancel: Press and hold  →  again

Changing Earpiece Volume

In Standby, press and hold  or  (short press during a call).

Positioning Clock in Standby


In Simple Mode, **Main Menu** ► **Settings**

► **Standby Display Clock** ► **Lower Center**

Canceling from Main Menu

In Standby,  →  [Normal] → 

Note

- While switching between modes, other functions are not available. For approximately 30 seconds after mode switching is complete, all calls/messages are blocked.
- Turning off the power does not cancel Simple Mode.
- Standby Window and Private Menu is not available in Simple Mode.
- Alternatively, **Main Menu** ► **Settings** ► **Phone Settings** ► **Change Simple Mode** ► .

Simple Mode Menu

Simple Menu	Page	Simple Menu	Page
Phone		Tools	
View Phone Book	4-6	Calendar	11-2
Create New Entry	4-3	Alarms	11-6
Call Log	2-10	Bar Code Reader	11-9
Message List	2-12	Calculator	11-7
Voice Mail	2-15	Notepad	11-8
Account Details	1-27	Voice Recorder	11-9
Messaging		Infrared	9-2
Incoming Mail	12-11	Settings	
Create New S! Mail	12-4	Ringer Volume	15-2
Drafts	12-20	Assign Ringtone	15-2
Retrieve New	12-16	Vibration Alert	15-2
Sent Messages	12-17	Wallpaper	15-4
Unsent Messages	12-17	Standby Display Clock	Left
Create New SMS	12-8	Date & Time	15-7
Yahoo! Keitai		Data Folder	
Yahoo! Keitai	13-3	View Photos	8-2
Bookmarks	13-8	View Movies	8-2
Saved Pages	13-8	Ring Songs&Tones	8-2
Enter URL	13-4	Amusement	8-2
Camera		S! Familiar Usability	8-3
Take Photos	6-5	Other Documents	8-3
View Photos	6-9	Memory Status	8-4
Record Movies	6-6	TV	
View Movies	6-9	Watch TV	5-5
		Channel Settings	5-3

Passwords

Phone Password, Center Access Code and Call Barring Password are needed for handset use.

Phone Password

<Default> 9999

4-digit number required to use/change some handset functions.

- ✖ appears for each digit entered.
- Phone Password can be changed on 831P (☞ P.10-2).
- If Phone Password is incorrectly entered three times, warning message appears. Turn off handset and try again.

Center Access Code

4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.

- Do not attempt to change Center Access Code. For details, contact SoftBank Customer Center, General Information (☞ P.16-32).

Call Barring Password

4-digit number specified at initial subscription, required to restrict handset services (☞ P.2-18).

- If entered incorrectly three times, Call Barring settings lock; Call Barring Password & Center Access Code must be changed. Reach SoftBank Customer Center, General Information (☞ P.16-32) for details.
- Call Barring Password can be changed on 831P (☞ P.2-18).


 
Note

- Write down Phone Password, Center Access Code and Call Barring Password.
- Do not reveal Phone Password, Center Access Code and Call Barring Password. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Customer Center, General Information (☞ P.16-32).

View Blind

Activate **View Blind** to protect **Display** from prying eyes.

- Select from three levels (Highest protection: Level 3).

- 1 Press and hold  (Side key)
 - To cancel: Press and hold  (Side key) again

Changing Level

Main Menu ► **Settings** ► **Display Settings** ► **View Blind**

► **Level** ► Select a level


 
- View Blind is set to **Level 1** by default.

Note

- Alternatively, **Main Menu** ► **Settings** ► **Display Settings** ► **View Blind** ► **Settings ON/OFF**
- View Blind cannot be activated: While calling; in View Blind Setting; while S! Appli is active; while TV is active
- When activating S! Appli/TV, View Blind is temporarily canceled. After terminating/suspending S! Appli/TV, View Blind reactivates.

My Number

Confirm handset phone number in **Account Details** (➔ P.4-13). Also confirm data saved in **Account Details**: name, mail address, etc.

- 1 In Standby,  → 

Account Details appears.

