

Managing Files

Data Folder	8-2
Data Folder Structure	8-2
Opening Files	8-4
Viewing & Playing Files	8-4
File Display/Playback Functions.....	8-6
Options.....	8-7
Using/Editing Files	8-9
Using Files	8-9
Editing Still Images	8-10
Managing Folders & Files	8-11
Managing Folders/Files	8-12
Memory Card	8-14
Memory Card Installation	8-14
Format Memory Card	8-15
Viewing Memory Card Files.....	8-16
Handset Data Backup.....	8-17
PC File Transfers	8-19

Data Folder

Save, play and manage files downloaded from Internet, etc.

- Access websites directly from Pictures, My Pictograms, Graphic Mail Pictures, Ring Songs&Tones, S! Appli, Music, Videos, Books, S! Familiar Usability and Templates folders, and download files to 831P.

Data Folder Structure

Folder	Data	File Format	Saved to
Pictures	Still images captured by 831P or downloaded still images, etc.	JPEG (.jpg/.jpeg/.jpe/.jfif), GIF (.gif), PNG (.png), BMP (.bmp), WBMP (.wbmp) JPEG (.jpg) saved in Digital Camera	Phone Memory Card* Digital Camera*
	<i>My Pictograms</i> folder: Downloaded My Pictograms	GIF (.gif), GPK (.gpk)	Phone Memory Card*
	<i>Graphic Mail Pictures</i> folder: Downloaded Graphic Mail Pictures	JPEG (.jpg/.jpeg/.jpe/.jfif), GIF(.gif)	Phone Memory Card*
Ring Songs&Tones	Downloaded sound files or sounds recorded by Voice Recorder, etc.	SMAF (.mmf), SP-MIDI (.mid/.midi), Mobile XMF (.mxmf), AMR-NB (.amr), MPEG-4 (.3gp/.mp4/.m4a)	Phone Memory Card*
S! Appli	S! Appli (☞ P.14-1)	Java	Phone Memory Card*
Music	Downloaded music files, etc.	MPEG-4 (.3gp/.mp4/.m4a/.smc)	Phone Memory Card*
Videos	Video clips recorded by 831P or downloaded video files, etc.	MPEG-4 (.3gp/.mp4)	Phone Memory Card* Video Camera*
Books	E-comics, etc.	CCF (.ccf), XMDF (.zbf/.zbf/.zbs)	Phone Memory Card*

Folder	Data	File Format	Saved to
S! Familiar Usability	S! Familiar Usability applications (☞ P.1-21)	UIE (.uie)	Phone Memory Card*
Templates	Graphic Mail Templates (☞ P.12-6)	HTML (.hmt)	Phone
Flash(R)	Downloaded Flash® image files	SWF (.swf)	Phone Memory Card*
	Flash(R) Ringtones folder: Downloaded Flash® sound files		
Other Documents	Other files	Other format files	Phone Memory Card*

* Available only when Memory Card is installed

- Some copy protected files have extensions different from above.

Note

- These folders can be opened from other functions.
 - **S! Appli: Main Menu ► S! Appli** (☞ P.14-1)
 - **Templates: Main Menu ► Messaging ► Templates** (☞ P.12-6)
- 831P does not support Progressive JPEG files; files are savable but cannot be viewed on 831P.

Using Copy Protected Files

Copying/forwarding/saving may be restricted and Content Key (🔑 P.8-6) may be required for usage.

See File Properties (🔑 P.8-6) to confirm restrictions such as expiry term or usage limitation.

- 📁 or 🔒 (Silver) appears for copy protected files requiring Content Keys. 🔒 files are inaccessible.
- Files downloaded on 831P cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- 831P holds up to 1000 Content Keys. Multiple Keys may be required to use a file. Expired Keys are deleted automatically.

Viewing Current Memory Status

Main Menu ▶ Data Folder ▶ Memory Status ▶ Phone or Memory Card

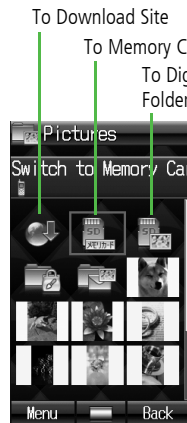 
Opening Files

Viewing & Playing Files

Main Menu ▶ Data Folder

1 Select a folder

Pictures and Videos appear in Thumbnail view by default.



Pictures (Thumbnail)



Ring Songs&Tones (List)

2 Select a file

File appears/plays.

Changing Memory View

- In List view, to switch views, Phone, Memory Card, Digital Camera*1 or Video Camera*2.
- In Thumbnail view, select (Memory Card), (Digital Camera)*1 or (Video Camera)*2. To return to handset memory, select (Phone).

*1 In Pictures folder only

*2 In Videos folder only

Changing Folder View

Select Thumbnail or List for Pictures or Videos view.

In Step 1, **Pictures** or **Videos** → [Menu] → **More** → **Change View** → **Thumbnail** or **List**

Note

- Some still images may not appear, or may be reduced in size depending on image or file size.
- 831P supports MPEG-4 and H.263 formats, and Sub-QCIF, QCIF, QVGA and CIF size. Video files that were recorded by SoftBank handsets and can be sent via S! Mail are also supported. Some files may not play even if format and size are supported.

Tip

- Playback Window Operations (P.7-9)
- Viewing e-Books & Documents (P.7-12)
- Using S! Appli (P.14-3)

Changing Playback Method

Main Menu ► Data Folder

► Ring Songs&Tones, Music or Videos

- 1 Highlight a file → [Menu] → **Playback Method**
- 2 Select a method

Continuous Play	Repeat all files in selected folder
Random Play	Play all files in selected folder randomly
Repeat Track	Repeat selected file

- Confirm playback method settings in Playback window (Playback Mode Indicators P.7-6).

Note

- When selecting Continuous Play or Random Play, playback starts from the file selected in Step 1.

Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, press [YES]. 831P connects to Content Key site.

- Copy Protected Files P.8-4
- or (Silver) appear for files requiring Content Keys. files are inaccessible. appears on images in Thumbnail view of expired files.

Note

- Alternatively, obtain Content Key as follows: Highlight a file → [Menu] → *More* → *Download Content Key* → .
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (transmission fees apply).

Tip

- Backing up Content Keys to Memory Card P.8-17

File Display/Playback Functions

From Main Menu Data Folder

View Still Images at Original Size

- > *Pictures* → Select a file → [Zoom] → to change the position
- Press to return.
- Still images larger than VGA (480x640) appear at VGA (480x640).


Rotate Still Images

- > *Pictures* → Select a file → [Rotate R] → [Rotate L] or [Rotate R]
- Press to return.

 

 

 

 
 
 
 
 


View File Properties

- > Select a file → Highlight a file → [Menu] → *More* → *Property*
- Available information varies by file.

Options

Highlight a file in Data Folder and press  [Menu] for the following operations.

 
 


 
 


 
 



Pictures

Item	Operation/Description
View	Open file
Send*1	Send files via S! Mail ( P.8-10) or Infrared ( P.9-3)
Send S! Mail*2	Send files via S! Mail
Set as*1	Set as wallpaper ( P.8-9), Phone Book image, Main Menu Icons ( P.8-10), etc.
Edit*1	Resize files, trim files ( P.8-10), rotate files, add frame, clear shadow, etc.
Rename	Change file names ( P.8-12)
New Folder*1	Create new folders ( P.8-11)
Move	Move files to other folders ( P.8-13)
Copy	Copy files ( P.8-13)
Delete	Delete files ( P.8-12)
More	Change folder view*1 ( P.8-5), obtain Content Key*1 ( P.8-6), open Memory Card folder/Phone folder/Digital Camera folder*1, view file properties ( P.8-6)

*1 Picture files only

*2 My Pictogram/Graphic Mail Picture files only

Ring Songs&Tones, Music, Videos

Item	Operation/Description
Play	Play files
Send	Send files via S! Mail ( P.8-10) or Infrared ( P.9-3)
Set as*1	Set ringtone (Voice Call, Video Call and messages) ( P.8-9) or save to Phone Book ( P.8-10)
Playback Method	Select playback method ( P.8-5)
Rename	Change file names ( P.8-12)
New Folder	Create new folders ( P.8-11)
Move	Move files to other folders ( P.8-13)
Copy	Copy files ( P.8-13)
Delete	Delete files ( P.8-12)
More	Change folder view*2 ( P.8-5), obtain Content Key ( P.8-6), open Memory Card folder/Phone folder/Video Camera folder*2, view file properties ( P.8-6)

*1 Ring Songs&Tones and Music only

*2 Videos only

■ Books, S! Familiar Usability

Item	Operation/Description
Play*1	Play files
Jump to Web	Connect to website from linked files
Send	Send files via S! Mail (👉 P.8-10) or Infrared (👉 P.9-3)
Set*2	Set as Main Menu Theme
Rename	Change file names (👉 P.8-12)
New Folder*1	Create new folders (👉 P.8-11)
Move	Move files to other folders (👉 P.8-13)
Copy	Copy files (👉 P.8-13)
Delete	Delete files (👉 P.8-12)
More	Obtain Content Key (👉 P.8-6), open Memory Card folder/Phone folder, view file properties (👉 P.8-6)

*1 Books only

*2 S! Familiar Usability only

■ Flash(R)

Item	Operation/Description
Play	Play files
Send	Send files via S! Mail (👉 P.8-10) or Infrared (👉 P.9-3)
Set as wallpaper*1	Set as Wallpaper (👉 P.8-9)
Set as*2	Set ringtone (Voice Call or Video Call) (👉 P.8-9) or save to Phone Book (👉 P.8-10)
Rename	Change file names (👉 P.8-12)
New Folder	Create new folders (👉 P.8-11)
Move	Move files to other folders (👉 P.8-13)
Copy	Copy files (👉 P.8-13)
Delete	Delete files (👉 P.8-12)
More	Obtain Content Key (👉 P.8-6), open Memory Card folder/Phone folder, view file properties (👉 P.8-6)

*1 Flash® image files only

*2 Flash® sound files only

Other Documents

Item	Operation/Description
Rename	Change file names (☞ P.8-12)
New Folder	Create new folders (☞ P.8-11)
Move	Move files to other folders (☞ P.8-13)
Copy	Copy files (☞ P.8-13)
Delete	Delete files (☞ P.8-12)
More	Open Memory Card folder/Phone folder, view file properties (☞ P.8-6)

Using/Editing Files

Using Files

Wallpaper

From ► **Main Menu** ► **Data Folder**

■ Select from Pictures Folder

> *Pictures* → Highlight a file → ☒ [Menu] → *Set as* → *Wallpaper*

■ Select from Flash(R)

> *Flash(R)* → Highlight a file → ☒ [Menu] → *Set as Wallpaper*

Ringtones

From ► **Main Menu** ► **Data Folder**

■ Select from Ring Songs&Tones/Music Folder

> *Ring Songs&Tones* or *Music* → Highlight a file → ☒ [Menu] → *Set as* → Select an item (→ When selecting an SMC file, highlight a Play Point → ☒ [Set])

■ Select from Flash(R)

> *Flash(R)* → *Flash(R) Ringtones* → Highlight a file → ☒ [Menu] → *Set as* → Select an item

- Flash® Ringtones cannot be set as *Message Ringtone*.

Saving to Phone Book

From ► Main Menu ► Data Folder

Save a Still Image to a Phone Book Entry

- Unavailable when *Change View* is *USIM*.

> *Pictures* → Highlight a file → [Menu] → *Set as* → *Phone Book Picture* → Select a Phone Book entry (→ When warning message appears, [OK] → Enter file name) → [Save]

Save Sound/Music Files to a Phone Book Entry

> *Ring Songs&Tones* or *Music* → Highlight a file → [Menu] → *Set as* → *Add to Phone Book* (→ For SMC files, highlight a Playback Position → [Set]) → Select a Phone Book entry → Select a ringtone ([Voice Call Ringtone/Video Call Ringtone/Message Ringtone] → [Save]

Save Flash® Sound Files to a Phone Book Entry

> *Flash(R)* → *Flash(R) Ringtones* → Highlight a file → [Menu] → *Set as* → *Add to Phone Book* → Select a Phone Book entry → Select a ringtone ([Voice Call Ringtone/Video Call Ringtone] → [Save]

Main Menu Icons

From ► Main Menu ► Data Folder ► Pictures
 ► Highlight a file ► [Menu] ► Set as
 ► Main Menu Icons

Change Background

> *Change Full Image* → [Back] → [Back]*

* 831P returns to Data Folder top menu.

Change Menu Icons

> *Change Image* → Select an icon → [Back] → [Back]*

* 831P returns to Data Folder top menu.

Sending a File via S! Mail

Main Menu ► Data Folder ► Select a folder ► Highlight a file
 ► [Menu] ► Send ► Attach to S! Mail ► Enter information
 ► [Send]

Note

- When set as Wallpaper or Ringtones, license expiry or inserting a different USIM Card may reset default.
- Limited use files cannot be set as Wallpaper or Ringtones.
- Sounds recorded by Voice Recorder cannot be set as Alarm, Ringtone or Schedule Tone.

Editing Still Images





From ► Main Menu ► Data Folder ► Pictures
 ► Highlight a file ► [Menu] ► Edit

Resize

> *Resize* → Select an image size → [OK] → Enter a file name

- Try again: After selecting file size, [Back]


■ Rotate & Save Still Images

> **Rotate*** (→ When warning message appears, ) →  [Rotate L]
 or  [Rotate R] →  → Enter file name



* Images captured by 831P Camera may rotate 90° on cross-carrier handsets or PC.








■ Add a Frame

> **Add Frame** → **Frame 1 to 5** → Enter file name

- To change frame:  to toggle frames
- Available only for Wallpaper(240x427), QQVGA(120x160) and QVGA(240x320).



■ Trimming

> **Trimming** (→ When warning message appears, ) → Follow the steps below →  → Enter a file name

Item	Operation/Description
Trim to Preset Size	> Select a size →  to move rectangle to crop point → 
Trim to Selected Size	> Free Size →  to move [] to specify the area →  →  to adjust crop point → 

- Try again: After setting crop point,  [Back]

■ Super Clear Shadow


> **Super Clear Shadow** (→ When warning message appears, ) →  → Enter file name

 


Managing Folders & Files

The following operations are available in Pictures, Ring Songs&Tones, Music, Videos, Books, Flash(R) and Other Documents.

- Digital Camera, Video Camera, S! Appli, My Pictograms, Graphic Mail Pictures, S! Familiar Usability and Templates do not support new folders.
- Only names of created folders and files can be changed.
- Digital Camera and Video Camera folder names are fixed.

Main Menu ► Data Folder

1 Select a folder → (Highlight a folder →)  [Menu]
 → Select an item (See below)

Item	Operation/Description
Open	Open folders
Playback Method*1	Select playback method ( P.8-5)
Rename	Change folder names > Enter a folder name
New Folder	Create new folders > Enter a folder name
Delete	Delete folders ( P.8-12)
More*2	Change folder view ( P.8-5), open Memory Card folder, open Digital Camera folder/Video Camera folder, open Phone folder
Memory Card/Phone*3	Open Memory Card folder/Phone folder

- *1 Ring Songs&Tones, Music and Videos only
- *2 Pictures and Videos only
- *3 Ring Songs&Tones, Music, Books, Flash(R) and Other Documents only

Managing Folders/Files

From ► **Main Menu** ► **Data Folder** ► Select a folder

Change File Name

- > Highlight a file → [Menu] → **Rename** → Enter a file name
- Only created files can be changed.
- Digital Camera, Video Camera and S! Appli folder names are fixed.

Delete Folders/Files



- > Highlight a folder or file → [Menu] → **Delete** → Select an item (See below)






Item	Operation/Description
One	> <input type="checkbox"/> [YES] (→ If confirmation appears, <input type="checkbox"/> [YES] or <input type="checkbox"/> [NO] → When selecting a folder, enter Phone Password)
Selected Files	> (Select a file)* <input type="checkbox"/> [Menu] → Delete → <input type="checkbox"/> [YES] → <input type="checkbox"/> [YES] (→ If confirmation appears, <input type="checkbox"/> [YES] or <input type="checkbox"/> [NO]) * Checkmarks <input checked="" type="checkbox"/> indicate files are selected. Repeat the step as required. (To release checkmark, press <input type="checkbox"/> .) ● To select all files or release all checkmarks: <input type="checkbox"/> [Menu] → Check All or Uncheck All

Item	Operation/Description
All	> <input type="checkbox"/> [YES] → in confirmation window, <input type="checkbox"/> [YES] or <input type="checkbox"/> [NO] → Enter Phone Password

 
- Only created folders can be deleted.
- Some files may not be deleted.
- Folders including undeleted files cannot be deleted.
- appear by copy protected files and indicate that 831P holds Content Keys required to use the files. When deleting files or folders containing files, corresponding Content Keys are also deleted, and other files requiring deleted Content Keys may become unusable. When confirmation appears, press [NO] to keep Content Keys.
- Multiple folders cannot be selected.

■ Move/Copy Files

- > Highlight a file →  [Menu] → **Move** or **Copy** → Select an item (See below) → Select a folder (→ For **Selected Files** or **All**,  [YES])

Item	Operation/Description
One	Move/Copy a file
Selected Files	<p>Move/copy multiple files</p> <p>> (Select a file → )*  [Menu] → Move or Copy</p> <p>* Checkmarks  indicate files are selected. Repeat the step as required. (To release checkmark, press .)</p> <p>● To select all files or release all checkmarks:  [Menu] → Check All or Uncheck All</p>
All	Move/copy all the folders/files in a folder

- Copy/forward protected files cannot be copied.
- Some pre-installed S! Appli cannot be moved.
- Only JPEG files saved in handset memory can be moved/copied to Digital Camera folder.
- Only Video files saved in handset memory can be moved/copied to Video Camera folder.
- In Other Documents folder, copy protected files can be copied, but 831P does not recognize copyright.
- Files may not be forwarded/copied depending on file format or data.

- Forward protected files may be moved to other folders by retrieving Network information ( P.1-15).
- After being copied/moved between 831P and Memory Card, some files may be unusable on other SoftBank handsets or PCs, etc.

Memory Card

- 831P is compatible with up to 2 GB commercial Memory Cards (as of December 2008). For information on memory card compatibility, visit the website below (Japanese). Note that Memory Cards not listed on the website may not function properly.
 - From Yahoo! Keitai P-egg (as of December 2008)
Yahoo! Keitai top page → メニューリスト → 辞書・ツール → ケータイメーカー → P-egg
 - From PC
<http://panasonic.jp/mobile/>
Not all operations are guaranteed by the Memory Cards listed.
- Format new Memory Cards for use with 831P (☞ P.8-15).

Note

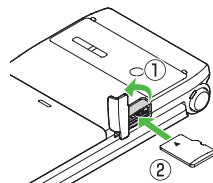 
- SoftBank is not liable for damages from accidental loss/alteration of Memory Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- Memory Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

Memory Card Installation

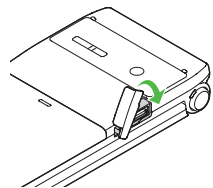 
- Turn off handset before inserting/removing Memory Card.

Inserting




- 1 Open cover. Insert Memory Card until it clicks




- 2 Close cover

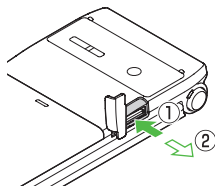 


Memory Card Check


When Memory Card is installed correctly,  appears. If  appears, Memory Card cannot be used. Remove Memory Card from handset, and re-insert it. If  does not disappear, execute Memory Card Check (☞ P.8-16) or format Memory Card (☞ P.8-15). (Display Indicator: ☞ P.1-8)

Removing

- 1 Open cover and gently push Memory Card in
 - Memory Card pops out with a light push.
- 2 Remove card and close cover
 - To close cover:  P.8-14




Note

- Do not remove Memory Card or battery while  flashes. Memory Card may be damaged or files lost.
- Memory Card may pop out when inserting/removing it.

Format Memory Card

- Formatting Memory Card deletes all saved files/data.

Main Menu ► Settings ► Memory Card Manager
► Format Memory Card

- 1  → Enter Phone Password

Note

- Do not turn handset power off or remove Memory Card or battery while formatting; may damage handset or Memory Card.
- Memory Cards formatted on other devices may not be used. Format Memory Card on 831P before use.
- 831P cannot format Incompatible Memory Cards.
- If format fails, turn power off and remove Memory Card from 831P. Reinsert Memory Card and format it again.

Viewing Memory Card Files

View files in Memory Card from Data Folder. To toggle memory views, see "Viewing & Playing Files" (👉 P.8-4).


Note

- View up to 1000 Memory Card files/folders on 831P. To view hidden Memory Card files/folders, delete files, then turn 831P power off and restart it. Previously hidden files appear in equal number to those that were deleted.
- Files with names over 32 alphanumeric/extensions over six alphanumeric cannot be viewed.
- Unsupported files cannot be viewed.

Check Memory Card

Repair Memory Card data errors.

Main Menu ▶ Settings ▶ Memory Card Manager

▶ Check Memory Card ▶ 

- Do not remove Memory Card or battery during Check Memory Card. May damage 831P or Memory Card.
- It may take 30 seconds or longer to complete procedures.
- Incompatible/improperly formatted Memory Cards are not checked.
- Unrecoverable data may be deleted.

Handset Data Backup

Back up Handset data to Memory Card; restore Handset data after accidental loss/alteration.

Backup Files

Phone Book	Back up Phone Book. <ul style="list-style-type: none">● All Phone Book entries can be saved regardless of Secret mode setting.● Settings such as Ringtone, Notification Light, Picture cannot be backed up/restored.
Messages	Back up messages in Incoming Mail, Drafts, Sent/Unsent Messages folders. <ul style="list-style-type: none">● The initial portion of S! Mail messages are restored as complete S! Mail messages, and complete message retrieval is invalidated.● Mail Delivery Rule can not be backed up/restored in Incoming Mail. All restored messages from Memory Card are stored to Received folder.

Calendar	Back up Schedule entries. <ul style="list-style-type: none">● Settings such as Reminder, Schedule Tone, Notification Light cannot be backed up/restored.● Schedule entries that cannot be saved on handset (☞ P.11-3) cannot be restored.● Schedule entries that date/time are not specified cannot be restored.
Bookmarks	Back up Yahoo! Keitai and PC Site Browser Bookmarks.
Content Keys	Back up downloaded Content Keys. <ul style="list-style-type: none">● Content Keys with expiration dates or usage limits cannot be moved to Memory Card.● Some applications are made for use on specific models. Contact SoftBank Customer Center, General Information (☞ P.16-32) for more information.● USIM Card inserted when Content Keys were moved to Memory Card must be inserted to move Content Keys from Memory Card.● Content Keys are backed up after the previous back up file is deleted.

Notes

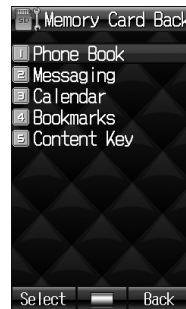 
- Backup is not available when battery is low. Change/charge battery before backup.
- Backup/restoration activates Emission OFF Mode. When backup/restoration starts in Emission OFF Mode, Emission OFF Mode is not canceled automatically even when backup/restoration is complete.
- When restoring files other than Content Keys from Memory Card, the same type files are all deleted from handset before restoration. Back up files saved on handset beforehand.
- Depending on contents, Phone Book/Schedule entries, messages or bookmarks may not be backed up/restored, or may be altered beyond the parameters.
- Backup files created on other SoftBank handsets may not be restored or usable on 831P.

Backup/Restore

- Check memory beforehand (☞ P.8-4).

Main Menu ► Settings ► Memory Card Manager
 ► Memory Card Backup

- 1 Enter Phone Password
- 2 Select an item
 - For **Messaging**, select a messaging folder



- 3 Backup
 - **Copy to Memory Card** →



Restore

- **Overwrite to Phone** → →

- Select a file →

- Backup date serves as file name.
 Example: "090202000.vcf" indicates that the file was backed up on 2 February 2009

Deleting a Backup File

In Step 3, select **Overwrite to Phone** → → Highlight a file →

☐ [Menu] → **Delete** →

- Content Key backup files cannot be deleted.

PC File Transfers

Files moved or copied from 831P to Memory Card are managed as shown below:

- To use files saved on Memory Card via PCs, save files in folders in My Items (MYFOLDER) by file type. See "Using Files" (📁 P.8-9) to learn how to use files on 831P.

DCIM		
<ul style="list-style-type: none"> ● Still images saved to Memory Card ● Still images moved/copied to Digital Camera folder 		
PRIVATE		
MYFOLDER		
Utility		
Calendar	Calendar.BCK	Schedule Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Mail		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files

My Items		
Book		E-comics, etc.
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Custom Screens		S! Familiar Usability applications
Flash(R)		Flash® image files
Flash(R) Ringtones		Flash® sound files
Games and More		S! Appli
Mail Art		Graphic Mail Pictures
Music		Sound files with .3gp/.mp4/.m4a/.smc
Other Documents		Other files
Pictograms		My Pictograms
Pictures		Still images moved/copied to Main Folder in Memory Card
Sounds & Ringtones		Sound files with .3gp/.mp4/.m4a/.mid/.midi/.amr/ .mmf/.mxmf
Videos		Videos moved/copied to Main Folder in Memory Card
SD_VIDEO		
<ul style="list-style-type: none"> ● Videos saved to Memory Card ● Videos moved to Video Camera folder 		

Note

- 831P temporary files are saved in Memory Card PRIVATE - MEIGROUP - PMC - FS_TEMP folder. All files in this folder are deleted each time Memory Card is inserted into 831P; do not save PC files/folders in this folder.
- Folder layers recognizable in 831P are limited to the first layer of each folder (such as, Music folder) in My Items (MYFOLDER).
- When multiple folders/files with same numbers exist in DCIM folder, the folders/files cannot be viewed on 831P.
- Some copy protected files have extensions different from the ones left.
- Images captured by 831P Camera may rotate 90° on cross-carrier handsets or PC.