

<b>Getting Started .....</b>	<b>13-2</b>
<b>Using Yahoo! Keitai .....</b>	<b>13-3</b>
Opening Yahoo! Keitai Main Menu .....	13-3
Entering URL.....	13-4
Using Access Histories.....	13-4
Exiting Mobile Internet.....	13-4
<b>Using PC Site Browser .....</b>	<b>13-5</b>
Opening Menu.....	13-5
Entering URL.....	13-5
Using Access Histories.....	13-5
Exiting Internet .....	13-5
<b>Basic Operations .....</b>	<b>13-6</b>
Using Cursor .....	13-6
Text Entry & Item Selection.....	13-7
<b>Using Information .....</b>	<b>13-8</b>
Bookmarks & Saved Pages .....	13-8
Managing Bookmarks & Saved Pages.....	13-9
Bookmarks/Saved Pages Functions .....	13-10
Downloading Image/Sound Files.....	13-11
Using Number, Address or URL .....	13-11
Streaming.....	13-12
<b>Option Menu Items .....</b>	<b>13-13</b>

# Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites.  
 "Yahoo! Keitai" is both a SoftBank Mobile Internet service  
 and the SoftBank Mobile Internet portal.  
 View PC Internet websites via PC Site Browser.

## Internet

### Yahoo! Keitai

- View Mobile Internet Websites (☞ P.13-3)
- Download image/sound files, etc. (☞ P.13-11)
- Video/Music Streaming (☞ P.13-12)
- Register S! Quick News (☞ P.7-2)

### PC Sites

- View PC Sites (☞ P.13-5)
- Download still images (☞ P.13-11)

## Note

- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Video Calls cannot be received while connecting to the Network.

## Cache Memory

**Retrieved information is temporarily saved in Cache Memory. When full, oldest is deleted first.**

- Previously viewed pages may load from Cache Memory. To view the latest, update information (☞ P.13-13).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after 831P is disconnected from the Network or handset power is turned off.

## Tip

### Settings

- Clear Cache
- Delete Cookies
- Initialize Browser (☞ P.15-18)

## SSL/TLS

SSL (Secure Socket Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers.

Electronic certificates are saved on 831P (👉 P.15-19).

### Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SOFTBANK MOBILE Corp., VeriSign Japan K.K., GlobalSign K.K., RSA Security Inc., Cybertrust Japan Co., Ltd., SECOM Trust Systems Co.Ltd. and Entrust Japan Co.,Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.

### Tip

**Settings** ● Security Settings (👉 P.15-19)

## Using Yahoo! Keitai

### Opening Yahoo! Keitai Main Menu

Select Yahoo! Keitai Main Menu items to access websites.

Main Menu ► Yahoo! Keitai

 

#### 1 *Yahoo! Keitai*

831P connects to the Network.

#### 2 Select a menu item

- Repeat Step 2 as required.
- Basic Operations: 👉 P.13-6

#### Note

- Shortcut: In Standby, press  [

## Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

- Up to 20 URL histories are stored.

Main Menu ► Yahoo! Keitai ► Enter URL

### 1 Enter URL Directly

**Direct Entry** → Enter URL

**Use URL History**

**URL History List** → Select a URL



URL History List Window

### Editing URL Histories

In Step 1, **URL History List** → Highlight URL → [Menu] → **Edit** → Edit URL

### Deleting URL Histories

In Step 1, **URL History List** → (Highlight URL →) [Menu] → **Delete** → **One** or **All** → [YES]

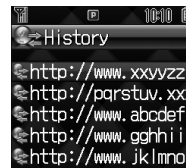 
## Using Access Histories

Open previously viewed pages using access histories.

- Up to 100 access histories are stored. (The number of savable histories varies depending on data amount.)

Main Menu ► Yahoo! Keitai ► History

### 1 Select a history



History Window

### Deleting Access Histories

In Step 1, (Highlight URL →) [Menu] → **Delete** → **One** or **All** → [YES] ( → For **All**, enter Phone Password)

## Exiting Mobile Internet




### Note

- Closing handset does not affect active browser.

# Using PC Site Browser

## Opening Menu

View PC websites using PC Site Browser.

- When PC Site Browser is active,  appears.
- Some pages may not be viewable.
- Viewing PC websites may incur high charges.

Main Menu ► Yahoo! Keitai ► PC Site Browser

### 1 Homepage

Confirmation appears. Press  [OK].

 
- To show confirmation each time: *Show Every Time*

### 2 Select a menu item

Repeat Step 2 as required.

#### Tip

 
#### Settings

- Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai ( P.15-18)

## Entering URL

Follow same operation accessed from Yahoo! Keitai.

 
Main Menu ► Yahoo! Keitai ► PC Site Browser  
► Enter URL

- Follow Step 1 of same operation accessed from Yahoo! Keitai. ( P.13-4)

## Using Access Histories

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! Keitai ► PC Site Browser ► History

- Follow Step 1 of same operation accessed from Yahoo! Keitai. ( P.13-4)

## Exiting Internet










 

1  → 

#### Note



- Closing handset does not affect active browser.

# Basic Operations

## Using Cursor

Move Cursor	<p>Use cursor to select underlined menu items.</p> <ul style="list-style-type: none"> <li> to move right</li> <li> to move left</li> <li> to move to previous line</li> <li> to move to next line</li> </ul>
Scroll Pages	<p>Scroll bar appears on right side or at bottom of Display when page content continues beyond view.</p> <ul style="list-style-type: none"> <li> scroll up/down</li> <li> scroll left/right</li> <li> scroll page up by a screenful</li> <li> scroll page down by a screenful</li> <li>● To scroll continuously, press and hold above keys.</li> </ul>
Move to previous page/ next page	<p>Previously viewed pages are temporarily saved in Cache Memory ( P.13-2).</p> <ul style="list-style-type: none"> <li> [Back]: Return to previous page</li> <li> [Menu] → <b>Forward</b>: View next page</li> <li>● Some web pages may not appear after performing the steps above.</li> </ul>

## Web Page Sound Volume


- When Manner Mode is active or Voice Call Ringer Volume set to **Silent**, web page sounds are muted.
- Sound volume cannot be adjusted while viewing web pages. Adjust Voice Call Ringer Volume beforehand ( P.15-2).
- If activated, Media Player sound volume is adjustable.
- Incoming message and S! Quick News ringtones do not sound while Yahoo! Keitai is active regardless of mode or message ringtone settings.  indicates and handset vibrates for Incoming messages, and handset vibrates for S! Quick News.

## When Authentication is Required

Some pages require user authentication for access.  
If required, enter user ID or password.

### Tip

### Settings

- Change Font Size
- Scroll Unit
- Images Off
- Sounds Off
- Delete User ID or Password Entered when Authentication is Required ( P.15-18)

## Text Entry & Item Selection

Enter text or select items to send information.

Example:

● Actual web pages may differ in appearance.

<b>Text Entry Field</b>	Highlight field →  → Enter text → ● Enter previously entered text (input memory). [Menu] → <i>Insert</i> → <i>Input Memory</i> → Select input memory
<b>Menu List</b>	Highlight field → Menu list appears. Highlight an item → Selected items are highlighted.
<b>Radio Button</b>	Highlight  → When selected,  appears.
<b>Check Box</b>	Highlight  → When selected,  appears.
<b>Command Button</b>	Highlight the button → Corresponding command is executed.

Tip

Settings

● Delete Input Memory (🔗 P.15-18)

13

Internet

# Using Information

## Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

- Some copy protected materials cannot be saved.


Bookmarks	Save links to websites. 831P connects to the Network to open the link. Create folders to organize Bookmarks.
Saved Pages	Save page content. 831P opens saved pages without connecting to the Network.

### Saving Web Pages

1 Open a web page →  [Menu] → **Bookmarks** or **Saved Pages**

2 **Add**

3 **Save Bookmarks**

Select title → Edit title →  [Save]

- To save to folders: Select Folder → Select a folder (Not selectable when no folders exist in Bookmarks.)

### Save Saved Pages

Edit title

## Viewing Bookmarks & Saved Pages

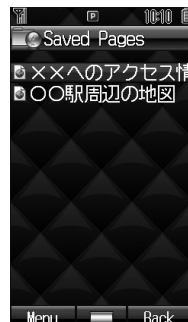 
Main Menu ► Yahoo! Keitai (► PC Site Browser)

### 1 **Bookmarks** or **Saved Pages**

Example: Yahoo! Keitai Browser



Bookmark List Window



Saved Pages List Window

### 2 Select an item

#### Tip

- Save URLs to Bookmarks ● Open Bookmarks & Saved Pages List while Online (📶 P.13-10)

## Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved pages list:

■ Yahoo! Keitai

Main Menu ► Yahoo! Keitai ► Bookmarks or Saved Pages

■ PC Site Browser

Main Menu ► Yahoo! Keitai ► PC Site Browser  
► Bookmarks or Saved Pages

### Note

- Panasonic site bookmark cannot be edited/deleted.
- When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

## Creating New Bookmark Folders

- Folders cannot be created within existing folders.

- 1 In Bookmark list window, [Menu] → **Create**
- 2 **Folder** → Enter title

## Moving Bookmarks to Folder

In Bookmark list window, highlight a bookmark → [Menu] → **Move to** → Select a folder

## Editing Folder Title

In Bookmark list window, highlight a folder → [Menu] → **Edit** → Edit folder title

## Editing Bookmark Titles/URLs

- 1 In Bookmark list window, highlight a bookmark → [Menu] → **Edit**
- 2 Select a title/URL
- 3 Edit Bookmark title/URL → [Save]

## Renaming Saved Pages

- 1 In Saved Pages list window, highlight an item → [Menu] → **Rename**
- 2 Edit title

## Bookmarks/Saved Pages Functions

From ► **Main Menu** ► **Yahoo! Keitai** ( ► **PC Site Browser** )  
► **Bookmarks or Saved Pages**

### ■ Save URLs to Bookmarks

> [Create]\* → **Bookmark** → <Title> → Enter Title → <URL> → Enter URL → When saving to a folder, select Folder → Select a folder → [Save]

\* When saved items exist: [Menu] → **Create**

### ■ Open Bookmarks & Saved Pages List while Online

> On a wave page, [Menu] → **Bookmarks** or **Saved Pages** → **List**

### ■ Delete Bookmarks/Folders

> Follow the steps below

Item	Operation/Description
Delete	> Highlight a bookmark/folder → [Menu] → <b>Delete</b> → <b>One</b> →
Delete Selected Items	> [Menu] → <b>Delete</b> → <b>Selected Files</b> → (Repeat: Select a bookmark/folder)* → [Delete] → * To cancel selection, press  again.
Delete All Items	> [Menu] → <b>Delete</b> → <b>All</b> → [YES] → Enter Phone Password

### ■ Delete Saved Pages

> Follow the steps below

Item	Operation/Description
Delete	> Highlight a saved page → [Menu] → <b>Delete</b> → <b>One</b> →
Delete Selected Saved Pages	> [Menu] → <b>Delete</b> → <b>Selected Files</b> → (Repeat: Select a saved page)* → [Delete] → * To cancel selection, press  again.
Delete All Saved Pages	> [Menu] → <b>Delete</b> → <b>All</b> → [YES] → Enter Phone Password

### ■ Reorder Bookmarks/Folders

> Highlight a bookmark/folder → [Menu] → **Reordering** → to select new order

### ■ Send Bookmark URLs

> Highlight a bookmark → [Menu] → **Send Bookmark** → **S! Mail** or **SMS**



### ■ Send Bookmarks via Infrared

> Highlight a bookmark → [Menu] → **Send via Infrared**

## Downloading Image/Sound Files

Save images, sounds, etc. to Data Folder or Memory Card.

- For PC Site Browser, only still images can be saved.

- 1 Open a web page →  [Menu] → *Select item*
- 2 Select a file  
File details appear.
- 3  [Save]
- 4 **Phone** or **Memory Card**  
Available menu items vary by saved content.




### Note

- 831P does not support Progressive JPEG files.
- Do not remove Memory Card while saving files to it.
- Do not turn handset power off while downloading or saving files. Files may be damaged.
- Some copy protected files may not be saved.

## Using Number, Address or URL






Use linked numbers, addresses or URLs to make calls, send messages or access websites. Save them directly to Phone Book.

- 1 Open a web page containing phone numbers, mail addresses or URLs
- 2 **Phone Number**  
Select a phone number → Select an item (See below)

Item	Operation/Description
Voice Call	Make a Voice Call > 
Video Call	Make a Video Call > 
Phone Book	Save a number to Phone Book (  P.4-3)

### E-mail Address

Select an address → Select an item (See below)

Item	Operation/Description
S! Mail	Create S! Mail (  From Step 4 on  P.12-4)
SMS	Create SMS (  From Step 4 on  P.12-8)
Phone Book	Save mail address to Phone Book (  P.4-3)

### URL

Select URL

831P connects to the Network.




## Streaming

- Supported by compatible files on Yahoo! Keitai sites only.
- Streaming files cannot be saved.

Main Menu ► Yahoo! Keitai ► Yahoo! Keitai

 
### 1 Open a web page → Select a file

Media Player activates and streaming starts.

- To pause:  →  to resume
- Playback Window Operations:  P.7-9  
(Replay Track, Play Previous and Play Next are unavailable)

### 2 or [Back] to exit

#### Note

- Streaming requires a continuous Network connection. Network remains connected even during a pause (Transmission fees apply).
- Streaming indicator appears ( P.1-8).
- Paused streams may stop after three minutes of inactivity.
- When roaming abroad, streaming may be unavailable or not be performed properly.

#### Incoming Voice Calls while Streaming

Incoming call pauses an active stream.

- Video Calls cannot be received while streaming.

## Option Menu Items

In Yahoo! Keitai, press  [Menu] for these options:

- Some functions may not be available depending on web pages.

Item	Operation/Description
Forward	Go to next page
Bookmarks	View Bookmarks list, add bookmarks, or access web pages
Saved Pages	View Saved Pages list or save page content to Saved Pages
Text Copy	Copy page text
Reload Page	Refresh page information
Small Screen/ PC Screen*1	Toggle display size
Page Operation	<b>Frame In/Frame Out</b> : Select full screen frame <b>Jump to Top</b> : Jump to top of page <b>Jump to Bottom</b> : Jump to end of page <b>Zoom In/Out</b> *1: Zoom page in/out
Select Item	View, play or save file to Data Folder (📁 P.13-11)
More	<b>Search in Internet</b> : Search text in Internet <b>Search in this page</b> : Search text within page <b>History</b> : Open previously viewed pages <b>Send Bookmark</b> : Send URL via S! Mail/SMS <b>Enter URL</b> : Enter URL directly or select URL from URL History list to open site <b>Property</b> : View page details or electronic certificates for secure pages <b>Flash(R) Menu</b> : Playback/pause Flash® files

Item	Operation/Description
To PC Site Browser*2/ Change Browser*1	Toggle Yahoo! Keitai/PC site
Yahoo! Keitai*2/ Homepage*1	View top menu
Settings*2/PC Site Browser Settings*1	<b>Font Size</b> : Change character size <b>Encoding</b> : Change encoding type

\*1 PC Site Browser only

\*2 Yahoo! Keitai only

