

Settings

Sound & Vibration	15-2
Ringtones	15-2
Warning Tone & Key Tone.....	15-3
Display	15-4
Main Display.....	15-4
Display Settings	15-4
Main Menu.....	15-5
Keypad	15-5
Manner Mode Settings	15-6
Date & Time	15-7
Call Settings	15-8
International (Global Roaming)	15-8
Call Time & Call Cost	15-9
Making & Receiving Calls.....	15-10
Notification Light	15-11
Phone Book	15-11
Video Call	15-12
Function Menus.....	15-12
Engaged Video Call Settings	15-12
Digital TV	15-13
S! Quick News	15-14
Display Settings	15-14
Auto Update/Deleting Information	15-14

Messaging	15-15
Universal Settings.....	15-15
S! Mail Settings.....	15-16
Feeling Mail Settings	15-16
SMS Settings.....	15-17
Internet	15-18
Browser Display Settings.....	15-18
Memory Manager & Reset	15-18
Security Settings.....	15-19
S! Appli	15-20

Settings Sound & Vibration

Ringtones

From ► Main Menu ► Settings ► Sound Settings

Settings/Operation	Default
<p>■ Change Ringtone (Voice Call or Video Call)*1 *2 *3</p> <p>> Assign Ringtone → <i>Voice Call</i> or <i>Video Call</i> → Select a folder in Data Folder → Highlight a tone → [Set]</p>	ブザー .mmf
<p>■ Change Ringtone (Message or S! Quick News)*1 *2</p> <p>> Assign Ringtone → <i>Message</i> or <i>S! Quick News</i> → Select a folder in Data Folder → Highlight a tone → [Set]</p>	効果音 (キラキラ) .mmf
<p>■ Change Ringer Volume (Voice Call, Video Call or Message)*4</p> <p>> Ringer Volume → <i>Voice Call, Video Call</i> or <i>Message</i> → Adjust volume</p>	Volume 3
<p>■ Change Ringer Volume (S! Quick News)</p> <p>> Ringer Volume → <i>S! Quick News</i> → Adjust volume</p>	Silent
<p>■ Change Ringtone Duration (Message or S! Quick News)</p> <p>> Ringtone Duration → <i>Message</i> or <i>S! Quick News</i> → Enter ring time</p>	5 seconds

Settings/Operation	Default
<p>■ Set Vibration Alert (Voice Call, Video Call, Message or S! Quick News)*5</p> <p>> Vibration Alert → <i>Voice Call, Video Call, Message</i> or <i>S! Quick News</i> → Select a vibration pattern</p>	OFF

- *1 Files recorded by Voice Recorder cannot be set for ringtones. Some music files cannot be set as Ringtone. (Copy protected files: P.8-4)
- *2 When unique tones for each Phone Book entry or Group are set (P.4-4, P.4-5), Phone Book settings take priority.
- *3 If a Voice Call is received while streaming/downloading, default ringtone may sound.
- *4 Same setting applies to sound effects from: Web pages, messages and S! Information Channel. When **Escalating Tone** is set, volume sounds at **Volume 6** (setting may not apply to some content).
- *5 Avoid placing 831P on unstable surface when Vibration Alert is active/ while charging battery; cancel Vibration Alert before charging battery.

Pre-installed Ringtones

Title	Composer
ブザー	Original Tone
ソナチネ第 1 番 / 第 4 楽章	WOLFGANG AMADEUS MOZART
口笛吹きと犬	PRYOR ARTHUR
ワルキューレの騎行	WAGNER RICHARD WILHELM
おもちゃの兵隊の行進	JESSEL LEON
ウィリアム テル 序曲	ROSSINI GIOACCHINO ANTONIO
騎士たちの踊り OP 64-13	PROKOFEV SERGEJ S
トリッチ・トラッチ・ポルカ	STRAUSS JUN JOHANN
効果音 (運命交響曲)	VAN BEETHOVEN LUDWIG
効果音 (水滴の音)	Original Tone
効果音 (キラキラ)	Original Tone
効果音 (電子音)	Original Tone
効果音 (英語)	Original Tone
効果音 (ショート)	Original Tone
効果音 (ゲーム音)	Original Tone
効果音 (黒電話)	Original Tone
Happy / うれしい	Original Tone
OK / Good	Original Tone
悲しい / ごめんなさい	Original Tone
NG / Bad	Original Tone
注目 / 重要	Original Tone

* Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

Warning Tone & Key Tone

From ► **Main Menu** ► **Settings** ► **Sound Settings**

Settings/Operation	Default
<ul style="list-style-type: none"> ■ Set Warning Tone Off > <i>Warning Tone</i> → OFF 	ON (sound)
<ul style="list-style-type: none"> ■ Change Key Tone > <i>Key Tone</i> → <i>Select Tone Type</i> → Select a tone 	Tone 1
<ul style="list-style-type: none"> ■ Change Key Tone Volume > <i>Key Tone</i> → <i>Tone Volume</i> → Adjust volume 	Silent

Settings Display

Main Display

From ► Main Menu ► Settings ► Display Settings

Settings/Operation	Default
Change Wallpaper* > <i>Main Display</i> → Select a folder in Data Folder → Highlight an image →  [Set]	リング .jpg
Change Backlight Duration > <i>Backlight Time</i> → Select a time	15 seconds
Change Display Color Scheme > <i>Themes</i> → Select a color	White
Change Display Brightness > <i>Brightness</i> → Select a level	Level 3

* Some images may not be set or appear properly. (Copy protected files:  P.8-4)

Display Settings

From ► Main Menu ► Settings

Settings/Operation	Default
Set Interface Language > <i>Phone Settings</i> → 言語選択 → <i>English</i> or <i>日本語</i>	Automatic*1
Change Clock/Calendar Style > <i>Display Settings</i> → <i>Standby Display</i> → <i>Clock/Calendar Display</i> → Select a clock/calendar type	Large Clock (Upper Center)
Show Operator Name in Standby > <i>Display Settings</i> → <i>Standby Display</i> → <i>Operator Name</i> → ON	OFF (hide)
Set Standby Window On/Off*2 > <i>Display Settings</i> → <i>Standby Display</i> → <i>Standby Window</i> → ON (Always) or OFF	ON (Manually)

*1 *Automatic* applies USIM Card language.

*2 S! Quick News Display Settings ( P.15-14)

Main Menu

From ► **Main Menu** ► Settings ► Display Settings

Settings/Operation	Default
Change Main Menu Theme*1 > <i>Change Menu Theme</i> → <i>Original Menu</i> → Select a menu →	-
Use Other Handset Interface*2 > <i>Change Menu Theme</i> → <i>S! Familiar Usability</i> → Highlight a menu theme → [Set] →	-
Change Main Menu Background > <i>Main Menu Icons</i> → <i>Change Full Image</i> → Highlight an image → [Set]	-
Change Main Menu Icons > <i>Main Menu Icons</i> → <i>Change Image</i> → (Repeat: Select an icon → Highlight an image → [Set])	-
Reset Main Menu Icons > <i>Main Menu Icons</i> → <i>Reset Defaults</i> →	-

*1 While changing theme, other functions are unavailable. For approximately 30 seconds after process is complete, calls/messages may be blocked.

*2 Download S! Familiar Usability applications beforehand (☎ P.1-21).

Settings Keypad

From ► **Main Menu** ► Settings ► Phone Settings
 ► Key Settings

Settings/Operation	Default
Set Keypad Backlight Duration > <i>Keypad Backlight</i> → Select a time or <i>OFF</i>	15 seconds
Change Keypad Function > <i>One Touch Key</i> → <i>Speed Dial</i>	Quick Phone Book Search
Hide Confirmation when Pressing One Touch Site Button > <i>One Touch Site Button</i> → <i>Access Confirm</i> → <i>OFF</i>	ON (show)

Settings Manner Mode Settings

From ► Main Menu ► Settings ► Manner Mode Settings

Settings/Operation	Default
<p>■ Set Manner Mode Type*</p> <p>> Select a mode</p> <p>● When Manner, Drive or User Mode is set, an indicator appears in Standby (☞ P.1-8, P.1-10).</p>	Normal
<p>■ Personalize Individual Mode Settings</p> <p>> Highlight a mode → ☐[Menu] → Edit → Select an item → Edit</p>	–

* Manner Mode and Drive Mode can be activated/deactivated in Standby (☞ P.1-16, P.1-17).

■ Default Settings by Mode

Normal	Manner	Drive	User Mode
Assign Ringtone (Voice Call/Video Call)			
ブザー .mmf	–	–	ブザー .mmf
Assign Ringtone (Message/S! Quick News)			
効果音 (キラキラ).mmf	–	–	効果音 (キラキラ).mmf
Ringtone Volume (Voice Call/Video Call/Message)			
Volume 3	–	–	Volume 3
Ringtone Volume (S! Quick News)			
Silent	–	–	Silent
Ringtone Duration (Message/S! Quick News)			
5 sec	5 sec	5 sec	5 sec
Key Tone (Tone Type)			
Tone 1	–	Tone 1	Tone 1
Key Tone (Tone Volume)			
Silent	–	Silent	Silent
Warning Tone			
ON	–	OFF	ON
Vibration Alert (Voice Call/Video Call/Message)			
OFF	Pattern 1	OFF	OFF
Vibration Alert (S! Quick News)			
OFF	OFF	OFF	OFF
Answer Phone			
OFF	ON	*	OFF

* When activating Drive Mode, Answer Phone activates automatically, and cannot be set to OFF.

Settings Date & Time

From ► Main Menu ► Settings ► Phone Settings
 ► Date & Time

Settings/Operation	Default
■ Change Date and Time*1 > Home Clock → Date & Time → Enter date → Enter time	-
■ Deactivate Automatic Time Correction via Yahoo! Keitai*2 > Time Correction → Automatic Correction → OFF	ON (correct automatically)
■ Correct Time Manually > Time Correction → Manual Correction → <input type="checkbox"/>	-
■ Set Local Time (Home Clock) > Home Clock → Home Area → Select a city	Tokyo
■ Activate Daylight Savings Time (Home Clock) > Home Clock → Daylight Savings Time → ON	OFF
■ Set Time for a Second Time Zone (Away Clock) > Away Clock → Set Time Zone → Select a city	Tokyo
■ Activate Daylight Savings Time (Away Clock) > Away Clock → Daylight Savings Time → ON	OFF
■ Display Away Clock in Standby > Select Clock → Away Clock	Home Clock

Settings/Operation	Default
■ Set 12 Hour Time Format > Display Pattern → Time → 12 hour	24 hour
■ Change Date Format > Display Pattern → Date → Select a date format	YY/MM/DD

*1 Date & Time Settings effective on 831P: from 00:00 on 2008/01/01 to 23:59 on 2099/12/31

*2 Time Correction may invalidate Schedule/Alarm entries.

Settings Call Settings

International (Global Roaming)

From ► **Main Menu** ► **Settings** ► **Call Settings**
 ► **Optional Services** ► **International Setting**

Settings/Operation	Default
<p>■ Change International Code*1</p> <p>> International Code → Enter Phone Password → Enter International Code</p>	0046010
<p>■ Edit Country/Region Code</p> <p>> Country/Area Number List → Select a country/region → Edit country/region name → Edit country/region code</p>	–
<p>■ Add Country/Region Code</p> <p>> Country/Area Number List → [Menu] → Add → Enter country/region name → Enter country/region code</p>	–
<p>■ Delete Country/Region Code</p> <p>> Country/Area Number List → Highlight a country/region → [Menu] → Delete → [YES]</p>	–
<p>■ Select Operator</p> <p>> Select Operator → Select Auto/Manual → Manual → Select an operator</p>	Automatic

Settings/Operation	Default
<p>■ Set Operator Priority for Automatic Search*2</p> <p>> Select Operator → Set Priority → [Menu] → Add, Insert, Edit or Delete</p> <ul style="list-style-type: none"> ● Add: new network appears at the end of the list; place cursor at the end of the list beforehand. ● Insert: new network appears above selected one. 	–

*1 In Standby, press [] → Press and hold [] (+ appears) to enter International Code automatically. (+ indicates International Code.)

*2 Available operators vary by network conditions.

Call Time & Call Cost

From ► **Main Menu** ► **Settings** ► **Call Settings**
► **Call Time & Cost**

Settings/Operation	Default
■ View Total Call Charge for Outgoing Calls > <i>All Calls</i> (→ To reset, <input type="checkbox"/> → <input type="checkbox"/> → Enter PIN2)	-
■ View Total Call Time for Outgoing Calls*1 > <i>Total Call Time</i> (→ To reset, <input type="checkbox"/> → <input type="checkbox"/>)	-
■ Display Call Charge*2 > <i>Display Cost</i> → <i>ON</i>	OFF (hide)
■ Set Charge Limit*3 *4 > <i>Set Cost Limit</i> → <input type="checkbox"/> [Menu] → <i>Edit</i> → Enter PIN2 → Enter charge limit	-
■ View Remaining Cost > <i>Remaining</i>	-
■ Enter Currency Denomination and Price per Unit of Call Time > <i>Currency Setting</i> → <input type="checkbox"/> → Enter PIN2 → Enter three letter abbreviation for the designated currency → Enter value	-

*1 For Group Calling, total length of all calls made from 831P remains.

*2 Call Cost may not appear depending on subscription.

*3 If charge limit is set below the value set in All Calls, outgoing calls are blocked. Reset All Calls or change charge limit to a higher value.

*4 Emergency numbers (110, 119, 118) are available even when the limit is reached.

Making & Receiving Calls

From ► **Main Menu** ► Settings ► Call Settings

Settings/Operation	Default
<p>■ Press Any Key to Answer Calls*1 > Any Key Answer → ON</p>	OFF
<p>■ Answer Calls by Opening Handset > Clamshell Control → Open-to-Answer Call → ON</p>	OFF (not answer)
<p>■ End Calls by Closing Handset*2 > Clamshell Control → Close-to-End Call → ON</p>	OFF (not end)
<p>■ Open Incoming Call Log for Missed Calls by Opening Handset*3 > Clamshell Control → Open-to-Display Missed Call → ON</p>	OFF
<p>■ Activate Auto Answer when Using Handsfree Devices*4 > Auto Answer → ON</p>	OFF (not answer automatically)

*1 Valid Keys: ,  - , , , , , , ,  (Unavailable while a call is on hold)

*2 Unavailable during a call using Earphone. Yahoo! Keitai cannot be canceled by closing handset even if Close-to-End Call is active.

*3 Available only when the first information received on 831P is Missed Call.

*4 831P beeps and call connects after seven seconds. When Auto Answer and Answer Phone ( P.2-12) are active, one with shorter Answer Time takes priority. When Auto Answer and Voice Mail, **Ringer Off** ( P.2-15) are both active, Voice Mail takes priority.

Settings Notification Light

From ► Main Menu ► Settings ► Phone Settings
► Notification Light

Settings/Operation	Default
<p>■ Set Notification Light for Voice Calls*</p> <p>> <i>Voice Call</i> → Select a color or <i>OFF</i></p>	Color 5
<p>■ Set Notification Light for Video Calls*</p> <p>> <i>Video Call</i> → Select a color or <i>OFF</i></p>	Color 5
<p>■ Set Notification Light for Incoming Messages*</p> <p>> <i>Message</i> → Select a color or <i>OFF</i></p>	Color 2
<p>■ Set Notification Light for Voice Calls in Progress</p> <p>> <i>In Conversation</i> → Select a color or <i>OFF</i></p>	Color 1
<p>■ Set Notification Light for S! Quick News</p> <p>> <i>S! Quick News</i> → Select a color or <i>OFF</i></p>	Color 2
<p>■ Set Notification Light for Clamshell Closing</p> <p>> <i>Clamshell Closing</i> → Select a color or <i>OFF</i></p>	Color 6
<p>■ Turn Off Notification Light for Data Transfer</p> <p>> <i>Data Transfer</i> → <i>OFF</i></p>	ON

● When highlighting a color, Notification Light illuminates.

* Phone Book entry Notification Light (☞ P.4-4, P.4-5) takes priority over this setting.

Settings Phone Book

From ► Main Menu ► Phone Book ► Settings

Settings/Operation	Default
<p>■ Change Save Location for New Entry (Phone, USIM or Ask Each Time)</p> <p>> <i>Save Settings</i> → <i>USIM</i> or <i>Ask Each Time</i></p>	Phone
<p>■ Open USIM Card Phone Book*</p> <p>> <i>Change View</i> → <i>USIM</i> or <i>Phone & USIM</i></p>	Phone
<p>■ Change Font Size</p> <p>> <i>Font Size</i> → <i>Large</i></p>	Normal

* Depending on the save location setting (Save Settings: ☞ above), selecting *Phone* or *USIM* may prompt a *Change save location as well?* confirmation to appear.

Settings Video Call

Function Menus

From ► **Main Menu** ► **Settings** ► **Call Settings**
► **Video Call**

Settings/Operation	Default
■ Change Outgoing Image and Sound Settings*1 > <i>Video & Voice Setting</i> → Select an item	Alternative Picture
■ Change Display Backlight Brightness*1 > <i>Display Backlight</i> → <i>Brightness</i> → Select a level	Level 3
■ Change Display Backlight Duration*1 > <i>Display Backlight</i> → <i>Backlight Time</i> → <i>Follow General Setting*2</i> or <i>Always OFF</i>	Always ON
■ Change Incoming Video Image Quality*1 > <i>Incoming Video Quality</i> → <i>Motion Prioritized</i> or <i>Quality Prioritized</i>	Standard
■ Change Alternative Picture > <i>Alternative Picture</i> → Highlight a file → [Set]	TV コール 代替画像 1.bmp
■ Switch Speaker ON*1 > <i>Loud Speaker</i> → <i>OFF</i>	ON (speaker on)

*1 To change settings during a call: ☞ P.2-9, Right

*2 Display Backlight Time setting (☞ P.15-4) applies.

Engaged Video Call Settings

From ► During a Video Call, [Menu] ► **Settings**

Settings/Operation	Default
■ Change Brightness > <i>Display Backlight</i> → <i>Brightness</i> → Select a level	Level 3
■ Change Backlight Duration > <i>Display Backlight</i> → <i>Backlight Time</i> → Select an item ● Selecting <i>Follow General Setting</i> applies Display Backlight Time setting.	Always ON
■ Change Incoming Image Quality > <i>Incoming Video Quality</i> → <i>Motion Prioritized</i> or <i>Quality Prioritized</i>	Standard
■ Adjust Color Tone to Lighting Conditions > <i>White balance</i> → Select an environment	Automatic

Digital TV

From ► Main Menu ► TV ► User Settings

Settings/Operation	Default
<p>■ Hide Caption</p> <p>> <i>Caption</i> → OFF</p>	ON
<p>■ Change Default View</p> <p>> <i>First View</i> → Normal Screen</p>	Wide Screen
<p>■ Change Brightness</p> <p>> <i>Display Backlight</i> → <i>Brightness</i> → Select a level</p>	Level 2
<p>■ Set Backlight Duration while Watching TV</p> <p>> <i>Display Backlight</i> → <i>Backlight Time</i> → Select an item</p>	Always ON
<p>■ Turn Off Sounds from Data Broadcast/Sites</p> <p>> <i>Data Broadcasting</i> → <i>Sound Effect</i> → OFF</p>	ON
<p>■ Show Confirmation on Data Broadcast</p> <p>> <i>Data Broadcasting</i> → <i>Reset Confirmation Display</i> → <input type="checkbox"/></p>	-
<p>■ Hide Guide in Wide Screen</p> <p>> <i>Icon Always Display</i> → OFF</p>	ON
<p>■ Reset Channel List</p> <p>> <i>Reset Channel Settings</i> → <input type="checkbox"/> → Enter Phone Password</p>	-

Settings/Operation	Default
<p>■ Delete Information Saved in Broadcast Storage Area</p> <p>> <i>Reset Storage Area</i> → Select an item → <input type="checkbox"/></p>	-
<p>■ Delete All Information Saved in Broadcast Storage Area</p> <p>> <i>Reset Storage Area</i> → [All] → <input type="checkbox"/> → Enter Phone Password</p>	-
<p>■ Reset TV Settings</p> <p>> <i>Reset TV Settings</i> → <input type="checkbox"/> → Enter Phone Password</p>	-

Display Settings

From ► **Main Menu** ► Settings ► Display Settings
 ► S! Quick News Settings

Settings/Operation	Default
■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → <i>Unread</i>	Unread + Read
■ Change Marquee Speed > <i>Marquee Speed</i> → <i>Fast</i> or <i>Slow</i>	Medium
■ Show Image Data > <i>Image Display</i> → <i>ON</i>	OFF (hide)

Auto Update/Deleting Information

From ► **Main Menu** ► Entertainment ► S! Quick News
 ► Settings

Settings/Operation	Default
■ Automatically Update News Flash in S! Quick News List*1 *2 > <i>Auto Refresh</i> → <i>News Flash</i> → <input type="checkbox"/> → Set update frequency	OFF (not automatically update)
■ Automatically Update General News (Once a day)*1 *2 > <i>Auto Refresh</i> → <i>General</i> → <input type="checkbox"/> → <i>ON</i>	OFF (not automatically update)
■ Automatically Update S! Loop Contents (Every four hours)*1 *2 > <i>Auto Refresh</i> → <i>S! Loop</i> → <input type="checkbox"/> → <i>ON</i>	OFF (not automatically update)
■ Canceling Automatic Updates for Special News*1 *2 > <i>Auto Refresh</i> → <i>Special</i> → <i>OFF</i>	ON (Automatically update every four hours)
■ Delete S! Quick News Information > <i>Delete S! Quick News List</i> → <input type="checkbox"/> [YES] → Enter Phone Password	—

*1 If calls are in progress at update time, auto update does not occur until next update.

*2 Video Calls are rejected during auto update.

Settings Messaging

Universal Settings

From ► **Main Menu** ► **Messaging** ► **Settings**
 ► **Universal Settings**

Settings/Operation	Default
<ul style="list-style-type: none"> ■ Open Incoming Mail Folder Automatically by Opening Handset for New Messages*¹ > <i>Clamshell Control</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Change Font Size*² > <i>Font Size</i> → <i>Large</i> or <i>Small</i> 	Normal
<ul style="list-style-type: none"> ■ Confirm Message Delivery (Available when Messaging to SoftBank Handset Numbers) > <i>Delivery Report</i> → <i>ON</i> 	OFF (not confirm)
<ul style="list-style-type: none"> ■ Filter Messages into Folders > <i>Mail Delivery Rule</i> → Select a folder → <input type="checkbox"/> [Menu] → <i>Add Address</i> → Select a search/entry method → Select/enter address 	-
<ul style="list-style-type: none"> ■ Filter Messages by Subject > <i>Mail Delivery Rule</i> → Select a folder → <input type="checkbox"/> [Menu] → <i>Add Subject</i> → Enter subject 	-
<ul style="list-style-type: none"> ■ Change Word Prediction Priority > <i>Learning from Received Message</i> → <i>OFF</i> 	ON (prioritize)

Settings/Operation	Default
<ul style="list-style-type: none"> ■ Require Phone Password Entry when Opening Messaging Folders/Retrieving Server Mail > <i>Mail Security Setting</i> → Enter Phone Password → (Repeat: Select an item)*³ → <input type="checkbox"/> [OK] 	OFF (not set)
<ul style="list-style-type: none"> ■ Enable 3D Pictograms when Opening Messages > <i>3D Pictograms</i> → <i>3D Picto Auto Play</i> → <i>Always Display</i> or <i>Display only Unread</i> 	OFF
<ul style="list-style-type: none"> ■ Change Font/Background Color > <i>3D Pictograms</i> → <i>Color Settings</i> → Select a color 	White
<ul style="list-style-type: none"> ■ Set Auto Delete Off (For Drafts and Sent/Unsent Messages) > <i>Auto Delete Sent Messages</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Set Auto Delete Off (For Incoming Mail) > <i>Auto Delete Incoming Messages</i> → <i>OFF</i> 	ON

*1 Available only when the first information received on 831P is Message.

*2 In the following cases, font size does not change. Open preview window to view created messages in selected font size.

- In Subject field
- In S! Mail Composition window when *Font Size* is set to *Small*

*3 To cancel selection, press again.

S! Mail Settings

From ► **Main Menu** ► Messaging ► Settings
► S! Mail Settings

Settings/Operation	Default
<ul style="list-style-type: none"> ■ Set S! Mail Download Condition (within Japan) > <i>Incoming Options</i> → <i>Home Auto Settings</i> → <i>From Numbers Only</i> or <i>Manual Retrieval</i> 	Auto Download All
<ul style="list-style-type: none"> ■ Retrieve S! Mail Manually while Abroad > <i>Incoming Options</i> → <i>Roaming Auto Settings</i> → <i>Manual Retrieval</i> 	Auto Download
<ul style="list-style-type: none"> ■ Set Not to Quote Message Text when Replying > <i>Quote Message</i> → <i>OFF</i> 	ON (quote)
<ul style="list-style-type: none"> ■ Open Image Files Manually > <i>Attachment Auto-play</i> → <i>Images</i> → <i>OFF</i> 	ON (open)
<ul style="list-style-type: none"> ■ Play Music Files Automatically* > <i>Attachment Auto-play</i> → <i>Sounds</i> → <i>ON</i> 	OFF (not play back)

* When multiple sound files are attached, the first file plays.

Feeling Mail Settings

From ► **Main Menu** ► Messaging ► Settings
► S! Mail Settings ► Feeling Expression

Settings/Operation	Default
<ul style="list-style-type: none"> ■ Hide Information > <i>Information Display Settings</i> → <i>OFF</i> 	ON (show)
<ul style="list-style-type: none"> ■ Deactivate Notification Light > <i>Notification Light Patterns</i> → <i>Settings ON/OFF</i> → <i>OFF</i> 	ON (activate)
<ul style="list-style-type: none"> ■ Change Notification Light Color > <i>Notification Light Patterns</i> → Select feeling → Select a color* 	—
<ul style="list-style-type: none"> ■ Deactivate Vibration > <i>Vibration Patterns</i> → <i>Settings ON/OFF</i> → <i>OFF</i> 	ON (activate)
<ul style="list-style-type: none"> ■ Change Vibration Pattern > <i>Vibration Patterns</i> → Select feeling → Select a pattern 	—
<ul style="list-style-type: none"> ■ Set Message Ringtone > <i>Message Ringtone</i> → <i>Settings ON/OFF</i> → <i>ON</i> 	OFF (not sound)
<ul style="list-style-type: none"> ■ Change Message Ringtone > <i>Message Ringtone</i> → Select feeling → Select a folder in Data Folder → Highlight a tone → [Set] 	—

* When highlighting a color, Notification Light illuminates.

Default Settings

Emotion	Notification Light	Vibration	Message Ringtone
Happy	Color 6	Pattern 1	Happy / うれしい .mmf
OK/Good	Color 2	Pattern 1	OK / Good.mmf
Sad/Sorry	Color 1	Pattern 2	悲しい/ごめん なさい .mmf
NG/Bad	Color 3	Pattern 2	NG / Bad.mmf
Notice/ Important	Color 4	Pattern 3	注目/重要 .mmf

- When sender is saved in Phone Book, Phone Book settings take priority in the following case (☞ P.4-4).
 - Message Ringtone is set to a ringtone other than **Follow General Setting**
 - Notification Light is set to a color other than **Follow General Setting**

SMS Settings

From ► **Main Menu** ► **Messaging** ► **Settings**
 ► **SMS Settings**

Settings/Operation	Default
<ul style="list-style-type: none"> ■ Set a Time Limit to Store All Sent SMS at the Center*1 > Expiry → Maximum (depending on Server setting) or select a limit 	Depends on USIM Card settings
<ul style="list-style-type: none"> ■ Change SMS Center Number*2 > Message Center → Enter SMS Center number 	+8190665 19300
<ul style="list-style-type: none"> ■ Set Input Character to English > Input Character Settings → English (160characters) 	Japanese (70characters)

*1 When recipient handset is off or out-of-range, SMS are stored at the Center, and delivered when recipient handset detects signal.

*2 Changing Message Center number may disable SMS.

Browser Display Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Settings

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
► PC Site Browser Settings

Settings/Operation	Default
<p>■ Change Font Size > <i>Font Size</i> → <i>Large</i> or <i>Small</i></p>	Normal
<p>■ Scroll Unit > <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i></p>	Single Line
<p>■ Images Off > <i>Downloads</i> → <i>Display Images</i> → <i>OFF</i></p>	ON (show)
<p>■ Sounds Off > <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i></p>	ON (retrieve)
<p>■ Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai* > <i>Warning Messages</i> → <i>PC Site Browser</i> (when activating) or <i>Yahoo! Keitai</i> (when switching) → <i>OFF</i></p>	ON (show)

* PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Settings

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
► PC Site Browser Settings

Settings/Operation	Default
<p>■ Clear Cache > <i>Memory Manager</i> → <i>Clear Cache</i> → <input type="checkbox"/></p>	-
<p>■ Delete Cookies > <i>Memory Manager</i> → <i>Delete Cookies</i> → <input type="checkbox"/></p>	-
<p>■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → <i>Delete Certificates</i> → <input type="checkbox"/></p>	-
<p>■ Delete Input Memory > <i>Memory Manager</i> → <i>Delete Input Memory</i> → <input type="checkbox"/></p>	-
<p>■ Initialize Browser > <i>Initialized Browser</i> → <input type="checkbox"/> → Enter Phone Password</p>	-
<p>■ Reset Browser Settings > <i>Reset Defaults</i> → <input type="checkbox"/> [YES] → Enter Phone Password</p>	-

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Settings
 ► Security

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
 ► PC Site Browser Settings ► Security

Settings/Operation	Default
■ Set Auto Send Off for Manufacturer's Number (for Authentication) > <i>Manufacture Number</i> → OFF	ON (send)
■ Set Not to Send Referer Information > <i>Send Referer</i> → OFF	ON (send)
■ Select whether or Not to Allow Cookies to be Stored on 831P > <i>Cookies</i> → OFF or Ask Every Time	ON (store)
■ Select whether or Not to Run Scripts in Yahoo! Keitai*1 > <i>Script</i> → Select an item	Ask before Connect
■ Select whether or Not to Run Scripts in PC Site Browser*2 > <i>Script</i> → Select an item	ON (run)
■ View Electronic Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item	—

Settings/Operation	Default
■ Select whether or Not to Retain Authentication Information > <i>Certificate Retention</i> → Always Keep or Not keep	Keep while Browsing

*1 Yahoo! Keitai Browser only

*2 PC Site Browser only

Settings S! Appli

From ► Main Menu ► S! Appli ► S! Appli Settings

Settings/Operation	Default
■ Change Volume > <i>Volume</i> → Adjust volume	Volume 4
■ Backlight On/Off > <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i>	Follow General Setting*
■ Deactivate Vibration > <i>Vibration</i> → <i>OFF</i>	ON (activate)
■ Suspend S! Appli after Set Period of Inactivity > <i>Auto Suspend Timer</i> → Select a duration	Not Suspended
■ Synchronize Memory Card Used in Another Handset, etc. to Update S! Appli List > <i>Synchronize Memory Card</i>	—

* Display Backlight Time setting (☞ P.15-4) applies.