

USIM Card	14-2
About USIM Card	14-2
USIM Card Installation.....	14-3
Battery	14-4
Battery Installation.....	14-4
Software Update	14-5
Troubleshooting	14-6
Key Assignments	14-8
Pager Codes	14-10
Pager Code List	14-10

Character Codes	14-11
Character Code List	14-11
Weather Indicators	14-17
Weather Indicator List	14-17
Specifications	14-18
Memory Card Structure & Contents ...	14-23
Menu List	14-24
Index	14-31
Warranty & Service	14-38
Customer Service	14-39

14


Appendix



About USIM Card

USIM Card is an IC card containing customer and authentication information, including the handset number. USIM Card must be inserted to use this handset. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

Precautions

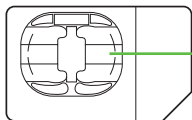

IC Chip

- Do not insert USIM Card into any other IC card device. SoftBank Mobile is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Clean with soft dry cloth.
- Do not attach labels to USIM Card. Malfunction may result.

Important

- USIM Card is the property of SoftBank Mobile.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank Mobile upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank Mobile is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P.14-39).

USIM PINs

There are two Security Codes for USIM Card; both are **9999** by default.

PIN	Security Code to prevent unauthorized use of handset
PIN2	Required to clear Call Costs and to set Max Cost, etc.

PIN Lock

- Entering incorrect PIN three consecutive times activates PIN Lock or PIN2 Lock, limiting handset use.

Canceled PIN Lock

- Contact SoftBank Mobile Customer Center, General Information (P.14-39) for your Personal Unblocking Key (PUK Code) and follow these steps:

Enter PUK Code ➡ ➡ **Enter new PIN/PIN2** ➡ ➡ **Re-enter new PIN/PIN2** ➡

- Write down PUK code.

PUK Lock

- Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. Contact SoftBank Mobile Customer Center, General Information (P.14-39) for recovery.




USIM Card Installation


- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

Inserting

- 1 Remove battery (P.14-4)
- 2 Using Tab, pull out Tray as shown until it clicks

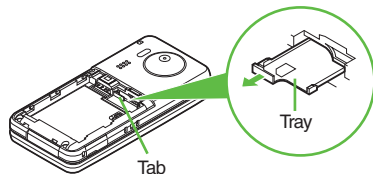

 - 3 Slide in USIM Card with IC chip facing up




- 4 Push in Tray fully




- Reinstall battery (P.14-4).

Removing

- 1 Remove battery
- 2 Using Tab, pull out Tray as shown until it clicks

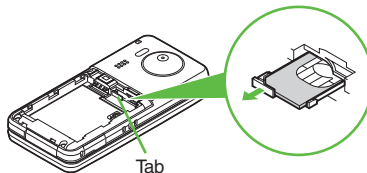

 - 3 Lift and slide out USIM Card as shown



- Reinstall battery.
- Take care not to lose removed USIM Card.

After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

- Some downloaded files may be inaccessible. In addition, S! Applications and BookSurfing® may be disabled after USIM Card replacement.



Battery Installation

About Battery

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.

Lithium-ion Battery

- This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.




Li-ion00

- To recycle a used lithium-ion battery, take it to any shop displaying the symbol shown above.
- To avoid fire or electric shock, do not short-circuit or disassemble battery.


Inserting & Removing

1 Remove cover

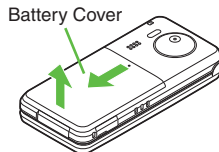


- Press and slide cover then lift as shown.

2 Insert battery

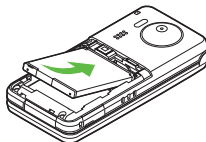

- With logo side up, fit tabs into battery cavity slots.


3 Close cover

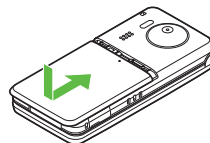

- Position and slide the cover gently as shown until it stops.

Removing

- Turn handset power off and lift battery as shown.

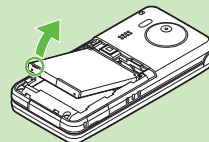

Software Update

Check for firmware updates and download as required.

Precautions


- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand.
- Update will not start if other functions are in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk.
- Always back up important information. SoftBank Mobile cannot be held liable for damages from lost information, etc.

Updating Software

Packet transmission fees do not apply to updates (including checking, downloading and rewriting).

1 ➔ **Settings** ➔ ➔ **In Phone menu, Software Update** ➔

2 **Software Update** ➔

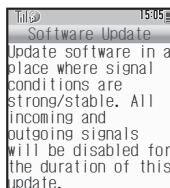

- Follow onscreen instructions.

Setting Update Period (Japanese)

In , **Update Period** ➔

- Follow onscreen instructions.

Update Result

In , **Update Result** ➔

Scheduled Update

Confirmation appears at scheduled update time. Press or wait a while for update to start.

When Updated

Update success notification appears and handset reboots.

After reboot, completion message appears and Information window opens.

Update Result

While Information window appears, **Update Result** ➔

Reboot Failure

- If handset does not return to Standby after update, turn power off, reinsert battery, then restart it. If it still does not restart, contact SoftBank Mobile Customer Center, Customer Assistance (P.14-39).



Troubleshooting

General

Problem	Possible Cause	Solution
Handset won't turn on	Was  pressed long enough?	Press  longer.
	Battery may need to be charged or replaced.	Charge battery or install a charged battery.
	Battery may not be properly installed.	Install battery properly (P.14-4).
Handset won't respond	Is Switch On/Off in PIN Entry On ?	If On , PIN is required. Enter PIN according to onscreen prompt.
Insert USIM Card appears	USIM Card may not be properly inserted.	Turn power off and check that USIM Card is properly inserted, then restart handset. If the message still appears, USIM may be damaged.
	The correct USIM Card may not be inserted.	Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.
	There may be debris on IC chip/terminals.	Clean relevant parts with dry cloth and re-insert.
REFRESH appears and handset returns to Standby	Handset may have been dropped or subjected to shocks.	Handset failed to recognize USIM Card temporarily. This is not a malfunction.
Keypad won't respond	Keypad Lock may be active ( appears).	Cancel Keypad Lock (P.1-19).
	Function Lock may be active ( appears).	Cancel Function Lock (P.10-2).

Problem	Possible Cause	Solution
Battery strength indicator flashes when not charging	Ambient temperature may be outside 5°C to 35°C.	Use within an ambient temperature of 5°C - 35°C.
Saved entry/folder does not appear on handset	Entry/folder may be set to Secret.	Activate Show Secret Data (P.10-3).
Cannot use Predictive	Show Secret Data may be active.	Cancel Show Secret Data.
Handset/AC Charger feels warm	Handset/AC Charger may warm while charging.	Unless handset/AC Charger is too hot to touch, warmth is considered normal. Always avoid prolonged skin contact to prevent burn injuries.
	Handset may warm during extended periods of use.	
	Handset may warm during Video Calls.	
Cannot access Memory Card files	Memory Card may not be properly formatted.	Use 832SH-formatted Memory Cards.
Clock settings are lost	Did you leave handset without battery?	Clock settings remain even when removing battery for replacement, etc. However, if handset is left with no battery or an exhausted one for an extended period of time (approximately one hour), Clock will need to be reset.



■ Charger/Battery

Problem	Possible Cause	Solution
Battery charges quickly	Remaining charge shortens charging time.	This is normal.
	Battery may be terminally exhausted or defective. (Small Light flashes red.)	Replace battery with a new one.
Battery charges slowly	Charging slows during Video Calls.	End the call to charge faster.
	Battery may be charging via USB.	Use AC Charger.
Battery won't charge	AC Charger may not be properly connected to handset.	Make sure connector is securely inserted and retry.
	AC Charger may not be firmly plugged in to AC outlet.	Remove plug from outlet, re-insert and retry.
	Battery may not be properly installed.	Install battery properly (P.14-4).
	Battery, AC Charger, or Charging Terminals, or Device Port may be obstructed by dust, etc.	Clean terminals, connector and Port with a dry cotton swab and retry.
	Charger, etc. may not be supported.	Use specified AC Charger, etc. only; others may damage battery.

Problem	Possible Cause	Solution
Battery Time seems shorter than usual	High power consuming operations are in use.	Keep handset closed in Standby; reduce S! Application, Media Player and Camera use, and limit transmissions/external connections.
	Using handset in poor conditions may shorten Battery Time.	Avoid prolonged use of handset out-of-range or in poor signal conditions.
	Power hungry settings may be active.	Lower Brightness, select shorter Display Saving/ Backlight time, etc.



Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
[1]	あいうえお あいうえお	アイウエオ アイウエオ	@/_-1 [space]	1	1
[2]	かきくけこ	カキクケコ	ABCabc2	2	2
[3]	さしすせそ	サシスセソ	DEFdef3	3	3
[4]	たちつとっ	タチツテトッ	GHIghi4	4	4
[5]	なにぬねの	ナニヌネノ	JKLjkl5	5	5
[6]	はひふへほ	ハヒフヘホ	MNOmno6	6	6
[7]	まみむめも	マミムメモ	PQRSpqrs7	7	7
[8]	やゆよゃゅょ	ヤユヨャュョ	TUVtuv8	8	8
[9]	らりるれろ	ラリルレロ	WXYZwxyz9	9	9
[0]	わをんー ・	ワヲンー ・	0	0	0
[Log]	Log, Pictogram List (double-byte), Symbol List ³				_____
[#]	、。 (line break) ? ! [space]		、。 (line break) ?! [space]	#	_____

¹ - is available only in single-byte katakana entry.

² Available for phone number entry; some characters may not be enterable in some windows.

³ May not be enterable in some windows.



Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	Conversion (up) ⁴	Cursor up			
	Conversion (down) ⁵	Cursor down (line break)			
	Cursor left				
	Cursor right				
	Switch entry modes (except during conversion)				
	Toggle Personal Mode ⁶	_____	Toggle Personal Mode ^{6, 7}	_____	
	Toggle case (for some characters)			_____	
	_____	Toggle mode (upper/ lower and lower case)			
	Delete one character				
	Cancel conversion	_____	Cancel conversion ⁷	_____	Delete code
 (Long)	Delete before or after cursor				
	Recover characters deleted with				
	Re-convert ⁸	_____	Re-convert ^{7, 8}	_____	
	OK				
	Phonetic Conversion ⁶	_____			
	Hiragana to Katakana/ Alphanumeric Conversion ⁶	_____			

⁴Cursor moves up except during conversion.⁵Cursor moves down except during conversion.⁶Available during conversion.⁷Available only in single-byte alphanumeric entry.⁸Press immediately after inserting characters to re-convert them.

Pager Code List

Gray background indicates upper and lower case available. Press  to switch immediately after character entry.

■ Double-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			*1
	8	や	(	ゆ	)	よ	*	#	Space		*2
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	ゝ	ゞ	6	7	8	9	0

■ Double-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	や		ゆ		よ					*2
	9										
	0										

■ Single-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			*1
	8	ヤ	(	ユ	)	ヨ	*	#	Space		*2
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	ゝ	ゞ	6	7	8	9	0

■ Single-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	ヤ		ユ		ヨ					*2
	9										
	0										

*1 Press  to insert  (line break) in mail message text, Notepad, etc.

*2 Press  to toggle upper and lower case modes.



[illegible]

Character Codes									
First Three Digits	Last Digit								
0	1	2	3	4	5	6	7	8	9
198	叶	栳	栳	栳	栳	栳	栳	栳	栳
199	叶	栳	栳	栳	栳	栳	栳	栳	栳
200	叶	栳	栳	栳	栳	栳	栳	栳	栳
201	叶	栳	栳	栳	栳	栳	栳	栳	栳
202	叶	栳	栳	栳	栳	栳	栳	栳	栳
203	叶	栳	栳	栳	栳	栳	栳	栳	栳
204	叶	栳	栳	栳	栳	栳	栳	栳	栳
205	叶	栳	栳	栳	栳	栳	栳	栳	栳
206	叶	栳	栳	栳	栳	栳	栳	栳	栳
207	叶	栳	栳	栳	栳	栳	栳	栳	栳
207	叶	栳	栳	栳	栳	栳	栳	栳	栳
208	叶	栳	栳	栳	栳	栳	栳	栳	栳
209	叶	栳	栳	栳	栳	栳	栳	栳	栳
210	叶	栳	栳	栳	栳	栳	栳	栳	栳
211	叶	栳	栳	栳	栳	栳	栳	栳	栳
212	叶	栳	栳	栳	栳	栳	栳	栳	栳
213	叶	栳	栳	栳	栳	栳	栳	栳	栳
214	叶	栳	栳	栳	栳	栳	栳	栳	栳
215	叶	栳	栳	栳	栳	栳	栳	栳	栳
216	叶	栳	栳	栳	栳	栳	栳	栳	栳
217	叶	栳	栳	栳	栳	栳	栳	栳	栳
218	叶	栳	栳	栳	栳	栳	栳	栳	栳
219	叶	栳	栳	栳	栳	栳	栳	栳	栳
220	叶	栳	栳	栳	栳	栳	栳	栳	栳
221	叶	栳	栳	栳	栳	栳	栳	栳	栳
222	叶	栳	栳	栳	栳	栳	栳	栳	栳
223	叶	栳	栳	栳	栳	栳	栳	栳	栳
224	叶	栳	栳	栳	栳	栳	栳	栳	栳
225	叶	栳	栳	栳	栳	栳	栳	栳	栳
226	叶	栳	栳	栳	栳	栳	栳	栳	栳
226	叶	栳	栳	栳	栳	栳	栳	栳	栳
227	叶	栳	栳	栳	栳	栳	栳	栳	栳
228	叶	栳	栳	栳	栳	栳	栳	栳	栳
229	叶	栳	栳	栳	栳	栳	栳	栳	栳

14-13

[illegible]

[illegible]

[illegible]

Weather Indicator List

Basic Status

	Clear skies (day)
	Clear skies (night)
	Cloudy
	Rain
	Snow
	Thunder showers
	Chance of rain: 0%
	Chance of rain: 10%
	Chance of rain: 20%
	Chance of rain: 30%
	Chance of rain: 40%
	Chance of rain: 50%
	Chance of rain: 60%
	Chance of rain: 70%
	Chance of rain: 80%
	Chance of rain: 90%
	Chance of rain: 100%
	Then
	Partly/chance of

Pollen Count

	Low
	Moderate
	High
	Extreme

Cherry Blossom

	Flowering
	Almost full bloom
	Full bloom
	Beginning of petal fall

Fall Foliage

	No color change
	Colors appearing
	Peak
	Defoliating

Ultraviolet

	Low
	Moderate
	High
	Extreme

Typhoon

	Forming
	Approaching
	Caution necessary

Other

	Heavy rain
	Gale
	Notification



Specifications

SoftBank 832SH

Weight*	102 g
Continuous Talk Time*	230 minutes (3G) 210 minutes (GSM)
Continuous Standby Time*	310 hours (3G) 280 hours (GSM) (handset closed)
Charging Time (power off)*	AC Charger: 135 minutes In-Car Charger: 140 minutes
Dimensions (W x H x D)*	49 x 105 x 15.9 mm (handset closed, without protruding parts)
Maximum Output	0.25 W (3G) 2.0 W (GSM)

*Approximate value.

- Above values calculated with battery installed.
- Continuous Talk Time is an average measured with a new, fully charged battery, in strong signal conditions without moving handset.
- Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in strong signal conditions without moving handset. In Japan (3G service area), the value is calculated with IP Service Setting, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting set to **Off**.
- Talk Time/Standby Time may vary by environment, status, settings, etc.
- Display employs precision technology, however, some pixels may appear brighter/darker.

Handset Materials

Parts	Materials & Finishing
Housing (Display side)	Nylon resin/SUS (insert-molded)/UV painting
Housing (Display back, Keypad side, Keypad back), Battery Cover	ABS resin/UV painting
Display window, camera lens, Infrared Port, camera ornament panel	Acrylic resin
External Display window	PC resin, deposition (back)/Solid printing (back)
Center Key, Multi Selector	PC resin, solid printing (back)
Mail Key, Yahoo! Keitai Key, Shortcuts & A/a Key, Multimedia & Text Key, Start Key, Clear/Back Key, Power On/Off Key, Keypad, Dictionary Key, Multi Job & Manner Key	PC resin
Side Keys	PC resin, mirror finish
External Device Port Cover, Headphone Port Cover, Memory Card Slot Cover	PC resin/Elastomer/UV painting
Charging Terminals	SUS/Gold plating (sealer: nickel)
Screws (Display side, Keypad side, battery side)	SWCH16A/Trivalent chromate
USIM pin	Copper alloy/Gold plating (sealer: nickel)

Accessory

Battery

Voltage	3.7V
Battery Type	Lithium-ion
Capacity	710 mAh
Dimensions (W x H x D)*	37.7 x 46.9 x 4.2 mm (without protruding parts)

*Approximate value.



Getting Started

■ Standby Shortcut

Savable Items	30 per sheet
---------------	--------------

Basic Operations

■ Text Entry

User Dictionary	250 entries (5 per reading) Word: 30 characters Reading: 8 hiragana
Acquire Dictionary	5 dictionaries
Paste List	10 text strings
Recoverable Deleted Characters	30,720 single-byte characters
Dictionary	Meikyo Japanese Dictionary: Approximately 47,100 words/phrases Genius English-Japanese Dictionary: Approximately 45,700 words/phrases Genius Japanese-English Dictionary: Approximately 55,800 words/phrases

■ Phone Book

Entry	1,000 entries
Name/Reading	Last/First: 32 characters each
Phone Number	5 numbers (32 digits each)
Mail Address	5 addresses (128 characters each)
Category	16 Categories
Address	Postal Code: 20 characters Country: 32 characters Others: 64 characters each
Office	Office Name/Division/Post: 32 characters each
Homepage	1,024 bytes
Note	256 characters
Mail Groups	20 Groups (20 members each) Group name: 16 characters

Calling

Dialed Numbers	Dialed Numbers: 30 records Dialed Ranking: 10 records
Received Calls	30 records
Answer Phone/ Caller Voice	20 messages or 90 seconds
Auto Answer List	10 numbers
Decoration Call	100 KB including 20 characters
Speed Dial/Mail	100 numbers/addresses

Messaging

Memory	Received Msg.	10 MB or 3,000 messages
	Drafts	
	Sent Messages	5 MB (or 1,000 messages for Sent Messages)
	Unsent Messages	
	Templates	100 MB (shared with Data Folder and S! Appli Library)
PC Mail/S! Mail Subject	512 single-byte characters	
PC Mail/S! Mail Message	Approximately 30,000 single-byte characters	
SMS Message	160 single-byte alphanumeric	
Auto Resend	2 times	
Attachment	20 files or 1 MB*	
Send Reservation	10 messages	
Signature	256 single-byte characters	
Recipient	20 numbers/addresses	
Folder	20 folders (20 sort keys each)	
Chat Folder	Memory	300 messages per folder
	Folder	10 folders (20 members each)

Graphic Mail	1 sound or Flash® file, or 40 images/ My Pictograms (with 1 sound or Flash® file)	
Auto Reply	20 numbers/addresses (20 digits or 256 single-byte characters each)	
Anti Spam Measures	Individual	20 entries
	Permitted List	20 entries

*Limit may be lower depending on message text, etc.

■ PC Mail Settings

PC Mail Account	Account	3 accounts
Set Receiving	Account Name	20 characters
	User Name	128 characters
	Password	40 characters
	ReceivingServer	128 characters
Set Sending	Port Number	1 to 65535
	Sender Name	20 characters
	Mail Address	128 characters
PC Mail DL	Individual Address	20 addresses

Yahoo! Keitai & PC Site Browser

Download	Yahoo! Keitai	300 KB per page
	PC Site Browser	1 MB per file
History	300 pages	
URL Entry Log	10 URLs	
Bookmarks/ Saved Pages	100 pages	
Tab	3 tabs at one time	
Input Memory	20 entries	
Streaming History	20 URLs	
RSS Feed	30 entries (60 KB per entry)	



Camera & Imaging

■ Mobile Camera

Effective Pixels	3.2 Megapixels
Auto Shut-off Time	Approximately 3 minutes

■ Photo Camera

Zoom	1x - 25x	
Picture Size (W x H dots)	3M	1536 x 2048 (QXGA)
	Full HD	1080 x 1920
	2M	1200 x 1600 (UXGA)
	1.2M	960 x 1280 (Quad-VGA)
	VGA	480 x 640
	Wallpaper	240 x 400
	QVGA	240 x 320
	QQVGA	120 x 160
Scanner Image Size (W x H dots)	Free, 1200 x 640, 480 x 1488, 1280 x 960	
File Format	JPEG	
Memory	Approximately 260 files (at 3M, Normal Quality) on handset with no other files	
File Name	yymmdd_hhmmss	
Shooting Distance	Macro: 10 cm	
Other	Use 40 KB or smaller transparent PNG files as Frames	

■ Video Camera

Zoom	1x - 12x	
Record Size (W x H dots)	Extended Video	320 x 240 (QVGA)
		240 x 176 (HQVGA)
		176 x 144 (QCIF)
	For Message	128 x 96 (SubQCIF)
Record Size (W x H dots)	Extended Video	320 x 240 (QVGA)
		176 x 144 (QCIF)
		128 x 96 (SubQCIF)
	For Message	128 x 96 (SubQCIF)
File Format	3GP	
Recording Capacity per Shot	Extended Video	Approximately 30 minutes* on Memory Card
	For Message	1 MB or 295 KB
File Name	yymmdd_hhmmss	
Recording Distance	1.5 m in good light	

*Varies with handset usage, location or settings.

■ Editing Images

Picture Editor	Resize (W x H dots)	Wallpaper (240 x 400) Power On/Off (240 x 400) Incoming Call (160 x 160) Alarm (240 x 104) Pictogram (96 x 96) QVGA (240 x 320) Cut
	Retouch	52 x 52 dots or larger JPEG/PNG images
	Paste	16 characters
	Correction	52 x 52 dots or larger JPEG/PNG images
Composite	Merge	JPEG images between W 48 x H 64 dots and 240 x 320 dots
	Panorama	

Media Player

Supported Formats	AAC (.mp4/.3gp/.m4a), Secure AAC (SD-Audio standard) (Some files may not play depending on sampling frequency and bit rate)	
All Music List	Music	Shows up to 350 files each
	Chaku-Uta®	Shows up to 999 files
	SD AUDIO	

S! Applications

Memory	100 items or 100 MB (shared with Templates folder and other folders in Data Folder)
--------	---



Handy Extras

■ PIM/Lifestyle

Calendar/ Tasks	300 entries, Subject: 32 characters Description: 128 characters Location: 16 characters Set Holiday: 10 holidays
Alarms	5 entries, Subject: 9 characters
Calculator	999,999,999,999
Expenses Memo	30 entries (999,999.99 yen each)

*Preset holidays are based on Japanese calendar as of May 2009.

■ Clocks/Gauges

Stopwatch	23 hours 59 minutes 59.9 seconds in 0.1-second increments Lap time: 4 records
Countdown Timer	99 minutes 59 seconds in 1-second increments
World Clock	City name: 16 characters

■ Doc./Rec.

Notepad	500 entries (8,192 characters each)
Voice Recorder	For Message Approximately 10 minutes (message size limit: 1 MB) or 3 minutes (message size limit: 300 KB) per file
	Extended Voice 99 hours 59 minutes 59 seconds
Scan Barcode (Continuous Mode)	UPC/JAN 50 codes QR Code 16 codes
Create QR Code	Equivalent of 513 digits, 311 alphanumerics or 131 kanji
Scan Text	256 characters

Entertainment & Communication

■ Mobile Widget

Savable Items	6 widgets (S! Quick News & S! Friend's Status: 1, other: 5) per sheet x 4 sheets
----------------------	--

■ S! Quick News

Savable Items	Special: 1 item News Flash: 1 item General: 4 items
----------------------	---

■ e-Books

Text Copy	20 characters
------------------	---------------

■ S! Friend's Status

Member	30 members
My Status	Name: 7 characters Comment: 15 characters Status Label: 4 characters
Status Templates	Template name: 12 characters

■ S! Circle Talk

Participant	11 members
Speak Time	30 seconds each
Member List	30 entries (10 members per Group)

■ Blog Tool

Blog Details	5 entries	
Blog Menu	16 characters	
Blog Settings (Mail)	Email Address	128 characters
	Title	32 characters
	Text	128 characters
	Picture Size	S (320 x 320) M (640 x 640) L (1024 x 1024) Send
Blog Settings (Yahoo! Keitai & PC Site Browser)	URL for Posting	1,024 characters
	URL for Viewing	1,024 characters

Data Folder

Memory	100 MB (shared with Templates folder and S! Appli Library)
---------------	---

Memory Card

Backup File Name	yymmddXX* (XX: 2 digits/alphabets)
-----------------------------	------------------------------------

*yymmdd for Contents Keys.



Connectivity & File Backup

■ Infrared

Infrared Transfer	IrMC 1.1	
	Range	Within 20 cm

■ S! Addressbook Back-up

Log	10 Backup/Restore/ Synchronization records
-----	---

Network

Add Network	5 Networks
	Country/Network code: 3 digits
	Name: 25 single-byte characters

Reference URLs

■ SOFTBANK MOBILE Corp.

<http://mb.softbank.jp/en/>

■ S! Addressbook Back-up

From PC

http://mb.softbank.jp/en/price_plans/basic_option.html

■ Messaging Basics

http://mb.softbank.jp/en/customer_support/mail.html

■ Custom Handset Address

<https://www.email.softbank.ne.jp/help/e/address.html>

■ Yahoo! Keitai

http://mb.softbank.jp/en/customer_support/web.html

■ Secure Remote Lock

http://mb.softbank.jp/en/price_plans/basic_option.html

■ microSD™ Memory Card Compatibility

From PC (Japanese)

http://k-tai.sharp.co.jp/peripherals/sd_support.html

From Handset (Japanese)

<http://shweb.sharp.co.jp/>

■ SVG-T

From Handset (Japanese)

http://shweb.sharp.co.jp/svg/t/index_pdc.html



Memory Card Structure & Contents

Memory Card Structure			Contents (Location when Viewed on Handset)
DCIM	XXXSHARP		Still images in DCIM
PRIVATE	MYFOLDER	Local Contents	SD Local Contents
		Mail	Messaging folder backups (Received Msg., Sent Messages and Drafts)
		My Items	Book
			e-Book files in Data Folder (Books)
			Bookmarks
			Yahoo! Keitai Bookmarks
			Character
			PNG files in Data Folder (Character)
			CSI
			Decoration Call files in Data Folder (Decoration Call)
			Custom Screens
			Customized Screen files in Data Folder (Customized Screen)
			Flash(R)
			Flash® Wallpaper files in Data Folder (Flash®)
			Flash(R) Ringtones
			Flash® ringtones in Data Folder (Flash® Ringtones)
			Games and More
			S! Applications
			Hot Status Template
			Template files in Data Folder (Status Templates)
			Mail Art
			Files in Data Folder (Mail Art)
			Message Templates
			Graphic Mail templates in Templates folder
			Music
			Music files in Data Folder (Music)
			Other Documents
			Other files in Data Folder (Other Documents)
			Pictograms
			GIF files in Data Folder (My Pictograms)
			Pictures
			Still images in Data Folder (Pictures)
			Sounds & Ringtones
			Melodies and other sound files in Data Folder (Ring Songs-Tones)
			Videos
			Video files in Data Folder (Videos)
			Widget
			Widget files in Data Folder (Widget)
		SH_Folder	Application management files
		Utility	Backup files (Phone Book), etc.
	SHARP	MOBILE	Backup files (User Dictionary), etc.
SD_AUDIO			SD-Audio files for Media Player (SD AUDIO)



Menu List

Messaging

Function		Refer to
Received Msg.		P.4-10
Create Message		P.4-4
Retrieve New Msg.		P.4-21
Drafts		P.4-27
Templates		P.4-20
Sent Messages		P.4-10
Unsent Messages		P.4-27
Chat Folder		P.4-13
Server Mail Box	Mail List	P.4-21
	Retrieve All	P.4-22
	Delete All	P.4-25
	Mailbox Volume	P.4-27
Create New SMS		P.4-7
Settings	Address Settings	P.4-3
	General Settings	P.4-28
	S! Mail Settings	P.4-30
	PC Mail Settings	P.4-16
	SMS Settings	P.4-32
	Speed Dial/Mail	P.4-18
	Set Mail Group	P.4-14
Memory Status		P.4-24

Settings: General Settings

	Function	Refer to
Send/ Compose	Delivery Report	P.4-28
	Reply to Settings	P.4-28
	Reply With Text	P.4-28
	Auto Reply	P.4-23
	Set Quick Reply	P.4-23
	Auto Resend	P.4-28
Receive	Sending Status	P.4-28
	Message Notice	P.4-29
	Link to Feeling	P.4-29
	Animation View	P.4-29
Anti Spam Measures		P.4-12
Report Spam		P.4-28
Scroll Unit		P.4-28
Message List View		P.4-28
Address View		P.4-28
Received Msg. View		P.4-28
Sent Msg. View		P.4-28
Auto Delete	Received Msg.	P.4-28
	Sent Messages	P.4-28

Settings: S! Mail Settings

Function		Refer to
Message DL(Japan)		P.4-30
Message DL(Abroad)		P.4-30
Signature		P.4-18
Picture Appearance		P.4-30
Auto Play File	Pictures	P.4-30
	Sounds	P.4-30
Create Msg. Size		P.4-20
DL Size Limit		P.4-30
Send File Settings		P.4-30

Settings: PC Mail Settings

Function	Refer to
PC Mail Account	P.4-16
PC Mail DL	P.4-31
Check New Mail	P.4-31
Word wrap	P.4-31

Settings: SMS Settings

Function	Refer to
Expiry Time	P.4-32
Message Center	P.4-32
Char-code	P.4-32



Yahoo! Keitai

Function	Refer to
Yahoo! Keitai	P.5-3
Bookmarks	P.5-7
Saved Pages	P.5-7
Enter URL	P.5-3
History	P.5-3
PC Site Browser	P.5-4
Browser Settings	P.5-11

PC Site Browser

Function	Refer to
Homepage	P.5-4
Bookmarks	P.5-7
Saved Pages	P.5-7
Enter URL	P.5-4
History	P.5-4
RSS Feed	P.5-8
Yahoo! Keitai	P.5-3

PC Site Browser Settings	Font Size	P.5-11
	Scroll Settings	P.5-11
	Cursor Settings	P.5-11
	Downloads	P.5-11
	Memory Operation	P.5-9
	Security Settings	P.5-15
	Download to	P.5-11
	Initialized Browser	P.5-15
	Reset Settings	P.5-15
	Warning Message	P.5-11
	Zoom Factor	P.5-11
	Softkey Area	P.5-4

Browser Settings

Function	Refer to
Font Size	P.5-11
Scroll Unit	P.5-11
Cursor Settings	P.5-11
Downloads	P.5-11
Memory Operation	P.5-9
Security Settings	P.5-15
Download to	P.5-11
Initialized Browser	P.5-15
Reset Settings	P.5-15

S! Appli

Function	Refer to
S! Appli Library	P.7-7
Notification History	P.7-7
Settings	P.7-12
Information	P.7-12

Settings

Function		Refer to
Application Volume		P.7-11
Backlight		P.7-12
Vibration		P.7-12
Synchronization		P.7-12
Notification Setting		P.7-12
Calls & Alarms		P.7-11
Screensaver	Switch On/Off	P.7-11
	Activation Time	P.7-11
	Stop Auto Start	P.7-11
Surround		P.7-11
Set to Default		P.7-12
Memory All Clear		P.7-12

Dictionary

Function	Refer to
Dictionary	P.2-12

Camera

Function		Refer to
Photo Camera		P.6-4
Video Camera		P.6-5
Scan Barcode		P.8-19
Scan Card		P.8-21
Scan Text		P.8-22
Review		P.6-6
Camera Settings	Picture Size	P.6-15
	Picture Quality	P.6-15
	Advanced	P.6-15
Video Settings	Record Time/Size	P.6-16
	Microphone	P.6-16
	Advanced	P.6-15



■ Photo Camera

Function		Refer to
Shooting Settings	Exposure	P.6-15
	Focus Setting	P.6-15
	White Balance	P.6-15
Modes	Add Frame	P.6-7
	Continuous Shoot	P.6-7
	Camera Effects	P.6-8
	Panorama/Scanner	P.6-8
Barcode/Scan		P.8-19
Data Folder		P.6-15
Picture Size		P.6-15
Scene		P.6-15
Picture Quality		P.6-15
Self-timer		P.6-7
Settings		P.6-15
Help		P.6-15

■ Video Camera

Function		Refer to
Record Settings	Exposure	P.6-15
	Focus Setting	P.6-15
Display Size		P.6-16
Data Folder		P.6-15
Record Time/Size		P.6-16
Microphone		P.6-16
Video Quality		P.6-15
Self-timer		P.6-7
Settings		P.6-15
Help		P.6-15

■ Camera Settings: Advanced

Function	Refer to
Display Indicators	P.6-15
Shutter Sound	P.6-15
Save Pictures to	P.6-15
Auto Save	P.6-15
Set Send Key	P.6-15

■ Video Settings: Advanced

Function	Refer to
Save Videos to	P.6-15
Auto Save	P.6-15

Entertainment

Function		Refer to
Mobile Widget		P.9-2
S! Quick News		P.9-5
S! Information Channel/ Weather	What's New	P.9-6
	Back Issue	P.9-6
	Registration/Cancel	P.9-6
	Get Latest Contents	P.9-18
	Notification	P.9-18
	Weather Indicator	P.9-6
BookSurfing		P.9-7
e-Book Viewer		P.9-7

■ S! Quick News

Function		Refer to
S! Quick News List		P.9-5
Settings	Automatic Update	P.9-17
	Show Image	P.9-17
	Check Schedule	P.9-17
	Change Skin	P.9-17
	Delete S! Quick News Lists	P.9-17

■ S! Information Channel/Weather:
Weather Indicator

Function		Refer to
Weather		P.9-18
Manual Update		P.9-6
Settings	Standby Setting	P.9-18
	Weather Notif.	P.9-18
	Icon Update	P.9-18



Tools

■ PIM/Lifestyle

Function		Refer to
Calendar		P.8-2
Alarms		P.8-7
Tasks		P.8-5
Calculator		P.8-9
Expenses Memo		P.8-10
Simulated Call	Receive Simulated Call	P.8-27
	Switch On/Off	P.8-11
	Set Caller	P.8-11
	Assign Tone	P.8-11
	Receive Timing	P.8-11
	For Silent Mode	P.8-27

■ Clocks/Gauges

Function	Refer to
Stopwatch	P.8-12
Countdown Timer	P.8-13
World Clock	P.8-14
Hour Minder	P.8-15
Battery Meter	P.1-19

■ Doc./Rec.

Function		Refer to
Search		P.2-14
Notepad		P.8-16
Scratch Pad		P.2-15
ASCII Art		P.8-17
Voice Recorder	Record Time	P.8-29
	Ring Songs/Tones	P.8-18
	Save Recording to	P.8-29
Barcode/ Scan	Scan Barcode	P.8-19
	Open Barcode	P.8-29
	Create QR Code	P.8-20
	Scan Card	P.8-21
	Scan Text	P.8-22
	Scanned Results	P.8-30
Phone Help		P.1-20

Data Folder

Function	Refer to
Pictures	P.6-9
DCIM	P.11-2
Ring Songs/Tones	P.8-18
S! Appli	P.7-7
Widget	P.9-2
Music	P.11-2
Videos	P.11-2
Books	P.11-2
Customized Screen	P.2-4
Status Templates	P.11-2
Decoration Call	P.3-6
Flash@	P.11-2
Other Documents	P.11-2
Memory Status	P.11-2

Media Player

Function	Refer to
Music	P.7-4
Videos	P.7-5
Streaming	P.5-12



■ Music

Function		Refer to
Last Played Music		P.7-8
My Music		P.7-6
SD AUDIO		P.7-9
Download Music		P.7-3
Music Search		P.7-3
Settings	Sound Effects	P.7-8
	Playback Mode	P.7-8

■ Videos

Function		Refer to
Last Played Video		P.7-8
My Videos		P.7-5
SD VIDEO		P.7-5
Download Videos		P.7-3
Settings	Playback Mode	P.7-8
	Backlight	P.7-8
	Display Size	P.7-8
	Sound Effects	P.7-8
	Web Link Setting	P.7-8

Communication

Function	Refer to
S! Friend's Status	P.9-8
S! Circle Talk	P.9-11
Blog Tool	P.9-13

Phone

Function		Refer to
Phone Book		P.2-16
Add New Entry		P.2-16
Information		P.1-24
Call Log		P.3-8
Play Messages		P.3-4
Call Voicemail		P.3-11
Category Control		P.2-17
My Details		P.1-19
Speed Dial/Mail		P.3-7
Mail Groups		P.4-14
S! Addressbook Backup		P.12-8
Ph.Book Settings	Sort Entries	P.2-18
	Select Phone Book	P.2-23
	Save New Entry	P.2-23
	New Number Prompt	P.2-21
	View Settings	P.2-21
Call Log Settings		P.3-16
Manage Entries	Copy All	P.2-22
	Memory Status	P.2-22
	Change Mode(All)	P.2-23
	Delete All	P.2-22

Settings

■ Phone

Function		Refer to
Mode Settings		P.1-25
Display		P.13-3
Customize		P.2-4
Sounds & Alerts		P.2-5
Date & Time		P.13-2
Set Key Light		P.13-4
言語選択 (Language)		P.13-3
User Dictionary		P.2-11
Set Key Shortcut		P.1-13
Ringer Output		P.13-5
Earpiece Volume		P.3-13
Change Menu		P.1-16
Double Number	Switch On/Off	P.1-21
	Double Mode	P.1-23
	Password Entry	P.1-26
	Mode Name	P.1-26
	Reject By Line	P.1-26
	Show Missed	P.1-26
	Packet Warning	P.1-26
	Send Priority	P.1-26
Locks		P.10-2
Software Update		P.14-5
Master Reset	Reset Settings	P.13-8
	Reset All	P.13-8



Phone: Display

Function		Refer to
Wallpaper		P.2-3
System Graphics		P.13-3
VeilView		P.1-25
Display Effects		P.13-3
Font Settings		P.2-2
Standby Display	Clock/Calendar	P.13-4
	Show Operator Name	P.13-4
Mini Battery		P.1-25
Greeting Message		P.13-3
External Display	Duration	P.13-4
	Messages	P.13-4
	Display Date&Time	P.13-4
	Clock Type	P.13-4
Caller Display		P.13-4
Backlight		P.13-3
Display Saving		P.13-3
Dial Number		P.13-3

Phone: Sounds & Alerts

Function		Refer to
Volume		P.13-5
Ringtone/videos		P.2-5
System Sounds		P.13-5
Vibration		P.2-5
Event Light		P.13-5
Status Light		P.13-5
Any Key Answer		P.13-5
Surround		P.13-5

Phone: Date & Time

Function		Refer to
Set Date/Time		P.13-2
Time Correction		P.13-2
Daylight Saving		P.13-2
Set Time Zone		P.13-2
Clock/Calendar		P.13-4
World Clock		P.8-14
Alarms		P.8-7
Set Holiday		P.8-23
Time Format		P.13-2
Date Format		P.13-2
Calendar Format		P.13-2

Phone: Locks

Function		Refer to
PIN Entry		P.10-2
Change PIN2		P.10-4
Function Lock		P.10-2
IP Service Setting		P.13-7
Application Lock		P.10-3
History Lock		P.10-3
Show Secret Data		P.10-3
Set Lock Message		P.10-4
Chg. Handset Code		P.1-18

Connectivity

Function		Refer to
Infrared	Switch On/Off	P.12-11
	Send All	P.12-4
USB Mode	Mass Storage	P.12-5
USB Charge		P.1-24
Memory Card		P.11-6
Backup/ Restore	Backup All Items	P.12-11
	Backup Selected Items	P.12-7
	Restore All Items	P.12-11
	Restore Selected Items	P.12-7
Settings/Manage		P.12-11

Connectivity: Memory Card

Function		Refer to
DPOF	Number of Copies	P.6-14
	Settings	P.6-17
	Check Settings	P.6-14
	Reset Settings	P.6-17
SD Local Contents		P.11-8
Format Card		P.11-6
Memory Status		P.11-2



■ Call

	Function	Refer to
Call Time & Cost	Call Timers	P.3-9
	Data Counter	P.3-17
	Call Costs	P.3-9
Answer Phone	Switch On/Off	P.3-4
	Answer Time	P.3-12
	Outgoing Message	P.3-12
	Volume	P.3-12
Voicemail/ Divert	Voicemail	P.3-11
	Diverts	P.3-10
	Cancel All	P.3-11
	Status	P.3-18
Video Call	Camera Picture	P.3-20
	Incoming Picture	P.3-20
	Outgoing Picture	P.3-20
	Hold Guidance Pict	P.3-20
	Backlight	P.3-20
	Loudspeaker	P.3-20
	Mute Microphone	P.3-20
	Remote Monitor	P.3-12
Show My Number		P.3-19
out Missed Calls		P.3-11
Int'l Calling		P.3-13
Disp. Time/ Cost	Display Call Cost	P.3-17
	Call Time Counter	P.3-17
Call Barring	Outgoing Calls	P.3-19
	Incoming Calls	P.3-19
	Rejected Numbers	P.3-18
	Change NW Password	P.3-18
Minute Minder		P.3-17

	Function	Refer to
Decoration Call	Switch On/Off	P.3-15
	Play in Receiving	P.3-15
	Notice	P.3-15
Auto Answer		P.3-20
Call Waiting		P.3-18

■ Network

	Function	Refer to
Select Network		P.13-6
Select Service		P.13-6
Offline Mode		P.1-17
Retrieve NW Info		P.13-6
Location Info		P.13-7
Network Info		P.13-6
External Device		P.13-6



Index

A

AC Charger	1-4
Accessing Functions	1-11
Accessory	v
After-Sales Services	14-38
Alarms	8-7
Canceling	8-8
Deleting	8-8
Editing entries	8-26
For Manner Mode	8-26
Link to World Clk	8-26
Animation View	4-8
Answer Phone	3-4, 3-12
Anti Spam Measures	4-12, 4-26
Any Key Answer	13-5
Application Lock	10-3
ASCII Art	8-17
Auto Focus	6-2
Auto Reply	4-9, 4-23
Auto Resend	4-2, 4-28
Auto Retry Function	4-2

B

Backlight	13-3
Backup	12-6
Settings/Manage	12-11
Battery	1-4, 14-4
Battery Cover	1-2
Battery Meter	1-19
Blog Tool	9-13, 9-21
Bookmarks	5-7
BookSurfing®	9-7

C

Calculator	8-9, 8-27
Calendar	8-2

Calendar Settings	8-23
Editing schedules	8-24
Call Barring	3-10, 3-18
Call Barring (Incoming Calls)	3-19
Call Barring (Outgoing Calls)	3-19
Call Forwarding	3-10
Call Log	3-8, 3-16
Call Time & Cost	3-9
Data Counter	3-17
Call Time Counter	3-17
Call Waiting	3-10, 3-18
Call Waiting (answering Line 2)	3-18
Caller ID	3-10, 3-19
Camera	6-2
Auto Save	6-15
Capturing Still Images	6-4
Data Folder	6-15
Exposure	6-15
Locking focus	6-15
Macro	6-15
Manual Focus	6-15
Picture Quality	6-15
Recording Video	6-5
Review	6-6
Save Pictures to	6-15
Save Videos to	6-15
Self-timer	6-7
Send/Blog	6-6
Video Quality	6-15
Center Access Code	1-18
Change NW Password	3-18
Change PIN	10-4
Change PIN2	10-4
Character Code List	14-11
Charging	1-4
Charging Terminals	1-2
Chat Folder	4-13, 4-26
Clock/Calendar	13-4

Composite	6-13
Communication	9-1
Countdown Timer	8-13
Create Msg. Size	4-20, 4-30
Create QR Code	8-20
Customer Service	14-39
Customized Screen (Japanese)	2-4

D

Data Folder	11-2
Files (attaching)	4-5, 11-3
Files (moving/copying)	11-4
Files (opening)	11-3
Files (renaming)	11-8
Folders (adding)	11-4
Selecting Multiple Files	11-4
Set Secret (folders)	11-4
Slide Show	11-3
Date & Time	13-2
Daylight Saving	8-14, 13-2
Decoration Call	3-6, 3-15
Delivery Report	4-8, 4-19, 4-28
Dialing from Call Log records	3-16
Dictionary	2-12
Display	1-2, 1-7
Display (settings)	13-3
Display Call Cost	3-17
Display Effects	13-3
Display Saving	13-3
Double Number	1-21, 1-26
Download Dictionary	2-11
DPOF	6-14
Add Date	6-17
Check Settings	6-14
For All Pictures	6-14
Index Print	6-17
Dual Mode	1-22



E

Earpiece	1-2
Earpiece Volume	3-13
e-Book Library	9-19
e-Book Viewer	9-7
e-Books (Japanese)	9-7, 9-19
Emergency Calls	3-2
English	13-3
Entertainment	9-1
Event Light	13-5
Expenses Memo	8-10
External Camera	1-2
External Device Port	1-2
External Display	1-2, 1-10, 13-4

F

Face Arrange	6-12
Feeling Mail (receiving)	4-8
Feeling Mail (sending)	4-5
Focus (locking)	6-15
Focus Setting	6-15
Font Size	2-2
Format Card	11-6
Function Lock	10-2

G

General Notes	xii
Graphic Mail	4-6
Group Calling	3-10, 3-18
Group Calling (opening another line)	3-18
Guide Usage Notes	ii

H

Handset Closed	1-2
Handset Code	1-18
Handset Keys	1-3
Handset mail address	4-3
Handset Open	1-2
Handset Parts	1-2

Handset Positions	1-2
Handset Power On/Off	1-6
Handset responses	2-5
Headphone Port	1-2
Headphones (answering calls)	3-12
History Lock	10-3
Hold	3-12
Hour Minder	8-15
Assign Tone/Video	8-28
For Manner Mode	8-28
Link to World Clk	8-28
Vibration	8-28

I

Indicators	1-8
Camera (Viewfinder)	6-3
Display	1-8
External Display	1-10
Messaging (message list)	4-9
Music Playback Window	7-4
Video Playback Window	7-5
Information window	1-7
Infrared	12-2
Receiving files	12-3
Sending files	12-4, 12-11
Infrared Port	1-2
Internal Antenna	1-2
International calls	3-3, 3-13
Internet	5-2
Accessing	5-3, 5-4
Basic Operations	5-5
Browser Settings	5-11
Enter URL	5-3, 5-4
History	5-3, 5-4
Saving Bookmarks/pages	5-7
Int'l Call	3-4
IP Service Setting	13-7

K

Key Assignments	14-8
-----------------------	------

Keypad Lock	1-19
-------------------	------

L

Language	13-3
Large Font Menu	2-2
Link to Feeling	4-29
Link to World Clk	8-26, 8-28
Locks	1-18, 10-2
Loudspeaker	3-14, 3-20, 9-20

M

Mail Groups	4-14
Changing members	4-26
Deleting	4-26
Edit Name	4-26
Main Menu	1-11
Manner mode	1-17
Mass Storage	12-5
Master Reset	13-8
Format Card	11-6
Reset All	13-8
Reset Settings	13-8
Max Cost	3-17
Media Player	7-2
Playlists	7-6, 7-9, 7-10
Memory All Clear (S! Applications)	7-12
Memory Card	11-5
Format Card	11-6
Opening files	11-6
Memory Card Structure & Contents	14-23
Menu List	14-24
Camera	14-25
Communication	14-28
Data Folder	14-27
Dictionary	14-25
Entertainment	14-26
Media Player	14-27
Messaging	14-24
Phone	14-28
S! Appli	14-25



Settings	14-28
Tools	14-27
Yahoo! Keitai	14-25
Message List View	4-28
Message Notice	4-29
Messages (creating/sending) ...	4-4, 4-7, 4-17
Attachments	4-20
DL Size Limit	4-30
Graphic Mail	4-20
Inserting signature manually	4-18
Messaging Settings	4-19
Preview Message	4-4
Recipient status	4-18
Recipients (editing)	4-18
Save to Drafts	4-19
Send Reservation	4-19
Sending from Drafts	4-27
Sending unsent messages	4-27
Set Auto Play File	4-20
Set Sent Cancel	4-19
Signature	4-18
Speed Dial/Mail	4-18
Templates	4-20
Using sent messages	4-27
Messages (deleting)	4-17, 4-24
Auto Delete	4-28
Messages (forwarding)	4-27
Messages (protecting)	4-10
Messages (receiving/checking)	4-8
Accessing new mail out of Standby	4-21
Mail List	4-21
Message List	4-9, 4-24
Message Window	4-9, 4-22
Retrieving complete S! Mail messages manually	4-30
Retrieving PC Mail	4-17, 4-31
Save to Data Folder	4-22
Messages (sorting)	4-12
Anti Spam Measures	4-12, 4-26
Messaging (→ SMS, S! Mail, PC Mail)	4-2

General Settings	4-28
PC Mail Settings	4-31
Receive (settings)	4-29
S! Mail Settings	4-30
Send/Compose (settings)	4-28
SMS Settings	4-32
Microphone	1-2
Minute Minder	3-17
Missed Call Notification	3-11
Mobile Widget	9-2
Mode Settings	1-25
Multi Job	1-14
Music (deleting)	7-9
Music (downloading)	7-3
Music (playing)	7-4, 7-8
My Details	1-19
Sending via Infrared	12-11

N

Network Password	1-18
Notepad	8-16
Edit Text	8-28
Change Category	8-28

O

Offline Mode	1-17
Optional Services	3-10
Optional Services (checking status)	3-18

P

Pager Code List	14-10
PC (connecting handset)	12-5
PC Mail	4-2, 4-15
PC Mail (sending)	4-17
PC Site Browser	5-4
Phone Book (deleting)	2-22
Phone Book (editing)	2-21
Phone Book (saving)	2-16
Phone Book (using)	2-18
Phone Book search	2-18

Phone Help	1-20
Picture Editor	6-9
PIN	14-2
PIN2	14-2
PIN Entry	10-2
PIN Lock	14-2
Playlists	7-6, 7-9, 7-10

Q

Quick Operations	1-11
-------------------------------	-------------

R

Received Msg. View	4-28
Record Caller Voice	3-14
Reference URLs	14-22
Reject (calls)	3-12
Remote Monitor	3-12
Reply	4-9, 4-17, 4-23
Auto Reply	4-23
Opening received message for reference ...	4-23
Set Quick Reply	4-23
Reset (→ Master Reset)	13-8
Reset All	13-8
Reset Settings	13-8
Retrieve NW Info	13-6
Retrieving Network Information	1-6
Review	6-6
RSS Feeds	5-8

S

S! Addressbook Back-up	12-8
Confirming password	12-11
Set Auto Sync	12-11
Sync History	12-11
S! Applications	7-7
S! Circle Talk	9-11, 9-20
Accepting requests	9-12
Initiating	9-12
IP Service Setting	13-7
Registering Members	9-11



S! Familiar Usability	2-4
S! Friend's Status	9-8, 9-19
IP Service Setting	13-7
Opening Member Status	9-9
S! Information Channel (Japanese) ...	9-6, 9-18
Weather Indicator	9-6
S! Mail	4-2
Attaching Files	4-5
Create Msg. Size	4-20, 4-30
Feeling Mail	4-5
Graphic Mail	4-6
S! Mail Settings	4-30
S! Mail (sending)	4-4
S! Quick News (Japanese)	9-5
Automatic Update	9-17
Deleting items	9-17
Safety Precautions	vi
SAR	xvii
Saved Pages	5-7, 5-13
Scan Barcode	8-19
Open Barcode	8-29
Scanning during text entry	8-29
Using scan results	8-30
Scan Card	8-21
Using scan results	8-31
Scan Text	8-22
Scanning and pasting during text entry	8-32
Using scan results	8-32
Schedules (→ Calendar)	8-2
Scratch Pad	2-15
SD Local Contents	11-8
Search	2-14
Security Codes	1-18
Sent Msg. View	4-28
Set as Wallpaper	11-7
Set Date/Time	13-2
Set Key Light	13-4
Set Key Shortcut	1-13
Set Quick Reply	4-23
Set Sent Cancel	4-19

Set Time Zone	8-14, 13-2
Set to Default (S! Applications)	7-12
Shortcuts	1-11
Show My Number	3-19
Show Secret Data	10-3
Side Keys	1-3
Signature	4-18
Simple Menu	1-16
Simulated Call	8-11
Slide W paper	2-3
Small Light	1-2
SMS	4-2
SMS Settings	4-32
SMS (sending)	4-7
Snooze	8-7, 8-8
Softkeys	1-7
Software Update	14-5
Sounds & Alerts	2-5, 13-5
Speaker	1-2
Specifications	14-18
Specifications (by function)	14-19
Basic Operations	14-19
Calling	14-19
Camera & Imaging	14-20
Connectivity & File Backup	14-22
Data Folder	14-21
Entertainment & Communication	14-21
Getting Started	14-19
Handy Extras	14-21
Media Player	14-20
Memory Card	14-21
Messaging	14-19
Network	14-22
S! Applications	14-20
Yahoo! Keitai & PC Site Browser	14-19
Speed Dial/Mail	3-7, 4-18
Standby	1-6
Standby Shortcuts	1-15
Status Icon List	1-20
Status Templates	11-2

Still images (capturing)	6-4
Add Frame	6-7
Camera Effects	6-8
Continuous Shoot	6-7
Panorama Picture	6-8
Picture Size	6-15
Scanner	6-8
Scene	6-15
Shutter Sound	6-15
White Balance	6-15
Still images (capturing & sending)	6-4
Still images (editing)	6-9
Additional editing options	6-16
Changing sizes	6-10
Face Arrange	6-12
Merge Panorama	6-13
Stopwatch	8-12
Strap Eyelet	1-2
Streaming	5-3, 5-12
Swap Calls	3-18
System Graphics	13-3
System Sounds	13-5

T

Table of Contents	iii
Tasks	8-5
Deleting Tasks	8-6
Editing tasks	8-25
Opening Tasks	8-6
Text (editing)	2-10
Text Entry	2-6
Emoticons	2-8
Hiragana	2-7
Hiragana to Katakana/Alphanumeric	2-9
Conversion	2-9
Input/Conversion	2-20
Inserting line breaks	2-19
Inserting Phone Book entry items	2-19
Inserting spaces	2-19
Katakana	2-8



Mail & Web Extensions	2-9
One-Hiragana Conversion	2-8
Phonetic Conversion	2-7
Pictograms & Symbols	2-8
Quick Conversion	2-9
Reset Log	2-19
Switching Entry Modes	2-6
Undo conversion or recover deleted characters	2-19
Using Character Codes	2-19
Using Pager Code	2-19
When Target Word is Not Listed	2-7
Time Correction	13-2
Troubleshooting	14-6

U

USB Charge	1-4, 1-24
User Dictionary	2-11
Deleting entries	2-20
USIM Card	14-2
USIM PINs (→ PIN)	14-2
Utility Software	12-5

V

VeilView	1-19
Vibration	2-5
Video (deleting)	7-10
Video (downloading)	7-3
Video (playing)	7-5, 7-8
Video (recording)	6-5
Display Size	6-16
Microphone	6-16
Record Time/Size	6-16
Video (recording & sending)	6-5
Video Calling	3-5
Remote Monitor	3-12
Video Calls (answering)	3-5
Video Calls (placing)	3-5
Voice Calling	3-3
Voice Calls (answering)	3-3

Voice Calls (placing)	3-3
Voice Calls (placing while abroad)	3-4
Voice Recorder	8-18
Record Time	8-29
Save and Send	8-29
Save Recording to	8-29
Voicemail	3-10
Volume (ringtones)	13-5

W

Wallpaper	2-3
Slide W paper	2-3
Warranty	14-38
Weather Indicator	9-6
Icon Update	9-18
Manual Update	9-6
Weather	9-18
Weather Indicator List	14-17
Widgets	9-2
World Clock	14-14

Y

Yahoo! Keitai	5-3
----------------------------	------------

Objectives

Accessing Secret Files/Entries

Data Folder	11-4
Messaging folders	4-11
Phone Book	2-17
Schedules/tasks	8-4

Accessing the Internet

From message text	4-23
From scan results	8-30, 8-32
Media Player	7-3
PC Site Browser	5-4
RSS Feeds	5-8
Yahoo! Keitai	5-3

Browsing/Viewing

e-Books	9-7
PC Site Browser	5-4

SI! Information Channel	9-6
SI! Quick News	9-5
Yahoo! Keitai	5-3

Calculating

Calculator	8-9
Expenses Memo	8-10

Cancelling

Alarm	8-8
Answer Phone	3-4
Call Forwarding	3-11
Customized Screen	2-19
Download Dictionary	2-11
Function Lock	10-2
Hour Minder	8-15
Keypad Lock	1-19
Large Font Menu	2-2
Manner mode	1-17
Offline Mode	1-17
SI! Familiar Usability	2-19
SI! Information Channel	9-6
Secret folders	4-25, 11-4
Simple Menu	1-16
Speed Dial entries	3-7
Voicemail	3-11

Changing

Font Size	2-2
Font Weight	2-2
Handset Code	1-18
Handset mail address	4-3
Network Password	3-18
PIN & PIN2	10-4

Changing Ringtones

Phone Book	2-17
Ringtone/videos	2-5
Via Data Folder	11-7

Composing/Sending Messages

ASCII Art entries	8-17
Feeling Mail	4-5
From Call Log records	3-16
From Internet pages	5-10



From message text	4-23
From Phone Book	2-22
From received messages	4-9
From scan results	8-30, 8-32
From Scratch Pad	2-15
From sent messages	4-27
Graphic Mail	4-6, 4-20
PC Mail	4-17
S! Mail	4-4
SMS	4-7
Copying	
Calculation results	8-27
Data Folder files	11-4
From text entry window	2-10
Scan results	8-31, 8-33
Text (e-Books)	9-19
Text (Internet pages)	5-10
Text (Messaging)	4-23
Text (S! Information Channel pages)	9-18
Downloading	
Customized Screen	2-4
e-Books	9-7
Music	7-3
S! Applications	7-11
Video	7-3
Widgets	9-2
Exchanging Files	
Infrared	12-2
Mass Storage	12-5
Hiding Files/Entries	
Data Folder	11-4
Messaging folders	4-11
Phone Book	2-17
Schedules/tasks	8-23, 8-25
Inserting/Removing	
Battery	14-4
Memory Card	11-5
USIM Card	14-3
Locking/Restricting	
Application Lock	10-3

Call Log	10-3
Function Lock	10-2
Incoming/outgoing calls	3-18, 3-19
Keypad Lock	1-19
Mail records	10-3
PIN Entry	10-2
Managing Schedules	
Calendar	8-2
Tasks	8-5
Measuring Time	
Countdown Timer	8-13
Stopwatch	8-12
Notifying Phone Number	
Opening My Details	1-19
Via Infrared	12-11
Placing Calls	
By entering phone numbers	3-3
From Call Log records	3-16
From Internet pages	5-10
From message text	4-23
From Phone Book	2-18
From scan results	8-30, 8-32
International calls	3-3
Speed Dial	3-7
Video Calls	3-5
While abroad	3-4
Playing	
Answer Phone messages/Caller Voice	3-4
Files (Scan Barcode)	8-30
Music	7-4
Streams	5-12
Video	7-5
Voice files	8-18
Voice mail messages	3-11
Rejecting	
Calls from public phones	3-18
Calls from specified numbers	3-18
Calls from unsaved numbers	3-18
Undisplayable Caller ID	3-18
Withheld Caller ID	3-18

Resetting/Formatting

All settings	13-8
Handset	13-8
Memory Card	11-6

Saving

Backup	12-7
Captured still images	6-4, 6-7, 6-8
Draft messages	4-19
Edited still images	6-9
Files (Internet)	5-10
Files (S! Information Channel pages)	9-18
Graphic Mail templates	4-6
Mail attachments	4-22
Notepad entries	8-16
Phone Book entries	2-16
Recorded video	6-5
Scan results	8-21, 8-29, 8-32

Saving Phone Book Entries

Add New Entry	2-16
Data Folder files	11-7
During a call	3-14
From Call Log records	3-16
From message text	4-22
From received messages	4-22
From scan results	8-30, 8-32

Scanning

Business cards	8-21
QR Codes	8-19
Text	8-22

Searching

Messages	2-14, 4-11
Music to download	7-3
Music to play	7-4
Notepad entries	8-28
Phone Book	2-18
Text (Internet pages)	5-10
Video to play	7-5
Web Search	2-14

Sending via Mail

Data Folder files	4-5, 11-3
-------------------------	-----------



Notepad entries.....	8-28
QR Codes	8-20
Scan results	8-31, 8-32
Still images.....	6-4, 6-6
URLs	5-10, 5-12
Video.....	6-5
Voice files.....	8-29
Setting Wallpaper	
From attached files.....	4-22
From Phone menu	2-3
From scan results.....	8-30
Via Data Folder.....	11-7
Showing in Standby	
Clock/Calendar.....	13-4
S! Applications	7-11
Wallpaper.....	2-3
World Clock.....	8-14
Using as Alarm Clock	
Alarm.....	8-7
Hour Minder	8-15
Using Away from Home	
Alarm.....	8-7
Camera	6-2
Hour Minder	8-15
Scratch Pad.....	2-15
Search.....	2-14
Voice Recorder.....	8-18



Warranty & Service

■ Warranty

Warranty is provided when you purchase handset.

- Check the name of distributor and date of purchase.
- Read contents and keep in a safe place.
- The warranty term is described in the warranty.

■ After-Sales Services

See **P.14-6** "Troubleshooting" before contacting SoftBank Mobile for service or repairs.

If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (**P.14-39**) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, possible repairs are performed upon request at subscriber expense.

For other services, contact the distributor, the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (**P.14-39**).

Replacement parts are available for 6 years after termination of production.

- SoftBank Mobile is not liable for any damages resulting from use of this product.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.



Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at **157**
for General Information or **113** for Customer Assistance

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(International charges apply.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113

