

<b>Media Player</b> .....	<b>7-2</b>
Media Basics .....	7-2
<b>Music</b> .....	<b>7-4</b>
Playing Music.....	7-4
<b>Video</b> .....	<b>7-5</b>
Playing Video.....	7-5

<b>Playlists</b> .....	<b>7-6</b>
Using Playlists .....	7-6
<b>S! Appli</b> .....	<b>7-7</b>
Using S! Applications .....	7-7
<b>Additional Functions</b> .....	<b>7-8</b>
<b>Troubleshooting</b> .....	<b>7-13</b>

# 7

## Media Player & S! Applications



## Media Basics

Use Media Player to play music/video on 832SH s.

- Download media files from Mobile Internet sites via Media Player directly.
- Transfer PC music files and save them on Memory Card.

### Music File Support

#### My Music

(Handset/Memory Card)

Downloads/Transferred Files

#### SD AUDIO

(Memory Card)

Transferred SD-Audio Files

### Video File Support

#### My Videos

(Handset/Memory Card)

Downloads/Recorded Files

When using a Memory Card with SD-Video files recorded on other devices, open them from **SD VIDEO**.

### Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming); downloaded media cannot be saved. Packet transmission fees apply even while stream is paused.

### Compatibility

 
- Files transferred from PCs cannot be used as ringtones or System Sounds.



## Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

1  ➔ **Media** ➔ 

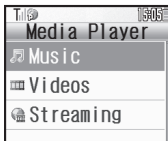



Media Player Menu

2 **Music or Videos** ➔ 

3 **Download Music or Download Videos** ➔ 

- Follow the links to download media.

### Download via Music Search (Japanese)

In  **Music Search** ➔ 

- Follow onscreen instructions.

## Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

### Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

### Saving AAC Files

Convert PC music files to 832SH s-compatible format (P.14-20), then save to corresponding Memory Card folder (P.14-22) via Mass Storage. Install USB Cable driver beforehand.



## Playing Music

1

 
2 **My Music** **Select tab (folder)**



Music Playlists Window

3 **All Music**

4 **Select file**

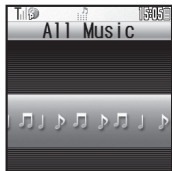

Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files.

### Using Other Functions while Playing Music After , or

- To stop playback, follow these steps in Standby:

### Playing SD AUDIO Files

In

### Searching Music Files

After , **Search** **Enter search text**

### Lyric Display-Compatible Files

 
- Press to display lyrics.

### Music Playback Operations

Replay	(Long Press: Rewind <sup>1</sup> )
Skip Forward	(Long Press: Fast Forward <sup>1</sup> )
Volume Down	(Long Press: Mute)
Volume Up or Cancel Mute	
Pause	
Stop	In Pause,
Open Help	

<sup>1</sup>Release for playback.

### Music Playback Window Description



1	Title	6	Elapsed time
2	Artist name	7	Volume
3	Track number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		


### Advanced

 - Resuming from stopped point
- Specifying start point
- Accessing linked information
- Playing repeatedly or randomly
- Changing Sound Effects (P.7-8)

## Playing Video

1

2 *My Videos*

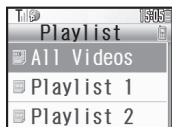

Video Playlists Window

3 *All Videos*

4 *Select file*



Video Playback Window

5

### Playing SD VIDEO Files

In 2, *SD VIDEO*

### Searching Video Files

After Enter search text

### At Alarm Time

- Playback stops.

### Video Recorded on Other Devices

- Video image may appear rotated.

### Video Playback Operations

For pause, volume up/down or help, see P.7-4 "Music Playback Operations."

<b>Replay</b>	(Long Press: Rewind*)
<b>Skip Forward</b>	(Long Press in Pause: Advance Frame, Long Press: Fast Forward*)
<b>Toggle Display Size</b>	

\*Release for playback.

### Video Playback Window Description



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

7

Media Player &amp; Si Applications

### Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Playing repeatedly or randomly
- Changing Sound Effects
- Changing playback size
- Setting Backlight status
- Hiding linked information (P.7-8)



 
## Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.


### Adding to Playlist

Follow these steps to add a music file to **再生リスト1**:

- 1

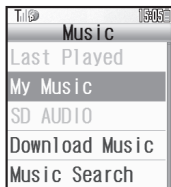


- 2 **My Music**
- 3 **All Music**

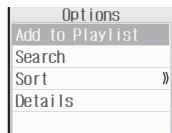 

- 4 **Add to Playlist**

### Renaming Playlists

 - 1 In Playlists window, select **Playlist**

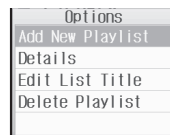

- 2 **Edit List Title**



### Advanced

- Organizing Playlists
- Sorting files
- Opening properties
- Deleting/editing SD AUDIO files
- Downloading Contents Keys (P.7-9)
- Organizing Playlists
- Sorting files
- Downloading Contents Keys
- Opening properties
- Deleting SD VIDEO files (P.7-10)



## Using S! Applications

Try out the preloaded S! Applications or download and use 832SH s-compatible S! Applications, including games. Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

- 1 → **S! Appli** →
- 2 **S! Appli Library** →



S! Appli Library

- 3 **Select application** →

### Network S! Applications

- A message appears indicating that Internet connection is required. Follow onscreen instructions.

### Incoming Calls

 
- Incoming calls automatically pause S! Application.

### Opening S! Appli Notification History

In **2**, **Notification History** →

## Exiting S! Applications

- 1

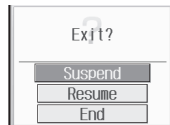

- 2 **End** →

### Pausing S! Applications

In **2**, **Suspend** →

### Resuming S! Applications

→ **Resume** →

- Select **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Select **End** to exit the S! Application.

## Advanced

- Downloading S! Applications
- Adjusting S! Application sound volume
- Canceling surround effect
- Setting handset responses to incoming transmissions
- Setting S! Application to activate in Standby
- Setting Permissions
- Opening properties (P.7-11)
- Moving S! Applications to Memory Card
- Changing S! Application settings
- Deleting S! Applications
- Restoring default S! Application settings
- Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 832SH s
- Opening Java™ license information (P.7-12)



## Media Playback

### Music & Video

Resuming from stopped point	<input type="checkbox"/> <b>Media</b> <input type="checkbox"/> <b>Music or Videos</b> <input type="checkbox"/> <b>Last Played</b> <input type="checkbox"/>
Specifying start point	During playback, <input type="checkbox"/> <b>Time Search</b> <input type="checkbox"/> <b>Enter time</b> <input type="checkbox"/>
Accessing linked information	During playback, <input type="checkbox"/> <b>Access Web Link</b> <input type="checkbox"/> <b>Yes</b> <input type="checkbox"/>

### Music

Playing repeatedly or randomly	<input type="checkbox"/> <b>Playback Mode</b> <input type="checkbox"/> <b>See below</b>
	<b>Repeat One File</b> <b>Repeat</b> <input type="checkbox"/>
	<b>Repeat All Files</b> <b>Repeat All</b> <input type="checkbox"/>
	<b>Play Randomly</b> <b>Random</b> <input type="checkbox"/>
	<b>Repeat Randomly</b> <b>Random Repeat</b> <input type="checkbox"/>
Changing Sound Effects	During playback, <input type="checkbox"/> <b>Sound Effects</b> <input type="checkbox"/> <b>Select effect</b> <input type="checkbox"/>

## Video

Playing repeatedly or randomly	<input type="checkbox"/> <b>Playback Mode</b> <input type="checkbox"/> <b>See below</b>
	<b>Repeat One File</b> <b>Repeat</b> <input type="checkbox"/>
	<b>Repeat All Files</b> <b>Repeat All</b> <input type="checkbox"/>
	<b>Play Randomly</b> <b>Random</b> <input type="checkbox"/>
Changing Sound Effects	During playback, <input type="checkbox"/> <b>Sound Effects</b> <input type="checkbox"/> <b>Select effect</b> <input type="checkbox"/>
Changing playback size	During playback, <input type="checkbox"/> <b>Display Size</b> <input type="checkbox"/> <b>Select size</b> <input type="checkbox"/>
Setting Backlight status	During playback, <input type="checkbox"/> <b>Backlight</b> <input type="checkbox"/> <b>Select option</b> <input type="checkbox"/> <ul style="list-style-type: none"> <li>Selecting <b>Norm. Setting</b> applies Display Backlight settings.</li> </ul>
Hiding linked information	During playback, <input type="checkbox"/> <b>Web Link Setting</b> <input type="checkbox"/> <b>Off</b> <input type="checkbox"/>





## Managing Music Files

Organizing Playlists	<p>[Start Here] → Media → Music → My Music → Select tab (folder) → See below</p> <p><b>Adding New Playlists</b> Add New Playlist → Enter name</p> <p><b>Deleting Playlists</b> Select Playlist → Delete Playlist → Yes</p> <p><b>Deleting Playlist Files</b> Select Playlist → Select file → Delete → Yes</p> <p><b>Changing File Order</b> Select Playlist → Select file → Change Order → Move file</p>
	<p>Media → Music → My Music → Select tab (folder) → All Music → Sort → Select option</p>
	<p>[Start Here] → Media → Music → See below</p> <p><b>SD AUDIO Files</b> SD AUDIO → All Music → Select file → Details</p> <p><b>Other Files</b> My Music → Select tab (folder) → Select Playlist → Select file → Details</p>
Sorting files	
Opening properties	

## Deleting/editing SD AUDIO files

[Start Here] → Media → Music → SD AUDIO → See below

**Deleting Single Files**

All Music → Select file → Delete Track → Yes

- Source files will be deleted.

**Deleting All Files**

All Music → Del. All Tracks → Yes → Yes

- Source files will be deleted.

**Editing Title/Artist**

All Music → Select file → Edit → Select item → Enter title or name


## Downloading Contents Keys

Media → Music → My Music → Select tab (folder) → Select Playlist → Select file (with ⌘) → Yes

- Follow onscreen instructions.



## Managing Video Files

Organizing Playlists	<p>Start Here → Media → Videos → My Videos → Phone Memory or Memory Card → See below</p> <p><b>Adding New Playlists</b> Add New Playlist → Enter name</p> <p><b>Deleting Playlists</b> Select Playlist → Delete Playlist → Yes</p> <p><b>Deleting Playlist Files</b> Select Playlist → Select file → Delete → Yes</p> <p><b>Changing File Order</b> Select Playlist → Select file → Change Order → Move file</p>
	<p>Media → Videos → My Videos → Phone Memory or Memory Card → All Videos → Sort → Select option</p>
	<p>Media → Videos → My Videos → Phone Memory or Memory Card → All Videos → Select file (with ) → Yes</p> <p>• Follow onscreen instructions.</p>

Opening properties

Start Here → Media → Videos → See below

## SD VIDEO Files

SD VIDEO → Select file → Details

## Other Files

My Videos → Phone Memory or Memory Card → Select Playlist → Select file → Details

Deleting SD VIDEO files

Media → Videos → SD VIDEO → Select file → Delete → Yes

• Source files will be deleted.



S! Applications	
Downloading S! Applications	<p>  → <b>S! Appli</b> →  → <b>S! Appli Library</b> →  → <b>Download</b> →  </p> <ul style="list-style-type: none"> <li>Follow onscreen instructions.</li> </ul>
Adjusting S! Application sound volume	<p>  → <b>S! Appli</b> →  → <b>Settings</b> →  → <b>Appli Volume</b> →  → <b>Adjust level</b> →  </p>
Canceling surround effect	<p>  → <b>S! Appli</b> →  → <b>Settings</b> →  → <b>Surround</b> →  → <b>Off</b> →  </p>
Setting handset responses to incoming transmissions	<p>  → <b>S! Appli</b> →  → <b>Settings</b> →  → <b>Calls &amp; Alarms</b> →  → <b>See below</b> </p> <p><b>Showing Calls</b></p> <p>Select item →  → <b>Show Call Notice</b> → </p> <p><b>Pausing S! Application for Incoming Mail</b></p> <p><b>Incoming Msg.</b> →  → <b>Msg Priority</b> → </p> <p><b>Showing Alarm Notice</b></p> <p><b>Alarm</b> →  → <b>Alarm Notice</b> → </p> <p><b>Showing Incoming S! Appli Request Notice</b></p> <p><b>Notification</b> →  → <b>Start Notice</b> → </p>

Setting S! Application to activate in Standby	<p>  → <b>S! Appli</b> →  → <b>See below</b> </p> <p><b>Activating Screensaver</b></p> <p><b>Settings</b> →  → <b>Screensaver</b> →  → <b>Switch On/Off</b> →  → <b>On</b> → </p> <p><b>Setting Screensaver</b></p> <p><b>S! Appli Library</b> →  → <b>Select application</b> →  → <b>As Screensaver</b> → </p> <ul style="list-style-type: none"> <li><b>As Screensaver</b> appears for compatible S! Applications.</li> <li>Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.</li> </ul> <p><b>Changing Screensaver Activation Time</b></p> <p><b>Settings</b> →  → <b>Screensaver</b> →  → <b>ActivationTime</b> →  → <b>Enter time</b> → </p> <p><b>Disabling Automatic Screensaver Restart</b></p> <p><b>Settings</b> →  → <b>Screensaver</b> →  → <b>Stop Auto Start</b> →  → <b>On</b> → </p>
	<p>  → <b>S! Appli</b> →  → <b>S! Appli Library</b> →  → <b>Select application</b> →  → <b>Permission</b> →  → <b>See below</b> </p> <p><b>Customizing Permissions for S! Appli Operations</b></p> <p>Select item →  → <b>Select option</b> → </p> <p><b>Resetting Permission Settings</b></p> <p><b>Reset Settings</b> →  → <b>Yes</b> → </p>
	<p>  → <b>S! Appli</b> →  → <b>S! Appli Library</b> →  → <b>Select application</b> →  → <b>Details</b> →  </p>



Moving S! Applications to Memory Card	<ul style="list-style-type: none"> <li>• <b>S! Appli</b> → <b>S! Appli Library</b> → <b>Select application</b> → <b>(<input type="checkbox"/>/✓)</b> → <b>Complete selection</b> → <b>Move to Card</b> →</li> <li>• When an older version of the S! Application is saved, choose <b>Yes</b> or <b>No</b> and press <b>.</b></li> <li>• Repeat application selection step as needed before pressing <b>.</b></li> <li>• Some S! Applications cannot be moved to Memory Card.</li> </ul>
Changing S! Application settings	<p><b>Start Here</b> → <b>S! Appli</b> → <b>Settings</b> → <b>See below</b></p> <p><b>Activating Notification Setting</b>  <b>Notification Setting</b> → <b>On</b> →</p> <p><b>Setting Backlight Status</b>  <b>Backlight</b> → <b>Switch On/Off</b> → <b>Select option</b> →</p> <ul style="list-style-type: none"> <li>• Selecting <b>Norm. Setting</b> applies Display Backlight settings.</li> </ul> <p><b>Disabling Backlight Flashing</b>  <b>Backlight</b> → <b>Blink</b> → <b>Off</b> →</p> <p><b>Disabling Vibration</b>  <b>Vibration</b> → <b>Off</b> →</p>
Deleting S! Applications	<ul style="list-style-type: none"> <li>• <b>S! Appli</b> → <b>S! Appli Library</b> → <b>Select application</b> → <b>Delete</b> → <b>Yes</b> →</li> <li>• Handset Code may be required.</li> <li>• Cancel Screensaver to delete Screensaver S! Application.</li> </ul>

Restoring default S! Application settings	<ul style="list-style-type: none"> <li>• <b>S! Appli</b> → <b>Settings</b> → <b>Set to Default</b> → <b>Enter Handset Code</b> → <b>Yes</b> →</li> </ul>
Restoring default S! Appli Library	<ul style="list-style-type: none"> <li>• <b>S! Appli</b> → <b>Settings</b> → <b>Clear Memory</b> → <b>Enter Handset Code</b> → <b>Yes</b> →</li> <li>• Clear Memory deletes all downloaded S! Applications.</li> </ul>
Synchronizing Memory Card S! Applications with 832SH s	<ul style="list-style-type: none"> <li>• <b>S! Appli</b> → <b>Settings</b> → <b>Synchronization</b> → <b>Yes</b> →</li> </ul>
Opening Java™ license information	<ul style="list-style-type: none"> <li>• <b>S! Appli</b> → <b>Information</b> →</li> </ul>



## Music

### How do I delete files in All Music?

- Delete All Music files in My Music via Data Folder (Music or Ring Songs-Tones).

## Video

### How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

### Cannot play video files

- Files created with PC software, etc. may not play.

## S! Applications

### Cannot move S! Applications to Memory Card

- Memory Card memory may be low or the S! Application may already be saved.

### S! Applications do not pause for incoming transmissions despite *Calls & Alarms* settings

- Regardless of setting, a message appears for Screensaver S! Applications.

