

Date & Time	13-2
Display & Illumination	13-3
Language.....	13-3
Image & Text.....	13-3
Display & Key Illumination	13-3
External Display.....	13-4
Standby Display.....	13-4
Key Illumination	13-4

Ringtones & Sounds	13-5
Handset Response.....	13-5
System Sounds	13-5
Additional Sound Settings	13-5
Connectivity	13-6
Network	13-6
IP Service.....	13-7
Location Information.....	13-7
Reset.....	13-8
Restoring Default Settings.....	13-8

13

Handset Customization



🔧 Date & Time Settings

Date & Time

[Start Here](#) ➤ Settings ➤ In Phone menu, *Date & Time* ➤

Setting the date and time	<i>Set Date/Time</i> ➤ Enter the year ➤ Enter the month ➤ Enter the day ➤ Enter the time ➤
Correcting Clock manually	<i>Time Correction</i> ➤ <i>Manual</i> ➤ <i>Yes</i> ➤
Disabling auto Clock correction	<i>Time Correction</i> ➤ <i>Auto Corr. Setting</i> ➤ <i>Off</i> ➤
Setting auto Clock correction timing	<i>Time Correction</i> ➤ <i>Auto Corr. Setting</i> ➤ <i>On</i> ➤ Select item ➤ (□/✓) ➤ [Y] ➤ [RS]
Activating Daylight Saving	<i>Daylight Save</i> ➤ <i>On</i> ➤
Changing Time Zone	<i>Set Time Zone</i> ➤ Select area ➤
Adding custom time zone	<i>Set Time Zone</i> ➤ Enter city name ➤ + or - ➤ Enter time difference ➤
Changing time format to 12 hour	<i>Time Format</i> ➤ <i>12 Hour</i> ➤
Changing date format	<i>Date Format</i> ➤ Select option ➤
Starting the Calendar week on Monday	<i>Calendar Form.</i> ➤ <i>Mon-Sun</i> ➤



Display & Illumination Settings 1

Language

[Start Here](#) [] ➔ **Settings** ➔ [] ➔ Phone menu

Switching interface between Japanese and English

Language or 言語選択 ➔ [] ➔ **English** or 日本語 ➔ []

Image & Text

[Start Here](#) [] ➔ **Settings** ➔ [] ➔ In Phone menu, **Display** ➔ []

Showing preloaded images for incoming calls, etc.

System Graphs ➔ [] ➔ **Select item** ➔ [] ➔ **Preset (or Pattern 1 to Pattern 3)**
➔ []

Showing Data Folder images for incoming calls, etc.

System Graphs ➔ [] ➔ **Select item** ➔ [] ➔ **Select folder** ➔ [] ➔ **Select image** ➔ [] ➔ **Specify image area** ➔ []
• Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphs ➔ [] ➔ **Select item** ➔ [] ➔ **Customized Screen** ➔ [] ➔ []
• Not available for **Power On** or **Power Off**.

Changing font of numbers entered in Standby

Dial Number ➔ [] ➔ **Select pattern** ➔ []

Showing a message each time handset is turned on

Greeting Msg. ➔ [] ➔ **Edit Message** ➔ [] ➔ **Enter message** ➔ [] ➔ **Switch On/Off** ➔ [] ➔ **On** ➔ []

- When using Double Number in Dual Mode, press [v] in System Graphs menu to switch modes.

Display & Key Illumination

[Start Here](#) [] ➔ **Settings** ➔ [] ➔ In Phone menu, **Display** ➔ []

Disabling display transition effects

Display Effects ➔ [] ➔ **Off** ➔ []

Changing Display/Keypad Backlight illumination time

Backlight ➔ [] ➔ **Time Out** ➔ [] ➔ **Select time** ➔ []

Changing Display Brightness

Backlight ➔ [] ➔ **Brightness** ➔ [] ➔ **Adjust level** ➔ []

Changing inactivity time after which Display turns off

Display Saving ➔ [] ➔ **Select period** ➔ []



Display & Illumination Settings 2

External Display

[Start Here](#) → [Settings](#) → In Phone menu, [Display](#) → [Ext. Display](#)

Changing inactivity time after which External Display turns off

[Duration](#) → [Select time](#)

Hiding new received messages

[Messages](#) → [Not Display](#)

Hiding caller info

[Caller Display](#) → [Off](#)

Changing Clock view

[Disp. Date&Time](#) → [Select type](#)

Changing Clock font

[Clock Type](#) → [Select pattern](#)

Standby Display

[Start Here](#) → [Settings](#) → In Phone menu, [Display](#) → [Standby Display](#)

Changing Clock/Calendar

[Clock/Calendar](#) → [Select type](#)

Showing Network service provider name in Standby

[Operator Name](#) → [On](#)

Key Illumination

[Start Here](#) → [Settings](#) → Phone menu

Disabling Keypad light illumination

[Set Key Light](#) → [Off](#)



🔧 Ringtone & Sound Settings

Handset Response

[Start Here](#) ➤ ➤ **Settings** ➤ ➤ In Phone menu, **Sounds & Alerts** ➤ ➤

Changing ringtone volume	Volume ➤ ➤ Select item ➤ ➤ Adjust level ➤ ➤
Selecting illumination option for incoming transmissions	Event Light ➤ ➤ Select item ➤ ➤ On, Link to Sound or Off ➤ ➤
Enabling/disabling illumination for missed incoming transmissions	Status Light ➤ ➤ Select item ➤ ➤ On or Off ➤ ➤
Answering calls with other keys	Any Key Answer ➤ ➤ On ➤ ➤ • Use 0*9, 9, *, #, *, #, *, #, *, # or * in addition to ↵.

- When using Double Number in Dual Mode, press **⏮** in Volume menu or Event Light menu to switch modes.

System Sounds

[Start Here](#) ➤ ➤ **Settings** ➤ ➤ In Phone menu, **Sounds & Alerts** ➤ ➤

Enabling Keypad Tones	System Sounds ➤ ➤ Keypad Tones ➤ ➤ Select tone ➤ ➤
Changing S! Circle Talk tone	System Sounds ➤ ➤ S! Circle Talk ➤ ➤ Select tone ➤ ➤
Changing other System Sounds	System Sounds ➤ ➤ Select item ➤ ➤ Tone or Sound ➤ ➤ Select folder ➤ ➤ Select tone/file ➤ ➤ • For files with limited usage period, choose Yes and press ⏮ .
Disabling System Sounds	System Sounds ➤ ➤ Select item ➤ ➤ Tone or Sound ➤ ➤ Off ➤ ➤ • Not available for S! Circle Talk .
Changing System Sound duration	System Sounds ➤ ➤ Select item ➤ ➤ Duration ➤ ➤ Select/enter time ➤ ➤ • Not available for Keypad Tones or S! Circle Talk .
Changing System Sound volume	Volume ➤ ➤ General Volume ➤ ➤ Adjust level ➤ ➤

Additional Sound Settings

[Start Here](#) ➤ ➤ **Settings** ➤ ➤ Phone menu

















 









 




 

















Disabling Speaker when using Headphones	Ringer Output ➤ ➤ Earphone ➤ ➤
Activating Speaker surround	Sounds & Alerts ➤ ➤ Surround ➤ ➤ On ➤ ➤



Connectivity Settings 1

Network

Start Here  ➔ Settings  ➔ Network 

Selecting a Network manually	Select Network  ➔ Manual  ➔ Select Network 
Adding preferred Networks	Select Network  ➔ Set Preferred  ➔ Select target location  ➔ Insert  ➔ Select Network 
Adding preferred Networks to the end	Select Network  ➔ Set Preferred  ➔ Add to End  ➔ Select Network 
Deleting preferred Networks	Select Network  ➔ Set Preferred  ➔ Select Network  ➔ Delete 
Adding Networks	Select Network  ➔ Add New NW  ➔ Add  ➔ Enter country code  ➔ Enter Network code  ➔ Enter name  ➔ Select NW Type  ➔ Select type  <ul style="list-style-type: none"> • After selecting Add New NW and pressing , Network list appears if Network has already been added. To add more, press  again and proceed.
Editing Networks	Select Network  ➔ Add New NW  ➔ Select Network  ➔ Change  ➔ Edit in the same manner as adding Networks 
Deleting Networks	Select Network  ➔ Add New NW  ➔ Select Network  ➔ Delete 
Switching Network services manually	Select Service  ➔ Manual  ➔ Select service 
Retrieving Network Information	Retrieve NW Info  ➔ Yes 
Checking Network status	Network Info 
Editing access point names for external devices	External Device  ➔ Select name  ➔ Edit 
Clearing access point names for external devices	External Device  ➔  ➔ Reset  ➔ Enter Handset Code  ➔ Yes 



⌘ Connectivity Settings 2

IP Service

[Start Here](#) → **Settings** → **In Phone menu, Locks**

Disabling IP Service

IP Service Setting → **Off** → **Enter Handset Code**

- When **Off**, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.

Location Information

[Start Here](#) → **Settings** → **Network** → **Location Info**

Adding/editing Location Information destination URLs

URL Setting → **<Empty> (or select URL)** → **Edit** → **Enter URL**

- Default URL is not editable.

Specifying Location Information destination URL

URL Setting → **Select URL**

Viewing Location Information destination URL

URL Setting → **Select URL** → **Display**

Deleting Location Information destination URLs

URL Setting → **Select URL** → **Delete** → **Yes**

Hiding Location Information

Datum On/Off → **Off** → **Enter Handset Code**

Changing Location Information confirmation option

Location Prop. → **Select option** → **Enter Handset Code**



Reset Settings

Restoring Default Settings

[Start Here](#)   **Settings**   **In Phone menu, Master Reset**  

Restoring default handset settings

Reset Settings   **Enter Handset Code**   **Yes**   **Yes**  

- Some default settings may not be restored.

Clearing all Phone Book entries, Data Folder files, etc.

Reset All   **Enter Handset Code**   **Yes**   **Yes**  

- Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications.

- Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

