

 
Phone Book

Overview	4-2
Saving to Phone Book	4-3
Phone Book Entry Items.....	4-3
Creating New Entry	4-3
Other Ways to Add New Entries	4-5
Setting Groups	4-5
Searching/Using Phone Book.....	4-6
Changing Phone Book Search Method	4-6
Making Calls from Phone Book.....	4-6
Sending Messages from Phone Book.....	4-7
Quick Phone Book Search/Speed Dial.....	4-8
Using Phone Book.....	4-9
Managing Phone Book	4-10
Editing Phone Book Entries.....	4-10
Deleting Phone Book Entries.....	4-10
Copying Phone Book Data	4-10
Phone Book Memory Status	4-11
S! Addressbook Back-up.....	4-11
Manual Synchronization	4-12
Auto Synchronization	4-13
Viewing Sync Log	4-13
Account Details	4-14
Editing Account Details.....	4-14
Account Details Functions.....	4-14

Overview

Save frequently used phone numbers and mail addresses to Phone Book.


Supplement phone numbers and mail addresses with birthday, street address, an image or notes.

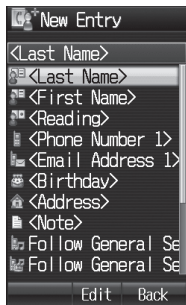

Set tones/image for each entry.



 Sort entries into Groups.

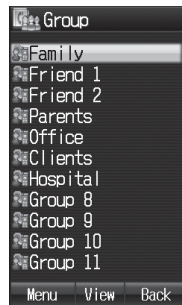

Note

● Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

Tip

- Memory Card Backup (☞ P.9-16)
- Send Phone Book Data via Infrared (☞ P.10-3)
- Phone Book Lock (☞ P.11-6)

Saving to Phone Book

Phone Book Entry Items

Save up to 1000 entries in handset Phone Book; 50 entries to USIM Card Phone Book.

Available entry items are as follows.

Phone Book Entry Items	Handset	USIM Card
Last Name/First Name	○	○
Reading	○	○
Phone Number	5	2
Email Address	5	1
Birthday	○	×
Address	○	×
Note	○	×
Voice Call Ringtone	○	×
Video Call Ringtone	○	×
Message Ringtone	○	×
Notification Light	○	×
Picture	○	×
Group	○	○
Secret Setting	○	×

○: Can be saved ×: Cannot be saved

- Phone Book entries in USIM Card can also be used in another SoftBank handset.



Creating New Entry

 
Save new entries to handset or USIM Card Phone Book.

- When saving to USIM Card Phone Book, set **Save Settings** to **USIM** or **Ask Each Time** beforehand (☞ P.16-13).

1  →  [Menu] →


New Entry

- When no Phone Book entries exist:
 →  [Create]
- When **Save Settings** is set to **Ask Each Time: Phone** or **USIM**

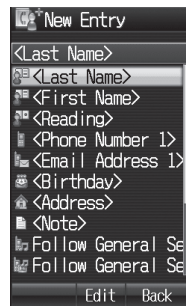

Handset Phone Book

2 Select an item (See below)

Item	Operation/Description
Last Name ¹	Save last name. For USIM Card, enter both first name and last name in Name > Enter last name
First Name ¹	Save first name > Enter first name
Reading	Automatically entered when Last Name and First Name are entered > To change Reading,  [Edit] → Edit

Item	Operation/Description
Phone Number 1-5 ¹	> Enter phone number (→ For handset, select an icon)
Email Address 1-5 ¹	> Enter mail address (→ For handset, select an icon)
Birthday	> Enter birthday
Address	Enter postal code, country/region, state/province, city, street address or additional information > Select an item → Enter text → [Decide] to exit Address field
Note	> Enter note
Voice Call Ringtone	Set Incoming call/message ringtone > Select an item
Video Call Ringtone	<ul style="list-style-type: none"> · Follow General Setting² · Select a folder in Data Folder → Highlight a file → [Set]
Message Ringtone	
Notification Light	Set Incoming call/message light color > Follow General Setting ³ or select a color
Picture	Save a still image. Captured still images can be set > Select an item <ul style="list-style-type: none"> · Pictures → Highlight a file → [Set] · Take Picture → to shoot → ● To delete the image: No Pictures ● Saved still image appears for incoming calls. (Saved still image may not appear while using other functions.)

Item	Operation/Description
Group	Categorize/search entries by group > Select a group <ul style="list-style-type: none"> ● Change group names or set ringtones for individual groups. (👉 P.4-5)
Secret Setting	Set to show or hide saved entries > Show or Hide <ul style="list-style-type: none"> ● When Secret Setting is set to Hide, activate Secret Mode/Secret Data Only to view entries. (👉 P.11-7)

¹ To save an entry, enter at least one of the fields

² General Ringtone settings apply (👉 P.16-2)

³ General Notification Light settings apply (👉 P.16-12)

3 [Save]

Other Ways to Add New Entries

Save currently displayed phone numbers or mail addresses to Phone Book.



1 Save Entered Phone Number

Enter a phone number →  [Menu] → **Add to Phone Book**

Save from Mail & Call Log

 → Select a Call Log → Highlight a record →  [Menu] → **Add to Phone Book**

Save from Sent/Received Messages

 → **Sent Messages** or **Incoming Mail**
(→ Select a folder) → Highlight a message →  [Menu] → **Add Destination to Phone Book** or **Add Sender to Phone Book**

2 New Entry

Create New Entry → Enter details (☞ From Step 2 on P.4-3)

Add to Existing Entry

Select an existing entry → Enter details (☞ From Step 2 on P.4-3)

3 [Save]


Setting Groups

Sort entries by Group. Custom set ringtones/notifications per group.

- Handset Phone Book or USIM Card Phone Book Groups appear according to **Change View** setting.
- Assign Phone Book entries to Groups (☞ P.4-4); otherwise, entries will be automatically assigned to **Ungrouped**.

Main Menu ▶ Phone ▶ Group

1 Highlight a group →  [Menu] → **Rename** → Enter group name

- When Change View setting is set to **USIM** : Highlight a group →  [Rename]

2  [Menu] → **Sound & Notification Light**

3 Set Ringtone

Voice Call Ringtone, Video Call Ringtone or **Message Ringtone** → **Follow General Setting** or select a folder in Data Folder → Highlight a file →  [Set]

- Selecting **Follow General Setting** applies Ringtone settings (☞ P.16-2).


Set Notification Light

Notification Light → **Follow General Setting** or select a color

- Selecting **Follow General Setting** applies Notification Light settings (☞ P.16-12).

4  [Set]

■ Switch between Handset & USIM Card

When **Change View** is set to **Phone & USIM** ( P.16-13), follow the steps below:

> **Main Menu** ▶ **Phone** ▶ **Group** ▶  [Menu]
▶ **Change to Group(Phone)** or **Change to Group(USIM)**

■ Reset Group Setting

> **Main Menu** ▶ **Phone** ▶ **Group** ▶ Highlight a group ▶  [Menu]
▶ **Reset Defaults** ▶ 

Note

- Ringtones/Notification Light settings are unavailable for USIM Card Phone Book Groups.
- Ringtone/Notification Light settings for each Phone Book entry take priority.

Searching/Using Phone Book

Changing Phone Book Search Method



<Default> A-KA-SA-TA...

Search for an entry using one of these search methods:
A-KA-SA-TA-NA, Reading or Group.

Main Menu ▶ **Phone** ▶ **Settings** ▶ **Search Method**

1 Select a search method

Note

- Alternatively, for **A-KA-SA-TA...** and **Reading**,  →  [Menu] → **Search Method**.

Making Calls from Phone Book

- To change search method:  Above


1 

2 Search Phone Book (See below)

Search Method	Operation/Description
A-KA-SA-TA...	> Select a page of the required reading ● Alternatively, enter partial reading.
Reading	> Enter partial reading
Group	> Select a group

3 Select an entry


4 Voice Call

Highlight a phone number → 

Video Call

Highlight a phone number → 

International Call



Highlight a phone number →  [Menu] → **Call** →

International Call → Select a country/region →

Voice Call:  / Video Call: 

Show/Hide Caller ID


> In Step 4, highlight a number →  [Menu] → **Call** →

Show Number or **Hide Number** → Voice Call:  / Video Call: 

Open Phone Book Entries in Standby (Quick Phone Book Search)

In Standby, press and hold **1** - **9** and **0** to open entries assigned to that key.

Example: "NA" page: Press and hold **5**

- When Search Method is set to **Group**, Group 1-10 open.
- When pressing key for page without any entry, the next page with entries appears.
- Change One Touch Key setting to Speed Dial. ( P.4-8)

Sending Messages from Phone Book

1  → Select an entry

2 **Use Mail Address**



Select a mail address

Use Phone Number*

Highlight a phone number →  [Menu] →

Create Message → **S! Mail** or **SMS**

* SoftBank handset numbers only

3 Create message (S! Mail:  From Step 4 on P.13-4/
SMS:  From Step 4 on P.13-8)

Quick Phone Book Search/Speed Dial

Set Quick Phone Book Search or Speed Dial to One Touch Key.

Use Keypad (**1**-**9**), (**0**) to access functions as follows.

Quick Phone Book Search	In Standby, press and hold Keypad (1 - 9), (0) to open entries assigned to that key. <ul style="list-style-type: none"> When Search Method is set to Group, Group 1-10 open.
Speed Dial	Set phone numbers to Keypad (1 - 9). Press and hold a key to dial the number assigned to that key.

Set a Function to One Touch Key


<Default> Quick Phone Book Search

Main Menu ► Phone ► One Touch Key ► One Touch Key

1 *Quick Phone Book Search* or *Speed Dial*

Saving Numbers to Speed Dial





Main Menu ► Phone ► One Touch Key ► Speed Dial










- 1 Select a key number ([**1**] - [**9**])
 - To enter phone number directly: Highlight a key number ([**1**] - [**9**]) →  [**Edit**] → Enter number
- 2 Select a Phone Book entry → Select a phone number



Note

- Before saving secret entries, activate Secret Mode or Secret Data Only. When Secret Mode or Secret Data Only modes are deactivated, the saved secret entries appear as **Empty**. Be careful of accidentally overwriting secret entries.

Using Phone Book

- Some functions may be unavailable depending on entries/entry items.
- >  → (Highlight an entry →) [Menu] → Select an item (See below) or
- >  → Select an entry → (Highlight an item →) [Menu] → Select an item (See below)


Item	Operation/Description
View	View details
Call	Make calls > Select an item → Operate selected item ( From Step 3 on P.2-11)
Create Message	Create New S! Mail/SMS > S! Mail or SMS → Create message (S! Mail:  From Step 4 on P.13-4/SMS:  From Step 4 on P.13-8)
Edit	> Select an item → Edit entry →  [Save] ● To delete Birthday/Address/Picture:  P.4-10
New Entry	Create new entry ( From Step 2 on P.4-3)
Send	Send Phone Book entries via S! Mail/Infrared > Attach to S! Mail or Infrared → Operate selected item (S! Mail:  From Step 2 on P.13-4/Infrared:  P.10-3)
Change View	Switch Phone Book to open > Select an item
Search Method	> Select a search method
Speed Dial	Set phone numbers to Speed Dial ( P.4-8) for easy dialing > (Select a number →) Select a key number ([1] - [9])

 Item	Operation/Description
Copy to USIM/ Copy to Phone	 P.4-10
Delete	>  [YES]

Managing Phone Book

Editing Phone Book Entries

1  → Highlight a Phone Book entry →  [Menu] → *Edit*

2 Edit entry →  [Save]

■ Delete Birthday

> Highlight Birthday field →  [Menu] → *Clear Birthday*

■ Delete All Items in Address Field

> Highlight Address field →  [Menu] → *Clear Address*

■ Delete Picture

> Select Picture field → *No Pictures*

Deleting Phone Book Entries

Deleting a Phone Book Entry

1  → Highlight a Phone Book entry →  [Menu]

2 *Delete* → 

Deleting All Phone Book Entries


Main Menu ► Phone ► Memory Manager
► Delete All(Phone) or Delete All(USIM)

1  [YES] → Enter Phone Password

Copying Phone Book Data

- Entry items unsupported by USIM Card are not copied.

Copying One by One

1  → Highlight a phone Book entry →
 [Menu] → *Copy to Phone* or *Copy to USIM*

Copying All Entries

Main Menu ► Phone ► Memory Manager ►
Copy All from USIM or Copy All to USIM

1 

Note

- Confirmation appears when entry items unsupported by USIM Card are included.
- While Secret Data Only is active, *Copy All from USIM* is not available.

Phone Book Memory Status

Main Menu ► Phone ► Memory Status

View handset/USIM Card Phone Book memory status.

S! Addressbook Back-up

Back up Phone Book entries to S! Addressbook (network server); synchronize handset Phone Book with S! Addressbook; restore Phone Book after accidental loss/alteration.

- Separate subscription is required for this service.

Notes

- Fully charge battery beforehand (🔋 appears).
- Transmission fees apply to synchronization, backup and restoration.
- Restoration cancels these Phone Book settings: Ringtone, Notification Light, Picture
- Subscription to the service activates Auto Sync Settings during network information retrieval to back up edited Phone Book entries. Note that initiating network information retrieval activates Auto Sync Settings even when Auto Sync Settings are **OFF**. When contract is terminated, check if Auto Sync Settings are **OFF** (👉 P.4-13).
- **S! Addressbook is deleted upon contract termination.**
- **Addresses saved in Address field on handset Phone Book are saved to building name field in S! Addressbook.**
- **When number of characters saved in S! Addressbook exceeds maximum number of characters savable on handset Phone Book, excess characters do not appear on handset Phone Book.**

Synchronization/Back-up/Restoration

- Be careful of back-up/restoration timing or selecting a synchronization direction.
- When no handset Phone Book entries exist, selecting **Synchronize**, **Sync from Phone** or **Backup to Server** deletes S! Addressbook.
- When no S! Addressbook Back-up exist, selecting **Synchronize**, **Sync from Server** or **Restore from Server** deletes all handset Phone Book entries.

Capacity Disparities


- When the number of savable items varies between handset Phone Book and S! Addressbook, synchronization reflects lower limit.

Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

Manual Synchronization

Main Menu ► Phone ► S! Addressbook Back-up
► Start Sync

- 1  → Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Synchronize	Synchronize handset Phone Book with S! Addressbook
Sync from Phone	Send edited data to S! Addressbook
Sync from Server	Receive edited data from S! Addressbook
Backup to Server	Back up handset Phone Book to S! Addressbook
Restore from Server	Restore S! Addressbook to handset Phone Book

- 3 

Auto Synchronization

Main Menu ► Phone ► S! Addressbook Back-up
► Auto Sync Settings

- 1 **ON/OFF**
- 2 Enter Phone Password → **ON**
 - To cancel: **OFF**
- 3 Select an item (See below)

Item	Operation/Description
Weekly	Synchronize weekly at specified time of the day > Select a day → Set start time
Monthly	Synchronize monthly at specified time of the date > Enter a date → Set start time
After Editing Phone Book	Synchronize ten minutes after editing

- 4 Select a Sync type → 

■ View Auto Sync Settings

> In Step 1, **Confirm Settings**

Viewing Sync Log

View synchronization/back-up/restoration logs.

Main Menu ► Phone ► S! Addressbook Back-up
► Sync Log

- 1 Select a log
- **Delete Sync Log**
> In Step 1, (highlight a log →)  [Menu] → **Delete One** or **Delete All** →  (→ For **Delete All**, enter Phone Password)

Account Details



 

Save phone number, mail address, street address, etc. in Account Details.

Editing Account Details

- 1  → 
- 2  [Menu] → *Edit*
- 3 Select an item → Edit →  [Save]
 - Your subscribing phone number cannot be edited or deleted.

Account Details Functions

In Account Details, press  [Menu] for following operations.

Item	Operation/Description
Edit	Edit Account Details ( From Step 3 above)
Send	Send details via S! Mail/Infrared > Attach to S! Mail or Infrared → Operate selected item (S! Mail:  From Step 2 on P.13-4/Infrared:  P.10-3) ● Image cannot be sent.
Reset	Reset Account Details (handset number remains) > 

Note

- Insert Account Details information to a message ( P.3-5).