

Media Player

Overview	8-2
Saving Music/Video	8-3
Downloading Music (Chaku-Uta®/Chaku-Uta Full®)/Video	8-3
Music Search	8-3
Using Media Player.....	8-4
Playback Window Indicators	8-4
Playing Music (Audio Player).....	8-4
Playing Video (Video Player).....	8-6
Playback Window Operations.....	8-7
Functions while Playing Files.....	8-7
Using Playlist.....	8-8
Playlist Functions	8-9

Overview



Play music (**Audio Player**) or videos (**Video Player**) saved on handset/Memory Card.

- Playlist:  P.8-8

Notes


- Files may not play due to file support issues or Memory Card status, etc.
- When battery is low, Media Player cannot play files.
- When playing files, Notification Light flashes.
- Playback stops for incoming calls, Alarm and low battery.
- If messages are received while Media Player is active, ringtone does not sound. Ticker scrolls across Display, Notification Light flashes and handset vibrates to inform you of new messages.
- Notification Light/Charging Indicator lights during playback; playback notification light does not light.

Copy Protected Files

Copy protected files may not play, be saved or forwarded. To play a copy protected file, obtain Content Key ( P.9-6).
Confirm file expiry date or usage limitations ( P.8-8).

Saving Music Files on PCs

When saving music files to Memory Card via PC for use with 841P, observe the following guidelines:

- Copyrighted Works
 - Do not infringe on third party/intellectual property rights.
 - Memory Card music files are limited to private use.
- Save files to specified Memory Card directory ( P.9-17)

Saving Music/Video

Downloading Music (Chaku-Uta®/Chaku-Uta Full®)/Video

Access websites directly from Media Player to download music (Chaku-Uta®/Chaku-Uta Full®) or video files.

- View details (price, expiry date, etc.) on source website.

Main Menu ► Media

1 Download Music (Chaku-Uta®/Chaku-Uta Full®)

Audio → *Download Music* → 

Download Video

Video → *Download Videos* → 

Handset connects to the Network and Download site appears.
Follow onscreen instructions to download files.

Music Search

Search by artist or title to download music files.

Main Menu ► Media ► Audio ► Music Search



Follow onscreen instructions to download music files.

Using Media Player

Playback Window Indicators



Playback Mode Indicators



- Change playback mode: P.8-7

Note

- Titles or artist names may not appear depending on files.

Playing Music (Audio Player)

Supported File Formats

File Format	Extensions	
MPEG-4 File	AMR-NB	.3gp .mp4 .m4a
	AAC-LC	
	aacPlus	
	Enhanced aacPlus	
SMC	.smc	

- Some files may not play even if format is supported.
- Some copy protected files have extensions different from the ones above.

1 Select an item (See below)

Item	Operation/Description
All	Select files from handset & Memory Card
Music	Select files from Music folder
Ring Song	Select files from Ring Song folder
Playlist	Select group of files saved to Playlist > Select a Playlist

- Press  to select files from Memory Card.

2 Select a file


Selected file plays.

- Playback Window Operations:  P.8-7

3 To end,  or  [Back] →  [NO]


 

- To return to Playback window: 


■ Change Playback Position

> During playback,  [Menu] → *Set Playback Position* → Enter time to start playback


 
 
Background Music

Listen to music while using other handset functions.

1 While music plays,  or  [Back] → 

- To cancel Background Music: In Standby,  → 


 


Note

- Unavailable for some functions (S! Appl, etc.).
- While Background Music plays, volume level and playback mode settings cannot be changed.
- Alternatively, end playback from **Main Menu ► Media ► Audio ► Display Playback Screen** ►  or  [Back] ►  [NO].

Playing SMC Files

Play SMC (Softbank Music Content) files; CD jackets and lyrics appear during playback.

The first jacket appears when playback starts.

- When  appears, press  to toggle jacket window and lyric window.
- To view next or previous jacket/lyric window, press  or .

Playing Video (Video Player)

Supported File Formats

File Format	Extensions
MPEG-4	.3gp
H.263	.mp4

- 841P supports Sub-QCIF, QCIF, QVGA, CIF and video files recorded by SoftBank handsets to send via S! Mail.
- Playing QVGA video switches display to Full Screen (⏏ Right), and image rotates 90°. Press (O) to switch to normal Playback window.
- Some files may not play even if format is supported.
- Some copy protected files have extensions different from the ones above.

Main Menu ▶ Media ▶ Video

1 Select an item (See below)

Item	Operation/Description
All	Select files from handset & Memory Card
Video Folder	Select files from Videos folder
Playlist	Select group of files saved to Playlist

- Press (C) to select files from Memory Card/Video Camera folder.

2 Select a file

Selected file plays.

- Playback Window Operations: ⏏ P.8-7

3 To end, (⏏)

Full Screen Playback

Press (O) to switch to Full Screen during playback. Playback window rotates 90°.

- To return to Normal Screen, press (O) again.
- Press (S) in Full Screen mode to rotate Playback window 180°. To return to Normal Screen, press (S) again.
- Last Playback window selected appears first.

Playback Window Operations

Adjust Volume ¹	
Replay Track	<ul style="list-style-type: none"> Play previous within first three seconds of a track.
Play Previous	twice (once, within first three seconds of a track)
Play Next	
Rewind ²	Press and hold
Forward ²	Press and hold
Pause/Resume	
Stop	Music: twice or → Video: or
View Next Jacket/Lyric ³	
View Previous Jacket/Lyric ³	
Switch Jacket/Lyric Display ³	
Show Full Screen ⁴	
Rotate Playback window 180° in Full Screen mode ⁴	

¹ Media Player activates at last used volume level.

² Rewind/Forward may be unavailable when playing files via other applications.

³ Supports during SMC file playback only

⁴ Supports during video playback only

Functions while Playing Files

Change Playback Mode

<Default> Play All

- Confirm playback mode settings in Playback window (Playback Mode Indicators: P.8-4).

- Media Player activates in last used mode.

> Main Menu ► Media ► Audio or Video ► Playback Mode

► Select a mode (See below)

Item	Operation/Description
Play All	Play all files in selected folder/Playlist
Play Once	Play selected file
Repeat Track	Repeat selected file
Continuous Play	Repeat all files in selected folder/Playlist
Random Play	Play selected folder/Playlist files randomly

Options

> During playback, [Menu] → Select an item (See below)

Item	Operation/Description
Playback/ Pause	Play or pause files
Playback Mode	Select playback mode (☞ P.8-7)
Display Jacket/ Display Lyric¹	Show lyric or jacket
Next Jacket/ Next Lyric¹	Show next jacket or lyric
Previous Jacket/ Previous Lyric¹	Show previous jacket or lyric
Full Screen (Video)/Normal Screen²	Select display size for video playback
Upside down(Full Screen)²	Rotate Full Screen Playback 180°
Set Playback Position	Start playback from specified point
Connect to URL³	Open site link; music plays as BGM
Property	Show file details
Help	Show Playback window key assignments

¹ Supports during SMC file playback only

² Supports video playback only

³ May not be available for some files

Using Playlist

Use Playlists to organize Data Folder music/video files. Select Ring Songs-Tones, Music or Videos folder files to create Playlist links to each file in its original folder.

Note

- A single Playlist cannot contain both music and video files, or files from both handset and Memory Card.
- Some files cannot be added to Playlist.

Creating New Playlists

- Create up to 30 Playlists on handset and Memory Card each.
- Add up to 99 files to a single Playlist.

Main Menu ► Media ► Audio or Video ► Playlist

1 [Menu] → **Create Playlist**

2 Enter a Playlist name

A new Playlist is added to top of list.

3 Select a Playlist → [Menu] → **Add**

4 **Add Files to Music Playlists**

Music or **Ring Song** → Select a file

Add Files to Video Playlists

Select a file

- To playback Playlist: P.8-5, P.8-6



Playlists Window

Playlist Functions

Functions Available in Playlist Window

> Main Menu ► Media ► Audio or Video ► Playlist

► (highlight a Playlist ►) [Menu] ► Select an item (See below)

Item	Operation/Description
Select	Select a Playlist
Playback Mode	Change playback mode (P.8-7)
Create Playlist	Create new Playlists (Left)
Edit Playlist Name	Change Playlist name > Edit name
Delete	Delete Playlists (P.8-10)

Change Playlist Order

> Main Menu ► Media ► Audio or Video ► Playlist

► Select a Playlist ► Highlight a file ► [Menu] ► Change Order
► Select new playback order

- The Playlist moves to above the selected order.

Deleting Playlists/Files

From ► **Main Menu** ► **Media** ► **Audio or Video** ► **Playlist**

Delete Playlists

> Follow the steps below

Item	Operation/Description
One	> Highlight a Playlist → [Menu] → <i>Delete</i> → <i>One</i> → [YES]
Selected items	> [Menu] → <i>Delete</i> → <i>Selected Files</i> → Check Playlists → [OK] → [YES]
All	> [Menu] → <i>Delete</i> → <i>All</i> → [YES] → Enter Phone Password

Delete Files in a Playlist

> Select a Playlist → Follow the steps below

Item	Operation/Description
One	> Highlight a file → [Menu] → <i>Delete</i> → <i>One</i> → [YES]
Selected items	> [Menu] → <i>Delete</i> → <i>Selected Files</i> → Check files → [OK] → [YES]
All	> [Menu] → <i>Delete</i> → <i>All</i> → [YES] → Enter Phone Password