



Settings



Sound & Vibration	16-2
Ringtones.....	16-2
Warning Tone & Key Tone	16-3
Display	16-4
Display Settings.....	16-4
Main Menu	16-5
Font	16-5
Backlight.....	16-6
Keypad	16-6
Manner Mode	16-7
Date & Time	16-8
Call Settings	16-9
International & Roaming.....	16-9
Call Time & Call Cost.....	16-10
Making & Receiving Calls	16-11
Notification Light	16-12
Text Entry	16-12
Conversion.....	16-12
Conversion during Message Text Entry	16-13
Phone Book	16-13
Video Call	16-14
Function Menus.....	16-14
Engaged Video Call Settings	16-14

Digital TV	16-15
Camera	16-16
Camera Settings.....	16-16
Video Camera Settings.....	16-17
S! Quick News (Japanese)	16-18
Display Settings.....	16-18
Auto Update/Deleting Information	16-18
Messaging	16-19
Universal Settings.....	16-19
S! Mail Settings.....	16-20
Feeling Mail Settings	16-21
SMS Settings.....	16-22
Internet	16-22
Browser Display Settings.....	16-22
Memory Manager & Reset.....	16-23
Security Settings.....	16-23
Reset.....	16-24
S! Appli	16-24

Settings Sound & Vibration

Ringtones

From  Main Menu  Settings  Sound Settings


Setting/Operation	Default
<p>■ Change Ringtone (Voice Call or Video Call)^{1 2 3}</p> <p>> Assign Ringtone → Voice Call or Video Call → Select a folder in Data Folder → Highlight a tone →  [Set]</p>	ブザー.mmf
<p>■ Change Ringtone (Message or S! Quick News)^{1 2}</p> <p>> Assign Ringtone → Message or S! Quick News → Select a folder in Data Folder → Highlight a tone →  [Set]</p>	効果音 (キラキラ).mmf
<p>■ Change Ringer Volume (Voice Call, Video Call or Message)⁴</p> <p>> Ringer Volume → Voice Call, Video Call or Message → Adjust volume</p>	Volume 3
<p>■ Change Ringer Volume (S! Quick News)</p> <p>> Ringer Volume → S! Quick News → Adjust volume</p>	Silent
<p>■ Change Ringtone Duration (Message or S! Quick News)</p> <p>> Ringtone Duration → Message or S! Quick News → Enter ring time</p>	5 seconds

■ Set Vibration Alert⁵

> **Vibration Alert** → **Voice Call, Video Call, Message** or **S! Quick News** → Select a vibration pattern

OFF

¹ Files recorded by Voice Recorder cannot be set.

² When ringtones are custom set per Phone Book entry/group ( P.4-4, P.4-5), Phone Book settings take priority.

³ If a Voice Call is received while streaming/downloading, default ringtone may sound.

⁴ Same setting applies to sound effects from: Web pages, messages and S! Information Channel. When **Escalating Tone** is set, volume sounds at **Volume 6** (setting may not apply to some content).

⁵ Avoid placing handset on unstable surface while Vibration Alert is active/ while charging battery; cancel Vibration Alert before charging battery.

Pre-installed Ringtones

Title	Composer
ブザー	Original Tone
ソナチネ第1番／第4楽章	WOLFGANG AMADEUS MOZART
口笛吹きと犬	PRYOR ARTHUR
ワルキューレの騎行	WAGNER RICHARD WILHELM
おもちゃの兵隊の行進	JESSEL LEON
ウィリアム テル 序曲	ROSSINI GIOACCHINO ANTONIO
騎士たちの踊り OP 64-13	PROKOFEV SERGEJ S
トリッチ・トラッチ・ポルカ	STRAUSS JUN JOHANN
効果音 (運命交響曲)	VAN BEETHOVEN LUDWIG
効果音 (水滴の音)	Original Tone
効果音 (キラキラ)	Original Tone
効果音 (電子音)	Original Tone
効果音 (英語)	Original Tone
効果音 (ショート)	Original Tone
効果音 (ゲーム音)	Original Tone
効果音 (黒電話)	Original Tone
Happy／うれしい	Original Tone
OK／Good	Original Tone
悲しい／ごめんなさい	Original Tone
NG／Bad	Original Tone
注目／重要	Original Tone

Names of composers given above conform to JASRAC Website.

Warning Tone & Key Tone


From ► **Main Menu** ► **Settings** ► **Sound Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Warning Tone Off > <i>Warning Tone</i> → OFF 	ON
<ul style="list-style-type: none"> ■ Change Key Tone > <i>Key Tone</i> → <i>Select Tone Type</i> → Select a tone 	Tone 1
<ul style="list-style-type: none"> ■ Change Key Tone Volume > <i>Key Tone</i> → <i>Tone Volume</i> → Adjust volume 	Silent

Settings Display

Display Settings

From  Main Menu  Settings

Setting/Operation	Default
<p>■ Change Wallpaper</p> <p>> <i>Display Settings</i> → <i>Customize Main Display</i> → <i>Internal Display</i> → Select a folder in Data Folder → Highlight an image → [Set]</p>	カナリアン リゾート.jpg
<p>■ Change Outgoing/Incoming Call/Message Image</p> <p>> <i>Display Settings</i> → <i>Customize Main Display</i> → Select an item → Select a folder → Select an image</p>	Default Picture
<p>■ Change Battery/Antenna Indicator¹</p> <p>> <i>Display Settings</i> → <i>Customize Main Display</i> → Select an icon type → Select a pattern</p>	Pattern 1
<p>■ Change Display Color Theme</p> <p>> <i>Display Settings</i> → <i>Themes</i> → Select a pattern</p>	Themes 1
<p>■ Set Interface Language</p> <p>> <i>Phone Settings</i> → 言語選択 → <i>English</i> or <i>日本語</i></p>	Automatic ²
<p>■ Change Clock/Calendar Style</p> <p>> <i>Display Settings</i> → <i>Standby Display</i> → <i>Clock/Calendar Display</i> → Select a clock/calendar type</p>	Standard Clock (Upper Center)
<p>■ Show Operator Name in Standby</p> <p>> <i>Display Settings</i> → <i>Standby Display</i> → <i>Operator Name</i> → <i>ON</i></p>	OFF

■ Set Standby Window On/Off³

> *Display Settings* → *Standby Display*
→ *Standby Window* → *ON (Always)* or *OFF*

ON (Manually)

¹ Battery indicator appears in Pattern 1 while charging with handset off.

² **Automatic** applies USIM Card language.

³ S! Quick News Display Settings (📄 P.16-18)

Main Menu

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
■ Change Main Menu Theme* > Menu Setting → Select a menu →	Normal Menu
■ Change Main Menu Background > Main Menu Icons → Change Full Image → Highlight an image → [Set]	—
■ Change Main Menu Icons > Main Menu Icons → Change Image → (Repeat: Select an icon → Highlight an image → [Set])	—
■ Reset Main Menu Icons > Main Menu Icons → Reset Defaults →	—

* While changing theme, other functions are unavailable.

Font

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
■ Change Font Size by Function > Font Size → Select an item → Select a size	Normal
■ Set Menu Font Sizes Collectively > Font Size → Collective Setting → Set to Large, Set to Normal or Set to Small ¹	—
■ Change Font ² > Font Pattern → Select a pattern	Font 1

¹ When **Set to Small** is set, font size for Phone Book, Message List and Mail & Call Log is **Normal**.

² May not apply in S! Applii/Digital TV.

Backlight

















From ► **Main Menu** ► **Settings** ► **Display Settings**
 ► **Backlight Settings**

Setting/Operation	Default
■ Adjust Main Display Brightness > <i>Internal Display</i> → <i>Brightness</i> → Select a brightness level	Level 3
■ Change Main Display Backlight Time* > <i>Internal Display</i> → <i>Backlight Time</i> → Select a duration	15 seconds
■ Set Key Backlight Duration > <i>Key Backlight Timer</i> → Select a duration or <i>OFF</i>	15 seconds

* Backlight duration for calls remains unchanged at 5 seconds.

Settings Keypad

From ► **Main Menu** ► **Settings** ► **Phone Settings**
 ► **Key Settings**

Setting/Operation	Default
■ Change Functions Assigned to    * > <i>Customization</i> → Select a key & operation → Select an item → Highlight a function →  [Entry]	( P.1-6)
■ Disable Functions Assigned to    > <i>Customization</i> → Highlight a key & operation →  [Menu] → <i>Invalidate</i> → 	–
■ Reset Functions Assigned to    > <i>Customization</i> →  [Menu] → <i>Reset Defaults</i> → 	–
■ Change Website Assigned to  > <i>Select One Touch Site</i> → Select an item	Menu List
■ Hide Confirmation when Pressing Bookmark Key > <i>Access Confirm</i> → <i>OFF</i>	ON

* Key functions returns to default while Simple Mode is active.

Settings Manner Mode

From ► Main Menu ► Settings ► Manner Mode Settings

Setting/Operation	Default
<p>■ Set Manner Mode Type*</p> <p>> Select a mode</p> <ul style="list-style-type: none"> ● When Manner, Drive or Original Manner is set, an indicator appears in Standby (☞ P.1-8). 	Normal
<p>■ Personalize Individual Mode Settings</p> <p>> Highlight a mode → [Menu] → <i>Edit</i> → Select an item → <i>Edit</i></p>	—

* Manner Mode and Drive Mode can be activated/deactivated in Standby (☞ P.1-16, P.1-17).

■ Default Settings by Mode

Normal	Manner	Drive	Original Manner
Assign Ringtone (Voice Call/Video Call)			
ブザー.mmf	—	—	ブザー.mmf
Assign Ringtone (Message/S! Quick News)			
効果音 (キラキラ).mmf	—	—	効果音 (キラキラ).mmf
Ringer Volume (Voice Call/Video Call/Message)			
Volume 3	—	—	Volume 3
Ringer Volume (S! Quick News)			
Silent	—	—	Silent
Ringtone Duration (Message/S! Quick News)			
5 sec	5 sec	5 sec	5 sec
Key Tone (Tone Type)			
Tone 1	—	Tone 1	Tone 1
Key Tone (Tone Volume)			
Silent	—	Silent	Silent
Warning Tone			
ON	—	OFF	ON
Vibration Alert (Voice Call/Video Call/Message)			
OFF	Pattern 1	OFF	OFF
Vibration Alert (S! Quick News)			
OFF	OFF	OFF	OFF
Answer Phone			
ON	ON	*	ON

* While Drive Mode is active, Answer Phone activates automatically, and cannot be set to OFF.

Settings Date & Time

From ► Main Menu ► Settings ► Phone Settings
► Date & Time

Setting/Operation	Default
Change Date and Time ¹ > Home Clock → Date & Time → Enter date → Enter time	—
Deactivate Automatic Time Correction via Yahoo! Keitai ² > Time Correction → Automatic Correction → OFF	ON
Correct Time Manually > Time Correction → Manual Correction → <input type="checkbox"/>	—
Set Local Time (Home Clock) > Home Clock → Home Area → Select a city	Tokyo
Activate Daylight Savings Time (Home Clock) > Home Clock → Daylight Savings Time → ON	OFF
Set Time for a Second Time Zone (Away Clock) > Away Clock → Set Time Zone → Select a city	Tokyo
Activate Daylight Savings Time (Away Clock) > Away Clock → Daylight Savings Time → ON	OFF
Display Away Clock in Standby > Select Clock → Away Clock	Home Clock
Set 12 Hour Time Format > Display Pattern → Time → 12 hour	24 hour

Change Date Format

> Display Pattern → Date → Select a date format

YY/MM/DD

¹ Date & Time Settings effective on handset: from 00:00 on 2000/01/01 to 23:59 on 2099/12/31

² Time Correction may invalidate Schedule/Alarm entries.

Settings Call Settings

International & Roaming

From ► Main Menu ► Settings ► Call Settings
 ► Optional Services ► International Setting

Setting/Operation	Default
■ Change International Code¹ > International Code → Enter Phone Password → Enter International Code	0046010
■ Edit Country/Region Code > Country/Area Number List → Select a country/region → Edit country/region name → Edit country/region code	—
■ Add Country/Region Code > Country/Area Number List → [Menu] → Add → Enter country/region name → Enter country/region code	—
■ Delete Country/Region Code > Country/Area Number List → Highlight a country/region → [Menu] → Delete → [YES]	—
■ Select Operator > Select Operator → Select Auto/Manual → Manual → Select an operator	Automatic

- **Set Operator Priority for Automatic Search²**
 > **Select Operator** → **Set Priority** → [Menu] → **Add, Insert, Edit** or **Delete**
 - **Add** : new network appears at the end of the list; place cursor at the end of the list beforehand.
 - **Insert** : new network appears above selected one.

- **Deactivate Roaming Dial Assistant³**
 > **Roaming Dial Assistant** → **OFF**







¹ In Standby, [Power] → Press and hold [0] (+ appears) to enter International Code automatically. (+ indicates International Code.)

² Available operators vary by network conditions.

³ When set to **OFF**, Voice/Video/International calls from abroad are placed in the same manner as calling from Japan (☎ P.2-2, P.2-6, P.2-7).

Call Time & Call Cost

From ► **Main Menu** ► **Settings** ► **Call Settings**
► **Call Time & Cost**

Setting/Operation	Default
■ View Total Call Charge for Outgoing Calls > <i>All Calls</i> (→ To reset,  →  → Enter PIN2)	–
■ View Total Call Time for Outgoing Calls¹ > <i>Total Call Time</i> (→ To reset,  → 	–
■ Display Call Charge² > <i>Display Cost</i> → ON	OFF
■ Set Charge Limit^{3 4} > <i>Set Cost Limit</i> →  [Menu] → <i>Edit</i> → Enter PIN2 → Enter charge limit	–
■ View Remaining Cost > <i>Remaining</i>	–
■ Enter Currency Denomination and Price per Unit of Call Time > <i>Currency Setting</i> →  → Enter PIN2 → Enter three letter abbreviation for the designated currency → Enter value	–

- ¹ For Group Calling, total length of all calls made from handset remains.
- ² May not be available depending on subscription; if not, Charge Limit setting is also unavailable.
- ³ If charge limit is set below the value set in All Calls, outgoing calls are blocked. Reset All Calls or change charge limit to a higher value.
- ⁴ Emergency numbers (110, 119, 118) are dialable even when the limit is reached.

Making & Receiving Calls

From ► Main Menu ► Settings ► Call Settings

Setting/Operation	Default
■ Press Any Key to Answer Calls ¹ > Any Key Answer → ON	OFF
■ Answer Calls by Opening Handset > Clamshell Control → Open-to-Answer Call → ON	OFF
■ End Calls by Closing Handset ² > Clamshell Control → Close-to-End Call → ON	OFF
■ Open Incoming Call Log for Missed Calls by Opening Handset ³ > Clamshell Control → Open-to-Display Missed Call → ON	OFF
■ Activate Auto Answer when Using Handsfree Devices ⁴ > Auto Answer → ON	OFF
■ Adjust Ear Piece Volume of Voice Calls > Voice Call Ear Volume → Adjust volume	Level 4

¹ Valid Keys: , - , , , , , (Unavailable while a call is on hold)

² Unavailable during a call using Earphone. Yahoo! Keitai cannot be canceled by closing handset even if Close-to-End Call is active.

³ Available only when the first information received on handset is Missed Call.

⁴ Handset beeps and call connects after seven seconds. When Auto Answer and Answer Phone (P.2-12) are active, one with shorter Answer Time takes priority. When Auto Answer and Voice Mail, **Ringer Off** (P.2-15) are both active, Voice Mail takes priority.

Settings Notification Light

From **Main Menu** ▶ **Settings** ▶ **Phone Settings**
▶ **Notification Light**

Setting/Operation	Default
■ Set Notification Light for Voice Calls* > <i>Voice Call</i> → Select a color or OFF	Color 5
■ Set Notification Light for Video Calls* > <i>Video Call</i> → Select a color or OFF	Color 5
■ Set Notification Light for Incoming Messages* > <i>Message</i> → Select a color or OFF	Color 2
■ Set Notification Light for Voice Calls in Progress > <i>In Conversation</i> → Select a color	OFF
■ Set Notification Light for S! Quick News > <i>S! Quick News</i> → Select a color or OFF	Color 2
■ Set Notification Light for Clamshell Closing > <i>Clamshell Closing</i> → Select a color or OFF	Color 6
■ Turn Off Notification Light for Data Transfer > <i>Data Transfer</i> → OFF	ON

- When highlighting a color, Notification Light illuminates.
- * Phone Book entry Notification Light (☞ P.4-4, P.4-5) takes priority over this setting.

Settings Text Entry

Conversion

From **Text entry window**, [Menu] ▶ **Input Options**

Setting/Operation	Default
■ Disable Learning (Kana Conversions) > <i>Learning</i> → Enter Phone Password → OFF or OFF in Secret Mode	ON
■ Reset Learned Words > <i>Reset Learned Words</i> → [YES] → Enter Phone Password	–
■ Change Input Font Size > <i>Input Size</i> → Large or Small	Normal
■ Change Candidate Font Size > <i>Candidate Display Size</i> → Large or Small	Normal
■ Hide Predictive Candidates > <i>Prediction Setting</i> → OFF	ON (Show)
■ Hide Context Forecast List > <i>Context Prediction</i> → OFF	ON (Show)
■ Fix Entered Characters Automatically > <i>Character Set Time</i> → Select a speed	OFF

Conversion during Message Text Entry


From ► Main Menu ► Messaging ► Settings
► Universal Settings ► Text Predict

Setting/Operation	Default
■ Deactivate Pre-text Predict > <i>Pre-text Predict</i> → OFF	ON
■ Deactivate Time Season Predict > <i>Time Season Predict</i> → OFF	ON
■ Activate Text Expression > <i>Text Expression</i> → <i>Written Language</i> or <i>Colloquialism</i>	Normal Phrase

Settings Phone Book

From ► Main Menu ► Phone ► Settings

Setting/Operation	Default
■ Change Save Location for New Entry > <i>Save Settings</i> → <i>USIM</i> or <i>Ask Each Time</i>	Phone
■ Open USIM Card Phone Book* > <i>Change View</i> → <i>USIM</i> or <i>Phone & USIM</i>	Phone
■ Change Font Size > <i>Font Size</i> → <i>Phone Book</i> or <i>Mail & Call Log</i> → <i>Large</i>	Normal

* Depending on the save location setting (Save Settings:  Above), selecting **Phone** or **USIM** may prompt a **Change save location as well?** confirmation to appear.

Settings Video Call

Function Menus

From ► **Main Menu** ► Settings ► Call Settings
► Video Call

Setting/Operation	Default
■ Change Outgoing Image and Sound Settings ¹ > <i>Video & Voice Setting</i> → Select an item	Alternative Picture
■ Change Display Backlight Brightness ¹ > <i>Display Backlight</i> → <i>Brightness</i> → Select a level	Level 3
■ Change Display Backlight Duration ¹ > <i>Display Backlight</i> → <i>Backlight Time</i> → <i>Follow General Setting</i> ² or <i>Always OFF</i>	Always ON
■ Change Incoming Video Image Quality ¹ > <i>Incoming Video Quality</i> → <i>Motion Prioritized</i> or <i>Quality Prioritized</i>	Standard
■ Change Alternative Picture > <i>Alternative Picture</i> → Highlight a file → [Menu] [Set]	TV コール 代替画像 1.bmp
■ Switch Speaker OFF ¹ > <i>Loud Speaker</i> → OFF	ON

¹ To change settings during a call: ⏏ P.2-10, Right

² Display Backlight Time setting (⏏ P.16-6) applies.

Engaged Video Call Settings

From ► During a Video Call, [Menu] → Settings

Setting/Operation	Default
■ Change Brightness > <i>Display Backlight</i> → <i>Brightness</i> → Select a level	Level 3
■ Change Backlight Duration > <i>Display Backlight</i> → <i>Backlight Time</i> → <i>Follow General Setting</i> * or <i>Always OFF</i>	Always ON
■ Change Incoming Image Quality > <i>Incoming Video Quality</i> → <i>Motion Prioritized</i> or <i>Quality Prioritized</i>	Standard
■ Adjust Color Tone to Lighting Conditions > <i>White Balance</i> → Select an environment	Automatic

* Display Backlight Time setting (⏏ P.16-6) applies.

Settings Digital TV

From **Main Menu** ▶ **TV** ▶ **User Settings**

Setting/Operation	Default
■ Hide Caption > <i>Display Settings</i> → <i>Caption</i> → <i>OFF</i>	ON
■ Change Caption Size in Wide Screen > <i>Display Settings</i> → <i>Caption Size(Wide Screen)</i> → <i>Small</i>	Normal
■ Hide Indicators in Wide Screen > <i>Display Settings</i> → <i>Icon Always Display</i> → <i>OFF</i>	ON
■ Change Default View > <i>First View</i> → <i>Normal Screen</i>	Wide Screen
■ Change Display Brightness > <i>Display Backlight</i> → <i>Brightness</i> → Select a level	Level 2
■ Set Backlight Duration while Watching TV > <i>Display Backlight</i> → <i>Backlight Time</i> → <i>Follow General Setting*</i> or <i>Always OFF</i>	Always ON
■ Turn Off Sounds from Data Broadcast/Sites > <i>Data Broadcasting</i> → <i>Sound Effect</i> → <i>OFF</i>	ON
■ Show Confirmation on Data Broadcast > <i>Data Broadcasting</i> → <i>Reset Confirmation Display</i> → <input type="checkbox"/>	-
■ Reset Channel List > <i>Reset Channel Settings</i> → <input type="checkbox"/> → Enter Phone Password	-

■ Delete Information Saved in Broadcast Storage Area > <i>Reset Storage Area</i> → Select an item → <input type="checkbox"/>	-
■ Delete All Information Saved in Broadcast Storage Area > <i>Reset Storage Area</i> → <input type="checkbox"/> [All] → <input type="checkbox"/> → Enter Phone Password	-
■ Reset TV Settings > <i>Reset TV Settings</i> → <input type="checkbox"/> → Enter Phone Password	-

* Display Backlight Time setting (☞ P.16-6) applies.

Settings Camera

- Change settings before capturing images. (☞ P.6-3, P.6-4)

Camera Settings

From ► **Main Menu** ► **Camera** ► **Camera** ► ☒ [Menu]

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Switch Camera Mode > <i>Change Camera Mode</i> → <i>Bar Code Reader</i> or <i>Magnifying Loupe</i> 	–
<ul style="list-style-type: none"> ■ Change Image Size > <i>Size</i> → Select a size 	VGA(480x640)
<ul style="list-style-type: none"> ■ Change Image Quality > <i>Quality</i> → <i>Fine</i> or <i>Normal</i> 	Super Fine
<ul style="list-style-type: none"> ■ Change Focus Setting > <i>Focus Setting</i> → <i>Close-up</i> or <i>Scenery</i> 	Auto Focus
<ul style="list-style-type: none"> ■ Capture Images in Low Light Conditions > <i>Night Mode</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Capture 15 Images Sequentially > <i>Multi Shot</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Change Color for Images > <i>Effect</i> → Select an item 	Normal

<ul style="list-style-type: none"> ■ Adjust Color Balance According to Lighting Conditions > <i>White Balance</i> → Select an item 	Automatic
<ul style="list-style-type: none"> ■ Set Self-Timer > <i>Self-Timer</i> (☞ P.6-6) 	OFF
<ul style="list-style-type: none"> ■ Change Shutter Click Sound > <i>Shutter Sound</i> → Select a pattern 	Pattern 1
<ul style="list-style-type: none"> ■ Change Save Location > <i>Save to</i> → <i>Memory Card</i> 	Phone
<ul style="list-style-type: none"> ■ Save Captured Images Automatically > <i>Auto Image Saving</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ View Memory Status > <i>Available Memory</i> → ☒ to select a size ● Shows savable number of still image files for the selected size/quality. ● Press ☒ [Quality] to toggle image quality. 	–
<ul style="list-style-type: none"> ■ Reset Settings to Defaults > <i>Reset Defaults</i> → 	–
<ul style="list-style-type: none"> ■ Show Key Operation List > <i>Key Operation List</i> 	–

Video Camera Settings

From ► **Main Menu** ► **Camera** ► **Video Camera**
 ► [Menu]

Setting/Operation	Default
Change Image Quality* > <i>Quality</i> → Select an item	Normal (176x144)
Extend Recording Time > <i>Recording Time</i> → <i>Extended Video</i>	Attach to S! Mail
Change Focus Setting > <i>Focus Setting</i> → <i>Close-up</i>	Scenery
Change Color for Images > <i>Effect</i> → Select an item	Normal
Adjust Color Balance According to Lighting Conditions > <i>White Balance</i> → Select an item	Automatic
Set Self-Timer > <i>Self-Timer</i> (👉 P.6-6)	OFF
Change Save Location > <i>Save to</i> → <i>Memory Card</i>	Phone
Save Recorded Videos Automatically > <i>Auto Image Saving</i> → <i>ON</i>	OFF

View Memory Status

> *Available Memory* → *Extended Video* or
Attach to S! Mail

- Shows total recordable time and maximum recordable time per file at the set recording time/quality.
- When *Extended Video* is set, press [Quality] to toggle recording video quality.

–

Reset Settings to Defaults

> *Reset Defaults* →

–

Show Key Operation List

> *Key Operation List*

–

* Available only when Recording Time is set to Extended Video.

Settings S! Quick News (Japanese)

Display Settings

From ► Main Menu ► Settings ► Display Settings
► S! Quick News Settings

Setting/Operation	Default
■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → <i>Unread</i>	Unread + Read
■ Change Marquee Speed > <i>Marquee Speed</i> → <i>Fast</i> or <i>Slow</i>	Medium
■ Image Download > <i>Image Display</i> → <i>ON</i>	OFF

Auto Update/Deleting Information

From ► Main Menu ► News/Ent. ► S! Quick News
► Settings

Setting/Operation	Default
■ Change Update Interval or Disable News Flash Auto Update ^{1 2} > <i>Auto Refresh</i> → <i>News Flash</i> → Select update frequency or <i>OFF</i>	1 hour
■ Disable General News Auto Update (Once a day) > <i>Auto Refresh</i> → <i>General</i> → <i>OFF</i>	ON ^{1 2}
■ Automatically Update Special News ^{1 2} > <i>Auto Refresh</i> → <i>Special</i> → <input checked="" type="radio"/> → <i>ON</i>	OFF ³
■ Delete S! Quick News Information > <i>Delete S! Quick News List</i> → <input type="checkbox"/> [YES] → Enter Phone Password	—

¹ If calls are in progress at update time, auto update does not occur until next update.

² Video Calls are rejected during auto update.

³ Retrieving Network Information may change setting to *ON*.

Settings Messaging

Universal Settings

From **Main Menu** ► **Messaging** ► **Settings**
 ► **Universal Settings**

Setting/Operation	Default
Hide Sender Name > <i>Display Settings</i> → <i>Display New Mail</i> → <i>Without Sender Name</i>	With Sender Name
Open Incoming Mail Folder Automatically by Opening Handset for New Messages¹ > <i>Display Settings</i> → <i>Clamshell Control</i> → <i>ON</i>	OFF (Not open)
Change Font Size > <i>Display Settings</i> → <i>Font Size</i> → <i>Large</i> or <i>Small</i>	Normal
Change Message List View² > <i>Display Settings</i> → <i>Mail List Display Setting</i> → Select an item	Name+Subject
Enable 3D Pictograms when Opening Messages > <i>Display Settings</i> → <i>3D Pictograms</i> → <i>3D Picto Auto Play</i> → <i>Always Display</i> or <i>Display only Unread</i>	OFF
Change Font/Background Color > <i>Display Settings</i> → <i>3D Pictograms</i> → <i>Color Settings</i> → Select a color	White
Change Anti-Spam Measures Setting > <i>Anti-Spam Measures</i> → <i>Spam Report Address</i> → [Edit] → Edit recipient address →	stop@meiwaku.softbankmobile.co.jp

Reset Anti-Spam Measures > <i>Anti-Spam Measures</i> → <i>Spam Report Address</i> → [Menu] → <i>Reset to Default</i>	-
Filter Messages by Sender/Recipient > <i>Mail Delivery Rule</i> → <i>Incoming Mail</i> or <i>Sent Messages</i> → Select a folder → [Menu] → <i>Add Sender</i> or <i>Add Address</i> → Select a search/entry method → Select or enter sender/address	-
Filter Messages by Subject > <i>Mail Delivery Rule</i> → <i>Incoming Mail</i> or <i>Sent Messages</i> → Select a folder → [Menu] → <i>Add Subject</i> → Enter subject	-
Request Delivery Confirmation (Available when Messaging to SoftBank Handset Numbers) > <i>Delivery Report</i> → <i>ON</i>	OFF
Base Word Predictions on Received Message When Replying > <i>Learning from Received Message</i> → <i>OFF</i>	ON
Require Password to Access Messages/Server Mail > <i>Mail Security Setting</i> → Enter Phone Password → Check items → [OK]	OFF
Set Auto Delete Off (For Drafts or Sent/Unsent Messages) > <i>Auto Delete</i> → <i>Auto Delete Sent Messages</i> → <i>OFF</i>	ON

<p>■ Set Auto Delete Off (For Incoming Mail) > <i>Auto Delete</i> → <i>Auto Delete Incoming Messages</i> → <i>OFF</i></p>	ON
---	----

¹ Available only when the first information received on handset is Message.

² When **Name+Subject+Preview** or **Name+Subject** is set, Name+Preview appears for SMS.

S! Mail Settings

From ► **Main Menu** ► **Messaging** ► **Settings**
 ► **S! Mail Settings**

Setting/Operation	Default
<p>■ Set S! Mail Download Condition (within Japan) > <i>Incoming Options</i> → <i>Home Auto Settings</i> → <i>From Numbers Only</i> or <i>Manual Retrieval</i></p>	Auto Download All
<p>■ Retrieve S! Mail Manually while Abroad > <i>Incoming Options</i> → <i>Roaming Auto Settings</i> → <i>Manual Retrieval</i></p>	Auto Download
<p>■ Quote Original Message in Reply > <i>Quote Message</i> → <i>OFF</i></p>	ON
<p>■ Open Image Files Manually > <i>Attachment Auto-play</i> → <i>Images</i> → <i>OFF</i></p>	ON (Open automatically)
<p>■ Play Music Files Automatically* > <i>Attachment Auto-play</i> → <i>Sounds</i> → <i>ON</i></p>	OFF

* When multiple sound files are attached, the first file plays.

Feeling Mail Settings

Set handset response for new Feeling Mail.

From ► **Main Menu** ► Messaging ► Settings
 ► S! Mail Settings ► Feeling Expression

Setting/Operation	Default
■ Hide Information > <i>Information Display Settings</i> → OFF	ON
■ Deactivate Notification Light > <i>Notification Light Patterns</i> → Settings ON/OFF → OFF	ON
■ Notification Light Color > <i>Notification Light Patterns</i> → Select an item → Select a color*	(See chart right)
■ Deactivate Vibration > <i>Vibration Patterns</i> → Settings ON/OFF → OFF	ON
■ Vibration Pattern > <i>Vibration Patterns</i> → Select an item → Select a pattern	—
■ Ringtone > <i>Message Ringtone</i> → Settings ON/OFF → ON	OFF
■ Change Ringtone > <i>Message Ringtone</i> → Select an item → Select a folder in Data Folder → Highlight a tone → [Set]	—

* When highlighting a color, Notification Light illuminates.

Default Settings

Emotion	Notification Light	Vibration	Message Ringtone
Happy	Color 6	Pattern 1	Happy/ うれしい.mmf
OK/Good	Color 2	Pattern 1	OK/Good.mmf
Sad/Sorry	Color 1	Pattern 2	悲しい/ごめん なさい.mmf
NG/Bad	Color 3	Pattern 2	NG/Bad.mmf
Notice/ Important	Color 4	Pattern 3	注目/重要.mmf

- When sender is saved in Phone Book, Phone Book settings take priority in the following case (☞ P.4-4).
 - Message Ringtone is set to a ringtone other than **Follow General Setting**
 - Notification Light is set to a color other than **Follow General Setting**

SMS Settings

From ► **Main Menu** ► **Messaging** ► **Settings**
► **SMS Settings**

Setting/Operation	Default
■ Set a Time Limit to Store All Sent SMS at the Center ¹ > <i>Expiry</i> → <i>Maximum</i> (depending on Server setting) or select a limit	Depends on USIM Card settings
■ Change SMS Center Number ² > <i>Message Center</i> → Enter SMS Center number	+819066519300
■ Set Input Character to English > <i>Input Character Settings</i> → <i>English(160characters)</i>	Japanese (70characters)

¹ When recipient handset is off or out-of-range, SMS are stored at the Center, and delivered when recipient handset detects signal.

² Do not change Message Center number unless instructed so by SoftBank. Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo!** ► **Settings**

PC Site Browser

From ► **Main Menu** ► **Yahoo!** ► **PC Site Browser**
► **PC Site Browser Settings**

Setting/Operation	Default
■ Font Size > <i>Font Size</i> → <i>Large</i> or <i>Small</i>	Normal
■ Scroll Unit > <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i>	Single Line
■ Images Off > <i>Downloads</i> → <i>Display Images</i> → <i>OFF</i>	ON
■ Sounds Off > <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i>	ON
■ Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai* > <i>Warning Messages</i> → <i>Activate PC Site Browser</i> or <i>Switch To Yahoo! Keitai</i> → <i>OFF</i>	ON (Show)

* PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Settings

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► PC Site Browser Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Clear Cache > <i>Memory Manager</i> → <i>Clear Cache</i> → <input type="checkbox"/> 	-
<ul style="list-style-type: none"> ■ Delete Cookies > <i>Memory Manager</i> → <i>Delete Cookies</i> → <input type="checkbox"/> 	-
<ul style="list-style-type: none"> ■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → <i>Delete Certificates</i> → <input type="checkbox"/> 	-
<ul style="list-style-type: none"> ■ Delete Input Memory > <i>Memory Manager</i> → <i>Delete Input Memory</i> → <input type="checkbox"/> 	-

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Settings ► Security

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► PC Site Browser Settings ► Security

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Auto Send Off for Manufacturer's Number (for Authentication) > <i>Manufacture Number</i> → <i>OFF</i> 	ON (Send)
<ul style="list-style-type: none"> ■ Set Not to Send Referer Information > <i>Send Referer</i> → <i>OFF</i> 	ON (Send)
<ul style="list-style-type: none"> ■ Select whether or Not to Allow Cookies to be Stored on handset > <i>Cookies</i> → <i>OFF</i> or <i>Ask Every Time</i> 	ON (Save)
<ul style="list-style-type: none"> ■ Select whether or Not to Run Scripts in Yahoo! Keitai¹ > <i>Script</i> → Select an item 	Ask before Connect
<ul style="list-style-type: none"> ■ Select whether or Not to Run Scripts in PC Site Browser² > <i>Script</i> → Select an item 	ON (Run)
<ul style="list-style-type: none"> ■ View Electronic Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item 	-

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Select whether or Not to Retain Authentication Information > <i>Certificate Retention</i> → <i>Always Keep</i> or <i>Not Keep</i> 	Keep while Browsing

¹ Yahoo! Keitai Browser only

² PC Site Browser only

Reset

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo!** ► **Settings**

PC Site Browser

From ► **Main Menu** ► **Yahoo!** ► **PC Site Browser**
► **PC Site Browser Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Initialize Browser > <i>Initialized Browser</i> → <input type="checkbox"/> → Enter Phone Password 	—
<ul style="list-style-type: none"> ■ Reset Browser Settings > <i>Reset Defaults</i> → <input type="checkbox"/> [YES] → Enter Phone Password 	—

Settings S! Appli

From ► **Main Menu** ► **S! Appli** ► **S! Appli Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Volume > <i>Volume</i> → Adjust volume 	Volume 4
<ul style="list-style-type: none"> ■ Backlight On/Off > <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i> 	Follow General Setting*
<ul style="list-style-type: none"> ■ Deactivate Vibration > <i>Vibration</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Suspend S! Appli after Set Period of Inactivity > <i>Auto Suspend Timer</i> → Select a duration 	Not Suspended
<ul style="list-style-type: none"> ■ Update S! Appli Information on Memory Card from Another Handset > <i>Synchronize Memory Card</i> 	—

* Display Backlight Time setting (☞ P.16-6) applies.