



# Basic Operations




|   |             |                                    |             |
|---|-------------|------------------------------------|-------------|
| <b>Menu Operations .....</b>            | <b>2-2</b>  | <b>Phone Book.....</b>             | <b>2-19</b> |
| Accessing Handset Functions.....        | 2-2         | Overview .....                     | 2-19        |
| Shortcuts/Notifications .....           | 2-5         | Creating Phone Book Entries .....  | 2-20        |
| Navigating through Menus .....          | 2-7         | Using Phone Book .....             | 2-21        |
| <b>Multi Function .....</b>             | <b>2-9</b>  | Phone Book Settings .....          | 2-22        |
| Activating Another Function.....        | 2-9         | <b>S! Addressbook Back-up.....</b> | <b>2-26</b> |
| Toggling Functions .....                | 2-10        | Overview .....                     | 2-26        |
| <b>Text Entry.....</b>                  | <b>2-11</b> | Using S! Addressbook Back-up ..... | 2-26        |
| Overview.....                           | 2-11        | <b>Advanced Features.....</b>      | <b>2-28</b> |
| Entering Characters in 5-touch Mode.... | 2-13        | Main Menu.....                     | 2-28        |
| Editing Text .....                      | 2-15        | Shortcuts .....                    | 2-28        |
| Editing Templates .....                 | 2-15        | Text Entry .....                   | 2-29        |
| Using Dictionaries .....                | 2-16        | Templates.....                     | 2-30        |
| Entering Characters in 2-touch Mode.... | 2-16        | Dictionaries .....                 | 2-30        |
| Entering Characters in T9 Input Mode .. | 2-16        | Phone Book .....                   | 2-31        |
|   |             | S! Addressbook Back-up.....        | 2-33        |



## Accessing Handset Functions

- In this guide, most operations start from Main Menu.

### From Main Menu

Press  to open Main Menu. Use  to select an item and press  to open sub menus.



Main Menu







### Tip

- Handset returns to Standby after 15 seconds of inactivity.





## Using Softkeys & Multi Selector

Press Softkeys or use Multi Selector in Standby to access assigned functions.

### ◎ Softkeys

- : Open Mail menu.
-  (Press and hold): Compose a new message.
- : Access Yahoo! Keitai portal.
-  (Press and hold): Open Yahoo! Keitai menu.
- : Access the function assigned to the key.
-  (Press and hold): Assign a function to the key.

### ◎ Multi Selector

- : Access Shortcuts.
- : Open Phone Book Search window.
- : Open Received Calls window.
- : Open Redial window.



## Keyword Search

Enter keywords to search for menu items.

1   

2 Enter keyword  


<Example> Enter "mail"

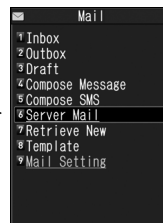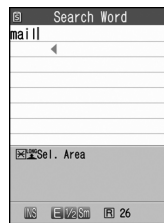

Corresponding results appear.

3 Select an item  

### ■ Toggling Multiple Items

Press  to toggle items.



## From Quick Launcher

Activate Quick Launcher when handset is closed to access TV, Snap Viewer, Movie Viewer, Photo, Movie, or MUSIC.

**1**  (Top),  or  (Bottom)



Quick Launcher

■ **Returning to Standby**









### Tip

- Handset returns to Standby after a period of inactivity.

**2**  (Top) or  (Bottom) to select an icon 


## Menu Items

| Icon  | Function   |
|---|--|
|  | Activate Camera in Photo Mode (P. 7-8)                       |
|  | Activate Snap Viewer (P. 7-19)                               |
|  | Activate TV (P. 8-7)   |
|  | Activate Movie Viewer (P. 7-21)                              |
|  | Activate Camera in Movie Mode (P. 7-10)                      |
|  | Activate Music Player (activates in Portrait view) (P. 9-6). |

## From Original Menu

Assign often-used functions to Original Menu for quick access.

**1**   

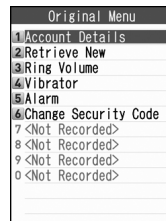

Press  to toggle between Main Menu and Original Menu.



## Enter Menu Item Number


Enter these numbers for direct menu access. Note that Main Menu Theme must be set to **Standard**.

- See P. 15-21 for menu item numbers.
- See P. 2-28 for details on changing Main Menu Theme.

<Example> Access **Select Ring Tone**  
(menu no. 13)

1

2

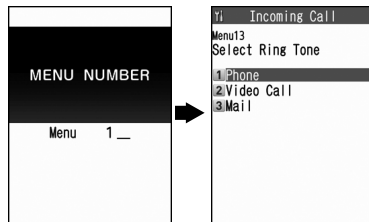




## Shortcuts/ Notifications

Add functions to Shortcut Icons and use them as shortcuts. Notifications appear on desktop to inform you of missed calls, new messages, etc. Select a notification to check the information. The following shortcuts are set by default.

 - S! Quick News List
- Camera (BI-DO-RI)
- S! Appli (モバイル便利帳 (Mobile Organizer) (Japanese))



## ◎ Shortcut Icons

| Icon | Function                         |
|------|----------------------------------|
|      | S! Quick News List               |
|      | Camera (BI-DO-RI)                |
|      | S! Appli                         |
|      | Call Phone Number                |
|      | Compose S! Mail                  |
|      | Compose SMS                      |
|      | Access Webpage (Yahoo! Keitai)   |
|      | Access Webpage (PC Site Browser) |
|      | Play Melody                      |
|      | Show Image                       |
|      | Play Video                       |

| Icon | Function                                    |
|------|---|
|      | Inbox Folder                                |
|      | Camera (Photo)                              |
|      | Camera (Serial)<br>For continuous shooting. |
|      | Camera (Movie)                              |
|      | Schedule                                    |
|      | To Do List                                  |
|      | Text Memo                                   |
|      | Bar Code Reader                             |
|      | Text Reader                                 |
|      | Music Player                                |
|      | TV  |



| Icon | Function                |
|------|-------------------------|
|      | Calculator              |
|      | Dictionary              |
|      | Receive IR Transmission |
|      | Original Menu           |
|      | PC Site Browser         |
|      | Books                   |
|      | Play/Erase Msg.         |
|      | Play/Erase VC Msg.      |

### © Notifications

| Icon | Function/Information |
|------|----------------------|
|      | Missed Calls         |

| Icon | Function/Information   |
|------|--|
|      | Answering Machine<br>Play/delete messages.                       |
|      | Answering Machine (Video Message)<br>Play/delete Video Messages. |
|      | Voice Mail   |
|      | New Messages   |
|      | Failed Alarms  |
|      | Missed TV Programs   |
|      | Timer Recording Finished   |
|      | Maximum Call Cost Limit Reached                                  |
|      | Software Update  |

| Icon | Function/Information                |
|------|-------------------------------------|
|      | USB Mode Communication              |
|      | Network Re-search                   |
|      | New S! Info Channel                 |
|      | New S! Info Channel Receive Failure |
|      | New Weather Info.                   |
|      | Weather Info. Receive Failure       |
|      | Content Keys Acquired               |

Notifications disappear after accessing the functions or information. Answering Machine and Voice Mail notifications disappear after message is played back.



## Adding Shortcuts

Add up to 15 icons per theme. Select from three themes.

- 1 From a function >> >> **Add Shortcut Icon** >>   
 (>> YES >> )

## Accessing Shortcuts & Notifications

- 1



Shortcuts

- 2 to select an icon >>

### ■ Scrolling Shortcuts




### ■ Changing Themes

>> >> **Change Shortcut** >> >>   
 Select a theme >> >> YES >>

## Navigating through Menus

### Scrolling Pages


Use or to scroll next/previous pages.

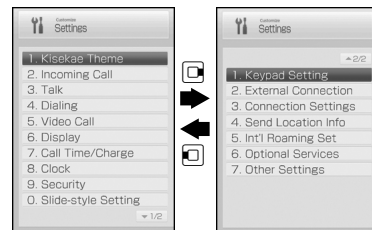



### Selecting Menu Items Using Keypad

Use keypad to enter number corresponding to menu item.

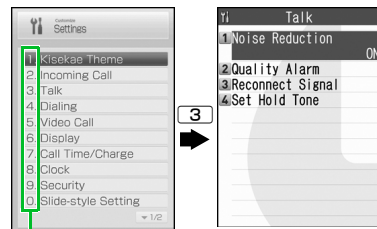

Menu Numbers

### Return to Previous Window or Standby

Press **[クア]** to cancel operation and return to previous window.

Press **[戻る]** to return to Standby.

● May not apply to all functions/windows.

### More Features

#### Advanced

##### Main Menu

- ❖ Change Main Menu Theme
- ❖ Switch to Simple Menu
- ❖ Temporarily Change Design Theme of Main Menu

(👉 P. 2-28)

##### Shortcuts

- ❖ Delete Notifications
- ❖ Edit Title of a Shortcut
- ❖ Change Icon Image
- ❖ Check Icon Information
- ❖ Change icon order
- ❖ Delete Shortcuts
- ❖ Reset Shortcuts
- ❖ Show/Hide Shortcuts

(👉 P. 2-28)

#### Customize

##### Menu Display Settings

- ❖ List View and Details View
- ❖ Set Main Menu Theme
- ❖ Change Icon Design (Original Theme)
- ❖ Change Background (Original Theme)
- ❖ Reset Original Theme Settings

❖ Save Last Selected Menu Item to Memory

❖ Add a Menu Item to Original Menu

(👉 P. 14-9)

##### Key

❖ Set Key Sound Off

❖ Change Function Assigned to Shortcut Key

(👉 P. 14-39)

##### Shortcuts

- ❖ Set Shortcut Theme
- ❖ Change Icon Design of a Theme
- ❖ Change Order of Icons of a Theme
- ❖ Copy Icons to Another Theme
- ❖ Move Icons to Another Theme
- ❖ Delete Icons of a Theme
- ❖ Show New Message Indicator as 3D Animation

(👉 P. 14-7)





## Multi Function

Activate up to three functions simultaneously. Activate one function per group at one time (except TV & MUSIC Group).

| Function Group      | Function  |
|---------------------|---|
| Mail Group          | Mail  |
| Yahoo! Keitai Group | Yahoo! Keitai   |
| S! Appli Group      | S! Appli  |
| Settings Group      | Settings, Optional Services   |
| Tools Group         | Data Folder, Tools, Phone Book, Own Data, Camera, Snap Viewer, Movie Viewer |
| TV & MUSIC Group    | TV, MUSIC   |

- See P. 15-2 for available combinations of functions that can be activated at the same time.
- Currently active functions are indicated by task indicators in Task Indicator Area. To switch to a different function, select the corresponding task indicator.



Task Indicator Area

- Transmission fees are incurred while accessing functions during a voice call.

## Activating Another Function

Activate another function without exiting current function.

**1 While using a function** ➡

**2** ➡ **Select another function** ➡

### ■ Mail Function

After step 1 ➡

### ■ To Access Yahoo! Keitai Portal

After step 1 ➡


### ■ To Activate Function Assigned to Shortcut Key

After step 1 ➡



## Toggling Functions

- 1 When multiple functions are active >>

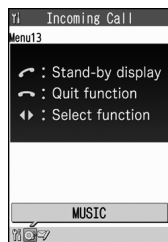

Task Switch Window

### ■ Switching Functions

- >> to select a task indicator >>

### ■ Opening Main Menu

- >>

### ■ Returning to Standby

- >>

Press in Standby to reopen Task Switch window.

### ■ Ending Multi Function

- >> >> *Quit Selected* or *Quit All Function* >>

### Tip

- Alternatively, press and hold to end Multi Function and return to Standby.



# Text Entry


Handset has three text input methods: 5-touch, 2-touch and T9 Input.

● **This guide mainly explains Japanese text entry in 5-touch mode.**

## Overview

### Text Entry Window

A text entry window consists of Character Entry Pane, Guide Pane and Status Pane. Indicator and key descriptions are as follows:

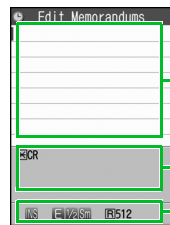

Character Entry Pane

Guide Pane

Status Pane

Text Entry Window

### Character Entry Pane

|   |                        |
|---|------------------------|
|   | Cursor                 |
| ◀ | End mark (end of text) |

### Guide Pane

|                   |  |
|-------------------|--|
| ▲▼ CHG            | to convert characters  |
| ▲▼ All<br>▲▼ Find | to search Phone Book   |
| ◀▶<br>▲▼ Area     | to specify a text range to copy/cut                                    |
| ☒ CR              | to insert line feed  |
| ☒ Sel. Area       | Press and hold to select area of text to copy/cut                      |
| ☒ A/a             | to switch case of each character, or to add dakuten (゛)/handakuten (゜) |
| ☒ AA → aa         | to cancel Caps Lock mode   |
| ☒ aa → Aa         | to set Shift mode  |
| ☒ Aa → AA         | to set Caps Lock mode  |
| ☒ Paste           | Press and hold to paste copied or cut text                             |
| ↶ Back            | to cycle characters on a key in reverse order (e.g. え → う)             |


### Status Pane

|                 |  |
|-----------------|--|
| 2 5             | Text input method (2-touch/T9 Input mode) (No indicator for 5-touch mode)                |
| INS OVR         | Insert/Overwrite mode  |
| 漢 加<br>E 123    | Character entry mode   |
| ☒               | Kuten code input mode (P. 2-30)  |
| 1/2 1/2         | Double-byte/Single-byte mode   |
| Sm              | Lower case input mode  |
| Shift CAPS LOCK | Shift/Caps Lock mode   |
| R               | Bytes remaining for text entry.  |
| In              | Number of entered characters (appears when entering text to USIM Phone Book/SMS message) |




## Split Windows

In some instances, a second window opens with text entry window.

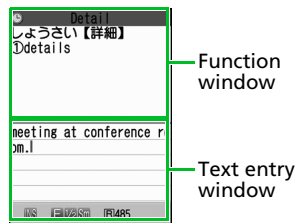





Referring to Dictionary from a text entry window

### Switching Windows


Press  and select *Change Window* to switch windows.


## Changing Text Input Methods




- 1 [Text Entry] window 
  - » **CHG Input Method** 
  - » **Select a text input method** 

Alternatively, press and hold .


## Toggling Character Entry Modes

- 1 [Text Entry] window 

Press  to toggle entry modes.

Kanji/hiragana  Katakana 
  
Alphanumerics  Numbers

### Tip

- In 2-touch mode, press  to toggle single-byte and double-byte modes.



## Interruptions during Text Entry

### When Battery Runs Out

Battery alarm sounds and *Recharge Battery* appears. Text is automatically saved. Access the same function to continue text entry.

Text may not be saved depending on the function.

### When is Pressed

A message appears asking whether to end text entry. Select **YES** and press  to end text entry without saving the text. To continue text entry, select **NO** and press .

### When a Voice Call Arrives

Answer the call. After call ends, text entry window returns.



## Entering Characters in 5-touch Mode

Press a key multiple times to cycle through letters assigned to that key.

● For key assignment, see P. 15-11.

## Kanji, Hiragana & Katakana

Enter a reading (in hiragana) and convert to kanji, katakana, etc.

### Using Conversion

Enter a character and Conversion function suggests words starting with that character. Conversion also suggests word selection for words to follow.

Switch to kanji/hiragana mode to use Conversion.

### Auto Cursor

If no key is pressed for a set time during text entry, cursor moves to the right.

See P. 14-39 for how to switch cursor movement speed.


<Example> Entering “携帯電話”

### 1 [Text Entry] window


2 (four times)

“け” is entered in Character Entry Pane.

Suggestion list shows predictions for words beginning with “け” in Guide Pane.

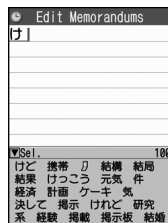

### 2 Select “携帯”

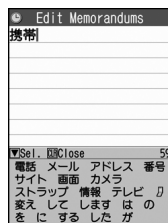

“携帯” appears in Character Entry Pane.


A suggestion list of words that follow “携帯” appears in Guide Pane.

### When Required Word Does Not Appear

▶ クリア

Continue hiragana (reading) entry in Character Entry Pane to narrow down selection.

### 3 Select “電話”

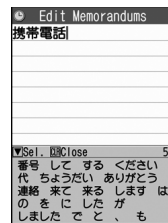

### To Exit Suggestion List

▶ クリア or 閉

### Tip

- Handset has a learning feature that adds entered words to the suggestion list. Press and hold クリア to delete an added word from the suggestion list.



## ③ Converting Hiragana

 
If the required suggestion does not appear or conversion is set to Off, convert to Kanji as shown below:

<Example> Entering “佐々木”

### 1 [Text Entry] window ▶▶

3 (once) ▶▶

3 (once) ▶▶ 2 (twice)



■ To Delete Last Input Character

▶▶

■ To Determine Entered Hiragana without Converting It

▶▶

### 2 ▶▶

■ To Reconvert to a Different Word

▶▶ ▶▶ Select a word

■ To Change Conversion Range

▶▶

## Dakuten (゛) & Handakuten (゜)

<Example> Entering “が”

### 1 [Text Entry] window ▶▶

2 (once) ▶▶ ▶▶

## Switching to Lower Case

<Example> Change “つ” to “つ”


### 1 [Text Entry] window ▶▶

4 (three times) ▶▶ ▶▶



## Pictographs & Symbols

### 1

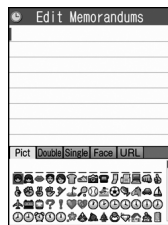

### 2 Select a pictograph/symbol



■ To Toggle Pictograph/Symbol Categories

▶▶ or

■ To Toggle Full-Screen List and Continuous Entry

▶▶

### 3

The pictograph/symbol list window is closed.

## Emoticons

### 1 ▶▶ Face Mark ▶▶

### 2 Select an emoticon ▶▶

## Common Phrases (Templates)

### 1 ▶▶ Common Phrases ▶▶





### 2 Select a folder ▶▶ ▶▶ Select a phrase ▶▶ (twice)



 

 
## Alphanumerics, Numbers & Katakana

Enter alphanumerics, numbers or katakana in kanji/hiragana input mode.

- 1 [Text Entry] window ▶▶  
Enter hiragana ▶▶  ▶▶  
Select a character ▶▶ 

## Editing Text







### Deletion & Correction

- 1 [Text Entry] window ▶▶  
Move cursor to the left of the character to delete ▶▶  

- To Delete All Characters to the Right of Cursor  
▶▶ Press and hold 
- To Delete Entire Text  
▶▶ Move cursor to the end of text  
▶▶ Press and hold 

- 2 Position cursor ▶▶ Enter correct characters


### Copy, Cut & Paste

- Only one entry can be stored on clipboard. If you copy or cut new text, the previously copied or cut text is overwritten.
- Copied or cut text can be pasted repeatedly until you copy or cut new text, or turn handset power off.

- 1 [Text Entry] window ▶▶  ▶▶  
Copy or Cut ▶▶ 
- 2 Move cursor to beginning of characters ▶▶ 
- 3 Move cursor to end of characters ▶▶ 
- 4 Position cursor ▶▶  ▶▶  
Paste ▶▶ 

## Editing Templates

- 1  ▶▶ Own Data ▶▶  ▶▶  
Common Phrases ▶▶ 

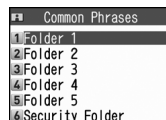

Templates (Common phrases) Window

- 2 Select a folder ▶▶ 



Templates List Window

- When Security Folder Selected  
▶▶ Enter Security Code ▶▶ 
- 3 Select an entry ▶▶  ▶▶  
Enter text ▶▶ 




## Using Dictionaries
 
### 2 Saving Words to Own Dictionary

Save frequently used words to Own Dictionary. For each word, save a reading (in hiragana). When the reading is entered in a text entry window, the word appears among the suggestions.

1 **Own Data** **Own Dictionary**



Own Dictionary Window

2 **<New>** **Enter word**  
 **Enter reading**

■ **To Check Saved Words**  
 **Select a word**

## Entering Characters in 2-touch Mode

Each hiragana character is entered by combining two key presses.

- For combinations of character input keys, see P. 15-12.
- Procedures for selecting predicted words and for converting entered hiragana are the same as those used in 5-touch mode (P. 2-13).

<Example> Entering “キャンプ”

1 (き)   
(change to lower case mode)  
 (ゃ)   
(change to upper case mode)  
 (ん)   
(ふ) (° )

2

### Tip

- Pressing also adds dakuten (° ) and handakuten (° ) or toggles upper case and lower case.
- Press to toggle double-byte and single-byte modes.

## Entering Characters in T9 Input Mode

Press a key once for each character, and select the word from the suggestion list.


- For key assignment, see P. 15-13.
- When character entry mode is “Number,” 5-touch input method is automatically applied.

<Example> Entering “春”

- The following example is in Japanese text entry mode.

1 [Text Entry] window

Conversions for the key combination appear.

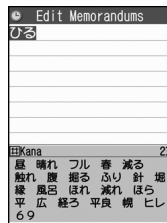





### ■To Change Conversion Range



### ■Toggle Kanji and Hiragana Suggestion Lists



### ■Toggle English and Japanese Suggestion Lists



## 2 [Text Entry] window



Select word from among the suggestions in Guide Pane.

### ■To Show Converted Words on Suggestion List



For example, if you specify “はる,” then “張る,” “貼る” and other words that have the same reading appear on the suggestion list.

### ■To Show Predicted Words on Suggestion List



For example, if you specify “はる,” then “春休み,” “遥か” and other words that begin with the same reading appear on the suggestion list.

### ■To Exit Suggestion List and Continue Character Entry



## 3

## Re-entering Words

Re-enter as shown below if the desired word does not appear.

<Example> Entering “らんらんと”

- The following example is in Japanese text entry mode.

## 1 [Text Entry] window


(row ら) (row わ)

(row ら) (row わ)

(row た)


“らんらんと” does not appear in suggestion list.

## 2

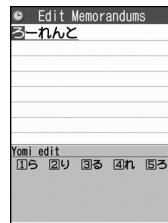

Cursor is on the first character of the word. The edit window opens in Guide Pane, where hiragana characters of row ら appear.

3 (ら) (ん) (と)

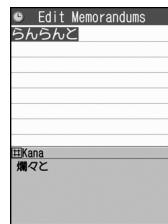



## Text Entry

### ■ If No Correction is Necessary

» to move cursor to the next character

### ■ To End Re-entering Word

»

The words predicted/converted from the re-entered word appear on the suggestion list.

4



## More Features



### Advanced

#### Text Entry

- ❖ Switch between Lower Case & Upper Case
- ❖ Switch between Single-byte & Double-byte
- ❖ Cycle Characters in Reverse Order
- ❖ Undo Last Operation
- ❖ Move Cursor to Top/End of Text
- ❖ Overwrite & Insert Modes
- ❖ Insert Line Feed
- ❖ Input a Space
- ❖ Use Dictionary
- ❖ Quote Text
- ❖ Use Kuten Codes

( P. 2-29)

#### Templates

- ❖ Edit a Folder Name
- ❖ Reset a Folder Name
- ❖ Edit Templates
- ❖ Reset Templates

( P. 2-30)

#### Dictionaries

- ❖ Edit Entries

- ❖ Delete Entries

( P. 2-30)



### Customize

#### Text Entry

- ❖ Set Text Input Method
- ❖ Set Conversion
- ❖ Set to Show T9 Suggestion Words in Kanji or Hiragana
- ❖ Clear Learning History
- ❖ Change Font Size
- ❖ Set Auto Cursor Movement in 5-Touch Mode

( P. 14-39)



## Overview

Save phone numbers, e-mail addresses and other contact information to Phone Book.

### Phone Book Data & Settings

#### Contact & Personal Information

- FN • N • P Name & Reading
- GR Group
- 4 Phone Numbers
- 3 E-mail Addresses
- Address
- Birthday
- Memo
- Still Image
- Entry Number

#### Custom Settings

- Incoming Ringtone
- Incoming Image
- Illumination
- Vibration
- Outgoing Message

#### Others

Secret Data



### Phone Book Usage Examples

#### Speed Dial

Abbreviated dialing for numbers in Phone Book (P. 3-12).

#### Quick List

Save frequently accessed Phone Book entries to Quick List (P. 3-12).

#### Reject Calls

Reject calls from phone numbers not saved in Phone Book (P. 4-7).

When you make calls or write messages, specify phone numbers or addresses from Phone Book.

### ● Back Up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, Phone Book data may be lost or altered. Damage to handset may also affect data recovery. SoftBank is not liable for damages from lost/altered Phone Book data.




## Creating Phone Book Entries

<Example>

Enter a name, phone number and e-mail address, and specify a group

- 1 >> **Phone Book** >> >> **Add to Phone Book** >> >> **Phone** >>
- 2 >> >> Enter last name >> >> Check reading >> >> >> Enter first name >> >> Check reading >>

Reading is entered automatically.  
Edit as necessary.

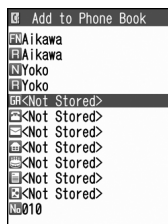

Phone Book Entry Window

- 3 >> >> Select a group >>

- 4 >> >> Enter phone number >> >> Select an icon >>

■To Save Additional Numbers  
Select <Not Stored> and repeat the same step.

- 5 >> >> Enter e-mail address >> >> Select an icon >>

■To Save Additional Addresses  
Select <Not Stored> and repeat the same step.

- 6

## Setting Incoming Image

- 1 [Phone Book Entry] window >> >>

- 2 **Select Image** >> >> Select a folder >> >> Select a still image >>

■To Capture an Image with Camera  
>> **Photo Mode** >> >> Capture image >>

■To Cancel Selected Image  
>> **Release This** >>

## Creating Entries from Other Functions

Create entries from the following functions:

- Received calls
- Dialed Calls
- Redial
- Text Reader
- Receives/Sent Address List
- Yahoo! Keitai
- Phone Number Entry window

<Example> Create an entry from Received Calls

- 1 >> Select a record >> >> **Add to Phone Book** >> >> **Phone** >>

- 2 **Add** >> >> Search Phone Book >> Select an entry >> (twice)

Phone Book Entry window with the phone number automatically entered opens.



■ To Save As a New Entry

▶▶ New ▶▶ ■

- 3 Enter other items ▶▶ [Envelope] ▶▶ YES ▶▶ ■

## Resuming Phone Book Edit Operation

If battery is empty or if another function was activated while editing an entry, resume operation as follows:

- 1 ■ ▶▶ Phone Book ▶▶ ■ ▶▶ [Phone] ▶▶ Add to Phone Book ▶▶ ■ ▶▶ Phone ▶▶ ■ ▶▶ Recall ▶▶ ■

■ To Save As a New Entry

▶▶ New ▶▶ ■

- 2 Enter each item ▶▶ [Envelope] ▶▶ YES ▶▶ ■

### Tip

- Save entry before you exit Phone Book. Otherwise, all changes will be lost.

## Using Phone Book

### Dialing from Phone Book

- 1 ■ ▶▶ Phone Book ▶▶ ■




Phone Book Entry List Window

■ To Dial the First Phone Number

▶▶ [Phone]

- 2 [Envelope] or [Y] to switch tabs ▶▶ [Phone] to select an entry ▶▶ ■

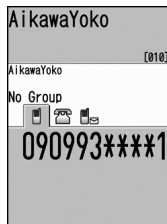

Phone Book Entry Details Window


- 3 [Phone] to select a phone number ▶▶ [Phone] or ■

■ Video Call

▶▶ [Phone]

### Specifying a Search Method

- 1 [Phone]

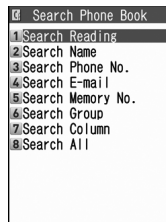

Phone Book Search Window

- 2 Select a search method ▶▶ ■

#### Search Reading:

Enter a reading and press [Phone].

#### Search Name:

Enter a name and press [Phone].

#### Search Phone No.:

Enter a phone number and press [Phone].

**Search E-mail:**

Enter an e-mail address and press

**Search Memory No.:**

Enter three-digit entry number.

**Search Group:**

Select a group to view saved entries.

**Search Column:**

Press a key ( - or ) to access the tab corresponding to that key.

**Search All:**

Phone Book is organized by tabs (Japanese syllabary order).



Phone Book Entry List Window

**Tip**

- Phone Book entries saved on USIM Card are indicated by .

**Accessing Entries from Other Functions**

Access Phone Book entries from Received Calls, Dialed Calls, Redial and Received/Sent Address List.

- Access Phone Book from Received Calls

**1** **Look-up Phone Book**

- Access Phone Book from Dialed Calls

**1** **Own Data** **Dialed Calls** **Look-up Phone Book**

- Access Phone Book from Redial

**1** **Look-up Phone Book**

- Access Phone Book from Received Address List

**1** Press and hold **Look-up Phone Book**

- Access Phone Book from Sent Address List


**1** Press and hold **Look-up Phone Book**

**Phone Book Settings****Customizing Handset Response**

Set different ringtones, images, etc. per entry item or Group.

**Indicators**

The following indicators appear for set items.

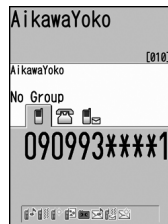

- Ringtone (Incoming Calls)
- Ringtone (Mail)
- Illumination (Incoming Calls)
- Illumination (Mail)
- Vibration (Incoming Calls)
- Vibration (Mail)
- Incoming Image (Calls)
- Outgoing Message (Incoming Calls)



## ○To Customize by Phone Number/E-mail Address

<Example> Set a ringtone for incoming voice calls

**1** [Phone Book Entry Details] window to select a phone number **Ring Tone/Image**

**2** **Voice Call (Recv.)**

**3** **Ring Tone** **Select a ringtone type** ( **Select a folder** **Select a ringtone**

■To Cancel Custom Settings  
 >> Select an item

## ○To Customize by Group

<Example> Set illumination for incoming messages

**1** [Phone Book Entry List] window **Group Setting**

**2** Select a group **Ring Tone/Image**

**3** **Mail (Recv.)**

**4** **Illumination** **Select a pattern**

■To Cancel Custom Settings  
 >> Select an item

### Note

- Custom settings are unavailable for secret Phone Book entries.
- Custom settings are canceled when entry is set as secret.

## Restricting Calls to/from Specific Phone Numbers

Restrict calls to/from specific numbers in Phone Book. This can help manage personal calls and prevent nuisance calls.

**1** [Phone Book Entry Details] window to select a phone number **Restrictions**

**2** Enter Security Code

**3** Select a restriction type

### Restrict Dialing:

Restrict outgoing calls to all numbers except a specified number. To call that number, you need to dial from Phone Book.

### Call Rejection:

Restrict incoming calls from a specified number.

### Call Acceptation:

Receive incoming calls only from a specified number.

### ■To Cancel Restriction

>> Select a restriction type with "★"

**Ⓞ When *Restrict Dialing* is Set**

The following operations are disabled:

- Dialing by Keypad
- Dialing from Received Calls
- Calling from Phone Book (except: calling specified number in Phone Book)

**Tip**

- When *Restrict Dialing* is set, all records on Redial, Dialed Calls and Sent Address List are deleted.
- Emergency numbers 110, 119 and 118 are available even when *Restrict Dialing* is set.
- If you change or delete the specified number, the set restriction is canceled. Cancel *Restrict Dialing* to edit or delete.

**Setting Entries as Secret**

Prevent others from accessing certain Phone Book entries by setting them as secret data.

- Phone Book entries set as secret only appear in Secret Mode or Secret Data Only Mode (P. 4-9).

**1 [Phone Book Entry Details]  
window** **» Set Secret**  

**■ To Cancel Secret Setting**  
**» Release Secret**

**Tip**

- Phone Book entries saved in Secret Mode or in Secret Data Only Mode are automatically set as secret.
- If a Phone Book entry that has been saved to Quick List is set as secret, the entry is canceled from Quick List.

**Managing USIM Phone Book**

Phone Book entries can be copied between handset and USIM Card.

**1** **» Tools** **» USIM**  
**Operation** **» Enter**  
**Security Code**
**2** **Copy** **» Phone** →  
**USIM or USIM → Phone**   
 **» Phone Book**
**3 Search Phone Book**
**4** **Select an entry**   
Repeat this step to specify other entries.

**5** **» YES**





## Note

- Items that cannot be saved to USIM Phone Book are not copied.
- Phone Book entries set as secret cannot be copied.
- You must end copying of Phone Book entries to make/receive calls or send/receive messages.

## More Features

### Advanced

#### Creating Entries

- ❖ Save a Postal Code, Address & Memo
- ❖ Save Birthday
- ❖ Change Entry Number

(👉 P. 2-31)

#### Phone Book Search

- ❖ Change Index Tab of Phone Book Entry List Window
- ❖ Change Font Size
- ❖ Change Phone Number/E-mail Address Order
- ❖ Compose an S! Mail from Phone Book

- ❖ Compose an SMS Message from Phone Book

(👉 P. 2-31)

#### Managing Phone Book

- ❖ Check Custom Ringtone/Image Settings by Item
- ❖ Cancel Custom Ringtone/Image Settings by Item
- ❖ Check Restriction Settings by Restriction Type
- ❖ Cancel Restriction Settings by Restriction Type
- ❖ Check Number of Phone Book Entries
- ❖ Edit a Phone Book Entry
- ❖ Copy a Phone Book Entry
- ❖ Delete Entries
- ❖ Delete Items from an Entry
- ❖ Delete an Entry from USIM Card

(👉 P. 2-32)

### Customize

#### Phone Book

- ❖ Set Preferred Search Method
- ❖ Change Group Name

(👉 P. 14-16)



## Overview

Back up handset Phone Book to server.

- Separate subscription required.
- See SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) for details.

### Note

- Fully charge battery beforehand.
- Packet transmission fees are incurred for synchronizing, backing up or downloading.
- Be careful when selecting synchronization direction. Otherwise newest information may be deleted.
- All data in the server Phone Book will be deleted if Synchronize, Sync From Client, or Backup is performed after deleting all data in handset Phone Book.
- All data in handset Phone Book will be deleted if Synchronize, Sync From Server, or Restore is performed after deleting all data in the server's Phone Book.
- The following Phone Book items are not synchronized. Note that using Restore will not delete all Phone Book settings.  
Ringtone  
Vibrator  
Illumination/Images

## Using S! Addressbook Back-up

### Synchronizing Phone Book

Connect to Phone Book backed up on server and bring it up to date with handset's Phone Book.


- The first time you synchronize will be in **Synchronize** regardless of the setting.
- Synchronization can be any of the following types.

|                  |  |
|------------------|--|
| Synchronize      | Synchronize handset Phone Book and server Phone Book. Both Phone Books are synced with the newest information. |
| Sync from Client | Copy updated information to server Phone Book.   |
| Sync from Server | Copy update information to handset Phone Book.   |



|         |   |
|---------|---|
| Backup  | Back up handset Phone Book to server (note that Server Phone Book is deleted).  |
| Restore | Restore server Phone Book to handset (note that handset Phone Book is deleted). |

**1** **Tools** **S! Addressbook Back-up**

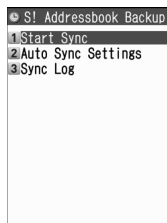

S! Addressbook Back-up Window

**2 Start Sync** **Enter Security Code**

**3 Select type of synchronization** **YES**  
  
 Synchronization starts.  
 Synchronization results appear after completion.

**4**

## Checking Synchronize Log

**1 [S! Addressbook Back-up] window** **Sync Log**   
**Select an item**

## More Features

### Advanced

S! Addressbook Back-up  
 ❖ Delete Synchronize Log

( P. 2-33)

### Customize

S! Addressbook Back-up  
 ❖ Set Auto Synchronize  
 ❖ Check Auto Synchronize Settings

( P. 14-16)



## Main Menu

### Start Here

[Main Menu] ..... P. 2-2

#### Change Main Menu Theme

[Main Menu] >> [Icon] >> Select a pattern >> [Enter] (>> YES or NO >> [Enter])

#### Switch to Simple Menu

[Main Menu] >> [Icon] >> **Simple Menu** >> [Enter] (>> YES or NO >> [Enter])

In Simple Menu, font size is larger and menu options are limited to basic ones.

#### Temporarily Change Design Theme of Main Menu

[Main Menu] >> [Icon] >> Select a theme >> [Enter]

Next time you open Main Menu, default Main Menu returns.

## Shortcuts

### Delete Notifications

[Icon] >> Press and hold [Clear]

Some notifications may not disappear depending on the type.

### Edit Title of a Shortcut

[Icon] >> Select an icon >> [Enter] >> **Edit Title** >> [Enter] >> Enter title >> [Enter]

### Change Icon Image

[Icon] >> Select an icon >> [Enter] >> **CHG Icon Image** >> [Enter] >> **Select Icon Image** >> [Enter] >> Select a folder >> [Enter] >> Select a file >> [Enter]

To reset icon image, select **Default Icon Image** and press [Enter].

### Check Icon Information

[Icon] >> Select an icon >> [Enter] >> **Icon Info Setting** >> [Enter]

### Change icon order

[Icon] >> Select an icon >> [Enter] >> **Sort** >> [Enter] >> YES >> [Enter] >> [Enter] to select a position >> [Enter]

### Delete Shortcuts

[Icon] >> Select an icon >> [Enter] >> **Delete** >> [Enter]

- To select **Delete This** >> **Delete This** >> [Enter] >> YES >> [Enter]
- To select **Delete selected** >> **Delete selected** >> [Enter] >> Select icons >> [Enter] >> [Enter] >> YES >> [Enter]
- To select **Delete All** >> **Delete All** >> [Enter] >> YES >> [Enter]

### Reset Shortcuts

[Icon] >> [Enter] >> **Reset Shortcut** >> [Enter] >> YES >> [Enter]



## Show/Hide Shortcuts

>> >> *Display Setting* >> >> *Display always* or *Display at Use* >> (>> )

When *Display at Use* is set, shortcuts only appear when you press in Standby.

## Text Entry

### Start Here

[Text Entry] window ..... P. 2-11

### Functions Before Entering Text

#### Switch between Lower Case & Upper Case

[Text Entry] window >> >> *Lower Case* or *Upper Case* >>

#### Switch between Single-byte & Double-byte

[Text Entry] window >> >> *Single-Byte* or *Double-Byte* >>

## Functions While Entering Text

### Cycle Characters in Reverse Order

[Text Entry] window >> Input a character >>

This procedure is available in 5-touch mode.

### Undo Last Operation

[Text Entry] window >> Press and hold

### Move Cursor to Top/End of Text

[Text Entry] window >> >> *Jump* >> >> *To Beginning* or *To End* >>

### Overwrite & Insert Modes

[Text Entry] window >> >> *Overwrite* or *Insert* >>

Text entry windows always open in *Insert* mode.

## Insert Line Feed

[Text Entry] window >>

Press to add a space at the end of text.

## Input a Space

[Text Entry] window >> >> *Space* >>

Press to add a space at the end of text.

## Use Dictionary

[Text Entry] window >> >> *Refer Dic.* >> >> *Enter Word* >> >> *Select a dictionary* >> >> *Select a word* >> >> *Read descriptions of the word*

- To Enter a Word from Search History >> *Reference History* >> >> *Select a word* >> >> *Select a word* >> >> *Read descriptions of the word*



### Quote Text

[Text Entry] window >> [P] >>

**Quote Data** >> [■]

- To Quote from a Phone Book Entry  
>> **Quote Phonebook** >> [■] >>  
Search Phone Book >> Select a data  
item to quote text from >> [■] >> [✉]
- To Quote from Account Details  
>> **Account Details** >> [■] >> Enter  
Security Code >> [■] >> Select a data  
item >> [■] >> [✉]
- To Scan Text by Text Reader  
>> **Text Reader** >> [■] >> Scan text  
with camera >> [📷]
- To Scan Bar Code by Bar Code Reader  
>> **Bar Code Reader** >> [■] >> Scan  
a bar code with camera >> [■]

### Use Kuten Codes

[Text Entry] window >> [P] >>

**Kuten Code** >> [■] >> Enter kuten  
codes (P. 15-14)

## Templates

### Start Here

[Templates (Common phrases)]  
window ..... P. 2-15

[Templates List] window ..... P. 2-15

### Edit a Folder Name

[Templates (Common phrases)]  
window >> Select a folder >> [P] >>

**Edit Folder Name** >> [■] >> Enter  
folder name >> [■]

### Reset a Folder Name

[Templates (Common phrases)]  
window >> Select a folder >> [P] >>

**Reset Name** >> [■] >> YES >> [■]

### Edit Templates

[Templates List] window >> Select  
a template >> [P] >> **Edit** >> [■] >>  
Edit phrase >> [■]

### Reset Templates

[Templates List] window >> Select  
a template >> [P]

- To select *Delete This*  
>> **Delete This** >> [■] >> YES >> [■]
- To select *Delete All*  
>> **Delete All** >> [■] >> Enter Security  
Code >> [■] >> YES >> [■]

## Dictionaries

### Start Here

[Own Dictionary] window ..... P. 2-16  
**Own Dictionary**

### Edit Entries

[Own Dictionary] window >>  
Select an entry >> [✉] >> Edit word  
>> [■] >> Edit reading >> [■]



## Delete Entries

[Own Dictionary] window >>  
Select an entry >> [P] >> **Delete** >>

- 
- To select *Delete This*  
>> **Delete This** >> ■ >> **YES** >> ■
- To select *Delete selected*  
>> **Delete selected** >> ■ >> Select  
entries >> ■ >> [E] >> **YES** >> ■
- To select *Delete All*  
>> **Delete All** >> ■ >> Enter Security  
Code >> ■ >> **YES** >> ■

## Phone Book

### Start Here

|                                   |               |
|-----------------------------------|---------------|
| [Phone Book Entry] window ...     | P. 2-20       |
| [Phone Book Entry List] window    | ..... P. 2-21 |
| [Phone Book Entry Details] window | ..... P. 2-21 |
| [Phone Book Search] window        | ..... P. 2-21 |

## Creating Entries

### Save a Postal Code, Address & Memo

[Phone Book Entry] window >> [H]  
or [I] >> ■ >> Enter content >> ■

### Save Birthday

[Phone Book Entry] window >>  
[B] >> ■ >> Enter date of birth >>  
■

### Change Entry Number

[Phone Book Entry] window >> [N]  
>> ■ >> Change entry number >>  
■

## Phone Book Search

### Change Index Tab of Phone Book Entry List Window

[Phone Book Entry List] window  
>> [P] >> **Change Display** >> ■ >>  
**Alphabet, Memory No. or Group**  
>> ■


### Change Font Size

[Phone Book Entry List] window or  
[Phone Book Entry Details] window  
>> [P] >> **Font Setting** >> ■ >>  
**Standard Font, Big Font or Small**  
**Font** >> ■

### Change Phone Number/E-mail Address Order

[Phone Book Entry Details] window  
>> Select a phone number/e-mail  
address >> [P] >> **Move to Top** >>



 This procedure is available when more than one phone number/e-mail address is saved to a Phone Book entry.



### Compose an S! Mail from Phone Book

[Phone Book Entry Details] window  
 >> [Phone Book Icon] to select an e-mail address >>  
 [Phone Book Icon] >> Compose S! Mail

### Compose an SMS Message from Phone Book

[Phone Book Entry Details] window  
 >> [Phone Book Icon] to select a phone number >>  
 [Phone Book Icon] >> **Compose SMS** >> [Phone Book Icon] >>  
 Compose SMS message

## Managing Phone Book

### Check Custom Ringtone/Image Settings by Item

[Phone Book Entry List] window >>  
 [Phone Book Icon] >> **Ring Tone/Image** >> [Phone Book Icon] >>  
 Select an item with "★" >> [Phone Book Icon] >>  
 Select an item with "★" >> [Phone Book Icon] >>  
**Check Settings** >> [Phone Book Icon] >> Check  
 settings of item with "★" >> [Phone Book Icon]

### Cancel Custom Ringtone/Image Settings by Item

[Phone Book Entry List] window  
 >> [Phone Book Icon] >> **Ring Tone/Image** >> [Phone Book Icon] >>  
 Select an item with "★" >> [Phone Book Icon] >>  
 Select an item with "★" >> [Phone Book Icon] >>  
**Release Settings** >> [Phone Book Icon] >> **YES** >>  
 [Phone Book Icon]

### Check Restriction Settings by Restriction Type

[Phone Book Entry List] window  
 >> [Phone Book Icon] >> **Restrictions** >> [Phone Book Icon] >>  
 Enter Security Code >> [Phone Book Icon] >> Select  
 a restriction type with "★" >> [Phone Book Icon] >>  
 >> **Check Settings** >> [Phone Book Icon]

### Cancel Restriction Settings by Restriction Type

[Phone Book Entry List] window  
 >> [Phone Book Icon] >> **Restrictions** >> [Phone Book Icon] >>  
 Enter Security Code >> [Phone Book Icon] >> Select  
 a restriction type with "★" >> [Phone Book Icon] >>  
 >> **Release Settings** >> [Phone Book Icon] >> **YES** >>  
 >> [Phone Book Icon]

### Check Number of Phone Book Entries

[Phone Book Entry List] window  
 >> [Phone Book Icon] >> **No. of Phone Book** >> [Phone Book Icon]

### Edit a Phone Book Entry

[Phone Book Entry Details] window  
 >> [Phone Book Icon] >> **Edit Phone Book** >> [Phone Book Icon] >>  
 Edit each item >> [Phone Book Icon] >> **YES** >> [Phone Book Icon]

- To Save as a New Entry  
 >> **No** >> [Phone Book Icon] >> Enter entry number  
 The edited entry is saved as a new entry and the original entry remains the same as before.





## Copy a Phone Book Entry

[Phone Book Entry Details] window  
 >> >> **Copy to USIM** or **Copy from USIM** >> >> **YES** >>

## Delete Entries

[Phone Book Entry List] window  
 >> Select an entry >> >> **Delete Data** >>

- To select *Delete This*  
 >> **Delete This** >> >> **YES** >>
- To select *Delete selected*  
 >> **Delete selected** >> >> Select entries >> >> **YES** >>
- To select *Delete All*  
 >> **Delete All** >> >> Enter Security Code >> >> **YES** >> >> **YES** >>

## Delete Items from an Entry

[Phone Book Entry Details] window  
 >> to select an item >> >> **Delete Data** >> >> **Delete Phone No.**, **Delete Mail Add.**, **Delete Address**, **Delete Birthday**, **Delete Memorandums**, **Delete Image** or **Delete This** >> >> **YES** >>

## Delete an Entry from USIM Card

>> **Tools** >> >> **USIM Operation** >> >> Enter Security Code >> >> **Delete** >> >> **USIM** >> >> **Phone Book** >> >> Search Phone Book >> Select an entry >> >> >> **YES** >>

# S! Addressbook Back-up

## Start Here

[S! Addressbook Back-up] window  
 ..... P. 2-27

## Delete Synchronize Log

[S! Addressbook Back-up] window  
 >> **Sync Log** >> >> Select Log >>

- To select *Delete This*  
 >> **Delete This** >> >> **YES** >>
- To select *Delete selected*  
 >> **Delete selected** >> >> Select Log >> >> >> **YES** >>
- To select *Delete All*  
 >> **Delete All** >> >> Enter Security Code >> >> **YES** >>

