



Music Player & S! Appli

About Music Player	9-2
Playback Windows	9-3
Downloading Music	9-4
Music Playback	9-5
Playing Music.....	9-5
Playing Music From Quick Launcher	9-6
Using Playlists	9-6
S! Appli.....	9-8
About S! Appli.....	9-8
Downloading S! Appli	9-8
Activating S! Appli	9-9
About モバイル便利帳 (Mobile Organizer)	9-9
Activating モバイル便利帳 (Mobile Organizer)	9-9
Searching Mobile Organizer Contents ..	9-10
Advanced Features	9-11
Music Player.....	9-11
S! Appli	9-13




About Music Player

Use Music Player to play and organize songs on handset.

- Access the Internet to download music.
- Videos can also be played with Music Player.
- Some files are unplayable depending on their format.

- Play not possible with insufficient battery charge.
- Alarm notification, received calls, etc. while playing will pause play.

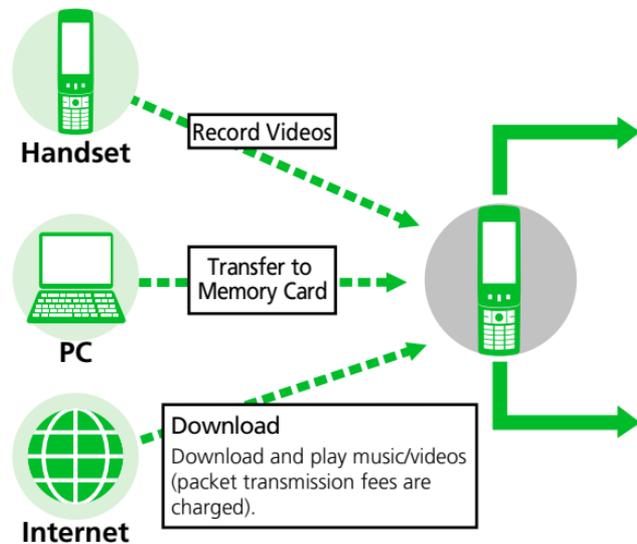

Play & Organize Songs/Videos on Handset

Save Music

Inbox

Save downloaded and transferred music from Memory Card.

Memory Card

Save music moved/copied from handset or transferred from PC.

Save Videos

Inbox*

Save shot/downloaded videos, and videos transferred from Memory Card.

Camera*

Save recorded videos.

Memory Card

Save videos moved/copied from handset or transferred from PC.


* Saved videos can be edited as well.

Tip


- Be sure to save music files from PC to Memory Card in the following folder.
¥PRIVATE¥MYFOLDER¥My Items¥Music



Playback Windows

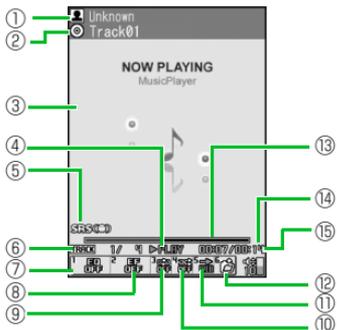

Normal Screen Mode

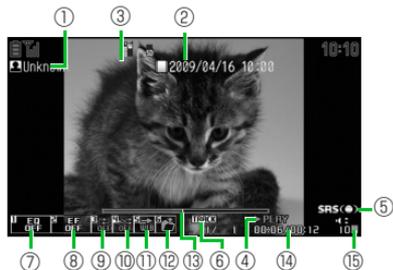

Full Screen Mode
(For Video Playback)

①	Artist Name <Creator>*
②	Title
③	Playback Image <Video>*
④	Playback Status ▶PLAY Play ⏸PAUSE Pause ▶▶FF Fast Forward ◀◀REW Rewind ▶SLOW Slow Play ⏩PLAY Fast Play
⑤	Sound Effect on (always on)
⑥	Current Track/Total Tracks in Folder (Current File Number/Total Files in Folder)
⑦	Equalizer EQ Equalizer OFF Pop Live Vocal Break CLight Wante Ballad Rap Concert Rock Kiss Loud For each genre of music USER1 USER2 USER3 User settings
⑧	Sound Effect EF Effect OFF TruMute CS31ch Bassenhb Singsive Clearthe Beat LceRge ReRime LiveHell For different song styles USER1 USER2 USER3 User settings
⑨	Repeat Mode OFF ⏮ Repeat All ⏭ Repeat One

⑩	Shuffle Mode ON OFF
⑪	To Web Connect to the URL in the song.
⑫	Song/file Selection Change the playback song or file.
⑬	Playback Position I indicates the current playback position. Use ⏮ to move playback position during pause.
⑭	Elapsed Playback Time/Total Playback Time
⑮	Volume

* Descriptions in < > apply to video playback.



Downloading Music

- Check the fees, expiration date, etc. on the download site.

1 >> **MUSIC** >> >>
Download Music >> >>
YES >>

■ To Search for Songs to Download
>> **Search Music** >> >> **YES** >>

2 Follow onscreen instructions



Playing Music


1 **MUSIC**

2 Select a folder



Song List Window

3 Select a song

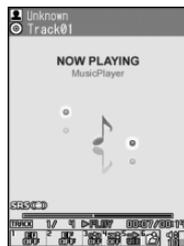

Music Player Playback Window
(Video Player Playback Window)

Tip

- To play videos downloaded or recorded with camera:
 - ⇨ *Data Folder* ⇨ ⇨ *Videos*
 - ⇨ ⇨ Specify a video to play

Available Keys during Playback

⊙ While Handset is Open

Pause/Play	
Adjust Volume	
Play from Beginning Play Previous Song or Video	
Play Next Song or Video	
Rewind	Press and hold
Fast Forward	Press and hold
Move Playback Position	during pause
Select a Song or File	or 6

Set Equalizer	1 ¹
Set Sound Effect	2 ¹
Set Repeat Mode	3 ¹
Set Shuffle Mode	4 ¹
Access the Internet	5
Toggle Normal Screen and Full Screen	9
End Playback	²

- 1 Press the key to toggle settings.
- 2 Available when playing videos.



Playing Music From Quick Launcher

- Use Quick Launcher to activate Music Player from closed position.
- Activates in Portrait view for music playback even when handset is closed.

1 Press Front Button (□ (Top), □ (Bottom) or ⌨)

■ Returning to Standby
 ▶▶ ⌨ or Press and hold ⌨

2 □ (Top) or □ (Bottom) to select ⌨ ▶▶ ⌨



Music Player Playback Window
 (Video Player Playback Window)

■ Returning to Standby

▶▶ Press and hold ⌨

Available Keys in Playback Window

Play/Pause	⌨
Adjust Volume (Volume <high>/<low>)	□ (Top) or □ (Bottom)
Play next song or video	Press and hold □ (Top)
Play from start or play previous song	Press and hold □ (Bottom)
End Music Player	Press and hold ⌨

Note

- When a song has not yet been played, you must first select the song with handset open before listening.

Using Playlists

Use playlists to play songs in your preferred order, by genre or artists, or just replay your favorite songs.

- Songs saved on memory card can also be added to playlists.

Creating a Playlist

1 ■ ▶▶ **MUSIC** ▶▶ ■ ▶▶ **Playlist** ▶▶ ■



Playlist List Window

2 □ ▶▶ **Create Playlist** ▶▶ ■

3 Select a folder ▶▶ ■ ▶▶
 Select a song ▶▶ ■

Repeat this step to specify other songs.

4 When all songs are specified ▶▶

⌨ ▶▶ Enter playlist name ▶▶
 ■



■ To Start Playing the Playlist



Playing a Playlist

1 [Playlist List] window ▶▶

Select a playlist ▶▶

■ To Play a Playlist from the Beginning

▶▶ Select a playlist ▶▶



Playlist Song List Window

■ To Play All Songs

▶▶ All Tracks ▶▶ (twice)

2 Select a song ▶▶

More Features

Advanced

Playing Music

- ❖ Resume Playback
- ❖ File Property
- ❖ Repeat
- ❖ Set Preferred Sound Quality
- ❖ Set Preferred Sound Effect
- ❖ Specify Play Start Position
- ❖ Use a Different Function While Playing Music

(▶▶ P. 9-11)

Organizing Songs

- ❖ Set a Song as Ringtone
- ❖ Search for Songs
- ❖ Change Order of Songs
- ❖ Check Volume of Saved Music

(▶▶ P. 9-12)

Playlists

- ❖ Add Songs to Playlist
- ❖ Change Order of Playlist Songs
- ❖ Cancel Playlist Songs
- ❖ Edit a Playlist Name
- ❖ Add All Music in Memory Card to Playlist
- ❖ Copy a Playlist

- ❖ Check Playlist Information
- ❖ Delete Playlists

(▶▶ P. 9-12)

Customize

Playback Window

- ❖ Change Playback Window Mode (Video Playback)
- ❖ Change Design of Playback Window (Song Playback)
- ❖ Set Image Display Size (Video Playback)

(▶▶ P. 14-35)



About S! Appli

S! Appli are applications designed for SoftBank handsets. Download games and other applications.

About Lifestyle-Appli

Handset includes Osaifu-Keitai® compatible S! Appli “Lifestyle-Appli” (P. 11-3). Change Lifestyle-Appli settings as any other S! Appli.

About Network S! Appli

Since network S! Appli require network connection, transmission fees are incurred. A confirmation may appear when an application is connecting to the network. Follow onscreen instructions.

Tip

- For information on transmission fees, contact SoftBank Customer Center, General Information (P. 15-52).

About License Information

To check Java™ and JBlend™ license information:

- 1 **S! Appli** **Information**

Downloading S! Appli

- 1 **S! Appli** **S! Appli List** **Download S! App** **YES**

- 2 **Select an S! Appli** **(twice)**

- **To Activate S! Appli Right Away** **YES** **Select an S! Appli**

- **To Activate S! Appli Later** **NO**

Tip

- For how to download Lifestyle-Appli, see P. 11-3.
- See S! Appli’s Help menu or the download site for operational information.

Note

- Check the battery level before downloading S! Appli. If the battery level is low, download may fail.
- If you replace USIM Card due to damage or loss, downloaded S! Appli are no longer available.
- If you initialize handset when using an S! Appli moved to Memory Card, the S! Appli will no longer be usable. You will need to download it again.
- When using an S! Appli moved to Memory Card, using the procedures below will resave the S! Appli to your handset and the S! Appli in Memory Card will no longer be usable.
 - Download the same S! Appli with no Memory Card inserted
 - Download the same S! Appli with different Memory Card inserted
 Use an S! Appli resaved to handset as it is in handset, or again move it to Memory Card.



Activating S! Appli

- 1 **S! Appli**
S! Appli List



S! Appli List Window

- 2 **Select an application**

- To End S! Appli**
End

Tip

- S! Appli is paused when a call arrives. S! Appli resumes when the call ends.


About モバイル便利帳 (Mobile Organizer)

モバイル便利帳 (Mobile Organizer) (Japanese) is an S! Appli for getting more enjoyment from camera or to search useful lifestyle information from pre-installed contents. モバイル便利帳 (Mobile Organizer) contains the following contents.

Contents	Entries	Publisher
Cute Photographer	42 and 6 columns	翔泳社
写真でつくる雑貨 (Photo-It Crafts)	32	雷鳥社
お役立ちマナーブック (Useful Etiquette)	approx. 800	旺文社

Activating モバイル便利帳 (Mobile Organizer)

- 1 **S! Appli** **S! Appli List** **モバイル便利帳**

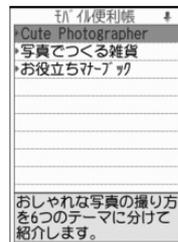

モバイル便利帳 (Mobile Organizer) List Window


Cute Photographer～おしゃれな写真が撮れる本～(翔泳社) : ©2008 SHOEISHA Co., Ltd. TERUAKI NAGAMINE
 写真でつくる雑貨 (雷鳥社) : ©2008 saorin
 Printed in Japan
 お役立ちマナーブック (旺文社) : ©旺文社 1989

Tip

- Alternatively, access from a shortcut (P. 2-5).



2 Select contents ▶▶

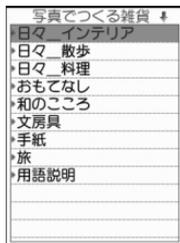

Contents Top Menu

Searching Mobile Organizer Contents

Search for entries in pre-installed contents by selecting headwords one after another.

<Example> Viewing information for Photo-It Crafts

1 Select an entry ▶▶ Select an item ▶▶



Mobile Organizer Page

More Features

Advanced

S! Appli

- ❖ Check S! Appli Information
- ❖ Check Volume of Saved S! Appli
- ❖ Delete an S! Appli
- ❖ Change Mobile Organizer Font Size (▶ P. 9-13)

Customize

When Running S! Appli

- ❖ Set Sound Volume
- ❖ Set Vibration
- ❖ Set Backlight
- ❖ Set Blinking of Backlight
- ❖ Allow/Prohibit S! Appli to Connect to Network
- ❖ Allow/Prohibit S! Appli to Write Personal Information
- ❖ Reset Security Settings of S! Appli (▶ P. 14-35)

S! Appli Settings

- ❖ Reset S! Appli Settings
- ❖ Delete All S! Appli (▶ P. 14-36)



Music Player

Start Here

- [Music Player Playback] window P. 9-5
- [Song List] window P. 9-5
- [Playlist List] window P. 9-6
- [Playlist Song List] window P. 9-7

Playing Music

Resume Playback

■ >> MUSIC >> ■ >> Resume Play >> ■

File Property

[Music Player Playback] window >> [P] >> File Property >> ■ >> File Property >> ■
 View file information.

Repeat

[Music Player Playback] window >> [P] >> Action Setting >> ■ >> Repeat Setting >> ■ >> All Repeat or Single Repeat >> ■

Set Preferred Sound Quality

[Music Player Playback] window >> [P] >> Action Setting >> ■ >> Sound Effect >> ■ >> Equalizer >> ■ >> Select user setting 1 to 3 >> [x] >> Set level for each wavelength >> ■

- To return sound quality to initial state >> Select user setting 1 to 3 >> [x] (twice)

Set Preferred Sound Effect

[Music Player Playback] window >> [P] >> Action Setting >> ■ >> Sound Effect >> ■ >> Effect >> ■ >> Select user setting 1 to 3 >> [x] >> Set level for each effect >> ■

- To set by existing effects >> Select user setting 1 to 3 >> [x] >> [x] >> Select effect >> ■
- To return sound effect to initial state >> Select user setting 1 to 3 >> [x] (twice)

Specify Play Start Position

[Music Player Playback] window >> ■ >> Specify play start position with [C] >> ■

Use a Different Function While Playing Music

[Music Player Playback] window >> [F] >> Switch to BGM >> ■ >> Activate another function



Organizing Songs

Set a Song as Ringtone

[Song List] window >> Select a song >> >> **Select Ring Tone** >> >> Select an item >>

Search for Songs

[Song List] window, [Playlist List] window or [Playlist Song List] window >> >> **Search** >> >> **Title** >> >> Enter condition >>
 Select a song from search results and press to play it.

Change Order of Songs

[Song List] window or [Playlist Song List] window >> >> **Sort** >> >> Select a criterion >>

Check Volume of Saved Music

[Song List] window >> >> **Memory Info** >>

Playlists

Add Songs to Playlist

[Playlist Song List] window >> >> **Edit Playlist** >> >> **Add Music** >> >> Select a folder >> >> Select songs >> >> >> **YES** >>
 The songs you specified are added at the end of the playlist.

Change Order of Playlist Songs

[Playlist Song List] window >> Select a song >> >> **Edit Playlist** >> >> **Sort Playlist** >> >> Select a position >>

Cancel Playlist Songs

[Playlist Song List] window >> Select a song >> >> **Edit Playlist** >> >> **Release Settings** >>

- To select *Release This* >> **Release This** >> >> **YES** >>
- To select *Release Selected* >> **Release Selected** >> >> Select songs >> >> >> **YES** >>
- To select *Release All* >> **Release All** >> >> Enter Security Code >> >> **YES** >>

Edit a Playlist Name

[Playlist List] window >> Select a playlist >> >> **Edit Playlist Name** >> >> Edit playlist name >>

Add All Music in Memory Card to Playlist

[Playlist List] window >> >> **Update All Tracks** >> >> **YES** >>



Copy a Playlist

[Playlist List] window >> Select a playlist >> [F] >> **Copy to Playlist** >> [■]

Check Playlist Information

[Playlist List] window >> Select a playlist >> [F] >> **Playlist Info** >> [■]

Delete Playlists

[Playlist List] window >> Select a playlist >> [F] >> **Delete Playlist** >> [■]

- To select *Delete This* >> **Delete This** >> [■] >> **YES** >> [■]
- To select *Delete Selected* >> **Delete Selected** >> [■] >> Select playlists >> [■] >> [☒] >> **YES** >> [■]
- To select *Delete All* >> **Delete All** >> [■] >> **YES** >> [■]

S! Appli

Start Here

[S! Appli List] window..... P. 9-9

[Mobile Organizer Page] P. 9-10

Check S! Appli Information

[S! Appli List] window >> Select an S! Appli >> [F] >> **Properties** >> [■]

Check Volume of Saved S! Appli

[S! Appli List] window >> [F] >> **Memory Info** >> [■]

Delete an S! Appli

[S! Appli List] window >> Select an S! Appli >> [F] >> **Delete** >> [■] >> **YES** >> [■]

Change Mobile Organizer Font Size

[Mobile Organizer Page] >> [F] >> **文字サイズ** >> [■] >> **普通 / 小** >> [■]

