

Clock, Display & Sounds	. 14-2
Phone Book & Calls	14-16
Mail	14-22
Internet	14-26
τν	14-28
Camera	14-31
Player & S! Appli	14-35
Entertainment	14-37
Other Settings	14-39





<u>Clock</u>

Start Here Start

Hide Clock	Clock Display Display Display ON or OFF
Clock Size	▶ Clock Display ▶ ■ ▶ Size ▶ ■ ▶ Select a size ▶ ■
Clock Color	➢ Clock Display ■ Color ■ Black or White ■
Set Auto Time Adjustment	▶ Set Main Time ▶ ■ ▶ Auto Time Adjust ▶ ■ ▶ Auto ▶ ■ ▶
	Select a time zone 🕨 🔳
	 Press I to change city/area name in Time Zone Selection field.
Manually Adjust Time	▶ Set Main Time ▶ ■ > Auto Time Adjust > ■ > Manual(Date Time
	Set) >> Select a time zone >> => Enter date and time >> =>
	・ Press 🖻 to change city/area name in Time Zone Selection field.
Summer Time	🏕 Set Main Time 🕨 🔳 🕨 Summer Time 🕨 🔳 🕨 ON 🕨 🔳
Time Zone (Sub Clock)	Set Sub Clock → ■ → Display Method → ■ → Always → ■ → YES
	▶ ■ >> Select a time zone >> ■
	・ Press 回 to change city/area name in Time Zone Selection field.
Hide Sub Clock	▶ Set Sub Clock ▶ ■ ▶ Display Method ▶ ■ ▶ OFF ▶ ■
Summer Time (Sub Clock)	Image: Set Sub Clock Image: Image
Time Zone Major City (Sub Clock)	🏕 Set Sub Clock 🕨 🔳 🕨 Area Name 🕨 🔳 🏓 Display 🕨 🔳



<u>Alarm</u>

Start Here 🔳 🕨 Settings 🕨 🔳 🕨 Clock 🕨 🔳

Set Priority at Alarm Notification Time	Alarm Setting >> • • • • • • • • • • • • • • • • • •
Change Alarm Tone	Clock Alarm Tone Set Select an item Set an alarm
	tone

Auto Power On/Off

Set Auto Power On/Off	■ >> Settings >> ■ >> Clock >> ■ >> Auto Power ON or Auto Power
	OFF ▶ ■ > ON > ■ > Enter time > ■ > 1 Time or Daily > ■

<u>Kisekae Theme</u>



Save Current Kisekae Theme as	お気に入り (Favorites) マ マ ア ア ア ア Take Setting Info ア マ ア ア YES ア
Favorite	 The current kisekae theme can later be recalled collectively from お気に入り when they are changed.
Change Each Item for Favorites	🕨 お気に入り (Favorites) 🕨 🖻 🕨 Select an item 🕨 🔳 🕨 Set an image
Clear All Favorite Settings	⇒ お気に入り (Favorites) ⇒ ● ◆ Reset Setting Info ⇒ ● ◆ YES ●

Display Settings

Wallpaper	 Display Setting ➡ Stand-by Display ➡ My Picture or Videos ➡ Set an image/video (Select a layout Gita (twice))
Show Calendar in Standby	 Display Setting >> I >> Stand-by Display >> I >> Calendar >> I Background >> I >> Set an image >> Select a layout >> II (twice) Select No Background if you do not want any image in the background of the calendar. Press I, use I to select the calendar and press I to operate it. Use I to switch to the previous/next month. Press I to activate Schedule.
Set Random Display of Images in Standby	 Display Setting >> I >> Stand-by Display >> I >> Random Display >> Select a folder >> I >> Select a layout >> I >> Images switch at random each time handset is opened or returns to Standby.



Set a Wake-up Image	 Display Setting Wake-up Display My Picture Set an image
Set a Wake-up Message	Display Setting >> • >> Wake-up Display >> • >> Message >> • • >> >> Point Provide the state of the state
Set an Outgoing Call/Message Image	 Display Setting Dialing, Video Call Dialing or Mail Sending Set an image
Set an Incoming Call Image/Video	 Display Setting Calling or Video Call Calling Select Calling Disp. My Picture or Videos Set an image/video
Set an Incoming Message Image	 Display Setting Display Setting Mail Receiving ■ Set an image/video
Set an Image for New Messages or Received Result Window	Display Setting >> Retrieve New or Mail Rec'd Result >> Set an image
Display Color Scheme	Display Design
Set a Battery Level Indicator/Signal Strength Indicator Pattern	 Display Design → ■ → Icon Pattern → ■ → Battery Icon or Antenna Icon → ■ → Select a pattern → ■
Change Softkey Color	Display Design >> Soft Key >> Select a color >> I
Set Font Type	 Font >> Font Type >> I >> Gothic or Ming-cho >> I Alternatively, press and hold I in Standby to make font settings.
Set Font Thickness	 Font >> Thickness >> Thin or Bold >> Alternatively, press and hold in Standby to make font settings.



Set Font Sizes Collectively	 Font >> Character Size >> Standard or X-large >> Items settable with Separate Setting for Character Size can be set collectively. Alternatively, press and hold Items settable to make font settings.
Set Font Size for Each Function Window	 Font >> Character Size >> •> >> Separate Setting >> •> Select a window >> •> Select a size >> •> •> •> Alternatively, press and hold <-> in Standby to make font settings. In PC Site Browser, this procedure is available in Small Screen view.
Interface Language	
Set Image List View	Viewer Settings Picture or Title
Guard from Prying Eyes	 Screen Filter >> • >> ON >> • Alternatively, press and hold in Standby to toggle Screen Filter on and off. Display has a white hue and a narrower viewing angle when on. Screen Filter is off when handset is turned back on.
Guard from Prying Eyes Display Quality	 Screen Filter >> • >> ON >> • • Alternatively, press and hold B in Standby to toggle Screen Filter on and off. Display has a white hue and a narrower viewing angle when on. Screen Filter is off when handset is turned back on. Image Display Mode >> • >> Normal, Vivid or Dynamic >> • • Normal is standard quality, Vivid is brighter quality, and Dynamic is high-contrast quality. The Visual Image Effect setting in TV Effect has preference for TV display quality. A preview image for each mode appears during selection in Image Display Mode to check the effect.

14-6



Backlight

Start Here Settings Sett

Set Backlight & Power Saving	▶ Lighting ▶ ■ ▶ ON or OFF ▶ ■ (▶ Select time Backlight is lit ▶
	■) → ON or OFF → ■ (→ Enter a time before the Power Saver Mode is
	activated)
	• When the Power Saver Mode is activated, nothing appears in Standby and Keypad backlight flashes. Pressing any key cancels the Power Saver Mode.
Set Backlight during Charging	Charging >> Standard or All Time ON >>
Set Whether to Light Keypad Backlight	→ Area → ■ → LCD+Keys or LCD → ■
Set Brightness of Backlight	Brightness ON or OFF Select a Level
	 Set Brightness to Level 6 to use Display with the maximum brightness. Backlight is Level 4 by default. A higher setting reduces battery life.

Shortcuts

Start Here Settings >> Setting

Set Shortcut Theme	Shortcut I ■ Select a theme I > YES I
	 Press



Change Icon Design of a Theme	 ▶ Shortcut ▶ ■ >> Select a theme >> □ >> Select an icon >> R >> CHG Icon Image >> ■ >> Select Icon Image or Default Icon Image >> ■ (>> Set an icon)
Change Order of Icons of a Theme	 ▶ Shortcut ▶ ■ ▶ Select a theme ▶ □ ▶ Select an icon ▶ □ ▶ Sort ▶ ■ ▶ Select a position ▶ ■
Copy Icons to Another Theme	 Shortcut → ■ → Select a theme → □ → Select an icon → □ → Copy → ■ → Copy This, Copy Selected or Copy All → ■ → Select a destination theme → ■ (→ Select icons → ■ → □) When Copy Selected or Copy All is selected, select YES and press ■ at the end of the procedure.
Move Icons to Another Theme	 ▶ Shortcut ▶ Select a theme ▶ Select an icon ▶ Move This, Move Selected or Move All ▶ Select a destination theme ▶ (▶ Select icons ▶ (□) ▶ YES ▶ (■)
Delete Icons of a Theme	 Shortcut Select a theme Select an icon P To select Delete This Delete This YES To select Delete selected Delete selected Select Delete All Delete All YES Select Delete All YES
Show New Message Indicator as 3D Animation	→ 3D Display Setting → ■ → ON → ■



Menu Display Settings

Start Here Start

List View and Details View	 Menu Display List or Detail Select View for menus from Settings
Set Main Menu Theme	Theme → ■ → Select a theme → ■
Change Icon Design (Original Theme)	 Theme >> I >> Original Theme >> I >> Select a menu item >> I Set an image Change Main Menu icons to any preferred image.
Change Background (Original Theme)	 Theme >> I >> Original Theme >> I >> Background Image >> I >> Set an image Change Main Menu background to any preferred image.
Reset Original Theme Settings	 Theme >> I >> Original Theme >> I >> Select a menu item >> IP Reset or All reset >> II >> YES >> II This procedure is only available when any Original theme settings have been changed.
Save Last Selected Menu Item to Memory	Memory Focus → ■ → ON → ■



Start Here Start Here

Add a Menu Item to Original Menu	→ <not recorded=""> → □ → □ to select a function → □ (→ YES → □)</not>
Change Order of Original Menu Items	Select an item Image: Imag
Cancel Original Menu Items	Select an item Image: Imag
Reset Original Menu	▶ Reset Org. Menu ▶ YES

Standby Indicators

Enable Indicator Selector	Settings >>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>
	 The indicators at the top of Display are enabled by pressing in Standby. Use sto select an indicators and press in access the corresponding function.

Incoming Call/Message Alerts

Start Here Settings >> Incoming Call >>	
Adjust Ringtone Volume	▶ Ring Volume ▶ ■ ▶ Phone, Video Call or Mail ▶ ■ ▶ □ to adjust
	 When Step is set, the ringtone volume increases every three seconds. When Silent
	is set, no ringtone sounds.



Set a Ringtone	 Select Ring Tone Phone, Video Call or Mail Select Ring Tone Select an item Select a folder Set a ringtone
Set Random Playback of Melodies as Ringtones	 Select Ring Tone Phone, Video Call or Mail Select Ring Tone Random Melody Select a folder Melodies in the selected folder are played at random as ringtones.
Set Ringing Duration of Incoming Message Ringtone	 Mail Ring Time Mail Mail Mail N N N
Set Vibration*	 Vibrator >> Phone, Video Call or Mail >> Select a pattern >> When Melody Linkage is set, handset vibrates to the melody set as ringtone.
Set Illumination Color	 Illumination Illumin
Set Illumination Pattern	 Illumination >> • >> Set Pattern >> •> Standard or Melody Linkage >> • Even when Melody Linkage is set, Illumination may not flash to the melody depending on the set ringtone.
Set Illumination to Flash for Missed Calls/New Messages	Illumination Illumination Illumination Illumination Illumination Illumination

* When Vibrator is not set to OFF, be careful not to let handset fall off a desk or slide too close to a stove, etc. when it vibrates.



Set an Incoming Call/Message Image	 ▶ Select Ring Tone ▶ ■ ▶ Phone, Video Call or Mail ▶ ■ ▶ Select Calling Disp. or Select Receiving Disp. ▶ ■ (▶ My Picture or Videos ▶ ■) ▶ Set an image/video
Show Phone Book Entry Images for Incoming Calls/Messages	Disp. Phone Book Image ■ → ON → ■

Start Here Start Here Settings Start Here

Open New Mail Window by Opening Handset	Image: Setting When Open Image: Image: Image: Setting When Open Image: Imag
Open Missed Calls Window by Opening Handset	▶ Setting When Open ▶ ■ ▶ Display Missed Call ▶ ■ ▶ □

Answering Incoming Calls

Set to Answer Calls by Pressing Any Key Except Send Key	 Answer Setting Any Key Answer Answer incoming voice calls by pressing a key from ,
Set to Mute Ringtone by Pressing Any Key Except Send Key	 ▶ Answer Setting ▶ ■ ▶ Quick Silent ▶ ■ • Mute the ringtone by pressing a key from ○ – ⑨, ★, ?>>>, ♥ (for voice calls only), ♥, ♥, ♥ and ♥ or by opening handset.

Start Here Settings Side-style Setting

Set to Answer Calls by Opening	▶ Setting When Open ▶ ■ ▶ Answer Incoming ▶ ■ ▶ □
Handset	 When set to OFF, operation follows Answer Setting.

Manner Mode

٤٥́З

Start Here
Settings
Incoming Call
Incoming Call

Set Manner Mode Type	 Manner Mode Set Select a Manner Mode When Super Silent is set, all tones emitted through the earpiece are also muted.
Configure Original Manner Mode	→ Manner Mode Set → ● → Original → ● → Set each item → □
Set Time for Auto Manner Mode Start	 Manner Start Time → ■ → Start Time Set1 or Start Time Set2 → □ → □ → ■ → Enter time → ■ → □ → □ → 1 Time, Daily (■) or Select Day (□) → ■ → (Select day → □) → □
Set Time for Auto Manner Mode Release	 Manner Release Time → ■ → Release Time Set1 or Release Time Set2 → □ → □ → ■ → Enter time → □ → 1 Time, Daily (■) or Select Day (□) → ■ → (Select day → □) → □
Toggle Auto Manner Mode Start and Release On/Off	 Manner Start Time or Manner Release Time → ■ → Select an item → ∞ On/off toggles each time you press ∞. Settings (e.g., time) are not updated. Use the following procedure to cancel all settings at once. → Release All → ■ → YES → ■

Customization



Checking Call Logs

Start Here Settings Incoming Call Incoming Call

Change Colors of Names, Phone	Disp. Call/Receive No.
Numbers and E-mail Addresses in Call and Message Log Windows	 Pressing ☐ toggles the color palette between 16 colors and 256 colors. To reset the color settings to default, press 𝔄.

Sounds

Start Here Settings >> Setting

Set to Play Charging Start/End Tones	Description of the second by ■ >>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>
Sound Emitted at Level 1 for First three Seconds	 Volume Restriction >> Applies to ring tone and alarm. After three seconds pass, ring tone and alarm sounds at set volume.
Start Here 🔳 >> Settings >> 🔳 >> Slide-style Setting >> 🔳	
Set Handset Open/Close Sound	 Slide Sound >> • >> Open Sound or Close Sound >> • >> Melody >>> >>> Select a sound >>> •>> Ring Time >>> •>> Select time sound emitted >>> • >>> Slide and close sounds not emitted when set OFF.



Start Here Start

Record Sound to Set as Ringtone or Outgoing Message	 Select an item Image: YES Press Image: to stop recording.
Play Recorded Sound	Select an item with "★"
Delete Recorded Sound	Select an item with "★" IP → Erase → I → YES → I

Earphone-Microphone

Start Here Settings >>

Audio Output	★ External Connection ★ ■ ★ Headset Usage Setting ★ ■ ★ Headset+speaker or Headset Only ★ ■
Microphone Setting	★ External Connection ★ ■ ★ Headset Mic. Setting ★ ■ ★ Built-in Microphone or Headset Microphone ★ ■
Answer Calls Automatically	 ▶ External Connection ⇒ ■ → Auto Answer Setting ⇒ ■ → Phone or Video Call ⇒ ■ → ON ⇒ ■ → Enter ring time
Save a Phone Number to Dial with an Earphone-Microphone	 Dialing >> • >> Headset SW to Dial >> • >> Voice Call >> • >> >> Select a Phone Book search method >> • >> >> Select an entry >> • >> Select a phone number >> • •



Phone Book

Set Preferred Search Method	[Phone Book Search] window (P. 2-21) → Select a search method → ♥ → OK → ■
	• To cancel the preferred search method, press \fbox{pup} in Phone Book Search window, select the search method with " \bigstar ," and then press \boxdot .
Change Group Name	 [Phone Book Entry List] window (P. 2-21) → P → Group Setting → Select a group → ⇒ Edit group name → The name remains the same only for No Group.
Do Not Send Phone Book Entry Images via Infrared	■ >> Tools >> ■ >> Forwarding Image >> ■ >> OFF >> ■

S! Addressbook Back-up

Start Here
Start

Set Auto Synchronize	Auto Sync Settings → ■ → ON/OFF → ■ → ON → ■ → Enter
	cycle and day → ■) → Select synchronize type → ■ → YES → ■ (twice)
Check Auto Synchronize Settings	Auto Sync Settings ► ■ Confirm Settings ■



Outgoing Calls

Start Here Settings >> Settings >> Start Here

Save Touch Tones	 Press and hold * to enter "P" (Pause).
Set Numbers after "★" as Sub Address	Sub-address Setting ■ >> ON >> ■
Save Area Code and Country Code as Prefix Numbers	▶ Prefix Setting ▶ ■ ▶ Select an item ▶ □ ▶ Enter name ▶ ■ ▶ Enter prefix numbers ▶ ■

International Calls

Start Here Settings >> Settings >> Settings >> Settings >> Dialing >> Settings >> Settings

Change International Access Code Automatically Dialed with "+"	 → Auto Int'l Call Set. → ■ → ON → ■ → Select a country code → ■ → 国際発信 → ■
	 When <i>OFF</i> is set, the international access code is not entered when you press and hold <u>O</u>. Select an international access code you set in <i>IDD Prefix Setting</i>.
Change a Country Code	★ Country Code Setting ★ ■ ★ Select an item ★ □ ★ Enter country name ★ ■ ★ Enter country code ★ ■
	-



Call Settings

Start Here Settings >> Settings >> Talk >> T

Set Noise Reduction	Noise Reduction → ■ → ON → ■
Set Weak Signal Alarm	Quality Alarm
	 Calls may be disconnected without sounding the alarm when signal suddenly becomes too weak.
Set Reconnection Tone	▶ Reconnect Signal ▶ ■ ▶ High Tone or Low Tone ▶ ■
Set a Hold Message	 Set Hold Tone On Hold Tone Select a hold tone (>)



Call Costs

Start Here ■ >> Settings >> ■ >> Call Time/Charge >> ■

Set/Cancel a Maximum Call Cost	Set Max Cost Limit → ■ → Enter Security Code → ■ → □ → □ →
Linit	alarm volume M 🖾 (M) Enter PIN2 M 💷 M Set alarm tone M Set
	 A call ends automatically and ^C/_a appears in Display when the total call cost exceeds the set maximum limit. When the set total call cost limit has been reached, all outgoing calls are disabled. To enable outgoing calls, set the maximum call cost limit to 0: Set Max Cost Limit >> •> Enter Security Code >> •> >> •> •> •> Enter O
Set Auto Reset of Total Call Cost	★ Auto Reset Total Cost ★ ■ ★ Enter Security Code ★ ■ ★ Auto Reset ★ ■ ★ ON ★ ■ ★ Enter PIN2 ★ ■
	• When ON is set, the total call cost indication is automatically reset to zero at twelve midnight on the first day of each month.

* Cost display may not be available depending on your subscription. If unavailable, you will also be unable to set a cost limit.



Video Calls

Start Here Settings Video Call

Set an Image to be Sent during Video Calls	 Select Image Select an item Pre-installed or Original Pre-installed
	 To set an image other than the preinstalled image: Original Change Setting Set an image
Redial Automatically as Voice Call When Video Call Connection Fails	▶ Auto Redial as Voice ▶ ■ >> ON >> ■
Set an Image to Appear in Main Window	 Display Setting Main Display Other Side or My Side
Automatically Switch to Handsfree Mode in Video Calls	Hands-free Switch ■ → ON → ■



Global Roaming

Start Here Settings Int'l Roaming Set Int'l Roam

Set Operator	 <i>NW Search Mode Manual Manual</i>
Activate Network Re-search for an Available Operator	 NW Search Mode Network Re-search Select an operator An operator is available when NW Search Mode is set to Manual.
Set Priority for Operators	 PLMN Setting Select an operator Select a position on the priority list Select a position on the priority list When Auto or Network Re-search is set under NW Search Mode, you are automatically connected to the highest priority operator among available operators.
Show Operator Name While Roaming	Display Operator Name ▶ ■ >> Display ON >> ■



S! Mail Settings

Edit Header/Signature	 Header/Signature Header → ■ Edit Header or Edit Signature Edit header/signature Edit header/signature
Insert Header/Signature Automatically	Header/Signature Insert Setting Header or Signature Image: Signature Im
Set to Check Delivery	 S! Mail Settings >> Delivery Report >> ON >> ON After a recipient receives your S! Mail, a message titled S! Mail Report is sent to your handset.

SMS Settings

Start Here ☑ >> Mail Setting >> ■ >> SMS Settings >> ■

Set to Check Delivery	► SMS Report Request ► ● ► ON ► ●
	• After a recipient receives your SMS message, a message titled <i>SMS Report</i> is sent to your handset.
Set Server Storage Period of SMS	SMS Validity Period >> Select a period >>
Messages	• When <i>None</i> is set, SMS messages you send are not stored on the server.
Set SMS Input Language	>> SMS Input Character >> • Japanese (70char.) or English (160char.)



Incoming Message Settings

Start Here ☑ Mail Setting ■

Customize E-mail Address	Custom Mail Address >> I >> Follow onscreen instructions
Set Priority When Receiving Messages during Operation	 Receiving Setting Alarm Preferred or Operation Preferred
Do Not Show Image Indicators	Image/Keyword >> Image/Keyword >> Image Info >> Image I
Show Keyword Indicators	 Image/Keyword >> • Put a checkmark to Keyword Info >> Select a keyword entry field >> • Enter keyword >> • >> • When handset receives an S! Mail containing the specified keyword, a keyword indicator (10 - (20)) - (20) = (20)) =
Delete Keywords	 Image/Keyword Image/Keyword <!--</th-->
Set Manual Receive	 S! Mail Settings Message Download Manual Manual The entire text is receivable by user operation.



Reply Settings

Change Quotation Marks	■ >> Mail Setting >> ■ >> Header/Signature >> ■ >> Edit Quotation
	Marks 🕨 🔳 🕨 Edit quotation mark 🕨 🔳

Message View Settings & Others

Start Here D >> Mail Setting >> •

Set Number of Text Lines to Scroll	Scroll → ■ → 1 Line, 3 Lines or 5 Lines → ■
Set Font Size of Text	Font Size ■ Select a size ■
Set Message List View	Mail List Disp.
	Subject, Name or Address 🕨 🔳
Play Attached Melodies Automatically	▶ Start Attachment (auto) ▶ ■ >> ON >> ■
	Automatic play only for received mail.
Check Mail Settings	Check Settings
Reset Mail Settings	▶ Reset ▶ ■ ▶ Enter Security Code ▶ ■ > YES > ■



SMS Server Settings

Start Here
Start

Change SMS Center Address	▶ 819066519300 ▶ ■ ▶ Enter SMS Center address ▶ ■ >
	International or Unknown 🕨 🔳
	 Address is 819066519300 by default. SMS may become unavailable if Center address is changed.
Reset to SoftBank SMS Center Address	



Yahoo! Keitai & PC Site Browser

Start Here for Yahoo! Keitai) Press and hold 🖭 🕨 Browser Settings 🕨 🔳

Start Here for PC Site Browser Press and hold 🖙 >> PC Site Browser >> 🔳 >> PC Site Brw. Settings >> 🔳

Set Scroll Unit/Speed	Scroll → ■ → Whole Page, Half Page or Single Line → ■
Set Whether to Show Images or Play Melodies	Downloads >> Images or Play Sounds >> Image
Clear Cache	 Memory Manager Delete Cache Enter Security Code YES I
Delete Cookies	▶ Memory Manager ▶ ■ ▶ Delete Cookies ▶ ■ > YES ▶ ■
Set Whether to Send Manufacture Number	Security ▶ ■ >> Manufacture Number >> ■ >> ON or OFF >> ■
Set Whether to Send Referer	Security Image: Im
Enable/Disable Cookies	Security : Cookie Settings : Select an option :
Set Whether to Activate Scripts	Security Sec
Check Yahoo! Keitai/PC Site Browser Settings	Check Settings or Check PC Site Brw. Set
Initialize Memory Status of Yahoo! Keitai/PC Site Browser	Initialized Browser → ■ → Enter Security Code → ■ → YES → ■



Reset Yahoo! Keitai/PC Site Browser	▶ Reset, or Reset PC Site Brw. Set ▶ ■ ▶ Enter Security Code ▶ ■ ▶
Settings	YES 🕨 🔳

Yahoo! Keitai

Start Here Press and hold 🗵 🕨 Browser Settings 🕨 🔳

Set Font Size	▶ Font Size ▶ ■ ▶ Select a size ▶ ■
Set Flash [®] Sound On/Off	▶ Flash Sound Effect ▶ ■ ▶ ON or OFF ▶ ■

PC Site Browser

Start Here Press and hold 🖙 >> PC Site Browser >> 🔳 >> PC Site Brw. Settings >> 🔳

Do Not Show Alert When Activating PC Site Browser & Switching Browsers	Warning Messages ■ → OFF → ■
Set Page Layout	Display Mode Settings >> PC Screen or Small Screen >> >> Select a size >>

Network Connection Settings

Set Whether to Send Location Information	 Settings Send Location Info Enter Security Code Confirm, Send or Not Send
	Set to <i>Confirm</i> or <i>Send</i> to obtain information.



Channel List

Start Here Start Here Start Here

Change Title of Channel List	Select a channel list
Delete a Channel List	 Select a channel list Delete This YES The currently used channel list cannot be deleted.
Assign Channels to Remote Control Numbers	 ▶ Select a channel list ▶
Delete a Channel	 ▶ Select a channel list ▶ P → Select a channel ▶ P → Delete This > ▶ YES > ■ • Delete a channel from any channel list except for the currently used list.

Image & Sound

Start Here Start Here

Set Subtitle Display	Subtitles → ● → ON (Wide: Bottom), ON (Wide: Top) or OFF → ●
Set Sound Effect	TV Effect >> Sound Effect >> Select an effect >> I
Set Visual Image Effect	TV Effect → ■ → Visual Image Effect → ■ → Select an effect → ■



Save Battery by Dimming Backlight	► ECO Mode → ● → YES → ●
	 Following these steps when ECO Mode is on will cancel ECO Mode.
Keep Backlight Lighted While	Þ Display Light 🕨 🔳 🕨 Constant Light 🕨 🔳
Watching TV	• ECO Mode must be off to set Display Light.
Set Time Backlight Stays Lit While Watching TV	 Display Light Lighting Duration Enter lighting time I
	• ECO Mode must be off to set Display Light.
Show/Hide Icons in Landscape View	>> Icon Always Show >> >> ON or OFF >> >> >> >> >> >> >> >> >> >
	Icons other than for program title no longer appear if set to OFF.
Set TV to Pause or Continue for Incoming Calls (Time Shift Playback)	▶ Time Shift Setup ▶ ■ ▶ Auto ON or Auto OFF ▶ ■

Data Broadcasts

Start Here 🔳 🧦 TV 🔅 🔳 🕨 User Settings 🔅 🔳 🕨 Data BC Settings 🕨 🔳	
Set Whether to Show Images in Pages Accessed from Data Broadcasts	Set Image Disp. <
Enable/Disable Sound Effects of Data Broadcasts	Sound Effect ■ >> ON or OFF ■



Set Whether or Not to Show	▶ Reset Disp. Set. ▶ ■ >> YES or NO >> ■
Confirmation Window Again	 Once you select YES (By default) in a confirmation window for accessing a web page from Data Broadcast, the window no longer appears. Use this procedure to set the window to reappear.

Recording Programs

Continue/End Recording at Low	■ >> TV >> ■ >> User Settings >> ■ >> Rec. While Low Battery >> ■
Battery	>> ON or OFF >>

Other Settings

Start Here ■ >> TV >> ■ >> User Settings >> ■

Check TV Settings	Check TV Settings
Reset Channel Settings	
Clear Data Broadcast Memory	▶ Reset Storage Area ▶ ■ >> Select an affiliated station >>
	 To select Delete This Delete This YES E
	• To select <i>Delete All</i>
	Delete All
Rest TV Settings	



Camera/Video Settings

Reduce Flicker	 Camera Style [BI-DO-RI Viewfinder] (P. 7-6), [Photo Viewfinder] (P. 7-8), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-10) Settings → Flicker → House Auto, Mode 1(50Hz) or Mode 2(60Hz) → House Auto, Mode 1(50Hz)
	 Cellular Style [BI-DO-RI Viewfinder] (P. 7-7), [Photo Viewfinder] (P. 7-9), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-11) Image: Provide the state of th
Set Shutter Sound	● Camera Style [BI-DO-RI Viewfinder] (P. 7-6), [Photo Viewfinder] (P. 7-8), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-10) → ③ → Shutter Sound → → Select a shutter sound →
	 Cellular Style [BI-DO-RI Viewfinder] (P. 7-7), [Photo Viewfinder] (P. 7-9), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-11) Image: Sound → Image: Select a shutter sound → Image: Ima

Camera	
Set View When Shooting With Handset Closed	Camera Style [BI-DO-RI Viewfinder] (P. 7-6), [Photo Viewfinder] (P. 7-8), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-10) → Icon Always Show → IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII
	 The following indicators appear when set to <i>OFF</i>. ●BI-DO-RI Viewfinder BI-DO-RI indicator ●Movie Viewfinder Shooting time
	 Cellular Style [BI-DO-RI Viewfinder] (P. 7-7), [Photo Viewfinder] (P. 7-9), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-11) Image: Physical Style Image: P
Set Shooting Interval/Number of Sti Images for Continuous Mode	 II ● Camera Style [Continuous Viewfinder] (P. 7-13) → ● → Interval/Number → ● Shot Interval → ● 0.5 Seconds, 1.0 Seconds or 2.0 Seconds → ● → Shot Number → ● → Set number with □ (Bottom) or □ (Top) → ● Cellular Style
	[Continuous Viewfinder] (P. 7-13) Interval/Number Image: Shot Interval Image: Shot Interval Image: Shot Number Image: Shot Image: Shot Image: Shot Number Image: Shot Image: Shot Image: Shot Number Image: Shot Image: Shot Image: Shot



File Storage

Toggle Whether to Automatically Save Still Image/Video	 Camera Style [BI-DO-RI Viewfinder] (P. 7-6), [Photo Viewfinder] (P. 7-8), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-10) → Auto Save Set → → → ON or OFF → → → → → → → → → → → → → → → → → →
	 Cellular Style [BI-DO-RI Viewfinder] (P. 7-7), [Photo Viewfinder] (P. 7-9), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-11) Movie Viewfinder] (P. 7-111) Movie Viewfinder] (P. 7-111) M
Set Still Image/Video Save Destination	 Camera Style [BI-DO-RI Viewfinder] (P. 7-6), [Photo Viewfinder] (P. 7-8), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-10) Select to Save Select INBOX to save to memory card. Cellular Style [BI-DO-RI Viewfinder] (P. 7-7), [Photo Viewfinder] (P. 7-9), [Continuous Viewfinder] (P. 7-13) or [Movie Viewfinder] (P. 7-11) Select to
	Save → Phone or microSD → Select folder → • Select INBOX to save to memory card.



Snap Viewer

Hide Guide at Top of Landscape View	● Camera Style [Snap Viewer] (P. 7-19)
	This setting returns to <i>ON</i> when viewer is ended.
	Cellular Style
	[Snap Viewer] (P. 7-20) 🕨 🕫 🕨 Display Icons 🕨 🔳 🕨 OFF 🕨 🔳
	This setting returns to ON when viewer is ended.

* When at full size in zoom view, the guide appears even when *Display Icons* is set to *OFF*.

Playback Window

Change Playback Window Mode (Video Playback)	[Video Player Playback] window (P. 9-5) →
Change Design of Playback Window (Song Playback)	[Music Player Playback] window (P. 9-5) → 🗊 → Action Setting → 🔳 → Change Skin → 🔳 → Select a design → 🔳
Set Image Display Size (Video Playback)	[Video Player Playback] window (P. 9-5)

When Running S! Appli

Start Here S! Appli >> Settings >> I

Set Sound Volume	Sound/Vib Settings → ■ → Volume → ■ → □ to adjust volume → ■
Set Vibration	Sound/Vib Settings I I I I I I I I I I I I I I I I I I I
Set Backlight	Backlight Settings ■ Switch ON/OFF ■ Always ON, Always OFF or Link To Phone Set. ■
Set Blinking of Backlight	Backlight Settings Bink Blink Blink Box ON or OFF D

Start Here 🔳 🕨 S! Appli 🕨 🔳 🕨 S! Appli List 🕨 🔳

Allow/Prohibit S! Appli to Connect to Network	 Select an S! Appli Security Settings Net Access All Permit, Prompt at 1st only, Prompt each time or Disable
Allow/Prohibit S! Appli to Write Personal Information	 Select an S! Appli Security Settings Write User Data All Permit, Prompt at 1st only, Prompt each time or Disable
Reset Security Settings of S! Appli	Select an S! Appli

S! Appli Settings

Start Here
Start

Reset S! Appli Settings	>> Reset >> >> Set to Default >> >> Enter Security Code >> >> YES >> >>
Delete All S! Appli	 <i>Reset</i> <i>Delete All S! App</i> <i>Enter Security Code</i> <i>YES</i>



S! Quick News

Start Here Start

Hide S! Quick News in Standby	
Set Ticker Speed	Standby Settings → ■ → Speed Settings → ■ → Fast, Normal or Slow → ■ (twice)
Set Information to appear in S! Quick News	Standby Settings → ■ → Unread & Read Set. → ■ → Unread Only or Unread & Read → ■ (twice)
Hide S! Quick News Images	▶ Set Image Disp. ▶ ■ >> OFF >> ■ (twice)
Reset S! Quick News Registered Contents	 Del. Quick News YES (twice) Enter Security Code (three times)

S! Info Channel

Start Here 🔳 🕨 Entertainment 🕨 🔳 🕨 S! Info Ch./Weather 🕨 🔳 🕨 Settings 🕨 🔳	
Set Whether to Display Shortcut for New Received Information	S! Information Notif. Den I Den OFF Den I
Set Font Size for Web Pages	▶ Font Size ▶ ■ ▶ Select font size ▶ ■

Start Here Start

Set Font Size for Ticker	➤ Character Size >> ■ >> Separate Setting >> ■ >> S! Info Ch. >> ■ >>
	Select font size 🎔 🔳 🎔 🖾

Weather Indicators

Start Here ■ >> Entertainment >> ■ >> S! Info Ch./Weather >> ■ >> Weather Indicator >> ■ >> Settings >> ■	
Set Whether to Automatically Update Weather Information	Weather Update → ■ → ON or OFF → ■ (→ YES → ■)
Set Whether to Display Weather Indicators in Standby	Standby Setting ■ >> ON or OFF >> ■
Set Whether to Display Shortcut for Received New Weather Information	Weather Notif. ON or OFF



Text Entry

Start Here
Start

Set Text Input Method	▶ Input Mode ▶ ■ ▶ Select an input method ▶ ■
Set Conversion	Conversion D ON or OFF D
Set to Show T9 Suggestion Words in Kanji or Hiragana	▶ T9 Change Mode ▶ ■ ▶ T9 Kanji Change Mode or T9 Kana Change Mode ▶ ■
Clear Learning History	 Clear Learned Enter Security Code T9/Conversion/Pic. or Kana/Kanji Change/Face
Change Font Size	➤ CHG Input Size ► ■ >> Select a size
Set Auto Cursor Movement in 5-Touch Mode	 Auto Cursor Fast, Normal, Slow or OFF Set speed cursor moves when entering characters.

<u>Key</u>

Start Here Settings >> Settings >> Setting >

Set Key Sound Off	★ Keypad Sound ★ ■ ★ OFF ★ ■
Change Function Assigned to Shortcut Key	 Shortcut-key Setting Select a function YES Alternatively, press and hold In Standby to set Shortcut-key Setting. To return to original settings, press select Reset Shortcut-Key, and press



Osaifu-Keitai®

Set illumination for IC Card	■ → Tools → ■ → Osaifu-Keitai → ■ → IC Card Illumination → ■ → ON or OFF → ■
Delete all Lifestyle-Appli	■ → S! Appli → ■ → Settings → ■ → Reset → ■ → Delete All LifeApp → ■ → Enter Security Code → ■ → YES → ■
Set Whether to Enable Opening from Browser	■ >> Tools >> ■ >> Osaifu-Keitai >> ■ >> Interface Settings >> ■ >> Enter Security Code >> ■ >> Browser >> ■ >> ON or OFF >> ■



Resetting Handset

Reset All Settings to Default	
Initialize Handset to Default Status	Initialize
	• When the initialization is completed, handset automatically shuts down and restarts.
	When handset is initialized, all data downloaded and saved on handset are deleted
	and cannot be restored.
	Your Security Code will also be reset to default.