

Entertainment



Mobile Widget	10-2
About Mobile Widget	10-2
Using Mobile Widget (Japanese)	10-2
Downloading Widgets	10-2
Adding Widgets	10-3
S! Quick News	10-4
Using S! Quick News (Japanese)	10-4
S! Info Channel	10-5
Using S! Info Channel (Japanese)	10-5
Books	10-7
Obtaining Books	10-7
Using BookSurfing®	10-7
Advanced Features	10-8
Mobile Widget	10-8
S! Quick News	10-8
S! Info Channel	10-8
Weather Indicators	10-9

10



About Mobile Widget

Download widgets to access the latest information or use various tools.

Access widgets from Standby by pressing .

- Add up to five widgets per Desktop page.
Select from four Desktop pages.
- In addition to preinstalled widgets, download widgets as needed.
- Screenshots are for illustrative purposes and may differ in appearance from actual widgets.

Network Widgets

Some widgets require network connection. Transmission fees incur when using such widgets. Follow onscreen instructions when connecting.

- Packet transmission fees apply for downloading widgets.

Tip

- Contact SoftBank Mobile Customer Center, General Information for details on transmission fees.

Checking Overview of Mobile Widget

- 1  ⇒ **Entertainment** ⇒  ⇒ **Mobile Widget** ⇒  ⇒ **Information** ⇒ 

Using Mobile Widget (Japanese)

Open Desktop page and use widgets. In Standby, press  to show or hide widgets.

Note

- Handset may briefly connect to network after you press . Packet transmission fees apply.

- 1  Use pointer to select widgets.



Active Desktop Page

- 2  ⇒ Select a widget ⇒ 

Select Desktop Page

- 1 [Active Desktop Page] ⇒ 



A ★ appears next to the selected Desktop page.

- 2 Select a Desktop page ⇒ 

Downloading Widgets

Download and add to Desktop page.

- Store up to 100 widgets.

- 1  ⇒ **Entertainment** ⇒  ⇒ **Mobile Widget** ⇒  ⇒ **Widget Contents** ⇒  ⇒ **Download Widget** ⇒  ⇒ **YES** ⇒ 
- 2 Select widgets to download ⇒  (twice)
Installation is complete.



Mobile Widget

3 Paste on Desktop → ● → Select a Desktop page → ● → Move into position → ●

■ To Activate Immediately

→ Open → ●

■ To Check Information

→ Property → ●

■ To Open List

→ Widget Contents → ●

■ To Return to Previous Window

→ Back → ●

Widget List Icons & Indicators



Widget List

①	Contents Icon  Access Download Widget.  Appears when no icon set to widgets.  Uninstalled widgets. Select to start installation.
②	Data Information  Preinstalled widgets  Downloaded widgets  Added to Desktop Page  Sendable by mail  Infrared transmittable  Transferable to Memory Card

Adding Widgets

1 MENU → **Data Folder** → ● → **Widget** → ●

2 Select widgets to add → [] → **Paste on Desktop** → ● → Select a Desktop page → ● → Move into position → ●

Tip

- Add up to five widgets in each Desktop page.

More Features

Advanced

Mobile Widget

- Change Position of widgets
- Delete from Desktop Page
- Place widgets in Foreground or Background
- Update Display

▶ P. 10-8

Customize

Mobile Widget

- Check Auto Synchronize Settings
- Set Whether to Automatically Transmit When Abroad
- Delete All Widgets from Desktop Page
- Set Whether to Use Cookies
- Delete Cookies
- Set Whether to Use Mobile Widget

▶ P. 14-25



Using S! Quick News (Japanese)

Registered news can be updated automatically and checked from Standby.

- Packet transmission fees are incurred for using S! Quick News.

Registering News

<Example> Register news on S! Quick News List

- 1 Press and hold



S! Quick News List

- 2 Add News \Rightarrow \Rightarrow YES \Rightarrow

- 3 Select an item \Rightarrow

Follow onscreen instructions.

Checking Updated Information

- 1 [S! Quick News List] \Rightarrow Select an item \Rightarrow

- 2 Select information \Rightarrow

To check next updated information, press .

More Features

Advanced

S! Quick News

- Manually Update List
- View Descriptions of Registered News
- Delete Registered News/Items

P. 10-8

Customize

S! Quick News

- Set Automatic Updates for S! Quick News
- Hide S! Quick News in Standby
- Set Ticker Speed
- Set Information to appear in S! Quick News
- Hide S! Quick News Images
- Reset S! Quick News Registered Contents

P. 14-25



Using S! Info Channel (Japanese)

This information service automatically receives the latest news, weather and other information.

- Packet transmission fees are incurred for using S! Info Channel/Weather Indicators.

Subscribing for Service

Subscribe by registering to receive service.

- 1 ⇒ **Entertainment** ⇒ ⇒ **S! Info Ch./Weather** ⇒



S! Info Channel Menu

- 2 **Register/Cancel** ⇒ ⇒ **YES** ⇒

Continue by following onscreen directions to subscribe.

Checking Latest Information

A Desktop Icon notifies you when new information is received.

- 1 ⇒ **Desktop Icons** ⇒



Web Page

Continue by following onscreen directions. Web page operation is the same as for Yahoo! Keitai.

Tip

- To check from a menu:
[S! Info Channel Menu] ⇒ *What's New* ⇒
- To check previous information:
[S! Info Channel Menu] ⇒ *History* ⇒ ⇒ ⇒ Select a date ⇒ ⇒ Unread or read backnumbers are indicated with or .

Weather Indicators

After subscribing, weather indicators showing current weather appear in Standby.

Weather Indicators

	Clear (Daytime)		Later
	Clear (Night)		Partial
	Cloudy		Pollen (Low)
	Rain		Pollen (High)
	Thunder		UV Rays (Low)
	Snow		UV Rays (High)

<Example> Cloudy, partial rain

- For a complete list of indicators, see Appendix (P. 15-18).

Checking Weather Report

- 1 [S! Info Channel Menu] ⇒ **Weather Indicator** ⇒ ⇒ **Weather** ⇒



More Features

Advanced

S! Info Channel

- Receive Previous Unreceivable Information
- Store Images/Melodies from Web Pages
- Add Phone Numbers/Mail Addresses from Web Pages

[▶ P. 10-8](#)

Weather Indicators

- Manually Update Weather Information

[▶ P. 10-9](#)

Customize

S! Info Channel

- Set Whether to Display Desktop Icon For New Received Information
- Set Font Size for Web Pages

[▶ P. 14-26](#)

Weather Indicators

- Set Whether to Automatically Update Weather Information
- Set Whether to Display Weather Indicators in Standby
- Set Whether to Display Desktop Icon For New Received Information

[▶ P. 14-26](#)



Download e-comics, e-photo albums and other CCF file books.

Obtaining Books

Download books from the Internet.

- Downloaded books are stored in Books in Data Folder.
- Some books require you to obtain a contents key (right to use contents).

- 1  ⇒ **Data Folder** ⇒  ⇒ **Books** ⇒  ⇒ **Download Books** ⇒  ⇒ **YES** ⇒ 

Continue by following onscreen directions to download.

Tip

- Downloads from BookSurfing® are also available.

Using BookSurfing®

View e-comics, e-photo albums, etc. (CCF file).

- 1  ⇒ **Entertainment** ⇒  ⇒ **BookSurfing** ⇒ 

BookSurfing® is activated.

See the Help for BookSurfing® for operation.

Tip

- Alternatively, activate BookSurfing® by selecting **BookSurfing** from the S! Appli list.



Mobile Widget

Start Here

[Active Desktop Page] P. 10-2

Change Position of widgets

[Active Desktop Page] ⇨ Point to target widgets ⇨ ⇨ **Change Layout** ⇨ ⇨ Move into position ⇨

Delete from Desktop Page

[Active Desktop Page] ⇨ Point to target widgets ⇨ ⇨ **Delete Content** ⇨ ⇨ YES ⇨

Place widgets in Foreground or Background

[Active Desktop Page] ⇨ Point to target widgets ⇨ ⇨ **To front** or **To back** ⇨

Update Display

[Active Desktop Page] ⇨ Point to target widgets ⇨ ⇨ **Renew Display** ⇨

S! Quick News

Start Here

[S! Quick News List] P. 10-4

Manually Update List

[S! Quick News List] ⇨ Select an item ⇨ ⇨ **Refresh This** or **Refresh All** ⇨ ⇨ YES ⇨

View Descriptions of Registered News

[S! Quick News List] ⇨ Select an item ⇨ ⇨ **Outline** ⇨

Delete Registered News/Items

[S! Quick News List] ⇨ Select an item ⇨
● To Select **Delete This**
⇨ **Delete This** ⇨ ⇨ YES ⇨
● To Select **Delete All**
⇨ **Delete All** ⇨ ⇨ YES ⇨
 (twice) ⇨ Enter Security Code ⇨
(twice)

S! Info Channel

Start Here

[S! Info Channel Menu] P. 10-5
[Web Page] P. 10-5

Receive Previous Unreceivable Information

[S! Info Channel Menu] ⇨ **Get Latest Contents** ⇨ ⇨ YES ⇨

Store Images/Melodies from Web Pages

[Web Page] ⇨ ⇨ **Save File** ⇨ (⇨ Select a file ⇨ ⇨ **Save** ⇨ ⇨ YES ⇨ (⇨ Select a folder ⇨ (⇨ YES or NO ⇨)
 Select **Play** and press to play melody file.
 Select **Property** and press to check file information.



Add Phone Numbers/Mail Addresses from Web Pages

[Web Page] → → → **Add to Phone Book**
→ → **YES** →

- To Save to Handset
→ **Phone** → → Select store method →
 (→ Search Phone Book → Select Phone Book → (twice)) → Edit items → (→ YES or NO → (→ Enter entry number →
- To Save to USIM Card
→ **USIM** → → Select store method →
 (→ Search Phone Book → Select Phone Book → (twice)) → Edit items → (→ YES →

Weather Indicators

Start Here

[S! Info Channel Menu]P. 10-5

Manually Update Weather Information

[S! Info Channel Menu] → **Weather Indicator** → → **Manual Update** → → YES →

