

Data Management



| | | | |
|--|--------------|-------------------------------|--------------|
| About Data Folder | 12-2 | Advanced Features..... | 12-16 |
| Accessing Files | 12-3 | Accessing Files | 12-16 |
| Opening Files..... | 12-3 | Editing Files | 12-17 |
| Quick Album (Slideshow)..... | 12-5 | Managing Folders | 12-18 |
| Creating Animations | 12-6 | Managing Files | 12-18 |
| Using Playlist (Melodies) | 12-7 | Memory Card..... | 12-19 |
| Using Playlists (Videos)..... | 12-7 | | |
| Editing Files | 12-9 | | |
| Editing Still Images..... | 12-9 | | |
| Editing Videos | 12-10 | | |
| File & Folder Management..... | 12-11 | | |
| Creating a Folder..... | 12-11 | | |
| Moving Files to a Different Folder | 12-11 | | |
| About Memory Card..... | 12-12 | | |
| Inserting & Removing a Memory Card..... | 12-12 | | |
| Managing Memory Cards | 12-13 | | |
| Formatting a Memory Card | 12-13 | | |
| Accessing Memory Card Data..... | 12-13 | | |
| Copying Data between Handset & Memory Card..... | 12-14 | | |
| Configuring Print Settings of Images..... | 12-15 | | |

12



About Data Folder

Use Data Folder to manage data on handset. New data created by handset functions or obtained via the Internet or mail are saved to different folders according to the file format.

- Some folders contain links. Use the links to access download sites in Yahoo! Keitai.

Folders & Files in Data Folder

| | | |
|--|--|---|
| <p>My Picture¹</p> <p>Image files such as those taken by camera and downloaded My Pictograms</p> | <p>Melody</p> <p>Melodies and audio files recorded by Voice Announce</p> | <p>S! Appli</p> <p>Downloaded S! Appli and Lifestyle-Appli</p> |
| <p>Widget</p> <p>Downloaded widgets files</p> | <p>Ring Songs-Music</p> <p>Chaku-Uta®, Chaku-Uta Full®, downloaded music files and music files transferred using MTP mode</p> | <p>Videos¹</p> <p>Video files such as those recorded by camera</p> |
| <p>Books</p> <p>Downloaded book files</p> | <p>Key Illumination</p> <p>Downloaded key illumination files</p> | <p>TV¹</p> <p>Recorded programs² and still images captured from programs³</p> |
| <p>PDF</p> <p>Downloaded PDF files and saved PDF files</p> | <p>Other Documents²</p> <p>Saved document files (Word, Excel, PowerPoint®, Text)</p> | |

1 When **Auto-change Screen** is set to **ON**, turn handset on its left side during playback for Landscape View.

2 Can be saved on memory card only.

3 Can be saved on handset only.

When Data Folder memory is full or number of files savable is reached, a message asks whether to delete unnecessary data (note, however, this message may not appear depending on the data type). Follow the steps below to delete data:

YES → ● ⇒ Select a folder ⇒ ● ⇒ Select a data item ⇒ ● ⇒ [] ⇒ YES ⇒ ●

● You may need to select a data type before selecting a folder if the data you want to delete has multiple storage areas.

 
● You may need to select more than one data item to delete depending on the degree of insufficient memory.



Opening Files

<Example> Open Video File

- 1 → **Data Folder** → ●
- 2 Select a folder and a sub folder → ●

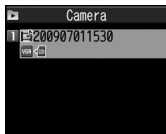

File List

- 3 Select a file → ●



Opened File Window

Opening Files on Memory Card

- 1 → **Data Folder** → ●
- 2 Select a folder → ● → **microSD** → ●
- 3 Select a folder → ●
- 4 Select a file → ●

Indicators in File List

In File List, indicators appear for settable items.

- QVGA movie
- VGA movie
- Attachable to mail
- Insertable in Graphic Mail
- Settable as wallpaper, etc.
- Settable as a ringtone
- Location information usable
- Infrared transmittable
- Copyable to memory card
- Editable
- Over 10 MB
(Viewable only in Memory Card)

Functions in My Picture Window

Selecting a file in My Picture folder opens a window such as below.



My Picture Window

The following operations are possible in My Picture window.

| | |
|--|--|
| Switch Files | |
| Toggle Normal Screen and Full Screen | <input type="checkbox"/> <ul style="list-style-type: none"> • In full screen mode, view lengthwise images in Portrait View and wide images in Landscape View. |
| Zoom In/Zoom Out* | ● → or |
| Show at Actual Size* | ● → |
| Scroll Large-sized or Zoomed-in Image* | |

 
* Press ● to return to the original size.



Accessing Files

Functions in Melody Window

Selecting a file in Melody folder opens a window such as below.

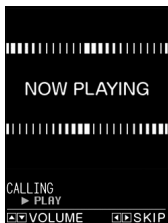

Melody Window

The following operations are possible in Melody window.

| | |
|---------------|--|
| Switch Files | |
| Adjust Volume | |
| | |
| Stop | |
| End | |

Keys Available during Key Illumination File Playback

Key Backlight flashes according to the file selected in Key Illumination.

The following operations are possible while checking files.

| | |
|-------------------------|--|
| Stop | |
| Set to Key Illumination | |

Keys Available in PDF & Other Documents Windows

PDF window or Other Documents window appears for a file selected in the respective folder.



PDF Window

Scrollbar

Toolbar



Other Documents Window

Scrollbar

Toolbar



Accessing Files

The following operations are possible in PDF or Other Documents window.

| | |
|-----------------------------------|--|
| Scroll | |
| Show/Hide Toolbar and Scrollbar | |
| Toggle Page and Toolbar Operation | |
| Zoom Out | |
| Display Entire Page | |
| Zoom In | |
| Display Previous Page | |
| Display Next Page | |
| Search Text | |
| Help | |
| Search Next | |
| Search Previous | |

Toolbar Icons

Use to select icons and to toggle icon view.

| Icon | Description |
|------|--|
| | Specify zoom |
| | Specify page |
| | Zoom out/zoom in |
| | Entire page/100% zoom/match width to Display |
| | First/previous/next/last page |
| | Search text |
| | Rotate L/R 90 deg |
| | Copy text |
| | Toggle show/hide shrunk page image |
| | Toggle text wrap and no wrap at Display width |
| | View operation descriptions for Toolbar and keys |
| | Single page/continuous/two page view |

Tip

- Select files in S1 Appli to activate S1 Appli. For information about S1 Appli, see P. 9-8.
- Select files in Ring Songs-Music or Videos to activate Music Player. For details, see P. 9-3.

Quick Album (Slideshow)

View JPEG images saved in My Picture. Set images to switch automatically or manually.

- Quick Album is also available for JPEG images saved to Memory Cards.

1 → **Data Folder** → → **My Picture** →



Quick Album Window



Tip

- Alternatively, activate this function from ⇒ *Camera* ⇒ ⇒ *Quick Album* ⇒
- Open folder images in the following order. When opening from *Camera*, images in the folder set with *Select to Save* and in *Camera* open first.
 - Inbox
 - Camera
 - User created folder
 - microSD pictures

Keys Available in Quick Album

During Manual Play

| | |
|--------------------------|---|
| Previous/next image | |
| Zoom in/out | |
| Image scroll (zoomed in) | <p> - </p> <p>Scroll in below directions.</p> |

| | |
|---|--|
| Return to original size (zoomed in/out) | |
| Image switch effect (Slide → Fade → Cube → RGB) | <ul style="list-style-type: none"> Effect changes with each press. Slide: Slides to right or left Fade: Fade in/out Cube: Rotates as cube RGB: Splits into red, green and blue then rotates |
| Detect face and zoom in (Face) | <ul style="list-style-type: none"> Press to toggle when several faces are detected. |
| Start Photo Slide-show (auto play) | |

During Auto Play

| | |
|----------------------------------|--|
| Previous/next image | |
| End Photo Slide-show (auto play) | |

Creating Animations

Create animations each of which is made of up to 20 frames using still images in My Picture folder.

- ⇒ *Data Folder* ⇒ ⇒ *My Picture* ⇒ ⇒ *Original Animation* ⇒



Original Animation List

- <New>* ⇒
- Select a frame ⇒ ⇒ Select a folder ⇒ ⇒ Select a still image ⇒
- Repeat this step to assign a series of images to their respective frames.
 - To Cancel an Assigned Image**
 - ⇒ Select a frame ⇒ ⇒ *Release This* ⇒



4

Note

- Only images in JPEG format can be used for creating animations.
- Some images may be unavailable depending on the image size or file size.
- Images saved on external memory devices (i.e. memory card) cannot be used.

Tip

- Select an animation you created in Original Animation List and press to play the animation.

Using Playlist (Melodies)

Save melodies to Playlist to play back in the saved order.

1 ⇒ **Data Folder** ⇒ ⇒ **Melody** ⇒ ⇒ **Playlist**

2 ⇒ **Edit Playlist** ⇒

■ To Clear Playlist

⇒ ⇒ **Release Playlist** ⇒ ⇒ **YES**
⇒

3 **Select a number** ⇒ ⇒ **Select a folder** ⇒ ⇒ **Select a melody** ⇒

Repeat this step to assign other melodies to different numbers.

■ To Cancel an Assigned Melody

⇒ **Select a number** ⇒ ⇒ **Release This** ⇒

4

 
Tip

- Select Playlist folder in Melody and press to play Playlist.
- Changing file names of melodies on Playlist, or deleting melody files clears Playlist.

Using Playlists (Videos)

Save videos to a playlist to play them in the playlist order.

1 ⇒ **Data Folder** ⇒ ⇒ **Videos** ⇒ ⇒ **Playlist** ⇒

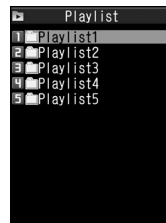

Playlist Window

2 **Select a playlist** ⇒ ⇒ **Edit Playlist** ⇒

3 **Select a number** ⇒ ⇒ **Select a folder** ⇒ ⇒ **Select a video** ⇒
Repeat this step to assign other videos to different numbers.


■ To Cancel an Assigned Video

⇒ **Select a number** ⇒ ⇒ **Release This** ⇒ ⇒ **YES** ⇒

4



Tip


- Select a playlist in Playlist window and press  to play the playlist.

More Features

Advanced


Opening Files

- Check File Information
- Change Order of Files
- Set an Image to Appear in Standby
- Set a Video to Appear in Standby
- Set a Melody/Video as Ringtone

 P. 12-16)


Viewing Images

- Check Location Information
- Paste Location Information to Mail
- Save Location Information to Phone Book
- Attach Location Information to Image
- Play Animation from the Beginning
- Compose Four Images to Make One
- Set Display Size of an Image
- Edit Title of an Original Animation
- Cancel an Original Animation

 P. 12-16)


Playing Melodies

- Play All Melodies in the Same Folder Repeatedly

 P. 12-17)


Playing Videos

- Switch Display Format of File List
- Clear a Playlist

 P. 12-17)

Viewing PDF Files

- Check PDF Properties

 P. 12-17)

Customize

Display Settings

- Set Image List View

 P. 14-3)



Editing Still Images

Basic Flow of Operations

- 1 ⇒ **Data Folder** ⇒ ⇒ **My Picture** ⇒ ⇒ Select a folder ⇒ ⇒ Select an image ⇒



My Picture Window

- 2 ⇒ **Edit Image** ⇒ ⇒ Select an editing option ⇒ ⇒ Edit image
- 3 to end editing
- 4 ⇒ **YES or NO** ⇒
Selecting **YES** overwrites the original image. Selecting **NO** saves the edited image as a new file in the same folder.

Note

- Only images with in File List can be edited.
- Repeated editing may cause deterioration of image quality or increased file size.

Adding a Frame

- 1 **[My Picture] window** ⇒ ⇒ **Edit Image** ⇒ ⇒ **Frame** ⇒
- 2 Select a frame ⇒
 - To Change Frame ⇒
 - To Rotate Frame 180 Degrees ⇒
 - To Cancel Frame ⇒ ⇒ **Cancel** ⇒
- 3
- 4 ⇒ **YES or NO** ⇒

Adding Stamps

- 1 **[My Picture] window** ⇒ ⇒ **Edit Image** ⇒ ⇒ **Marker Stamp** ⇒
- 2 Select a marker stamp ⇒

- To Rotate Marker Stamp ⇒ ⇒ **90° to right, 90° to left or 180°** ⇒
 - To Enlarge/Reduce Marker Stamp ⇒ ⇒ **Scale up or Scale down** ⇒
 - To Cancel Marker Stamp ⇒
- 3 ⇒ Select a position ⇒
 - To Paste Another Marker Stamp ⇒ ⇒ Select a marker stamp ⇒
 - 4
 - 5 ⇒ **YES or NO** ⇒

Pasting a Text Stamp

- 1 **[My Picture] window** ⇒ ⇒ **Edit Image** ⇒ ⇒ **Character Stamp** ⇒
- 2 Enter text ⇒
 - To Edit Text ⇒ ⇒ **Character input** ⇒ ⇒ Enter text ⇒
 - To Change Text Color ⇒ ⇒ **Character Color** ⇒ ⇒ Select a color ⇒ ⇒ Press to toggle color palettes.



■ To Change Font Type

⇒ ⇒ **Font Type** ⇒ ● ⇒ *Gothic* or *Ming-Cho* ⇒ ●

■ To Change Font Size

⇒ ⇒ **Font Size** ⇒ ● ⇒ Select a font size ⇒ ●

3 ⇒ Select a position ⇒ ●

4 ●

5 ● ⇒ **YES** or **NO** ⇒ ●

Cropping an Image

1 [My Picture] window ⇒ ⇒ **Edit Image** ⇒ ● ⇒ **Trim away** ⇒ ●

2 Select a size ⇒ ● ⇒ to select an area ⇒ ●

3 ●

4 ● ⇒ **YES** or **NO** ⇒ ●

Editing Videos

Clip the desired scenes from saved videos.

1 ⇒ **Data Folder** ⇒ ● ⇒ **Videos** ⇒ ● ⇒ **Select a folder** ⇒ ● ⇒ **Select a video** ⇒ ⇒ **Edit Video** ⇒ ●

2 ⇒ **Trim Videos** ⇒ ● ⇒ **Any Size** or **295KB** ⇒ ● ▶

▶ **To Start from Beginning**



▶ **To Start from a Halfway Point**

● ⇒ At a desired point ⇒ ● ⇒

Video plays and clipping starts.

The video playback and clipping start at the same time.

3 ● **to stop** ⇒

Selected portion plays.

When **295KB** is selected, clipping stops automatically when the size of clipped video reaches 295 KB.

4 ● (twice) ⇒ **YES** ⇒ ●

Note

- Only QCIF (176 x 144) or smaller videos with in File List can be clipped.

More Features

Advanced

Editing Files

- Retouch an Image
- Adjust Image Brightness
- Rotate an Image
- Change Image Size
- Correct Backlight
- Refresh Skin Tone

 
(▶ P. 12-17)



Creating a Folder

- 1 ⇒ **Data Folder** ⇒ ⇒ Select a folder type ⇒

<Example>When My Picture is Selected

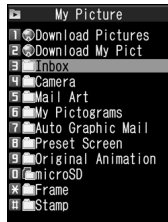

Folder List

- 2 ⇒ **Add Folder** ⇒ ⇒ Enter folder name ⇒

Tip

- Folders can only be created in handset Data Folder.

Moving Files to a Different Folder

- 1 **[File List]** ⇒ Select a file ⇒ ⇒ **Move** ⇒

- ▶ **To Move Selected File**
Move this ⇒ ⇒ Select a destination folder ⇒ ⇒ **YES** ⇒
- ▶ **To Move Multiple Files**
Move selected ⇒ ⇒ Select a destination folder ⇒ ⇒ Select a file ⇒ (repeat to select another file) ⇒ ⇒ **YES** ⇒
- ▶ **To Move All Files in a Folder**
Move all ⇒ ⇒ Select a destination folder ⇒ ⇒ **YES** ⇒

More Features

Advanced

Managing Folders

- Edit a Folder Name
- Delete a Folder
- Delete All Files in My Picture, Melody, Video, Book or PDF Folder

▶ P. 12-18

Managing Files

- Edit a Title in My Picture File List
- Check Volume of Saved Files
- Edit a File Name
- Delete Files

▶ P. 12-18



About Memory Card

Save files to memory cards. Still images and videos shot with handset camera can be saved directly to memory card. Data can be copied and moved between handset and memory card. Data on memory card can also be accessed from Data Folder.

 
- Handset supports memory cards of up to 8 GB.
- Do not insert or remove memory cards when handset power is on.
- Insert memory cards properly. Otherwise, they cannot be used on handset.
- Do not affix stickers or labels to memory cards. As memory cards are very thin and precise mechanisms, even a thin sticker or label on a memory card may cause contact failure or destruction of data.
- Keep memory cards out of reach of infants who may accidentally swallow them or be injured.
- Do not remove a memory card or power off handset while writing and reading data with that memory card. It may cause data loss or malfunction.
- Access to memory cards may be unavailable when the battery level is low.

Inserting & Removing a Memory Card

Turn handset power off before inserting or removing a memory card.


Insertion

- 1 Open Slot Cover**
- 2 Insert memory card into Memory Card Slot until it locks**
Insert gently with the printed logo facing up.

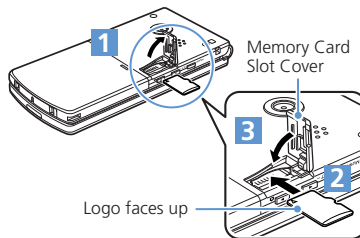


- 3 Close Slot Cover**

Tip

- If  appears in Display, there may be a contact failure. Remove and reinsert memory card.

Removal

 - 1 Press and release**
Gently pull out memory card.

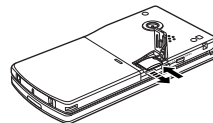

Note

- Memory card may spring out.
- Memory card may break if inserted or removed with force.



Formatting a Memory Card

- Format memory cards on handset only. Memory cards formatted on another device or PC may not work.
- Formatting a memory card deletes all the data on it.

1 ⇒ **Tools** ⇒ ⇒ **microSD Manager** ⇒

 
2 ⇒ **microSD format** ⇒ ⇒ **Enter Security Code** ⇒ ⇒ **YES** ⇒

Note

- Do not remove memory card while formatting. Handset/memory card malfunction may occur.
- Make sure that there is no important data left on the memory card before formatting it.


Accessing Memory Card Data

1 ⇒ **Tools** ⇒ ⇒ **microSD Manager** ⇒

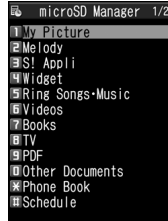


microSD Manager Window

 2 Select a category ⇒

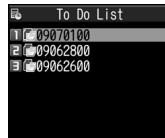


File List

 3 Select a file ⇒

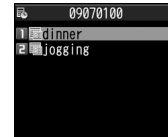

Data List

 4 Select a data item ⇒

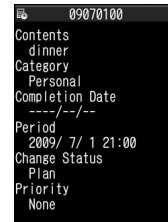

Data Details



Copying Data between Handset & Memory Card

Following items can be copied to/from handset and memory card:

| | |
|----------------------|---|
| PIM Data | Phone Book entries, Schedule, To Do List, text memos, Inbox, Outbox, Draft, bookmarks, content keys |
| Files in Data Folder | Still images, My Pictograms, Flash®, melodies, videos, songs, books, PDF files |

Copying Handset Data to Memory Card

Copy Phone Book entries, Schedule, messages, images, videos, etc.

<Example> Copy data in Data Folder to memory card

1 [Data List] → → **Copy to microSD** →

▶ **To Copy Selected Data**

Copy this → (→ Select destination folder →)

▶ **To Copy Multiple Data**

Copy selected → (→ Select copy destination folder →) → Select a data item → (repeat to select another data) → → **YES** →

▶ **To Copy All Data**

Copy All → → Enter Security Code → (→ Select copy destination folder →) → **YES** →

Tip

- When one Phone Book entry or Schedule event that is set as secret is copied to memory card, its secret setting is canceled.
- Files attached to messages may be deleted.
- You need to select a destination folder when copying data in My Picture folder.
- Data saved in Pre-installed folders of Data Folder cannot be copied.
- Content keys are copied collectively at one time.

Copying Memory Card Data to Handset

To Copy Images or Other Data to Handset

1 → **Data Folder** → → **Select a folder type** → → **microSD** → → **Select a folder and sub-folder** → → **Select a data item** → → **Copy to Phone** →

▶ **To Copy Selected Data**

Copy this →

▶ **To Copy Multiple Data**

Copy selected → → Select a data item → (repeat to select another data) → → **YES** →

▶ **To Copy All Data**

Copy All → → Enter Security Code → → **YES** →



Managing Memory Cards

To Copy PIM Data to Handset

- ⇒ **Tools** ⇒ ⇒ **microSD Manager** ⇒ ⇒ Select a PIM data type ⇒ ⇒ Select a data item ⇒ ⇒ **Copy/OW to Phone** ⇒
 - ▶ To Copy Selected Files **Copy This** ⇒
 - ▶ To Copy Multiple Files **Copy selected** ⇒ ⇒ Select a file ⇒ (repeat to select another file) ⇒
 - ▶ To Copy All Files **Copy All** ⇒
- Enter Security Code** ⇒ ⇒ **YES** ⇒ ⇒ **YES** ⇒ (⇒ **YES** or **NO** ⇒)

Note

- When copying memory card data to handset in overwrite mode, the corresponding data on handset is overwritten by the copied data.
- If the maximum storable number of items is reached when copying all items, copying stops at that point.

Configuring Print Settings of Images

Specify which images on memory card to be printed and the number of prints, etc. in DPOF (Digital Print Order Format) settings so that the images can be printed by DPOF compatible printers or print service shops.

- ⇒ **Data Folder** ⇒ ⇒ **My Picture** ⇒ ⇒ **microSD** ⇒ ⇒ **DCIM** ⇒
- Select a folder** ⇒ ⇒ **Select a still image** ⇒ ⇒ **DPOF setting** ⇒
 - ▶ To Specify Selected Images **DPOF set One** ⇒
 - ▶ To Specify Multiple Images **DPOF set Choice** ⇒ ⇒ Select a still image ⇒ (repeat to select another image) ⇒
- Print** ⇒ ⇒ **Print Sheets** ⇒ ⇒ **Enter number of prints** ⇒
- a Date** ⇒ ⇒ **ON or OFF** ⇒

5

More Features

Advanced

Memory Card

- Check Available Memory Space of Memory Card
- Check & Repair Memory Card
- Delete Data on Memory Card
- Cancel Print Settings of Images

(▶ P. 12-19)



Accessing Files

Start Here

- [File List]P. 12-3
- [Opened File] window P. 12-3
- [My Picture] window..... P. 12-3
- [Melody] window..... P. 12-4
- [PDF] window P. 12-4
- [Original Animation List]P. 12-6
- [Playlist] window..... P. 12-7

Opening Files

Check File Information

[File List] / [Opened File] window (⇨ Select a file) ⇨ ⇨ **Image Info, Melody Info, Properties, Key illum. Info., Document Info** or **Location Info** ⇨ ● (⇨ **Loc. Info Detail** ⇨ ●)

Change Order of Files

[File List] ⇨ ⇨ **Sort** ⇨ ● ⇨ Select a criterion ⇨ ●

Set an Image to Appear in Standby

[File List] / [Opened File] window (⇨ Select a file) ⇨ ⇨ **Set as Display** ⇨ ● ⇨ **Stand-by Display** ⇨ ● (⇨ Select a layout ⇨ ● ⇨ Confirm preview ⇨ ●)
 Set images to appear when making calls or sending messages.

Set a Video to Appear in Standby

[File List] ⇨ Select a file ⇨ ⇨ **Stand-by Display** ⇨ ● ⇨ **YES** ⇨ ●

Set a Melody/Video as Ringtone

[File List] / [Opened File] window (⇨ Select a file) ⇨ ⇨ **Ring Tone** ⇨ ● ⇨ Select an item ⇨ ●
 Only melodies can be set as ringtones from Opened File window.

Viewing Images

Check Location Information

[My Picture] window ⇨ ⇨ **Location Info** ⇨ ● ⇨ **Read Map** ⇨ ●

Paste Location Information to Mail

[My Picture] window ⇨ ⇨ **Location Info** ⇨ ● ⇨ **Paste to Mail** ⇨ ● ⇨ **YES** ⇨ ● ⇨ Create S! Mail ⇨

Save Location Information to Phone Book

[My Picture] window ⇨ ⇨ **Location Info** ⇨ ● ⇨ **Add to Phonebook** ⇨ ● ⇨ **Phone** ⇨ ● ⇨ Select save method ⇨ ● (⇨ Search Phone Book ⇨ Select Phone Book ⇨ ● (twice)) ⇨ Edit items ⇨ (⇨ **YES** or **NO** ⇨ ●) (⇨ Enter entry number ⇨ ●)

Attach Location Information to Image

[My Picture] window ⇨ ⇨ **Location Info** ⇨ ● ⇨ **From Position Loc., From Loc. History, From Phonebook, From Owner Details** or **From Image** ⇨ ● (⇨ Enter Security Code ⇨ ●) (⇨ Select location information ⇨ ●)

To delete attached location information, select **Delete Loc. Info** and press ●.

Play Animation from the Beginning

[My Picture] window ⇨ ⇨ **Retry** ⇨ ●



Advanced Features

Compose Four Images to Make One

[File List] ⇨ ⇨ **Composite Image** ⇨ ●
 ⇨ Select a position ⇨ ● ⇨ Select a folder
 ⇨ ● ⇨ Select an image ⇨ ● ⇨ Repeat
 the same step to assign three other images
 to their respective positions ⇨ ⇨ ●

Only images in JPEG format can be used for creating composite images.

Copyright-protected images are unavailable.

Images saved on memory card cannot be used.

Some images cannot be used depending on their size.

Set Display Size of an Image

[My Picture] window ⇨ ⇨ **Set Image Disp.** ⇨ ● ⇨ **Normal** or **Fit in Display** ⇨ ●

Edit Title of an Original Animation

[Original Animation List] ⇨ Select an animation ⇨ ⇨ **Edit Title** ⇨ ● ⇨ Edit title ⇨ ●

Cancel an Original Animation

[Original Animation List] ⇨ Select an animation ⇨ ⇨ **Release Animation** ⇨ ● ⇨ **YES** ⇨ ●

Playing Melodies

Play All Melodies in the Same Folder Repeatedly

[Melody] window ⇨ ⇨ **Set Repeat Play** ⇨ ● ⇨ **ON** ⇨ ●

Playing Videos

Switch Display Format of File List

[File List] ⇨ ⇨ **List Setting** ⇨ ● ⇨ **Title** or **Title+Image** ⇨ ●

Clear a Playlist

[Playlist] window ⇨ Select a playlist ⇨ ⇨ **Release Playlist** ⇨ ● ⇨ **YES** ⇨ ●

Viewing PDF Files

Check PDF Properties

[PDF] window ⇨ ⇨ **Document Property** ⇨ ●

Editing Files

Start Here

[My Picture] window..... P. 12-9

Retouch an Image

[My Picture] window ⇨ ⇨ **Edit Image** ⇨ ● ⇨ **Retouch** ⇨ ● ⇨ Select an effect ⇨ ● (three times) ⇨ **YES** or **NO** ⇨ ●

Adjust Image Brightness

[My Picture] window ⇨ ⇨ **Edit Image** ⇨ ● ⇨ **Brightness** ⇨ ● ⇨ ⇨ to adjust brightness ⇨ ● (twice) ⇨ **YES** or **NO** ⇨ ●

Rotate an Image

[My Picture] window ⇨ ⇨ **Edit Image** ⇨ ● ⇨ **Rotate** ⇨ ● ⇨ **90° to right**, **90° to left** or **180°** ⇨ ● (three times) ⇨ **YES** or **NO** ⇨ ●

Change Image Size

[My Picture] window ⇨ ⇨ **Edit Image** ⇨ ● ⇨ **Change Size** ⇨ ● ⇨ Select a size ⇨ ● (three times) ⇨ **YES** or **NO** ⇨ ●



Correct Backlight

[My Picture] window → → **Edit Image** → ● → **Correct Backlight** → ● (three times) → **YES** or **NO** → ●

Refresh Skin Tone

[My Picture] window → → **Edit Image** → ● → **Refresh Skin Tone** → ● (three times) → **YES** or **NO** → ●

Managing Folders

Start Here

[Folder List] P. 12-11

Edit a Folder Name

[Folder List] → Select a folder → → **Edit Folder Name** → ● → Edit folder name → ●

Only names of user-created folders can be edited.

Delete a Folder

[Folder List] → Select a folder → → **Delete Folder** → ● → Enter Security Code → ● (→ Select delete method → ●) (→ **YES** → ●) → **YES** → ●

- Only user-created folders can be deleted.
- Files in the selected folder are also deleted.
- When files that are set as wallpaper, ringtone, alarm tone, etc. are deleted, their settings are reset to default.

Delete All Files in My Picture, Melody, Video, Book or PDF Folder

[Folder List] → → **Delete all Image, Delete All or Delete all Doc.** → ● → Enter Security Code → ● → **YES** → ●

When files that are set as wallpaper, ringtone, alarm tone, etc. are deleted, their settings are reset to default.

Managing Files

Start Here

[File List] P. 12-3

Edit a Title in My Picture File List

[File List] → Select an image file → → **Edit Title** → ● → Edit title → ●

Titles of files saved in Pre-installed folders cannot be edited.

Check Volume of Saved Files

[File List] → → **Memory Info** → ●

Edit a File Name

[File List] → Select a file → → **Edit File Name** → ● → Edit file name → ●

Names of files saved in Pre-installed folders cannot be edited.



Advanced Features

Delete Files

[File List] → Select a file → → **Delete** → ●

- To Select *Delete this*
→ *Delete this* → ● → **YES** → ●
- To Select *Delete selected*
→ *Delete selected* → ● → Select file → ● (repeat to select another file) → → **YES** → ●
- To Select *Delete all*
→ *Delete all* → ● → Enter Security Code → ● → **YES** → ●

Memory Card

Start Here

- [microSD Manager] window P. 12-13
- [File List] P. 12-13
- [Data List] P. 12-13
- [Data Details] P. 12-13

Check Available Memory Space of Memory Card

[microSD Manager] window, [File List], [Data List] or [Data Details] → → *microSD Info* or *Memory Info* → ●

Check & Repair Memory Card

[microSD Manager] window → →

- Check microSD** → ● → **YES** → ●
- To cancel checking and repairing a memory card, press or .
- Some memory cards may not be repairable.

Delete Data on Memory Card

[File List] → Select a data item → → **Delete** → ●

- To Select *Delete this*
→ *Delete this* → ● → **YES** → ●
- To Select *Delete selected*
→ *Delete selected* → ● → Select file → ● (repeat to select another file) → → **YES** → ●
- To Select *Delete all*
→ *Delete all* → ● → Enter Security Code → ● → **YES** → ●

Cancel Print Settings of Images

→ **Data Folder** → ● → **My Picture** → ● → **microSD** → ● → **DCIM** → ● → Select a folder → ● → Select a still image → → **DPOF setting** → ● → **DPOF set One or DPOF set Choice** → ● (→ Select an image → ● (repeat to select another image) → → **Print OFF** or **All Print OFF** → ●

