

Font Size	2-2
Changing Font Size	2-2
Standby Window	2-3
Standby Window (Japanese)	2-3
Wallpaper	2-5
Customized Screen & S! Familiar Usability	2-6
Customized Screen & S! Familiar Usability (Japanese)	2-6
Sounds & Alerts	2-7
Customizing Handset Responses ...	2-7
Text Entry	2-8
Entering Characters	2-9
Editing Characters	2-12
User Dictionary	2-13
Saving Frequently Used Words	2-13

Dictionary	2-14
Using Dictionaries	2-14
Search	2-16
Searching Text	2-16
Scratch Pad	2-17
Phone Book	2-18
Creating Phone Book Entries	2-18
Using Phone Book Entries	2-20
Data Folder	2-21
Opening Files	2-22
Managing Files & Folders	2-23
Memory Card	2-24
Using Memory Card	2-24
Additional Functions	2-26
Troubleshooting	2-34

2


Basic Operations



Changing Font Size

Enlarging All Fonts

Activate Large Font Menu to enlarge fonts for menus, text entry, etc. as follows:

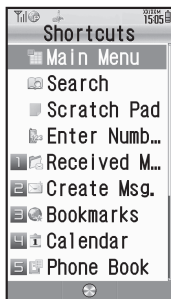

1 (Long)



 
2 **Large Font Menu** → ●

Canceling Large Font Menu

In 2, **Standard Menu** → ●


Customizing Font Sizes

1 ● → **Settings** → ●



2 In Phone Settings menu, **Display** → ●

 3 **Font Settings** → ●




Font Settings Menu

4 **Font Size** → ● → **Select item** → ●

5 **Select size** → ●

Changing Font Weight

 1 In Font Settings menu, **Font Weight** → ●




2 **Select weight** → ●



Standby Window (Japanese)

In Standby, view S! Quick News or Calendar, access shortcut icons, and more.


 
1 

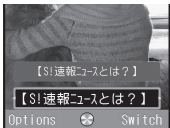

Standby Window

2 



- Press  to toggle panels. (Long Press  to toggle panels in reverse.)

3 Select item 

4   Standby Window closes

Standby Window Panels

■ Shortcut Panel



- Access functions from shortcut icons.

■ Calendar/Tag Panel




- Open Calendar; enter schedules, etc. in tags.

■ News Panel






- View S! Quick News.

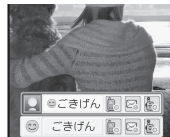■ Member Panel




- Open entry/member details saved in Phone Book/S! Friend's Status member list.







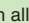




Selecting Panel Items

[Shortcut Panel]/[Calendar/Tag Panel]   **Select Item**  

Select item   

- To the left is an example of Shortcut Panel with all items checked ().

Advanced

-   Changing display option
-  Assigning shortcuts/Bookmarks
-  Managing shortcuts/Bookmarks
-  Adding news items
-  Changing news scroll speed
-  Showing unread news only
-  Changing news image setting
-  Updating news items manually
-  Assigning members
-  Managing members (P.2-26 - 2-27)



Panel Selection

- 1 In Standby Window,  → **Standby Window** → 



- 2 **Display Panel** →  → **Select panel** →  (/) → 

- Panels with (checked) appear in Standby Window.



Using Tags

- 1 In Calendar/Tag Panel, select row with → 

- 2 Enter text → 




Checking/Unchecking Tags

-  → Select tag →  → **Check Note or Uncheck** → 

- Checked tag (with) turns gray.

Deleting Tag Notes

-  → Select tag →  → **Delete Note** → 

- To delete all checked tags, follow these steps:

-  →  → **Delete Checked Note** → 



Wallpaper

1 **Settings** **In Phone Settings menu, Display**

2 **Wallpaper**



Wallpaper Menu

3 **Select folder**

4 **Select image**

- For images smaller or larger than Display, select an option and press .
- Some files may not be usable.

 
Selecting Images with Limited Usage Period

- A confirmation appears. Follow these steps:
Yes
- If Double Number Mode Menu Opens
Select mode

Slide Show Wallpaper

Set Slide Show to appear in Standby.
Some images may not appear.

1 **In Wallpaper menu, Slide W paper**



2 **Folder Setting**

3 **Pictures or DCIM**

4 **Select sub folder** **Set this folder**

- Omit steps for sub folder if none.

If There is No Image in Set Folder

- Preset images appear.

Using Preset Images

In **3**, **Preset Pictures**

Changing Pattern

In **2**, **Pattern Setting** **Select pattern**



 
Customized Screen & S! Familiar Usability (Japanese)

2 Basic Operations

Downloading Customized Screen

Use preloaded Customized Screen or download new via handset as follows: Read information (price, etc.) on Customized Screen download page.

- 1 → **Data Folder** → → **Customized Screen** →



Customized Screen Menu

- 2 **Download Customized Screen** →

- Handset connects to the Internet and source site list appears. Follow onscreen instructions.

Customized Screen Setup

To install the most recent version, apply the file then download the updated one.

- 1 **In Customized Screen menu, select Customized Screen** →
- 2 →

Applying Fee-based Customized Screen

- If Contents Key is required, follow these steps:

After 1, → **Yes** →

- Read terms of service and then follow onscreen instructions.

When Selected Customized Screen is Active

- Cancellation confirmation appears after 1.

S! Familiar Usability

Download and install applications that load legacy model interfaces.

Downloading S! Familiar Usability

- 1 **In Customized Screen menu, S! Familiar Usability** →
 - Follow onscreen instructions.

S! Familiar Usability Setup

- 1 **In Customized Screen menu, select application** → →

Canceling Temporarily

- → 通常メニュー →

Advanced

- Accessing Customized Screen source sites
- Applying preset Customized Screen
- Canceling Customized Screen
- Canceling S! Familiar Usability
- Canceling Customized Screen or S! Familiar Usability unconditionally
- Deleting Customized Screens (P.2-27)



Customizing Handset Responses

Ringtone

- 1 **Settings** → **Phone Settings** menu, **Sounds & Alerts**



Sounds & Alerts Menu

- 2 **Ringtone/videos**

- 3 **Select item**

For **For New Message**, etc., select **Assign Tone** and press.



- 4 **Select folder**

- 5 **Select tone/file**

Setting Ring Time for Incoming Mail, etc.

After **Duration** → **Enter time**

Playing Video for Incoming Transmissions

In **Videos** → **Select file**

If Portion of File Content is Specifiable

- After **Start point**, start point selection window opens. Follow these steps:

Select start point

Selecting Files with Limited Usage Period

 
- A confirmation appears. Choose **Yes** and press to proceed.

When using Double Number in Dual Mode (P.1-19)

- When ringtones are customizable for each line, press **Line** in Ringtone/videos menu to switch lines.

Vibration

- 1 In **Sounds & Alerts** menu, **Vibration**
- 2 **Select item** → **Switch On/Off**



- 3 **On**

- 4 **Vibration Pattern**

- To check vibration patterns, select one and press **Preview**.

- 5 **Select pattern**

Setting Ringtones to Control Vibration

In **Link to Sound**

 
Precaution

- Cancel Vibration when charging battery to help avoid accidents.




Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.



Text Entry Window (Message Text)

 Opening Help




Note

- Pressing repeatedly may not close text entry windows.

Switching Entry Modes

 1



- Available entry modes appear.

2 Select mode

- Entry Mode Indicators:

	Kanji (hiragana)
	Double/single-byte katakana
	Double-byte alphanumerics (upper/lower case)
	Single-byte alphanumerics (upper/lower case)
	Single-byte number
	Character Code

appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle between character options for that key.

Example: In double-byte katakana entry, press three times.



Press to toggle options in reverse.

To enter characters assigned to the same key, press first.

Example: In single-byte alphanumerics mode, enter 'no'.



Long Press a key to enter the current character and advance cursor.



Advanced

- Using Character Codes
- Using Pager Code (P.2-28)

Entering Characters

2

Basic Operations

Hiragana

Follow these steps to enter **すずぎ** in kanji (hiragana) mode:

- 1 (ず) → → (ず) → (ず)
 → (ぎ)



- 2 (No Conv)

Kanji

Convert **すずぎ** to **鈴木**.

- 1 Enter **すずぎ** and press



- In kanji (hiragana) mode, word suggestions change as hiragana is entered. (Predictive)

- 2 **鈴木**

- To exit suggestion list, press



- Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press or to segment hiragana to convert separately.
 - Press to toggle Predictive and Non-Predictive suggestions.

Phonetic Conversion

Enter reading in hiragana →
 Selecting Multiple Converted Words



Advanced

- Inserting line breaks
- Inserting spaces
- Changing Font Size
- Disabling suggestions based on entered characters
- Disabling suggestions based on entered words
- Disabling emoticon/Pictogram suggestions based on entered words
- Lowering type priorities in suggestion list
- Using Keypad to enter words/phrases from suggestion list
- Clearing entry log (P.2-28)



One-Hiragana Conversion

Enter the first hiragana to access previously selected words.

Example: 鈴木 was previously selected after conversion.

 
1 (ア) → ●

2 Select word/phrase → ●


Katakana

Follow these steps to switch to double-byte katakana mode and enter ジュン.

1 → アイウ → ●



2 (ジ) → (ジ) → (ユ) → (ン) → ●

 

Pictograms & Symbols

May be unavailable depending on the entry mode.

1



• Pictogram/Symbol Log appears.

2 or → List toggles

• In Pictogram List, press to toggle cross-carrier Pictograms and all Pictograms.


3 Select Pictogram or Symbol → ●

• Pictograms are double-byte even in single-byte modes.

4 → List closes

Emoticons

1 → Emoticons → ●

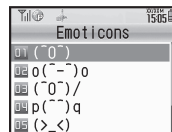

2 Select emoticon → ●

Alternative Emoticon Entry Method

- In kanji (hiragana) mode, enter *かお* or a descriptive word such as *可愛い* or *うーん*, then convert the entry.

EmoticonWordLink


- Immediately after inserting a descriptive word such as *嬉しい* or *悲しい*, corresponding emoticons may appear in the suggestion list.



Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1  ➔ **Quick Address List** ➔ 

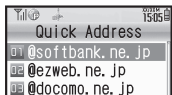

2 **Select extension** ➔ 

- Extensions are single-byte even in double-byte entry modes.

Hiragana to Katakana/
Alphanumeric Conversion

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter **PM**

Use key inscriptions.

1   ➔ 



2 **Select word/phrase (PM)** ➔ 

Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key pressed.


Example: To enter **終電**

1   ➔  ➔   ➔  ➔ 



2 **Select word/phrase (終電)** ➔ 

One Hiragana Word Call

- Enter the first hiragana of entries you used Quick Conversion for and press .



Editing Characters

 
2

Basic Operations


Deleting & Editing

Follow these steps to correct **また、お願
いします** to **また明日お願いします**:

1 Select character



2

 CLEAR
BACKSPACE

- The highlighted character is deleted.

3

Select target location → Enter characters



Recovering Deleted Characters

- Press once for each character after deletion.

Deleting All Text

- Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press .

Jumping to the End or Top of Text

- **Cursor Position** → ● → **Jump to End or Jump to Top** → ●

Copy/Cut & Paste

- **Cut or Copy** → ● → **Select first character** → ●

 


Cut

- To cancel and start over, press .

- Highlight text range** → ●

- Select target location** →
 (Long)



- Text is entered.

Pasting Previously Cut/Copied Text

Select target location → → **Paste**

→ ● → **Select text** → ●

- Available when Paste List appears.

Advanced

 
- Undo conversion or recover deleted characters
- Inserting Phone Book entry items (P.2-28)

Saving Frequently Used Words

Saving Words (Japanese)

Saved words appear among suggestions.

- 1  → **Settings** →  → **In Phone Settings menu, User Dictionary** → 



User Dictionary Menu

- 2 **New Entry** →  → **Enter word** → 

- 3 **Enter reading** → 

 
Editing Entries



- In , **Saved Word List** →  →
- Select word** →  → **Edit** →  →
- Edit reading** →  → **Yes** → 

930SH Download Dictionary (Japanese)




Download specialized 930SH Download Dictionaries from SH-web Mobile Internet site. Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions. Some dictionary files may not be usable.

- 1 **In User Dictionary menu, Acquire Dictionary** → 






- 2 **Select number** →  → **Select dictionary** → 
 - Existing dictionary is replaced.



Canceling Dictionary

- In , **select dictionary** →  → **Cancel** → 

Viewing Dictionary Information

- In , **select dictionary** →  → **Info** → 

Advanced

-   Deleting entries (P.2-28)



Using Dictionaries

2

Basic Operations

Available Dictionaries:

Preloaded Dictionaries	Meikyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary
Online Dictionaries*	Wikipedia, Meikyo J-Dic MX.net, Genius EJ-Dic MX.net, Genius JE-Dic MX.net, Imidas Encyclopedia, Encyclopedia Nipponica, Digital Daijisen, PROGRESSIVE English-Japanese Dictionary, PROGRESSIVE Japanese-English Dictionary, Hot Pepper Pockets, and more

*Online dictionary use requires Internet connection incurring transmission fees. Information fees may also apply. Read terms of service and then follow onscreen instructions.

Searching As-You-Type

- 1 → → **Select dictionary** →



Dictionary Window

- Last used dictionary appears first.

- 2 **Enter reading (spelling for English-Japanese dictionary)**

- Search results appear as you type.

- 3 **Select word** →



 
Definition/Translation Window

Looking Up in Online Dictionaries

- [Definition/Translation Window]
- **WebDict.Search** → → **検索** →
- **Yes** → → **Select word** →

Searching by Keyword

- 1 In Dictionary window,
- 2 **Search Method** → → **Keyword Search** →
- 3 **Select entry field** → → **Enter text** →



- 4 **Search** → → **Select word** →


Advanced

- Viewing dictionary information
- Changing Font Size
- Copying Index Word
- Looking up copied words in dictionaries
- Deleting History & bookmarks
- Updating dictionary list (P.2-29)






Using Online Dictionaries

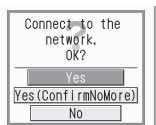- In Dictionary window,**  \rightarrow
ネット辞書 \rightarrow 
 - Terms of service appear when using online dictionary for the first time. Read and then press .
- Select pull-down menu** \rightarrow 
 \rightarrow **Select dictionary** \rightarrow 
- Select entry field** \rightarrow  \rightarrow
Enter text \rightarrow  \rightarrow **検索** \rightarrow 





- Yes** \rightarrow 
- Select word** \rightarrow 
 - Definition/translation window opens.

Disabling Confirmation




In , **Yes(ConfirmNoMore)** \rightarrow  \rightarrow
From 

Using History & Bookmarks




Saving Bookmarks

- In definition/translation window,** 
Bookmark \rightarrow 

 


Opening History or Bookmarks

- In Dictionary window,** 
- History or Bookmark List** \rightarrow 
- Select word** \rightarrow 
 - Definition/translation window opens.


Adding Downloaded Dictionary

- In Dictionary window,** 
- Add Dictionary** \rightarrow 
- Select file** \rightarrow 


Canceling Added Dictionary




In , **Cancel Dictionary** \rightarrow  \rightarrow **Yes**
 \rightarrow 

 Using Dictionaries during Text Entry




To use dictionaries before entering text, press .

- In kanji (hiragana) mode,**
enter text \rightarrow **Before pressing**  **to complete entry,** 



- Select dictionary** \rightarrow 
- Search** \rightarrow  \rightarrow **Select word**
 \rightarrow 
 - Definition/translation window opens.

Inserting Index Word into Text

After ,  \rightarrow **Paste Index Word** \rightarrow 



Searching Text

2

Basic Operations

Web Search

1 → **Tools** → →

Doc./Rec.

2 **Search** →



Search Window

- **Web Search** is selected by default.

3 **Select entry field** → →

Enter search text →

4 **Search** →

- Search results appear.

Searching within PC Sites

[Search Window] → **Change Browser**
 → → **PC Site Browser** →

Mail Search

1 In Search window, **Mail Search** →

2 **Select entry field** → →

Enter search text →

3 **Search** → → **Select option** →

Searching within Received or Sent Messages

[Search Window] → **Change Mail Folder** → → **Received Messages or Sent Messages** →



Scratch Pad

Open Scratch Pad to jot down text, and more.

1 ➔ **Tools** ➔ ➔ ➔
Doc./Rec.

2 **Scratch Pad** ➔
• Text entry window opens.

3 **Enter text** ➔



4 **Save to Notepad** ➔
• Open saved entries from Notepad.

Other Scratch Pad Usage

Usage	Operation
Add Standby Window Tag	Save as Sticky Note ➔
Enter Mail Message Text	Create Message ➔ ➔ Select mail type ➔
Enter Schedule Subject/Details	Save to Calendar ➔
Enter Task Subject/Details	Save to Tasks ➔
Add Last Name to Phone Book	Save to Phone Book ➔ ■ Reading is not entered.
Save Text File	Save as Text File ➔ ➔ Enter name ➔ ➔ Save here ➔ ■ Saved to Data Folder (Other Docs).
Search Internet	Web Search ➔ ➔ Select browser ➔


For more, see corresponding function description or follow onscreen instructions.



Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

1 **Phone** → **Add New Entry**

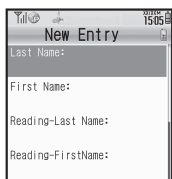


2 **Last Name:** → **Enter last name** → **First Name:** → **Enter first name**



• Characters entered for names (reading for kanji) appear.

3 **Add Phone Number:** → **Enter phone number** → **Select type**

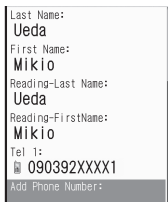


• To save additional phone numbers, repeat **3**.

4 **Add Email Address:** → **Enter mail address** → **Select type**



• To save additional mail addresses, repeat **4**.

5 **Category:** → **Select Category**

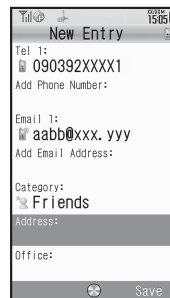

Phone Book Entry Window

6 **Entry is saved to Phone Book.**

Incoming Calls while Creating Entry

• Contents are temporarily saved. End the call to return.

Selecting Mode in Dual Mode (P.1-19)

[Phone Book Entry Window] **Mode:**

→ **Select mode**

Advanced

- Saving other information
- Setting Light Color
- Changing vibration pattern
- Editing Phone Book entries
- Setting incoming mail ring time
- Renaming Categories
- Moving Categories (P.2-30)



Personal Ringtone

Set tone for calls from saved numbers.

- 1 In Phone Book entry window, select item, e.g., **Tone-Voice Call:** ➔



- 2 **Assign Tone** ➔ ➔ Select folder ➔

- 3 Select tone/file ➔

Saving Secret Entries

Restrict access to Phone Book entries by saving them as Secret entries.

- 1 In Phone Book entry window, **Secret:** ➔
- 2 **On** ➔

Accessing Secret Folders

- ➔ ➔ **Unlock Temporarily** ➔
- ➔ **Enter Handset Code** ➔

Customizing Response by Category

- 1 ➔ **Phone** ➔ ➔ **Category Control** ➔



Category Control Menu

 
- 2 Select **Category** ➔ ➔ Select item ➔
- 3 Select item ➔ ➔ Select item, e.g., **Assign Tone** ➔ ➔ **Customize responses** ➔
 - Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card.

Responses Set by Phone Book Entry

- Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.



- 1 When confirmation appears, **Yes** ➔



- 2 **As New Entry** ➔ ➔ **Complete other fields** ➔

Saving to an Existing Entry

- In 2, **As New Detail** ➔ ➔ Select entry ➔ ➔ Complete other fields ➔



Using Phone Book Entries

Dialing via Phone Book

- 1 → Select katakana row



Entry Search Window (By a-ka-sa-ta-na)

- When using Double Number in Dual Mode (P.1-19), Line indicators appear.

- 2 Select entry →



Entry Details

- 3 Select phone number

- 4

Placing Video Calls

After → → **Video Call** →

Advanced

- Changing view for entry search window
- Assigning images to Phone Book entries for incoming transmissions
- Messaging via Phone Book
- Placing Decoration Calls via Phone Book
- Deleting Phone Book entries
- Checking memory status
- Copying Phone Book entries (And more on P.2-29 - 2-31)

Changing Search Method

- 1 In entry search window, → **Ph.Book Settings** →

- 2 **Sort Entries** →



- 3 Select method →


- Phone Book Search Methods:

By a-ka-sa-ta-na	Shows entries with Readings that start with katakana in the specified row
By Category	Opens entries in the specified Category
By Reading	Shows all entries in Reading order (katakana, alphabetical then numerical)

Changing Search Method Temporarily [Entry Search Window] (press repeatedly to toggle search methods)

Opening from Other Functions

 Example: Enter a recipient via Phone Book when sending a message.




Select Recipient Window

- 1 **Phone Book** →

- Entry search window opens.

- 2 Select entry →

 - 3 Select phone number or mail address →



- Recipient is entered.
- Omit if only one number or address is saved.



Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Large still images on Memory Card (images captured with save location set to SD(DCIM))
Ring Tones*	Downloaded melodies and other sound files
S! Appli*	S! Applications
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books*	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Decoration Call	Decoration Call files created on handset or obtained via mail
Flash®	Downloaded Flash® (animation) files
Other Docs	Other files (Dictionary files, etc.)

* Contains corresponding Yahoo! Keitai menu shortcut.

Memory Status

- Delete messages/files when memory is low. Handset performance may be affected when memory is full.

● ➔ **Data Folder** ➔ ● ➔ **Memory Status** ➔ ● ➔ **Phone Memory or Memory Card** ➔ ●




Opening Files

2

Basic Operations

1 → **Data Folder** →

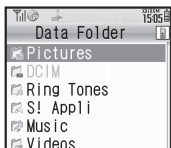

- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press .


2 **Select folder** →

To open a sub folder, select it and press .



File List

3 **Select file** →

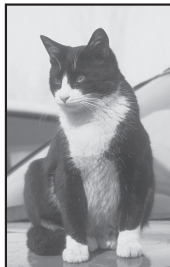

- The content plays or appears.
- To return to file list, press .

Handling Open Images

- Press to enlarge, or press or to open next/previous ones.

S! Mail Attachments

After , select file → → **Send/ Blog** → → **As Message** →

- When a confirmation appears, follow onscreen instructions.

 
Copy Protected Files (or)

- Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.

1 **In file list, select file** →



2 **Slide Show** →

- Slide Show starts.

3 → **Slide Show stops**

Changing Interval

In , → **Speed** → → **Select speed** →

- When Speed is set to **Manual**, press or to advance or reverse frame.

Advanced

- Switching file list view
- Changing image quality
- Changing Slide Show settings
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.2-32)



Managing Files & Folders

 
Adding Folders

May be unavailable for some folders.

1 ➔ **Data Folder** ➔ ➔
Select folder ➔

2
If **Download** is selected or folder is empty, skip ahead to **4**.

3 **Manage Items** ➔



4 **Create Folder** ➔ ➔ **Enter name** ➔

Renaming Folders

After **1**, select folder ➔ ➔
Manage Items ➔ ➔ **Rename** ➔
 ➔ **Enter name** ➔

- Assign different names to folders within a layer.

Moving Files

Some files may not be moved.

1 In file list, select file ➔

2 **Move** ➔ ➔ **Phone or Memory Card** ➔

3 **Select folder** ➔

4 **Move here** ➔

Copying Files

[File List] Select file ➔ ➔ **Copy**
➔ ➔ **Phone or Memory Card** ➔
 ➔ **Select folder** ➔ ➔ **Copy**
here ➔

Selecting Multiple Files

1 In file list, select file ➔
• Repeat **1** as needed. (To uncheck, select a file with and press .)

Hiding Folders

Restrict access to created folders.
Only handset folders can be hidden.

1 In file list, select folder ➔

2 **Set Secret** ➔ ➔ **Enter Handset Code** ➔

Accessing Secret Folders

[File List] ➔ **Unlock Temp.** ➔
➔ **Enter Handset Code** ➔

Advanced

- Opening file properties
- Renaming files
- Sorting files
- Deleting files & folders
- Canceling Secret
- Handling SVG files (P.2-33)



Using Memory Card

Use microSD™/microSDHC™ Memory Card (hereafter "Memory Card") to save and organize files for use on 930SH. Use recommended Memory Cards only. For details, see **P.14-22** "microSD™ Memory Card Compatibility."

Precautions

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.


Important Memory Card Usage Notes

- Never remove Memory Card or battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.


Inserting & Removing

Turn handset power off first.

1 Open cover

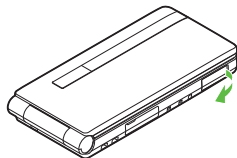


2 Insert card

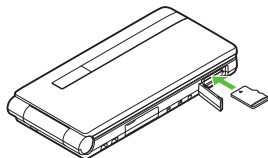


- With logo side up, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.

3 Close cover

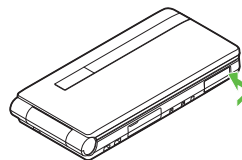

If Appears after Power On


- Memory Card may not be inserted properly; reinsert the card.
- #### Removing Memory Card
- Gently push in card and release it; card pops out. Pull card straight out gently.

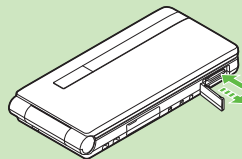

Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.

 - 1 ➔ **Settings** ➔ ➔ ➔ **Connectivity** ➔ **Memory Card** ➔



- 2 **Format Card** ➔ ➔ **Yes** ➔

- Offline Mode is set. Handset transmissions are suspended until format is complete.

- 3 **Enter Handset Code** ➔



- 4 **Yes** ➔
 - To cancel, choose **No** and press .

Precaution

- Never remove Memory Card or battery while formatting; may cause damage.

Opening Memory Card Files

- 1 ➔ **Data Folder** ➔
- 2 ➔ **Change to MemoryCard** ➔
 - Memory Card Data Folder opens.
- 3 **Select folder** ➔
- 4 **Select file** ➔

Advanced


- Using HTML files on Memory Card (P.2-33)



Standby Window

View Setting

Changing display option

- → *Settings* → ● → In Phone Settings menu, *Display* → ● → *Standby Display* → ● → *Standby Window* → ● → *Display Window* → ● → *Select option* → ●
- For *Always Off*, pressing  in Standby opens Calendar.

Shortcut & Bookmark Settings (Shortcut Panel)

Assigning shortcuts/Bookmarks

Start Here  → Select icon →  → See below



Shortcuts

- Assign Shortcut* → ● → Select menu item → ● → Select function/folder → ●

Bookmarks

- Assign Bookmark* → ● → Select title → ● → Select Pictogram → ● → *Yes* → ●


Managing shortcuts/Bookmarks

Start Here  → Select icon →  → See below

Deleting shortcuts/Bookmarks

- Delete* → ● → *Yes* → ●

Changing shortcut/bookmark order

- Move* → ● → Select icon →  (Up) or  (Down) → ●

News Settings

Adding news items

Start Here  →  → *Add News* → ● → See below

Shortcut Panel & Calendar/Tag Panel

- S! Quick News List* → ● → *登録はこちら* → ● → *Yes* → ● → Select genre → ● → Select item → ●
- Follow onscreen instructions.

News Panel

- Select genre → ● → Select item → ●
- Follow onscreen instructions.

Changing news scroll speed

 →  → *News Display* → ● → *News Speed*

- ● → Select speed → ●
- Available for Shortcut Panel and Calendar/Tag Panel.

Showing unread news only

 →  → *News Display* → ● → *Target News*

- ● → *Unread Only* → ●
- Available for Shortcut Panel and Calendar/Tag Panel.

Changing news image setting

Start Here  →  → See below

Showing Images on Shortcut Panel & Calendar/Tag Panel

- News Display* → ● → *Display Image* → ● → *On* → ●
- Available when only news area is set to appear on the Panel.

Hiding Images on News Panel

- Display Image* → ● → *Off* → ●



Updating news items manually	One Item → Select item → → Manual Update → → Reload This News →
	All Items → → Manual Update → → Reload All → <ul style="list-style-type: none"> Available for News Panel.
Member Settings	
Assigning members	Shortcut Panel → Select member field → → Assign Member → → Select category → → Select entry/member →
	Member Panel → → Assign Member → → Select category → → Select entry/member → → (Empty) → <ul style="list-style-type: none"> Select a member instead of (Empty) to replace the member.
Managing members	→ Select member → → See below
	Deleting Members Delete → → Yes →
	Changing Member Order Move → → (Up) or (Down) →
	Changing Member Icons Change Icon → → Select Pictogram → <ul style="list-style-type: none"> Available for Shortcut Panel and Member Panel.

Customized Screen & S! Familiar Usability

Accessing Customized Screen source sites	→ Data Folder → → Customized Screen → → Select Customized Screen → → Web Access → <ul style="list-style-type: none"> Follow onscreen instructions.
Applying preset Customized Screen	→ Settings → → Customize → → Customized Screen → → Preset Screens → → Select pattern → →
Canceling Customized Screen	→ → Off → → Yes →
Canceling S! Familiar Usability	→ → S!おなじみ操作解除 → → Yes →
Canceling Customized Screen or S! Familiar Usability unconditionally	→ Main Menu → → Settings → → In Phone Settings menu, Customize → → Off → → Yes →
Deleting Customized Screens	→ Data Folder → → Customized Screen → → Select Customized Screen → → Delete → → Yes → <ul style="list-style-type: none"> When the corresponding Contents Key has been downloaded, choose Yes or No and press .



Text Entry

Using Character Codes	In a text entry window (Character Code mode), enter four digits (P.14-11)
Using Pager Code	In a text entry window, → <i>Input/Conversion</i> → → <i>Input Method</i> → → <i>Pager Code</i> → <ul style="list-style-type: none"> Return to text entry window and enter two digits (P.14-10).
Inserting line breaks	At the End of Text In a text entry window,
	Mid-Entry In a text entry window, # → / (→
Inserting spaces	In a text entry window,
Changing Font Size	In a text entry window, → <i>Insert/Font Size</i> → → <i>Font Size</i> → → <i>Select size</i> →
Disabling suggestions based on entered characters	In a text entry window, → <i>Input/Conversion</i> → → <i>Predictive</i> → → <i>Off</i> →
Disabling suggestions based on entered words	In a text entry window, → <i>Input/Conversion</i> → → <i>Previous Usage</i> → → <i>Off</i> →
Disabling emoticon/Pictogram suggestions based on entered words	In a text entry window, → <i>Input/Conversion</i> → → <i>EmoticonWordLink</i> → → <i>Off</i> →
Lowering type priorities in suggestion list	In a text entry window, → <i>Input/Conversion</i> → → <i>Set Low Priority</i> → → <i>Select type</i> → (✓ appears) →

Using Keypad to enter words/phrases from suggestion list	In a text entry window, → <i>Input/Conversion</i> → → <i>Select Candidate</i> → → <i>Enable 1-9, 0, *, #</i> →
Clearing entry log	In a text entry window, → <i>Input/Conversion</i> → → <i>Reset Log</i> → → <i>Yes</i> →
Undo conversion or recover deleted characters	In a text entry window, → <i>Undo/Recover</i> →
Inserting Phone Book entry items	In a text entry window, → <i>Insert/Font Size</i> → → <i>Phone Book</i> → → <i>Select entry</i> → → <i>Select item</i> →

User Dictionary

Deleting entries	→ <i>Settings</i> → → <i>In Phone Settings menu, User Dictionary</i> → → <i>Saved Word List</i> → → <i>Select word</i> → → <i>Yes</i> →
------------------	---



Dictionary	
Viewing dictionary information	[F2] → [F3] → Information → ●
Changing Font Size	[F2] → [F3] → Font Size → ● → Select size → ●
Copying Index Word	[F2] → Enter reading (or spelling) → Select word → ● → [F3] → Copy Index Word → ●
Looking up copied words in dictionaries	After copying text, [F2] → [F3] → By Copy Text → ● → Search → ● → Select word → ●
Deleting History & bookmarks	[Start Here] [F2] → [F3] → History or Bookmark List → ● → See below
	One Word Select word → [F3] → Delete → ● → Yes → ●
Updating dictionary list	All Words [F3] → Delete All → ● → Enter Handset Code → ● → Yes → ●
	[F2] → [F3] → 外辞書 → ● → [F3] → Update Dictionaries → ● → Yes → ●

Phone Book

■ View Settings

Changing view for entry search window	● → Phone → ● → Ph.Book Settings → ● → View Settings → ● → List Only → ●
Assigning images to Phone Book entries for incoming transmissions	[Start Here] ● → Phone → ● → Add New Entry → ● → Picture: → ● → See below
	Assigning Images Assign Picture → ● → Select image → ●
Hiding confirmation after calls to/from unsaved numbers	Capturing Images Take Picture → ● → Frame image on Display → ● → ●
	● → Phone → ● → Ph.Book Settings → ● → New Number Prompt → ● → Incoming Call or Outgoing Call → ● → Off → ●



Phone Book Entry

Saving other information	<p>[Start Here] → Phone → Add New Entry → See below</p> <p>Address Address: → Select item → Complete field →</p> <p>Office Office: → Select item → Enter text →</p> <p>Homepage Homepage: → Enter URL → Select type →</p> <p>Note Note: → Enter text →</p> <p>Birthday Birthday: → Enter date →</p>
	<p>→ Phone → Add New Entry → Select item, e.g., <i>Light-Voice Call</i>: → Switch On/Off → Select option → Light Color → </p>
	<p>→ Phone → Add New Entry → Select item, e.g., <i>Vibration-Message</i>: → Switch On/Off → Select option → Vibration Pattern → Select pattern → </p>
	<p>→ Select katakana row → Select entry → Edit → Select item → Edit → </p> <p>• Edit Reading after editing names.</p>

Setting incoming mail ring time	<p>→ Select katakana row → Select entry → Edit → Tone-New Message: → Duration → Enter time → </p> <p>• Available for compatible ringtones.</p>
Renaming Categories	<p>→ Phone → Category Control → Select Category → Edit Name → Enter name →</p>
Moving Categories	<p>→ Phone → Category Control → Select Category → Select target location →</p> <p>• View for <i>By Category</i> Phone Book search changes accordingly.</p>

Using Entries

Messaging via Phone Book	<p>[Start Here] → Select katakana row → Select entry → See below</p> <p>Phone Numbers Select phone number → Create Message → S! Mail or SMS → Complete message → </p> <p>Mail Address Select address → Complete message → </p>
	<p>→ Select katakana row → Select entry → Select phone number → Deco. Call → Deco. Call File → Deco. Call Folder → Select file → Outgoing Type → Dialed Call or Video Call → </p> <p>• When placing a Decoration Call for the first time, a confirmation appears.</p>
	<p>→ Select katakana row → Select entry → Select phone number → Call → S! Circle Talk → </p> <p>• Set My Status to <i>Online</i> first.</p>



Placing international calls via Phone Book	<p> → Select katakana row → Select entry → → Select phone number → Int'l Call → Select country → </p>
■ Manage Entries	
Deleting Phone Book entries	<p>One Entry</p> <p> → Select katakana row → Select entry → Delete → Yes → </p>
	<p>All Entries</p> <p> → Phone → Manage Entries → → Delete All → Select entry type → → Yes → Enter Handset Code → </p>
Checking memory status	<p> → Phone → Manage Entries → → Memory Status → </p>
Copying Phone Book entries	<p>One Entry (Handset → USIM Card)</p> <p> → Select katakana row → Select entry → Manage Entries → Copy Entry to USIM → Yes → </p>
	<p>One Entry (USIM Card → Handset)</p> <p> → Ph.Book Settings → Select Phone Book → USIM Memory → → Select katakana row → Select entry → Manage Entries → Copy Entry to Phone → </p>
	<p>All Entries</p> <p> → Phone → Manage Entries → → Copy All → Select method → Yes → </p> <p>• If handset/USIM Card memory is low, some entries may not be copied.</p>

Editing Categories on USIM Card	<p> Start Here → Phone → → Category Control → → Change to USIM → → See below </p>
	<p>Renaming Categories</p> <p> Select Category → → Edit Name → → Enter name → </p>
	<p>Moving Categories</p> <p> Select Category → Select target location → </p>
	<p>Changing Icons</p> <p> Select Category → → Change Icon → → Select Pictogram → </p>
Changing default storage media for new entries	<p> → Phone → → Ph.Book Settings → → Save New Entry → → USIM Memory or Ask Each Time → </p>
Switching reference Phone Book	<p> → Phone → → Ph.Book Settings → → Select Phone Book → → USIM Memory or Both → </p>
■ Mode Settings	
Activate Double Number first.	
Changing mode of all entries at once	<p> → Phone → → Manage Entries → → Change Mode(All) → → Select mode → → Enter Handset Code → </p>
Changing mode of multiple entries	<p> → Manage Entries → → Multiple Selection → → Select entry → (✓/□) → Change Mode → → Select mode → </p>
Changing mode of entries by Category	<p> → Select Category → Manage Entries → → Change Mode(Category) → → Select mode → → Enter Handset Code → </p> <p>• Set search method to By Category first.</p>



Data Folder

■ File/Folder View Settings

Switching file list view	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → → <i>Manage Items</i> → ● → <i>Change List View</i> → ● → <i>Select option</i> → ●
Changing image quality	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ● → → <i>Image Quality</i> (<i>Picture Quality</i> for Flash® files) → ● → <i>Select quality</i> → ●
Changing Slide Show settings	<ul style="list-style-type: none"> Start Here ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ● → → <i>Slide Show</i> → ● → → <i>See below</i>
	<ul style="list-style-type: none"> Playing Once <i>Repeat</i> → ● → <i>Off</i> → ●
	<ul style="list-style-type: none"> Playing Music <i>BGM Settings</i> → ● → <i>Switch On/Off</i> → ● → <i>On</i> → ●
	<ul style="list-style-type: none"> Changing Music <i>BGM Settings</i> → ● → <i>Play Ring Tones</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ●
Disabling automatic scroll of panorama images	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ● → → <i>Switch Autscroll</i> → ● → <i>Off</i> → ●
Hiding Softkeys in image view	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ● → → <i>SW GuideDisplay</i> → ● → <i>Off</i> → ●

■ Using Files/Folders

Using files as Wallpaper	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → → <i>Set as Wallpaper</i> → ● → ● <ul style="list-style-type: none"> ● For images smaller or larger than Display, select an option and press ●.
Using files as ringtones	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → → <i>Set as Ringtone</i> → ● → <i>Select item</i> → ● <ul style="list-style-type: none"> ● When prompted, enter ring time and press ●. ● When a confirmation appears, follow onscreen instructions.
Using files as ringvideos	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Videos</i> → ● → <i>Select file</i> → → <i>Set as Ring Video</i> → ● → <i>Select item</i> → ● <ul style="list-style-type: none"> ● For <i>For New Message</i> or <i>For New PC Mail</i>, enter ring time and press ●.
Saving Phone Book entries	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → → <i>Save to Phone Book</i> → ● → <i>As New Entry</i> → ● → <i>Complete other fields</i> → <ul style="list-style-type: none"> ● To add to an existing entry, select <i>As New Detail</i>.
Activating mobile camera, etc. in corresponding folders	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → → <i>Take Picture, Record Video</i> or <i>Record Voice</i> → ●



Managing Files/Folders

Opening file properties	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ☒ → Details → ●
Renaming files	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ☒ → Manage Items → ● → Rename → ● → Enter name → ●
Sorting files	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → ☒ → Manage Items → ● → Sort → ● → Select method → ● • To reverse the order, sort by the same method again.
Deleting files & folders	<ul style="list-style-type: none"> Start Here ● → Data Folder → ● → Select folder → See below
	<p>Single Files</p> <ul style="list-style-type: none"> ● → Select file → ☒ → Delete → ● → Yes → ● <p>Folder & Files Within</p> <ul style="list-style-type: none"> ☒ → Delete → ● → Enter Handset Code → ● → Yes → ●
Canceling Secret	<ul style="list-style-type: none"> Unlock Secret folders temporarily and select folder → ☒ → Unset Secret → ● → Enter Handset Code → ●

Handling SVG files

Line Scroll



Page Scroll

☒2] (Up), ☒8] (Down), ☒6] (Right), ☒4] (Left)

Zoom

☒1] (Zoom out), ☒3] (Zoom in)

Rotate

☒7] (Counterclockwise), ☒9] (Clockwise)

Key Action Mode

☒0

Default View

☒5]

Memory Card

Using HTML files on Memory Card

- → Settings → ● → ☒ Connectivity →
- Memory Card → ● → SD Local Contents →
- → Select title → ●



Standby Window

? Shortcut/member icons do not appear on Shortcut Panel

- By default, only news area is set to appear on Shortcut Panel. Access **Select Item** via Options menu and select **Shortcut** or **Member** as needed.

Customized Screen

? Customized Screen is not applied

- Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book

? Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images do not appear for incoming Decoration Calls including image/video.
- Images may not appear when another function is active, etc.

? Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Ringtones do not sound for incoming Decoration Calls with sound.
- Memory Card with source files may be removed; reinsert the card to restore settings.

? Cannot enter 16 characters for Category names

- Character entry limit for Category names may be lower depending on the USIM Card in use.



Data Folder



Cannot copy files properly

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)



Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.



Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 241 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.



What should I be careful about when entering file names?

- Single-byte Symbols ¥, /, :, ;, ,, <, >, /, ?, * and " are not supported.

