

<b>Media Player</b> .....	<b>8-2</b>
Media Basics .....	8-2
<b>Music</b> .....	<b>8-5</b>
Playing Music.....	8-5
<b>Video</b> .....	<b>8-6</b>
Playing Video.....	8-6

<b>Playlists</b> .....	<b>8-7</b>
Using Playlists .....	8-7
<b>S! Appli</b> .....	<b>8-8</b>
Using S! Applications .....	8-8
<b>Additional Functions</b> .....	<b>8-9</b>
<b>Troubleshooting</b> .....	<b>8-14</b>

# 8

## Media Player & S! Applications



## Media Basics

Use Media Player to play music/video on 930SH.

- Download media files from Mobile Internet sites via Media Player directly.
- Transfer PC music files and save them on Memory Card.

### Music File Support

#### My Music

(Handset/Memory Card)

Downloads/Transferred Files

#### SD AUDIO

(Memory Card)

Transferred SD-Audio Files

#### WMA

(Memory Card)

Transferred WMA Files

### Video File Support

#### My Videos

(Handset/Memory Card)

Downloads/Recorded Files

When using a Memory Card with SD-Video files recorded on other devices, open them from **SD VIDEO**.

### Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- When battery is low, Media Player will not play. If battery runs low during playback, Media Player shuts off.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming); downloaded media cannot be saved. Packet transmission fees apply even while stream is paused.

### Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.



## Downloading Music

Download music from the Internet.  
Read information (price, expiry date, etc.)  
on the source site.

- 1  ➔ **Media Player** ➔ 



Media Player Menu

- 2 **Music** ➔ 

- 3 **Download Music** ➔ 

- Follow the links to download media.

### Download via Music Search (Japanese)

In , **Music Search** ➔ 

- Follow onscreen instructions.

## Downloading Video

- 1 In **Media Player** menu,  
**Videos** ➔ 

- 2 **Download Videos** ➔ 

- Follow the links to download media.



### Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

### Handling Transferred Files


- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

### Using MTP Mode

Follow these steps to save WMA files via S! Music Connect (Japanese):

- For more about S! Music Connect, see SOFTBANK MOBILE Corp. Website (P.14-22).
- Copy protected files can only be played on the handset with which the files were transferred.

- 1  → **Media Player** →
- 2 **MTP Mode** →  → **Yes** →

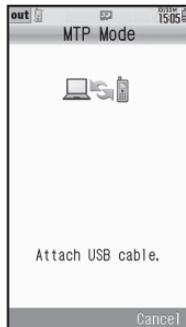

### 3 Connect handset to a PC via USB Cable

- Copy music from PC. Refer to the S! Music Connect help menu for operational instructions.

### 4 → **Yes** → → **Connection ends**

- Disconnect USB Cable.

### Saving AAC Files

Convert PC music files to 930SH-compatible format (P.14-21), then save to corresponding Memory Card folder (P.14-23) via Mass Storage. Install USB Cable driver beforehand.



## Playing Music

1


2 **My Music** **Select tab (folder)**



Music Playlists Window

3 **All Music**

4 **Select file**

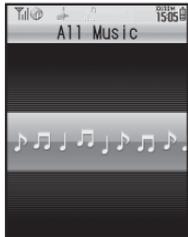

Music Playback Window

- Album art appears for compatible files.

### Stopping Playback

While paused,

Using Other Functions while Playing Music  
After , or

- To stop playback, follow these steps in Standby:

### Playing SD AUDIO or WMA Files

In , **SD AUDIO** or **WMA**

From

### Searching Music Files

After , **Search** Enter search text

### Lyric Display-Compatible Files

- Press to display lyrics.

### Music Playback Window Indicators



1	Title	6	Elapsed time
2	Artist name	7	Volume
3	Track number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

### Music Playback Operations

Replay	(Long Press: rewind*)
Skip Forward	(Long Press: fast forward*)
Pause	
Volume Down	(Long Press: mute)
Volume Up or Cancel Mute	
Switch Sound Output	(Long)
Open Help	

\*Release for playback.

### Advanced


- Resuming from stopped point
- Switching audio output to wireless device
- Playing repeatedly or randomly
- Changing Sound Effects (P.8-9)



# Playing Video

1 → **Media Player** → → **Videos** →


2 **My Videos** → → **Phone Memory or Memory Card** →

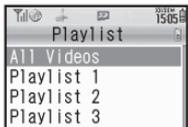

Video Playlists Window

3 **All Videos** →

4 **Select file** →

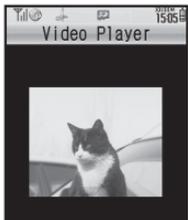

Video Playback Window

5 → **Playback stops**

**Playing SD VIDEO Files**  
 In , **SD VIDEO** → → 4  
**Searching Video Files**  
 After , → **Search** → → Enter  
 search text →

**At Alarm Time**

- Playback stops.

**Video Recorded on Other Devices**

- Video image may appear rotated.

## Video Playback Window Indicators



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

## Video Playback Operations

For pause, volume up/down, sound output or help, see P.8-5 "Music Playback Operations."

<b>Replay</b>	(Long Press: rewind*)
<b>Skip Forward</b>	(Long Press while paused: advance frame, Long Press: fast forward*)
<b>Toggle Display Size</b>	2.3

\*Release for playback.

## Advanced

- Resuming from stopped point
- Switching audio output to wireless device
- Playing repeatedly or randomly
- Specifying start point
- Changing Sound Effects
- Changing playback size
- Accessing linked information
- Setting Backlight status
- Hiding linked information (P.8-9)



## Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

### Adding to Playlist

Follow these steps to add a music file to プレイリスト:

- 1 → **Media Player** → → **Music** →



- 2 **My Music** →
- 3 **All Music** → → **Select file** →



- 4 **Add to Playlist** → → プレイリスト →

### Renaming Playlists

- 1 **In Playlists window, select Playlist** →



- 2 **Edit List Title** → → **Enter name** →



### Advanced

- Organizing Playlists ● Sorting files ● Deleting/editing SD AUDIO files ● Deleting All WMA files ● Downloading Contents Keys ● Opening properties (P.8-10 - 8-11)
- Organizing Playlists ● Sorting files ● Downloading Contents Keys ● Opening properties ● Deleting SD VIDEO files (P.8-11)



## Using S! Applications

Try out the preloaded S! Applications or download and use 930SH-compatible S! Applications, including games. Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

### Remote Control

- Use **Familink Remote** S! Application (Japanese) to control a TV, VCR, etc. via infrared.

- 1 → **S! Appli** →
- 2 **S! Appli Library** →



S! Appli Library

- 3 **Select application** →

### Network S! Applications

- A message appears indicating that Internet connection is required. Follow onscreen instructions.

### Incoming Calls

- Incoming calls automatically pause S! Application.

### Opening S! Appli Request Log

- In , **Demand History** →

## Exiting S! Applications

- 1



- 2 **End** →

### Pausing S! Applications

- In , **Suspend** →

### Resuming S! Applications

- **Resume** →

- Select **Cancel** to open Main Menu and keep the S! Application paused.
- Select **End** to end the S! Application.

## Advanced

- Downloading S! Applications
- Adjusting S! Application sound volume
- Canceling surround effect
- Setting handset responses to incoming transmissions
- Setting S! Application to activate in Standby
- Setting Permissions
- Opening properties (P.8-12)
- Moving S! Applications to Memory Card
- Changing S! Application settings
- Deleting S! Applications
- Restoring default S! Application settings
- Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 930SH
- Opening Java™ license information (P.8-13)



## Media Playback

### Music & Video

Resuming from stopped point	<ul style="list-style-type: none"> <li>● → <i>Media Player</i> → ● → <i>Music or Videos</i> → ●</li> <li>● → <i>Last Played Music or Last Played Video</i> → ●</li> </ul>
Switching audio output to wireless device	<ul style="list-style-type: none"> <li>● → <i>Media Player</i> → ● → <i>Settings</i> → ● → ●</li> <li>● <i>Sound Output</i> → ● → <i>Bluetooth Device</i> → ●</li> </ul>

### Music

Playing repeatedly or randomly	<ul style="list-style-type: none"> <li>Start Here During playback, ☒ → <i>Playback Mode</i> → ● → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat One File</i></li> <li><i>Repeat</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat All Files</i></li> <li><i>Repeat All</i> → ●</li> <li><i>Play Randomly</i></li> <li><i>Random</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat Randomly</i></li> <li><i>Random Repeat</i> → ●</li> </ul>
Changing Sound Effects	<ul style="list-style-type: none"> <li>During playback, ☒ → <i>Sound Effects</i> → ● → ●</li> <li>Select effect → ●</li> </ul>

### Video

Playing repeatedly or randomly	<ul style="list-style-type: none"> <li>Start Here During playback, ☒ → <i>Settings</i> → ● → ● → <i>Playback Mode</i> → ● → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat One File</i></li> <li><i>Repeat</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat All Files</i></li> <li><i>Repeat All</i> → ●</li> <li><i>Play Randomly</i></li> <li><i>Random</i> → ●</li> </ul>
Specifying start point	<ul style="list-style-type: none"> <li>During playback, ☒ → <i>Time Search</i> → ● → ●</li> <li>Enter time → ●</li> </ul>
Changing Sound Effects	<ul style="list-style-type: none"> <li>During playback, ☒ → <i>Settings</i> → ● → ●</li> <li><i>Sound Effects</i> → ● → Select effect → ●</li> </ul>
Changing playback size	<ul style="list-style-type: none"> <li>During playback, ☒ → <i>Settings</i> → ● → ●</li> <li><i>Display Size</i> → ● → Select size → ●</li> </ul>
Accessing linked information	<ul style="list-style-type: none"> <li>During playback, ☒ → <i>Access WEB Link</i> → ● → Yes → ●</li> </ul>
Setting Backlight status	<ul style="list-style-type: none"> <li>During playback, ☒ → <i>Settings</i> → ● → ●</li> <li><i>Backlight</i> → ● → Select option → ●</li> <li>• Selecting <i>Normal Settings</i> applies Display Backlight setting.</li> </ul>
Hiding linked information	<ul style="list-style-type: none"> <li>During playback, ☒ → <i>Settings</i> → ● → ●</li> <li><i>Web Link Setting</i> → ● → Off → ●</li> </ul>



## Managing Music Files

Organizing Playlists	<p><b>Start Here</b> → <b>Media Player</b> → <b>Music</b> → <b>My Music</b> → <b>Select tab (folder)</b> → <b>See below</b></p> <p><b>Adding New Playlists</b>  <b>Add New Playlist</b> → <b>Enter name</b></p> <p><b>Deleting Playlists</b>  <b>Select Playlist</b> → <b>Delete Playlist</b> → <b>Yes</b></p> <p><b>Deleting Playlist Files</b>  <b>Select Playlist</b> → <b>Select file</b> → <b>Delete</b> → <b>Yes</b></p> <p><b>Changing File Order</b>  <b>Select Playlist</b> → <b>Select file</b> → <b>Change Order</b> → <b>Move file</b></p>
	<p><b>Sorting files</b>  <b>Media Player</b> → <b>Music</b> → <b>My Music</b> → <b>Select tab (folder)</b> → <b>All Music</b> → <b>Sort</b> → <b>Select option</b></p>

Deleting/editing SD AUDIO files	<p><b>Start Here</b> → <b>Media Player</b> → <b>Music</b> → <b>SD AUDIO</b> → <b>See below</b></p> <p><b>Deleting Single Files</b>  <b>All Music</b> → <b>Select file</b> → <b>Delete Track</b> → <b>Yes</b>          • Source files will be deleted.</p> <p><b>Deleting All Files</b>  <b>All Music</b> → <b>Del. All Tracks</b> → <b>Yes</b> → <b>Yes</b>          • Source files will be deleted.</p> <p><b>Editing Title/Artist</b>  <b>All Music</b> → <b>Select file</b> → <b>Edit</b> → <b>Select item</b> → <b>Enter title or name</b></p>
	<p><b>Deleting All WMA files</b>  <b>Media Player</b> → <b>Settings</b> → <b>Delete All WMA</b> → <b>Enter Handset Code</b> → <b>Yes</b>          • Source files will be deleted.</p>
	<p><b>Downloading Contents Keys</b>  <b>Media Player</b> → <b>Music</b> → <b>My Music</b> → <b>Select tab (folder)</b> → <b>Select Playlist</b> → <b>Select file (with Ⓢ)</b> → <b>Yes</b>          • Follow onscreen instructions.</p>



Opening properties	<p><b>Start Here</b> → <b>Media Player</b> → <b>Music</b> → <b>See below</b></p> <p><b>SD AUDIO Files</b>  <b>SD AUDIO</b> → <b>All Music</b> → <b>Select file</b> → <b>Details</b></p> <p><b>Other Files</b>  <b>My Music</b> → <b>Select tab (folder)</b> → <b>Select Playlist</b> → <b>Select file</b> → <b>Details</b></p>
--------------------	--

## Managing Video Files

Organizing Playlists	<p><b>Start Here</b> → <b>Media Player</b> → <b>Videos</b> → <b>My Videos</b> → <b>Phone Memory or Memory Card</b> → <b>See below</b></p> <p><b>Adding New Playlists</b>  <b>Add New Playlist</b> → <b>Enter name</b></p> <p><b>Deleting Playlists</b>  <b>Select Playlist</b> → <b>Delete Playlist</b> → <b>Yes</b></p> <p><b>Deleting Playlist Files</b>  <b>Select Playlist</b> → <b>Select file</b> → <b>Delete</b> → <b>Yes</b></p> <p><b>Changing File Order</b>  <b>Select Playlist</b> → <b>Select file</b> → <b>Change Order</b> → <b>Move file</b></p>
	<p>→ <b>Media Player</b> → <b>Videos</b> → <b>My Videos</b> → <b>Phone Memory or Memory Card</b> → <b>All Videos</b> → <b>Sort</b> → <b>Select option</b></p>

Downloading Contents Keys	<p>→ <b>Media Player</b> → <b>Videos</b> → <b>My Videos</b> → <b>Phone Memory or Memory Card</b> → <b>All Videos</b> → <b>Select file (with ⌘)</b> → <b>Yes</b></p> <ul style="list-style-type: none"> <li>Follow onscreen instructions.</li> </ul>
Opening properties	<p><b>Start Here</b> → <b>Media Player</b> → <b>Videos</b> → <b>See below</b></p> <p><b>SD VIDEO Files</b>  <b>SD VIDEO</b> → <b>Select file</b> → <b>Details</b></p> <p><b>Other Files</b>  <b>My Videos</b> → <b>Phone Memory or Memory Card</b> → <b>Select Playlist</b> → <b>Select file</b> → <b>Details</b></p>
Deleting SD VIDEO files	<p>→ <b>Media Player</b> → <b>Videos</b> → <b>SD VIDEO</b> → <b>Select file</b> → <b>Delete</b> → <b>Yes</b></p> <ul style="list-style-type: none"> <li>Source files will be deleted.</li> </ul>



## S! Applications

Downloading S! Applications	<ul style="list-style-type: none"> <li>● → S! Appli → ● → S! Appli Library → ●</li> <li>→ Download → ●</li> <li>• Follow onscreen instructions.</li> </ul>
Adjusting S! Application sound volume	<ul style="list-style-type: none"> <li>● → S! Appli → ● → Settings → ● →</li> <li>Application Volume → ● → Adjust level → ●</li> </ul>
Canceling surround effect	<ul style="list-style-type: none"> <li>● → S! Appli → ● → Settings → ● →</li> <li>Surround → ● → Off → ●</li> </ul>
Setting handset responses to incoming transmissions	<ul style="list-style-type: none"> <li>[Start Here] ● → S! Appli → ● → Settings → ●</li> <li>→ Calls &amp; Alarms → ● → See below</li> </ul>
	<p><b>Showing Calls</b></p> <ul style="list-style-type: none"> <li>Select item → ● → Show Call Notice → ●</li> </ul>
	<p><b>Pausing S! Application for Incoming Mail</b></p> <ul style="list-style-type: none"> <li>Incoming Message → ● → Message Priority → ●</li> </ul>
	<p><b>Showing Alarm Notice</b></p> <ul style="list-style-type: none"> <li>Alarm → ● → Alarm Notice → ●</li> </ul>
	<p><b>Showing Incoming S! Appli Request Notice</b></p> <ul style="list-style-type: none"> <li>Start Demand → ● → Start Notice → ●</li> </ul>

Setting S! Application to activate in Standby	<ul style="list-style-type: none"> <li>[Start Here] ● → S! Appli → ● → See below</li> </ul> <p><b>Activating Screensaver</b></p> <ul style="list-style-type: none"> <li>Settings → ● → Screensaver → ● → Switch On/Off → ● → On → ●</li> </ul> <p><b>Setting Screensaver</b></p> <ul style="list-style-type: none"> <li>S! Appli Library → ● → Select application →</li> <li>☑ → As Screensaver → ●</li> <li>• <b>As Screensaver</b> appears for compatible S! Applications.</li> <li>• Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.</li> </ul> <p><b>Changing Screensaver Activation Time</b></p> <ul style="list-style-type: none"> <li>Settings → ● → Screensaver → ● →</li> <li>Activation Time → ● → Enter time → ●</li> </ul> <p><b>Disabling Automatic Screensaver Restart</b></p> <ul style="list-style-type: none"> <li>Settings → ● → Screensaver → ● → Stop Auto Start → ● → On → ●</li> </ul>
	<ul style="list-style-type: none"> <li>[Start Here] ● → S! Appli → ● → S! Appli Library → ● → Select application → ☑ →</li> <li>Permission → ● → See below</li> </ul> <p><b>Customizing Permissions for S! Appli Operations</b></p> <ul style="list-style-type: none"> <li>Select item → ● → Select option → ●</li> </ul> <p><b>Resetting Permission Settings</b></p> <ul style="list-style-type: none"> <li>Reset Settings → ● → Yes → ●</li> </ul>
	<ul style="list-style-type: none"> <li>● → S! Appli → ● → S! Appli Library → ●</li> <li>→ Select application → ☑ → Details → ●</li> </ul>



<b>Moving S! Applications to Memory Card</b>	<p> <input type="radio"/> → <i>S! Appli</i> → <input type="radio"/> → <i>S! Appli Library</i> → <input type="radio"/>            → <b>Select application</b> → <input type="checkbox"/> → <b>Complete selection</b> → <input type="checkbox"/> → <b>Move to Card</b> → <input type="radio"/> </p> <ul style="list-style-type: none"> <li>When an older version of the S! Application is saved, choose <b>Yes</b> or <b>No</b> and press <input type="radio"/>.</li> <li>Repeat application selection step as needed before pressing <input type="checkbox"/>.</li> <li>Some S! Applications cannot be moved to Memory Card.</li> </ul>
<b>Changing S! Application settings</b>	<p> <input type="button" value="Start Here"/> → <i>S! Appli</i> → <input type="radio"/> → <b>Settings</b> → <input type="radio"/>            → <b>See below</b> </p> <p> <b>Enabling Multimedia Communication</b>  <i>Communication</i> → <input type="radio"/> → <b>On</b> → <input type="radio"/> </p> <p> <b>Setting Backlight Status</b>  <i>Backlight</i> → <input type="radio"/> → <b>Switch On/Off</b> → <input type="radio"/> → <input type="radio"/>  <b>Select option</b> → <input type="radio"/> </p> <ul style="list-style-type: none"> <li>Selecting <b>Normal Settings</b> applies Display Backlight setting.</li> </ul> <p> <b>Disabling Backlight Flashing</b>  <i>Backlight</i> → <input type="radio"/> → <b>Blink</b> → <input type="radio"/> → <b>Off</b> → <input type="radio"/> </p> <p> <b>Disabling Vibration</b>  <i>Vibration</i> → <input type="radio"/> → <b>Off</b> → <input type="radio"/> </p>
<b>Deleting S! Applications</b>	<p> <input type="radio"/> → <i>S! Appli</i> → <input type="radio"/> → <i>S! Appli Library</i> → <input type="radio"/>            → <b>Select application</b> → <input type="checkbox"/> → <b>Delete</b> → <input type="radio"/> → <input type="radio"/>  <b>Yes</b> → <input type="radio"/> </p> <ul style="list-style-type: none"> <li>Handset Code may be required.</li> <li>Cancel Screensaver to delete Screensaver S! Application.</li> </ul>

<b>Restoring default S! Application settings</b>	<p> <input type="radio"/> → <i>S! Appli</i> → <input type="radio"/> → <b>Settings</b> → <input type="radio"/> → <b>Set to Default</b> → <input type="radio"/> → <b>Enter Handset Code</b> → <input type="radio"/> → <b>Yes</b> → <input type="radio"/> </p>
<b>Restoring default S! Appli Library</b>	<p> <input type="radio"/> → <i>S! Appli</i> → <input type="radio"/> → <b>Settings</b> → <input type="radio"/> → <b>Memory All Clear</b> → <input type="radio"/> → <b>Enter Handset Code</b> → <input type="radio"/> → <b>Yes</b> → <input type="radio"/> </p> <ul style="list-style-type: none"> <li>Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keita® service providers for details.)</li> <li>Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications; Near Chat access restriction will be canceled.</li> </ul>
<b>Synchronizing Memory Card S! Applications with 930SH</b>	<p> <input type="radio"/> → <i>S! Appli</i> → <input type="radio"/> → <b>Settings</b> → <input type="radio"/> → <b>Synchronization</b> → <input type="radio"/> → <b>Yes</b> → <input type="radio"/> </p>
<b>Opening Java™ license information</b>	<p> <input type="radio"/> → <i>S! Appli</i> → <input type="radio"/> → <b>Information</b> → <input type="radio"/> </p>



## Music

### ? How do I delete files in All Music?

- Delete All Music files via Data Folder (Music or Ring Tones).

### ? WMA files do not appear

- Did you use 930SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform **Delete All WMA** and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)

### ? Cannot transfer WMA files

- WMA files may be corrupted; perform **Delete All WMA** and retry.

### ? Cannot play WMA files

- Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform **Delete All WMA** and retry.

## Video

### ? How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

## S! Applications

### ? Cannot move S! Applications to Memory Card

- The S! Application may already be saved or Memory Card memory may be low.

### ? S! Applications do not pause for incoming transmissions despite Calls & Alarms settings

- Regardless of setting, a message appears for Screensaver S! Applications.

