

USIM Card	14-2
About USIM Card	14-2
USIM Card Installation.....	14-3
Battery	14-4
Battery Installation.....	14-4
Software Update	14-5
Troubleshooting	14-6
Key Assignments	14-8
Pager Codes	14-10
Pager Code List.....	14-10

Character Codes	14-11
Character Code List	14-11
Weather Indicators	14-17
Weather Indicator List	14-17
Specifications	14-18
Memory Card Structure & Contents ...	14-23
Menu List	14-24
Index	14-31
Warranty & Service	14-39
Customer Service	14-40

14

 
Appendix



About USIM Card

USIM Card is an IC card containing customer and authentication information, including the handset number. USIM Card must be inserted to use this handset. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

Precautions

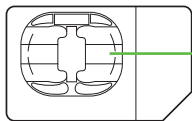

IC Chip

- Do not insert USIM Card into any other IC card device. SoftBank is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Use a dry, soft cloth to clean the USIM Card.
- Do not attach labels to USIM Card. Malfunction may result.

Important

- USIM Card is the property of SoftBank.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Customer Center, General Information (P.14-40).

USIM PINs

There are two Security Codes for USIM Card; both are **9999** by default.

PIN	Security Code to prevent unauthorized use of handset
PIN2	Required to clear Call Costs and to set Max Cost, etc.

PIN Lock

- Entering incorrect PIN three consecutive times activates PIN Lock or PIN2 Lock, limiting handset use.

Canceled PIN Lock

- Contact SoftBank Customer Center, General Information (P.14-40) for your Personal Unblocking Key (PUK Code) and follow these steps:
 - Enter PUK Code ➔ ● ➔ Enter new PIN/PIN2 ➔ ● ➔ Re-enter new PIN/PIN2 ➔ ●
 - Write down PUK code.

PUK Lock

- Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. Contact SoftBank Customer Center, General Information (P.14-40) for recovery.

 


USIM Card Installation

- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

Inserting

- 1 Remove battery (P.14-4)
- 2 Slide in USIM Card with IC chip facing up

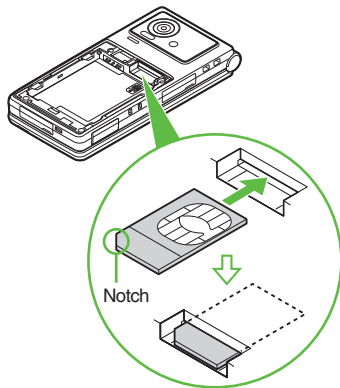


- Reinstall battery (P.14-4).

Removing

Take care not to lose removed USIM Card.

 - 1 Remove battery (P.14-4)
- 2 Gently slide out USIM Card as shown



- Reinstall battery (P.14-4).

After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

- Some downloaded files may be inaccessible. In addition, S! Applications, BookSurfing®, S! Town and Near Chat may be disabled after USIM Card replacement.



Battery Installation

About Battery

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.

Lithium-ion Battery

- This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.



 
Li-ion00

- To recycle a used lithium-ion battery, take it to any shop displaying the symbol shown above.
- To avoid fire or electric shock, do not short-circuit or disassemble battery.

Inserting & Removing


1 Remove cover

Battery Cover

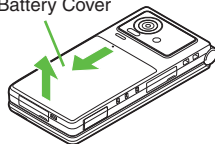


- Press and slide as shown.

 2 Insert battery

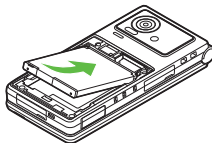

- With logo side up, fit tabs into battery cavity slots.

 
3 Close cover

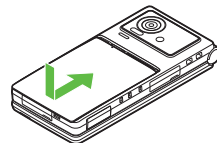

- Position and slide the cover gently as shown until it stops.

Removing

 - Turn handset power off and lift battery as shown.

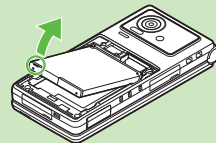

Software Update

Check for firmware updates and download as required.

Precautions

 
- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand.
- Update will not start if other functions are in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk.
- Always back up important information. SoftBank cannot be held liable for damages from lost information, etc.

Updating Software

Packet transmission fees do not apply to updates (including checking, downloading and rewriting).

1  ➔ **Settings** ➔  ➔ In **Phone Settings menu, Software Update** ➔ 

2  **Phone Update** ➔ 

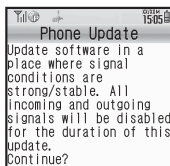

- Follow onscreen instructions.

Setting Update Period (Japanese)


In  **Update Period** ➔ 

- Follow onscreen instructions.

Update Result

 
In  **Update Result** ➔ 

Scheduled Update

Confirmation appears at scheduled update time. Press  or wait a while for update to start.


When Updated

A message appears and handset reboots.

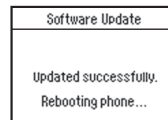

After reboot, completion message appears and Information window opens.

Update Result

While Information window appears, **Update Result** ➔ 





Reboot Failure

- If handset does not return to Standby after update, turn power off, reinsert battery, then restart it. If it still does not restart, contact SoftBank Customer Center, Customer Assistance (P.14-40).



Troubleshooting

■ General

Problem	Possible Cause	Solution
Handset won't turn on	Was  pressed long enough?	Press  longer.
	Battery may need to be charged or replaced.	Charge battery or install a charged battery.
	Battery may not be properly installed.	Install battery properly (P.14-4).
Handset won't respond	Is Switch On/Off in PIN Entry On ?	If On , PIN is required. Enter PIN according to onscreen prompt.
Insert USIM Card appears	USIM Card may not be properly inserted.	Turn power off and check that USIM Card is properly inserted, then restart handset. If the message still appears, USIM may be damaged.
	The correct USIM Card may not be inserted.	Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.
	There may be debris on IC chip/terminals.	Clean relevant parts with a dry cloth and re-insert.
REFRESH appears and handset returns to Standby	Handset may have been dropped or subjected to shocks.	Handset failed to recognize USIM Card temporarily. This is not a malfunction.
Keypad won't respond	Keypad Lock may be active ( appears).	Cancel Keypad Lock (P.1-18).
	Function Lock may be active ( appears).	Cancel Function Lock (P.11-2).

Problem	Possible Cause	Solution
Battery strength indicator flashes when not charging	Ambient temperature may be outside 5°C to 35°C.	Use within an ambient temperature of 5°C - 35°C.
Saved entry/folder does not appear on handset	Entry/folder may be set to Secret.	Activate Show Secret Data (P.11-3).
Cannot use Predictive	Show Secret Data may be active.	Cancel Show Secret Data.
Handset/AC Charger feels warm	Handset/AC Charger may warm while charging.	Unless handset/AC Charger is too hot to touch, warmth is considered normal. Always avoid prolonged skin contact to prevent burn injuries.
	Handset may warm during extended periods of use.	
	Handset may warm during Video Calls.	
Cannot access Memory Card files	Memory Card may not be properly formatted.	Use 930SH-formatted Memory Cards.
Clock settings are lost	Did you leave handset without battery?	Clock settings remain even when removing battery for replacement, etc. However, if handset is left with no battery or an exhausted one for an extended period of time (approximately one hour), Clock will need to be reset.



■ Charger/Battery

Problem	Possible Cause	Solution
Battery charges quickly	Remaining charge shortens charging time.	This is normal.
	Battery may be terminally exhausted or defective. (Small Light flashes red.)	Replace battery with a new one.
Battery charges slowly	Charging slows during Video Calls.	End the call to charge faster.
	Battery may be charging via USB.	Use AC Charger.
Battery won't charge	AC Charger may not be properly connected to handset.	Make sure connector is securely inserted and retry.
	AC Charger may not be firmly plugged in to AC outlet.	Remove plug from outlet, re-insert and retry.
	Battery may not be properly installed.	Install battery properly (P.14-4).
	Battery, AC Charger, or Charging Terminals, or Device Port may be obstructed by dust, etc.	Clean terminals, connector and Port with a dry cotton swab and retry.
	Charger, etc. may not be supported.	Use specified AC Charger, etc. only; others may damage battery.

Problem	Possible Cause	Solution
Battery Time seems shorter than usual	High power consuming operations are in use.	Keep handset closed in Standby; reduce TV, S! Application, Media Player and Camera use, and limit transmissions/external connections.
	Using handset in poor conditions may shorten Battery Time.	Avoid prolonged use of handset out-of-range or in poor signal conditions.
	Power hungry settings may be active.	Lower Brightness, select shorter Display Saving/ Backlight time, etc.



Key Assignments











Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
☐1☐	あいうえお あいうえお	アイウエオ アイウエオ	@,/-1 ☐ (space)	1	1
☐2☐	かきくけこ	カキクケコ	ABCabc2	2	2
☐3☐	さしすせそ	サシスセソ	DEFdef3	3	3
☐4☐	たちつとっ	タチツテトツ	GHIghi4	4	4
☐5☐	なにぬねの	ナニヌネノ	JKLjkl5	5	5
☐6☐	はひふへほ	ハヒフヘホ	MNOmno6	6	6
☐7☐	まみむめも	マミムメモ	PQRSpars7	7	7
☐8☐	やゆよやゆよ	ヤユヨヤユヨ	TUVtuv8	8	8
☐9☐	らりるれろ	ラリルレロ	WXYZwxyz9	9	9
☐0☐	わをんー ・	ワヲンー ・ ・ ・ _1	0	0	0
☐☒☐	Log, Pictogram List (double-byte), Symbol List ³				_____
☐#☐	☐ (line break) ? ! ☐ (space)			#	_____




¹ - is available only in single-byte katakana entry.

² Available for phone number entry; some characters may not be enterable in some windows.

³ May not be enterable in some windows.



Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	Conversion (up) ⁴	Cursor up			
	Conversion (down) ⁵	Cursor down ↓ (line break)			
	Cursor left				
	Cursor right				
	Change entry mode				
	Toggle case (for some characters)			_____	
	_____	Toggle mode (upper/ lower and lower case)		_____	
	Delete one character				
	Cancel conversion	_____			Delete code
 (Long)	Delete before or after cursor				
	Recover characters deleted with 				
	Re-convert ⁶				

 	OK				
	Phonetic Conversion	_____			
	Hiragana to Katakana/ Alphanumeric Conversion	_____			

⁴Cursor moves up except during conversion.

⁵Cursor moves down except during conversion.



⁶Press  immediately after inserting characters to re-convert them.





Pager Code List

Gray background indicates upper and lower case available. Press  to switch immediately after character entry.

Double-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			*1
	8	や	(ゆ)	よ	✕	#	Space		*2
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	ゝ	ゞ	6	7	8	9	0

Single-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			*1
	8	ヤ	(ユ)	ヨ	✕	#	Space		*2
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	ヰ	ヱ	6	7	8	9	0



Double-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	や		ゆ		よ					*2
	9										
	0				ゝ	ゞ					

Single-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	ヤ		ユ		ヨ					*2
	9										
	0				ヰ	ヱ					

*1 Press   to insert  (line break) in mail message text, Notepad, etc.








 










 
*2 Press   to toggle upper and lower case modes.











First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit								
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6		7	8	9	0	1	2	3	4	5
363	つ									392	粘	乃	迺	堇	囊	惱	濃	納	能	424	僻	壁	癖	碧	別	營	蔑	箇	偏	委	ゆ								
364	植	追	鎚	痛	塚	柁	墜	樺	樞	393	腦	濃	視	蛋	は	把	播	霸	杞	425	片	篇	編	辺	返	遍	使	勉	婉	弁	449	愉	愈	癒	癒	優	勇	友	幽
365	漬	柘	薦	通	鏢	樁	樞	樞	樞	394	派	芘	破	萎	把	芭	播	霸	杞	426	鞭	鞭	編	返	遍	使	勉	婉	弁	450	愉	愈	癒	癒	優	勇	友	幽	
366	孺	紬	爪	吊	釣	鵠	鶴	鶴	鶴	395	波	派	破	萎	把	芭	播	霸	杞	426	保	鋪	鋪	捕	步	甫	輔	輔	451	悠	愉	癒	癒	優	勇	友	幽		
366	て									396	倍	培	煤	煤	把	芭	播	霸	杞	427	穗	保	鋪	鋪	捕	步	甫	輔	輔	452	祐	愉	癒	癒	優	勇	友	幽	
367	剃	貞	呈	定	堤	帝	亭	停	偵	397	陪	排	煤	煤	把	芭	播	霸	杞	428	抱	保	鋪	鋪	捕	步	甫	輔	輔	453	余	與	預	備	幼	妖	容	予	
368	悌	抵	提	提	提	帝	亭	停	偵	398	陪	排	煤	煤	把	芭	播	霸	杞	429	抱	保	鋪	鋪	捕	步	甫	輔	輔	454	揚	與	預	備	幼	妖	容	予	
369	艇	抵	提	提	提	帝	亭	停	偵	399	燥	排	煤	煤	把	芭	播	霸	杞	430	蜂	保	鋪	鋪	捕	步	甫	輔	輔	455	揚	與	預	備	幼	妖	容	予	
370	的	笛	鄧	鄧	鼎	泥	撤	撤	敵	400	烟	箱	箱	箱	筆	筆	筆	筆	431	望	法	法	坊	坊	坊	坊	坊	456	養	欲	欲	欲	欲	欲	欲	欲			
371	的	典	典	典	典	典	典	典	典	401	烟	箱	箱	箱	筆	筆	筆	筆	432	望	法	法	坊	坊	坊	坊	坊	456	養	欲	欲	欲	欲	欲	欲	欲			
372	鉄	典	典	典	典	典	典	典	典	402	拔	半	反	反	班	班	班	班	433	望	法	法	坊	坊	坊	坊	坊	456	養	欲	欲	欲	欲	欲	欲	欲			
373	転	典	典	典	典	典	典	典	典	403	半	反	反	反	班	班	班	班	434	望	法	法	坊	坊	坊	坊	坊	457	亂	亂	亂	亂	亂	亂	亂	亂			
373	吐									404	煩	煩	煩	煩	煩	煩	煩	煩	435	亂	亂	亂	亂	亂	亂	亂	亂	458	亂	亂	亂	亂	亂	亂	亂	亂			
374	堵	塗	妬	屠	斗	杜	渡	登	吐	405	卑	否	妃	彼	悲	批	披	匪	436	味	枚	每	哩	摩	麻	埋	妹	458	履	李	梨	理	陸	律	立	吏			
375	賭	途	都	都	斗	杜	度	登	吐	406	卑	否	妃	彼	悲	批	披	匪	437	味	枚	每	哩	摩	麻	埋	妹	459	履	李	梨	理	陸	律	立	吏			
376	怒	倒	冬	冬	斗	杜	度	登	吐	407	卑	否	妃	彼	悲	批	披	匪	438	味	枚	每	哩	摩	麻	埋	妹	460	履	李	梨	理	陸	律	立	吏			
377	岩	島	鳩	湯	糖	糖	糖	糖	糖	408	岩	島	鳩	湯	糖	糖	糖	糖	439	蘭	蘭	蘭	蘭	蘭	蘭	蘭	蘭	461	葎	隆	隆	隆	隆	隆	隆	隆			
378	盜	岩	島	鳩	湯	糖	糖	糖	糖	409	盜	岩	島	鳩	湯	糖	糖	糖	440	蘭	蘭	蘭	蘭	蘭	蘭	蘭	蘭	462	葎	隆	隆	隆	隆	隆	隆	隆			
379	答	筒	筒	筒	筒	筒	筒	筒	筒	410	答	筒	筒	筒	筒	筒	筒	筒	440	蜜	湊	衰	稔	脈	妙	耗	民	密	463	兩	向	向	向	向	向	向	向		
380	鏡	陶	董	湯	頭	騰	騰	騰	騰	411	肘	百	評	依	匹	匹	匹	441	蜜	湊	衰	稔	脈	妙	耗	民	密	464	厘	厘	厘	厘	厘	厘	厘	厘			
381	鐘	懂	懂	懂	懂	懂	懂	懂	懂	412	肘	百	評	依	匹	匹	匹	442	蜜	湊	衰	稔	脈	妙	耗	民	密	465	厘	厘	厘	厘	厘	厘	厘	厘			
382	懂	懂	懂	懂	懂	懂	懂	懂	懂	413	肘	百	評	依	匹	匹	匹	442	蜜	湊	衰	稔	脈	妙	耗	民	密	466	瑤	嶺	嶺	嶺	嶺	嶺	嶺	嶺			
383	懂	懂	懂	懂	懂	懂	懂	懂	懂	414	肘	百	評	依	匹	匹	匹	443	蜜	湊	衰	稔	脈	妙	耗	民	密	467	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺			
384	懂	懂	懂	懂	懂	懂	懂	懂	懂	415	肘	百	評	依	匹	匹	匹	444	蜜	湊	衰	稔	脈	妙	耗	民	密	468	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺			
385	貞	獨	獨	獨	獨	獨	獨	獨	獨	415	敏	瓶	瓶	瓶	瓶	瓶	瓶	445	蜜	湊	衰	稔	脈	妙	耗	民	密	469	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺			
386	頓	頓	頓	頓	頓	頓	頓	頓	頓	415	敏	瓶	瓶	瓶	瓶	瓶	瓶	445	蜜	湊	衰	稔	脈	妙	耗	民	密	470	連	連	連	連	連	連	連	連			
386	な									415	府	不	付	埠	夫	富	富	布	442	名	命	明	盟	銘	鳴	姪	牝	冥	470	連	連	連	連	連	連	連	連		
387	謎	灘	捺	奈	那	乍	乍	乍	乍	416	膚	不	付	埠	夫	富	富	布	443	免	棉	綿	緬	緬	緬	緬	緬	471	露	芳	妻	魯	魯	魯	魯	魯			
388	歌	難	汝	奈	那	乍	乍	乍	乍	417	膚	不	付	埠	夫	富	富	布	444	免	棉	綿	緬	緬	緬	緬	緬	472	露	芳	妻	魯	魯	魯	魯	魯			
388	に									418	武	舞	舞	舞	舞	舞	舞	舞	444	孟	孟	孟	孟	孟	孟	孟	孟	473	露	芳	妻	魯	魯	魯	魯	魯			
388	に									419	伏	舞	舞	舞	舞	舞	舞	舞	445	孟	孟	孟	孟	孟	孟	孟	孟	474	露	芳	妻	魯	魯	魯	魯	魯			
388	に									420	伏	舞	舞	舞	舞	舞	舞	舞	446	孟	孟	孟	孟	孟	孟	孟	孟	475	露	芳	妻	魯	魯	魯	魯	魯			
389	虹	廿	二	尼	式	迹	句	句	肉	421	物	耐	腹	復	復	復	復	447	孟	孟	孟	孟	孟	孟	孟	孟	476	露	芳	妻	魯	魯	魯	魯	魯				
390	如	乳	乳	任	妊	忍	認	認	認	422	粉	耐	腹	復	復	復	復	448	孟	孟	孟	孟	孟	孟	孟	孟	477	露	芳	妻	魯	魯	魯	魯	魯				
390	ぬ〜の									422	粉	耐	腹	復	復	復	復	449	孟	孟	孟	孟	孟	孟	孟	孟	478	露	芳	妻	魯	魯	魯	魯	魯				
390	ぬ〜の									422	粉	耐	腹	復	復	復	復	449	孟	孟	孟	孟	孟	孟	孟	孟	479	露	芳	妻	魯	魯	魯	魯	魯				
391	祢	寧	葱	猫	熟	年	念	捻	襦	422	幣	平	弊	柄	並	蔽	丙	併	兵	447	矢	厄	役	也	夜	爺	耶	野	474	碗	驚	互	和	話	歪	臍	惑		
391	祢	寧	葱	猫	熟	年	念	捻	襦	423	幣	平	弊	柄	並	蔽	丙	併	兵	448	厄	役	也	夜	爺	耶	野	475	碗	驚	互	和	話	歪	臍	惑			











Weather Indicator List




Basic Status	
	Clear skies (day)
	Clear skies (night)
	Cloudy
	Rain
	Snow
	Thunder showers
	Chance of rain: 0%
	Chance of rain: 10%
	Chance of rain: 20%
	Chance of rain: 30%
	Chance of rain: 40%
	Chance of rain: 50%
	Chance of rain: 60%
	Chance of rain: 70%
	Chance of rain: 80%
	Chance of rain: 90%
	Chance of rain: 100%
	Then
	Partly/chance of



Pollen Count	
	Low
	Moderate
	High
	Extreme


Cherry Blossom	
	Flowering
	Almost full bloom
	Full bloom
	Beginning of petal fall

Fall Foliage	
	No color change
	Colors appearing
	Peak
	Defoliating

Ultraviolet	
	Low
	Moderate
	High
	Extreme

Typhoon	
	Forming
	Approaching
	Caution necessary

Disaster	
	Heavy rain
	Gale

Information	
	Notification



Specifications

SoftBank 930SH

Weight	Approximately 110 g
Continuous Talk Time	Approximately 230 minutes (3G) Approximately 210 minutes (GSM)
Continuous Standby Time	Approximately 300 hours (3G) Approximately 270 hours (GSM) (handset closed)
Charging Time (power off)	AC Charger: Approximately 135 minutes In-Car Charger: Approximately 140 minutes
Dimensions (W x H x D)	Approximately 48 x 105 x 15.2 mm (handset closed, without protruding parts)
Maximum Output	0.25 W (3G) 2.0 W (GSM)

- Above values calculated with battery installed.
- Continuous Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals. In Japan (3G service area), the value is calculated with IP Service Setting, Decoration Call and S! Appli Communication set to **Off**.
- Talk Time/Standby Time may vary with environment, status, settings, etc.
- Display employs precision technology, however, some pixels may appear brighter/darker.

Handset Materials

Parts	Materials & Finishing
Housing (Display side, Keypad side)	Nylon resin/SUS (insert-molded), discontinuous deposition/UV painting
Housing (Display back hinge edges, Keypad side hinge), External Display window	ABS resin, discontinuous deposition/UV painting
Housing (Display back)	SUS, two-part coating, UV painting (SUS, electrodeposition coating for Silver)
Housing (Keypad side)	PC resin (with UV coating)/PET (with UV coating)
Housing (battery side), Battery Cover	ABS resin, UV painting
Display window, camera lens, Camera ornament panel (including Infrared Port)	Acrylic resin
Multi Selector, Center Key	Aluminum, anodized aluminum paint
Start Key, Power On/Off Key, Mail Key, Yahoo! Keitai Key, Shortcuts & A/a Key, Clear/Back Key, TV & Text Key, Multi Job & Manner Key, Keypad, Mobile Light	PC resin

Parts	Materials & Finishing
Side Keys	PC resin, deposition/UV painting
External Device Port Cover, Headphone Port Cover, Memory Card Slot Cover	PC resin/Elastomeric resin, discontinuous deposition/UV painting
Charging Terminals	SUS/Gold plating (sealer: nickel)
Screw (all pieces)	SWCH12A/Trivalent chromate, EPDM O-ring seal
USIM pin	Copper alloy/Gold plating (sealer: nickel)

Accessories

Battery

Voltage	3.7V
Battery Type	Lithium-ion
Capacity	710 mAh
Dimensions (W x H x D)	Approximately 37.7 x 46.9 x 4.2 mm (without protruding parts)



Basic Operations

■ Wallpaper/Standby Window

Standby Window	3 tags (100 characters each)
----------------	------------------------------

■ Text Entry

User Dictionary	250 entries (5 per reading) Word: 15 characters Reading: 8 hiragana
Acquire Dictionary	5 dictionaries
Paste List	10 text strings
Recoverable Deleted Characters	15,360 characters (30,720 bytes)

■ Phone Book

Entry	1,000 entries
Name/Reading	Last/First: 32 characters each
Phone Number	5 numbers (32 digits each)
Mail Address	5 addresses (128 characters each)
Category	16 Categories
Address	Postal Code: 20 characters Country: 32 characters Others: 64 characters each
Office	Office Name/Division/Post: 32 characters each
Homepage	1,024 bytes
Note	256 characters
Mail Groups	20 Groups (20 members each) Group name: 16 characters

■ Data Folder

Memory	100 MB (shared with Templates folder and S! Appli Library)
--------	--

Calling

Dialed Numbers	Dialed Numbers: 30 records Dialed Frequency: 10 records
Received Calls	30 records
Answer Phone/ Caller Voice	20 messages or 90 seconds
Auto Answer List	10 numbers
Decoration Call	100 KB including 20 characters
Speed Dial/Mail	100 numbers/addresses

Messaging

Memory	Received Msg.	10 MB or 3,000 messages
	Drafts	
	Sent Messages	5 MB (or 1,000 messages for Sent Messages)
	Unsent Messages	
	Templates	100 MB (shared with Data Folder and S! Appli Library)
PC Mail/S! Mail Subject	512 single-byte characters	
PC Mail/S! Mail Message	Approximately 30,000 single-byte characters	
SMS Message	160 single-byte alphanumerics	
Auto Resend	2 times	
Attachment	20 files or 300 KB	
Send Reservation	10 messages	
Signature	256 single-byte characters	
Recipient	20 numbers/addresses	
Folder	20 folders (20 sort keys each)	
Chat Folder	Memory	300 messages per folder
	Folder	10 folders (20 members each)

Graphic Mail	1 sound or Flash® file, or 40 images/ My Pictograms (with 1 sound or Flash® file)	
3D Pictogram	150 characters	
Auto Reply	20 numbers/addresses (256 single-byte characters each)	
Anti Spam Measures	Individual Permitted List	20 entries
		20 entries

■ PC Mail Settings

PC Mail Account	Account	3 accounts
	Account Name	20 characters
Set Receiving	User Name	128 characters
	Password	40 characters
	ReceivingServer	128 characters
	Port Number	1 to 65535
Set Sending	Sender Name	20 characters
	Mail Address	128 characters
PC Mail DL	Individual Address	20 addresses

Yahoo! Keitai & PC Site Browser

Download	Yahoo! Keitai	300 KB per page
	PC Site Browser	1 MB per file
History	300 pages	
URL Entry Log	10 URLs	
Bookmarks/ Saved Pages	100 pages	
Tab	3 tabs at one time	
Input Memory	20 entries	
Streaming History	10 URLs	
RSS Feeds	30 entries (30 KB per entry)	



Digital TV

Recorded File	ISDB-T mobile Video profile (SD-Video standard)	
Recording Time (example)	Handset	Approximately 30 minutes
	Memory Card	Approximately 80 minutes on 256 MB Memory Card
Marker	99 Markers (10 per file)	
Split File	99 portions per file	
Time Shift Recording	30 minutes	
Reservation List	5 entries (4 hours each on 1 GB Memory Card)	

Camera & Imaging

Mobile Camera

Effective Pixels	8.0 Megapixels
Auto Shut-off Time	Approximately 3 minutes

Photo Camera

Zoom	1x - 5.1x	
Picture Size (W x H dots)	8M	2448 x 3264
	3M	1536 x 2048 (QXGA)
	Full HD	1080 x 1920
	2M	1200 x 1600 (UXGA)
	1.2M	960 x 1280 (Quad-VGA)
	Normal HD	768 x 1366
	Wallpaper	480 x 854
	VGA	480 x 640
Scanner Image Size (W x H dots)	Mail L	240 x 320 (QVGA)
	Mail S	120 x 160 (QQVGA)
	Free, 1200 x 640, 480 x 1488, 1280 x 960	

File Format	JPEG
Memory	Approximately 40 files* (8M, High Quality)
File Name	yymmdd_hhmmss
Recording Distance	Macro: 10 cm
Long Exposure	Exposure time: 4 seconds
Background Save	3 files
Face Auto Focus	VGA or larger
Other	Use 40 KB or smaller transparent PNG files as Frames

*Approximate value for handset with no files.

Video Camera

Zoom	1x - 5.1x	
Record Size (W x H dots)	Extended Video	864 x 480 (Wide)
		640 x 480 (VGA)
		320 x 240 (QVGA)
		240 x 176 (HQVGA)
		176 x 144 (QCIF)
	For Message	128 x 96 (SubQCIF)
File Format	3GP	
Recording Time per Shot	Extended Video	Approximately 30 minutes* on Memory Card
	For Message	295 KB
File Name	yymmdd_hhmmss	
Recording Distance	1.5 m in good light	
Still Image Capture	3 images	
Recording Pause Supported	HQVGA or larger	

*Varies with handset usage, location or settings.

Editing Images

Picture Editor	Resize (W x H dots)	Wallpaper (480 x 854)
		Power On/Off (480 x 854)
		Alarm (480 x 208)
		Incoming Call (320 x 320)
Composite	Merge Panorama	Pictogram (96 x 96)
		VGA (480 x 640)
		QVGA (240 x 320)
Picture Editor	Retouch	Cut
		52 x 52 dots or larger JPEG/PNG images
		16 characters
Picture Editor	Correction	52 x 52 dots or larger JPEG/PNG images
		JPEG images between W 48 x H 64 dots and 240 x 320 dots



Media Player & S! Applications

Media Player

Supported Formats	WMA (.wma), AAC (.mp4/.3gp/.m4a), Secure AAC (SD-Audio standard) (Some files may not play depending on sampling frequency and bit rate)
--------------------------	--

S! Applications

Memory	100 items or 100 MB (shared with Templates folder and other folders in Data Folder)
Remote Control	Approximately 5 m

Handy Extras

PIM/Lifestyle

Calendar/ Tasks	300 entries, Subject: 32 characters Description: 128 characters Location: 16 characters Set Holiday: 10 holidays
Alarms	5 entries, Subject: 9 characters
Wakeup TV	Auto Shut-off Approximately 30 minutes
Calculator	999,999,999,999
Expenses Memo	30 entries (999,999.99 yen each)
Osaifu-Keitai®	Remote Lock password: 5 - 16 single-byte alphanumerics

Preset holidays are based on Japanese calendar as of September 2008.

Timer/Clock

Stopwatch	23 hours 59 minutes 59.9 seconds in 0.1-second increments Lap time: 4 records
Countdown Timer	60 minutes in 1-second increments
World Clock	City name: 16 characters

Doc./Rec.

Dictionary	Meikyo Japanese Dictionary: Approximately 47,100 words/phrases Genius English-Japanese Dictionary: Approximately 45,700 words/phrases Genius Japanese-English Dictionary: Approximately 55,800 words/phrases	
Document Viewer	Supported Formats	PDF (.pdf) Microsoft® Excel® (.xls) Microsoft® Word (.doc) Microsoft® PowerPoint® (.ppt)
	File Size	10 MB
Notepad	500 entries (8,192 characters each)	
Voice Recorder	For Message	Approximately 3 minutes per file
	Extended Voice	99 hours 59 minutes 59 seconds
Scan Barcode (Continuous Mode)	UPC/JAN	50 codes
	QR Code	16 codes
Create QR Code	Equivalent of 513 digits, 311 alphanumerics or 131 kanji	
Scan Text	256 characters	
Entertainment		
S! Quick News	Special: 1 item News Flash: 1 item General: 4 items	
e-Books	Copy text strings of up to 20 characters	

Communication Services

S! Loop

S! Loop List	5 items
---------------------	---------

S! Friend's Status

Member	30 members
My Status	Name: 7 characters Comment: 15 characters Status Label: 4 characters
Status Templates	Template name: 12 characters

S! Circle Talk

Participant	11 members
Speak Time	30 seconds each
Member List	30 entries (10 members per Group)

Blog Tool

Blog Details	5 entries	
Blog Settings	Blog Menu	16 characters
	URL (Yahoo! Keitai)	1,024 characters
	URL (PC Site Browser)	1,024 characters
	Email Address	128 characters
	Title	32 characters
	Text	128 characters
	Picture Size	S (320 x 320) M (640 x 640) L (1024 x 1024) Send



Connectivity & File Backup

■ Infrared

Infrared Transfer	IrMC 1.1	
	Range	Within 20 cm
IrSS Transfer	Receive 2 MB or smaller JPEG images	

■ Bluetooth®

Communication System	Bluetooth® specification Ver. 2.0
Supported Profiles	Headset Profile
	Hands-Free Profile
	Dial-up Networking Profile
	Object Push Profile
	File Transfer Profile
	Basic Imaging Profile
	Advanced Audio Distribution Profile
	Audio/Video Remote Control Profile
Output	Bluetooth® Power Class 2
Range	Within 10 m
Device Search	16 devices
Pairing	32 devices
Device Name	16 characters
Printing	JPEG/PNG images

■ Memory Card

Backup File Name	yyymmddXX' (XX: 2 digits/alphabets)
------------------	-------------------------------------

'yyymmdd for Contents Keys.

■ S! Addressbook Back-up

Log	10 Backup/Restore/ Synchronization records
-----	---

Network

Add Network	5 Networks Country/Network code: 3 digits Name: 25 single-byte characters
-------------	---

Reference URLs

■ SOFTBANK MOBILE Corp.

<http://mb.softbank.jp/mb/en/>

■ microSD™ Memory Card Compatibility

From PC (Japanese)

http://k-tai.sharp.co.jp/peripherals/sd_support.html

From Handset (Japanese)

<http://shweb.sharp.co.jp/>

■ S! Addressbook Back-up

<http://mb.softbank.jp/mb/en/service/advanced/sab/>

■ SVG-T

From Handset (Japanese)

http://shweb.sharp.co.jp/svgt/index_pdc.html

■ Association for Promotion of Digital Broadcasting

From PC

<http://www.dpa.or.jp/english/>

From Handset (Japanese)

<http://www.dpa.or.jp/1seg/k/>



Memory Card Structure & Contents

Memory Card Structure		Contents (Location when Viewed on Handset)		
DCIM	XXXSHARP		Still images in DCIM	
PRIVATE	MYFOLDER	Local Contents	SD Local Contents	
		Mail	Messaging folder backups (Received Msg., Sent Messages and Drafts)	
		My Items	Book	e-Book files in Data Folder (Books)
			Bookmarks	Yahoo! Keitai Bookmarks
			Character	PNG files in Data Folder (Character)
			CSI	Decoration Call files in Data Folder (Decoration Call)
			Custom Screens	Customized Screen files in Data Folder (Customized Screen)
			Flash(R)	Flash® Wallpaper files in Data Folder (Flash®)
			Flash(R) Ringtones	Flash® ringtones in Data Folder (Flash® Ringtones)
			Games and More	S! Applications
			Hot Status Template	Template files in Data Folder (Status Templates)
			Message Templates	Graphic Mail templates in Templates folder
			Music	Music files in Data Folder (Music)
			Other Documents	Other files in Data Folder (Other Docs)
			Pictograms	GIF files in Data Folder (My Pictograms)
			Pictures	Still images in Data Folder (Pictures)
			Sounds & Ringtones	Melodies and other sound files in Data Folder (Ring Tones)
			Videos	Video files in Data Folder (Videos)
		Virtual Space	S! Town files	
	WMAudio	WMA files for Media Player (WMA)		
	SH_Folder	Application management files		
	Utility	Backup files (Phone Book), etc.		
	SHARP	MOBILE	Backup files (User Dictionary), etc.	
SD_AUDIO			SD-Audio files for Media Player (SD AUDIO)	



Menu List

Messaging

Function	Refer to	
Received Msg.	P.4-10	
Create Message	P.4-4	
Retrieve New	P.4-21	
Drafts	P.4-26	
Templates	P.4-20	
Sent Messages	P.4-10	
Unsent Messages	P.4-26	
Chat Folder	P.4-13	
Server Mail Box	Mail List	P.4-21
	Retrieve All	P.4-21
	Delete All	P.4-24
	Mailbox Volume	P.4-27
Create New SMS	P.4-7	
Settings	Address Settings	P.4-3
	General Settings	P.4-27
	S! Mail Settings	P.4-29
	PC Mail Settings	P.4-16
	SMS Settings	P.4-31
	Speed Dial/Mail	P.4-18
Set Mail Group	P.4-14	
Memory Status	P.4-23	

Settings: General Settings

	Function	Refer to
Send/ Compose	Delivery Report	P.4-28
	Reply to Settings	P.4-28
	Reply with Text	P.4-28
	Auto Reply	P.4-23
	Set Quick Reply	P.4-23
	Auto Resend	P.4-28
	Sending Status	P.4-28
Receive	Message Notice	P.4-28
	Link to Feeling	P.4-29
	3D Pictogram Animation View	P.4-28
Anti Spam Measures	P.4-12	
Report Spam	P.4-27	
Scroll Unit	P.4-27	
Message List View	P.4-27	
Address View	P.4-27	
Received Msg. View	P.4-27	
Sent Msg. View	P.4-27	
Auto Delete	Received Msg.	P.4-27
	Sent Messages	P.4-27

Settings: S! Mail Settings

	Function	Refer to
	Message DL(Japan)	P.4-29
	Message DL(Abroad)	P.4-29
	Signature	P.4-18
	Picture Appearance	P.4-30
Auto Play File	Pictures	P.4-30
	Sounds	P.4-30
	Send File Settings	P.4-30

Settings: PC Mail Settings

	Function	Refer to
	PC Mail Account	P.4-16
	PC Mail DL	P.4-30
	Check New Mail	P.4-30
	Word wrap	P.4-30

Settings: SMS Settings

	Function	Refer to
	Expiry Time	P.4-31
	Message Center	P.4-31
	Char-code	P.4-31

Yahoo! Keitai

	Function	Refer to
	Yahoo! Keitai	P.5-3
	Bookmarks	P.5-7
	Saved Pages	P.5-7
	Enter URL	P.5-3
	History	P.5-3
	PC Site Browser	P.5-4
	Browser Settings	P.5-14



■ PC Site Browser

Function	Refer to	
Homepage	P.5-4	
Bookmarks	P.5-7	
Saved Pages	P.5-7	
Enter URL	P.5-4	
History	P.5-4	
RSS Feed	P.5-8	
Yahoo! Keitai	P.5-3	
PC Site Browser Settings	Font Size	P.5-14
	Scroll Settings	P.5-14
	Cursor Settings	P.5-14
	Downloads	P.5-14
	Memory Op.	P.5-14
	Security Settings	P.5-15
	Download to	P.5-14
	Initialized Browser	P.5-15
	Reset Settings	P.5-15
	Warning Message	P.5-14
	Zoom Factor	P.5-10
	Zoom Area	P.5-10
Softkey Area	P.5-4	

■ Browser Settings

Function	Refer to
Font Size	P.5-14
Scroll Unit	P.5-14
Cursor Settings	P.5-14
Downloads	P.5-14
Memory Op.	P.5-14
Security Settings	P.5-15
Download to	P.5-14
Initialized Browser	P.5-15
Reset Settings	P.5-15

S! Appli

Function	Refer to
S! Appli Library	P.8-8
Osaifu-Keitai	P.9-12
Demand History	P.8-8
Settings	P.8-13
Information	P.8-13

■ Settings

Function	Refer to	
Application Volume	P.8-12	
Backlight	P.8-13	
Vibration	P.8-13	
Synchronization	P.8-13	
Communication	P.8-13	
Calls & Alarms	P.8-12	
Screensaver	Switch On/Off	P.8-12
	Activation Time	P.8-12
	Stop Auto Start	P.8-12
Surround	P.8-12	
Set to Default	P.8-13	
Memory All Clear	P.8-13	

TV

Function	Refer to
Digital TV	P.6-5
TV Player	P.6-9
TV-Image Folder	P.6-7
TV Link	P.6-13
TV Listing	P.6-6
Familink Remote	P.1-3
Reservation List	P.6-10
Settings	P.6-12

■ Settings

Function	Refer to	
TV Alarm	Alarm	P.6-16
	Vibration	P.6-16
	Light	P.6-16
	Alarm Time	P.6-16
	Duration	P.6-16
Broadcast Data	Set Recording	P.6-14
	Image Location	P.6-14
	Notify Connection	P.6-13
	Location	P.6-13
	Manufacture Number	P.6-13
	Delete StationData	P.6-13
Screen Size	P.6-11	
Landscape Sets.	P.6-12	
Sound Output	P.6-12	
🔊 Sound Output	P.6-12	
Set Call Time Shift	P.6-14	
Calls & Alarms	P.6-12	
TV Reserve Prior	P.6-16	
Save Recording to	P.6-14	
Auto Exit	Auto Exit Time	P.6-12
	Close Action	P.6-12
Smooth Mode	P.6-11	



Camera

Function		Refer to	
Photo Camera		P.7-4	
Video Camera		P.7-5	
Barcode/ Scan	Scan Barcode	P.9-23	
	Scan Card	P.9-25	
	Scan Text	P.9-26	
Review		P.7-6	
Photo Camera Settings	Picture Size	P.7-15	
	Picture Quality	P.7-14	
	Settings	P.7-14	
Video Camera Settings	Record Time/Size	P.7-16	
	Microphone	P.7-16	
		Settings	P.7-14

Photo Camera

Function		Refer to
Shooting Settings	Exposure	P.7-4
	Focus Setting	P.7-14
	White Balance	P.7-15
	Internal Camera	P.7-15
Modes	Add Frame	P.7-7
	Continuous Shoot	P.7-7
	Camera Effects	P.7-7
	Long Exposure	P.7-8
	Panorama/Scanner	P.7-8
Barcode/Scan		P.9-23
Data Folder		P.7-6
Picture Size		P.7-15
Scene		P.7-15
Picture Quality		P.7-14
Self-timer		P.7-7
Settings		P.7-14
ISO Sensitivity		P.7-15

Function	Refer to
Help	P.7-4
Mobile Light	P.7-14

Video Camera

Function		Refer to
Record Settings	Exposure	P.7-4
	Focus Setting	P.7-14
Display Size		P.7-16
Data Folder		P.7-6
Record Time/Size		P.7-16
Microphone		P.7-16
Video Quality		P.7-14
Self-timer		P.7-7
Settings		P.7-14
Internal Camera		P.7-16
Help		P.7-4
Mobile Light		P.7-14

Photo Camera Settings: Settings

Function	Refer to
Display Indicators	P.7-15
Shutter Sound	P.7-15
Save Pictures to	P.7-14
Auto Save	P.7-14
Background Save	P.7-15
Panorama Settings	P.7-16
Set Remote Shutter	P.7-16
Set Send Key	P.7-15

Video Camera Settings: Settings

Function	Refer to
Save Videos to	P.7-14
Auto Save	P.7-14

Entertainment

Function		Refer to
S! Quick News		P.9-27
S! Information Channel/ Weather	What's New	P.9-28
	Back Issue	P.9-28
	Registration/Cancel	P.9-28
	Get Latest Contents	P.9-43
	Notification	P.9-42
Weather Indicator		P.9-28
BookSurfing		P.9-29
e-Book Viewer		P.9-29

S! Quick News

Function		Refer to
S! Quick News List		P.9-27
S! Loop List		P.9-41
Settings	Automatic Update	P.9-41
	Show Image	P.9-42
	Check Schedule	P.9-42
	Change Skin	P.9-42
	Delete S! Quick News Lists	P.9-42

S! Information Channel/Weather:
Weather Indicator

Function		Refer to
Weather		P.9-43
Manual Update		P.9-28
Settings	Standby Setting	P.9-43
	Weather Notif.	P.9-43
	Icon Update	P.9-43



Tools

PIM/Lifestyle

Function	Refer to	
Calendar	P.9-2	
Alarms	P.9-6	
Wakeup TV	P.9-8	
Tasks	P.9-4	
Calculator	P.9-10	
Expenses Memo	P.9-11	
Osaifu-Keitai	P.9-12	
Pretense Call	Run Pretense Call	P.9-36
	Switch On/Off	P.9-15
	Set Caller	P.9-15
	Calling Timing	P.9-15
	Set Silent	P.9-36

PIM/Lifestyle: Osaifu-Keitai

Function	Refer to	
Lifestyle-Appli	P.9-12	
IC Card Settings	IC Card Status	P.9-35
	IC Card Lock	P.9-13
	Remote Lock	P.9-13
	Interface Settings	P.9-35
	Balance Info	P.9-35
Set to Default	P.9-35	

Timer/Clock

Function	Refer to
Stopwatch	P.9-16
Countdown Timer	P.9-17
World Clock	P.9-18
Hour Minder	P.9-19
Battery Meter	P.1-18

Doc./Rec.

Function	Refer to	
Dictionary	P.2-14	
Search	P.2-16	
Document Viewer	P.9-20	
Notepad	P.9-21	
Scratch Pad	P.2-17	
Voice Recorder	Record Time	P.9-37
	Ring Songs-Tones	P.9-22
	Save Recording to	P.9-37
Barcode/Scan	Scan Barcode	P.9-23
	Open Barcode	P.9-37
	Create QR Code	P.9-24
	Scan Card	P.9-25
	Scan Text	P.9-26
Scanned Results	P.9-38	
Phone Help	P.1-18	

Data Folder

Function	Refer to
Pictures	P.7-9
DCIM	P.2-21
Ring Tones	P.9-22
S! Appli	P.8-8
Music	P.2-21
Videos	P.2-21
Lifestyle-Appli	P.9-12
Books	P.2-21
Customized Screen	P.2-6
Status Templates	P.2-21
Decoration Call	P.3-7
Flash@	P.2-21
Other Docs	P.2-21
Memory Status	P.2-21

Media Player

Function	Refer to	
Music	P.8-5	
Videos	P.8-6	
Streaming	P.5-11	
Settings	Sound Output	P.8-9
	Delete All WMA	P.8-10
MTP Mode	P.8-4	

Music

Function	Refer to	
Last Played Music	P.8-9	
My Music	P.8-7	
SD AUDIO	P.8-10	
WMA	P.8-5	
Download Music	P.8-3	
Music Search	P.8-3	
Settings	Sound Effects	P.8-9
	Playback Mode	P.8-9

Videos

Function	Refer to	
Last Played Video	P.8-9	
My Videos	P.8-6	
SD VIDEO	P.8-6	
Download Videos	P.8-3	
Settings	Playback Mode	P.8-9
	Backlight	P.8-9
	Display Size	P.8-9
	Sound Effects	P.8-9
	Web Link Setting	P.8-9



Communication

Function	Refer to
SI Town	P.10-2
SI Loop	P.10-2
SI Friend's Status	P.10-3
SI Circle Talk	P.10-6
Near chat	P.10-8
Blog Tool	P.10-9

Phone

Function	Refer to	
Phone Book	P.2-20	
Add New Entry	P.2-18	
Information	P.1-22	
Call Log	P.3-9	
Play Messages	P.3-4	
Call Voicemail	P.3-12	
Category Control	P.2-19	
My Details	P.1-18	
Speed Dial/Mail	P.3-8	
Mail Groups	P.4-14	
SI Addressbook Backup	P.12-15	
Ph.Book Settings	Sort Entries	P.2-20
	Select Phone Book	P.2-31
	Save New Entry	P.2-31
	New Number Prompt	P.2-29
	View Settings	P.2-29
Manage Entries	Copy All	P.2-31
	Memory Status	P.2-31
	Change Mode(All)	P.2-31
	Delete All	P.2-31

Settings

Phone Settings

Function	Refer to	
Mode Settings	P.1-22	
Display	-	
Customize	P.2-27	
Sounds & Alerts	P.2-7	
Date & Time	P.13-2	
Set Key Light	P.13-4	
言語選択 (Language)	P.13-3	
User Dictionary	P.2-13	
Set Key Shortcut	P.1-11	
Motion Control	Display Change	P.1-15
	Action Settings	P.1-15
	Action Test	P.1-22
Ringer Output	P.13-5	
Earpiece Volume	P.3-14	
Change Menu	P.1-12	
Double Number Settings	Switch On/Off	P.1-19
	Double Mode	P.1-21
	Password Entry	P.1-23
	Mode Name	P.1-23
	Reject By Line	P.1-23
	Show Missed	P.1-23
Locks	Packet Warning	P.1-23
	Send Priority	P.1-23
Software Update	P.11-2	
Master Reset	P.14-5	
Master Reset	Reset Settings	P.13-8
	Reset All	P.13-8

Phone Settings: Display

Function	Refer to	
Wallpaper	P.2-5	
System Graphics	P.13-3	
VeilView	Pattern Setting	P.1-23
	Density Setting	P.1-23
Display Effects	P.13-3	
Font Settings	P.2-2	
Standby Display	Clock/Calendar	P.13-4
	Standby Window	P.2-4
	Show Indicators	P.13-4
	Show Operator Name	P.13-4
Vivid Mode	P.13-3	
Mini Battery	P.1-23	
Greeting Message	P.13-4	
External Display	Duration	P.13-4
	Messages	P.13-4
	Display Date&Time	P.13-4
	Clock Type	P.13-4
Caller Display	P.13-4	
Backlight	P.13-3	
Display Saving	P.13-3	
Dial Number	P.13-3	



Phone Settings: Sounds & Alerts

Function	Refer to
Volume	P.13-5
Ringtone/videos	P.2-7
System Sounds	P.13-5
Vibration	P.2-7
Event Light	P.13-5
Status Light	P.13-5
Any Key Answer	P.13-5
Surround	P.13-5

Phone Settings: Date & Time

Function	Refer to
Set Date/Time	P.13-2
Time Correction	P.13-2
Daylight Saving	P.13-2
Set Time Zone	P.13-2
Clock/Calendar	P.13-4
World Clock	P.9-18
Alarms	P.9-6
Set Holiday	P.9-30
Time Format	P.13-2
Date Format	P.13-2
Calendar Format	P.13-2

Phone Settings: Locks

Function	Refer to
PIN Entry	P.11-2
Change PIN2	P.11-6
Face Recog	P.11-4
Function Lock	P.11-2
IP Service Setting	P.13-7
Application Lock	P.11-3
History Lock	P.11-3
Show Secret Data	P.11-3
Set Lock Message	P.11-6
Chg. Handset Code	P.1-17

Connectivity

Function		Refer to
Bluetooth		P.12-7
Infrared	Switch On/Off	P.12-3
	Send All	P.12-4
IC Transmission	Recv. Forwarded	P.12-5
	Send All	P.12-6
USB Mode	Mass Storage	P.12-10
	MTP Mode	P.8-4
USB Charge		P.1-22
Memory Card		P.2-25
Backup/ Restore	Backup All Items	P.12-18
	Backup Selected Items	P.12-12
	Restore All Items	P.12-18
	Restore Selected Items	P.12-12
	Settings/Manage	P.12-18

Connectivity: Bluetooth

Function	Refer to
Switch On/Off	P.12-8
Add Device	P.12-8
Paired Devices	P.12-8
Send All	P.12-9
Setting Watch	P.12-17
My Device Settings	P.12-16
My Device Details	P.12-16

Connectivity: Memory Card

Function		Refer to
DPOF	Number of Copies	P.7-13
	Settings	P.7-17
	Check Settings	P.7-13
	Reset Settings	P.7-17
SD Local Contents		P.2-33
Format Card		P.2-25
Memory Status		P.2-21



■ Call/Video Call

	Function	Refer to
Call Time & Cost	Call Timers	P.3-10
	Data Counter	P.3-18
	Call Costs	P.3-10
	Switch On/Off	P.3-4
Answer Phone	Answer Time	P.3-13
	Guidance Msg	P.3-13
	Volume	P.3-13
Voicemail/ Divert	Voicemail	P.3-11
	Diverts	P.3-11
	Cancel All	P.3-12
	Status	P.3-18
Video Call	Camera Picture	P.3-20
	Incoming Picture	P.3-20
	Outgoing Picture	P.3-20
	Hold Guidance Pict	P.3-21
	Backlight	P.3-21
	Loudspeaker	P.3-20
	Mute Microphone	P.3-21
	Remote Monitor	P.3-13
Show My Number		P.3-20
Missed Calls		P.3-12
Int'l Calling		P.3-14
Disp. Time/ Cost	Display Call Cost	P.3-17
	Call Time Counter	P.3-17
Call Barring	Outgoing Calls	P.3-20
	Incoming Calls	P.3-20
	Rejected Numbers	P.3-19
	Change NW Password	P.3-19
Minute Minder		P.3-17

	Function	Refer to
Decoration Call	Switch On/Off	P.3-16
	Play in Receiving	P.3-16
	Notice	P.3-16
Auto Answer		P.3-20
Call Waiting		P.3-18

■ NW Settings

	Function	Refer to
Select Network		P.13-6
Select Service		P.13-6
Offline Mode		P.1-16
Retrieve NW Info		P.13-6
Location Info	URL Setting	P.13-7
	Datum On/Off	P.13-7
	Location Prop.	P.13-7
Network Info		P.13-6
External Device		P.13-6



Index

Number	
3D Pictogram	4-8, 4-29

A

AC Charger.....	1-4
Accessing Functions	1-10
Accessory	v
After-Sales Services	14-39
Alarms	9-6
Canceling.....	9-7
Deleting.....	9-7
Editing entries	9-33
For Manner Mode.....	9-33
Link to World Clk.....	9-33
Animation View	4-8
Answer Phone.....	3-4, 3-13
Anti Spam Measures	4-12, 4-25
Any Key Answer	13-5
Application Lock.....	11-3
Auto Focus	7-2
Auto Resend.....	4-2, 4-28
Auto Reply.....	4-9, 4-23
Auto Retry Function	4-2

B

Backlight.....	13-3
Backup.....	12-11
Settings/Manage	12-18
Battery	1-4, 14-4
Battery Cover	1-2
Battery Meter.....	1-18
Blog Tool	10-9, 10-11
Bluetooth®	12-7
My Device Settings	12-16
Printing images	7-13
Receiving files.....	12-9, 12-17

Sending files.....	12-9, 12-17
Bookmarks	5-7
BookSurfing®	9-29

C

Calculator	9-10, 9-34
Calendar	9-2
Calendar Settings.....	9-30
Deleting Schedules	9-3
Editing schedules.....	9-31
Opening Schedules.....	9-3
Saving Schedules	9-2
Call Barring	3-11, 3-19
Call Forwarding.....	3-11, 3-18
Call Log.....	3-9, 3-17
Call Time & Cost	3-10
Data Counter.....	3-18
Call Time Counter	3-17
Call Waiting	3-11, 3-18
Call Waiting (answering Line 2).....	3-18
Caller ID	3-11, 3-20
Camera.....	7-2
Auto Save.....	7-14
Capturing Still Images	7-4
Exposure	7-14
Internal Camera	7-15
Locking focus	7-14
Macro	7-14
Manual Focus.....	7-14
Mobile Light.....	7-14
Picture Quality.....	7-14
Video Quality	7-14
Recording Video.....	7-5
Review	7-6
Save Pictures to	7-14
Save Videos to	7-14
Self-timer.....	7-7

Send.....	7-14
Center Access Code.....	1-17
Change NW Password	3-19
Change PIN.....	11-6
Change PIN2.....	11-6
Character Code List.....	14-11
Charging Terminals	1-2
Charging	1-4
Chat Folder.....	4-13, 4-25
Clock/Calendar.....	13-4
Communication Services.....	10-1
Composite	7-9, 7-12
Countdown Timer	9-17
Customer Service	14-40
Customized Screen (Japanese).....	2-6

D

Data Broadcast (Japanese).....	6-6
Change View (Data)	6-13
Returning to initial window	6-13
Set Recording	6-14
Data Folder	2-21, 2-32
Files (attaching).....	2-22, 4-5
Files (moving/copying)	2-23
Files (opening)	2-22
Files (renaming)	2-23
Folders (adding)	2-23
Selecting Multiple Files	2-23
Set Secret (folders)	2-23
Slide Show	2-22
Date & Time	13-2
Calendar Format	13-2
Date Format	13-2
Time Format.....	13-2
Daylight Saving	9-18, 13-2
Decoration Call	3-7, 3-16
Delivery Report	4-8, 4-19, 4-28



Dialing from Call Log records	3-17
Dictionary	2-14
Digital TV (→ TV).....	6-2
Adding Reception Areas.....	6-4
Area Setup	6-4
Auto Exit	6-12
Calls & Alarms.....	6-12
Change Area	6-11
Image	6-12
Program Info. Search.....	6-11
Save Recording to	6-14
Screen Size	6-11
Set Call Time Shift.....	6-14
Set Channels.....	6-11
Smooth Mode	6-11
Sound Output.....	6-12
Sound Output	6-12
Subtitle/Sound	6-14
Time Shift playback	6-5, 6-9
Tone.....	6-12
TV Alarm	6-16
Display	1-2, 1-7
Display (settings).....	13-3
Backlight.....	13-3
Clock/Calendar	13-4
Dial Number	13-3
Display Saving.....	13-3
External Display	13-4
Greeting Message	13-4
Show Indicators.....	13-4
Show Operator Name.....	13-4
System Graphics	13-3
Vivid Mode.....	13-3
Display Call Cost.....	3-17
Display Effect	4-29
Display Effects	13-3
Display Saving.....	13-3
Document Viewer	9-20
Double Number	1-19, 1-23
Download Dictionary	2-13

DPOF	7-13
Add Date.....	7-17
Check Settings	7-13
For All Pictures	7-13
Index Print	7-17

E

Earpiece	1-2
Earpiece Volume	3-14
e-Book Library	9-43
e-Book Viewer	9-29
e-Books (Japanese)	9-29, 9-43
Emergency Calls	3-2
English	13-3
Event Light.....	13-5
Expenses Memo	9-11
External Camera.....	1-2
External Device Port	1-2
External Display	1-2, 1-9, 13-4

F

Face Arrange	7-11
Face Recognition	11-4
Feeling Mail (receiving)	4-8
Feeling Mail (sending)	4-5
Focus (locking).....	7-14
Focus Setting	7-14
Font Size	2-2
Format Card.....	2-25
Function Lock.....	11-2

G

General Notes	xii
Graphic Mail.....	4-6
Group Calling	3-11, 3-18
Group Calling (opening another line).....	3-18
Guide Usage Notes	ii

H

Handset Closed	1-2
Handset Code	1-17
Handset Keys.....	1-3
Handset mail address	4-3
Handset Menus.....	1-10
Handset Open	1-2
Handset Parts	1-2
Handset Positions	1-2
Handset Power On/Off	1-6
Handset Responses	2-7
Duration (ring time).....	2-7
Ringtones	2-7
Vibration	2-7
Headphone Port.....	1-2
Headphones (answering calls).....	3-13
History Lock	11-3
Hold	3-13
Hour Minder	9-19
Assign Tone/Video	9-36
For Manner Mode	9-36
Link to World Clk.....	9-36
Vibration	9-36

I

IC Card.....	9-13
IC Card Lock.....	9-13
Remote Lock.....	9-13
IC Transmission.....	12-5
Indicators	1-7
Camera (Viewfinder).....	7-3
Display	1-7
External Display	1-9
Messaging (message list)	4-9
Music Playback Window	8-5
Video Playback Window	8-6
Information window	1-7
Infrared	12-2
Receiving files	12-3



Sending files	12-4, 12-16
Infrared Port	1-2
Internal Antenna	1-2
Internal Camera	1-2
International calls	3-4, 3-14
Internet	5-2
Accessing.....	5-3, 5-4
Basic Operations.....	5-5
Browser Settings.....	5-14
Enter URL.....	5-3, 5-4
History.....	5-3, 5-4
Saving pages/Bookmarks	5-7
Int'l Call	3-4
IP Service Setting	13-7
IrSS Transfer	12-2

K

Key Assignments	14-8
Keypad Lock	1-18

L

Language	13-3
Large Font Menu	2-2
Light Sensor	1-2, 13-3
Link to Feeling	4-29
Link to World Ck	9-33, 9-36
Locks	1-17, 11-2
Loudspeaker	3-15, 3-20, 10-11

M

Mail Groups	4-14
Changing members.....	4-26
Deleting.....	4-26
Edit Name	4-26
Main Menu	1-10
Manner mode	1-16
Mass Storage	12-10
Master Reset	13-8
Format Card.....	2-25

Reset All.....	13-8
Reset Settings.....	13-8
Media Player	8-2
Delete All WMA.....	8-10
Playlists.....	8-7, 8-10, 8-11
Sound Output.....	8-9
Memory All Clear (S! Applications)	8-13
Memory Card	2-24
Format Card.....	2-25
Opening files.....	2-25
Memory Card Structure & Contents	14-23
Menu List	14-24
Camera	14-26
Communication	14-28
Data Folder	14-27
Entertainment.....	14-26
Media Player	14-27
Messaging.....	14-24
Phone.....	14-28
S! Appli.....	14-25
Settings	14-28
Tools	14-27
TV.....	14-25
Yahoo! Keitai	14-24
Message List View	4-27
Message Notice	4-28
Messages (creating/sending) ... 4-4, 4-7, 4-17	
3D Pictogram	4-18
Attachments	4-20
Drafts.....	4-26
Edit.....	4-26
Edit & Send.....	4-26
Graphic Mail.....	4-20
Inserting signature manually	4-18
Msg. Settings	4-19
Preview Message.....	4-4
Recipient status.....	4-18
Recipients (adding).....	4-18
Recipients (editing/deleting).....	4-18
Recipients (selecting/entering).....	4-18

Resend.....	4-26
Save to Drafts.....	4-19
Send Reservation.....	4-19
Set Auto Play File.....	4-20
Set Sent Cancel	4-19
Signature.....	4-18
Speed Dial/Mail	4-18
Templates.....	4-20
Messages (deleting)	4-17, 4-24
Auto Delete.....	4-27
Messages (forwarding)	4-27
Messages (protecting)	4-10
Messages (receiving/checking)	4-8
Mail List.....	4-21
Message List	4-9, 4-23
Message Window	4-9, 4-22
Opening new mail out of Standby	4-21
Retrieving new PC Mail	4-17
Retrieving new S! Mail manually	4-21
Save to Data Folder	4-22
Messages (sorting)	4-12
Anti Spam Measures.....	4-12, 4-25
Messaging (→ SMS, S! Mail, PC Mail)	4-2
General Settings	4-27
PC Mail Settings.....	4-30
Receive (settings).....	4-28
S! Mail Settings	4-29
Send/Compose (settings).....	4-28
SMS Settings	4-31
Microphone	1-2
Minute Minder	3-17
Missed Call Notification	3-12
Mobile Light	1-2
Mode Settings	1-22
Motion Control	1-14
MTP Mode	8-4
Multi Job	1-13
Music (deleting)	8-10
Music (downloading)	8-3
Music (playing)	8-5, 8-9



My Details	1-18
Sending via Bluetooth®	12-17
Sending via IC Transmission	12-16
Sending via Infrared	12-16

N

Near Chat (Japanese)	10-8
Network Password	1-17
Noteпад	9-21
Edit Text	9-36
Change Category	9-36

O

Offline Mode	1-16
Optional Services	3-11
Optional Services (checking status)	3-18
Osaifu-Keitai®	9-12
Balance Info	9-35
Checking e-money balance	9-35
IC Card Settings	9-13
Locking	9-13
Set to Default	9-35

P

Pager Code List	14-10
PC (connecting handset)	12-10
PC Mail	4-2, 4-15
PC Mail (sending)	4-17
PC Site Browser	5-4
Pen Light	1-18
Phone Book (deleting)	2-31
Phone Book (editing)	2-30
Phone Book (saving)	2-18
Phone Book (using)	2-20
Phone Book search	2-20
Phone Help	1-18
Picture Editor	7-9
PIN Entry	11-2
PIN Lock	14-2

PIN	14-2
PIN2	14-2
Playlists	8-7, 8-10, 8-11
Pretense Call	9-15
Printing (Bluetooth®)	7-13

Q

QR Code	9-24
Quick Operations	1-10
Quick Reply	4-23

R

Received Msg. View	4-27
Record Caller Voice	3-15
Reference URLs	14-22
Reject (calls)	3-13
Remote Lock (Osaifu-Keitai®)	9-13
Call Remote Lock	9-14
Count for Lock	9-35
Mail Remote Lock	9-13
Notice Settings	9-35
Remote Monitor	3-13
Reply	4-9, 4-17, 4-23
Auto Reply	4-23
Quick Reply	4-23
Opening received message for reference	4-23
Reset (→ Master Reset)	13-8
Reset All	13-8
Reset Settings	13-8
Retrieve NW Info	13-6
Retrieving Network Information	1-6
RSS Feeds	5-8

S

S! Addressbook Back-up	12-13
Confirming user ID & password	12-18
Set Auto Sync	12-18
Sync History	12-18
S! Applications	8-8

S! Circle Talk	10-6, 10-11
Accepting requests	10-7
Initiating	10-7
IP Service Setting	13-7
Registering Members	10-6
S! Familiar Usability	2-6
S! FeliCa (→ Osaifu-Keitai®)	9-12
S! Friend's Status	10-3, 10-10
IP Service Setting	13-7
Opening Member Status	10-5
Registering Members	10-5
S! Information Channel (Japanese)	9-28, 9-42
Weather Indicator	9-28
S! Loop (Japanese)	10-2
S! Mail	4-2
Attaching Files	4-5
Feeling Mail	4-2, 4-5
Graphic Mail	4-2, 4-6
S! Mail Settings	4-29
S! Mail (sending)	4-4
S! Music Connect (Japanese)	8-4
S! Quick News (Japanese)	9-27
Automatic Update	9-41
Deleting items	9-42
S! Loop List	9-41
S! Town (Japanese)	10-2
Safety Precautions	vi
SAR	xviii
Saved Pages	5-7, 5-12
Scan Barcode	9-23
Open Barcode	9-37
Scanning during text entry	9-37
Using scan results	9-38
Scan Card	9-25
Using scan results	9-39
Scan Text	9-26
Scanning during text entry	9-40
Using scan results	9-40
Schedules (→ Calendar)	9-2
Scratch Pad	2-17



Screenshots (capturing)	6-7
Search	2-16
Security Codes	1-17
Sent Msg. View	4-27
Set as Wallpaper	2-32
Set Date/Time	13-2
Set Key Light	13-4
Set Key Shortcut	1-11
Set Sent Cancel	4-19
Set Time Zone	9-18, 13-2
Set to Default (S! Applications)	8-13
Shortcuts	1-10
Show My Number	3-20
Show Secret Data	11-3
Side Keys	1-3
Signature	4-18
Simple Menu	1-12
Slide W paper	2-5
Small Light	1-2
SMS	4-2
SMS Settings	4-31
SMS (sending)	4-7
Snooze	9-6, 9-7
Softkeys	1-7
Software Update	14-5
Sounds & Alerts	2-7, 13-5
Speaker	1-2
Specifications	14-18
Specifications (by function)	14-19
Basic Operations	14-19
Calling	14-19
Camera & Imaging	14-20
Communication Services	14-21
Connectivity & File Backup	14-22
Digital TV	14-20
Handy Extras	14-21
Media Player & S! Applications	14-21
Messaging	14-19
Network	14-22
Yahoo! Keitai & PC Site Browser	14-19

Speed Dial/Mail	3-8, 4-18
Standby	1-6
Standby Window (Japanese)	2-3
Calendar/Tag Panel	2-3
Display Panel	2-4
Display Window	2-26
Member Panel	2-3
News Panel	2-3
Shortcut Panel	2-3
Using Tags	2-4
Status Templates	2-21
Still images (capturing)	7-4
Add Frame	7-7
Camera Effects	7-7
Continuous Shoot	7-7
Correlate to Face	7-15
ISO Sensitivity	7-15
Long Exposure	7-8
Panorama Picture	7-8
Picture Size	7-15
Scanner	7-8
Scene	7-15
Shutter Sound	7-15
White Balance	7-15
Still images (capturing & sending) ...	7-4, 7-8
Still images (capturing while recording video)	7-5
Still images (editing)	7-9
Additional editing options	7-16
Changing sizes	7-10
Face Arrange	7-11
Merge Panorama	7-12
Stopwatch	9-16
Strap Eyelet	1-2
Streaming	5-3, 5-11
Swap Calls	3-18
System Graphics	13-3
System Sounds	13-5

T

Table of Contents	iii
Tasks	9-4
Deleting Tasks	9-5
Editing tasks	9-32
Opening Tasks	9-5
Text (editing)	2-12
Text Entry	2-8
Emoticons	2-10
Hiragana to Katakana/Alphanumeric Conversion	2-11
Hiragana	2-9
Input/Conversion	2-28
Inserting line breaks	2-28
Inserting Phone Book entry items	2-28
Inserting spaces	2-28
Katakana	2-10
Mail & Web Extensions	2-11
One-Hiragana Conversion	2-10
Phonetic Conversion	2-9
Pictograms & Symbols	2-10
Quick Conversion	2-11
Reset Log	2-28
Switching Entry Modes	2-8
Undo conversion or recover deleted characters	2-28
Using Character Codes	2-28
Using Pager Code	2-28
When Target Word is Not Listed	2-9
Time Correction	13-2
Troubleshooting	14-6
TV (watching)	6-5
AV Mode	6-11, 6-12
Channels (saving)	6-11
Data Broadcast (Japanese)	6-6
Help	6-11
Program Info	6-6
TV Listing (Japanese)	6-6
Using wireless Headphones	6-12



TV Player	6-8
TV programs (recording/playing)	6-8
Copy to Card	6-15
Details	6-15
Marker List	6-15
Markers	6-15
Memory Remaining	6-15
Move to Card	6-15
Playback Pattern	6-15
Playing split files	6-15
Recorded programs (deleting)	6-15
Recorded programs (renaming)	6-15
Split File	6-15
TV Reserve Prior	6-16
TV Timers (watching/recording)	6-10
Setting Timer via Program Info	6-16
Timer entries (editing/deleting)	6-16
Timer log records (opening/deleting)	6-16
TV Alarm	6-16
Wakeup TV	9-8

U

USB Charge	1-4, 1-22
User Dictionary	2-13
Deleting entries	2-28
USIM Card	14-2
USIM PINs (→ PIN)	14-2
Utility Software	12-10

V

VeilView	1-18
Vibration	2-7
Video (deleting)	8-11
Video (downloading)	8-3
Video (playing)	8-6, 8-9
Video (recording)	7-5
Display Size	7-16
Microphone	7-16
Record Time/Size	7-16
Video (recording & sending)	7-5

Video Calling	3-5
Remote Monitor	3-13
Video Calls (answering)	3-5
Video Calls (placing)	3-6
Voice Calling	3-3
Voice Calls (answering)	3-3
Voice Calls (placing)	3-3
Voice Calls (placing while abroad)	3-4
Voice Recorder	9-22
Record Time	9-37
Save and Send	9-37
Save Recording to	9-37
Voicemail	3-11
Volume (ringtones)	13-5

W

Wakeup TV	9-8
Wallpaper	2-5
Slide W paper	2-5
Warranty	14-39
Weather Indicator	9-28
Icon Update	9-43
Manual Update	9-28
Weather	9-43
Weather Indicator List	14-17
World Clock	9-18

Y

Yahoo! Keitai	5-3
----------------------------	-----

Objectives

Accessing Secret Files/Entries	
Data Folder	2-23
Messaging folders	4-11
Phone Book	2-19
Schedules/tasks	9-3
Accessing the Internet	
From message text	4-22
From scan results	9-38, 9-40

Media Player	8-3
PC Site Browser	5-4
RSS Feeds	5-8
Yahoo! Keitai	5-3

Browsing/Viewing

Document Viewer	9-20
e-Books	9-29
PC Site Browser	5-4
S! Information Channel	9-28
S! Quick News	9-27
Yahoo! Keitai	5-3

Calculating

Calculator	9-10
Expenses Memo	9-11

Canceling

Alarm	9-7
Answer Phone	3-4
Call Forwarding	3-12
Customized Screen	2-27
Download Dictionary	2-13
Function Lock	11-2
Hour Minder	9-19
IC Card Lock	9-13
Keypad Lock	1-18
Large Font Menu	2-2
Manner mode	1-16
Offline Mode	1-16
S! Familiar Usability	2-27
S! Information Channel	9-28
Secret folders	2-33, 4-25
Simple Menu	1-12
Speed Dial entries	3-8
Voicemail	3-12

Changing

Font Size	2-2
Font Weight	2-2
Handset Code	1-17
Handset mail address	4-3
Network Password	3-19
PIN & PIN2	11-6



- Changing Ringtones**
- Phone Book2-19
 - Ringtone/videos2-7
 - Via Data Folder2-32
- Composing/Sending Messages**
- Feeling Mail4-5
 - From Call Log records3-17
 - From Internet pages5-10
 - From message text4-22
 - From Phone Book2-30
 - From received messages4-9
 - From scan results9-38, 9-40
 - From Scratch Pad2-17
 - From sent messages4-26
 - Graphic Mail4-6, 4-20
 - PC Mail4-17
 - S! Mail4-4
 - SMS4-7
- Copying**
- Calculation results9-34
 - Data Folder files2-23
 - From text entry window2-12
 - Scan results9-39, 9-41
 - Text (e-Books)9-43
 - Text (Internet pages)5-10
 - Text (Messaging)4-22
 - Text (S! Information Channel pages)9-42
- Downloading**
- Customized Screen2-6
 - Music8-3
 - S! Applications8-12
 - Video8-3
- Exchanging Files**
- Bluetooth®12-7
 - IC Transmission12-5
 - Infrared12-2
 - IrSS Transfer12-2
 - Mass Storage12-10
 - MTP Mode8-4
- Handling Files/Entries**
- Data Folder2-23
 - Messaging folders4-11
 - Phone Book2-19
 - Schedules/tasks9-30, 9-32
- Inserting/Removing**
- Battery14-4
 - Memory Card2-24
 - USIM Card14-3
- Locking/Restricting**
- Application Lock11-3
 - Call Log11-3
 - Function Lock11-2
 - Incoming/outgoing calls3-19
 - Keypad Lock1-18
 - Mail records11-3
 - Osaifu-Keitai®9-13
 - PIN Entry11-2
- Managing Schedules**
- Calendar9-2
 - Tasks9-4
 - Measuring Time
 - Countdown Timer9-17
 - Stopwatch9-16
- Notifying Phone Number**
- Opening My Details1-18
 - Via Bluetooth®12-17
 - Via IC Transmission12-16
 - Via Infrared12-16
- Placing Calls**
- By entering phone numbers3-14
 - From Call Log records3-17
 - From Internet pages5-10
 - From message text4-22
 - From Phone Book2-20
 - From scan results9-38, 9-40
 - International calls3-4
 - Speed Dial3-8
 - Video Calls3-6
 - While abroad3-4
- Playing**
- Answer Phone messages/Caller Voice 3-4
 - Files (Scan Barcode)9-38
 - Music8-5
 - Recorded TV programs6-9
 - Recorded TV programs from Timer log.. 6-16
 - Split files (TV)6-15
 - Streams5-11
 - Video8-6
 - Voice files9-22
 - Voice mail messages3-12
- Rejecting**
- Calls from public phones3-19
 - Calls from specific numbers3-19
 - Calls from unsaved numbers3-19
 - Calls with undisplayable Caller ID3-19
 - Calls without Caller ID3-19
 - Near Chat requests10-8
- Resetting/Formatting**
- All settings13-8
 - Handset13-8
 - Memory Card2-25
- Saving**
- Backup12-12
 - Captured still images7-4, 7-7, 7-8
 - Draft messages4-19
 - Edited still images7-9
 - Files (Internet)5-9
 - Files (S! Information Channel pages)9-43
 - Graphic Mail templates4-6
 - Mail attachments4-22
 - Notepad entries9-21
 - Phone Book entries2-18
 - Recorded video7-5
 - Scan results9-37, 9-39
 - TV channels6-11
- Saving Phone Book Entries**
- Add New Entry2-18
 - From Call Log records3-17
 - From message text4-22
 - From received messages4-22



- From scan results 9-38, 9-40
- Scanning**
- Business cards 9-25
 - QR Codes 9-23
 - Text 9-26
- Searching**
- Messages 4-11, 4-25
 - Music to download 8-3
 - Music to play 8-5
 - Notepad entries 9-36
 - Phone Book 2-20
 - Text (Internet pages) 5-9
 - TV program information 6-11
 - Video to play 8-6
 - Web Search 2-16
- Sending via Mail**
- Data Folder files 2-22, 4-5
 - Notepad entries 9-36
 - QR Codes 9-24
 - Scan results 9-39, 9-40
 - Still images 7-4, 7-8
 - URLs 5-10, 5-11
 - Video 7-5
 - Voice files 9-37
- Setting Wallpaper**
- From attached files 4-22
 - From Phone Settings 2-5
 - From scan results 9-38
 - Via Data Folder 2-32
- Showing in Standby**
- Clock/Calendar 13-4
 - S! Applications 8-12
 - Standby Window 2-3
 - Wallpaper 2-5
 - World Clock 9-18
- Using as Alarm Clock**
- Alarm 9-6
 - Hour Minder 9-19
 - Wakeup TV 9-8
- Using Away from Home**
- Alarm 9-6
 - Camera 7-2
 - Digital TV 6-2
 - Hour Minder 9-19
 - Osaifu-Keitai® 9-12
 - Pen Light 1-18
 - Scratch Pad 2-17
 - Search 2-16
 - Voice Recorder 9-22



Warranty & Service

■ Warranty

Warranty is provided when you purchase handset.

- Check the name of distributor and date of purchase.
- Read contents and keep in a safe place.
- The warranty term is described in the warranty.

■ After-Sales Services

See **P.14-6** "Troubleshooting" before contacting SoftBank for service or repairs.

If you cannot find solutions or solve problems, contact SoftBank Customer Center, Customer Assistance (**P.14-40**) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, possible repairs are performed upon request at subscriber expense.

For other services, contact the distributor, the nearest SoftBank Shop or SoftBank Customer Center, General Information (**P.14-40**). Replacement parts are available for 6 years after termination of production.

- SoftBank is not liable for any damages resulting from use of this product.
- SoftBank is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.



Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Customer Centers

From a SoftBank handset, dial toll free at **157**
for General Information or **113** for Customer Assistance

SoftBank Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(International charges apply.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎0088-240-157
	Customer Assistance	☎0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎0088-241-157
	Customer Assistance	☎0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎0088-242-157
	Customer Assistance	☎0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎0088-250-157
	Customer Assistance	☎0088-250-113

