

USIM Card.....	1-2
About USIM Card	1-2
USIM Card Installation	1-3
USIM PINs	1-3
Parts & Functions.....	1-4
Handset	1-4
Display Positions.....	1-7
Key Operations in Standby	1-8
Display	1-10
About Battery	1-12
Before Charging	1-12
Battery Installation	1-14
Charging Battery	1-15
Handset Power On/Off.....	1-16
Manner Mode	1-17
Minding Mobile Manners.....	1-17
Manner-related Features	1-17
Activating Manner Mode	1-17
Activating Emission OFF Mode	1-18
Activating Driving Mode	1-18
Handset Menus.....	1-18
Main Menu	1-18
Menu Numbers	1-19
Accessing Functions/Info from Standby	1-20
Horizontal Open Menu	1-21


Standby Options & Event Indicators	1-21
Event Indicators.....	1-21
Mobile Widget (Japanese).....	1-22
S! Quick News (Japanese).....	1-22
S! Information Channel/Weather (Japanese).....	1-22
Shortcuts.....	1-22
External Display.....	1-23
Customizing User Interface	1-24
Customized Screen/Familiar Usability	1-24
Changing Display Font.....	1-25
Private Menu	1-25
Opening Private Menu	1-25
Customizing Private Menu	1-26
Adding Shortcuts.....	1-26
Simple Menu.....	1-26
Activating Simple Menu	1-27
Simple Menu	1-27
Passwords.....	1-28
Phone Password	1-28
Center Access Code	1-28
Security Code	1-28
Multi Task	1-29
Activating Another Function.....	1-29
Ending Current Functions.....	1-29
View Blind	1-30
My Number	1-30

USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use 931P or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.

USIM Card

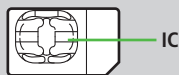

- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction.

If **USIM not inserted After power-off Insert USIM** appears, re-insert USIM Card properly then restart handset.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (☎P.19-34).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

Note


- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

USIM Card Installation

- Remove battery (➡P.1-14) then follow steps below.


Inserting

- 1 With IC chip down, insert USIM Card

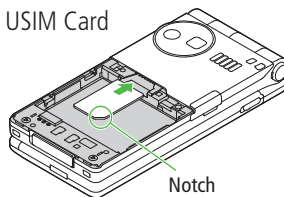

Removing

- 1 Slide out USIM Card gently

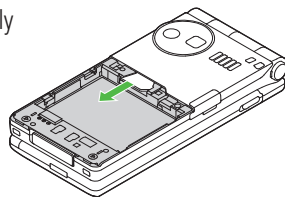

Note

- Do not force USIM Card into or out of handset; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

USIM PINs

There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to **9999** by default.
- PIN/PIN2 can be changed (➡P.11-2).

PIN	4 to 8-digit code used to prevent unauthorized handset use. <ul style="list-style-type: none"> ● When PIN Authentication is ON (➡P.11-2), PIN entry is required each time handset is turned on (with USIM Card inserted).
PIN2	Required to clear call times/costs or set maximum cost (➡P.18-9).

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unblocking Key (PUK/PUK2) (➡P.11-3).

- For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (➡P.19-34).


Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (➡P.19-34).


Parts & Functions

Handset

Normal Position

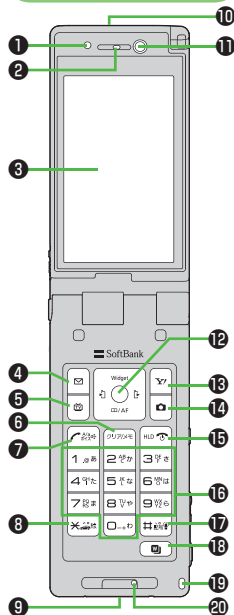

Horizontal Open Position

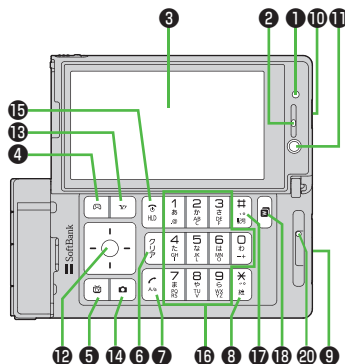


Using Earphone/Microphone or Video Output Cable

Connect following accessories (A) and (B) to External Port.

- (A) Earphone/microphone or video output cable
- (B) Stereo Earphone Conversion Cable

<Operation>

- ① Connect flat plug (A) to flat terminal (B)
- ② Connect plug (B) to External Port

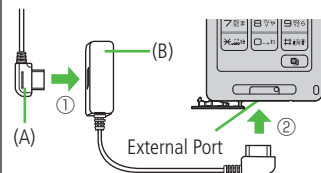


- Do not press answer button on earphone/microphone when connecting. Doing so may cause earphone/microphone to malfunction. In that case, pull out earphone/microphone, and connect again.

● Key labels differ between Normal Position and Horizontal Open Position. Key icons in this guide use labels in Normal Position.

1 Light Sensor

- Detects ambient light

2 Earpiece**3 Internal Display****4  Mail Key (Normal Position)**

- Open Messaging menu
- Execute Upper Left Softkey function (↵P.ix)
-  S! Appli Key (Horizontal Open Position)**
 - Open S! Appli List
 - Execute Upper Left Softkey function (↵P.ix)

5  TV Key

- Activate TV
- Execute Lower Left Softkey function (↵P.ix)

6  Clear/Memo Key

- Delete characters
- Cancel menus
- Use Answer Phone

7  Send Key

- Initiate or answer calls
- Toggle upper/lower case in text entry windows
- Use Voice Dial

8  * /Symbol/Driving Mode Key

- Enter "*"
- Access pictographs in text entry windows
- Toggle Driving Mode

9 External Port

- Connect AC Charger (sold separately), Stereo Earphone Conversion Cable or other accessories here





10 Infrared Port

- Transfer data via Infrared

11 Inside Camera

- Use during Video Calls
- Capture a self-portrait

12  Multi Selector

- Scroll up/down/left/right to navigate menus and text (↵P.ix)
-  Select S! Quick News/widgets
-  Open Phone Book; set Auto Focus Lock
-  Open Incoming Call Logs
-  Open Redial logs

13  Yahoo! Keitai Key

- Open Yahoo! Keitai Main Menu
- Execute Upper Right Softkey function (↵P.ix)

14  Camera Key

- Activate Camera/Video Camera
- Execute Lower Right Softkey function (↵P.ix)

15  End/Escape & Power Key

- Power on/off (↵P.1-16)
- End calls
- Return to Standby

16  -  Keypad

- Enter phone number/text


17  # /Symbol/Manner Key

- Enter "#"
- Access symbols in text entry windows
- Toggle Manner Mode

18  Widget Key

- View list of available widgets
- Activate Music Player

19 Horizontal Open Position Hook**20 Microphone**

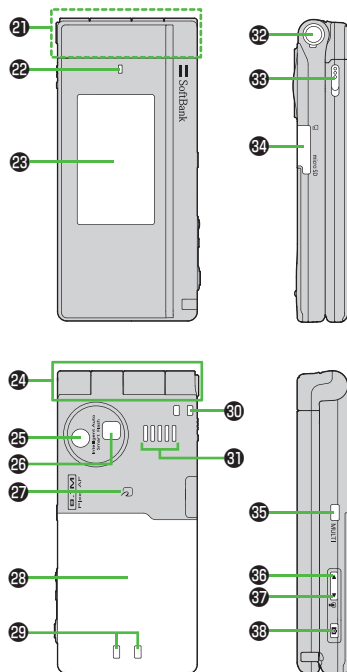**21 Antenna****22 Notification Light/Charging Indicator**

- Flashes for incoming transmissions
- Lights in red for charging

23 External Display (→P.1-23)**24 Hinge****25 Outside Camera****26 Flash/Photo light**

- Lights/flashes during Camera use
- Use when shooting in dark places

27 Logo

- Place Logo over a reader/writer when using Osaifu-Keitai® (→P.16-4)

28 Battery Cover

- Do not remove sticker from back of Battery Cover; IC Card may become unreadable/unwritable.

29 Charging Terminals**30 Strap Eyelet****31 Speaker****32 One-push Open Button** (→P.1-7)**33 Horizontal Open Lever** (→P.1-7)**34 microSD Card Slot**

- Insert microSD Card here (→P.9-17)

35 (MULTI) MULTI Key

- Open TASK MENU/Pictures Folder

36 Upper Side Key

- Increase earpiece/TV volume

[Closed Position]

- Turn on illumination

37 Lower Side Key

- Decrease earpiece/TV volume

[Closed Position]

- Set/cancel Manner Mode

- Check missed calls/new messages

38 Shutter Key

- Activate Camera/capture images


[Closed Position]

- Show missed calls/new messages on External Display

Display Positions

Normal Position


Press One-push Open Button to open handset.

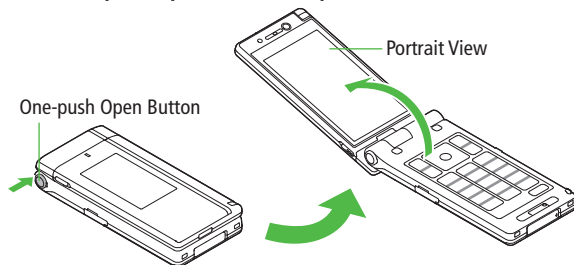

- Fold handset by hand to close. When handset does not close, open it all the way once, then close.
- Customize handset to answer/end calls, etc. by opening/closing handset (P.18-7, P.18-9).
- Be careful not to drop handset when opening handset by One-push Open Button.

Horizontal Open Position

- 1 Slide and hold Horizontal Open Lever
- 2 Flip open (as indicated by arrow)
Watch TV programs or use Messaging, S! Appli, Camera, etc. in Horizontal Open Position (Landscape View).

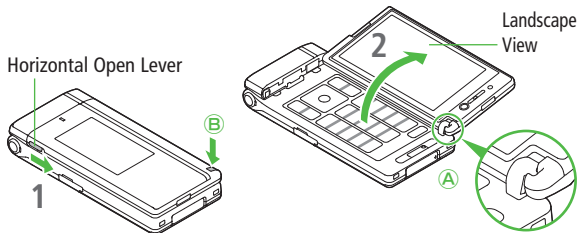






- Hinge should be intact (A). If hinge is detached, close handset and try again.
Do not lift hinge portion (B) when opening handset.

Note



- If One-push Open Button is pressed in Horizontal Open Position, handset opens in Normal Position after it is closed.
- Before switching positions, be sure to completely close handset. Do not operate Horizontal Open Lever when handset is not fully closed; otherwise malfunction or damage may result.

Key Operations

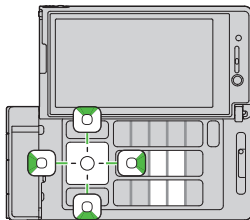- Key operations in Horizontal Open Position may differ from Normal Position.
- Keys assigned for games have different color/design labels.
- Multi Selector (   ) operations are described as pictured.



Settings Linked with Display Position









- Open handset in Horizontal Open Position to show Horizontal Open Menu while handset is in Standby ( P.1-21). Also, activate Digital TV or Camera automatically ( P.18-13).

Note

- Switching Normal Position to Horizontal Open Position may end active screen.

Key Operations in Standby

Press (less than one second) or press and hold (more than one second) a key in Standby to execute operation according to handset position.


Key Operations		Normal Position (Portrait View)	Horizontal Open Position (Landscape View)
	Short Press	Initiate a call	—
	Long Press	Voice dial	—
	Short Press	Show/hide widgets	
	Long Press (2 + sec)	Turn off power	
	Short Press	Open Main Menu	Open Horizontal Open Menu
	Long Press	Activate/cancel Keyguard	
	Short Press	Play Answer Phone	—
	Long Press	Activate/cancel Answer Phone	—
	Short Press	Activate Camera	
	Long Press	Activate Video Camera	
	Short Press	Activate Digital TV	
	Long Press	Activate/cancel IC Card Lock	
	Short Press	Open Messaging Menu	—
	Long Press	Open S! Mail Composition window	
	Short Press	—	Open S! Appli List
	Long Press	—	

Key Operations		Normal Position (Portrait View)	Horizontal Open Position (Landscape View)
	Short Press	Access Yahoo! Keitai	
	Long Press	Open Yahoo! Keitai Menu	
	Short Press	Open Widget List	
	Long Press	Activate Music Player	
	Short Press	Select Event Indicator, Shortcut, widget, Status Indicator, S! Quick News ticker	Select Event Indicator/ widget
	Long Press	—	
	Short Press	Open Phone Book search window	—
	Long Press	Open Phone Book entry window	—
	Short Press	Open Incoming Call Logs	—
	Long Press	Open Received address logs	—
	Short Press	Open Redial logs	—
	Long Press	Open Sent address logs	—
	Short Press	Enter "1"	—
	Long Press	Open Phone Book page "あ"	—
	Short Press	Enter "2"	—
	Long Press	Open Phone Book page "か"	—
	Short Press	Enter "3"	—
	Long Press	Open Phone Book page "さ"	—
	Short Press	Enter "4"	—
	Long Press	Open Phone Book page "た"	—

Key Operations		Normal Position (Portrait View)	Horizontal Open Position (Landscape View)
	Short Press	Enter "5"	—
	Long Press	Open Phone Book page "な"	Turn on/off Back Light
	Short Press	Enter "6"	—
	Long Press	Open Phone Book page "は"	—
	Short Press	Enter "7"	—
	Long Press	Open Phone Book page "ま"	—
	Short Press	Enter "8"	—
	Long Press	Open Phone Book page "や"	Activate/cancel View Blind
	Short Press	Enter "9"	—
	Long Press	Open Phone Book page "ら"	—
	Short Press	Enter "0"	—
	Long Press	Open Phone Book page "わ"	—
	Short Press	Enter "✱"	—
	Long Press	Activate/Cancel Driving Mode	
	Short Press	Enter "#"	—
	Long Press	Activate/Cancel Manner Mode	
	Short Press	Increase earpiece volume	—
	Long Press		—
	Short Press	Decrease earpiece volume	—
	Long Press		—
	Short Press	—	
	Long Press	Activate Camera	
	Short Press	Activate TASK MENU	
	Long Press	Open Pictures folder	

Display

Display Indicators

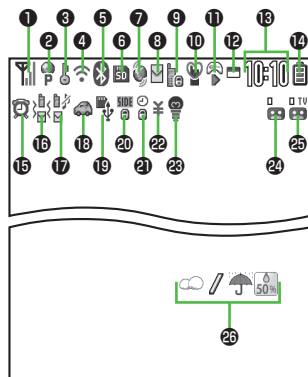

- The above Display is an example common to Internal and External Displays.
- 15 - 25 are Status Indicators. Access functions from respective indicators (P.1-20).

1 Signal Strength

- Strong Moderate Weak Low
- Emission OFF Mode Active
- Out-of-Range

- Packet Transmission in Progress (PC)
 - Dial-up Connection Established on PC
 - 3G/GSM Packet Transmission Enabled
 - 3G/GSM Packet Transmitting
 - Operator (set for Select Operator) Out-of-Range
 - 3G/GSM 3G/GSM Packet Transmission Available*
 - 3G/GSM 3G/GSM Packet Transmission Unavailable*
* Available only while abroad
- Secure Content
 - S! Addressbook Back-up Synchronizing
 - Auto Sync Settings Active
- PC Site Browser Active
 - Infrared Transmission
 - IC Transmission
 - USB Cable Connected
 - Keyguard Active
- Software Update (Notification/Updating/Result)
 - Voice Mail
 - (Blue) Bluetooth® Device Connected
 - (Black) Bluetooth® Power Save Mode

6 microSD Card

- Inserted
- Reading/Writing Data
- Write-protected
- Unsupported
- Unusable

USB Cable (Not Included) Connected

- microSD Mode
- MTP Mode

During Call

- During Video Call
- During Voice Call

















7 Positioning

- New S! Quick News Information
- New S! Information Channel info























8 Unsent Message
















- Unread Message
- Incoming Mail Memory Full (Handset)

9 Security


-  Privacy Key Lock Active
 -  Personal Data Lock Active
 -  Key Pad Dial Lock Active
 -  IC Card Lock Active
 -  Secret Mode and Secret Data Only Active
 -  Key Pad Dial Lock, Secret Mode and Secret Data Only Active
 -  Key Pad Dial Lock and Personal Data Lock Active
 -  Secret Mode, Secret Data Only and IC Card Lock Active
 -  Privacy Key Lock and IC Card Lock Active
 -  Personal Data Lock and IC Card Lock Active
 -  Key Pad Dial Lock and IC Card Lock Active
 -  Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active
 -  Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active
- 10  Manner Mode Active
-  Manner Mode (set in User Mode)
 -  Remote Monitoring Active

11 S! Appli

-  Paused
 -  Active
 -  Auto Start Request Received
 -  Start Request Received while Paused
 -  Start Request Received while Active
- 12  One Function Active
-  Multiple Functions Active
 -  Digital TV Active
 -  Recording TV Program
 -  During Timer Recording
 -  TV Recording Paused
 -  Music Playback
 -  Music Paused
- 13 Time
- 14 **Battery Level**
-  →  →  →  (Red)
- 15  (Red) Alarm Set (Today)
-  (Blue) Alarm Set (After Today)
- 16  Vibration Active (Incoming Call)
-  Vibration Active (Incoming Message)
 -  Vibration Active (Incoming Call/Message)

- 17  Incoming Call Ringtone Disabled
-  Incoming Message Ringtone Disabled
-  Incoming Call/Message Ringtone Disabled
- 18  Driving Mode
- 19  microSD Mode set for USB Mode
-  MTP Mode set for USB Mode
- 20  Side Key Disabled when Handset Closed
- 21  Timer Lock at Close Active
- 22  Call Charge Reached Upper Limit
- 23  Back Light OFF
-  View Blind ON
-  Back Light OFF; View Blind ON
- 24  Answer Phone Active (Number of Answer Phone Messages (Voice Calls))
- 25  Answer Phone Active (Number of Answer Phone Messages (Video Calls))
- 26 Weather Indicator ( P.7-7)

Note

- To show icon description: **Main Menu**
 - ▶ **Settings** ▶ **Display Settings**
 - ▶ **Describe Icons** ▶  to highlight an icon

About Battery


Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

Charging Time & Operating Time Estimates

		3G	GSM
Charging Time		130 minutes*	
Standby Time		650 hours*	390 hours*
Talk Time	Voice Call	220 minutes*	240 minutes*
	Video Call	130 minutes*	—

* Approximate value

- 3G Mode/GSM Mode:  P.2-11
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.
- Battery may swell as service life nears end; this is not a problem.

Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

Battery Time


- Using handset in poor conditions may shorten battery time.
 - Extreme temperatures
 - Impaired handset, battery or Charging Terminals
 - Signal is weak/handset is out-of-range
 - Handset is left mid-operation (not in Standby)
 - Viewing TV, playing music or using S! Appli, etc.
- Extending battery time


Example:

 - Turn Back Light Time **OFF** and Power Saver Mode **ON** (☞P.18-5)
 - Select **OFF** for Key Tone (☞P.18-2)

When Battery Runs Out

- **Unless a Call is in Progress**


A message appears and warning tone sounds for 10 seconds. Handset power turns off automatically after one minute; press any key except  to cancel warning tone manually. Charge or replace battery.

 - If Manner Mode is active, nothing sounds.
 - When handset is closed, press  (MULTI) to cancel warning tone.
- **During a Call**

A message appears and warning tone sounds via Earpiece or Speaker. After 20 seconds, call ends and handset shuts down in one minute. Charge or replace battery.

Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☞P.1-10, 1-11) or a message appears on Display.

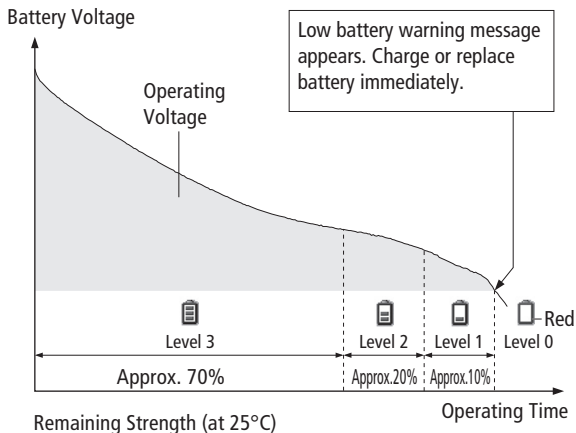


Note

- Alternatively, check battery level from **Main Menu ► Settings ► Phone Settings ► Battery ► Battery Level**

Battery Installation


- Always turn off handset power before removing battery.

1 Press and slide to remove cover

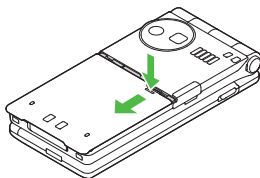


2 Insert Battery

Align battery contacts with handset pins.

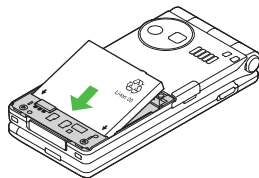


Remove Battery

Lift battery out as shown.

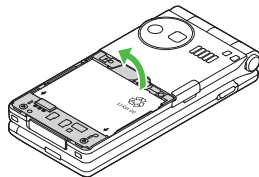

3 Replace battery cover

Cover should click into place.

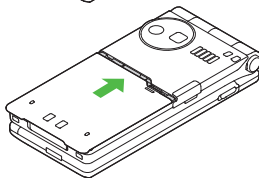

Note

- Lithium-ion batteries are valuable and recyclable resources.
 - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
 - To avoid fire or electric shock, do not:
 - Short-circuit battery
 - Disassemble battery




Li-ion 00

Charging Battery

Use only specified AC Charger (sold separately).

Charging Time: Approximately 130 minutes

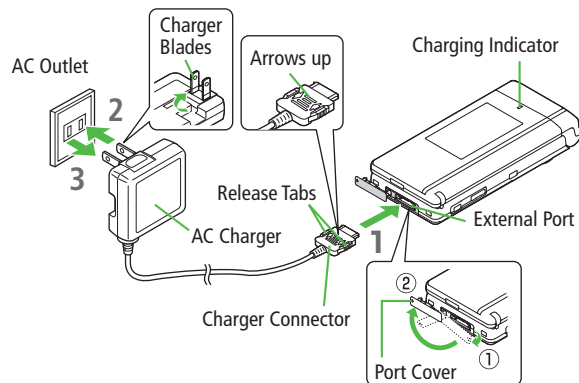

1 Connect AC Charger to handset

Insert Charger Connector (printed side up) into External Port.

2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

- When Charging Indicator flashes, remove AC Charger and battery from handset then attach them again.

- **Charge Sound** is heard when charging starts/ends.

When handset is turned off or in Manner Mode, nothing sounds.

3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

Note

- For details, read AC Charger instructions.
- Alternatively, charge battery by using Desktop Holder (not included).

Tip

- Charging Start/End Tone Off (P.18-2)

Handset Power On/Off

1 Press and hold

Start-up window appears and handset enters Standby.

- Enter PIN if PIN Authentication is ON (☞P.11-2).

2 Press for 2+ seconds

Handset shuts down.

- Do not turn on handset immediately after turning off. Wait a few seconds.



Standby

The First Time Handset Powers Up, and Setup Window Appears...

Select **YES**, and set the following:
(Each item can be set separately.)

- Set date and time* (Date & Time: ☞P.18-8)
- Set Phone Password
Enter **9999**, and enter new Phone Password (4-8 digits) (☞P.1-28).
- Set Key Tone
Select **ON** or **OFF** (☞P.18-2).
- Set font size
Set Display font size all at once (☞P.18-6).

* May be automatically set

Note

- If **USIM not inserted After power-off Insert USIM** appears, clean and properly re-insert USIM Card then restart handset.
- After a period of inactivity, Display turns off.

Retrieving Network Information

When ,  or  is pressed for the first time in Standby, handset initiates Network Information retrieval;  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ► **Settings**
► **Connectivity** ► **Retrieve NW Info** ► **YES**

Tip

Settings

- Change Wallpaper ● Add Calendar to Wallpaper
- Change Wallpaper Randomly ● Change Start-up Window
(☞P.18-3)

Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.


- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner-related Features



Manner Mode (☞P.18-2)	Press Manner key to mute handset tones and activate vibration for incoming transmissions.
Vibration Mode (☞P.18-2)	Activate in public places, meetings, etc. for silent call/message alerts.
Ringer Volume (☞P.18-2)	Mute call/message tones.
Emission OFF Mode (☞P.1-18)	Suspend all handset transmissions.
Answer Phone (☞P.2-15)	Use to handle incoming calls when inappropriate/unsafe to answer.
Driving Mode (☞P.1-18)	While driving, send a voice message informing the caller that you cannot answer the call (Handset does not ring.).

Activating Manner Mode

Press one key to mute handset tones and activate vibration for incoming transmissions.

- Manner Mode settings can be changed (☞P.18-7).
- When Manner Mode is active,  appears.

1 In Standby, press and hold

- To cancel: Press and hold  again
- To activate/cancel while handset is closed: Press and hold 



Note

- Shutter click and incoming tone via Earphone (**Level 1**) sound even in Manner Mode.
- When Music Player or Digital TV activates in Manner Mode, confirmation appears asking whether to cancel Manner Mode.
- When **Prefer manner mode** is **OFF** (☞P.12-7), Alarm sounds even if Manner Mode is active.

Tip

- Settings** ● Set Manner Mode Type (☞P.18-7)

Activating Emission OFF Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

- When Emission OFF Mode is active,  appears.

Main Menu ▶ **Settings** ▶ **Call Settings** ▶ **Emission OFF Mode**

1 YES

- To cancel: Follow the same steps.

Note

- Emission OFF Mode disables Bluetooth®/Infrared/IC transmissions. Bluetooth® handsfree devices cannot be used either.

Activating Driving Mode

Handset does not ring for incoming calls. Voice guidance informs the caller you are unavailable and Answer Phone activates.

- When Driving Mode is active,  appears.

1 In Standby, press and hold


- To cancel: Press and hold  again

Note

- When Answer Phone memory is full, incoming calls are rejected.
- Check ringtone when earphone/microphone is connected.

Handset Menus

Main Menu

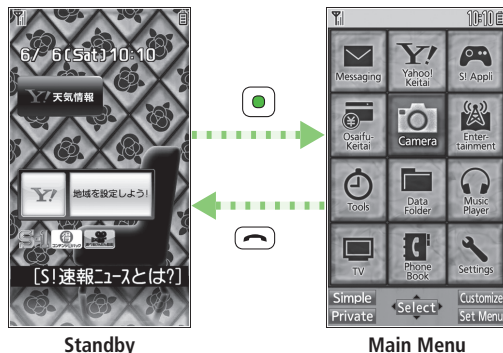


Standby

Main Menu

1 In Standby,


Main Menu appears.

- To change Main Menu theme:

 [Set Menu] → Select a pattern

2 to highlight an icon →













Selected function menu appears.

- To return to Standby: 

Note

- Standby window returns after 15 seconds of inactivity in Main Menu.

Main Menu Icons

Messaging  Create new/view received messages	Yahoo! Keitai  Enjoy Mobile Net & PC Site browsing...	S! Appli  Download, set and use S! Appli
Osaifu-Keitai  Use Osaifu-Keitai®	Camera  Capture images or record videos	Entertainment  Use Mobile Widget or S! Quick News
Tools  Set Alarm or save Calendar entries...	Data Folder  Open files saved on 931P/microSD Card	Music Player  Use Music Player
TV  View TV or record/timer-record programs	Phone Book  Save entries to call or send messages...	Settings  Adjust/customize handset settings

Tip

Settings

● Change Display Color Scheme (P.18-3) ● Change Main Menu Icons ● Change Main Menu Background (P.18-4)

Menu Numbers



Use keypad to select functions or menu items.

Unnumbered Menu Items

When numbers do not appear, select items as shown.

Main Menu

(#) to select **Settings** from Main Menu

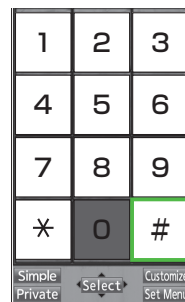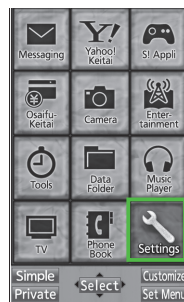

Example: Menu Icons set to Pinky dream


When Menu Icons is Set to Standard or Customize

Menus cannot be selected from Main Menu by keypad.

Open menu items by entering specific number in Main Menu (Quick Open Menu: P.19-14).

Top Menu Opened from Main Menu

(2) to select **Display Settings**

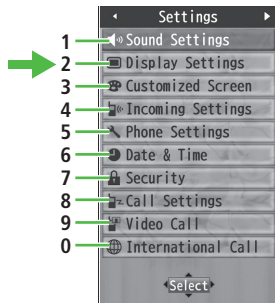


Example: Settings Top Menu

Numbered Menu Items

Press key corresponding to menu number to select a menu.

In Display Settings (from **Settings** Top Menu), (5) to select **Menu Icons**

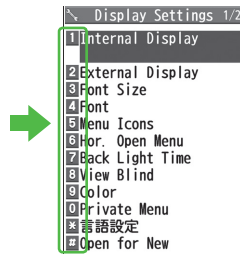

Accessing Functions/Info from Standby

Select indicators/ticker in Standby to access functions and information.

Available Items

- Event Indicator (P.1-21)
- Mobile Widget (P.7-2)
- S! Quick News (P.7-4)
- S! Information Channel/Weather (P.7-6)
- Shortcuts (P.1-22)
- Status Indicators (P.1-10)

1 In Standby,

Pointer () appears.

- Press or to return to Standby (Pointer disappears).

2 Use to move pointer () to an indicator, icon or ticker →

[Select]

Indicator, icon or ticker is selected. Function name appears.

- Press and hold to move pointer () continuously
- To cancel selection: or

3 [Select]

Function or information appears.



When Widgets Do Not Appear

Pointer () does not appear. After Step 1, use to highlight an item

→ [Select] to show function or information


- To show/hide widgets:

■ Using Pointer ()


> In Standby,  →  [Menu] → Select an item (See below)

Item	Operation/Description
to widgets list	Open Widget List
Yahoo!JAPAN Login	Open Yahoo! JAPAN log in window
Stand-by Display	Change Standby wallpaper > Select a folder → Select an image
Mobile Widget?	View Mobile Widget overview (Japanese)

Horizontal Open Menu

In Horizontal Open Position, press  in Standby to access Horizontal Open Menu. From Horizontal Open Menu, access functions available in Horizontal Open Position.



- Default Horizontal Open Menu varies by handset color (☞P.18-23).
- Press  to go from Horizontal Open Menu to Standby.
- Set handset to open to Horizontal Open Menu, Digital TV or Camera for Horizontal Open Position (Horizontal View: ☞P.18-13).
- Some operations and menu items in Horizontal Open Menu differ from those that appear in this guide.

Standby Options & Event Indicators

Check various indicators and information in Standby.

- To access functions/information from indicators: ☞P.1-20

Event Indicators

Event Indicators appear for missed calls, messages, etc.



■ Events

Missed Calls	Missed calls (☞P.2-13)
New Messages	New messages (☞P.13-10)
Answer Phone	Recorded caller messages (☞P.2-16)
Voice Mail	New Voice Mail (☞P.2-19)
Missed Call Notification	If Missed Call Notification is active, indicator appears for calls missed while handset is off, out-of-range, engaged, etc. (☞P.2-19)
S! Information Channel Info	S! Information Channel (received/failed updates) (☞P.7-6)
Weather Info	Weather Indicator (received/failed updates) (☞P.7-7)

■ Other Information

- Missed alarm (☞P.12-6)
- S! Appli startup notice (☞P.15-3)
- USB Mode setting (☞P.10-11)
- Missed location information request
- Auto location information notice (☞P.17-3)
- Timer (☞P.5-14)
- Content Key (☞P.9-5)
- Software Update result (☞P.19-13)

Mobile Widget (Japanese)

Paste various widgets to Standby to access information or tools from Standby.

- Mobile Widget: ☞ P.7-2
- To show/hide widgets: ☞



S! Quick News (Japanese)

By default, S! Quick News appears at bottom of Display.

- S! Quick News: ☞ P.7-4
- Show/hide S! Quick News: ☞ P.18-16



S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

- S! Information Channel/Weather: ☞ P.7-6



Shortcuts

Access frequently used functions from Standby.

- Following shortcuts are set by default (Services available only in Japanese):
S-1 battle, Content Value Package and Simple Select Video

Shortcuts



Adding Shortcuts

- Some functions are not available for shortcuts.

- 1 Open a function, [Y] [Menu] → *Add shortcut icon* → YES

Editing/Deleting Shortcuts

- 1 In Standby, [O] → [X] to move pointer → Highlight a shortcut
- 2 [Y] [Menu] → Select an item (See below)

Item	Operation/Description
Edit title	> Edit title
Sort	> Select an item → Select a target → [Finish] → YES
Delete this	> YES
Delete all	> YES

External Display

Use External Display to view Standby information when handset is closed.

- External Display turns off 15 seconds after handset is closed. Press any side key to turn it back on.
- Close handset while playing recorded videos, music, or recorded programs. Playback image/information appears on External Display.
- TV is unavailable on External Display.



Key Operations in Standby

Key Operation		Description
	Short Press	Turn on illumination
	Long Press	—
	Short Press	Activate Info Notice Setting (P.18-8)
	Long Press	Set/Cancel Manner Mode
	Short Press	Show new message/missed call details (If both available, only missed call details appear.) <ul style="list-style-type: none"> ● In missed call logs, press / to view previous/next logs ● In Received Message window, press / to scroll screen or press and hold / to view previous/next messages. ● To return to Standby: (MULTI)
	Long Press	Activate Camera (P.6-6)

Note

- Widgets and shortcuts do not appear in External Display.
- When YES/NO selection window appears in External Display, operations are disabled if handset is closed.

Tip

- Settings** ● External Display (P.18-5)

1 Customizing User Interface

Customized Screen/Familiar Usability

Customized Screen	Download and set Customized Screen to personalize user interface, ringtone, etc., to a selected theme.
Familiar Usability	Download Familiar Usability applications that mimic the interface design of other handsets.

Downloading Customized Screen/Familiar Usability

Download characters or applications from websites.





Main Menu ► Data Folder ► Customized Screen

1 *Customized Screen* or *Familiar Usability* → YES

Website providing characters or applications appears.
Follow onscreen instructions.

- To manage Customized Screen applications in Data Folder:
📄 P.9-11

Setting Customized Screen/Familiar Usability

- 1 In Standby, 
- 2  [Customize] → *Customized Screen* or *Familiar Usability*
- 3 Highlight a theme →  [Set]
 - To toggle thumbnail and list:  [Change]
- 4 YES

Note

- Customized Screen or Familiar Usability cannot be set when battery is low.
- Other functions are not available while switching. For some seconds after switching is complete, all calls/messages may be blocked.
- Familiar Usability does not completely remake handset.
- Alternatively, **Main Menu ► Settings ► Customized Screen**
To cancel, select **Release Settings**.
- When Simple menu is active, Customized Screen and Familiar Usability settings are not reflected. To reflect settings, cancel Simple menu.

Changing Display Font

Change Display font. Fonts can also be downloaded.

Downloading Fonts

Main Menu ► Settings ► Display Settings ► Font

1 **Download Font** → YES

Follow onscreen instructions.

- For details on Font folder (Data Folder): P.9-11

Note

- While Personal Data Lock is set, fonts cannot be downloaded.

Changing Font

Main Menu ► Settings ► Display Settings ► Font

1 Select a folder → Highlight a font → [Set]

Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.


Opening Private Menu

1 In Standby, [TV] → [Private]

Private Menu appears.

- To return to Main Menu: [TV] [Normal]

2 Select a menu

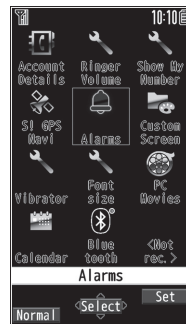

Private Menu Window

Save Private Menu Background

> After Step1, [Set] → [Menu] → **Change BG image** → Select a folder → Select an image

Customizing Private Menu


- 1 In Standby, [Private] → [Set]
- 2 Highlight a target → [Menu] → *Add to menu*
- 3 Select an item

Cancel Functions

- > In Step 2, (highlight a function →) [Menu] → *Release this* or *Release all* → YES

Reset Private Menu

- > In Step 2, [Menu] → *Reset menu* → YES

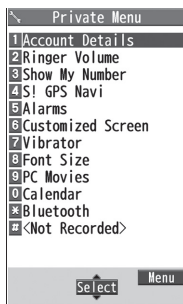

Private Menu Setting Window

Adding Shortcuts

- 1 In Standby, [Private] → [Set]
- 2 [Menu] → *Add shortcut icon* → YES


Note

- Alternatively, open Private Menu setting window from **Main Menu** ► **Settings** ► **Display Settings** ► **Private Menu**


Simple Menu

Activate Simple menu to limit menu options to basic ones.

- Handset is limited to basic operations (P.1-27).

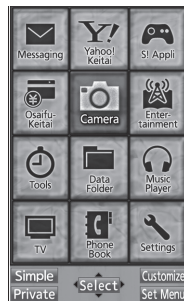

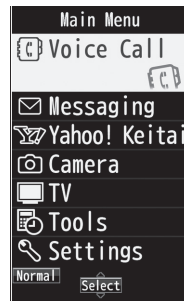

Normal Mode Window



Simple Menu Window


Activating Simple Menu

1 In Standby,  →  [Simple] → **YES**

2 **YES** or **NO**

- Select **YES** to set all items in Font Size (P.18-6) to **Large**.
- To open Simple menu:  in Standby.

Cancel Simple Menu

> In Standby,  →  [Normal] → **YES**

Note

- Turning off the power does not cancel Simple menu.
- Widgets (in Standby) and S! Quick News do not appear in Simple menu. Customized Screen or Familiar Usability setting is canceled.

Simple Menu

Simple Menu	Page	Simple Menu	Page
Voice Call		TV	
Outgoing Log	2-13	Watch TV	5-5
Incoming Log	2-13	Timer Recording	5-14
Phone Book	4-6	Channel Setting	5-4
Create New Phone Book	4-3	Tools	
Answer Phone	2-15	Data Folder	9-2
Account Details	1-30	Alarms	12-6
Messaging		Calendar	12-2
Incoming Mail	13-15	Calculator	12-8
Create New	13-4	Notepad	12-8
Retrieve New	13-15	Receive via Infrared	10-3
Drafts	13-15	Settings	
Sent Messages	13-15	Ringtones/Volume	1-17 18-2
Create New SMS	13-7	Screen/Fonts	18-3 to 18-6
Yahoo! Keitai		Call Time & Cost	18-9
Yahoo! Keitai	14-2	Date & Time	18-8
Bookmarks	14-8	Security	11-2 16-5 19-12
Saved Pages	14-8	Call Settings	2-17 to 2-21
Enter URL	14-4		
Camera			
Take Pictures	6-6		
See Pictures	6-14		
Shoot Videos	6-8		
Watch Videos	6-14		

Passwords

Phone Password, Center Access Code and Security Code are needed for handset use.

Phone Password

<Default> 9999

4 to 8-digit number required to use/change some handset functions.

- Enter number within 15 seconds.
- _ appears for each digit entered.
- Phone Password can be changed on handset (☞P.11-2).

Center Access Code

4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.

- Do not attempt to change Center Access Code. For details, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

Security Code

4-digit number specified at initial subscription, required to restrict handset services (☞P.2-20).

- Enter number within 15 seconds.
- If entered incorrectly three times, Security Code settings lock; Security Code & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (☞P.19-34) for details.
- Security Code can be changed on handset (☞P.2-21).

Note

- Write down Phone Password, Center Access Code and Security Code. Do not reveal Phone Password, Center Access Code and Security Code. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).


Multi Task

Activate up to three functions from four different groups at the same time.

Group	Function
① Messaging Group	Messaging
② Yahoo! Keitai/S! Appli Group	Yahoo! Keitai/S! Appli/Entertainment (except for Mobile Widget)/Osaifu-Keitai (Lifestyle-Appli)
③ Tools Group	Music Player*/Camera/Tools/Data Folder/TV/Phone Book/Entertainment (Mobile Widget)
④ Settings Group	Settings/Osaifu-Keitai (IC Card Settings)

* Functions other than Tools Group may be included.

- [▼] appears above the icons of an active group.
- [] appears for single function in use; [] for multiple functions in use.

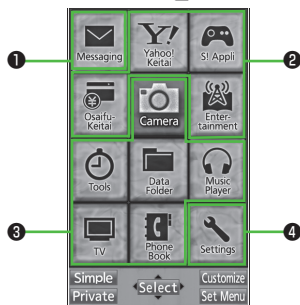


Tip

- Other Functions while Watching TV (P.5-8)
- Using Other Functions while Listening to Music (Play Background) (P.8-7)

Activating Another Function

Activate another function from a different group. Multi Task is unavailable when Simple menu is active.

- 1 [] (MULTI) → *Open Menu* → Select a function

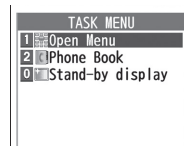

TASK MENU Window

Note

- If another function is selected from same group, confirmation appears. Select **YES** to cancel current function and start a new function.

Ending Current Functions

- 1 []

■ End All Active Functions

> [] (MULTI) → [] [END] → **YES**

View Blind

Activate View Blind to protect Display from prying eyes.

Main Menu ► Settings ► Display Settings ► View Blind

1 *ON*

2 Select a level



- Set level 1-3 (Level 3 is the highest level).

Note

- Alternatively, press and hold (8) to activate/cancel. Previously selected level takes priority.
- View Blind cannot be activated: While in Standby (Normal Position only); while S! Appli is active; while Privacy Key Lock is active; during All Reset

My Number

Confirm handset phone number in Account Details (P.4-13). Also confirm data saved in Account Details: name, mail address, etc.

1 In Standby,  → 
Account Details appears.

