


Phone Book

Overview	4-2
Saving to Phone Book	4-3
Phone Book Entry Items.....	4-3
Create New Entry	4-3
Other Ways to Add New Entries	4-5
Setting Groups	4-6
Searching/Using Phone Book.....	4-6
Making Calls from Phone Book.....	4-6
Using Phone Book	4-7
Managing Phone Book	4-9
Editing Phone Book Entries	4-9
Deleting Phone Book Entries.....	4-9
Copying/Deleting Phone Book Data	4-9
Phone Book Memory Status.....	4-10
S! Addressbook Back-up.....	4-10
Manual Synchronization	4-11
Auto Synchronization.....	4-12
Viewing Sync Log	4-12
Account Details	4-13
Editing Account Details.....	4-13
Account Details Functions.....	4-13
Voice Dial.....	4-14
Adding Entries to Voice Dial.....	4-14
Searching Entries by Voice Dial.....	4-14

Overview

Save frequently used phone numbers and mail addresses to Phone Book.


Supplement phone numbers and mail addresses with birthday, street address, an image or notes.

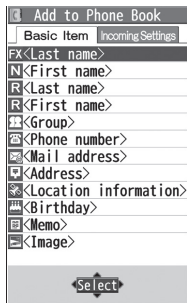

Set tones/image for each entry.



Sort entries into Groups.

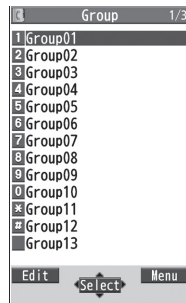

Note

● Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

Tip

- Phone Book Memory Status (☞P.4-10)
- Backing up to microSD Card (☞P.9-19)

Saving to Phone Book

Phone Book Entry Items

Save up to 1000 entries in Phone Book. Save phone numbers or mail addresses etc. in USIM Card Phone Book.

- Up to 50 entries can be saved to USIM Card Phone Book.

Phone Book Entry Items		931P	USIM Card
Basic Item	Name (Reading)	<input type="radio"/>	<input type="radio"/>
	Group	19	10
	Phone number	4	2
	Mail address	3	1
	Address	<input type="radio"/>	—
	Location information	<input type="radio"/>	—
	Birthday	<input type="radio"/>	—
	Memo	<input type="radio"/>	—
	Image	100	—
	Memory number	000 - 999	—
Incoming Settings	Ringtone		
	Vibrator		
	Notification Light		
	Screen		
	Msg Ringtone	<input type="radio"/>	—
	Msg Vibrator		
	Msg Notif. Light		
Answer message			


: Can be saved —: Cannot be saved

- Phone Book entries in USIM Card can also be used in another SoftBank handset.


Create New Entry


Save new entries to 931P or USIM Card Phone Book.

- When saving to USIM Card Phone Book, set *Save Settings* to *USIM* or *Ask Every Time* beforehand (P.18-11).

1 Press and hold 

2 Enter Last name →
Enter First name

- For 931P Phone Book,  to switch Basic item and Incoming Settings tabs.

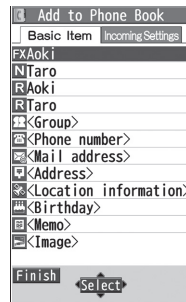

931P Phone Book

3 Select an item (See below)

Item	Operation/Description
Name (First/Last)	Save first and last names separately. For USIM Card, enter both names together > Enter name
Reading (First/Last)	Save first and last name readings separately. For USIM Card, enter both readings together > Enter reading
Group	> Select a group
Phone number	> Enter phone number (→ For 931P, select an icon)
Mail address	> Enter mail address (→ For 931P, select an icon) ● Save only phone number if mail address is "phone number@softbank.ne.jp".
Address	> Enter zip code → Enter address
Location information	Identify handset location and save information. Also, save location record selected from location logs > Select an item <ul style="list-style-type: none"> · By position loc. → YES → Check information → [Set] (To show information while positioning: When [Use] appears at lower right of display, press [OK]. To retry positioning: [Retry]) · From loc. history → Select a location record to save
Birthday	> Enter birthday
Memo	> Enter memo

Item	Operation/Description
Image	Save a still image to appear for incoming calls > Select an item <ul style="list-style-type: none"> · Select image → Select a folder → Select a file · Shoot image → Frame subject → [Record]// → [Save]// ● Saved still image appears for an incoming call only when Phone Book Image (P.18-7) is ON. If there is an image saved for Screen, the image preferentially appears.
Memory number	> Enter memory number
Ring tone	> Ring Tones → Select a type → Select a folder → Select a ringtone
Vibrator	> Select vibrator → Select a pattern
Notification Light	> Select illumination → Select a pattern
Screen*	> SEL picture → Select a screen type → Select a folder → Select an image ● Still image saved for Screen appears for an incoming call whether Phone Book Image is ON or OFF . Phone Book Image setting applies only when still image is saved for Image .
Msg Ringtone	> Ring Tones → Select a type → Select a folder → Select a ringtone
Msg Vibrator	> Select vibrator → Select a pattern
Msg Notif. Light	> Select illumination → Select a pattern
Answer message	> Select answer message → Select a message



* To cancel: Select **RLS picture**

4 [Finish]

Other Ways to Add New Entries

Save currently displayed phone numbers, mail addresses, still images or location information to Phone Book.

Example: Saving Numbers from Incoming Call Logs

1  → Highlight a record →  [Menu] → *Add to Phone Book*

2 New Entry

New → Enter details (👉 From Step 3 on P.4-4)

Add to Existing Entry


Add → Select entry → Enter other details

(👉 Step 3 on P.4-4)

- When saving to USIM Card, *Overwrite* appears instead of *Add*.

3 When complete,  [Finish] → *YES*


Note

- Press  [Menu] from a function. If *Add to Phone Book* appears, the information is savable to Phone Book. From a text message window, select *Add Address* to save entries; from still image list/still image, select *Set display → Phone Book* to save entries.
- When adding still images or location information, entries are saved to handset regardless of Save Settings.
- When saving new entries in Secret Mode or Secret Data Only, entries are saved to handset regardless of Save Settings.

Setting Groups

Sort entries by Group. Custom set ringtones/vibrators/notifications per group.

Main Menu ► Phone Book ► Group

-  appears for USIM Card Group.

1 Highlight a group →  [Edit] → Select an item → Set item

- Enter group name for " Group name."
- For other item operations:  P.4-4
Custom settings unavailable for USIM Card Groups.

2 When complete,  [Finish]

■ Check Settings

- > Select a group entry, or  [Menu] → *Check setting*
- Settings cannot be checked in USIM Card Group Phone Book.

■ Reset Group Setting

- > Highlight a group →  [Menu] → *Reset group* → YES

Searching/Using Phone Book





Making Calls from Phone Book

<Default> A-KA-SA-TA-NA

1 

2 Search Phone Book (See below)

- To change search method:  → Select a search method (See below)

Search Method	Operation/Description
A-KA-SA-TA-NA	Search entries by katakana syllabary. Names saved in Roman characters are saved under the 英 tab.
Reading	> Enter partial reading → 
Group	> Select a group
Memory Number*	Enter memory (entry) number to search for an entry > Enter a memory number
Name	> Enter partial name → 
Phone Number	> Enter partial phone number → 
Mail Address	> Enter partial mail address → 
2-touch Dial*	Show entries with memory (entry) numbers 000 - 009

* 931P Phone Book only

3 Select an entry

4 


5 Voice Calls

Highlight a phone number → 






Video Calls

Highlight a phone number →  [V. Call]

Note



- To scroll through entries, enter nothing and press  (not available in **Group** or **2-touch Dial**).
- If no matches are found in **Reading** or **Memory Number** method, entries closest to condition appear.
- Once a method is selected, same method retains.


 
 

 

 

Additional Search/Dialing Methods

Open Tab Assigned to Key from Standby	Press and hold (0) – (9) Open search window assigned to key.
Enter Partial Number from Standby or during Call	Enter partial number → 
By Memory Number	 →  → Enter a memory number
By Single-digit Memory Number (2-touch Dial)	Enter last digit ((0) – (9)) of memory number 000-009 → Voice Call:  / Video Call:  [V. Call]

Using Phone Book

Use Phone Book Entries

>  → Highlight an entry →  [Menu] → Select an item
(See below)

Item	Operation/Description
New	Add a new entry ( From Step 2 on P.4-3)
Sort	Change display order > Select an order <ul style="list-style-type: none"> ● Available only when search method ( P.4-6) is Name, Phone Number or Mail Address.
Send Ir data*	( P.10-3)
IC transmission*	( P.10-5)
Send to Bluetooth*	( P.10-9)
Copy to microSD*	Copy an entry to microSD Card > YES <ul style="list-style-type: none"> ● To display copied data:  P.9-18
Delete phone book	> Select an item → Follow steps for selected option ( P.4-9)
Character size	Switch character size to large/standard
Set secret mode/Release secret*	Set/cancel Secret Mode for selected entry <ul style="list-style-type: none"> ● Entries saved as secret data appear only when Secret Mode or Secret Data Only is active ( P.11-9).

* Not available in USIM Card Phone Book

■ Use Entry Details

> [Icon] → Select an entry → [Menu] → Select an item (See below)

Item	Operation/Description
Notify caller ID	Show/hide caller ID (☞P.2-3)
Prefix numbers	Make a call using a prefix number (☞P.2-3)
Int'l dial assist	Set International dial assist (☞P.2-10)
Restrictions*	Activate restrictions on specified entry (☞P.11-10)
Edit Phone Book	Edit entry (☞From Step 3 on P.4-4)
Delete phone book	> Phone number or Delete this → YES <ul style="list-style-type: none"> Item names vary by selected item: Mail address/Address/Location info/Birthday/Memo/Image
Add shortcut icon	Create a shortcut (☞P.1-22)
Compose S! Mail	Create a message to mail address of selected entry (☞From Step 4 on P.13-4)
Compose SMS	Create an SMS message to phone number of selected entry (☞From Step 4 on P.13-7) <ul style="list-style-type: none"> Message can be sent to SoftBank handsets only.
Send Ir data*	(☞P.10-3)
IC transmission*	(☞P.10-5)
Send to Bluetooth*	(☞P.10-9)

Item	Operation/Description
Copy to microSD*	Copy an entry to microSD Card > YES <ul style="list-style-type: none"> To display copied data: ☞P.9-18
Copy names	Copy a name
Copy phone numbers	Copy an item <ul style="list-style-type: none"> Item names vary by selected item. Copy mail add./Copy address/Copy location info/Copy birthday/Copy memo
Character size	Switch character size to large/standard
Set secret mode/Release secret*	Set/cancel Secret Mode for selected entry <ul style="list-style-type: none"> Entries saved as secret data appear only when Secret Mode or Secret Data Only is active (☞P.11-9).
Copy to USIM/ Copy from USIM	Copy an entry to USIM Card > YES



* Not available in USIM Card Phone Book

Note



- Insert entry details to a message (☞P.3-5).

 

Managing Phone Book

Editing Phone Book Entries

- 1  → Select an entry →  [Edit]
- 2 Edit (☞ From Step 3 on P.4-4) → **YES**

Deleting Phone Book Entries

- 1  → Highlight an entry →  [Menu] → **Delete phone book**
- 2 Select an item (See below)

Item	Operation/Description
Delete this	> YES
Delete select	> Check entries to delete →  [Finish] → YES ●  [Menu] → Select all in tab* , Select all , Release all in tab* or Release all to check/uncheck all entries at a time
Delete all in tab*	> YES
Delete all	Delete all entries (931P/USIM Card Phone Book) including Secret Mode entries > Enter Phone Password → YES → YES


* Available in **A-KA-SA-TA-NA**, **Reading**, **Group** and **Memory Number** search methods (☞ P.4-6)

Copying/Deleting Phone Book Data

Main Menu ► Phone Book ► Memory Manager

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Copy	Copy data between 931P/USIM Card Phone Book > Copy to USIM or Copy from USIM
Delete	Delete data in 931P/USIM Card Phone Book > Phone or USIM

- 3 **Phone Book** → Select an entry*
* To clear, repeat operation.
- 4  [Finish] → **YES**

Phone Book Memory Status

Main Menu ► Phone Book ► Memory Status


View 931P/USIM Card Phone Book memory status.

S! Addressbook Back-up

Back up Phone Book entries to S! Addressbook (network server); synchronize 931P Phone Book with S! Addressbook; restore Phone Book after accidental loss/alteration.

- Separate subscription is required for this service.

Notes

- Fully charge battery beforehand ( appears).
- Transmission fees apply to synchronization, backup and restoration.
- Restoration cancels these Phone Book settings: Ringtone, Vibrator, Notification Light, Picture, Answer message.
- Subscription to the service activates Auto Sync Settings during network information retrieval to back up edited Phone Book entries. Note that initiating network information retrieval activates Auto Sync Settings even when Auto Sync Settings are **OFF**. When contract is terminated, check if Auto Sync Settings are **OFF** (P.4-12).
- **S! Addressbook is deleted upon contract termination.**
- **Addresses saved in Address field on 931P Phone Book are saved to building name field in S! Addressbook.**
- **When number of characters saved in S! Addressbook exceeds maximum number of characters savable on 931P Phone Book, excess characters do not appear on 931P Phone Book.**

Synchronization/Back-up/Restoration

- Be careful of back-up/restoration timing or selecting a synchronization direction.
- When no 931P Phone Book entries exist, selecting **Synchronize**, **Sync from Phone** or **Backup to Server** deletes S! Addressbook.
- When no S! Addressbook entries exist, selecting **Synchronize**, **Sync from Server** or **Restore from Server** deletes all 931P Phone Book entries.

Capacity Disparities

- When the number of savable items varies between 931P Phone Book and S! Addressbook, synchronization reflects lower limit.

Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

Manual Synchronization

Main Menu ► Phone Book ► S! Addressbook BkUp
► Start Sync

- 1 **YES** → Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Synchronize	Synchronize 931P Phone Book with S! Addressbook
Sync from Phone	Send edited data to S! Addressbook
Sync from Server	Receive edited data from S! Addressbook
Backup to Server	Back up 931P Phone Book to S! Addressbook
Restore from Server	Restore S! Addressbook to 931P Phone Book

- 3 **YES** → **OK**

Auto Synchronization

Main Menu ► Phone Book ► S! Addressbook BkUp
► Auto Sync Settings ► ON/OFF

- 1 Enter Phone Password → **ON**
 - To cancel, select **OFF**
- 2 Select an item (See below)

Item	Operation/Description
Every week	Synchronize weekly at specified time of the day > Select a day → Set start time → Select a sync type
Every month	Synchronize monthly at specified time of the date > Enter a date → Set start time → Select a sync type
After Editing PB	Synchronize ten minutes after entries are edited > Select a sync type

3 **YES**

■ View Auto Sync Settings

> Main Menu ► Phone Book ► S! Addressbook BkUp
► Auto Sync Settings ► Confirm Settings

Viewing Sync Log

View synchronization/back-up/restoration logs.

Main Menu ► Phone Book ► S! Addressbook BkUp
► Sync Log

- 1 Select a log


■ Delete Sync Log

> In Step 1, (highlight a log →)  [Menu] → *Delete this* or *Delete all*
(→ For *Delete all*, enter Phone Password) → **YES**

Account Details

Save phone number, mail address, street address, etc. in Account Details.



Editing Account Details

- 1  → 
- 2  [Edit]
- 3 Enter Phone Password → Edit →  [Finish]
 - Your subscribing phone number cannot be edited or deleted.

Account Details Functions

In Account Details, press  [Menu] for following operations.

Item	Operation/Description
Edit*	Edit Account Details (☞ From Step 3 above)
Character size	Switch character size to large/standard
Display all data*	View all saved items such as phone numbers and mail addresses
Copy names	Copy a name
Copy phone numbers	Copy an item <ul style="list-style-type: none"> ● Item names vary by selected item. <i>Copy mail add./Copy address/Copy birthday/Copy notepad</i>

Item	Operation/Description
Send Ir data	Send details via Infrared (☞ P.10-3) <ul style="list-style-type: none"> ● Alternatively, while Account Details is open, press  [Ir].
IC transmission	Send details via IC transmission (☞ P.10-5) <ul style="list-style-type: none"> ● Alternatively, while Account Details is open, press  [ICtrans].
Copy to microSD	Copy details to microSD Card <ul style="list-style-type: none"> > YES ● To display copied data: ☞ P.9-18 ● Account Details is saved as a Phone Book entry.
Erase phone number*	> Select an item → YES <ul style="list-style-type: none"> ● Delete items saved in Account Details ● Item names vary by selected item. <i>Erase mail add./Erase address/Erase birthday/Erase memorandums/Delete image</i>
Reset*	Reset all Account Details except your subscribing phone number <ul style="list-style-type: none"> > YES

* Enter Phone Password if required.

Note

- Quote a content from Account Details to a message (☞ P.3-5).

Voice Dial

Make a call by saying a voice dial name.

Note




- Keep microphone about 10 cm away from your mouth, and pronounce a Voice Dial name clearly. If microphone is too distant, your voice may not be recognized.
- Avoid making sounds unrelated to Voice Dial names (clearing your throat, clicking your tongue, heavy breathing, etc.).
- Say Voice Dial names in quiet places.
- Avoid pressing or brushing keys, or covering microphone with fingers when pronouncing a Voice Dial name.

Adding Entries to Voice Dial

Main Menu ► Phone Book ► Settings ► Voice Dial

- 1 **<New>** → Select a Phone Book entry
Entries with ★ are already saved in Voice Dial list.
 - 2 Enter a Voice Dial name
 - Only katakana entry is available for Voice Dial names.
- Edit Voice Dial Names**
 > In Step 1, highlight a Voice Dial name → [Edit] → Edit name → **YES**
- Delete Voice Dial Entries**
 > In Step 1, (highlight a Voice Dial name →) [Menu] → **Delete this** or **Delete all** → **YES**

Searching Entries by Voice Dial

- 1 Press and hold  → Say a Voice Dial name
Say the name within four seconds after voice recognition tone sounds. Once Voice Dial is recognized, result appears.
 - 2 [Detail] →  to show phone number
 - 3 **Voice Calls**
Highlight phone number → 
- Video Calls**
 Highlight phone number → [V. Call]

Tip

- Settings** ● Activate Voice Dial Automatically ● Activate Voice Dial via Earphone or Bluetooth® Device (P.18-11)