

Handset Security

Changing Phone Password	11-2
Security Functions	11-2
USIM PINs	11-2
Keyguard	11-3
Privacy Key Lock	11-4
Personal Data Lock	11-4
Secure Remote Lock	11-6
Key Pad Dial Lock	11-7
Side-keys Guard	11-8
Additional Lock Functions	11-8
Restricting Calls/Messages	11-8
Hiding Call Logs and Sent/Received Address List	11-8
Secret Mode/Secret Data Only	11-9
Setting Secret Mail	11-9
Mail Security	11-10
Call Restrictions	11-10
Delaying Ringtone	11-11
Rejecting Unknown Callers	11-11
Rejecting Calls without Caller ID	11-11
Reset	11-12
Reset Settings	11-12
All Reset	11-12

Changing Phone Password

<Default> 9999

Change Phone Password as required.

- For Phone Password details: P.1-28

Main Menu ► Settings ► Security ► Change Phone Password

- 1 Enter current 4-8-digit Phone Password
- 2 Enter new 4-8-digit Phone Password → **YES**

Security Functions

USIM PINs

- For more information about PINs: P.1-3

Note

- Emergency numbers (110, 119, 118) are not dialable in PIN/PIN2, PUK/PUK2 entry window.

PIN Authentication

Activate to require PIN entry each time handset is turned on.

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **PIN Authentication**
- 2 **ON**
 - To deactivate PIN Authentication: **OFF**
- 3 Enter PIN

Changing PIN/PIN2

- Set **PIN Authentication** to **ON** before changing PIN (Above).

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **Change PIN** or **Change PIN2**
- 2 Enter current PIN/PIN2
- 3 Enter new PIN/PIN2
- 4 Reenter new PIN/PIN2

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unlocking Key (PUK/PUK2).

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☎P.19-34).

- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2


Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (Even turning off power is counted as one incorrect entry.). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☎P.19-34).

Keyguard


Lock handset keys to prevent accidental operation except when turning power on/off or answering incoming calls.

- 1 In Standby, press and hold 

When Keyguard is set,  appears.

- To cancel Keyguard, repeat operation.

While Keyguard is Active

- Emergency numbers (110, 119, 118) are dialable even when Keyguard is active. Entered numbers do not appear on Display. Once numbers are dialed, Keyguard is canceled.
- Press  to disable Calendar event tone or Alarm.
- Keyguard can be canceled even during a call.

Note

- Turning off power cannot cancel Keyguard.


Privacy Key Lock

<Default> OFF

Set Privacy Key Lock to require Phone Password for using 931P except for turning handset on/off and answering calls.

Main Menu ► Settings ► Security ► Privacy Key Lock

1 Enter Phone Password

When Privacy Key Lock is set,  appears in Standby.

- To cancel Privacy Key Lock, enter Phone Password in Standby. If Phone Password is incorrectly entered five times, 931P turns off.

While Privacy Key Lock is Active

- Emergency numbers (110, 119, 118) are dialable even when Privacy Key Lock is active.
- Only phone numbers appear on Display for incoming calls.
- Calls cannot be received by Bluetooth® headsets or handsfree devices.
- Message ringtones or Alarm tones are disabled.
- Calendar event tone or Alarm is disabled.
- S! Quick News and some indicators on Internal Display do not appear. They appear after Privacy Key Lock is canceled.

Note

- Turning off power cannot cancel Privacy Key Lock.

Personal Data Lock

Set Personal Data Lock to prevent others from reading or tampering with your personal information in Phone Book or Data Folder. Activate to require Phone Password for accessing personal data.

Locked Functions/Data

- Messaging
- S! Appli
- Phone Book search/saving/setting
- Memory Manager/ Memory Status (Phone Book)
- Account Details
- Restrictions (Phone Book)
- Notepad
- Calendar
- Tasks
- Shortcuts
- Event Indicators
- Camera/Video Camera
- Lifestyle Appli
- microSD Backup
- Answer Phone
- Voice Recorder
- Customized Screen
- Voice Announce
- Software Update
- Yahoo! Keitai viewing/setting
- PC Site Browser viewing/setting
- Bookmarks/ Saved Pages
- BookSurfing®
- e-Book Viewer
- Mobile Widget
- S! Quick News
- S! Information Channel/Weather
- Content Key obtaining/backup
- Voice Dial
- S! GPS Navi
- Data Folder*
- Music Player
- Digital TV
- Bar Code Reader
- Receive via Infrared
- IC Data transmission
- Alarm
- Reset Settings
- All Reset


* Font setting is available.

Activating/Canceling Personal Data Lock

<Default> Deactivate


Main Menu ► Settings ► Security ► Personal Data Lock

1 Enter Phone Password → **Activate/Deactivate**

While Personal Data Lock is set,  appears in Standby.

- To cancel Personal Data Lock, repeat operation. If Timer Lock at Close is set, password entry is requested when 931P is opened.

Canceling Personal Data Lock Temporarily

When Phone Password is entered,  disappears and disabled functions become temporarily available.

- Once handset returns to Standby while no functions are active, Personal Data Lock is active again.
- Some functions remain unavailable. Deactivate Personal Data Lock to use the following:
 - Receiving IC data
 - Reject unknown

Note

- While Personal Data Lock is set, some indicators do not appear in Standby. They appear after lock is canceled.
- Turning off power does not cancel Personal Data Lock.

Customizing Personal Data Lock

Enable/disable Alarm, incoming message notification, etc. while Personal Data Lock is active.

Main Menu ► Settings ► Security ► Personal Data Lock

1 Enter Phone Password → **Customize** → Select an item (See below)


Item	Operation/Description
Alarm Tone	Enable/disable Alarms (Calendar, TV timer, or other alerts) or TV Timer Recording. > Select an item → Accept (Enable) or Not Accept (Disable)
Incoming Call Act	Show/hide Event Indicator (incoming messages) or Phone Book entry information (incoming calls). > Select an item <ul style="list-style-type: none"> · Incoming Message → Accept (Show indicator) or Not Accept (Hide indicator) · Phone Book Available → Accept (Show Phone Book Entry information) or Not Accept (Hide information)
Display/Tone	Enable/disable Display settings, ringtones or indicators. > Select an item <ul style="list-style-type: none"> · Internal Display → Accept (Enable Display Settings) or Not Accept (Disable) · Ring Tones → Accept (Enable Sound Settings) or Not Accept (Disable) · S! Quick News → Accept (Show information) or Not Accept (Hide information) · S! Info Ch./Weather → Accept (Show indicators) or Not Accept (Hide indicators) · Widget Contents → Accept (Show widgets) or Not Accept (Hide widgets)

Activating Personal Data Lock when Closing Handset

<Default> Deactivate

Set Timer Lock at Close to automatically activate Personal Data Lock when specified time has elapsed after 931P is closed.

Main Menu ► Settings ► Security ► Timer Lock at Close

- 1 Enter Phone Password
- 2 **Personal Data Lock** → Select a time
Confirmation appears asking whether to activate Lock OFF at Open.
When Timer Lock at Close is set,  appears.
● When **OFF** is selected, setting is canceled.

Opening Personal Data Lock OFF Window when Opening Handset

<Default> OFF

Main Menu ► Settings ► Security ► Lock OFF at Open

- 1 Enter Phone Password
- 2 **Personal Data Lock** → **ON**

Note

- When Timer Lock at Close and Lock OFF at Open are both active, canceling Personal Data Lock when opening handset temporarily cancels lock. However, lock activates again when specified time elapses after closing 931P.

Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ► Yahoo! Keitai ► Yahoo! Keitai
► メニューリスト ► My SoftBank ► English

- Follow onscreen instructions.

Note

- Emergency numbers (110, 119, 118) are dialable even while Secure Remote Lock is set.

Showing Messages during Secure Remote Lock

<Default> OFF

Set Display message to appear when Secure Remote Lock is active.

- Use preset message or create a message.

Main Menu ► Settings ► Security ► Lock Message

1 Enter Phone Password

2 **Display Setting** → ON

■ Save Lock Messages

> After Step 1, **Message** → Enter a message

Key Pad Dial Lock

<Default> Deactivate

Allow dialing only from Phone Book entries and lock dialing with keypad. Unauthorized use of 931P can be prevented.

■ Unavailable Operations


- Dialing with keypad
- Phone Book (saving, editing, deleting, copying from microSD Card, and sending/receiving via Infrared, IC transmission and Bluetooth®)
- Sending SMS to unknown numbers
- Sending S! Mail

■ Available Operations

- Dialing from Phone Book or Voice Dial
- Dialing from Redial, Outgoing Call Logs, Incoming Call Logs, Sent address, or Received address (only phone numbers saved in Phone Book)

Main Menu ► Settings ► Security ► Key Pad Dial Lock

1 Enter Phone Password

While Key Pad Dial Lock is set,  appears in Standby.

- To cancel Key Pad Dial Lock, repeat operation.

Note

- Emergency numbers (110, 119, 118) are dialable even while Key Pad Dial Lock is set.

Side-keys Guard

<Default> OFF

Set Side-keys Guard to disable side key operations while 931P is closed.

Main Menu ► Settings ► Phone Settings ► Side-keys Guard

1 ON

While Side-keys Guard is set,  appears in Standby.

- To set Side-keys Guard to **OFF**, repeat operation.

Note

- When **Menu Icons** is set to **Standard** or **Customize**, press  in Standby → Press and hold  to toggle **ON/OFF**.

Additional Lock Functions

■ IC Card Lock

Deactivate Osaifu-Keitai® functions (☎P.16-5).

■ Remote Lock

Deactivate Osaifu-Keitai® functions remotely (☎P.16-5).

Restricting Calls/Messages

Hiding Call Logs and Sent/Received Address List

<Default> ON

Main Menu ► Settings ► Incoming Settings ► Call Logs

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Incoming	Show/hide Incoming Call Logs/Received address list
Outgoing	Show/hide Redial/Outgoing Call Logs/Sent address list

3 OFF

Note

- While Incoming Call Logs is OFF, Answer Phone (Voice Calls) does not play. Selecting Missed Call indicator does not show Incoming Call Logs.

Secret Mode/Secret Data Only

<Default> Deactivate

Phone Book entries and calendar events saved as secret data appear only when 931P is in Secret Mode/Secret Data Only.

- Set Phone Book or Calendar events as secret data (Phone Book: P.4-7, 4-8 / Calendar events: P.12-5)

Main Menu ► Settings ► Security

- 1 Select an item (See below)

Item	Operation/Description
Secret Mode	View all data including secret data
Secret Data Only	View only secret data

- 2 Enter Phone Password

For Secret Data Only, number of saved secret data appears.
When Secret Mode/Secret Data Only is set, appears (For Secret Data Only, indicator flashes.).

■ Cancel Secret Mode/Secret Data Only

> In Standby, or follow Step 1 above

■ Cancel Secret Mode/Secret Setting

> In Phone Book/Calendar event window, [Menu] → *Release secret*

Note

- Select whether to save data edited/saved in Secret Mode as secret data.
Data saved/edited in Secret Data Only are saved as secret data.

Tip

Settings

- Set Learning Feature Off for Secret Mode/Secret Data Only
(P.18-10)

Setting Secret Mail

<Default> ON

Set messages from secret Phone Book entries to appear only when handset is set to Secret Mode or Secret Data Only.

- 1 → *Settings*
- 2 *Universal Settings* → *Secret Mail Display*
- 3 Enter Phone Password
- 4 *OFF*

Note



- When both Spam Filter and Secret Mail Display are set, messages from Phone Book entries saved as secret mode are sorted into Spam Folder (Safe List: P.13-17).

11

Handset Security

Mail Security




Set handset to require Phone Password for opening mail boxes or operating Server Mail.

- 1  → **Settings**
- 2 **Universal Settings** → **Mail Security**
- 3 Enter Phone Password → Select items* →  **[Finish]**

* To cancel: press  again.



 appears for set mail boxes and menus.

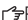
■ Set/Cancel Mail Security by Incoming Mail Folder

- >  → **Incoming Mail** → Highlight a folder →  **[Menu]** → **Mail Security** → Enter Phone Password
-  appears for set mail boxes and menus.

Call Restrictions

Reject/accept/forward calls from specified phone numbers, or restrict calling unspecified phone numbers.

- 1  → Search Phone Book
- 2 Select an entry →  **[Menu]** → **Restrictions**
- 3 Enter Phone Password
- 4 Select an item (See below)


Item	Operation/Description
Restrict Dialing	Allow calls only to specified numbers
Call Rejection	Reject specified numbers
Call Acceptance	Accept from specified numbers only
Call Forwarding	Automatically forward specified numbers ● Set destination numbers (Call Forwarding:  P.2-17)

- To cancel, repeat operation.

■ View/Cancel Phone Book Restrictions

- > **Main Menu** ► **Phone Book** ► **Restrictions** ► Enter Phone Password
- Select an item* ► Select a Phone Book entry ► Select a number
- **YES**

* ★ appears for set item.

- Highlight an item,  **[Menu]** → **Release Settings** → **YES** to cancel restriction on all specified numbers.

Note

- Missed call indicator appears in Standby for calls from rejected numbers.

Delaying Ringtone

<Default> OFF

Delay ringtone/vibration for Voice/Video Calls from unknown numbers.

Main Menu ► Settings ► Incoming Settings
► Ring Time Settings ► Ring Starting Time

1 **ON** → Enter start time

■ Hide Missed Call Records (Disconnected during Ringtone Delay)

> Main Menu ► Settings ► Incoming Settings
► Ring Time Settings ► Missed Calls Display ► Not Display

Rejecting Unknown Callers

<Default> Accept

Main Menu ► Settings ► Security ► Reject Unknown

1 Enter Phone Password → **Reject**

Rejecting Calls without Caller ID

<Default> Accept

Reject calls without Caller ID or from pay phones.

Main Menu ► Settings ► Security ► Call Setting w/o ID

1 Enter Phone Password

2 Select an item → **Reject**

11

Handset Security

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset Settings

1 Enter Phone Password → **YES**

Note

- Some default settings may not be restored.
- Reset Settings cancels Navi Appli settings in S! GPS Navi. Set a Navi Appli to activate from **Select Navi Appli** (P.18-22).

All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► All Reset

1 Enter Phone Password → **YES** → **YES**
931P automatically turns off and restarts.

Note

- Fully charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/microSD Card files are not affected.
- Data transmission settings (set via PC) are not affected.
- Non-restorable items when deleted by All Reset:
 - Customized settings, Call Logs, downloaded S! Appli, etc.