

Settings

Sound & Vibration	18-2
Ringtones.....	18-2
Charge Sound/Key Tone	18-2
Display	18-3
Display Settings.....	18-3
Main Menu	18-4
Clock	18-4
Back Light.....	18-5
External Display.....	18-5
Font.....	18-6
Manner Mode	18-7
Incoming Settings	18-7
Date & Time	18-8
Call Settings	18-9
Call Time & Call Cost.....	18-9
Making & Receiving Calls	18-9
Notification Light	18-10
Text Entry	18-10
Phone Book	18-11
Voice Dial	18-11
Video Call	18-12
Function Menus.....	18-12
Engaged Video Call Settings	18-12

Horizontal Open Position	18-13
Horizontal Open Menu/Wallpaper	18-13
Standby Clock	18-13
Digital TV	18-14
Mobile Widget (Japanese)	18-15
S! Quick News (Japanese)	18-16
Display Settings.....	18-16
Auto Update/Deleting Information	18-16
Bluetooth®	18-17
Messaging	18-18
Universal Settings.....	18-18
S! Mail Settings.....	18-19
SMS Settings	18-19
Internet	18-19
Browser Display Settings.....	18-19
Memory Manager & Reset	18-20
Security Settings.....	18-20
Reset.....	18-21
S! Appli	18-21
Osaifu-Keitai®	18-21
S! GPS Navi Settings	18-22
Default Settings	18-23
Confirming Settings	18-24

Settings Sound & Vibration

Ringtones

From Main Menu Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Ringtone > <i>Sound Settings</i> → <i>Ring Tones</i> → Select an item → <i>Select Ring Tone</i> → Select a type → Select a folder → Select a tone 	Phone/Video Call: Pattern 1 Message: Tone3
<ul style="list-style-type: none"> ■ Change Ringer Volume > <i>Sound Settings</i> → <i>Ringer Volume</i> → Select a type → to adjust volume 	Level 4
<ul style="list-style-type: none"> ■ Disable 3D Sound Effect (Ringtone/Melody) > <i>Sound Settings</i> → <i>Stereo/3D Sound</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Set Ringtone Sound Output for Earphone* > <i>Sound Settings</i> → <i>Earphone</i> → <i>Earphone</i> 	Earphone + Speaker
<ul style="list-style-type: none"> ■ Set Message Ringtone Duration > <i>Sound Settings</i> → <i>Message Ring Tones</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i>, enter ring time) 	ON (Ring time: 05 sec)
<ul style="list-style-type: none"> ■ Set Vibration Alert > <i>Incoming Settings</i> → <i>Vibrator</i> → Select an item → Select a vibration pattern 	OFF

* When earphone is connected and Sound Settings is set to *Earphone*, ringtone sounds through earphone and speaker for incoming calls/messages or alarms after about 20 seconds. Other sounds (e.g. Demo playback) are heard only from earphone.

Pre-installed Ringtones

Title	Composer
Pinwheel	Original
SINFONIA NR 101 THE CLOCK HOB I 101	HAYDN FRANZ JOSEPH
JE TE VEUX	SATIE ERIK ALFREDI LE
DANSE DES MIRLITONS // CASSE NOISETTE OP 71A /ORI	CHAJKOVSKIJ PETR ILICH
HEIGH HO // SNOW WHITE AND THE SEVEN DWARFS /INST	CHURCHILL FRANK E
DANCE OF THE KNIGHTS OP 64 NO 13	PROKOFEV SERGEJ S
WALTZ/COPPELIA BALLET SUITE	DELIBES LEO CLEMENT PHILIBERT
PETER AND THE WOLF OP 67	PROKOFEV SERGEJ S

Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

Charge Sound/Key Tone

From Main Menu Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Key Tone > <i>Sound Settings</i> → <i>Key Tone</i> → <i>ON</i> or <i>OFF</i> 	OFF
<ul style="list-style-type: none"> ■ Charging Start/End Tone Off > <i>Phone Settings</i> → <i>Battery</i> → <i>Charge Sound</i> → <i>OFF</i> 	ON

Settings Display

Display Settings

- Horizontal Open Menu/Wallpaper (Horizontal Open Position) (☞P.18-13)

From ► **Main Menu** ► **Settings** ► **Display Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Wallpaper > <i>Internal Display</i> → <i>Stand-by Display</i> → Select an item → Select a folder → Select an image 	(☞P.18-23)
<ul style="list-style-type: none"> ■ Add Calendar to Wallpaper > <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Calendar</i> → Select a view format → <i>BG Image ON</i> or <i>BG Image OFF</i> (→ For <i>BG Image ON</i>, select a folder → select an image) 	—
<ul style="list-style-type: none"> ■ Change Wallpaper Randomly > <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Random Display</i> → Select a folder → <i>Every Hour</i> or <i>Every Day</i> 	—
<ul style="list-style-type: none"> ■ Change Outgoing Call/Message Image > <i>Internal Display</i> → Select an outgoing type → Select a folder → Select an image 	(☞P.18-23)
<ul style="list-style-type: none"> ■ Change Incoming Call/Message Image > <i>Internal Display</i> → Select an incoming type → <i>Select Calling Disp.</i>¹ → Select an image type → Select a folder → Select an image 	(☞P.18-23)

<ul style="list-style-type: none"> ■ Change Battery/Antenna Indicator > <i>Internal Display</i> → <i>Battery Icon</i> or <i>Antenna Icon</i> → Select a pattern 	Pattern 1
<ul style="list-style-type: none"> ■ Change Start-up Window > <i>Internal Display</i> → <i>Start-up</i> → <i>OFF</i>, <i>Message</i>, <i>Pictures</i> or <i>Videos</i>² 	—
<ul style="list-style-type: none"> ■ Change Display Color Scheme > <i>Color</i> → Select a color 	(☞P.18-23)
<ul style="list-style-type: none"> ■ Set Interface Language > <i>言語設定</i> → <i>English</i> 	日本語
<ul style="list-style-type: none"> ■ Show New Call/Message when Handset Opens > <i>Open for New</i> → <i>ON</i> 	OFF

- Setting applies to messages retrieved manually (*Incoming Options* (☞P.18-19) set to *Manual Retrieval*) or when Server Mail is retrieved (Retrieve New window cannot be changed).
- For *Pictures* or *Videos*: Select a folder → Select an image
● For *Message*: Enter text

Main Menu

From **Main Menu** ► **Settings** ► **Display Settings**
 ► **Menu Icons**

Setting/Operation	Default
Change Main Menu Theme > Select a pattern	(☞P.18-23)
Change Main Menu Icons > <i>Customize</i> → Select a menu → Select a folder → Select an image	—
Change Main Menu Background > <i>Customize</i> → <i>Background Image</i> → Select a folder → Select an image	—

Clock

- Standby Clock (Horizontal Open Position) (☞P.18-13)
- External Display Clock (☞P.18-5)

From **Main Menu** ► **Settings** ► **Display Settings**
 ► **Internal Display** ► **Clock**

Setting/Operation	Default
Change Standby Clock Pattern ¹ > <i>Stand-by Clock</i> → [Pattern] → Select a pattern → [Set]	(☞P.18-23)
Change Standby Clock Position ^{1 2} > <i>Stand-by Clock</i> → [Position] → Select a position → [Set]	Pattern 1
Change Standby Clock Size ¹ > <i>Stand-by Clock</i> → [Size] → <i>Large</i> → [Set]	Small
Change Standby Clock at Upper Right (lower right in Landscape View) > <i>Icon Clock</i> → Select a pattern	(☞P.18-23)

¹ Highlight *Stand-by Clock* → [Play] to view Standby Clock.

² Even if clock position is set to **Pattern 2 - Pattern 12**, clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby
- Time zone is set to other than GMT+9
- Privacy Key Lock is active

Back Light

From Main Menu Settings Display Settings

Setting/Operation	Default
<p>■ Turn Back Light On/Off; Set Power Saver Mode ¹</p> <p>> Back Light Time → Lighting → ON or OFF → Select ON (Power Saver Mode) or OFF (Constant Light) (→ For ON, Enter Light time)</p>	ON+Saver
<p>■ Illuminate Back Light while Charging</p> <p>> Back Light Time → Charging → Constant Light</p>	Standard ²
<p>■ Limit Back Light to Display Only</p> <p>> Back Light Time → Area → LCD</p>	LCD + Keys
<p>■ Adjust Brightness</p> <p>> Back Light Time → Brightness → Select a brightness level</p>	Auto ³
<p>■ Set Back Light to Turn On Softly</p> <p>> Back Light Time → Soft Light → ON</p>	OFF
<p>■ Disable Auto Image Compensation</p> <p>> LCD AI → OFF</p>	ON

¹ During operation (except when in Standby or S! Appli is active), press and hold to toggle ON/OFF.

² When set to **Standard**, Back Light illuminates with the same setting as **Lighting** setting.

³ When set to **Auto**, Back Light is automatically adjusted according to ambient light.

External Display

From Main Menu Settings Display Settings External Display

Setting/Operation	Default
<p>■ Turn Off External Display</p> <p>> OFF</p>	ON
<p>■ Adjust Brightness</p> <p>> ON → Brightness → Select a brightness level</p>	Level 3
<p>■ Change Wallpaper</p> <p>> ON → Stand-by Display → Select an item → Select a folder → Select an image (P.18-23)</p>	
<p>■ Add Calendar to Wallpaper</p> <p>> ON → Stand-by Display → Calendar → BG Image ON or BG Image OFF (→ For BG Image ON, select a folder → Select an image)</p>	—
<p>■ Change Stand-by Clock Display ¹</p> <p>> ON → Clock → Stand-by Clock → [Pattern] → Select a clock pattern → [Set] (P.18-23)</p>	
<p>■ Change Stand-by Clock Position ^{1 2}</p> <p>> ON → Clock → Stand-by Clock → [Position] → Select a pattern → [Set]</p>	Pattern 10
<p>■ Change Stand-by Clock Size ¹</p> <p>> ON → Clock → Stand-by Clock → [Size] → Small → [Set]</p>	Large

<p>■ Change Icon Clock Pattern > <i>ON</i> → <i>Clock</i> → <i>Icon Clock</i> → Select a pattern</p>	(☞P.18-23)
<p>■ Set Caller ID Off > <i>ON</i> → <i>Incoming Calls</i> → <i>OFF</i></p>	ON
<p>■ Forbid Opening New Message by Pressing  > <i>ON</i> → <i>Message</i> → <i>OFF</i></p>	ON (Open)
<p>■ Turn Back Light Off after All S! Quick News Viewed > <i>ON</i> → <i>S! Quick News All</i> → <i>ON</i></p>	OFF (Turn off in 15 seconds)
<p>■ Turn Back Light Off while Playing Videos > <i>ON</i> → <i>Movie Display Time</i> → <i>Display Always</i></p>	15 seconds

¹ Highlight **Stand-by Clock** →  [Play] to view Standby Clock.

² Even if clock position is set to **Pattern 2 - Pattern 12**, clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby
- Time zone is set to other than GMT+9
- Privacy Key Lock is active

Font

From ► **Main Menu** ► **Settings** ► **Display Settings**

Setting/Operation	Default
<p>■ Change Font Size by Function > <i>Font Size</i> → Select an item → Select a size</p>	Standard
<p>■ Set Menu Font Sizes Collectively > <i>Font Size</i> → <i>Collective Setting</i> → <i>Large</i> or <i>Small</i>*</p>	Standard
<p>■ Change Font Style (Incoming/Outgoing Call Window) > <i>Disp. Call/Recv #</i> → <i>Pattern 2</i></p>	Pattern 1

* When set to **Small**, font size for Phone Book and Incoming/Outgoing Call Logs is set to **Standard**.

Settings Manner Mode

From ► **Main Menu ► Settings ► Incoming Settings ► Manner Mode Type**

Setting/Operation	Default
■ Set Manner Mode Type > <i>Manner Mode, Super Silent or User Mode</i> (→ For <i>User Mode</i> , set individual items → [Finish])	Manner Mode

■ Default Settings by Mode

Manner Mode	Super Silent	Driving Mode	User Mode
Answer Phone			
Value set for Answer Phone	Value set for Answer Phone	ON	OFF
Vibrator			
ON	ON	OFF	ON
In. Calls			
Silent	Silent	Silent	Silent
Msg Ring T.			
Silent	Silent	Silent	Silent
Alarm			
Silent	Silent	Silent	Silent
Rec. Check Tone			
ON	OFF	ON	ON
Key Tone			
OFF	OFF	*	OFF
Mic Sensitiv.			
Up	Up	Up	Up
LVA Tone (Low battery alarm)			
OFF	OFF	OFF	OFF

* Based on Key Tone setting (P.18-2)

Settings Incoming Settings

From ► **Main Menu ► Settings ► Incoming Settings**

Setting/Operation	Default
■ Change Answer Setting (P.18-8) > <i>Answer Setting</i> → <i>Quick Silent</i> or <i>OFF</i>	Any Key Answer
■ Answer Calls by Opening Handset > <i>Open-to-Ans. Call</i> → <i>Phone</i> or <i>Video Call</i> → <i>Answer</i>	Keep Ringing
■ Hide Caller Image Saved in Phone Book > <i>Phone Book Image</i> → <i>OFF</i>	ON
■ Set [Response] (P.18-8) for Missed Call/New Message Notification > <i>Info Notice Setting</i> → <i>ON</i> or <i>OFF</i>	ON
■ Activate Auto Answer with Earphone > <i>Auto Answer</i> → <i>ON</i> → Enter ring time	OFF
■ Set Call Waiting Response > <i>In-call Management</i> → <i>Call Forwarding</i> or <i>Call Rejection</i>	Answer

Answer Setting Key Operations

Any Key Answer	To answer a call, press any of the following keys: Voice Call: , , 0 - 9 , * , # , , , , , , , , Video Call: , ,
Quick Silent	To cancel ringtone/vibration, press any of the following keys: Voice Call: 0 - 9 , * , # , , , , , , Video Call: 0 - 9 , * , # , , , , ,
OFF	To answer a call, press any of the following keys: Voice Call: , , Video Call: , ,

- When [Voice Mail] is assigned to indicated at the bottom of Display, press to start voice or video recording.

Info Notice Setting Response

ON	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls/Received Messages: Double-beep sounds twice
ボイス (Voice)*	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls: Double-beep sounds; voice message announces that you have a missed call Received Messages: Double-beep sounds; voice message announces that you have a new message

- When Vibrator is set for Incoming Settings, vibration activates with beeps. In Manner Mode, only vibration activates.
- Set **Side-keys Guard** to **OFF** beforehand (📄P.11-8).

* Japanese only

Settings Date & Time

From ▶ Main Menu ▶ Settings ▶ Date & Time

Setting/Operation	Default
Change Date and Time > Date & Time → Enter year, date, time and time zone	—
Display World Clock > World Clock → ON → to select an area	OFF
Activate Daylight Savings Time > Daylight Savings → ON	OFF
Deactivate Alarm while Operating Other Functions > Alarm Tone → Operation Preferred	Alarm Preferred
Deactivate Automatic Time Correction via Yahoo! Keitai > Time Correction → OFF	ON

Settings Call Settings

Call Time & Call Cost

From ► Main Menu ► Settings ► Call Settings


Setting/Operation	Default
<ul style="list-style-type: none"> ■ Display Call Time/Cost ¹ > <i>Call Time/Cost</i> 	-
<ul style="list-style-type: none"> ■ Reset Total Call Charge/Time > <i>Reset</i> → Enter Phone Password → <i>Reset Total Duration</i> or <i>Reset Total Cost</i> → YES (→ For <i>Reset Total Cost</i>, enter PIN2) 	-
<ul style="list-style-type: none"> ■ Set Charge Limit ² > <i>Set Max Cost Limit</i> → ON → Enter charge limit → Enter PIN2 	OFF


¹ May not be available depending on subscription status. In that case, Set Max Cost Limit is not available.

² When set to **ON**, incoming/outgoing calls including emergency number calls are not dialable if charge limit is reached.

Making & Receiving Calls

From ► Main Menu ► Settings



Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Earpiece Volume > <i>Call Settings</i> → <i>Volume</i> →  to adjust volume 	Level 4

<ul style="list-style-type: none"> ■ Set Handset Response when Closed during Call > <i>Call Settings</i> → <i>Closing Clamshell</i> → <i>No Tone</i> or <i>Hold Call</i> * 	End the Call
<ul style="list-style-type: none"> ■ Set Hold Tone > <i>Call Settings</i> → <i>Hold Tones</i> → <i>On-hold Tone</i> or <i>Holding Tone</i> → Select a tone 	On-hold Tone: On-hold Tone 1 Holding Tone: JESU JOY OF MAN's
<ul style="list-style-type: none"> ■ Turn Off Noise Reduction > <i>Call Settings</i> → <i>Noise Reduction</i> → OFF 	ON
<ul style="list-style-type: none"> ■ Sound Alarm before Connection is Disconnected > <i>Call Settings</i> → <i>Quality Alarm</i> → OFF or <i>Low Tone</i> 	High Tone
<ul style="list-style-type: none"> ■ Sound Alarm until Line is Reconnected > <i>Call Settings</i> → <i>Reconnect Signal</i> → OFF or <i>Low Tone</i> 	High Tone
<ul style="list-style-type: none"> ■ Call Service Numbers (Service not available at present) > <i>Call Settings</i> → <i>Service Numbers</i> → Select a service number →  	-
<ul style="list-style-type: none"> ■ Specify Phone Book Entry to Call with Earphone > <i>Phone Settings</i> → <i>Headset Switch to Call</i> → <i>Voice Call</i> → Search Phone Book → Select an entry 	OFF

* When **Hold Call** is selected: **Speaker ON** (Hold tone sounds from speaker)/**Speaker OFF** (Hold tone does not sound from speaker)

Settings Notification Light


From ► Main Menu ► Settings ► Notification Light

Setting/Operation	Default
<p>■ Set Notification Light by Incoming Type (Voice/Video Calls or Messages)</p> <p>> <i>Incoming</i> → <i>Select Color</i> → Select a type →  to select a color</p>	(☞P.18-23)
<p>■ Change Notification Light Color Name for Incoming Call/Message</p> <p>> <i>Incoming</i> → <i>Color</i> → <i>Edit Color Name</i> → Select a color → Edit color name</p>	—
<p>■ Adjust Notification Light Color Tone for Incoming Call/Message</p> <p>> <i>Incoming</i> → <i>Color</i> → <i>Adjust Color Tone</i> → Select a color → Adjust color tone</p>	—
<p>■ Set Notification Light for Missed Calls/New Messages</p> <p>> <i>Missed Call/Unread</i> → <i>OFF When Checked</i> or <i>OFF</i></p>	OFF after 24hours
<p>■ Set Notification Light for Other Functions</p> <p>> Select a function → <i>ON</i> or <i>OFF</i>, or  to select a color</p>	—
<p>■ View Notification Light Status*</p> <p>> <i>Confirm Status</i></p>	—

* View Notification Light settings for incoming calls/messages, engaged calls or upper Side Key commands.

Settings Text Entry

From ► Main Menu ► Settings ► Phone Settings ► Text Entry Method

Setting/Operation	Default
<p>■ Set Input Mode</p> <p>> <i>Input Mode</i> → Check input mode(s) to use →  [Finish] → Select a input mode to prioritize</p>	Input mode: All Prioritized mode: Mode 1 (5-touch)
<p>■ Hide Predictive Candidates/Context Forecast List</p> <p>> <i>Predict</i> → <i>OFF</i></p>	ON
<p>■ Set Learning Feature Off for Secret Mode/ Secret Data Only</p> <p>> <i>Learn in Secret Mode</i> → Enter Phone Password → <i>OFF</i></p>	ON
<p>■ Delete All Learned Words</p> <p>> <i>Reset Learned Words</i> → Enter Phone Password → <i>YES</i></p>	—

Settings Phone Book

From ► Main Menu ► Phone Book ► Settings

Setting/Operation	Default
■ Change Save Location for New Entry > <i>Save Settings</i> → <i>USIM</i> or <i>Ask Every Time</i>	Phone
■ Change Phone Book Search Method > <i>Search Method</i> → Select a method	A-KA-SA-TA-NA
■ Change Font Size > <i>Font Size</i> → <i>Phone Book</i> or <i>Call Log</i> → <i>Large</i>	Standard
■ Forbid Forwarding Phone Book Entry Images > <i>Forwarding Image</i> → <i>OFF</i>	ON*

* If **ON** is selected, images can be forwarded via Infrared, IC transmission or Bluetooth®.

Settings Voice Dial

From ► Main Menu ► Settings ► Phone Settings
► Voice Settings

Setting/Operation	Default
■ Activate Voice Dial Automatically > <i>Auto Voice Dial</i> → <i>ON</i>	OFF
■ Activate Voice Dial via Earphone or Bluetooth® Device > <i>Voice Earphone Dial</i> → <i>ON</i>	OFF

Settings Video Call

Function Menus

From ► Main Menu ► Settings ► Video Call

Setting/Operation	Default
■ Change Incoming Image Quality > <i>Incoming Video Qlty</i> → <i>Quality Prioritized</i> or <i>Motion Prioritized</i>	Standard
■ Change Outgoing Image > <i>Select Images</i> → Select a category → Highlight <i>Original</i> → [Menu] → <i>Change setting</i> → Select a folder → Select a file → [Play] to view image	Pre-installed
■ Switch Earpiece On > <i>Loud Speaker</i> → OFF	ON
■ Switch to Voice Call when Video Call Fails > <i>Voice Call Auto Redial</i> → ON	OFF
■ Monitor Room Remotely > <i>Remote Monitoring</i> (P.2-8)	—

Engaged Video Call Settings

From ► During a Video Call, [Menu] ► V. Call settings

Setting/Operation	Default
■ Change Incoming Image Quality > <i>Incoming Video Qlty</i> → <i>Qlty Prioritized</i> or <i>Motion Prioritized</i>	Standard
■ Change Brightness > <i>Brightness</i> → Select a brightness level	0
■ Adjust Color Tone to Lighting Conditions > <i>White balance</i> → Select an environment	Automatic
■ Change Color Tone > <i>Color mode set</i> → Select a color tone	Normal
■ Enhance Image Quality in Low Light Conditions > <i>Night mode</i> → ON	OFF
■ Set Focus* > <i>Focus</i> → Select a focus type	Landscape

* Outside Camera only

Settings Horizontal Open Position

Horizontal Open Menu/Wallpaper

From ► Main Menu ► Settings

Setting/Operation	Default
<p>■ Set Which Operation to Start when Opening Handset to Horizontal Open Position</p> <p>> <i>Phone Settings</i> → <i>Horizontal View</i> → <i>TV, Camera</i> or <i>Horizontal Open Menu</i></p>	OFF
<p>■ Change Menu Theme in Horizontal Open Position</p> <p>> <i>Display Settings</i> → <i>Hor. Open Menu</i> → Select a pattern</p>	(☞P.18-23)
<p>■ Change Wallpaper in Standby</p> <p>> <i>Display Settings</i> → <i>Internal Display</i> → <i>Stand-by Display Wide</i> → Select a folder → Select an image</p>	(☞P.18-23)
<p>■ Add Calendar to Wallpaper in Standby</p> <p>> <i>Display Settings</i> → <i>Internal Display</i> → <i>Stand-by Display Wide</i> → <i>Calendar</i> → <i>BG Image ON</i> or <i>BG Image OFF</i> (→ For <i>BG Image ON</i>, select a folder → Select an image)</p>	—
<p>■ Change Wallpaper Randomly</p> <p>> <i>Display Settings</i> → <i>Internal Display</i> → <i>Stand-by Display Wide</i> → <i>Random Display</i> → Select a folder → <i>Every Hour</i> or <i>Every Day</i></p>	—

Standby Clock

From ► Main Menu ► Settings ► Display Settings
► Internal Display ► Clock ► Stand-by Clock Wide

Setting/Operation	Default
<p>■ Change Standby Clock Display ¹</p> <p>> [Pattern] → Select a pattern → [Set]</p>	(☞P.18-23)
<p>■ Change Standby Clock Position ^{1 2}</p> <p>> [Position] → Select a pattern → [Set]</p>	Pattern 3
<p>■ Change Standby Clock Size ¹</p> <p>> [Size] → <i>Small</i> → [Set]</p>	Large

¹ Highlight **Stand-by Clock Wide** → [Play] to view clock.


² Even if clock position is set to **Pattern 2 - Pattern 7**, clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby
- Time zone is set to other than GMT+9
- Privacy Key Lock is active

Settings Digital TV

From **Main Menu** ► **TV** ► **User Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Hide Caption > <i>Display</i> → <i>Caption</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Change Caption Position in Landscape View > <i>Display</i> → <i>Caption Posit. In W-scr</i> → <i>Upper</i> 	Lower
<ul style="list-style-type: none"> ■ Hide Guide in Landscape View > <i>Display</i> → <i>Icons</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Forbid Enhancing Frame Rate Automatically > <i>Video</i> → <i>Mobile W-Speed</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Change Image Quality > <i>Video</i> → <i>Image Quality</i> → Select an item 	Dynamic
<ul style="list-style-type: none"> ■ Set Back Light Duration while Watching TV > <i>Display Light</i> → <i>Lighting Duration</i> → Enter duration (min.) 	Constant Light
<ul style="list-style-type: none"> ■ Deactivate Auto Volume > <i>Sound</i> → <i>Sound Effect</i> → <i>Auto Volume</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Remaster Sounds from Earphone or Bluetooth® Device > <i>Sound</i> → <i>Sound Effect</i> → <i>Remaster</i>¹ → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Add Listening Effect to Sound from Earphone or Bluetooth® Device > <i>Sound</i> → <i>Sound Effect</i> → <i>Listening</i>¹ → Select an item 	OFF

<ul style="list-style-type: none"> ■ Change Quality of Sound from Earphone or Bluetooth® Device > <i>Sound</i> → <i>Sound Effect</i> → <i>Equalizer</i>¹ → Select an item 	Normal
<ul style="list-style-type: none"> ■ Turn Off Speaker by Closing 931P while Watching TV > <i>Sound</i> → <i>TV Sound While Closed</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ End Recording when Battery Runs Low > <i>Recording</i> → <i>Rec. When Low Battery</i> → <i>Stop Recording</i> 	Continue Recording
<ul style="list-style-type: none"> ■ Start Recording TV Automatically when a Call Comes in while Watching TV > <i>Recording</i> → <i>Rec. Program When Call</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Hide Images on Data Broadcast Sites > <i>Data Broadcasting</i> → <i>Images</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Turn Off Sounds from Data Broadcast/Sites > <i>Data Broadcasting</i> → <i>Sound Effect</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Show Confirmation on Data Broadcast > <i>Data Broadcasting</i> → <i>Reset Settings</i> → <i>YES</i> 	—
<ul style="list-style-type: none"> ■ Set Power Saving Mode² > <i>ECO Mode</i> → <i>YES</i> 	OFF
<ul style="list-style-type: none"> ■ Reset Channel List > <i>Reset Channel Setting</i> → Enter Phone Password → <i>YES</i> 	—
<ul style="list-style-type: none"> ■ Delete Information in Broadcasting Storage Area > <i>Reset Storage Area</i> → (Highlight an affiliated channel → [Menu] → <i>Delete this</i> or <i>Delete all</i> (→ For <i>Delete all</i>, enter Phone Password) → <i>YES</i> 	—

<p>■ Reset TV Settings > <i>Reset TV Settings</i> → Enter Phone Password → YES</p>	—
<p>■ Check TV Settings > <i>Check TV Settings</i></p>	—

¹ Remaster/Listening/Equalizer Settings: P.5-8

² To cancel ECO Mode, perform same operation. When ECO Mode is set, following settings automatically activate and cannot be changed. When canceled, original settings return.

Mobile W-Speed: OFF

Image Quality: Normal

Remaster: OFF

Listening: OFF

Equalizer: Normal

Settings Mobile Widget (Japanese)

From ► Main Menu ► Entertainment ► Mobile Widget
 ► Settings

Setting/Operation	Default
<p>■ Deactivate Auto Update > <i>Auto Refresh</i> → OFF</p>	ON (Activate)
<p>■ Activate Auto Roaming Abroad > <i>Auto Roaming</i> → ON</p>	OFF (Deactivate)
<p>■ Hide Confirmation when Roaming Abroad > <i>Roaming Notification</i> → OFF</p>	ON (Show)
<p>■ Forbid Sending/Receiving Cookies > <i>Cookies</i> → OFF</p>	ON (Send/Receive)
<p>■ Delete Cookies > <i>Delete Cookies</i> → YES</p>	—

Settings S! Quick News (Japanese)

Display Settings

From ► Main Menu ► Settings ► Display Settings
► Internal Display ► S! Quick News Settings

Setting/Operation	Default
■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → <i>Unread</i>	Unread + Read
■ Change Marquee Speed > <i>Marquee Speed</i> → <i>Fast</i> or <i>Slow</i>	Normal
■ Hide S! Quick News > <i>Display Always</i> → <i>OFF</i>	ON (Show)
■ Show Image Data > <i>Image Display</i> → <i>ON</i>	OFF (Hide)

Auto Update/Deleting Information

From ► Main Menu ► Entertainment ► S! Quick News
► Settings

Setting/Operation	Default
■ Automatically Update Quick News in S! Quick News List ^{1 2} > <i>Auto Refresh</i> → <i>S! Quick News</i> → Set update frequency	OFF (Not update automatically)
■ Automatically Update General News (Once a day) ^{1 2} > <i>Auto Refresh</i> → <i>General</i> → <i>ON</i>	OFF (Not update automatically)
■ Automatically Update Special News (Every four hours) ^{1 2} > <i>Auto Refresh</i> → <i>Special</i> → <i>ON</i>	OFF (Not update automatically)
■ Delete S! Quick News Information > <i>Del S! Quick News List</i> → <i>YES</i> → Enter Phone Password	—

¹ If calls are in progress at update time, auto update does not occur until next update.

² Video Calls are rejected during auto update.

Settings Bluetooth®

From ► Main Menu ► Tools ► Bluetooth
► My Devices Settings

Setting/Operation	Default
■ Set Authentication/Encryption to Send Phone Book Entries > <i>Set Authentications</i> → ON → ON	OFF/OFF
■ Enter Password when Sending All Phone Book Entries > <i>Session Number Setting</i> → ON	OFF
■ Set Duration to Search for Bluetooth® Devices > <i>Time-out to Search</i> → Enter duration (sec.)	05 sec
■ Stop Ringtone Output to Headset/Handsfree Device > <i>Forward Ring Tone</i> → OFF	ON
■ Continue Calls on Handset when Bluetooth® is Disconnected from Headset/Handsfree Device > <i>Disconnection Settings</i> → <i>Continue on the Phone</i>	End the Call
■ Always Make Calls from 931P even when Headset Device is Connected > <i>Dial from Headset</i> → Deactivate	Activate
■ Always Use Handsfree Device to Make/Receive Calls > <i>Handsfree Setting</i> → <i>Handsfree Mode</i>	Private Mode ¹
■ View Bluetooth® Properties > <i>Device Properties</i> ²	—

¹ In **Private Mode**, device that makes/answers call takes priority.

² Device name, address, class and supported services appear.

To change device name: [Edit]

Settings Messaging

Universal Settings

From ► Main Menu ► Messaging ► Settings
► Universal Settings

Setting/Operation	Default
■ Change Font Size* > Font Size → Small or Large	Normal
■ Set Scroll Unit in Text Entry/Preview Window > Scroll Unit → Half Screen or Whole Screen	Single Line
■ Change Message Quote Setting when Replying > Quote Message → ON (S! Mail/SMS) or OFF	ON (S! Mail)
■ Confirm Message Delivery (Available when messaging to SoftBank handset numbers) > Delivery Report → ON	OFF (Not confirm)
■ Change Anti-Spam Measures Setting > Anti-Spam Measures → Report Spam → Ⓞ[Edit] → Edit recipient address → ✉[Finish] → YES	stop@meiwaku. softbankmobile. co.jp
■ Reset Anti-Spam Measures Setting > Anti-Spam Measures → Report Spam → 🗑[Menu] → Reset Address → ✉[Finish] → YES	—
■ Set Auto Delete Off (For Sent/Unsent) > Auto Sent Msg Del → OFF	ON

■ Set Auto Delete Off (For Incoming Mail) > Auto Received Msg Del → ON (Read Msg Only) or OFF	ON (All Msg)
---	--------------

* Character size in SMS or S! Mail subject field does not change. Check preview to see actual size.

S! Mail Settings

From ► **Main Menu** ► Messaging ► Settings
► S! Mail Settings ► Incoming Options

Setting/Operation	Default
■ Set S! Mail Download Condition (within Japan) > <i>Home Auto Setting</i> → <i>Download by Numbers</i> or <i>Manual Retrieval</i>	Auto Download All
■ Retrieve S! Mail Manually while Abroad > <i>Roaming Auto Setting</i> → <i>Manual Retrieval</i>	Auto Download
■ Play Attached Music Files Automatically* > <i>Auto Sound Play</i> → <i>ON</i>	OFF (Not play back)

* When multiple sound files are attached, the first file plays.

SMS Settings

From ► **Main Menu** ► Messaging ► Settings
► SMS Settings

Setting/Operation	Default
■ Change SMS Center Number* > <i>Message Center</i> → Enter SMS Center number	—
■ Set Input Character to English > <i>Set Input Character</i> → <i>English (160char.)</i>	Japanese (70char.)

* Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Set Yahoo! Keitai

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
► Set PC Site Browser

Setting/Operation	Default
■ Font Size > <i>Font Size</i> → <i>Large</i> or <i>Small</i>	Normal
■ Scroll Unit > <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i>	Single Line
■ Images Off > <i>Downloads</i> → <i>Display Image</i> → <i>OFF</i>	ON
■ Sound Off > <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i>	ON
■ Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai* > <i>Warning Messages</i> → <i>PC Site Browser</i> (when activating) or <i>Yahoo! Keitai</i> (when switching) → <i>OFF</i>	ON

* PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Set Yahoo! Keitai

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
► Set PC Site Browser

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Clear Cache > <i>Memory Manager</i> → Clear Cache → YES 	—
<ul style="list-style-type: none"> ■ Delete Cookies > <i>Memory Manager</i> → Delete Cookies → YES 	—
<ul style="list-style-type: none"> ■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → Delete Certificates → YES 	—
<ul style="list-style-type: none"> ■ Set Data Storage Location to microSD Card* > <i>Save Settings</i> → microSD 	Phone

* Yahoo! Keitai Browser only

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Set Yahoo! Keitai
► Security

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
► Set PC Site Browser ► Security

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Auto Send Off for Manufacturer's Number (for Authentication) > <i>Manufacture Number</i> → OFF (Not send) 	ON (Send)
<ul style="list-style-type: none"> ■ Forbid Sending Referer Information > <i>Send Referer</i> → OFF 	ON (Send)
<ul style="list-style-type: none"> ■ Select whether or Not to Allow Cookies to Be Stored on 931P > <i>Cookies</i> → OFF or Ask Every Time 	ON (Save)
<ul style="list-style-type: none"> ■ Select whether or Not to Run Scripts in Yahoo! Keitai ¹ > <i>Script</i> → ON, OFF or Ask Every Time 	Ask before Connect
<ul style="list-style-type: none"> ■ Select whether or Not to Run Scripts in PC Site Browser ² > <i>Script</i> → Ask before Connect, OFF or Ask Every Time 	ON (Run)

<ul style="list-style-type: none"> ■ View Server Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item 	-
<ul style="list-style-type: none"> ■ Select whether or Not to Retain Authentication Information > <i>Certificate Retention</i> → <i>Always Keep</i> or <i>Not Keep</i> 	Keep While Browsing
<ul style="list-style-type: none"> ■ Hide Confirmation when Connecting to Secure Site > <i>Secure Prompt</i> → <i>OFF</i> 	ON

¹ Yahoo! Keitai Browser only

² PC Site Browser only

Reset

Yahoo! Keitai

From ► Main Menu ► Yahoo! Keitai ► Reset


PC Site Browser

From ► Main Menu ► Yahoo! Keitai ► PC Site Browser
► Reset

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Reset Browser Settings > <i>Restore Defaults</i> → <i>YES</i> → Enter Phone Password 	-
<ul style="list-style-type: none"> ■ Initialize Browser > <i>Initialized Browser</i> → <i>YES</i> → Enter Phone Password 	-

Settings S! Appli

From ► Main Menu ► S! Appli ► S! Appli Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Volume > <i>Volume</i> →  to adjust volume 	Level 4
<ul style="list-style-type: none"> ■ Backlight On/Off > <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i> 	Follow General Setting
<ul style="list-style-type: none"> ■ Deactivate Vibration > <i>Vibration</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Sync microSD Card with S! Appli List* > <i>Synchronize microSD</i> 	-

* Update S! Appli List on microSD Card after using microSD Card in another handset or PC.

Settings Osaifu-Keitai®

From ► Main Menu ► Osaifu-Keitai ► IC Card Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ View IC Card Status > <i>IC Card Status</i> 	-
<ul style="list-style-type: none"> ■ Disable Handset Response to Commands from Reader/Writer > <i>Interface Settings</i> → Enter Phone Password → Select an item → <i>OFF</i> 	All ON

Settings S! GPS Navi Settings

From ► Main Menu ► Tools ► S! GPS Navi ► NAVI Settings

Setting/Operation	Default
<p>■ Select Navi Appli to Activate > <i>Select Navi Appli</i> → Select a Navi Appli</p>	—
<p>■ Save Current Map URL > <i>Map URL Settings</i> → Highlight <Not Recorded> → [Edit] → <i>URL Name</i> → Enter a name → <i>Map URL</i> → Enter a URL ("http://" or "https://") → [Finish]</p>	—
<p>■ Select Map URL > <i>Map URL Settings</i> → Select a name</p>	NAVITIME
<p>■ Edit/Delete Map URL* > <i>Map URL Settings</i> → Highlight a name → [Menu] → <i>Edit</i> or <i>Delete</i></p>	—
<p>■ Activate to Lock Positioning Function > <i>Positioning Lock</i> → Enter Phone Password → ON</p>	OFF
<p>■ Hide Confirmation when Sending Location Information > <i>Send Location Info</i> → Enter Phone Password → <i>Send without Check</i> (Send location information without showing confirmation)</p>	Send with Check (Show confirmation every time)
<p>■ Hide Notification of Incoming Location Provision Request > <i>Notification Setting</i> → Enter Phone Password → OFF</p>	ON

■ **Set Positioning Ringtone/Vibrator/Ringtone Duration**

> *Recv Location Request* → *Ringtone*,
Vibration Alert or *Ringtone Duration* →
 Set individual item

Ringtone:
 Pattern 2
 Vibrator Alert:
 Pattern 1
 Ringtone
 Duration:
 05 seconds

* Pre-installed NAVITIME cannot be edited or deleted.

Default Settings

Default settings vary by handset color as below.

- For operations, refer to respective setting sections.

Setting		Black	White	Pink	
Notification Light (☞P.18-10)	Incoming	Voice Call	A-Signal	B-Signal	C-Signal
		Video Call	A-Signal	B-Signal	C-Signal
		Message	A-Rhythm	B-Rhythm	C-Rhythm
	Side Key (Upper Side Key)	A-HOTARU	B-HOTARU	C-HOTARU	
Display Settings (☞P.18-3 to 6, P.18-13)	Stand-by Display		Night View 1*	White Room 1*	Window in Dream 1*
	Stand-by Display Wide		Night View 2*	White Room 2*	Window in Dream 2*
	External Stand-by Display		Night View 3*	White Room 3*	Window in Dream 3*
	Stand-by Clock	Pattern	Pattern 4	Pattern 1	Pattern 4
	Icon Clock (Internal/External Display)		Pattern 4	Pattern 1	Pattern 4
	Outgoing Image (Call/Message)		Pattern 1	Pattern 2	Pattern 3
	Incoming Image (Call/Message)		Pattern 1	Pattern 2	Pattern 3
	Menu Icons		Midnight road	White cube	Pinky dream
	Horizontal Open Menu		Pattern 1	Pattern 1	Pattern 2
	Color Scheme		Black	White	Pink

* Background color and design change. Unavailable when Calendar appears in Standby

Confirming Settings

Main Menu ► Setting ► Phone Settings
► Confirm Settings

■ Confirmable Settings

- Back Light Time
 - View Blind
 - Volume
 - Shikkari Talk
 - Noise Reduction
 - Select Network
 - Horizontal View
- ★ appears for items changed from default settings.