

Appendix

Function List	19-2
Troubleshooting.....	19-10
Warning Signs	19-12
Software Update	19-12
Updating Software Manually.....	19-12
Updating Software Automatically	19-13
Quick Open Menu	19-14
Key Assignments (5-touch Mode)	19-15
Key Assignments (2-touch Mode)	19-16
Key Assignments (NIKO-touch Mode)	19-17
Symbol List	19-18
Character Code List	19-19
Weather Indicator List.....	19-24
Memory List.....	19-25
Specifications	19-26
Index.....	19-27
Warranty & Service.....	19-33
Warranty	19-33
After-Sales Service	19-33
Customer Service.....	19-34

Function List

From Main Menu, press key corresponding to a menu number for direct access (P.1-19, P.1-20).

Example: To select **S! Mail Settings** in Messaging menu:

1 first column **9** second column **3** third column

① (Messaging) → **⑨** (Settings) → **③** (S! Mail Settings)

- To select ①: → ①; To select ②: → ②
- When Menu Icons are set to Standard or Customize, first column of function number is not available. Select a menu from Main Menu; then select a function number (second column in table).

Messaging		
Menu Number/Function Name		Page
1	Messaging	—
1	Incoming Mail	—
1	Received	P.13-3
2	ユーザーフォルダ 1	P.13-3
3	ユーザーフォルダ 2	P.13-3
4	ユーザーフォルダ 3	P.13-3
5	Spam Folder	P.13-17
2	Create New	P.13-4
3	Retrieve New	P.13-15
4	Drafts	P.13-15
5	Templates	—
1	Download Templates	P.13-10
6	Sent/Unsent	P.13-15
7	Server Mail	—
1	Retrieve Mail List	P.13-14
2	Retrieve All	P.13-14
3	Delete All	P.13-15

1	7	4	Server Mail Memory	P.13-15
	8		Create New SMS	P.13-7
	9		Settings	—
	1		Custom Mail Address	P.13-3
	2		Universal Settings	P.18-18
	3		S! Mail Settings	P.18-19
	4		SMS Settings	P.18-19
	0		Memory Status	P.13-3

Yahoo! Keitai		
Menu Number/Function Name		Page
2	Yahoo! Keitai	—
1	Yahoo! Keitai	—
2	Bookmarks	P.14-8
3	Saved Pages	P.14-8
4	Enter URL	—
1	Direct Entry	P.14-4
2	URL History List	P.14-4
5	History	P.14-4
6	PC Site Browser	—
1	Homepage	P.14-5
2	Bookmarks	P.14-8
3	Saved Pages	P.14-8
4	Enter URL	P.14-5
5	History	P.14-5
6	Yahoo! Keitai	P.14-5
7	Set PC Site Browser	P.18-19
8	Reset	P.18-21

2	7	Set Yahoo! Keitai	—
	1	Font Size	P.18-19
	2	Scroll Unit	P.18-19
	3	Downloads	P.18-19
	4	Memory Manager	P.18-20
	5	Security	P.18-20
	6	Save Settings	P.18-20
	8	Reset	—
	1	Restore Defaults	P.18-21
	2	Initialized Browser	P.18-21

S! Appli

Menu Number/Function Name		Page
3	S! Appli	—
	1 S! Appli List	—
	1 Download S! Appli	P.15-2
	2 Osaifu-Keitai	—
	1 Lifestyle-Appli	P.16-3
	2 IC Card Settings	P.16-5
	3 S! Appli Settings	—
	1 Volume	P.18-21
	2 Display Backlight	P.18-21
	3 Vibration	P.18-21
	4 Synchronize microSD	P.18-21
4	S! Appli History	P.15-3
5	Information	P.15-2

 Osaifu-Keitai		
Menu Number/Function Name		Page
4	Osaifu-Keitai	—
	1 Lifestyle-Appli	P.16-3
	2 IC Card Settings	P.16-5

 Camera		
Menu Number/Function Name		Page
5	Camera	—
	1 Camera	P.6-6
	2 Video Camera	P.6-8
	3 Pictures	P.6-14
	4 Videos	P.6-14

 Entertainment				
Menu Number/Function Name		Page		
6	Entertainment	—		
	1	Mobile Widget	—	
		1	Widget Contents	P.7-3
		2	Settings	P.18-15
		3	Information	P.7-2
	2	S! Quick News	—	
		1	S! Quick News List	P.7-4
		2	Settings	P.18-16

6	3	S! Info Ch./Weather	—
	1	What's New?	P.7-6
	2	History	P.7-6
	3	Register/Cancel	P.7-6
	4	Get Latest Contents	P.7-6
	5	Weather Indicator	P.7-7
	4	BookSurfing	P.7-8
	5	e-Book Viewer	P.7-8


Tools

Menu Number/Function Name		Page	
7	Tools	—	
	1 Alarms	P.12-6	
	2 Calendar	P.12-2	
	3 Calculator	P.12-8	
	4 Notepad	P.12-8	
	5 Tasks	P.12-5	
	6 Dictionary	P.12-9	
	7 Sound Recorders	—	
	1 Voice Call Data	P.2-16	
	2 Video Call Data	P.2-16	
	3 Answer Phone Setting	P.2-15	
	4 Voice Recorder	P.12-10	
	5 Voice Announce	P.12-10	
	8	Bar Code Reader	—
		1 Scan Barcodes	P.12-11
2 Saved Data List		P.12-12	

7	9	S! GPS Navi		—
		1	Navi Appli	P.17-3
		2	Current Location	P.17-2
		3	Location Navi	P.17-3
		4	Location Logs	P.17-3
		5	NAVI Settings	P.18-22
	0	Bluetooth		—
		1	Search&Paired Device	P.10-7
		2	Bluetooth OFF/Bluetooth ON	P.10-8
		3	Accept Registered	P.10-9
		4	Dialup Rgstry Standby	P.10-10
		5	Receive via Bluetooth	P.10-9
	①	6	My Devices Settings	P.18-17
		Receive via Infrared		—
		1	Receive	P.10-3
	②	2	Receive All	P.10-4
		microSD Backup		—
		1	Phone Book	P.9-18
		2	Calendar	P.9-18
		3	Tasks	P.9-18
		4	Incoming Mail	P.9-18
		5	Sent Messages	P.9-18
		6	Unsent Messages	P.9-18
		7	Drafts	P.9-18
8		Memo Pad	P.9-18	
9		Bookmarks	P.9-18	
③		Templates/Users Dic.		—
		1	Templates	P.3-5
		2	User's Dictionary	P.3-10
		3	Download Dictionary	P.3-10

 Data Folder		
Menu Number/Function Name		Page
8	Data Folder	—
	1 Pictures	—
	1 Download Pictures	P.9-2
	2 Main Folder	P.9-2
	3 Camera	P.9-2
	4 My Pictograms	P.9-2
	5 Mail Art	P.9-2
	6 Pre-installed	P.9-2
	7 Original Animation	P.9-13
	2 Ring Songs&Tones	—
	1 DL Ring Songs&Tones	P.9-2
	2 Main Folder	P.9-2
	3 Pre-installed	P.9-2
	4 Voice Announce	P.9-2
	5 Play List	P.9-2
	3 S! Appli	—
	1 Download S! Appli	P.15-2
	4 Widget	—
	1 Download Widget	P.7-3
	5 Music	—
	1 Main Folder	P.9-2
	2 WMA	P.9-2

8	6	Videos	—
	1	Download Videos	P.9-3
	2	Main Folder	P.9-3
	3	Camera	P.9-3
	4	Pre-installed	P.9-3
	5	Play List	P.9-3
	6	Position Memory	P.9-6
	7	PC Movies	—
	1	microSD	P.9-3
	2	Position Memory	P.9-6
	3	Play History	P.9-3
	8	TV	—
	1	Image	P.5-14
	2	Video	P.5-13
	3	Position Memory	P.9-3
	9	Lifestyle-Appli	—
	1	Download	P.16-3
	0	Books	—
	1	Download Books	P.9-3
	①	Customized Screen	—
	1	Customized Screen	P.1-24
	2	Familiar Usability	P.1-24
	②	Templates	—
	1	Download Templates	P.13-10
	③	Font	—
	1	Download Font	P.9-3
	2	Main Folder	P.9-3
	3	Pre-installed	P.9-3
	④	Other Documents	—
	1	Main Folder	P.9-3

 Music Player		
Menu Number/Function Name		Page
9	Music Player	—
1	Player	—
1	All Tracks	P.8-6
2	Artist	P.8-6
3	Album	P.8-6
4	Genre	P.8-6
5	Play List	P.8-6
2	Data Manager	—
1	Main Folder	P.8-7
2	WMA	P.8-7

 TV		
Menu Number/Function Name		Page
✱	TV	—
1	Watch TV	P.5-5
2	Program List	P.5-7
3	Timer Watching	P.5-14
4	Timer Recording	P.5-14
5	Recording Result	P.5-15
6	TV Link	P.5-11
7	Channel List	P.5-4
8	Channel Setting	—
1	Select Area	P.5-4
2	Automatic	P.5-4
9	User Settings	—
1	Display	P.18-14
2	Video	P.18-14
3	Display Light	P.18-14
4	Sound	P.18-14
5	Recording	P.18-14
6	Data Broadcasting	P.18-14
7	ECO Mode	P.18-14
8	Reset Channel Setting	P.18-14
9	Reset Storage Area	P.18-14
0	Reset TV Settings	P.18-15
✱	Check TV Settings	P.18-15



Phone Book

Menu Number/Function Name		Page
	Phone Book	—
1	Phone Book	P.4-2
2	Create New Entry	P.4-3
3	Call Log	—
1	Outgoing Call Logs	P.2-14
2	Incoming Call Logs	P.2-14
4	Group	P.4-6
5	Account Details	P.1-30, P.4-13
6	S! Addressbook BkUp	—
1	Start Sync	P.4-11
2	Auto Sync Settings	P.4-12
3	Sync Log	P.4-12
7	Memory Manager	P.4-9
8	Restrictions	P.11-10
9	Settings	—
1	Save Settings	P.18-11
2	Search Method	P.18-11
3	Font Size	P.18-11
4	Voice Dial	P.4-14
5	Mail Group	P.13-18
6	Forwarding Image	P.18-11
0	Memory Status	P.4-10

- Number in first column is not available for Phone Book.



Settings

Menu Number/Function Name		Page
#	Settings	—
1	Sound Settings	—
1	Ring Tones	P.18-2
2	Ringer Volume	P.18-2
3	Key Tone	P.18-2
4	Stereo/3D Sound	P.18-2
5	Earphone	P.18-2
6	Message Ring Tones	P.18-2
2	Display Settings	—
1	Internal Display	P.18-3
2	External Display	P.18-5
3	Font Size	P.18-6
4	Font	P.1-25
5	Menu Icons	P.18-4
6	Hor. Open Menu	P.18-13
7	Back Light Time	P.18-5
8	View Blind	P.1-30
9	Color	P.18-3
0	Private Menu	P.1-26
*	言語設定	P.18-3
#	Open For New	P.18-3
①	LCD AI	P.18-5
②	Disp. Call/Recv #	P.18-6
③	Describe Icons	P.1-11
3	Customized Screen	—
1	Customized Screen	P.1-24
2	Familiar Usability	P.1-24
3	Release Settings	P.1-24

#	4	Incoming Settings	–
	1	Vibrator	P.18-2
	2	Manner Mode Type	P.18-7
	3	Answer Setting	P.18-7
	4	Open-to-Ans. Call	P.18-7
	5	Call Logs	P.11-8
	6	Phone Book Image	P.18-7
	7	Ring Time Settings	P.11-11
	8	Info Notice Setting	P.18-7
	9	Auto Answer	P.18-7
	0	In-call Management	P.18-7
	5	Phone Settings	–
	1	Horizontal View	P.18-13
	2	Side-keys Guard	P.11-8
	3	Text Entry Method	P.18-10
	4	Battery	P.18-2
	5	Pause Dial	P.2-3
	6	Headset Switch to Call	P.18-9
	7	Voice Settings	P.18-11
	8	Confirm Settings	P.18-24
	9	Software Update	P.19-12
	6	Date & Time	–
	1	Date & Time	P.18-8
	2	World Clock	P.18-8
	3	Daylight Savings	P.18-8
	4	Alarm Tone	P.18-8
	5	Time Correction	P.18-8

#	7	Security	–
	1	Privacy Key Lock	P.11-4
	2	Personal Data Lock	P.11-4
	3	IC Card Lock	P.16-5
	4	Secret Mode	P.11-9
	5	Secret Data Only	P.11-9
	6	Key Pad Dial Lock	P.11-7
	7	Reject Unknown	P.11-11
	8	Call Setting w/o ID	P.11-11
	9	All Reset	P.11-12
	0	Reset Settings	P.11-12
	✱	PIN Authentication	P.11-2
	#	Change Phone Password	P.11-2
	①	Timer Lock at Close	P.11-6
	②	Lock OFF at Open	P.11-6
	③	Content Key	P.9-22
	④	Lock Message	P.11-7
	8	Call Settings	–
	1	Call Time/Cost	P.18-9
	2	Reset	P.18-9
	3	Set Max Cost Limit	P.18-9
	4	Voice Mail/Call Fwding	P.2-17, P.2-18
	5	Call Waiting	P.2-20
	6	Call Barring	P.2-20
	7	Missed Call Notifi.	P.2-19
	8	Prefix	P.2-3
	9	Volume	P.18-9
	0	Shikkari Talk	P.2-5
	✱	Closing Clamshell	P.18-9
	#	Hold Tones	P.18-9

#	8	①	Noise Reduction	P.18-9
		②	Quality Alarm	P.18-9
		③	Reconnect Signal	P.18-9
		④	Emission OFF Mode	P.1-18
		⑤	Show My Number	P.2-21
		⑥	Service Numbers	P.18-9
	9		Video Call	—
		1	Incoming Video Qlty	P.18-12
		2	Select Images	P.18-12
		3	Loud Speaker	P.18-12
		4	Voice Call Auto Redial	P.18-12
		5	Remote Monitoring	P.2-8
	0		International Call	—
		1	Int'l Dial Assist	P.2-10
		2	Select Operator	P.2-11
		3	PLMN Setting	P.2-11
		4	Operator Name	P.2-11
		5	Select Network	P.2-11
	①		Connectivity	—
		1	USB Mode	P.10-11
		2	Retrieve NW Info	P.1-16
	②		Notification Light	—
		1	Incoming	P.4-4, P.18-10
		2	Online	P.18-10
		3	Missed Call/Unread	P.18-10
		4	Clamshell Close	P.18-10
		5	Music	P.18-10
		6	Bluetooth	P.18-10
		7	IC Card	P.18-10
		8	Side Key	P.18-10
		9	Confirm Status	P.18-10

Troubleshooting

Handset does not turn on

- Was  pressed for more than one second?
- Is battery level sufficient?
- Is battery inserted properly? (☞P.1-14)

Handset functions do not work after turning power on

- Does PIN Entry window appear?
PIN Authentication is **ON**. Enter PIN (☞P.11-2).

USIM not inserted After power-off Insert USIM or Inserted USIM is unavailable to this mobile phone Please insert valid one appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (☞P.1-3)
- Is SoftBank specified USIM Card inserted? (☞P.1-2).
- USIM Card IC chip may be dirty.
Wipe with a clean cloth, then insert USIM Card correctly.

Keypad does not respond

- Does  or  appear in Standby?
Keyguard (☞P.11-3) or Privacy Key Lock is active (☞P.11-4). Cancel it.

Side Keys do not work while handset is closed

- Does  appear?
Side-keys Guard (☞P.11-8) is **ON**.
Set to **OFF**.

Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does    appear?
Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.
- Are you using handset overseas?
Set international settings (e.g. Select Operator) to use abroad (☞P.2-10).
- Does  appear?
Personal Data Lock is set (☞P.11-4). Deactivate Personal Data Lock.

Outgoing calls or Video Calls will not connect

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (☞P.2-20)
- Does  appear in Standby? Total cost has reached upper limit. Set Max Cost Limit to **OFF** or execute **Reset** (☞P.18-9).

Outgoing calls will not connect or busy signal sounds

- Did you enter area code?
- Is restricting outgoing calls in Call Barring? (☞P.2-20)

Call is interrupted or disconnected

- Does  appear? Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.

"Cannot start any more functions" appears when a menu is opened.

- Maximum number of functions are active at the same time. Cancel current function and try again (☞P.1-29).

Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
Set Secret Mode or Secret Data Only **ON** (☞P.11-9).
- Does  appear?
Personal Data Lock is set (☞P.11-4). Deactivate Personal Data Lock.

Digital TV does not work

- Is handset out of terrestrial Digital TV broadcasting service area or in a location where airwaves are weak?
Move to a location where airwaves are strong (☞P.5-3).

Customized Screen setting cannot be canceled

- Enter "6368##" in Standby → **Release Settings**
Customized Screen cannot be canceled in Standby while Simple menu is active. Deactivate Simple menu in Standby.

Osaifu-Keitai® does not work

- Does  appear?
Deactivate IC Card Lock (☞P.16-5).

Display clock is reset

- Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (☞P.18-8) or Retrieve NW Info (☞P.1-16) again.

Battery Operating Time is greatly reduced

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (☞P.1-12) and "Battery Time" (☞P.1-13).

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (☞P.1-15)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞P.1-14)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Battery may not charge beyond +5°C and +35°C.
- Battery may need to be replaced.

Handset/accessories feel warm

- AC Charger/Desktop Holder may warm during charging.
Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

Note

- If you did not find the remedy to your problem here, please contact SoftBank Mobile Customer Center (☞P.19-34).

Warning Signs

Problem	Causes and Remedies
 appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Side-keys Guard is ON (P.11-8). To activate Side Keys while handset is closed, set Side-keys Guard OFF .
 or  appears	Keyguard (P.11-3) or Privacy Key Lock (P.11-4) is active. Cancel it to use handset. Answer calls even if Keyguard or Privacy Key Lock is active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (P.1-15) or replace battery (P.1-14).

Software Update

Check for handset software updates and download as required.
Choose to begin update or schedule update.

- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.

Updating Software Manually

Main Menu ► Settings ► Phone Settings
► Software Update ► Software Update

1 [YES] → Follow onscreen instructions

After download is complete, handset automatically turns off and restarts before Software Update begins.

After Software Update is complete, handset automatically turns off and restarts before information appears for successful update (This process takes approximately 60 seconds.).

 Software Update
Software has been
successfully updated.

Updating Software Automatically

Main Menu ► Settings ► Phone Settings
► Software Update ► Regular Updates

1 YES → Follow onscreen instructions

- Select **YES** to activate Internet. Follow onscreen instructions to perform Regular Updates. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).


Update Results

When Event Indicator appears, **Update** →



- When **Update** indicator does not appear,


Main Menu ► Settings
► Phone Settings
► Software Update
► Update Results

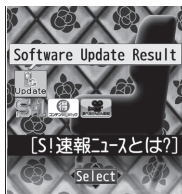

Scheduled Update

Follow onscreen instructions for setup. Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

 - Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.



Note

- If handset does not power on after Software Update, remove then re-insert battery and try again. If handset still does not power on, contact SoftBank Mobile Customer Center, Customer Assistance (☎P.19-34).
- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (☎P.19-34).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Quick Open Menu

When **Menu Icons** is set to **Standard** or **Customize** (P.18-4), press menu numbers in Main Menu to open the following functions.

Example: To open Notepad:

In Standby,  →  

Menu	#
Alarm	44
Calendar	45
Calculator	85
Notepad	42
Tasks	95
Sound Recorders	55
Receive via Infrared	79
Templates/Users Dictionary	38
Pictures folder	46
Ring Songs&Tones folder	16
Phone Book Settings	26
Ring Tones	13
Ringer Volume	50
Key Tone	30
Stereo/3D Sound	64
Earphone/Speaker Settings	51
Message Ring Tones	68
Internal Display	56

Menu	#
External Display	93
Font Settings	66
Menu Icons	57
Back Light Time	70
Color Theme	86
Private Menu Settings	52
Language	15
Describe Icons	36
Vibrator	54
Manner Mode Type	20
Answer Setting	58
Ring Time Settings	90
Info Notice Setting	65
Auto Answer	94
Text Entry Method	35
Date & Time	31
Secret Mode	40
Secret Data Only	41
Call Setting w/o ID	10
Reset Settings	23
Change Phone Password	29
Call Time/Cost	61
Reset Total Duration/Cost	60
Closing Clamshell	18

Menu	#
Noise Reduction	76
Quality Alarm	75
Reconnect Signal	77
Show My Number	17
Notification Light	89

Key Assignments (5-touch Mode)

Display Key	漢	カナ	abc	123
①	あいうえおあいうえお	アイウエオアイウエオ ¹	. / @ - :  ¹  ² _ 1	1
②	かきくけこ	カキクケコ ²	a b c A B C 2	2
③	さしすせそ	サシスセソ ³	d e f D E F 3	3
④	たちつてとっ	タチツテトツ ⁴	g h i G H I 4	4
⑤	なにぬねの	ナニヌネノ ⁵	j k l J K L 5	5
⑥	はひふへほ	ハヒフヘホ ⁶	m n o M N O 6	6
⑦	まみむめも	マミムメモ ⁷	p q r s P Q R S 7	7
⑧	やゆよやゆよ	ヤユヨヤユヨ ⁸	t u v T U V 8	8
⑨	らりるれろ	ラリルレロ ⁹	w x y z W X Y Z 9	9
⑩	わをんわー	ワヲン  ² ー ⁰	0	0
✳	 ³	 ³	Pictograms	*
	[Press and hold] Templates			
#	、。？！・ □ (Space)	、。？！・ □ (Space)	、。？！' - & () ¥ □ (Space)	#
	[Press and hold] Symbols ⁴			

¹ Appears when entering single-byte character.

² Appears when entering double-byte character.

³ Added to highlighted character. Press ✳ to display pictograms after determining character.

⁴ In number mode, symbol list may not be displayed.

- While entering character, press  to toggle characters at cursor in reverse order.
- After entering hiragana, katakana or alphanumerics, press  to toggle upper/lower case.
- In number mode, press and hold ⑩ to enter "+" (not available in S! Mail text field).
- In alphanumerics mode, characters entered after an upper-case character appear in order of: upper case → lower case.

Key Assignments (2-touch Mode)

Kanji (Hiragana) Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			
	8	や	(	ゆ	)	よ	*	#			
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	ゝ	ゞ	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	や		ゆ		よ					
	9										
	0	わ			ゝ	ゞ					

Katakana Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			
	8	ヤ	(	ユ	)	ヨ	*	#			
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	ゝ	ゞ	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	ヤ		ユ		ヨ					
	9										
	0	ワ ¹									

Alphanumerics Mode

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	"	\$	%	'	+	a	b	c	d	e
	2	.	.	:	:	<	f	g	h	i	j
	3	=	>	@	[	]	k	l	m	n	o
	4	^	_	' ¹ ' ²	{		p	q	r	s	t
	5	}	~ ¹ ~ ²				u	v	w	x	y
	6						z	?	!	-	/
	7						¥	&			
	8		(		)		*	#			
	9						1	2	3	4	5
	0						6	7	8	9	0

■ Toggle upper/lower case

¹ Appears when entering double-byte character.

² Appears when entering single-byte character.

Note

- A space is entered by pressing key corresponding to a blank where no character is assigned.
- In kanji (hiragana) or katakana mode, "" " or "" " is entered by pressing (✖) after entering characters. Press (✖) once for "" ", twice for "" ".
- In number mode, press and hold (0) to enter "+" (not available in S! Mail text field).

Key Assignments (NIKO-touch Mode)

Kanji (Hiragana) Mode

		Second digit									
First digit	1	あ	い	う	え	お	.	-	@	_	1
	2	か	き	く	け	こ		a	b	c	2
	3	さ	し	す	せ	そ		d	e	f	3
	4	た	ち	つ	て	と	っ	g	h	i	4
	5	な	に	ぬ	ね	の		j	k	l	5
	6	は	ひ	ふ	へ	ほ		m	n	o	6
	7	ま	み	む	め	も		p	q	r	7
	8	や	ゆ	よ	ゃ	ゅ	ょ	t	u	v	8
	9	ら	り	る	れ	ろ		w	x	y	9
	0	わ	を	ん	.	。	-	.	!	?	0

Katakana Mode

		Second digit									
First digit	1	ア	イ	ウ	エ	オ	.	-	@	_	1
	2	カ	キ	ク	ケ	コ		a	b	c	2
	3	サ	シ	ス	セ	ソ		d	e	f	3
	4	タ	チ	ツ	テ	ト	ッ	g	h	i	4
	5	ナ	ニ	ヌ	ネ	ノ		j	k	l	5
	6	ハ	ヒ	フ	ヘ	ホ		m	n	o	6
	7	マ	ミ	ム	メ	モ		p	q	r	7
	8	ヤ	ユ	ヨ	ャ	ュ	ョ	t	u	v	8
	9	ラ	リ	ル	レ	ロ		w	x	y	9
	0	ワ	ヲ	ン	.	。	-	.	!	?	0

Note

- Press [Mode] to toggle kanji (hiragana) and single-byte number modes.
- To switch to katakana mode: In kanji (hiragana) mode, [Menu] → **1 byte character**
- To toggle lower/upper case: Enter a character →
- A space is entered by pressing key corresponding to a blank where no character is assigned.
- Press (*) once for "'", twice for " ". In kanji (hiragana) mode, enter characters before pressing (*).
- In number mode, press and hold (0) to enter "+" (not available in S! Mail text field).

Symbol List

Double-byte Symbol List

、	。	，	．	：	；	？	！	”	
。	／	、	”	^	-	—	、	＞	
＞	//	全	々	メ	○	—	—	/	
／	～			…	..	’	”	”	
(	)	[	]	[	]	{	}	＜	＞
《	》	「	」	『	』	【	】	+	-
±	×	÷	=	≠	<	>	≤	≥	∞
∴	♂	♀	°	′	″	℃	¥	\$	Φ
£	%	#	&	*	@	§	☆	★	○
●	◎	◇	◆	□	■	△	▲	▽	▼
※	〒	→	←	↑	↓	■	∈	∋	⊆
⊃	⊂	⊃	U	∩	∧	∨	→	⇒	⇔
∠	∠	⊥	⊥	∠	∇	≡	≡	≡	≡
»	√	∞	∞	∴	∫	∫	Å	%	#
b	♪	†	‡	¶	○	ゐ	ゑ	ヱ	エ
ヴ	カ	ケ	A	B	Γ	Δ	E	Z	H
Θ	I	K	Λ	M	N	Ξ	O	Π	P
Σ	T	Υ	Φ	X	Ψ	Ω	α	β	γ

δ	ε	ζ	η	θ	ι	κ	λ	μ	ν
ξ	ο	π	ρ	σ	τ	υ	φ	χ	ψ
ω	A	Б	В	Г	Д	Е	Ё	Ж	З
И	Й	К	Л	М	Н	О	П	Р	С
Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы
Ь	Э	Ю	Я	а	б	в	г	д	е
ё	ж	з	и	й	к	л	м	н	о
п	р	с	т	у	ф	х	ц	ч	ш
щ	ъ	ы	ь	э	ю	я	—		Г
Г	Г	Г	Г	Г	Г	Г	Г	Г	Г
Г	Г	Г	Г	Г	Г	Г	Г	Г	Г
Г	Г	Г	Г	Г	Г	Г	Г	Г	Г
②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪
⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	I
II	III	IV	V	VI	VII	VIII	IX	X	ミ
キ	コ	ケ	カ	ク	コ	ケ	カ	ク	コ
ドル	ドン	セント	ミリ	センチ	mm	cm	km	mg	kg
cc	m	平成	、	、	No	KK	TEL	⊕	⊕

⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕	⊕
≡	∫	∫	Σ	√	⊥	∠	∠	∠	∠
∩	U								

Single-byte Symbol List

!	"	#	\$	%	&	'	(	)	*
+	,	-	.	/	:	;	<	=	>
?	@	[	¥	]	^	_	'	{	
}	~	.	。	。	。	。	。	。	。

● To enter a space: ␣P. 3-3

First Three Digits	Last Digit								
	0	1	2	3	4	5	6	7	8
010									
011	!	~	°	ˆ	˙	˚	˛	˜	˘
012	¡	>	”	„	々	ˆ	˚	˛	˜
013	¡	>	”	„	々	ˆ	˚	˛	˜
014	¡	>	”	„	々	ˆ	˚	˛	˜
015	¡	>	”	„	々	ˆ	˚	˛	˜
016	¡	>	”	„	々	ˆ	˚	˛	˜
017	¡	>	”	„	々	ˆ	˚	˛	˜
018	¡	>	”	„	々	ˆ	˚	˛	˜
019	★	●	●	●	◇	◆	▽	▼	※
020	◆	□	■	■	▲	▼	▼	※	※
021	→	↑	↓	↓	↓	↓	↓	↓	↓
022	→	↑	↓	↓	↓	↓	↓	↓	↓
023	→	↑	↓	↓	↓	↓	↓	↓	↓
024	→	↑	↓	↓	↓	↓	↓	↓	↓
026	∠	⊥	∠	∠	≡	≡	≡	≡	≡
027	∠	⊥	∠	∠	≡	≡	≡	≡	≡
028	∠	⊥	∠	∠	≡	≡	≡	≡	≡
029	∠	⊥	∠	∠	≡	≡	≡	≡	≡
031							0	1	2
032	4	5	6	7	8	9	D	E	F
033	H	I	J	K	L	M	N	O	P
034	H	I	J	K	L	M	N	O	P
035	H	I	J	K	L	M	N	O	P
036	f	g	h	i	j	k	l	m	n
037	f	g	h	i	j	k	l	m	n
038	f	g	h	i	j	k	l	m	n
039	f	g	h	i	j	k	l	m	n
040									
041	あ	い	う	え	お	あ	い	う	え
042	あ	い	う	え	お	あ	い	う	え
043	あ	い	う	え	お	あ	い	う	え
044	あ	い	う	え	お	あ	い	う	え
045	あ	い	う	え	お	あ	い	う	え
046	あ	い	う	え	お	あ	い	う	え
047	あ	い	う	え	お	あ	い	う	え
048	あ	い	う	え	お	あ	い	う	え

First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit
050	0	161	0	194	0
051	1	162	1	195	1
052	2	163	2	196	2
053	3	164	3	197	3
054	4		4	198	4
055	5		5	199	5
056	6		6	200	6
057	7		7	201	7
058	8		8	202	8
	9		9	203	9
060	0	165	0	204	0
061	1	166	1	205	1
062	2	167	2	206	2
063	3	168	3	207	3
064	4	169	4		4
065	5	170	5		5
	6	171	6		6
	7	172	7		7
	8	173	8		8
	9		9		9
070	0	174	0	208	0
071	1	175	1	209	1
072	2	176	2	210	2
073	3	177	3	211	3
074	4	178	4	212	4
075	5		5	213	5
076	6		6	214	6
077	7		7	215	7
078	8		8	216	8
	9		9	217	9
080	0	179	0	218	0
081	1	180	1	219	1
082	2	181	2	220	2
083	3	182	3	221	3
130	4	183	4	222	4
131	5	184	5	223	5
132	6	185	6	224	6
133	7	186	7	225	7
134	8	187	8	226	8
135	9	188	9		9
136	0	189	0		0
137	1	190	1		1
138	2	191	2		2
139	3	192	3		3
	4	193	4		4
	5		5		5
	6		6		6
	7		7		7
	8		8		8
	9		9		9

Appendix

Weather Indicator List

- Indicators and categories are subject to change without prior notice.

Weather	
	Clear (day)
	Clear (night)
	Cloudy
	Rain
	Snow
	Thunderstorm
	Precipitation 0%-100%
	Later
	Occasionally

Pollen Level	
	Low
	Moderate
	High
	Very High

Cherry Blossom	
	Blossoms Opening
	Near Full Bloom
	Peak Bloom
	Past Peak

Fall Foliage	
	No Color
	Moderate Color
	Peak Color
	Past Peak

UV Level	
	Low
	Moderate
	High
	Very High

Typhoon	
	Formed
	Approaching
	Severe

Other Information	
	Heavy Rain
	Strong Winds
	Notifications

Memory List

Data Folder	Up to 3500 items (Up to 300 MB) (One S! Appli corresponds up to 6 MB.)
--------------------	---

- Shared with S! Appli List

Calendar Events	Up to 1000 items
------------------------	------------------

Phone Book	Up to 1000 items
-------------------	------------------

Messaging (SMS and S! Mail combined)	Incoming Mail	Up to 3000 items
	Sent/Unsent	Up to 1000 items
	Drafts	Up to 10 items

Yahoo! Keitai	Saved Pages	[Yahoo! Keitai] Up to 20 items/750KB [PC Site Browser] Up to 20 items/1150KB
	Bookmarks	[Yahoo! Keitai] Up to 100 items [PC Site Browser] Up to 100 items
	URL History	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Site Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	Cache	[Yahoo! Keitai] 750KB [PC Site Browser] 1150KB

* The number of savable items varies depending on URL length.

Specifications

931P

Weight (including battery)		128 g*
Dimensions (closed)		50 x 108 x 18.5 mm*
Standby Time (closed)	3G	650 hours*
	GSM	390 hours*
Talk Time	3G	220 minutes*
	Video Call	130 minutes*
	GSM	240 minutes*
TV Reception Time	Normal Mode	3.7 hours*
	ECO Mode	6.3 hours*
Charging Time	AC Charger	130 minutes*
	In-Car Charger	130 minutes*
Maximum Output	3G	0.25 W
	GSM	2.0 W

* Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- TV-Reception Time is an average measured using earphone/microphone, with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when an S! Appli is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	800 mAh
Dimensions	45 x 4.5 x 37 mm*

* Approximate value

- Specifications subject to change without notice.

Index

Numerics

3G 2-11

A

AC Charger	1-15
Access History	
PC Site Browser	14-5
Yahoo! Keitai	14-4
Account Details	1-30, 4-13
Address (Adding/editing/deleting)	13-8
After-Sales Service	19-33
Alarms	12-6
All Reset	11-12
Alternative Image	2-6
Answer Phone	2-15
Answering Calls	
Video Calls	2-8
Voice Calls	2-5
Attachments	
Adding	13-8
Deleting	13-8
Opening/saving	13-13
Auto Answer	18-7
Auto Focus Lock	6-13
Auto Save (Camera)	6-11
Auto timer	6-8
Auto-sort	13-16
AV Output	10-13

B

Back Light	
Display	18-5
S! Appli	18-21
Video Calls	2-13
Backup	
microSD Card	9-19
S! Address Back-up	4-10
Bar Code Reader	12-11
Basic Operations	
Handset	x
Internet	14-6
Battery	1-12
Battery Level	1-11, 1-13
Bluetooth®	10-6
Bluetooth® Passkey	10-8
Bookmarks	14-8
Books folder	9-3
BookSurfing®	7-8
Brightness	
Back Light	18-5
Camera	6-5
External Display	18-5
Video Calls	18-12
Browser (Initializing)	18-21

C	
Cache Memory.....	14-2
Calculator	12-8
Calendar	12-2
Calendar Events.....	12-2
Call Barring.....	2-20
Call Cost	18-9
Call Forwarding	2-17
Call Log.....	2-14
Call Operations.....	2-12
Call Rejection	
Calls without Caller ID	11-11
Unknown Callers	11-11
Call Restrictions.....	11-10
Call Settings	18-9
Call Time	18-9
Call Waiting	2-20
Caller ID.....	2-3, 2-21
Camera [Section Contents].....	6-1
Center Access Code	1-28
Channel Setting	5-4
Character Code (Kuten Code)	
Character Code List.....	19-19
Input Options	3-5
Charge Limit	18-9
Charging Time	1-12
Clock Display	
External Display	18-5
Horizontal Open Position	18-13
Internal Display.....	18-4
Closing Clamshell	18-9

Color Scheme.....	18-3
Confirming Settings	18-24
Content Key	9-5
Context Forecast	3-6
Continuous Shooting.....	6-7
Conversion Candidates.....	3-6
Conversion Methods.....	3-6
Cookies Setting/Deleting	
Internet	18-20
Mobile Widget.....	18-15
Copy Protected Files.....	9-4
Country/Region Code	2-10
Customer Service.....	19-34
Customized Screen	1-24

D	
Data Folder	9-2
Date & Time Settings.....	18-8
Deleting	
Calendar events	12-5
Messages.....	13-21
Phone Book	4-9
S! Appli.....	15-4
Delivery Report	13-9
Dictionary	12-9
Digital TV [Section Contents]	5-1
Digital TV Settings.....	18-14
Display.....	1-10
Display Indicators.....	1-10
Display Settings.....	18-3

Download	
Customized Screen	1-24
Familiar Usability.....	1-24
Fonts.....	1-25
From web pages.....	14-11
Lifestyle-Appli	15-2, 16-3
Music	8-3
S! Appli.....	15-2
Templates	13-10
Widgets	7-3
Download Dictionary.....	3-10
Drafts.....	13-15
Driving Mode.....	1-18, 18-7

E	
e-Book Viewer	7-8
Earpiece Volume	
Video Calls	2-7
Voice Calls.....	2-5
Emergency Calls (110, 119, 118)	2-4
Emergency Positioning Request	2-4
Emission OFF Mode	1-18
Event Indicators.....	1-21
External Display.....	1-10, 1-23

F	
Familiar Usability	1-24
Flash setting	6-5, 6-10
Focus Setting	6-13
Folder/files	9-14
Font Settings	1-25
Font Size	18-6
Function List	19-2

G	
Global Roaming Service	2-10
Graphic Mail	13-5
Group Settings (Phone Book)	4-6
GSM	2-11

H	
Handset	
Menus	1-18
Parts & Functions	1-4
Power On/Off	1-16
Handset Security [Section Contents]	11-1
Help (Text Entry)	3-2
Hide Call Logs/Address List	11-8
Hold	
Video Calls	2-12
Voice Calls	2-12
Horizontal View	18-13
HTML messages	13-5

I	
IC Card Lock	16-5
IC Transmission	10-4
IDD Prefix	2-9
Image quality (Camera)	6-5
Image size (Camera)	6-5
Incoming Call Logs	2-13
Incoming Options (S! Mail)	18-19
Infrared	10-2
Input Character Settings (SMS)	18-19
Inside Camera	6-3
Intelligent Auto	6-5, 6-10
Internal Display	1-10, 18-3
International Call	
From abroad	2-10
From Japan	2-9
International Setting	2-10

Internet [Section Contents]	14-1
-----------------------------------	------

K	
Key Assignments	
Mode 1 (5-touch)	19-15
Mode 2 (2-touch)	19-16
Mode 3 (NIKO-touch)	19-17
Key Pad Dial Lock	11-7
Key Tone	18-2
Keyguard	11-3
Kuten Code (Character Code)	19-19

L	
Language	18-3
License Information (S! Appli)	15-2
Lifestyle-Appli	16-3
Lock Message	11-7
Lock OFF at Open	11-6

M	
Mail Group.....	13-18
Mail Security.....	11-10
Main Menu.....	1-18
Making Calls	
International Calls.....	2-9, 2-10
Video Calls.....	2-7
Voice Calls.....	2-2
Manner Mode.....	1-17, 2-12, 18-7
Manufacture Number.....	18-20
Memory List.....	19-25
Memory Manager (Internet).....	18-20
Menu Icons.....	18-4
Menu Numbers.....	1-19
Messaging [Section Contents].....	13-1
microSD Card.....	9-16
Backup.....	9-19
Check.....	9-21
Formatting.....	9-18
Synchronizing.....	18-21
Missed Call Notification.....	2-19
Mobile Widget.....	7-2
Mobile W-Speed.....	5-2
MULTI Key.....	1-6, 1-29
Multi Selector.....	ix
Music folder.....	9-2
Music Player [Section Contents].....	8-1
My original set.....	6-5, 6-12
My Pictograms.....	9-2, 13-6

N	
Network Information.....	1-16
Network S! Appli.....	15-2
New Messages	
Receiving.....	13-15
Viewing.....	13-10
Night mode	
Camera.....	6-5
Video Calls.....	18-12
Normal Mode (Simple Menu).....	1-26
Notepad.....	12-8
Notification Light Settings.....	18-10

O	
One-push Open Button.....	1-7
Open For New.....	18-3
Open-to-Ans. Call.....	18-7
Operator Names.....	2-11
Optional Services.....	2-17
Original Animation.....	9-13
Osaifu-Keitai® [Section Contents].....	16-1
Other Documents folder.....	9-3
Outgoing Call Logs.....	2-13
Outside Camera.....	6-3

P	
Passwords.....	1-28

Passwords (Changing)	
Center Access Code.....	1-28
Phone Password.....	11-2
Security Code.....	2-21
PC Site Browser.....	14-2
Access.....	14-5
Display Settings.....	18-19
Memory Manager & Settings.....	18-20
Security Settings.....	18-20
Personal Data Lock.....	11-4
Phone Book [Section Contents].....	4-1
Phone Password.....	1-28
Changing.....	11-2
Photo light setting.....	6-5, 6-10
Photo mode.....	6-5
Pictographs.....	3-4
Pictures (Still Images)	
Capturing.....	6-6
Editing.....	9-12
Pictures folder.....	9-2
PIN/PIN2.....	1-3
Changing.....	11-2
PIN Authentication.....	11-2
PIN Lock & Cancellation (PUK).....	11-3
Play Background.....	8-7
Play List.....	8-10
Play mode setting.....	8-6
Predictive Candidates.....	3-6
Privacy Key Lock.....	11-4
Private Menu.....	1-25
PUK/PUK2.....	1-3, 11-3

Q			
QR Code.....	12-11	S! Mail	13-2
Quality (Camera).....	6-5	Creating/sending	13-4
Quick Open Menu	19-14	Mail Notice.....	13-11
		Settings	18-19
		Universal Settings	18-18
		S! Quick News	7-4
		Settings	18-16
R		Save	
Recipients (Adding/editing/deleting) ...	13-8	Alarms	12-7
Referer Information.....	18-20	Calendar Events	12-2
Remote Lock	16-5	Camera	6-11
Remote Monitoring	2-8	Notepad	12-8
Reset		Phone Book	4-3, 18-11
All Reset.....	11-12	S! Information Channel.....	7-6
Browser Settings.....	18-21	S! Quick News	7-4
Settings	11-12	Shortcut.....	1-22
Total Call Charge/Time	18-9	User's Dictionary	3-10
TV Settings	18-15	Saved Pages.....	14-8
Ring Songs&Tones folder	9-2	Script	18-20
Ring Time (Answer Phone).....	2-16	Scroll Unit	18-19
Ring Time Settings.....	11-11	SD Audio	8-2
Ringer Volume	18-2	Secret Data Only.....	11-9
Ringtone	9-8, 18-2	Secret Mail Setting.....	11-9
Ringtone Duration (Message).....	18-2	Secret Mode	11-9
Root Certificates	18-21	Secure Remote Lock	11-6
		Security	
S		Data Folder.....	9-14
S! Addressbook Back-up.....	4-10	Internet	18-20
S! Appli [Section Contents]	15-1	S! Appli.....	15-4
S! GPS Navi [Section Contents]	17-1	Security Code	1-28
S! Information Channel	7-6	Security Functions	11-2
		Server Mail	13-14
		Settings [Section Contents].....	18-1
		Shikkari Talk	2-5
		Shortcuts	1-22
		Shutter sound	6-11
		Side-keys Guard	11-8
		Signal Strength.....	1-10
		Simple Menu.....	1-26
		SMS.....	13-2
		Creating/sending	13-7
		Settings	18-19
		Universal Settings	18-18
		Snooze	12-7
		SoftBank Utility Software	10-11
		Softkeys.....	ix
		Software Update	19-12
		Sort (Messages)	13-21
		Spam Filter	13-17
		Speaker ON/OFF	2-12
		SSL	14-3
		Status Indicators	1-10
		Still Images (Picture)	
		Capturing	6-6
		Editing	9-12
		Streaming.....	14-12
		Symbols	3-4
		Symbol List.....	19-18

T	
Tasks	12-5
Templates (Graphic Mail).....	13-5
Text Entry [Section Contents]	3-1
Time Correction	18-8
Timer Lock at Close	11-6
TLS	14-3
Trimming (Editing Still Images)	9-13

U	
URL History	
PC Site Browser.....	14-5
Yahoo! Keitai.....	14-4
USB	10-11
User Mode (Manner Mode)	18-7
User's Dictionary	3-10
USIM Card.....	1-2
USIM Card Phone Book	4-3
USIM PINs	1-3

V	
Vibrator	
Incoming alert	18-2
S! Appli.....	18-21
Videos (Recording)	6-8
Videos folder	9-3
View Blind	1-30
Viewfinder	
Camera	6-4
Video Camera.....	6-4
Voice Announce	12-10
Voice Dial.....	4-14
Voice Mail.....	2-18
Voice Recorder.....	12-10
Volume	
Ringtone	18-2
S! Appli.....	18-21
Video Calls	2-7
Voice Calls	2-5

W	
Wallpaper	
External Display	18-5
Horizontal Open Position	18-13
Internal Display	18-3
Warning Messages (PC Site Browser) ...	18-19
Warranty	19-33
Weather Indicator.....	7-7
White balance.....	6-5, 6-11
Widgets	7-2
WMA Files.....	8-2
World Clock	18-8

Y	
Yahoo! Keitai	14-2
Access.....	14-3
Display Settings	18-19
Memory Manager & Settings	18-20
Security Settings	18-20

Z	
Zoom.....	6-8

Warranty & Service

Warranty

Warranty is provided when you purchase a 931P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (🔧P.19-10) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (📞P.19-34) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Check phone number before you dial.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at
**157 for General Information or
113 for Customer Assistance**

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial the correct number. International
charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113