

Media Player	10-2
Media Basics	10-2
Music	10-5
Playing Music.....	10-5
Video	10-6
Playing Video.....	10-6

Playlists	10-7
Using Playlists	10-7
Additional Functions	10-8
Troubleshooting	10-11

10

Media Player



Media Basics

Use Media Player to play music/video on 931SH.

- Download media files from Mobile Internet sites via Media Player directly.
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)

Downloads/Transferred Files

SD AUDIO

(Memory Card)

Transferred SD-Audio Files

WMA

(Memory Card)

Transferred WMA Files

Video File Support

My Videos

(Handset/Memory Card)

Downloads/Recorded Files

When using a Memory Card with SD-Video files recorded on other devices, open them from **SD VIDEO**.

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- When battery is low, Media Player will not play. If battery runs low during playback, Media Player shuts off.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming); downloaded media cannot be saved. Packet transmission fees apply even while stream is paused.

Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.



Downloading Music

Download music from the Internet. Read information (price, expiry date, etc.) on the source site.

1 **MENU** or  **Media Player**

2 **Music**



3 **Download Music**

- Follow the links to download media.

Download via Music Search (Japanese)


In , **Music Search**

- Follow onscreen instructions.

Downloading Video

1 **MENU** or  **Media Player**

2 **Videos**

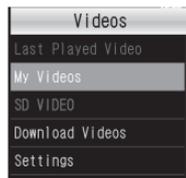

3 **Download Videos**

- Follow the links to download media.



Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

Using MTP Mode

Follow these steps to save WMA files via S! Music Connect (Japanese):

- For more about S! Music Connect, see SOFTBANK MOBILE Corp. Website (P.19-18).
- Copy protected files can only be played on the handset with which the files were transferred.

1 **MENU** or  **Media Player**

2 **MTP Mode** **Yes**



3 **Connect handset to a PC via USB Cable**

- Copy music from PC. Refer to the S! Music Connect help menu for operational instructions.

4 **Cancel** or  **Yes**

- Disconnect USB Cable.

Saving AAC Files


Convert PC music files to 931SH-compatible format (P.19-17), then save to corresponding Memory Card folder (P.12-5) via Mass Storage. Install USB Cable driver beforehand.



Playing Music

1 MENU or ➔ **Media Player**
➔ **Music**

2 **My Music** ➔ **Highlight Music** or **Ring Tones** tab

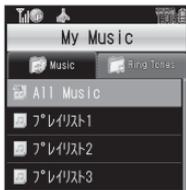

3 **All Music**



4 **Select file**



Music Playback Window

- Album art appears for compatible files.

Stopping Playback

While paused, **CLEAR/BACK** or

Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

or ➔ **Yes**

Playing SD AUDIO or WMA Files

In , **SD AUDIO** or **WMA** ➔ From

Searching Music Files


After , **Options** or ➔ **Search**

➔ Enter search text ➔ **Done** or

Lyric Display-Compatible Files

- Press **Lyrics** or to display lyrics.

Music Playback Window Description

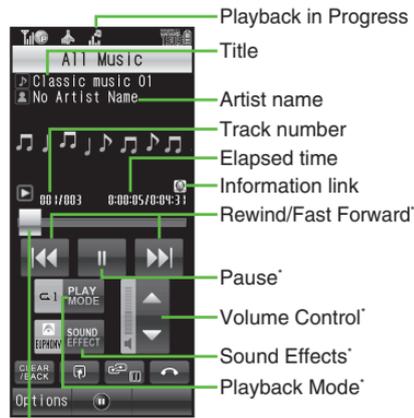

Playback Slider*

*Tap for operation.

Opening Help

[Music Playback Window] **Options** or

➔ **Help**

10

Media Player

Advanced


- Resuming from stopped point
- Switching audio output to wireless device
- Accessing linked information
- Playing repeatedly or randomly
- Changing Sound Effects (P.10-8)




Playing Video

1 MENU or → **Media Player**
→ **Videos**


2 **My Videos** → **Phone**
Memory or Memory Card

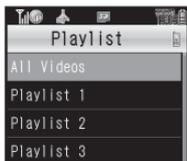

3 **All Videos**

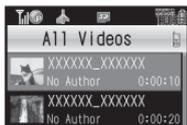

4 **Select file**

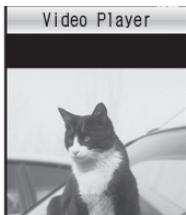

Video Playback Window

- Tap video image to toggle playback size.

5 **CLEAR/BACK** or → **Playback stops**

Playing SD VIDEO Files

In , **SD VIDEO** → 4

Searching Video Files

After , **Options** or → **Search**

→ Enter search text → **Done** or


At Alarm Time

- Playback stops.

Video Recorded on Other Devices

- Video image may appear rotated.

Video Playback Window Description

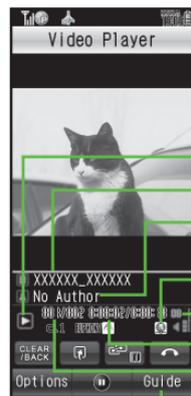

Status

Title

Author Name

Information Link

Volume

Elapsed Time

Clip Number

Toggle Panel On/Off

Opening Help

[Video Playback Window] **Options** or

→ **Help**

Advanced

- Resuming from stopped point
- Switching audio output to wireless device
- Accessing linked information
- Playing repeatedly or randomly
- Specifying start point
- Changing Sound Effects
- Changing playback size
- Setting Backlight status
- Hiding linked information (P.10-8)

Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

Adding to Playlist

Follow these steps to add a music file to **プレイリスト1**:

- 1 MENU** or **ⓘ** ➔ **Media Player**
➔ **Music**
- 2 My Music**



Playlists Window


- 3 All Music** ➔ **Highlight file** ➔ **Options** or **☑**




- 4 Add to Playlist** ➔ **プレイリスト1**

Renaming Playlists

- 1 In Playlists window,** highlight Playlist ➔ **Options** or **☑**

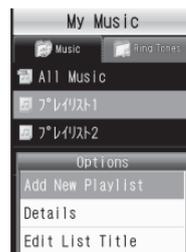

- 2 Edit List Title** ➔ **Enter name**
➔ **Done** or **ⓘ**

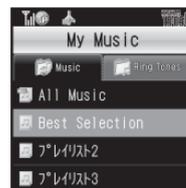

Advanced

- ☞ Organizing Playlists
- ☞ Sorting files
- ☞ Deleting/editing SD AUDIO files
- ☞ Deleting All WMA files
- ☞ Downloading Contents Keys
- ☞ Opening properties (P.10-9 - 10-10)
- ☞ Organizing Playlists
- ☞ Opening properties
- ☞ Deleting SD VIDEO files (P.10-10)



Media Playback

Music & Video

Resuming from stopped point	MENU or  → Media Player → Music or Videos → Last Played Music or Last Played Video
Switching audio output to wireless device	MENU or  → Media Player → Settings →  Sound Output → Bluetooth Device
Accessing linked information	During playback, Options or  → Access WEB Link → Yes

Music

Playing repeatedly or randomly	<small>[Start Here]</small> During playback, Options or  → Playback Mode → See below
	Repeat One File Repeat
	Repeat All Files Repeat All
	Play Randomly Random
Changing Sound Effects	Repeat Randomly Random Repeat
	During playback, Options or  → Sound Effects → Select effect

Video

Playing repeatedly or randomly	<small>[Start Here]</small> During playback, Options or  → Settings → Playback Mode → See below
	Repeat One File Repeat
	Repeat All Files Repeat All
Specifying start point	Play Randomly Random
	During playback, Options or  → Time Search → Enter time → Accept or 
Changing Sound Effects	During playback, Options or  → Settings → Sound Effects → Select effect
Changing playback size	During playback, Options or  → Settings → Display Size → Select size
Setting Backlight status	During playback, Options or  → Settings → Backlight → Select option • Selecting Normal Settings applies Display Backlight setting.
Hiding linked information	During playback, Options or  → Settings → Web Link Setting → Off



Managing Music Files

Organizing Playlists	<p>Start Here MENU or → Media Player → Music → My Music → Highlight tab → See below</p> <p>Adding New Playlists Options or → Add New Playlist → Enter name → Done or </p>
	<p>Deleting Playlists Highlight Playlist → Options or → Delete Playlist → Yes</p>
	<p>Deleting Playlist Files Select Playlist → Highlight file → Options or → Delete → Yes</p>
	<p>Changing File Order Select Playlist → Highlight file → Options or → Change Order → Move file</p>
Sorting files	<p>MENU or → Media Player → Music → My Music → Highlight tab → All Music → Options or → Sort → Select option</p>

Deleting/editing SD AUDIO files	<p>Start Here MENU or → Media Player → Music → SD AUDIO → See below</p> <p>Deleting Single Files All Music → Highlight file → Options or → Delete Track → Yes • Source files will be deleted.</p>
	<p>Deleting All Files Highlight All Music → Options or → Del. All Tracks → Yes → Yes • Source files will be deleted.</p>
	<p>Editing Title/Artist All Music → Highlight file → Options or → Edit → Select item → Enter title or name → Done or </p>
Deleting All WMA files	<p>MENU or → Media Player → Settings → Delete All WMA → Enter Handset Code → OK or → Yes • Source files will be deleted.</p>
Downloading Contents Keys	<p>MENU or → Media Player → Music → My Music → Highlight tab → Select Playlist → Select file (with) → Yes • Follow onscreen instructions.</p>



Opening properties	[Start Here] MENU or ● → <i>Media Player</i> → <i>Music</i> → See below
	SD AUDIO Files <i>SD AUDIO</i> → <i>All Music</i> → Highlight file → <i>Options</i> or  → <i>Details</i>
	Other Files <i>My Music</i> → Highlight tab → Select Playlist → Highlight file → <i>Options</i> or  → <i>Details</i>

Managing Video Files

Organizing Playlists	[Start Here] MENU or ● → <i>Media Player</i> → <i>Videos</i> → <i>My Videos</i> → <i>Phone Memory</i> or <i>Memory Card</i> → See below
	Adding New Playlists <i>Options</i> or  → <i>Add New Playlist</i> → Enter name → <i>Done</i> or ●
	Deleting Playlists Highlight Playlist → <i>Options</i> or  → <i>Delete Playlist</i> → Yes
	Deleting Playlist Files Select Playlist → Highlight file → <i>Options</i> or  → <i>Delete</i> → Yes
Sorting files	Changing File Order Select Playlist → Highlight file → <i>Options</i> or  → <i>Change Order</i> → Move file
	<i>MENU</i> or ● → <i>Media Player</i> → <i>Videos</i> → <i>My Videos</i> → <i>Phone Memory</i> or <i>Memory Card</i> → <i>All Videos</i> → <i>Options</i> or  → <i>Sort</i> → Select option

Downloading Contents Keys	<i>MENU</i> or ● → <i>Media Player</i> → <i>Videos</i> → <i>My Videos</i> → <i>Phone Memory</i> or <i>Memory Card</i> → <i>All Videos</i> → Select file (with ) → Yes ● Follow onscreen instructions.
Opening properties	[Start Here] MENU or ● → <i>Media Player</i> → <i>Videos</i> → See below
	SD VIDEO Files <i>SD VIDEO</i> → Highlight file → <i>Options</i> or  → <i>Details</i>
	Other Files <i>My Videos</i> → <i>Phone Memory</i> or <i>Memory Card</i> → Select Playlist → Highlight file → <i>Options</i> or  → <i>Details</i>
Deleting SD VIDEO files	<i>MENU</i> or ● → <i>Media Player</i> → <i>Videos</i> → <i>SD VIDEO</i> → Highlight file → <i>Options</i> or  → <i>Delete</i> → Yes ● Source files will be deleted.



Music

How do I delete files in All Music?

- Delete All Music files via Data Folder (Music or Ring Songs-Tones).

WMA files do not appear

- Did you use 931SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform **Delete All WMA** and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)

Cannot transfer WMA files

- WMA files may be corrupted; perform **Delete All WMA** and retry.

Cannot play WMA files

- Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform **Delete All WMA** and retry.

Video

How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

Cannot play video files

- Files created with PC software, etc. may not play.

