

Introduction

Thank you for purchasing SoftBank 932SH.

- For proper handset use, read "First Step Guide" in 932SH Starter Guide and this guide beforehand.
- Accessible SoftBank services may vary by service area, subscription, etc.

SoftBank 932SH is compatible with both 3G and GSM network technologies.

Notes

- Copying this guide in whole or part without authorization is prohibited.
- Guide content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this guide. Please contact SoftBank Mobile Customer Center, General Information (**P.15-41**) about unclear or missing information.

Chapter Contents At A Glance

Getting Started	1
Basic Operations	2
Calling	3
Messaging	4
Yahoo! Keitai & PC Site Browser	5
Digital TV	6
Camera & Imaging	7
Media Player & S! Applications	8
Handy Extras	9
Entertainment & Communication	10
Handset Security	11
Data Folder & Memory Card	12
Connectivity & File Backup	13
Handset Customization	14
Appendix	15



Notes

- Most operation descriptions are based on default settings in portrait position (**P.1-2**) in Standby (**P.1-6**).
- Operations and results may differ by handset status.
- Sample screenshots, etc. are provided for reference only.
- Actual handset windows, menus, etc. may differ in appearance.
- "(Japanese)" appears next to functions or applications which require Japanese ability to use as intended.

Guide Usage Notes	ii	Troubleshooting	2-24	6 Digital TV	
Table of Contents	iii	3 Calling		Digital TV	6-2
Accessory	v	Emergency Calls	3-2	TV Player	6-9
Safety Precautions	vi	Voice Calling	3-3	TV Timer	6-11
1 Getting Started		Video Calling.....	3-5	Time Shift	6-12
Handset Parts	1-2	Decoration Call	3-6	Additional Functions.....	6-13
Charging Battery	1-4	Speed Dial	3-7	Troubleshooting	6-19
Power On/Off	1-6	Call Log	3-8	7 Camera & Imaging	
Display & Indicators.....	1-7	Call Time & Call Cost	3-9	Camera	7-2
Accessing Functions	1-11	Optional Services	3-10	Photo Camera	7-4
TOUCH CRUISER	1-18	Additional Functions.....	3-12	Video Camera	7-6
Motion Control.....	1-19	Troubleshooting	3-21	Review	7-7
Mobile Manners	1-21	4 Messaging		Shooting Modes	7-8
Security Codes	1-22	Messaging.....	4-2	Editing Images.....	7-11
Basic Tools	1-23	Sending Messages	4-4	Printing.....	7-16
Double Number	1-25	Incoming Messages	4-8	Additional Functions.....	7-17
Additional Functions	1-28	Handling Messages.....	4-10	Troubleshooting	7-22
Troubleshooting	1-31	Chat Folder	4-13	8 Media Player & S! Applications	
2 Basic Operations		Mail Groups.....	4-14	Media Player.....	8-2
Font Size	2-2	PC Mail	4-15	Music	8-4
Wallpaper	2-3	Additional Functions.....	4-18	Video	8-5
Customized Screen & S! Familiar Usability	2-4	Troubleshooting	4-33	Playlists.....	8-6
Sounds & Alerts	2-5	5 Yahoo! Keitai & PC Site Browser		S! Appli.....	8-7
Text Entry	2-6	Internet Services	5-2	Additional Functions.....	8-8
User Dictionary.....	2-11	Yahoo! Keitai.....	5-3	Troubleshooting	8-13
Dictionary.....	2-12	PC Site Browser	5-4	9 Handy Extras	
Search	2-14	Browsing	5-5	Calendar & Tasks.....	9-2
Scratch Pad.....	2-15	Bookmarks & Saved Pages	5-7	Alarms	9-6
Phone Book	2-16	RSS Feeds.....	5-8	Wakeup TV	9-8
Additional Functions	2-19	Additional Functions.....	5-9	Calculator	9-10
		Troubleshooting	5-16		

Expenses Memo.....	9-11
Osaifu-Keitai®.....	9-12
Simulated Call.....	9-15
Stopwatch.....	9-16
Countdown Timer.....	9-17
World Clock.....	9-18
Hour Minder.....	9-19
Pedometer.....	9-20
Compass.....	9-22
S! GPS Navi.....	9-23
Document Viewer.....	9-25
Notepad.....	9-26
ASCII Art.....	9-27
Voice Recorder.....	9-28
Scan Barcode.....	9-29
Create QR Code.....	9-30
Scan Card.....	9-31
Text Scanner.....	9-32
Additional Functions.....	9-33
Troubleshooting.....	9-47
10 Entertainment & Communication	
Mobile Widget.....	10-2
S! Quick News.....	10-5
S! Information Channel.....	10-6
e-Books.....	10-7
S! Friend's Status.....	10-8
S! Circle Talk.....	10-11
Near Chat.....	10-13
Blog Tool.....	10-14
Additional Functions.....	10-16
Troubleshooting.....	10-23

11 Handset Security

Handset Security.....	11-2
Face Recognition.....	11-4
Additional Functions.....	11-6
12 Data Folder & Memory Card	
Data Folder.....	12-2
Memory Card.....	12-5
Additional Functions.....	12-7
Troubleshooting.....	12-9

13 Connectivity & File Backup

Infrared.....	13-2
IC Transmission.....	13-5
Bluetooth®.....	13-7
Mass Storage.....	13-11
Backup.....	13-12
S! Addressbook Back-up (SAB)...	13-14
Additional Functions.....	13-17
Troubleshooting.....	13-20

14 Handset Customization

Date & Time.....	14-2
Display & Illumination.....	14-3
Ringtones & Sounds.....	14-5
Connectivity.....	14-6
Reset.....	14-7

15 Appendix

USIM Card.....	15-2
Battery.....	15-4
Software Update.....	15-5
Troubleshooting.....	15-6
Key Assignments.....	15-8

Pager Codes.....	15-10
Character Codes.....	15-11
Weather Indicators.....	15-17
Specifications.....	15-18
Menu List.....	15-25
Index.....	15-32
Warranty & Service.....	15-40
Customer Service.....	15-41

Accessory

■ Battery (SHBCD1)



- For accessory-related information, please contact SoftBank Mobile Customer Center, General Information (P.15-41).
- Use specified Charger/Headphones (sold separately) only.

Safety Precautions

Read safety precautions before using handset.

- Observe precautions to avoid injury to self or others, or damage to property.
- SoftBank is not liable for any damages resulting from use of this product.

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

 DANGER	Great risk of death or serious injury from improper use
 WARNING	Risk of death or serious injury from improper use
 CAUTION	Risk of serious injury or damage to property from improper use

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

	Prohibited actions
Prohibited	
	Disassembly prohibited
Do Not Disassemble	
	Exposure to liquids prohibited
Avoid Liquids Or Moisture	
	Use with wet hands prohibited
Do Not Use Wet Hands	
	Compulsory actions
Compulsory	
	Unplug Charger from outlet
Disconnect Power Source	

Handset, Battery, USIM Card, Charger (Sold Separately) & Memory Card (Sold Separately)

DANGER

Use specified battery, Charger (sold separately) and Desktop Holder (sold separately) only.

Non-specified equipment use may cause battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.



Compulsory

Do not disassemble, modify or solder handset or related hardware.

May cause fire, injury, electric shock or malfunction. Battery may leak, overheat, burst or ignite.

Modifying handsets is prohibited by the Radio Law and subject to a penalty.



Do Not Disassemble

Do not expose handset or related hardware to liquids.

Do not leave handset or related hardware wet after exposure to water, pet urine, etc., and do not charge wet battery. May cause overheating, electric shock, fire, injury or malfunction.

Use them in an appropriate place properly.



Avoid Liquids Or Moisture

Do not charge battery in or expose handset or related hardware to extreme heat (e.g., near fire or sources of heat, in direct sunlight, inside vehicles, etc.).

May cause warping/malfunction; battery may leak, overheat, ignite or burst. Handset or related hardware may become hot to the touch, leading to burn injuries, etc.



Prohibited

Do not force battery/Charger into handset. Check the direction and retry.

Battery may leak, overheat, burst, ignite, etc.



Prohibited

WARNING

Do not place handset, battery or Charger in/on ovens, microwave ovens, pressure cookers, induction stoves or other cooking appliances.

Battery may leak, overheat, burst or ignite. Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.



Prohibited

Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk.

Handset use near petrochemicals or other flammables may cause fire/explosion; turn handset off before using Osaifu-Keitai® at gas stations (cancel IC Card Lock beforehand).



Compulsory

Do not apply strong shocks or impacts.

Do not drop/throw handset or related hardware. Battery may leak, overheat, burst or ignite, resulting in fire, electric shock, malfunction, etc.



Prohibited

If there is unusual sound/odor, smoke or any other abnormality:

Continued use may cause fire, electric shock, etc.; grasp plug to disconnect Charger, turn off handset, then remove battery, being careful not to burn or injure yourself.



Compulsory

Keep liquids (water, pet urine, etc.) or conductive material (pencil lead, metallic strip, metal jewelry, etc.) away from charging terminals, External Device Port or Memory Card Slot.

May cause short circuit, resulting in fire, malfunction, etc.



Prohibited

CAUTION

Do not place handset or related hardware on unstable surfaces.

Handset or related hardware may fall, resulting in injury, malfunction, etc.; be especially careful when Vibration is set.



Prohibited

Keep handset and related hardware out of infants' reach.

Infants may choke from swallowing handset or related hardware or be injured, etc.



Compulsory

Safety Precautions

If your child is using handset and related hardware, explain all instructions and supervise usage. Misuse may cause injury, etc.



Compulsory

Battery

DANGER

Read battery label to confirm battery type; use/dispose of battery accordingly.

Do not dispose of battery in fire. Battery may leak, burst, ignite, etc.



Prohibited

Do not damage battery (with a nail, hammer, foot, etc.) or subject it to strong impacts or shocks.

Battery may leak, overheat, burst, ignite, etc.



Prohibited

Keep wire or other metal objects away from battery terminals. Do not carry/store battery with conductive material (pencil lead, metallic strip, metal jewelry, etc.).

Battery may leak, overheat, burst, ignite, etc.



Prohibited

If battery fluid gets in eyes, do not rub; rinse with water and consult a doctor immediately.

Eyes may be severely damaged.



Compulsory

WARNING

If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately. May cause skin damage.



Compulsory

If battery does not charge properly, stop trying.

Battery may leak, overheat, burst, ignite, etc.



Compulsory

If there is abnormal odor, excessive heat, discoloration or distortion, remove battery, being careful not to burn or injure yourself. Avoid fire sources.

Continued use may cause battery to leak, overheat, burst, ignite, etc.



Compulsory

CAUTION

Do not dispose of an exhausted battery with ordinary refuse.

Tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.



Prohibited

Handset

WARNING

Do not use Mobile Light near people's faces.

Eyesight may be temporarily affected leading to accidents.





Prohibited

CAUTION:

Use of controls, adjustments or performance of procedure other than those specified herein may result in hazardous radiation exposure. As the emission level from Mobile Light LED used in this product is harmful to the eyes, do not attempt to disassemble the cabinet. Servicing is limited to qualified servicing station only.

EN60825-1:1994 A1:2002 & A2:2001

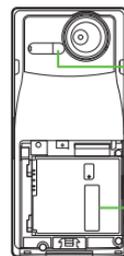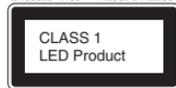

Mobile Light

CAUTION-CLASS 1M
LED RADIATION WHEN OPEN
DO NOT VIEW DIRECTLY WITH
OPTICAL INSTRUMENTS

■ Mobile Light LED Properties

- a) Emission Duration: Continuous
- b) Wavelength
White: 400 - 700 nm
- c) Maximum Emission Output
White: 200 μ W (1.2 mW inside handset)

Do not use handset while driving or cycling.

Accidents may result. Phone use while driving or cycling is prohibited by law and subject to a penalty; park in a legal parking space beforehand.



Prohibited

Turn handset power off near electronic devices that employ high precision control systems or weak signals.

May cause electronic malfunctions, etc. Be especially careful near the following devices: Hearing aids, implanted pacemakers/defibrillators and other electronic medical equipment; fire alarms, automatic doors and other automatic control devices.



Compulsory

Turn handset power off before boarding aircraft.

Cancel the setting that turns handset power on automatically (alarm, etc.) beforehand. Handset use may impair aircraft operation. Turning on handset power aboard aircraft is prohibited by law and subject to a penalty.



Compulsory

Users with a heart condition should adjust ringtone Vibration and Volume as needed.

May cause heart damage.



Compulsory

If thunder is heard while outdoors, turn power off; find cover.

There is a risk of lightning strike or electric shock.



Compulsory

Do not look into Infrared Port during infrared transmissions.

Eyesight may be affected.



Prohibited

Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently.

Handset may slip, resulting in injury or breakage.



Prohibited

**CAUTION****Do not use handset when it may affect a vehicle's electronic equipment.**

Handset use inside vehicles may cause electronic equipment to malfunction, resulting in accidents.



Compulsory

If you experience any skin irritation associated with handset use, discontinue handset use and consult a doctor.

Metal and other materials (P.15-18) may cause skin irritation, rashes, or itchiness depending on your physical condition.



Compulsory

Keep handset away from magnetic cards, etc.

Data on bank cards, credit cards, telephone cards, floppy disks, etc. may be lost.



Prohibited

Do not swing handset by strap.

May harm self or others; strap may break, resulting in injury or handset malfunction/breakage.



Prohibited

Handset may become hot while in use, especially at high temperature.

Prolonged contact with skin may cause burn injuries.



Compulsory

Always maintain some distance from Speakers while ringtones, music or other handset sounds play.

Excessive volume may damage ears or hearing.



Prohibited

Keep fingers, straps, etc. outside when opening/closing handset.

May cause injury, breakage, etc.



Compulsory

Watch TV from a distance in good light.

Watching in poor light or too close may affect eyesight.



Compulsory

Moderate handset volume when using Headphones.

Excessive volume may damage ears or hearing.



Compulsory

Charger (Sold Separately)

 **WARNING**

Do not charge battery on unstable surfaces.

Handset may fall and disconnect from Charger or malfunction, etc.



Prohibited

Do not cover/wrap Charger while charging.

Charger may overheat, resulting in fire, malfunction, etc.



Prohibited

Use only the specified voltage.

Non-specified voltages may cause fire, malfunction, etc.



Prohibited

- AC Charger (sold separately):

AC 100V-240V Input

- In-Car Charger (sold separately; use in negative earth vehicles only):

DC 12V/24V Input

Do not use power adapters. Using Charger with step-up/step-down transformer may cause fire, electric shock or malfunction.

Leave Charger unplugged during periods of disuse; grasp plug to disconnect it.

May cause electric shock, fire or malfunction.



Disconnect Power Source

Use only the specified fuse for In-Car Charger (sold separately).

Non-specified fuse may cause fire or malfunction. See In-Car Charger manual for details.



Compulsory

If liquids (water, pet urine, etc.) seep inside Charger, grasp plug and disconnect it immediately.

May cause electric shock, smoke or fire.



Disconnect Power Source

If plug is dusty, grasp it and disconnect Charger, then clean with a dry cloth.

Fire may result.



Compulsory

Do not use In-Car Charger (sold separately) in positive earth vehicles.

May cause fire, etc. Use in negative earth vehicles only.



Prohibited

Plug Charger firmly into the outlet, keeping the plug and Charger/Desktop Holder charging terminals away from conductive material (pencil lead, metallic strip, metal jewelry, etc.).

May cause electric shock, short circuit, fire, etc.



Compulsory

Do not touch Charger plug with wet hands.

May cause electric shock, malfunction, etc.



Do Not Use Wet Hands

Do not touch Charger if thunder is heard.

May cause electric shock, etc.



Prohibited

 **CAUTION**

Grasp plug and disconnect Charger before cleaning.

May cause electric shock, etc.



Disconnect Power Source

Always grasp plug (not cord) to disconnect Charger.

Pulling the plug by cord may damage cord, causing electric shock, fire, etc.



Compulsory

Do not subject AC Charger (sold separately) to strong shocks or impacts while it is plugged into the outlet.

May cause malfunction or injury.



Prohibited

Do not touch charging terminals of Desktop Holder (sold separately) while it is connected to the outlet.

May cause burn injuries.



Prohibited

Handset Use & Electronic Medical Equipment

This section is based on "**Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment**"

(Electromagnetic Compatibility Conference, April 1997) and "**Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc.**" (Association of Radio Industries and Businesses, March 2001).



WARNING

Persons with implanted pacemaker/defibrillator should keep handset more than 22 cm away.

Radio waves may interfere with implanted pacemakers or defibrillators.



Compulsory

If you intend to use electronic medical equipment other than implanted pacemaker/defibrillator outside medical facilities, consult the vendor on radio wave effects.

Radio waves may interfere with electronic medical equipment.



Compulsory

Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:



Compulsory

- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a handset.
- Keep handset off in hospitals; cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.
- Even in lobbies or other places where handset use is permitted, keep handset off near electronic medical equipment.
- Obey medical facility rules on mobile phone use.

Turn handset off in crowds or trains where persons with implanted pacemaker/defibrillator may be near; cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.



Compulsory

Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.

General Notes

General Use

- SoftBank is not liable for any damages resulting from accidental loss/alteration of files saved on handset/Memory Card. Keep separate copies of Phone Book entries, etc.
- Handset transmissions/TV signal reception may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- For proper use of Memory Card (sold separately), read the manual beforehand.
- **Beware of eavesdropping.**
Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.
Eavesdropping
Deliberate/accidental interception of communications constitutes eavesdropping.
- An export license may be required to carry the handset into other countries if it is to be used by or transferred to another person. However, no such license is required when you take the handset abroad for personal use on a vacation or business trip and then bring it back. Export control regulations in the United States provide that an export license granted by the US government is required to carry the handset into Cuba, Iran, North Korea, Sudan or Syria.

Handset & Hardware Care

- Handset is not water-proof. Avoid exposure to liquids and high humidity.
 - Keep handset away from precipitation.
 - Cold air from air conditioning, etc. may condense causing corrosion.
 - Avoid dropping handset in damp places (restroom, bath/shower room, etc.).
 - On the beach, keep handset away from water and direct sunlight.
 - Perspiration may seep inside handset causing malfunction.
- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.
- Use handset between 5°C - 35°C (35% - 85% humidity).
- Avoid extreme temperatures and direct sunlight.
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Battery may not charge properly if ports/terminals are obstructed by dust, etc. Clean with a dry cloth, cotton swab, etc.
- Clean handset with a dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Avoid scratching handset Display.
- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
 - Do not sit on handset in back pants pocket.
 - Do not place heavy objects on handset inside handbags, packs, etc.

- Connect only specified products to Headphone Port. Other devices may malfunction or cause damage.
- Always turn off handset before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.
- Do not remove Memory Card or turn off handset power while using the card; may result in data loss or malfunction.
- When walking outside, moderate handset volume to avoid accidents.
- Do not use Desktop Holder (sold separately) inside vehicles. Vibration may damage handset, etc.

Function Usage Limits

These functions are disabled after handset upgrade/replacement or service cancellation: Camera; Media Player; S! Applications; TV. After a period of disuse, these functions may be unusable; retrieve Network Information (P.14-6) to restore usability.

Mobile Camera

- Mind your manners when using handset camera.
- Test the camera before capturing/recording special moments.
- Do not use handset camera in places where photography or videography is prohibited.

Electromagnetic Waves

For body-worn operation, this phone has been tested and meets RF exposure guidelines when used with accessories containing no metal, that position handset a minimum of 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

CE Declaration of Conformity

CE 0168

Hereby, Sharp Telecommunications of Europe Ltd, declares that 932SH is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the original declaration of conformity for each model can be found at the following Internet address: <http://www.sharp.co.jp/k-tai/>

Battery - CAUTION

Use specified battery or Charger only.

Non-specified equipment use may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

Do not dispose of an exhausted battery with ordinary refuse; always tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.

Charge battery in ambient temperatures between 5°C and 35°C; outside this range, battery may leak/overheat and performance may deteriorate.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.^{*} Highest SAR value:

Model	At the Ear**	On the Body
932SH	1.665 W/kg	0.343 W/kg

As SAR is measured utilizing the device's highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the Network. The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a handsfree device to keep the mobile phone away from the head and body.

^{*}Please see Electromagnetic Waves on the left for important notes regarding body-worn operation.
^{**}Measured in accordance with international guidelines for testing.

FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.

3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

Highest SAR value:

Model	FCC ID	At the Ear	On the Body
932SH	APYHRO00092	0.350 W/kg	0.528 W/kg

This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found at <https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> under the Display Grant section after searching on the corresponding FCC ID (see table on the left). Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Website at <http://www.phonefacts.net>.

Rights, Trademarks & Patents

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use handset camera responsibly.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

The software contained in handset is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

Video recording and playback are based on **MPEG-4**. This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA.

See <http://www.mpegla.com>.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional license may be obtained from MPEG LA, LLC.

See <http://www.mpegla.com> for additional details.



Handset employs RSA® BSAFE™ software developed by RSA Security Inc.

RSA is a registered trademark of RSA Security Inc.
BSAFE is a registered trademark of RSA Security Inc. in the United States and/or other countries.

Safety Precautions

This product is equipped with JBlend™ designed to accelerate the performance of Java™ Application. Powered by JBlend™. Copyright 1997-2009 Aplix Corporation.

All rights reserved.

JBlend and JBlend-related brands are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

Java and Java-related brands are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



microSDHC™, microSD™ and miniSD™ are trademarks of the SD Card Association.

NetFront®

This product employs NetFront Browser (Internet browser) and NetFront SMIL Player developed by ACCESS Co., Ltd.

Copyright© 2009 ACCESS Co., Ltd.

ACCESS and NetFront are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan or other countries.

This product includes a module developed by Independent JPEG Group.

IrSimple™, IrSS™ and IrSimpleShot™ are trademarks of the Infrared Data Association®.

Bluetooth is a registered trademark of the Bluetooth SIG, Inc.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by SHARP is under license.

The frequency band utilized by handset Bluetooth® function is shared with industrial, scientific or medical equipment, including household microwave ovens, etc., and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

- 1 Before using Bluetooth®, visually confirm that no other radio stations sharing the same frequency band are in use nearby.
- 2 Should interference occur between handset and other radio stations, move or cancel Bluetooth® function immediately.
- 3 For additional information and support, contact us at the following number.

SoftBank Mobile Customer Center, General Information
From a SoftBank handset, call toll free at 157 for General Information.

From landlines, see **P.15-41** "Customer Service."

This radio station utilizes 2.4 GHz band with FHSS modulation. Maximum transmission radius is 10 meters (32 feet).

2.4FH1

Microsoft, PowerPoint and Excel are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Powered by Mascot Capsule®/Micro3D Edition™. Mascot Capsule is a registered trademark of HI Corporation.

©2002-2009 HI Corporation. All rights reserved.

FeliCa is a contactless IC card technology developed by Sony Corporation.

FeliCa is a registered trademark of Sony Corporation.

☞ is a registered trademark of FeliCa Network, Inc.

Osaifu-Keitai is a registered trademark of NTT DOCOMO, INC.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.



This product contains Adobe® Flash® Lite™ player software under license from Adobe Systems Incorporated.

Adobe Flash Lite Copyright © 2003-2007 Adobe Systems Incorporated. All rights reserved. Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and other countries.

Cycloid, Cycloid Style, TOUCH CRUISER, Slow Talk, Wakeup TV, VeilView and Smartlink are trademarks or registered trademarks of SHARP Corporation.



Document Viewer is enabled by Picstel Technologies. Picstel, Picstel Powered,

Picstel Viewer, Picstel File Viewer, Picstel Document Viewer, Picstel PDF Viewer and the Picstel cube logo are trademarks or registered trademarks of Picstel Technologies Ltd.

Chaku-Uta and Chaku-Uta Full are registered trademarks of Sony Music Entertainment (Japan) Inc.

BookSurfing® is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

Genius English-Japanese Dictionary ©2005-2008 Taishukan

Genius Japanese-English Dictionary ©2005-2008 Taishukan

Meikyo Japanese Dictionary ©2005-2008 Taishukan

- Wikipedia

GNU Free Documentation License

Wikipedia is a registered trademark of

Wikimedia Foundation, Inc. in the United States and/or other countries.

- Genius EJ-Dic MX.net ©KONISHI Tomoshichi, MINAMIDE Kosei & Taishukan, 2008

- Genius JE-Dic MX.net ©KONISHI Tomoshichi, MINAMIDE Kosei & Taishukan, 2008

- Meikyo J-Dic MX.net ©KITAHARA Yasuo & Taishukan, 2008

- Imidas Encyclopedia ©SHUEISHA Inc.

- Encyclopedia Nipponica, Digital Daijisen, PROGRESSIVE English-Japanese Dictionary, PROGRESSIVE Japanese-English Dictionary ©Shogakukan Inc.

- Hot Pepper Pockets is a registered trademark of Recruit Co., Ltd.

- Amazon.co.jp is a trademark of Amazon.com, Inc. or its affiliates.

FaceSolid® and FrameSolid® are registered trademarks of Morpho, Inc.

SOFTBANK, SoftBank and the SoftBank logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and other countries.

Yahoo! and the Yahoo! and Y! logos are trademarks or registered trademarks of Yahoo! Inc.

CP8 PATENT

Video Call, S! Application, Customized Screen, Sky Mail, Movie Sha-mail, Sha-mail, 3D Pictogram, Input Memory, Near Chat, Multi Job, S! Mail, Graphic Mail, Feeling Mail, S! Information Channel, S! Town, S! Loop, PC Site Browser, Weather Indicator, S! Quick News, S! Addressbook Back-up, S! Circle Talk, S! Friend's Status, Lifestyle-Appli, S! Familiar Usability, PC Mail, S! GPS Navi, Double Number, Decoration Call, Navi Appli, Secure Remote Lock and Mobile Widget are trademarks or registered trademarks of SOFTBANK MOBILE Corp.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

Specific Absorption Rate (SAR)

932SH meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg*. This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

All mobile phones, prior to product launch, must be certified as compliant with government requirements as stipulated by the Radio Law. 932SH has been granted Technical Regulations Conformity Certification by TELECOM ENGINEERING CENTER. Its highest SAR value is 0.459 W/kg. This value was obtained by TELECOM ENGINEERING CENTER as part of the certification process. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network.

Additional information on SAR can be obtained on the following Websites.

Ministry of Internal Affairs and Communications
<http://www.tele.soumu.go.jp/e/ele/index.htm>
Association of Radio Industries and Businesses (ARIB)
<http://www.arib-empf.org/initiation/sar.html> (Japanese)

*Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).


Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Charging Battery (AC Charger)	1-4
Charging Battery (In-Car Charger).....	1-5
Power On/Off	1-6
Handset Power On/Off.....	1-6
Display & Indicators	1-7
Display	1-7
Indicators	1-8
Accessing Functions	1-11
Shortcuts Menu & Key Shortcut	1-13
Toggling Active Functions (Multi Job)	
.....	1-14
Standby Shortcuts	1-15
Using Simplified Menus (Simple Menu)	
.....	1-16
Cycloid Position Setup.....	1-17

TOUCH CRUISER	1-18
Using TOUCH CRUISER	1-18
Motion Control	1-19
Mobile Manners	1-21
Security Codes	1-22
Basic Tools	1-23
My Details & Basic Tools	1-23
Double Number	1-25
Using Double Number.....	1-25
Modes.....	1-26
Additional Functions	1-28
Troubleshooting	1-31

1

Getting Started

Parts & Functions

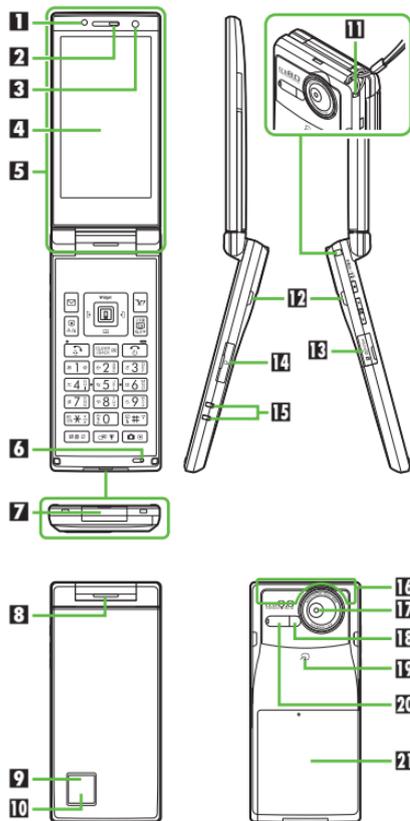

- 1** Light Sensor
- 2** Earpiece
- 3** Internal Camera
- 4** Display
- 5** TV Antenna Location
- 6** Microphone
- 7** External Device Port (with Port Cover)
- 8** Center Speaker
- 9** Small Light
- 10** External Display
- 11** Strap Eyelet
- 12** Stereo Speakers
- 13** Memory Card Slot (with Slot Cover)
- 14** Headphone Port (with Port Cover)
- 15** Charging Terminals
- 16** Internal Antenna Location
- 17** External Camera (lens cover)
- 18** Mobile Light
- 19** Logo
- 20** Infrared Port
- 21** Battery Cover

- Do not cover or place stickers, etc. over Light Sensor or Internal Antenna area.
- Replace Port/Slot Cover after Port/Slot use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Display Positions

Closed Position



Keep handset closed when not in use.

Portrait Position



Open handset to place or answer calls, enter text, etc.

Cycloid Position


Open handset and rotate Display 90 degrees clockwise.



Do not forcefully rotate Display; damage may result.

Handset Keys

Keys are indicated in this guide as shown.

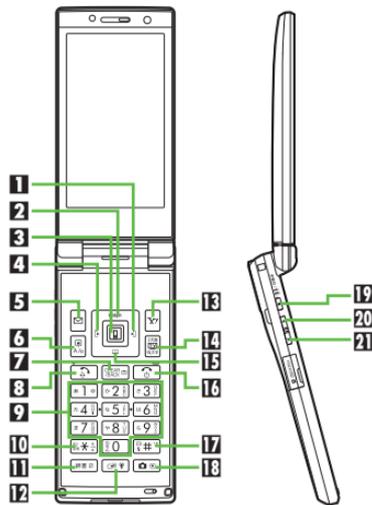**1 Multi Selector (right)**

Open Received Calls. Long Press to activate/cancel infrared.

2 Multi Selector (up)

Open Mobile Widget window. Long Press to open PC Site Browser menu.

3 Center Key & **TOUCH CRUISER**

Open Main Menu. Long Press to activate/cancel Keypad Lock.

4 Multi Selector (left)

Open Dialed Numbers. Long Press to activate/cancel Bluetooth®.

5 Mail Key

Open Messaging menu. Long Press to open S! Mail Composition window.

6 Shortcuts & A/a Key

Open Shortcuts menu. Long Press to show active indicators (Status Icon List).

7 Clear/Back Key

Play Answer Phone messages. Long Press to activate/cancel Answer Phone.

8 Start Key

Open All Calls. Long Press to open Double Number Mode menu.

9 Keypad

Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.

10 * Key

Enter *, +, P, ? and -. Long Press to open S! Friend's Status member list.

11 Dictionary Key

Open Dictionary. Long Press to activate VeilView.

12 Multi Job & Manner Key

Select handset mode. Long Press to activate/cancel Manner mode.

13 Yahoo! Keitai Key

Open Yahoo! Keitai portal. Long Press to activate Familink Remote.

14 TV & Text Key

Activate TV. Long Press to open Change Menu window.

15 Multi Selector (down)

Open Phone Book. Long Press to create new Phone Book entries.

16 Power On/Off Key

Toggle Standby display. Long Press to turn handset power off.

17 # Key

Enter #. Long Press to activate/cancel Manner mode.

18 Camera Key

Activate mobile camera. Long press to activate Review.

Side Keys

19 S! Circle Talk & Pedometer Key

Portrait: Open S! Circle Talk member list. Long Press to open Pedometer menu.
Closed: Toggle Clock view. Long Press to illuminate Mobile Light.

20 Volume Up Key

Closed: Scroll External Display indicators. Long Press to check e-money balance.

21 Volume Down Key

Long Press to start Simulated Call.
Closed: Scroll External Display indicators.

Multi Selector & Side Keys

- In this guide, Multi Selector and Side Key operations are indicated as follows:


Press or	
Press or	
Press , , or	
Press or	

1 Getting Started Charging Battery (AC Charger)

Getting Started

Battery must be inserted in handset to charge it.


- Use specified AC Charger ZTDAA1 (sold separately) only. In this guide, ZTDAA1 is referred to as "AC Charger."
- Handset and AC Charger may warm during charging.

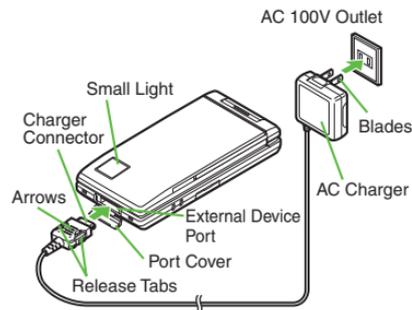

Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.


1 Open Port Cover as shown

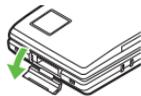

2 Connect AC Charger

- With arrows up, insert connector until it clicks.

3 Extend blades and plug AC Charger into AC outlet

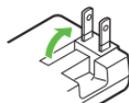

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

4 Unplug AC Charger



- Pull AC Charger straight out.

5 Disconnect handset

- Squeeze release tabs to remove connector.

6 Fold back blades and replace Port Cover

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

USB Charge

- Connect handset (with power on) to PC via USB Cable to charge battery.

Charging Battery Overseas

- SoftBank is not liable for problems resulting from charging battery abroad.


Advanced

- Disabling USB Charge (P.1-28)

Charging Battery (In-Car Charger)

In-Car Charger may be purchased separately.

Cigarette Lighter Socket

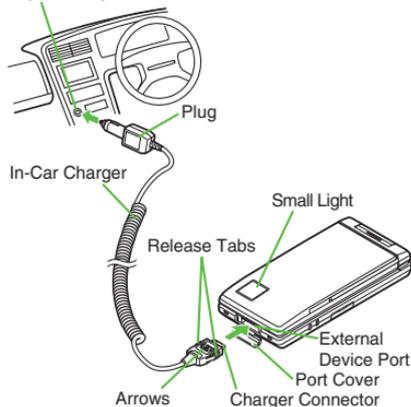

1 Open Port Cover as shown



2 Connect In-Car Charger

- With arrows up, insert connector until it clicks.

3 Plug Charger into cigarette lighter socket

4 Start car engine

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

5 Unplug Charger

6 Disconnect handset

- Squeeze release tabs to remove connector.

7 Replace Port Cover

Important In-Car Charger Usage Notes


- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

Display

Standby



- Indicators (signal strength, battery strength, etc.) appear.
- Information window opens at the bottom for Missed Calls, new mail, etc.

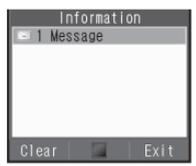

Information Window

- Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press **■** to open it.

Softkeys

Functions/operations assigned to **☰**, **■** and **☺** appear at the bottom.



Display Saving

- Display goes dark after Display Saving time elapses. Press any key to activate it.
- Backlight**
- Backlight turns off after Time Out time elapses. Press **[F0]** - **[F9]** to illuminate it (key press may affect active function).

Advanced

- ☞ Handling Information list (P.1-28)

Indicators

Display Indicators

, and indicate line type in Dual Mode (P.1-25).

Basic Status



1		International roaming in progress
2		Signal strength ¹
3		Packet transmission protocol ready (3G)
		Packet transmission protocol ready (GSM)
		Packet transmission available (3G)
4		Packet transmission available (GSM)
		Battery strength (% ² appears in turn)
5		IP Service enabled ³


¹The more bars the better.

²Battery strength % is an approximation.

³Appears when Decoration Call, S! Appli communication or Mobile Widget is enabled.


accompanies even if packet transmission is not in progress. Both indicators disappear when Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are **Off**.

Function Status

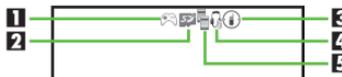

1		Active S! Application
		Paused S! Application
		Music playback in progress
		TV recording in progress (handset)
		TV recording in progress (Memory Card)
2		Memory Card in use
		Memory Card formatting
3		TV Timer/TV Recording Timer set
		Compass Indicator
4		Music playback in progress (via Bluetooth [®])
5		Multiple functions (Multi Job) active

Notifications

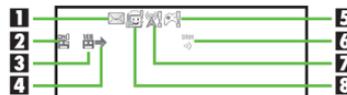


1		Unread mail
		Unread Delivery Report
2		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
3		New Voicemail
4		Missed Call or new mail on idle line
5		S! Appli/Mobile Widget Notification
6		Contents Key received
7		Software Update result
		Unread S! Quick News info
8		Unread S! Friend's Status notification or unanswered registration request

Warnings



1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/misinserted


■ Transmissions

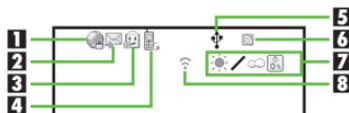

1	SSL browsing in progress ¹
2	Waiting packet transmission (3G)
	Waiting packet transmission (GSM)
3	Receiving mail
	Sending mail
4	S! Friend's Status online
	Positioning in progress ²
5	Software Update in progress
	USB Cable connected
	USB transmission in progress
	Infrared transmission in progress
	Infrared file transfer in progress
	Bluetooth® transmission ready
	Bluetooth® transmission in progress (appears for multiple connections)
	Bluetooth® talk in progress
	S! Addressbook Back-up transmission in progress
	PC Site Browser in use
6	RSS-compatible site
7	Weather Indicator
8	Infrared transmission ready

¹Hidden while Mobile Widget is in use.²Flashes while positioning.

■ Settings

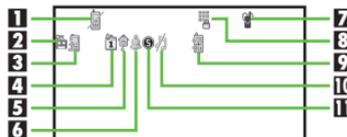

1	Offline Mode active
2	Answer Phone active
3	Call Forwarding or Voicemail active (forwarding condition: Always) [*]
4	Schedule/Task (Alarm set)
	Schedule/Task (Alarm unset)
5	Hour Minder active
6	Alarm set
	Wakeup TV set
7	Manner mode active
	Drive mode active
	Original mode active
	VeilView active
8	Keypad Lock active
	IC Card Lock active
9	Auto Answer or Remote Monitor active
10	Ringtone (Silent)
	Ringtone (Increasing Volume)
	Vibration active
11	Show Secret Data active
	Function Lock active

^{*}Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

External Display Indicators


Basic Status



1		Signal strength*
2		Battery strength

*The more bars the better.

Notifications

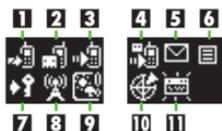


1		Missed Calls
2		Answer Phone message recorded
3		Missed Call Notification
4		New Voicemail
5		New mail
6		New Delivery Report
7		Contents Key received
8		Unread S! Information Channel info
9		Weather Indicator update
10		Location Info request
11		Pedometer target achieved

Warnings



1		Message delivery failure
2		S! Information Channel info reception failure
3		Decoration Call transmission failure
4		IP Service connection failure
5		Weather Indicator update failure

Handset Status

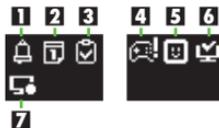

1		Alarm
2		Schedule Alarm
3		Task Alarm
4		S! Appli/Mobile Widget Notification
5		Unread S! Friend's Status notification
6		TV Alarm (watch)
7		TV Alarm (record)

External Display Date & Time

• Press to toggle Clock view.


Accessing Functions

Use the following methods as needed.

Main Menu



Repeat menu item selection.

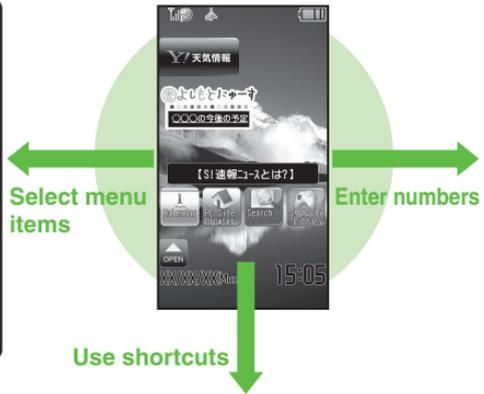


Select menu items

Enter numbers

Use shortcuts

Quick Operations

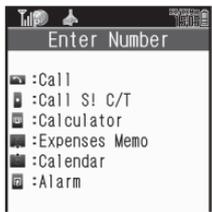

Enter numbers to access functions. To activate functions, press the corresponding key.

■ Shortcuts




Access assigned functions (changeable).

■ Standby Shortcuts



Save functions to Standby.

■ Quick Shortcut

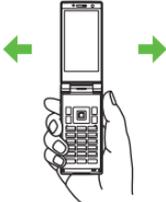


Shake handset to access assigned functions. (Complete setup beforehand.)

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.

Main Menu

1

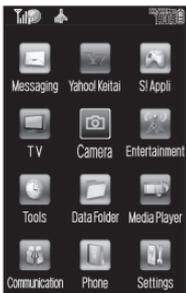

- Main Menu opens.


2 Use to select menu item



- Menu/window opens.
- If Sub Menu opens, use to select an item and press .

Tabs

- Menus/lists in a single window appear in separate tabs; use to toggle tabs.

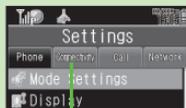

Tab

Reverse Navigation

- Press . If a confirmation appears, follow onscreen prompts.

Returning to Standby

- Press . If a confirmation appears, follow onscreen prompts.

Simple Menu

- Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

Main Menu Items

Messaging	Open/create messages, etc.
Yahoo! Keitai	Browse the Internet
S! Appli	Use S! Applications including games
TV	Watch/record TV programs
Camera	Capture images or record video
Entertainment	Read e-Books, receive news updates, etc.
Tools	Manage schedules, set Alarm, scan QR Codes, etc.
Data Folder	Open files saved on handset/Memory Card
Media Player	Play/download media files
Communication	Communicate with other users in various ways
Phone	Search contacts, add entries, etc.
Settings	Customize handset interface, sounds, etc.

Shortcuts Menu & Key Shortcut

Shortcuts Menu

Access assigned functions via Shortcuts menu.

1 



Shortcuts Menu

2 **Select function**  

- Menu/window opens.

Changing Default Shortcuts

In 2, select numbered function  
 **Assign Function**    **Select menu item**    **Select new item**  

- To assign menu items, select one and press .

Assigning Files & Folders

In 2, select numbered function  
 **Assign Data**    **Select file/folder**  

- For folders, select **Set this folder** and press .

Key Shortcut

Long Press ,  or  to access assigned functions.

	Open S! Mail Composition window
	Activate Familink Remote
	Open PC Site Browser menu
	Create new Phone Book entries
	Activate/cancel Bluetooth®
	Activate/cancel Infrared

Changing Assigned Functions

Follow these steps to assign Calculator to .

1   **Settings**  

2 **In Phone menu, Set Key Shortcut**  



Key Shortcut Menu

3 **Long press**   



4 **From Appli**  

5 **Tools**    **In PIM/Life menu, Calculator**  

Bookmark

In 4, **From Bookmark**  

Select title    **Yes**  

Bluetooth® or Infrared On/Off

In 4, **From Other**    **Select item**  

Canceling Assigned Function

In 4, **Off**  

Advanced

  Changing item order  Restoring default shortcuts (P.1-28)


1 Getting Started

Toggling Active Functions (Multi Job)

Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet

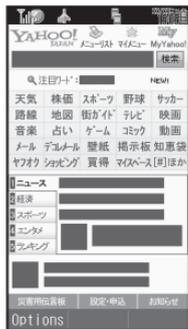

① Open Scratch Pad

② Toggle windows



Jot down information

Multi Job may not activate from some menus/windows (e.g., ringtone/ringvideo selection, etc.). Multi Job is disabled while  (gold) appears.

Using Multi Job

① In a function window,  In text entry/dial windows, Long Press .



② Select function 



• Menu/window opens.

③ To toggle active windows, 



④  Multi Job ends

- If a confirmation appears, follow onscreen prompts.

Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

Saving Shortcuts to Standby

- 
 - Pointer (↔) appears.
-  Use  to select  (OPEN)


 - Press  to toggle selection.
 - Alternatively, use  to point to  (OPEN) and press .
-  
 - Press  to toggle selection.
 - Alternatively, use  to point to  (OPEN) and press .
-  **Select item** 
 - Corresponding icon appears in Standby.
 - >> appears when more items are available.

5 Use to specify target location

Saving from Menu/Window

- In Options menu, select **Set as StbyShortcut** (may not appear for some items); select sheet as needed.

Removing Shortcuts from Standby

-  Use  to select icon 
 - **Operation**   **Remove**   **Yes** 

Moving Icons

-  Use  to select icon 
 - **Operation**   **Change Layout**   **Specify target location** 

Moving Icons to Front/Back

-  Use  to select icon 
 - **Operation**   **To Front or To Back** 

Using Shortcuts

-   Use  to select icon 
 - Menu/window opens or command is executed.

3 Toggling Sheets

Toggle sheets to use Standby shortcuts and widgets pasted on each sheet.

-   **(Long)**



- To toggle further, Long Press  or press  repeatedly.
- Sheet name appears at the top, then disappears.
- Save Standby shortcuts as needed; corresponding icons appear on the current sheet.

Using Locked Sheets

-    **Enter Handset Code** 

Advanced


-  Reversing icon selection order with 
-  Editing sheet names
-  Locking sheets (P.1-28)

1 Using Simplified Menu (Simple Menu)

Getting Started

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.

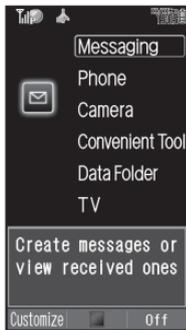

- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).
- Motion Control and TOUCH CRUISER are unavailable.


Menu Items

Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Play Messages, Answer Phone, Call VM, My Details, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Scan Barcode, Scan Card, Scan Text, Review, Camera Settings, Video Settings, SetCameraKey
Convenient Tool	Calendar, Alarms, Calculator, Assignment, Dictionary, Notepad, S! GPS Navi, Pedometer, Compass, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
Data Folder	-
TV	-

Key assignments are largely the same as in Standard Menu.

Activating Simple Menu

1 (Long)

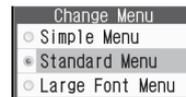

2 **Simple Menu** →

3 **Select Talk Mode** → →

4 **Select Voice Clear option** → →

While Using an Incompatible Function

- End the function before activating Simple Menu.

Canceling Simple Menu

(Long) → **Standard Menu** →

Talk Mode & Voice Clear

Improve Earpiece sound quality.

Talk Mode

Slow Talk	Reduce Earpiece noise and improve voice audibility
Noise Reduction	Reduce Earpiece noise

Voice Clear

Boost high frequencies to improve the audibility of other party's voice.

Cycloid Position Setup

Set handset to automatically execute one of these actions upon Display rotation:

Activate Digital TV	Activate TV
Show TV Menu	Access TV functions
Show AV Menu	Activate mobile camera or access S! Applications, images and media files
Show Internet Menu	Open Bookmarks/ received messages or activate PC Site Browser/ Document Viewer
Show Main Menu	Open Main Menu
Launch Appli	Access assigned function
Connect Bookmark	Access saved URL
Off(Standby)	Keep Standby

Upon first rotation, setup menu opens.

1 Rotate Display (first time)



Landscape Menu

2 Select item →

- Setting is applied and Landscape setup option confirmation appears.

3 Yes or No →

- Selection appears.

Launch Appli or Connect Bookmark

- Handset accesses the assigned function or URL; change function/URL as needed.

Changing Applied Setting

When **SetRotation** Softkey appears in Cycloid Position menus, etc., press  to change setting.



1

- Landscape menu opens.

2 Select item →

From Standby


- **Settings** → → **In Phone menu, Display Rotation** → → **Rotate 90° to** → → **Rotate 90° to** → → **Select item** →

Advanced

-  ● Changing function assigned to Launch Appli in landscape menu ● Changing URL assigned to Connect Bookmark in landscape menu (P.1-28)

Using TOUCH CRUISER

Slide finger over Center Key to move cursor, pointer, etc. (Not available for Calculator or some other functions.)

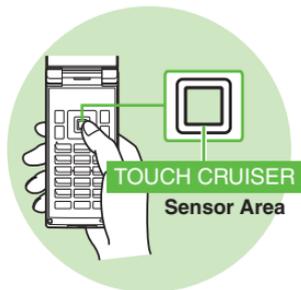


Activating TOUCH CRUISER

Touch Center Key until cursor, pointer, etc. moves. (TOUCH CRUISER activates.)

When finger is released, TOUCH CRUISER deactivates after a period of inactivity.

Selection & Execution

Cursor, pointer, etc. moves multi-directionally according to finger movement; select item. Press Center Key to execute selection.

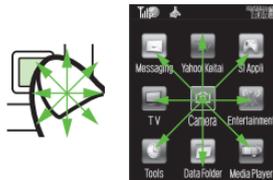

Important TOUCH CRUISER Usage Notes

- Do not use a pen or other sharp object.
- Do not use with gloved fingers.
- Do not place stickers, etc. over Center Key.
- Clean with a dry, soft cloth.
- Performance may be affected by direct sunlight; use Multi Selector.

Advanced


- Disabling TOUCH CRUISER
- Changing activation timing/method
- Changing inactivity time limit
- Changing cursor speed (P.1-29)

Motion Control

Sensor detects handset orientation or movement. Move handset to navigate pages, access functions, etc.

- Cancel Keypad Lock and activate Display first.
- Adjust Motion Control sensor (**P.1-29**) before using Motion Control for the first time.
- Activate Motion Control by function beforehand.

Turn Over

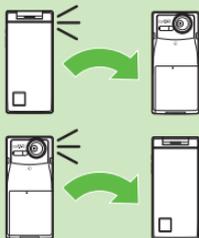

Activate Quick Silent

Turn handset over to instantly mute ringer and stop vibration.

Ringer

Incoming Calls,
Alarms, etc.

Vibration

Incoming Calls,
Alarms, etc.

- Some tones may not be silenced.

Quick Shortcut

Shake handset left and right approximately three times in Standby to access assigned functions.

- Change assigned functions as needed.

Activate Camera

Portrait
Position

Activate TV

Cycloid
Position

Shake Left/Right



Navigate Functions

Shake to the left to navigate back, or right to navigate forward.

Music

Music Player

Channels

TV

Images

Data Folder
(Pictures)

Pages

Document
Viewer

Multi Job

Shake to the left or right to toggle active windows

Toggle Windows

Multi Job

Shake Forward or Backward



Zoom In/Zoom Out

Shake forward to enlarge, or backward to reduce.

Fonts

Yahoo! Keitai
Message Window

Zoom Image

Data Folder
(Pictures)

Zoom Page

PC Site Browser
Document Viewer

Toggling Motion Control On/Off

1 → **Settings** →

2 In Phone menu, **Motion Control** →



Motion Control Menu

3 **Action Settings** →

4 **Select function** →

5 **On or Off** →

Enabling Quick Shortcut

1 In Motion Control menu, **Quick Shortcut** →

2 **Switch On/Off** →

3 **On** →

Activating Show Secret Data Temporarily
Enter Handset Code → Shake
handset left or right

- Close handset in Standby to cancel Show Secret Data.

Important Motion Control Usage Notes

- Hold/shake handset correctly to avoid unintended results.
- Motion Control may be unavailable while handset is ringing/vibrating.
- Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently to avoid injury/breakage. Do not shake handset roughly; handset may slip, resulting in injury or damage.

Advanced

- Changing Quick Shortcut items
 Practicing Motion Control actions
 Adjusting Motion Control sensor (P.1-29)

Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.

1  (Long)



- Manner mode is set.

When Manner Mode is Active

- Ringtones and other sounds are muted.
- 932SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.

Canceling Manner Mode

 (Long)

Offline Mode


Temporarily suspends all transmissions.

1   **Settings**  

Network

2 **Offline Mode** 

3 **On** 

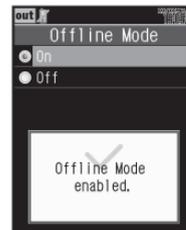

- Offline Mode is set.

Canceling Offline Mode

In , **Off** 

Advanced

-   Changing handset modes  Creating a custom mode  Resetting Mode Settings (P.1-29)

Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank is not liable for misuse or damages.

Handset Code	9999 by default; use or change some functions
Center Access Code	4-digit code selected at contract; access Optional Services via landlines or change contract details
Network Password*	4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring)

*Change as needed.

Incorrect Code Entry

- **Handset code is incorrect!** appears; try again.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.

Changing Handset Code


Enter four to eight digits for new Handset Code.

1 **Settings**



Phone Menu

2 **Locks**

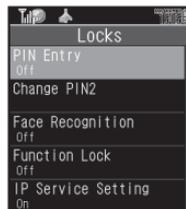

3 **Chg. Handset Code**



4 **Enter current Handset Code**




5 **Enter new Handset Code**



6 **Re-enter new Handset Code**

My Details & Basic Tools

My Number

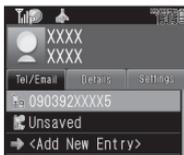

- Handset phone number and the name entered at initial setup appear.

Editing My Details

After 1, (select tab) ➔ Select item
➔ ➔ Select item ➔ ➔ Edit ➔

VeilView

Activate VeilView to prevent peeping.



Canceling VeilView

(Long)

Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
- does not turn off handset power.

Incoming Calls while Keypad Lock is Active

- Keypad Lock is temporarily canceled; press to answer calls. Keypad Lock reactivates after the call.

Canceling Keypad Lock

(Long)

Pen Light



- Mobile Light illuminates.



Important Pen Light Usage Note

- Do not point Pen Light at people or look at it directly.

Battery Meter



- Approximate battery strength appears.

Changing Battery Strength Indicator Pattern

After 2, ➔ **Select pattern** ➔

- Remaining time is approximated for current handset usage pattern.

Phone Help

Access this handy guide to handset settings and key functions/shortcuts.



- For **Indicators**, select category and press .

Advanced

- Clearing My Details ● Toggling My Details in Dual Mode ● Changing battery strength indicator pattern ● Changing VeilView pattern/density (P.1-30)

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)

1 (Long)



- Active indicators are enlarged; description for selected indicator appears.
- Use  to select indicators to view their descriptions.
- Press  to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

S! Town (Japanese)

Select an avatar to enter this 3D virtual town, where you can play games and meet other users.

- To use S! Town, agree to the terms of service then complete free user registration.
- Internet connection is required; may incur high charges.

1 ➔ **Communication** ➔

2 **S! Town** ➔

- S! Town (S! Application) starts.
- Refer to the S! Town help menu for operational instructions.
- If an upgrade notice appears, follow onscreen instructions to upgrade.

S! Town Library

- Downloaded S! Town-compatible S! Applications are saved to S! Town Library. To start an application in S! Town Library, follow these steps:

 ➔ **Communication** ➔  ➔

S! Town ➔  ➔ **Select application**

➔ 

S! Loop (Japanese)

S! Loop is an online communication service. Share your diary, join BBS, etc. Internet connection is required; may incur high charges.

1 ➔ **Communication** ➔

2 **S! Loop** ➔


- Refer to the S! Loop help menu for operational instructions.

Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- While abroad, any Line B messaging charges are applied to Line A.
- For more information, see SOFTBANK MOBILE Corp. Website (P.15-23).

Two Phone Numbers & Two Mail Addresses

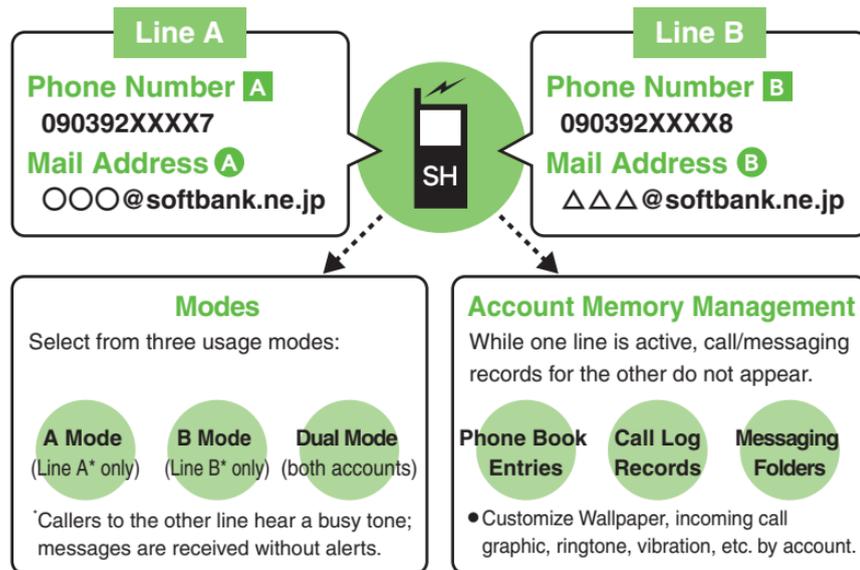

Activating Double Number

Make sure signal is stable.

- 1 → **Settings** →
- 2 In Phone menu, **Double Number** →
- 3 **Switch On/Off** →
- 4 **On** →
- 5 **Enter Handset Code** →
→ **Yes** →

Canceling Double Number

- In **4**, **Off** → → **5**
- When Double Number is canceled:
 - Line B calls and SMS messages are redirected to Line A Phone Number.
 - Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
 - Double Number account is not affected.

Modes

Activate **A Mode** to use Line A only, **B Mode** to use Line B only, or **Dual Mode** to use both accounts.

A Mode

Receive Calls to Line A Only

- Place calls or send messages via Line A.

A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

B Mode

Receive Calls to Line B Only

- Place calls or send messages via Line B.

B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status, S! Circle Talk and Decoration Call are unavailable.

Advanced

- Omitting Handset Code entry when switching modes
- Renaming Double Number modes
- Showing indicator for calls missed or new mail on idle line
- Hiding Internet connection confirmation (P.1-30)

Dual Mode

Receive Calls to Both Accounts

- Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

Phone Book Entries

Specify A, B or Dual.

Messaging

Select Line A or Line B.
Sender Address changes accordingly.

Calling

Select Line A or Line B.
Caller ID changes accordingly.

-  **B** and  indicate line type in Phone Book entries, message lists, Call Log records, etc.

Switching Modes

-   (Long)
- Enter Handset Code → 
- Select mode → 
 - For *B Mode* confirmation appears.
- Yes → 

Saving Modes to Phone Book Entries

-  → *Phone* →  → *Add New Entry* → 
- Mode:* →  → *Select mode* → 

Entries Saved with Double Number Off

- Dual* is set automatically.

Advanced

-   Rejecting calls to either line in Dual Mode
-  Setting main line for Dual Mode (P.1-30)

USB Charge	
Disabling USB Charge	<ul style="list-style-type: none"> ▣ → <i>Settings</i> → ▣ → <i>Connectivity</i> → <i>USB Charge</i> → ▣ → <i>Disable</i> → ▣
Information	
Handling Information list	<ul style="list-style-type: none"> Start Here ▣ → <i>Phone</i> → ▣ → See below
	<ul style="list-style-type: none"> Opening List Manually <i>Information</i> → ▣
	<ul style="list-style-type: none"> Clearing List <i>Information</i> → ▣ → <i>Yes</i> → ▣
Shortcuts	
Changing item order	<ul style="list-style-type: none"> ▣ → Select numbered function → ▣ → <i>Move</i> → ▣ → Select target location → ▣
Restoring default shortcuts	<ul style="list-style-type: none"> ▣ → Select numbered function → ▣ → <i>Set to Default</i> → ▣ → <i>Yes</i> → ▣
Standby Shortcut (Sheets)	
Reversing icon selection order with	<ul style="list-style-type: none"> ▣ → <i>Move Focus(Reverse)</i> → ▣ • To cancel, select <i>Move Focus(Order)</i>.
Editing sheet names	<ul style="list-style-type: none"> Start Here ▣ → <i>Sheet Settings</i> → ▣ → <i>Change Sheet Name</i> → ▣ → See below
	<ul style="list-style-type: none"> Renaming Select sheet → ▣ → Enter name → ▣
	<ul style="list-style-type: none"> Resetting All Sheet Names ▣ → <i>Yes</i> → ▣

Locking sheets	<ul style="list-style-type: none"> Start Here ▣ → <i>Sheet Settings</i> → ▣ → <i>Set Sheet Lock</i> → ▣ → Enter Handset Code → ▣ → See below
	<ul style="list-style-type: none"> Activating Lock Select sheet → ▣ → <i>On</i> → ▣
	<ul style="list-style-type: none"> Changing Method for Temporary Access <i>Unlock Method</i> → ▣ → <i>No Password</i> → ▣ • Press , then select and press to unlock sheet temporarily.
Cycloid Position	
Changing function assigned to <i>Launch Appli</i> in landscape menu	<ul style="list-style-type: none"> ▣ → <i>Settings</i> → ▣ → In Phone menu, <i>Display Rotation</i> → ▣ → <i>Rotate 90° to</i> → ▣ → <i>Set Appli</i> → ▣ → Select menu item → ▣ → Select new item → ▣
Changing URL assigned to <i>Connect Bookmark</i> in landscape menu	<ul style="list-style-type: none"> ▣ → <i>Settings</i> → ▣ → In Phone menu, <i>Display Rotation</i> → ▣ → <i>Rotate 90° to</i> → ▣ → <i>Set Bookmark</i> → ▣ → Select Bookmark entry → ▣ → <i>Yes</i> → ▣

TOUCH CRUISER	
Disabling TOUCH CRUISER	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, TOUCH CRUISER ➔ ■ ➔ Switch On/Off ➔ ■ ➔ Off ➔ ■
Changing activation timing/method	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, TOUCH CRUISER ➔ ■ ➔ Cursor Trigger ➔ ■ ➔ Select option ➔ ■
Changing inactivity time limit	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, TOUCH CRUISER ➔ ■ ➔ Cursor Sustained ➔ ■ ➔ Select time ➔ ■
Changing cursor speed	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, TOUCH CRUISER ➔ ■ ➔ Cursor Speed ➔ ■ ➔ Select speed ➔ ■
Motion Control	
Changing Quick Shortcut items	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, Motion Control ➔ ■ ➔ Quick Shortcut ➔ ■ ➔ Shortcut Entry ➔ ■ ➔ Open Position or Cycloid Position ➔ ■ ➔ Select menu item ➔ ■ ➔ Select new item ➔ ■
Practicing Motion Control actions	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, Motion Control ➔ ■ ➔ Action Test ➔ ■ ➔ Select item ➔ ■ ● Follow onscreen instructions.

Adjusting Motion Control sensor	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, Motion Control ➔ ■ ➔ Adjust Sensor ➔ ■ ● Follow onscreen instructions. ● Avoid adjusting sensor near metal/magnetic objects or aboard trains or in vehicles.
Mode	
Changing handset modes	<ul style="list-style-type: none"> Start Here ■ ➔ Settings ➔ ■ ➔ In Phone menu, Mode Settings ➔ ■ ➔ See below Selecting a Handset Mode Select mode ➔ ■ Customizing Handset Modes Select mode ➔ [OK] ➔ Select item ➔ ■ ➔ Adjust settings ● Not available for Normal mode.
Creating a custom mode	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, Mode Settings ➔ ■ ➔ Original ➔ [OK] ➔ Select item ➔ ■ ➔ Adjust settings
Resetting Mode Settings	<ul style="list-style-type: none"> ■ ➔ Settings ➔ ■ ➔ In Phone menu, Mode Settings ➔ ■ ➔ Select mode ➔ [V] ➔ Enter Handset Code ➔ ■ ➔ Yes ➔ ■

My Details

Clearing My Details	<ul style="list-style-type: none"> ■ → F0 → Reset My Details → ■ → Yes → ■
Toggling My Details in Dual Mode	<ul style="list-style-type: none"> ■ → F0 → Switch to B or Switch to A → ■

Battery Meter

Changing battery strength indicator pattern	<ul style="list-style-type: none"> ■ → Settings → ■ → In Phone menu, Display → ■ → Mini Battery → ■ → Select pattern → ■ <ul style="list-style-type: none"> • For patterns other than Clock & Battery, indicators appear in turn. To change interval, press ☰. • For Battery level (or Level), approximate battery strength appears as a percentage. • Remaining time is approximated for current handset usage pattern. <ul style="list-style-type: none"> ■ Remaining time is hidden while charging.
---	---

VeilView

Changing VeilView pattern/density	<ul style="list-style-type: none"> Start Here ■ → Settings → ■ → In Phone menu, Display → ■ → VeilView → ■ → See below
	Pattern Pattern Setting → ■ → Select pattern → ■ → Select scale or Animation → ■
	Density Density Setting → ■ → Select density → ■

Double Number

All Modes

Omitting Handset Code entry when switching modes	<ul style="list-style-type: none"> ■ → Settings → ■ → In Phone menu, Double Number → ■ → Password Entry → ■ → Off → ■ → Enter Handset Code → ■
Renaming Double Number modes	<ul style="list-style-type: none"> ■ → Settings → ■ → In Phone menu, Double Number → ■ → Mode Name → ■ → Select mode → ■ → Enter name → ■ → Select icon → ■

A Mode & B Mode

Showing indicator for calls missed or new mail on idle line	<ul style="list-style-type: none"> ■ → Settings → ■ → In Phone menu, Double Number → ■ → Show Missed → ■ → On → ■
Hiding Internet connection confirmation	<ul style="list-style-type: none"> ■ → Settings → ■ → In Phone menu, Double Number → ■ → Packet Warning → ■ → Off → ■ <ul style="list-style-type: none"> • Available for B Mode.

Dual Mode

Rejecting calls to either line in Dual Mode	<ul style="list-style-type: none"> ■ → Settings → ■ → In Phone menu, Double Number → ■ → Reject By Line → ■ → Select line → ■ → On → ■
Setting main line for Dual Mode	<ul style="list-style-type: none"> ■ → Settings → ■ → In Phone menu, Double Number → ■ → Send Priority → ■ → Select option → ■

Battery Meter



--- appears

- Calculating time; not a malfunction.



100% does not appear

- This is by design; not a malfunction.



Battery runs out faster

- A low ambient temperature reduces battery time.
- An older battery may run out faster.



Remaining time changes suddenly

- Time estimated by handset status; estimate may take time to appear.

TOUCH CRUISER



TOUCH CRUISER does not activate (or activates too quickly)

- Adjust activation response; see P.1-29 "Changing activation timing/method."



TOUCH CRUISER deactivates too quickly or too slowly

- Adjust active time; see P.1-29 "Changing inactivity time limit."



Cursor moves too fast or too slowly

- Adjust cursor response; see P.1-29 "Changing cursor speed."

Font Size	2-2
Changing Font Size	2-2
Wallpaper	2-3
Customized Screen & S! Familiar	
Usability	2-4
Customized Screen & S! Familiar	
Usability (Japanese)	2-4
Sounds & Alerts	2-5
Customizing Handset Responses ...	2-5
Text Entry	2-6
Entering Characters	2-7
Editing Characters	2-10

User Dictionary	2-11
Saving Frequently Used Words	2-11
Dictionary	2-12
Using Dictionaries	2-12
Search	2-14
Searching Text	2-14
Scratch Pad	2-15
Phone Book	2-16
Creating Phone Book Entries	2-16
Using Phone Book Entries	2-18
Additional Functions	2-19
Troubleshooting	2-24

2

Basic Operations




Changing Font Size

Enlarging All Fonts

Activate Large Font Menu to enlarge fonts for menus, text entry, etc. as follows:



1 (Long)

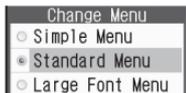

2 **Large Font Menu** →

Canceling Large Font Menu

In 2, **Standard Menu** →


Customizing Font Sizes

1 → **Settings** →



2 In Phone menu, **Display** →

3 **Font Settings** →

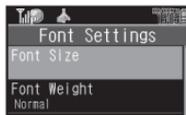

Font Settings Menu

4 **Font Size** → → **Select item** →

5 **Select size** →

Changing Font Weight

1 In Font Settings menu, **Font Weight** →



2 **Select weight** →



Wallpaper

- 1 → **Settings** → → In Phone menu, **Display** →
- 2 **Wallpaper** → → **Vertical** or **Horizontal** →



Wallpaper Menu

- 3 **Select folder** →
- 4 **Select image** →
 - Some files may not be usable.
 - Omit the next step when **Preset Pictures** is selected in 3.
- 5

Selecting Images Smaller or Larger than Display

After 4, select option → →

- For **Centered**, use to zoom in/out or press to rotate.

Selecting Images with Limited Usage Period

- A confirmation appears. Follow these steps:

Yes → →


If Double Number Mode Menu Opens

Select mode →

Slide Show Wallpaper

Set Slide Show to appear in Standby.
Some images may not appear.

- 1 In Wallpaper menu, **Slide W paper** →

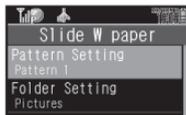

- 2 **Folder Setting** →
- 3 **Pictures or DCIM** →
- 4 **Select sub folder** → → **Set this folder** →
 - Omit steps for sub folder if none.

If There is No Image in Set Folder

- Preset images appear.

Using Preset Images

In 3, **Preset Pictures** →

Changing Pattern

In 2, **Pattern Setting** → → **Select pattern** →

- To check patterns, select one and press .



Customized Screen & S! Familiar Usability (Japanese)

Preset Customized Screens

- 1 [] ➔ []
- 2 **Customized Screen** ➔ []
- 3 **Preset Screens** ➔ []
- 4 **Select pattern** ➔ []
- 5 []

When Selected Customized Screen is Active

- Cancellation confirmation appears after ④. To cancel, choose **Yes** and press [].

Downloading Customized Screens

Read information (price, etc.) on Customized Screen download page.

- 1 [] ➔ **Data Folder** ➔ [] ➔ **Customized Screen** ➔ []



Customized Screen Menu

- 2 **Download Customized Screen** ➔ []

- Follow onscreen instructions.

Customized Screen Setup

- 1 **In Customized Screen menu, select Customized Screen** ➔ []
- 2 [] ➔ []

Applying Fee-based Customized Screen

- If Contents Key is required, follow these steps:
After ①, [] ➔ Yes ➔ []
 - Read terms of service and then follow onscreen instructions.

S! Familiar Usability

Download and install Customized Screens that load legacy model interfaces.

- 1 **In Customized Screen menu, S! Familiar Usability** ➔ []

- Follow onscreen instructions.

S! Familiar Usability Setup

- Follow these steps to install downloaded S! Familiar Usability (if not installed immediately after download):

[Customized Screen Menu] **Select Customized Screen for S! Familiar Usability** ➔ [] ➔ []

Canceling Temporarily

[] ➔ [] ➔ 通常メニュー ➔ []

Advanced

- ☞ Canceling Customized Screen
- Canceling S! Familiar Usability
- Canceling Customized Screen or S! Familiar Usability unconditionally
- Deleting Customized Screens
- Accessing Customized Screen source sites (P.2-19)



Customizing Handset Responses

Ringtone

- 1 **Settings** **In Phone menu, Sounds & Alerts**



Sounds & Alerts Menu

- 2 **Ringtone/videos**
- 3 **Select item**

For *For New Message*, etc., select **Assign Tone** and press .



- 4 **Select folder**
- 5 **Select tone/file**

Setting Ring Time for Incoming Mail, etc.

After , **Duration** Enter time

Playing Video for Incoming Transmissions

In , **Videos** Select file

If Portion of File Content is Specifiable

- After , start point selection window opens. Follow these steps:

Select start point

Selecting Files with Limited Usage Period


- A confirmation appears. Choose **Yes** and press to proceed.

When using Double Number in Dual Mode

- When ringtones are customizable for each line, press in Ringtone/videos menu to switch lines.

Vibration

- 1 In Sounds & Alerts menu, **Vibration**
- 2 **Select item** **Switch On/Off**

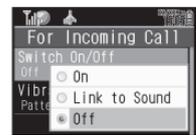

- 3 **On**
- 4 **Vibration Pattern**

- To check vibration patterns, select one and press .

- 5 **Select pattern**

Setting Ringtones to Control Vibration

In , **Link to Sound**


Precaution

- Cancel Vibration when charging battery to help avoid accidents.



Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.

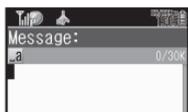

Text Entry Window (Message Text)

Opening Help




Note

- Pressing  repeatedly may not close text entry windows.

Switching Entry Modes

1 

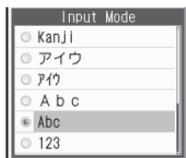

- Available entry modes appear.

2 

- Entry Mode Indicators:

	Kanji (hiragana)
	Double/single-byte katakana
	Double-byte alphanumerics (upper/lower case)
	Single-byte alphanumerics (upper/lower case)
	Single-byte number
	Character Code

 appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle between character options for that key.

Example: In double-byte katakana entry, press  three times.



- Press  to toggle options in reverse. To type characters assigned to the same key, press  first.

Example: In single-byte alphanumerics mode, enter *no*.



- Long Press a key to enter the current character and advance cursor.



Advanced

-   Using Character Codes
-  Using Pager Code (P.2-19)

Entering Characters

Hiragana

Follow these steps to enter **すずぎ** in kanji (hiragana) mode:



2 [] (No Conv)

Kanji

Convert **すずぎ** to **鈴木**.

1 Type すずぎ



- In kanji (hiragana) mode, word suggestions change as hiragana is typed. (Predictive)
- Press [] to toggle suggestion mode between Standard, Business, Male and Female. (Personal Mode)

2 []



3 鈴木

- To exit suggestion list, press [CLEAR BACK].

4 []



- Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press [] or [] to segment hiragana to convert separately.
 - Press [] to toggle Predictive and Non-Predictive suggestions.

Phonetic Conversion

Type reading in hiragana → []

Advanced

- Inserting line breaks
- Inserting spaces
- Using Keypad to enter words/phrases from suggestion list
- Clearing entry log
- Changing Font Size
- Disabling suggestions based on entered characters
- Disabling suggestions based on entered words
- Disabling emoticon/Pictogram suggestions based on entered words
- Lowering type priorities in suggestion list
- Selecting a suggestion mode (P.2-19 - 2-20)



One-Hiragana Conversion

Type the first hiragana to access previously selected words.

Example: **すずき** was previously converted to **鈴木**.

1 (す) →

2 Select word/phrase →

Katakana

Follow these steps to switch to double-byte katakana mode and enter **ジュン**.

1 → **アイウ** →

2 (ジ) → (ジ) →
 (ユ) → (ユ) →
 (ン) →



Pictograms & Symbols

May be unavailable depending on the entry mode.

1



- Pictogram/Symbol Log appears.

2 or → List toggles



- In Pictogram List, press to toggle cross-carrier Pictograms and all Pictograms.

3 Select Pictogram or Symbol
→

- Pictograms are double-byte even in single-byte modes.

4 → List closes

Emoticons

1 → **Emoticons** →



2 Select emoticon →

Alternative Emoticon Entry Method

- In kanji (hiragana) mode, type **かお** or a descriptive word such as **可愛い** or **うーん**, then convert the entry.

EmoticonWordLink


- Immediately after inserting a descriptive word such as **嬉しい** or **悲しい**, corresponding emoticons may appear in the suggestion list.



Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1  ➔ **Quick Address List** ➔ 

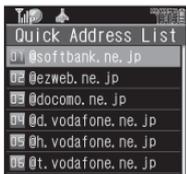

2 **Select extension** ➔ 

- Extensions are single-byte even in double-byte entry modes.

Hiragana to Katakana/
Alphanumeric Conversion

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter **PM**
Use key inscriptions.

1   ➔ 



2 **Select word/phrase (PM)** ➔ 

Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key pressed.

Example: To enter **終電**

1   ➔  ➔    ➔  ➔ 



2 **Select word/phrase (終電)** ➔ 

One Hiragana Word Call

- Type the first hiragana of entries you used Quick Conversion for and press .



Editing Characters

Deleting & Editing

Follow these steps to correct **また、お願
いし
ます** to **また明日お願いします**.

1 Select character



2

CLEAR
BACK

- The highlighted character is deleted.

3 Select target location → Enter characters



Recovering Deleted Characters

- Press once for each character after deletion.

Deleting All Text

- Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press .

Jumping to the End or Top of Text

- **Cursor Position** → → **Jump to End or Jump to Top** →

Copy/Cut & Paste

1 → **Cut or Copy** → → **Select first character** →



Cut

- To cancel and start over, press .

2 **Highlight text range** →



3 **Select target location** → (Long)

- Text is entered.

Pasting Previously Cut/Copied Text

Select target location → → **Paste**

→ → **Select text** →

- Available when Paste List appears.

Advanced


- Undo conversion or recover deleted characters
- Inserting Phone Book entry items (P.2-19)

Saving Frequently Used Words

Saving Words (Japanese)

Saved words appear among suggestions.

- 1 **Settings** → **User Dictionary**

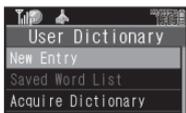

User Dictionary Menu

- 2 **New Entry** → **Enter word**
- 3 **Enter reading**


Editing Entries

- In **Saved Word List** → **Select word** → **Edit** → **Edit reading** → **Yes**

932SH Download Dictionary (Japanese)

Download specialized 932SH Download Dictionaries from SH-web Mobile Internet site. Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions. Some dictionary files may not be usable.

- 1 In **User Dictionary menu**, **Acquire Dictionary**

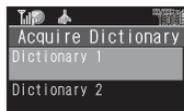

- 2 **Select number** → **Select dictionary**
 - Existing dictionary is replaced.

Canceling Dictionary

- In **select dictionary** → **Cancel**

Viewing Dictionary Information

- In **select dictionary** → **Info**

Advanced

- ☞ Deleting entries (P.2-20)



Using Dictionaries

2

Basic Operations


Available Dictionaries:

Preloaded Dictionaries	Meikyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary
Online Dictionaries*	Wikipedia, Meikyo J-Dic MX.net, Genius EJ-Dic MX.net, Genius JE-Dic MX.net, Imidas Encyclopedia, Encyclopedia Nipponica, Digital Daijisen, PROGRESSIVE English-Japanese Dictionary, PROGRESSIVE Japanese-English Dictionary, Hot Pepper Pockets, Amazon.co.jp

*Online dictionary use requires Internet connection incurring transmission fees. Information fees may also apply. Read terms of service and then follow onscreen instructions.


Using Preloaded Dictionaries

Searching As-You-Type

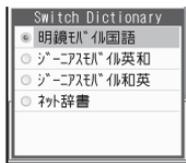

Dictionary Window

- Last used dictionary appears first.

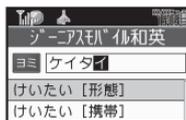

- Enter reading in katakana.
- Search results appear as you type.




Definition/Translation Window

Looking Up in Online Dictionaries
[Definition/Translation Window]

➔ **WebDict.Search** ➔

- Perform from ② (except ④) in "Using Online Dictionaries" on P.2-13. (Read bulleted sentence in ① beforehand.)

Searching by Keyword

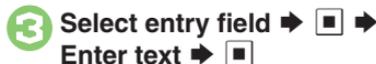

Advanced

- Viewing dictionary information
- Changing Font Size
- Looking up copied words in dictionaries
- Deleting History & bookmarks (P.2-20)



Copying Text

■ Index Word Only

1 In definition/translation window, 

2 Copy Index Word  

■ Selected Portions

1 In definition/translation window, 

2 Copy    Select first character    Highlight text range  

Using History & Bookmarks

■ Saving Bookmarks

1 In definition/translation window, 

2 Bookmark  

■ Opening History or Bookmarks

1 In Dictionary window, 

2 History or Bookmark List  

3 Select word, etc.  

- Definition/translation window opens.

Advanced

-  ● Selecting online dictionaries for use ● Selecting search method for online dictionaries ● Selecting search area for online dictionaries ● Updating dictionary list (P.2-20)

Adding Downloaded Dictionary

1 In Dictionary window, 

2 Add Dictionary  

3 Select file  

Canceling Added Dictionary

In 2, Cancel Dictionary    Yes  

Using Online Dictionaries

1 In Dictionary window,   **初辞書**  

- Terms of service (Japanese) appear when using online dictionary for the first time. Read and then press .

2 Select pull-down menu  

3 Select dictionary  

- Select **すべて** to look up in all dictionaries at once.

4 Select entry field    Enter text  

5 Search  

6 Yes  

7 Select word, etc.  


- Definition/translation window opens.

Disabling Confirmation

After 5,   ( / )  From 5

Using Dictionaries during Text Entry

1 Type text  Before pressing  to complete entry, 

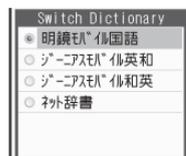

2 Select dictionary  

3 Search    Select word, etc.  

- Definition/translation window opens.

Inserting Index Word into Text

After 3,    Paste Index Word  



Searching Text

2

Basic Operations

Web Search

Transmission fees apply.

- 1  ➔ **Tools** ➔  ➔ 
Doc./Rec.
- 2 **Search** ➔ 



Search Window

- *Web Search* is selected by default.

- 3 **Select entry field** ➔  ➔ 
Enter search text ➔ 
- 4 **Search** ➔ 


- Search results appear.

Searching within PC Sites

[Search Window]  ➔ *Change Browser*
➔  ➔ *PC Site Browser* ➔ 

Mail Search

- 1 **In Search window, Mail Search** ➔ 
- 2 **Select entry field** ➔  ➔ 
Enter search text ➔ 
- 3 **Search** ➔ 

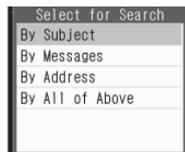

- 4 **Select option** ➔ 

Searching within Received or Sent Messages

[Search Window]  ➔ *Change Mail Folder* ➔  ➔ *Received Messages or Sent Messages* ➔ 



Scratch Pad

Open Scratch Pad to jot down text, and more.

1   **Tools**   
Doc./Rec.

2 **Scratch Pad** 
• Text entry window opens.

3 **Enter text** 



4 **Save to Notepad** 
• Open saved entries from Notepad.

Other Scratch Pad Usage

Usage	Operation
Paste to Standby	Set as StbyShortcut   Select sheet 
Enter Mail Message Text	Create Message   Select mail type 
Enter Schedule Subject/Details	Save to Calendar 
Enter Task Subject/Details	Save to Tasks 
Add Last Name to Phone Book	Save to Phone Book   ▪ Reading is not entered.
Save Text File	Save as Text File    Enter name    Save here  ▪ Saved to Data Folder (Other Documents).
Search Internet	Web Search    Select browser 

For more, see corresponding function description or follow onscreen instructions.



Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

1 → Phone → → Add New Entry →



2 Last Name: → → Enter last name → → First Name: → → Enter first name →




• Characters entered for names (reading for kanji) appear.

3 Add Phone Number: → → Enter phone number → → Select type →



• To save additional phone numbers, repeat 3.

4 Add Email Address: → → Enter mail address → → Select type →

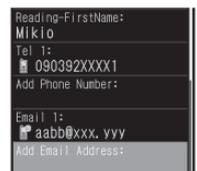

• To save additional mail addresses, repeat 4.

5 Category: → → Select Category →



Phone Book Entry Window

6 → Entry is saved to Phone Book.

Incoming Calls while Creating Entry
 • Contents are temporarily saved. End the call to return.
Selecting Mode in Dual Mode
[Phone Book Entry Window] Mode:
 → → Select mode →

Advanced

- Saving other information
- Setting Light Color
- Changing vibration pattern
- Editing Phone Book entries
- Setting incoming mail ring time
- Renaming Categories
- Moving Categories (P.2-21 - 2-22)



Personal Ringtone

Set tone for calls from saved numbers.

- 1 In Phone Book entry window, select item, e.g., **Tone-Voice Call**: 



- 2 **Assign Tone**   Select folder 
- 3 Select tone/file 

Saving Secret Entries

Hide Phone Book entries to require Handset Code for access.

- 1 In Phone Book entry window, **Secret**: 
- 2 **On** 

Accessing Secret Entries

-    **Unlock Temporarily** 
  Enter Handset Code 

Customizing Response by Category

- 1   **Phone**  
Category Control 



Category Control Menu


- 2 Select **Category**   
 Select item 
 - 3 Select item   Select item, e.g., **Assign Tone**   **Customize responses**   
- Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card.

Responses Set by Phone Book Entry


- Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.

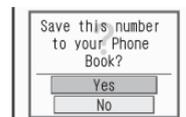

- 1 When confirmation appears, **Yes** 

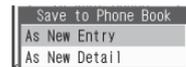

- 2 **As New Entry**  
Complete other fields 

Saving to an Existing Entry

- In 2, **As New Detail**   Select entry   **Complete other fields** 



Customized Screen & S! Familiar Usability	
Canceling Customized Screen	[] → [] → Off → [] → Yes → []
Canceling S! Familiar Usability	[] → [] → S!おなじみ操作解除 → [] → Yes → []
Canceling Customized Screen or S! Familiar Usability unconditionally	[] → Menu List → [] → Settings → [] → In Phone menu, Customize → [] → Off → [] → Yes → []
Deleting Customized Screens	[] → Data Folder → [] → Customized Screen → [] → Select Customized Screen → [] → Delete → [] → Yes → [] <ul style="list-style-type: none"> When the corresponding Contents Key has been downloaded, choose Yes or No and press [].
Accessing Customized Screen source sites	[] → Data Folder → [] → Customized Screen → [] → Select Customized Screen → [] → Web Access → [] <ul style="list-style-type: none"> Follow onscreen instructions.

Text Entry

■ Entry & Edit

Using Character Codes	In a text entry window (Character Code mode), enter four digits
Using Pager Code	In a text entry window, [] → Input/Conversion → [] → Input Method → [] → Pager Code → [] <ul style="list-style-type: none"> Return to text entry window and enter two digits.
Inserting line breaks	At the End of Text In a text entry window, [] Mid-Entry In a text entry window, [] → [] → [] → [] → [] → []
Inserting spaces	In a text entry window, []
Using Keypad to enter words/phrases from suggestion list	In a text entry window, [] → Input/Conversion → [] → Select Candidate → [] → Enable 1-9, 0, *, # → []
Clearing entry log	In a text entry window, [] → Input/Conversion → [] → Reset Log → [] → Yes → []
Undo conversion or recover deleted characters	In a text entry window, [] → Undo/Recover → []
Inserting Phone Book entry items	In a text entry window, [] → Insert/Font Size → [] → Phone Book → [] → Select entry → [] → Select item → []
Changing Font Size	In a text entry window, [] → Insert/Font Size → [] → Font Size → [] → Select size → []



■ Conversion

Disabling suggestions based on entered characters	In a text entry window, → <i>Input/Conversion</i> → → <i>Predictive</i> → → <i>Off</i> →
Disabling suggestions based on entered words	In a text entry window, → <i>Input/Conversion</i> → → <i>Previous Usage</i> → → <i>Off</i> →
Disabling emoticon/Pictogram suggestions based on entered words	In a text entry window, → <i>Input/Conversion</i> → → <i>EmoticonWordLink</i> → → <i>Off</i> →
Lowering type priorities in suggestion list	In a text entry window, → <i>Input/Conversion</i> → → <i>Set Low Priority</i> → → <i>Select type</i> → →
Selecting a suggestion mode	In a text entry window, → <i>Input/Conversion</i> → → <i>Personal Mode</i> → → <i>Select mode</i> →

User Dictionary

Deleting entries	→ <i>Settings</i> → → <i>In Phone menu, User Dictionary</i> → → <i>Saved Word List</i> → → <i>Select word</i> → → <i>Yes</i> →
------------------	--

Dictionary

Viewing dictionary information	→ → <i>Information</i> →
Changing Font Size	→ → <i>Font Size</i> → → <i>Select size</i> →
Looking up copied words in dictionaries	After copying text, → → <i>By Copy Text or Search by CopiedText</i> → → <i>Search</i> → → <i>Select word</i> →
Deleting History & bookmarks	<i>Start Here</i> → → <i>History or Bookmark List</i> → → <i>See below</i> One Word <i>Select word</i> → → <i>Delete</i> → → <i>Yes</i> → All Words → <i>Delete All</i> → → <i>Enter Handset Code</i> → → <i>Yes</i> →
Selecting online dictionaries for use	→ → <i>初外辞書</i> → → <i>Edit Dict. List</i> → → <i>Select dictionary</i> → →
Selecting search method for online dictionaries	→ → <i>初外辞書</i> → → <i>Set Search Method</i> → →
Selecting search area for online dictionaries	→ → <i>初外辞書</i> → → <i>Set Search Area</i> → →
Updating dictionary list	→ → <i>初外辞書</i> → → <i>Update Dictionaries</i> → → <i>Yes</i> →



Phone Book

View Settings

Changing view for entry search window	<input type="button" value="Start Here"/> → <i>Phone</i> → <input type="button" value=""/> → <i>Ph.Book Settings</i> <input type="button" value=""/> → See below
	Portrait Orientation <i>Vertical Display</i> → <input type="button" value=""/> → <i>List Only</i> → <input type="button" value=""/>
	Landscape Orientation <i>Horizontal Display</i> → <input type="button" value=""/> → <i>Name+Email</i> → <input type="button" value=""/>
Assigning images to Phone Book entries for incoming transmissions	<input type="button" value="Start Here"/> → <i>Phone</i> → <input type="button" value=""/> → <i>Add New Entry</i> → <input type="button" value=""/> → <i>Picture:</i> → <input type="button" value=""/> → See below
	Assigning Images <i>Assign Picture</i> → <input type="button" value=""/> → Select image → <input type="button" value=""/>
Hiding confirmation after calls to/from unsaved numbers	Capturing Images <i>Take Picture</i> → <input type="button" value=""/> → Frame image on Display <input type="button" value=""/> → <input type="button" value=""/>
	<input type="button" value=""/> → <i>Phone</i> → <input type="button" value=""/> → <i>Ph.Book Settings</i> → <input type="button" value=""/> <input type="button" value=""/> → <i>New Number Prompt</i> → <input type="button" value=""/> → <i>Incoming Call or Outgoing Call</i> → <input type="button" value=""/> → <i>Off</i> → <input type="button" value=""/>

Phone Book Entry

Saving other information	<input type="button" value="Start Here"/> → <i>Phone</i> → <input type="button" value=""/> → <i>Add New Entry</i> → <input type="button" value=""/> → See below
	Address <i>Address:</i> → <input type="button" value=""/> → Select item → <input type="button" value=""/> → Complete field → <input type="button" value=""/> → <input type="button" value="Yr"/>
	Office <i>Office:</i> → <input type="button" value=""/> → Select item → <input type="button" value=""/> → Enter text → <input type="button" value=""/> → <input type="button" value="Yr"/>
	Homepage <i>Homepage:</i> → <input type="button" value=""/> → Enter URL → <input type="button" value=""/> → Select type → <input type="button" value=""/>
	Note <i>Note:</i> → <input type="button" value=""/> → Enter text → <input type="button" value=""/>
Setting Light Color	Birthday <i>Birthday:</i> → <input type="button" value=""/> → Enter date → <input type="button" value=""/>
	Location Information <i>Location Info.:</i> → <input type="button" value=""/> → Enter Location Information → <input type="button" value=""/>
	<input type="button" value=""/> → <i>Phone</i> → <input type="button" value=""/> → <i>Add New Entry</i> → <input type="button" value=""/> → Select item, e.g., <i>Light-Voice Call:</i> → <input type="button" value=""/> → <i>Switch On/Off</i> → <input type="button" value=""/> → Select option → <input type="button" value=""/> → <i>Light Color</i> → <input type="button" value=""/> → Select color → <input type="button" value=""/> → <input type="button" value="Light"/>
Changing vibration pattern	<input type="button" value=""/> → <i>Phone</i> → <input type="button" value=""/> → <i>Add New Entry</i> → <input type="button" value=""/> → Select item, e.g., <i>Vibration-Message:</i> → <input type="button" value=""/> → <i>Switch On/Off</i> → <input type="button" value=""/> → Select option → <input type="button" value=""/> → <i>Vibration Pattern</i> → <input type="button" value=""/> → Select pattern → <input type="button" value="Light"/>
	<input type="button" value=""/> → Select entry → <input type="button" value="Edit"/> → <i>Edit</i> → <input type="button" value=""/> → Select item → <input type="button" value=""/> → <i>Edit</i> → <input type="button" value=""/> → <input type="button" value="Yr"/>
Editing Phone Book entries	<ul style="list-style-type: none"> Edit Reading after editing names.



Setting incoming mail ring time	<p>☐ → Select entry → ☐ → Edit → ☐ → Tone-New Message: → ☐ → Duration → ☐ → Enter time → ☐ → ⌵</p> <ul style="list-style-type: none"> • Available for compatible ringtones.
Renaming Categories	<p>☐ → Phone → ☐ → Category Control → ☐ → Select Category → ☐ → Edit Name → ☐ → Enter name → ☐</p>
Moving Categories	<p>☐ → Phone → ☐ → Category Control → ☐ → Select Category → ⌵ → Select target location → ☐</p> <ul style="list-style-type: none"> • View for By Category Phone Book search changes accordingly.

■ Using Entries

Messaging via Phone Book	<p>Start Here ⌵ → Select entry → ☐ → See below</p> <p>Phone Numbers Select phone number → ☐ → Create Message → ☐ → S! Mail or SMS → ☐ → Complete message → ⌵</p> <p>Mail Address Select address → ☐ → Complete message → ⌵</p>
Placing Decoration Calls via Phone Book	<p>☐ → Select entry → ☐ → Select phone number → ☐ → Deco. Call → ☐ → Deco. Call File → ☐ → Deco. Call Folder → ☐ → Select file → ☐ → Call Type → ☐ → Voice Call or Video Call → ☐ → ☐</p> <ul style="list-style-type: none"> • When placing a Decoration Call for the first time, a confirmation appears.
Initiating S! Circle Talk via Phone Book	<p>☐ → Select entry → ☐ → Select phone number → ☐ → Call S! Circle Talk → ☐ → ☐</p> <ul style="list-style-type: none"> • Set My Status to Online first.
Placing international calls via Phone Book	<p>☐ → Select entry → ☐ → Select phone number → ☐ → Int'l Call → ☐ → Select country → ☐ → ☐</p>

Using Location Information via Phone Book	<p>☐ → Select entry → ☐ → ☐ → Settings → ⌵ → ☐ → Set to Destination → ☐</p> <ul style="list-style-type: none"> • Follow onscreen instructions.
---	--

■ Manage Entries

Deleting Phone Book entries	<p>One Entry ☐ → Select entry → ☐ → Delete → ☐ → Yes → ☐</p> <p>All Entries ☐ → Phone → ☐ → Manage Entries → ☐ → Delete All → ☐ → Select entry type → ☐ → Yes → ☐ → Enter Handset Code → ☐</p>
Checking memory status	<p>☐ → Phone → ☐ → Manage Entries → ☐ → Memory Status → ☐</p>
Copying Phone Book entries	<p>One Entry (Handset → USIM Card) ☐ → Select entry → ☐ → Manage Entries → ☐ → Copy Entry to USIM → ☐ → Yes → ☐</p> <p>One Entry (USIM Card → Handset) ☐ → ☐ → Ph.Book Settings → ☐ → Select Phone Book → ☐ → USIM Memory → ☐ → Select entry → ☐ → Manage Entries → ☐ → Copy Entry to Phone → ☐</p> <p>All Entries ☐ → ☐ → Manage Entries → ☐ → Copy All → ☐ → Select method → ☐ → Yes → ☐</p> <ul style="list-style-type: none"> • If handset/USIM Card memory is low, some entries may not be copied.



Editing Categories on USIM Card	<input type="checkbox"/> Start Here <input type="checkbox"/> ⇒ <i>Phone</i> <input type="checkbox"/> ⇒ <i>Category Control</i> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> ⇒ <i>Change to USIM</i> <input type="checkbox"/> ⇒ See below
	Renaming Categories Select Category <input type="checkbox"/> ⇒ <i>Edit Name</i> <input type="checkbox"/> ⇒ Enter name <input type="checkbox"/>
	Moving Categories Select Category <input type="checkbox"/> ⇒ <i>Select target location</i> <input type="checkbox"/>
	Changing Icons Select Category <input type="checkbox"/> ⇒ <i>Change Icon</i> <input type="checkbox"/> ⇒ Select Pictogram <input type="checkbox"/>
Changing default storage media for new entries	<input type="checkbox"/> ⇒ <i>Phone</i> <input type="checkbox"/> ⇒ <i>Ph.Book Settings</i> <input type="checkbox"/> <input type="checkbox"/> ⇒ <i>Save New Entry</i> <input type="checkbox"/> ⇒ <i>USIM Memory or Ask Each Time</i> <input type="checkbox"/>
Switching reference Phone Book	<input type="checkbox"/> ⇒ <i>Phone</i> <input type="checkbox"/> ⇒ <i>Ph.Book Settings</i> <input type="checkbox"/> <input type="checkbox"/> ⇒ <i>Select Phone Book</i> <input type="checkbox"/> ⇒ <i>USIM Memory or Both</i> <input type="checkbox"/>

■ Mode Settings

Activate Double Number first.

Changing modes of all entries at once	<input type="checkbox"/> ⇒ <i>Phone</i> <input type="checkbox"/> ⇒ <i>Manage Entries</i> <input type="checkbox"/> ⇒ <i>Change Mode(All)</i> <input type="checkbox"/> ⇒ Select mode <input type="checkbox"/> <input type="checkbox"/> ⇒ Enter Handset Code <input type="checkbox"/>
Changing modes of multiple entries	<input type="checkbox"/> ⇒ <input type="checkbox"/> ⇒ <i>Manage Entries</i> <input type="checkbox"/> ⇒ <i>Multiple Selection</i> <input type="checkbox"/> ⇒ Select entry <input type="checkbox"/> (✓/□) ⇒ <input type="checkbox"/> ⇒ <i>Change Mode</i> <input type="checkbox"/> ⇒ Select mode <input type="checkbox"/>
Changing modes of entries by Category	<input type="checkbox"/> ⇒ Select Category <input type="checkbox"/> ⇒ <i>Manage Entries</i> <input type="checkbox"/> <input type="checkbox"/> ⇒ <i>Change Mode(Category)</i> <input type="checkbox"/> ⇒ Select mode <input type="checkbox"/> ⇒ Enter Handset Code <input type="checkbox"/> • Set search method to <i>By Category</i> first.



Customized Screen

? Customized Screen is not applied

- Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book

? Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images do not appear for incoming Decoration Calls including image/video.
- Images may not appear when another function is active, etc.

? Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Ringtones do not sound for incoming Decoration Calls with sound.
- Memory Card with source files may be removed; reinsert the card to restore settings.

? Cannot enter 16 characters for Category names

- Character entry limit for Category names may be lower depending on the USIM Card in use.



Emergency Calls	3-2	Call Log	3-8
Voice Calling	3-3	Call Time & Call Cost	3-9
Video Calling	3-5	Optional Services	3-10
Decoration Call	3-6	Additional Functions	3-12
Speed Dial	3-7	Troubleshooting	3-21

3

Calling



Emergency Calls

3

Calling

Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets. (Emergency Location Report)

932SH reports Location Information based on positioning signals from radio stations.

- Registration/transmission fees do not apply.
- Positioning accuracy is affected by location/signal conditions. Always provide your location and purpose on the phone.
- Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with **184**). However, the corresponding agency may obtain your Location Information in a life threatening situation.
- Location Information is not reported during international roaming.

Handset Restrictions & Emergency Calls

Emergency calls are possible even while some handset restrictions are active.


Active Restriction	Emergency Calls
Max Cost	Possible
Function Lock	
Outgoing Calls	
Offline Mode	Restricted
Keypad Lock	
PIN Entry	



Voice Calling

Answering a Voice Call

Incoming Call window opens for a call.

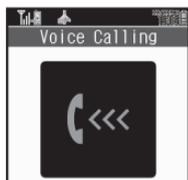

Incoming Voice Call Window

1 to accept the call

- Call connects.

2 Call ends

Muting Ringer Temporarily

When a call arrives,

Earpiece Volume

During a call, or

After Calls to/from Unsaved Numbers

- Save to Phone Book confirmation appears.

Placing a Voice Call

1 Enter phone number with area code

- To correct entry, use to place cursor under the digit and press . To delete the digits above and after the cursor, Long Press .

2

- Wait for connection.



3 Call ends

Specifying Line in Dual Mode

- After 1, Select Line(Voice)
 Select line

Placing an International Call

1 Enter phone number with area code

2 Int'l Call



3 Select country

- Handset dials the number.

4 Call ends

Calling Unlisted Countries

- In , Enter Code Enter country code

Advanced

- Rejecting calls
- Placing calls on hold
- Answering with Headphones (P.3-12)
- Adjusting Earpiece Volume
- Sending/blocking Caller ID (P.3-13)
- Improving Earpiece sound quality
- Muting Microphone
- Recording caller voice (And more on P.3-14)
- Answering Voice Calls automatically when using Headphones (P.3-20)



Placing Calls while Abroad

See below to place a call to Japan from abroad.
Apply for Global Roaming beforehand.
http://mb.softbank.jp/mb/en/global_service/

- 1 **Enter phone number with area code** →
- 2 **Int'l Call** → → **日本(JPN)**
→ →
- 3 → **Call ends**

• Handset dials the number.

Calling SoftBank Handsets

- In , always select **日本(JPN)**.

Calling Landlines & Mobiles within the Same Country

- Perform steps in "Placing a Voice Call" on P.3-3.

Calls Overseas

- Calling may not be possible outside Japan. Connections depend on available network, signal strength, and handset settings.

Answer Phone

Record caller messages on handset. Answer Phone cannot be used when handset is off or out-of-range. Use Voicemail to record caller messages when Answer Phone is not available.

- 1 (Long)
• Answer Phone is set (appears).

Canceling Answer Phone

(Long)

Answering Calls while Recording

- No message will be recorded.

Playing Messages

- 1
- 2 **Select record** →
• Playback stops automatically at the end of message.

Deleting All Records

After 1, → **Delete All** → → Enter Handset Code → → **Yes** →

Playback Operations

Volume Control	or
Replay/Skip Backward	
Stop	
Skip Forward	
Delete	→ Yes →
Loudspeaker On/Off	

Advanced


- Recording caller messages
- Changing ring time
- Sampling outgoing message
- Muting Earpiece (P.3-12)
- Placing calls by entering country code directly
- Adding a country code automatically when placing calls
- Adding/changing/deleting country codes (And more on P.3-13)



Video Calling

View the other party's image or send an Outgoing Image to compatible handsets. Handle Video Calls like Voice Calls. This page describes functions/operations unique to Video Call.

Window Description

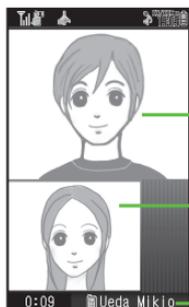

Incoming Image

Outgoing Image

Other Party's Number/Name

Important Video Call Usage Notes

- If both parties are not using the same Video Call system, call may be interrupted. (Video Call charges apply.)
- Video Calls cannot be placed while TV is active.

Advanced

- Answering Video Calls automatically (And more on [P.3-12](#))
- Adjusting Outgoing Image brightness ● Canceling Internal Camera image reversal (And more on [P.3-14](#))
- Sending Alternative Image when initiating Video Calls ● Disabling Loudspeaker for Video Calls ● Muting Microphone when initiating Video Calls (And more on [P.3-20](#))

Answering a Video Call

Incoming Call window opens for a call.



Incoming Video Call Window

- 1 to accept the call
- 2 Call ends

Answering without Camera Image

[Incoming Video Call Window]

Yes


- Video Call charges apply to the caller.
- After Calls to/from Unsaved Numbers
- Save to Phone Book confirmation appears.

Engaged Video Call Operations

Toggle View	
Toggle Outgoing Image	
Open Help	Help

Placing a Video Call

- 1 Enter phone number
- 2 Video Call

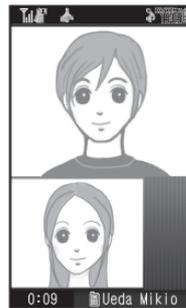

- Call is accepted and image appears.

- 3 Call ends

Specifying Line in Dual Mode

After 1, Select Line(Video)

Select line



Decoration Call

Show decorative message in incoming call windows on recipient's handset.

- Available without a separate contract.
- Recipient's handset must be Decoration Call-compatible.
- Charges apply to the caller when Decoration Call is placed successfully.

Answering a Decoration Call

Incoming Call window opens for a call.



Incoming Decoration Call Window

If Softkeys do not appear, handle incoming Decoration Call like any other call.

1 to accept the call

- Call connects.

2 ➔ Call ends

- Open/save Decoration Call files from received call records.

Note


- Decoration Call file may not play depending on recipient handset settings.

Placing a Decoration Call

Follow these steps to place a Decoration Call by entering a phone number.

1 Enter phone number ➔

➔ **Deco. Call** ➔

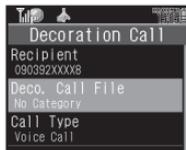

2 **Deco. Call File** ➔

3 **Deco. Call Folder** ➔ ➔ **Select file** ➔

- To check selected file, press .

4

- Handset dials the number. (It may take some time.)

5 ➔ Call ends

Placing Your First Decoration Call

- A confirmation appears. Follow onscreen instructions.
 - To show confirmation next time as well, press ().

Placing Decoration Video Calls

After , **Call Type** ➔ ➔ **Video Call** ➔ ➔ ➔ 4

Advanced

- Creating Decoration Call files
- Editing Decoration Call files
- Saving received Decoration Call files
- Restricting incoming/outgoing Decoration Calls
- Hiding incoming Decoration Call window (And more on P.3-15)



Speed Dial

Saving Phone Numbers

Save phone numbers to Speed Dial/Mail list for easy dialing.

- 1 ➔ **Phone** ➔
- 2 **Speed Dial/Mail** ➔
- 3 **Select number** ➔ ➔
 - Select katakana row** ➔
 - Select entry** ➔
- 4 **Select phone number** ➔



- Select mail address prompt appears. To save mail address for easy messaging, select one and press . (Omit .)

- 5 **Do not Assign** ➔

6 ➔ Saved

- To save additional phone numbers, repeat - .

Using Headphones for Speed Dial

- Save a phone number to .

Canceling Speed Dial Entries

- In , select entry ➔ ➔ **Remove Selected or Remove All** ➔ ➔ **Yes** ➔
- Omit entry selection step when canceling all entries.

Using Speed Dial

- 1 0 - 9 9 (entry number)

- 2

Placing Video Calls

- In , ➔ **Speed Video** ➔

Placing Decoration Calls

- In , ➔ **Speed Deco. Call** ➔
 - ➔ **Deco. Call File** ➔ ➔ **Select/create file** ➔

Using Headphones

- In Standby, Long Press Call Button until a double beep sounds; handset dials the number saved in . To end the call, Long Press Call Button until a beep sounds.



Call Log

Open recent dialed/received call records.

1 



- All Calls opens; press  to open Dialed Numbers, Dialed Ranking and then Received Calls.
- When using Double Number in Dual Mode, Line indicators appear except for Dialed Ranking.

2 **Select record** ➔ 

- Select Decoration Call record and press  to open the corresponding file.

When the Same Number is Dialed More than Once Using the Same Call Option

- Only the last record appears. (All records appear for S! Circle Talk and Decoration Call.)

Advanced

-   Dialing from records
-  Sending messages from records
-  Saving Phone Book entries from records
-  Placing Decoration Calls from records
-  Initiating S! Circle Talk from records
-  Deleting records (And more on **P.3-16**)



Call Time & Call Cost

Call Time

Check estimated time of the most recent call and all calls.

1 → **Settings** → →
Call

2 **Call Time & Cost** →



Call Time & Cost Menu

3 **Call Timers** →



4 **Dialed Calls or Received Calls** →

Call Cost

Check estimated call charges of the most recent call and all calls.

Call Costs (including Max Cost) may be unavailable depending on subscription status.

1 In Call Time & Cost menu,
Call Costs →

2 **Show Call Cost** →



Advanced

- Setting handset to beep during Voice Calls
- Showing Call Cost after each call
- Limiting Call Costs
- Checking packet transmission volume
- Resetting Data Counter (And more on P.3-17)



Optional Services

Call Forwarding and Voicemail can only be set simultaneously when Call Forwarding is set to Video Calls.

Call Forwarding	Automatically divert all or all unanswered incoming calls to another preset phone number
Voicemail	Redirect all or unanswered calls to Voicemail Center; access messages from handset/touchtone phones
Call Waiting*	Answer incoming calls or open another line during a call
Group Calling*	Switch between open lines or connect multiple lines at once for teleconferencing
Call Barring	Restrict incoming/outgoing calls depending on conditions
Caller ID	Show or hide your own number when placing calls

*A separate contract is required.

Initiating Call Forwarding

Follow these steps to divert calls to a phone number saved in Phone Book after selected ring time (**No Answer** set):

1 **Settings** **Call**

2 **Voicemail/Divert**



Voicemail/Divert Menu

3 **Diverts**



4 **Select call type**

5 **No Answer**



6 **Phone Book** **Select entry**

7 **Select phone number**

- Omit if only one number is saved.

8

9 **Select ring time**

Diverting Calls without Handset Response

In , **Always** -

Entering Forwarding Number Directly
In , **Enter Number** **Enter phone number** **Select ring time**

Advanced

Checking service status (P.3-18)



Initiating Voicemail

Follow these steps to divert calls to Voicemail Center after selected ring time (**No Answer** set):

- 1** In Voicemail/Divert menu, **Voicemail** → → **Activate** →



- 2** **No Answer** → → **Select ring time** →

Diverting Calls without Handset Response
In **☺, Always** →

Missed Call Notification

Activate this function for records of calls missed while handset is off/out-of-range and Voicemail is active.

- 1** → **Settings** → → → **Call**




Call Menu

- 2** **out Missed Calls** → → →
 - When using Double Number in Dual Mode, select a line and press .
 - Follow the voice guidance for further operations.

Playing Messages

- 1** In Call menu, **Voicemail/Divert** →

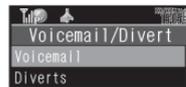

Voicemail/Divert Menu

- 2** **Voicemail** →
- 3** **Call Voicemail** →

- When using Double Number in Dual Mode, select a line and press .
- Follow the voice guidance for further operations.

Deleting New Voicemail Message Indicator
In **☺, Delete Icon** → → **Yes** →

Canceling Call Forwarding/Voicemail

- 1** In Voicemail/Divert menu, **Cancel All** →



- 2** **Yes** →

Advanced

- Activating Call Waiting ● Talking on multiple lines simultaneously ● Rejecting calls by number ● Setting/canceling outgoing call restriction ● Setting/canceling incoming call restriction (And more on P.3-18 - 3-19)



Receiving a Call

■ Handling Incoming Calls

Rejecting calls	Voice Call When a call arrives, → Reject →
	Video Call When a call arrives,
Placing calls on hold	When a call arrives, • Press to answer the call on hold.
Answering with Headphones	When a call arrives, Long Press Call Button • To end the call, Long Press Call Button.

■ Answer Phone

Recording caller messages	When a Voice Call arrives, → Record Message →
Changing ring time	→ Settings → → → Call → Answer Phone → → Answer Time → → Enter time →
Sampling outgoing message	→ Settings → → → Call → Answer Phone → → Outgoing Message → • Press to stop playback.
Muting Earpiece	→ Settings → → → Call → Answer Phone → → Volume → → Silent →

■ Remote Monitor (Video Call)

Answering Video Calls automatically	Start Here → Settings → → → Call → Video Call → → Remote Monitor → → Enter Handset Code → → See below
	Saving Numbers from Phone Book Auto Answer List → → <Empty> → → Change → → From Phone Book → → Select entry → → Select phone number → • To enter a phone number directly, select <Empty> and press .
	Saving Numbers from Call Log Auto Answer List → → <Empty> → → Change → → From Call Log → → Select record →
Editing Auto Answer List	Activating Remote Monitor Switch On/Off → → On → → • A tone sounds for calls answered via Remote Monitor. (Tone and volume are fixed.) • Remote Monitor is effective only when handset is open.
	Start Here → Settings → → → Call → Video Call → → Remote Monitor → → Enter Handset Code → → Auto Answer List → → See below
Changing ring time	Editing Numbers Select entry → → Edit →
	Deleting Entries Select entry → → Delete → → Yes →
Changing ring time	→ Settings → → → Call → Video Call → → Remote Monitor → → Enter Handset Code → → Answer Time → → Enter time →



Placing a Call

Basic Operations

Adjusting Earpiece Volume	▢ → <i>Settings</i> → ▢ → In Phone menu, <i>Earpiece Volume</i> → ▢ → Adjust level → ▢
Sending/blocking Caller ID	After phone number entry, → <i>Hide My ID</i> or <i>Show My ID</i> → ▢

International Calls

Placing calls by entering country code directly	(+ appears) → Enter country code → Enter phone number with area code → <ul style="list-style-type: none"> • Omit the first 0 of the area code except when calling Italy or some other countries.
Adding a country code automatically when placing calls	<i>Start Here</i> ▢ → <i>Settings</i> → ▢ → <i>Call</i> → <i>Int'l Calling</i> → ▢ → <i>Auto Add Code</i> → ▢ → See below
	Activating Auto Add Code <i>Switch On/Off</i> → ▢ → <i>On</i> → ▢ <ul style="list-style-type: none"> • When Auto Add Code is active, preset country code is added to all phone numbers (except emergency call numbers) unless + is included.
	Selecting a Country from List <i>Country Code</i> → ▢ → Select country → ▢
	Specifying a Country Code <i>Country Code</i> → ▢ → Enter Code → ▢ → Enter country code → ▢
Saving frequently used international prefix	▢ → <i>Settings</i> → ▢ → <i>Call</i> → <i>Int'l Calling</i> → ▢ → <i>Int'l Prefix</i> → ▢ → Enter Handset Code → ▢ → Enter prefix → ▢

Adding/changing/deleting country codes

Start Here ▢ → *Settings* → ▢ → *Call* → *Int'l Calling* → ▢ → *Country Codes* → ▢ → See below

Adding

<Empty> → ▢ → Enter name → ▢ → Enter country code → ▢

Changing

Select country → ▢ → *Change* → ▢ → Enter name → ▢ → Enter country code → ▢

Deleting

Select country → ▢ → *Delete* → ▢ → Yes → ▢



During a Call

■ Voice Call & Video Call

Improving Earpiece sound quality	Reducing Noise (Talk Mode) During a call, [M] <ul style="list-style-type: none"> Press repeatedly to toggle options (Noise Reduction, Slow Talk and Off). Slow Talk improves voice audibility while reducing Earpiece noise.
	Boosting High Frequencies (Voice Clear) During a call, [M] <ul style="list-style-type: none"> Press repeatedly to toggle options (Effect:Soft, Effect:Medium, Effect:Enhanced and Off).
Muting Microphone	Voice Call During a call, [M] (press again to cancel)
	Video Call During a call, [M] → Mute → [M] <ul style="list-style-type: none"> To cancel, select Unmute.
Activating/canceling Loudspeaker	Activating Loudspeaker for Voice Call During a call, [M] → While message appears, [M] <ul style="list-style-type: none"> To cancel, press [M].
	Canceling Loudspeaker for Video Call During a call, [M] (press again to activate)
Switching sound output	During a call, [M] → Transfer Audio → [M] → To Phone or To Bluetooth → [M]
Opening Phone Book	During a call, [M] → Phone Book → [M] → Select entry → [M] <ul style="list-style-type: none"> Press [M] twice to return to call window.

Saving Phone Book entries	During a call, [M] → Phone Book → [M] → [M] → [M] → Add New Entry → [M] → Complete fields → [M] <ul style="list-style-type: none"> Press [M] to return to call window.
Disabling touch tone signaling	During a call, [M] → Disable DTMF → [M]
Placing calls on hold	During a call, [M] → Hold → [M] <ul style="list-style-type: none"> Subscription to Call Waiting or Group Calling is required to place Voice Calls on hold. To resume Voice Calls, press [M], select Retrieve and press [M]. To resume Video Calls, press [M].

■ Voice Call Only

Recording caller voice	During a call, [M] → Record Caller Voice → [M] → Recording starts → [M] → Recording ends
Opening messages	During a call, [M] → Messaging → [M] → Select Messaging folder → [M] → Select folder → [M] → Select message → [M] <ul style="list-style-type: none"> Press [M] three times to return to call window.
Creating messages	During a call, [M] → Messaging → [M] → Create Message or Create New SMS → [M] → Complete message → [M]

■ Video Call Only

Adjusting Outgoing Image brightness	During a call, [M] → Exposure → [M] → Adjust level → [M] <ul style="list-style-type: none"> Alternative Image brightness is fixed.
Canceling Internal Camera image reversal	During a call, [M] → Settings → [M] → Mirror Image → [M] → Off → [M]



Decoration Call	
Creating Decoration Call files	<p>Start Here → Data Folder → Decoration Call → Create New File → Text Input → Enter text → Images</p> <p>→ See below</p> <p>Using Still Images Picture → Pictures → Select file → Sounds → Select folder → Select file → Yes or No → Save here</p> <p>Using Video Video → Videos → Select file → Yes or No → Save here</p> <p>Using Flash® Animation Flash® → Select file → Yes or No → Save here</p>
	<p>Data Folder → Decoration Call → Select file → Edit → Edit → Save as New or Overwrite</p> <p>• For Save as New, select Save here and press</p>
	<p>Select record → Save File → Save here</p>
	<p>Settings → Call → Decoration Call → Switch On/Off → Off → Enter Handset Code</p>
Hiding incoming Decoration Call window	<p>Settings → Call → Decoration Call → Play in Receiving → Off</p>

Using mobile camera to create Decoration Call files	<p>Start Here → Data Folder → Decoration Call → Create New File → Text Input → Enter text → Images</p> <p>→ See below</p> <p>Capturing Still Images Picture → Take Picture → shoot → Save here</p> <p>Recording Video Video → Record Video → to start recording → to stop → Save → Yes or No → Save here</p>
	<p>Settings → Call → Decoration Call → Notice → On</p>
Showing options upon Decoration Call failure	



Call Log	
Dialing from records	<p>Calling Dialed Numbers (Redial)</p> <p> → Select record → </p> <ul style="list-style-type: none"> To place Video Calls, press instead of , then select Video Call and press .
	<p>Calling from Received Call Records</p> <p> → Select record → </p> <ul style="list-style-type: none"> To place Video Calls, press instead of , then select Video Call and press .
Sending messages from records	<p> → Select record → → Create Message → → S! Mail or SMS → → Complete message → </p>
Saving Phone Book entries from records	<p> → Select record → → Save to Phone Book → → As New Entry → → Complete other fields → </p> <ul style="list-style-type: none"> To add to an existing entry, select As New Detail.
Placing Decoration Calls from records	<p> → Select record → → Deco. Call → → Deco. Call File → → Select/create file → </p>
Initiating S! Circle Talk from records	<p> → Select record → → Call S! Circle Talk → → </p> <ul style="list-style-type: none"> Set My Status to Online first.
Deleting records	<p>One Record</p> <p> → Select record → → Delete → → Yes → </p>
	<p>All Records</p> <p> → → Delete All → → Enter Handset Code → → Yes → </p>

Hiding Dialed Ranking	<p> → Phone → → Call Log Settings → → Set Dialed Ranking → → Hide Dialed Ranking → </p> <ul style="list-style-type: none"> Handset Code is required to re-select Show Dialed Ranking.
Excluding rejected incoming calls	<p> → Phone → → Call Log Settings → → Rejected Numbers → → Do not Record → → Enter Handset Code → </p>



Call Time/Call Cost/Data Communication

■ Call Time

Setting handset to beep during Voice Calls	■ → Settings → ■ → ☎ Call → Minute Minder → ■ → On → ■
Hiding Call Time during calls	■ → Settings → ■ → ☎ Call → Disp. Time/Cost → ■ → Call Time Counter → ■ → Off → ■
Resetting Call Timers	■ → Settings → ■ → ☎ Call → Call Time & Cost → ■ → Call Timers → ■ → Clear Timers → ■ → Enter Handset Code → ■ → Yes → ■

■ Call Cost

Showing Call Cost after each call	■ → Settings → ■ → ☎ Call → Disp. Time/Cost → ■ → Display Call Cost → ■ → On → ■
Resetting Call Costs	■ → Settings → ■ → ☎ Call → Call Time & Cost → ■ → Call Costs → ■ → Show Call Cost → ■ → Enter PIN2 → ■ → Yes → ■

Limiting Call Costs

Start Here ■ → Settings → ■ → ☎ Call → Call Time & Cost → ■ → Call Costs → ■ → See below

Setting a Limit

Max Cost/Residual → ■ → Y → Set → ■ → Enter PIN2 → ■ → Enter amount → ■

- May be unavailable depending on subscription status.

Changing the Limit

Max Cost/Residual → ■ → ☎ Enter PIN2 → ■ → Enter amount → ■

Checking Remaining Amount

Max Cost/Residual → ■

Showing amount in another currency

■ → Settings → ■ → ☎ Call → Call Time & Cost → ■ → Call Costs → ■ → Cost Units → ■ → ☎ Enter PIN2 → ■ → Enter currency → ■ → Enter exchange rate (per yen) → ■ → ■

■ Data Communication

Checking packet transmission volume

Start Here ■ → Settings → ■ → ☎ Call → Call Time & Cost → ■ → Data Counter → ■ → See below

Most Recent Volume

Last Data → ■

All Volume

All Data → ■

Resetting Data Counter

■ → Settings → ■ → ☎ Call → Call Time & Cost → ■ → Data Counter → ■ → Clear Counter → ■ → Yes → ■



Optional Services

■ All Services

Checking service status	<ul style="list-style-type: none"> ■ → Settings → ■ → Call → Select service → ■ → Status → ■ • For Call Barring, select restriction and press ■.
-------------------------	--

■ Call Waiting (Contract Required)

Activating Call Waiting	<ul style="list-style-type: none"> ■ → Settings → ■ → Call → Call Waiting → ■ → On → ■
Placing Line 1 on hold to answer Line 2	<p>A tone sounds during a Voice Call → </p> <ul style="list-style-type: none"> • Press to switch between lines. • Press to end active line and re-engage the party on hold.

■ Group Calling (Contract Required)

Opening another line during a Call	<p>During a Voice Call, enter phone number → </p> <ul style="list-style-type: none"> • Long Press to select a number from Call Log records.
Switching between open lines (Swap Calls)	<p>During a Voice Call, </p> <ul style="list-style-type: none"> • Press to switch between lines.
Talking on multiple lines simultaneously	<p>While switching between lines, → Group Calling → ■ → Conference All → ■</p>
Switching to private conversation during Group Calling	<p>During a Voice Call, select number/name → ■ → Private → ■</p>

■ Call Barring

Rejecting calls by number	<p>Start Here ■ → Settings → ■ → Call → Call Barring → ■ → Rejected Numbers → ■ → Black List → ■ → See below</p> <p>Saving Numbers</p> <p>Set Reject Number → ■ → <Empty> → ■ → Enter phone number → ■</p> <ul style="list-style-type: none"> • When using Double Number in Dual Mode, select a line type and press ■.
	<p>Activating Black List</p> <p>Switch On/Off → ■ → On → ■</p>
Rejecting calls without designating numbers	<p>Start Here ■ → Settings → ■ → Call → Call Barring → ■ → Rejected Numbers → ■ → See below</p> <p>Calls from Unsaved Numbers</p> <p>Unknown → ■ → On → ■</p> <p>Calls with No/Undisplayable Caller ID or from Public Phones</p> <p>Withheld → ■ → On → ■</p>
	<p>■ → Settings → ■ → Call → Call Barring → ■ → Change NW Password → ■ → Enter current Network Password → ■ → Enter new Network Password → ■ → Re-enter new Network Password → ■</p>



Designating numbers to reject from saved information	<p>[Start Here] → Settings → Call → Call Barring → Rejected Numbers → Black List → Set Reject Number → <Empty> → See below</p> <p>From Phone Book Ph. Book List → Select entry</p> <p>From Call Log Records From Call Log → Select record</p> <p>From SI Friend's Status Member List From Friend's Status → Select member</p>
	<p>[Start Here] → Settings → Call → Call Barring → Rejected Numbers → Black List → See below</p> <p>Editing Numbers Select number/name → Edit</p> <p>Deleting Numbers Select number/name → Delete → Yes</p>

Setting/canceling outgoing call restriction	<p>[Start Here] → Settings → Call → Call Barring → Outgoing Calls → See below</p> <p>Setting Restriction Select restriction → On → Enter Network Password</p> <ul style="list-style-type: none"> • Outgoing SMS messages are also restricted. • Outgoing SI Circle Talk requests are not affected. • Following restrictions are available: <ul style="list-style-type: none"> ■ All Outgoing Calls: Restrict all non-emergency calls ■ Bar Int'l Call: Restrict all international calls ■ Local & Home Only: Restrict all international calls except to Japan
	<p>Canceling All Restrictions Cancel All → Enter Network Password</p>
	<p>[Start Here] → Settings → Call → Call Barring → Incoming Calls → See below</p> <p>Setting Restriction Select restriction → On → Enter Network Password</p> <ul style="list-style-type: none"> • Incoming SMS messages are also restricted. • Incoming SI Circle Talk requests are not affected. • Following restrictions are available: <ul style="list-style-type: none"> ■ All Incoming Calls: Reject all calls ■ Bar if Abroad: Reject calls when outside Japan <p>Canceling All Restrictions Cancel All → Enter Network Password</p>
Setting/canceling incoming call restriction	
<p>■ Caller ID</p> <p>Showing/hiding Caller ID</p>	<p>Settings → Call → Show My Number → On or Off</p>



Settings

■ Display Rotation

Answering calls by rotating Display from Cycloid to portrait position

■ → Settings → ■ → In Phone menu, *Display Rotation* → ■ → *Rotate Back to* → ■ → *Answer Calls* → ■

■ Voice Call

Answering Voice Calls automatically when using Headphones

Start Here ■ → Settings → ■ → Call → *Auto Answer* → ■ → Enter Handset Code → ■ → See below

Activating Auto Answer

Switch On/Off → ■ → *On* → ■

- When Auto Answer is active, Auto Answer tone sounds after ringtone even in Manner mode; cancel afterward.

Changing Ring Time

Answer Time → ■ → Enter time → ■

Improving Earpiece sound quality

■ → Settings → ■ → Call → *Set Talk Mode* → ■ → Select mode → ■

- *Noise Reduction* reduces Earpiece noise.
- *Slow Talk* improves the audibility of other party's voice while reducing Earpiece noise.

Boosting high frequencies to improve voice audibility

■ → Settings → ■ → Call → *Set Voice Clear* → ■ → Select option → ■

■ Video Call

Start Here ■ → Settings → ■ → Call → *Video Call* → ■ → *Camera Picture* → ■ → See below

Sending Alternative Image when initiating Video Calls

Setting Alternative Image

Default Image → ■ → *Alternative Image* → ■

Changing Alternative Image

Alternative Image → ■ → Select folder → ■

→ Select file → ■ → ■

- Omit file selection step when using Customized Screen images.

Disabling Loudspeaker for Video Calls

■ → Settings → ■ → Call → *Video Call* → ■ → *Loudspeaker* → ■ → *Off* → ■

Muting Microphone when initiating Video Calls

■ → Settings → ■ → Call → *Video Call* → ■ → *Mute Microphone* → ■ → *On* → ■

Changing quality of Incoming/ Outgoing Images

■ → Settings → ■ → Call → *Video Call* → ■ → *Incoming Picture or Outgoing Picture* → ■ → Select quality → ■

Setting image that is sent while call is on hold

■ → Settings → ■ → Call → *Video Call* → ■ → *Hold Guidance Pict* → ■ → Select folder → ■ → Select file → ■ → ■

- Omit file selection step when using Customized Screen images.

Setting Backlight status

■ → Settings → ■ → Call → *Video Call* → ■ → *Backlight* → ■ → Select option → ■

- Selecting *Normal Setting* applies Display Backlight setting.



Receiving a Call

? Cannot use Answer Phone or Caller Voice

- Answer Phone and Caller Voice are disabled when less than 12 seconds remain or 20 messages are recorded. Delete messages.
- Answer Phone and Caller Voice are not available for Video Calls.

Placing a Call

? Cannot place call via Speed Dial

- Speed Dial is not available when Phone Book access is restricted by Application Lock.

? Cannot place call

- If  appears, cancel Keypad Lock.
- If  appears, cancel Function Lock.
- If  appears, cancel Offline Mode.

? Call won't connect and there's a beeping tone

- Did you include the area code or the first 0? Dial the number including the area code or 0.
- Handset may be out-of-range ( appears). Move to a place where signal is strong and retry.

During a Call

? Outgoing Image is distorted during Video Calls

- Rapid motion can make images appear choppy or distorted.

? Conversation is hampered

- Conversations may be hampered by ambient noise.
- Check Earpiece Volume when using Loudspeaker. Increasing Earpiece Volume may cause feedback/interference.

? Call is choppy or cut off

- Network signal may be weak. Move to a place where signal is strong and retry.
- Battery may need to be charged or replaced. Charge battery or install a charged battery.

? Clicking noise is heard during call

- Handset may be moving into another service area. Noise is heard when Network signal switches. This is normal.

? Cannot hear other party's voice

- Earpiece Volume may be low. Increase Earpiece Volume (P.3-3).
- Sound output may be set to use handsfree device. Set Transfer Audio (P.3-14) to *To Phone*.

Other

? Talk Time on Display seems incorrect

- Ring time for incoming or outgoing calls is not counted. (On hold time is counted.)

? Cannot save phone number for Call Forwarding

- Does the number start with *1, 00, 0120* or *0990*? Public service numbers, international call numbers starting with 00, toll-free numbers and fee-based service numbers cannot be saved.



Messaging	4-2
Basics	4-2
Customizing Handset Address	4-3
Sending Messages	4-4
Sending S! Mail	4-4
Sending SMS.....	4-7
Incoming Messages	4-8
Opening & Replying.....	4-8
Handling Messages	4-10
Managing & Using Messages.....	4-10
Sorting Messages.....	4-12

Chat Folder	4-13
Using Chat Folders.....	4-13
Mail Groups	4-14
Creating Groups for Broadcast Mail	4-14
PC Mail	4-15
Additional Functions	4-18
Troubleshooting	4-33

4

Messaging



Basics

Use the following messaging services.

SMS

Exchange up to 160 alphanumeric characters with SoftBank handsets.

S! Mail

Exchange up to 30,000 characters with e-mail compatible handsets, PCs, etc; attach media files, etc.

Large Size Messages

Transmit messages of up to 1 MB including large images or multiple files; may incur high charges depending on subscribed price plan.

PC Mail

Receive or reply to PC mail account messages. Use 932SH to handle PC Mail messages like SMS or S! Mail.

Available Entry Items

	Recipient	Subject	Message	Attachment
SMS	Available*	N/A	Available	N/A
S! Mail	Available	Available	Available	Available
PC Mail	Available	Available	Available	Available

*SoftBank handset numbers only.

- A separate contract is required to use S! Mail and receive e-mail from PCs, etc.
- For more information, see SOFTBANK MOBILE Corp. Website (P.15-23).

Auto Retry Function

If recipient's handset is off/out-of-range, a sent message is saved in Server Mail Box and delivery attempted at regular intervals. (Undeliverable messages are deleted.)

Auto Resend

When Auto Resend is active, handset automatically resends unsent messages up to two times. Cancel to disable (P.4-29).



Customizing Handset Address

Change alphanumerics before @ of the default handset mail address.

For more information, see SOFTBANK MOBILE Corp. Website (P.15-23).

Changing Address

1  → **Settings** → 

2 **Address Settings** → 

- Handset connects to the Internet. Select **English** and press , then follow onscreen instructions.

Saving Address

When handset address is changed, SoftBank sends new address confirmation via S! Mail.




To save new address to My Details, follow these steps. (New address is effective even if not saved.)

1 **Message** → 



2 **Information** → 

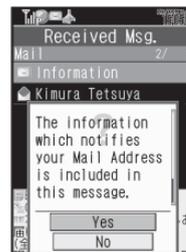

3 **Yes** → 



4 




Sending S! Mail

Follow these steps to send S! Mail to a number/address saved in Phone Book:

1 ➔ Create Message ➔

When a PC Mail Account exists, select **S! Mail** and press .

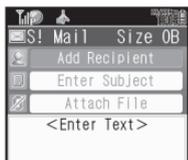

S! Mail Composition Window

2 Select recipient field ➔

3 Phone Book ➔

4 Select entry ➔

5 Select number or mail address ➔

- Omit if only one number or address is saved.
- When a mail address is entered, do not use single-byte katakana in message text or subject.

6 Select subject field ➔ ➔ Enter subject ➔

7 Select message text field ➔



Text Entry Window

8 Enter message ➔



S! Mail Composition Window

9 ➔ Transmission starts

- To cancel, press during transmission.

Incoming Calls while Creating Message

- Content is saved temporarily. End the call to return.

Previewing Outgoing Message

After , ➔ Preview Message ➔

Pictogram Entry

- In Pictogram List, press to toggle cross-carrier Pictograms and all Pictograms.
- Pictogram appearance may differ by carrier.

Specifying Line in Dual Mode

[S! Mail Composition Window] ➔ Switch Line ➔ ➔ Select line ➔

Advanced


- Using other recipient entry methods
- Adding recipients
- Inserting signature automatically
- Converting mail type (SMS/S! Mail) (And more on P.4-18)
- Saving without sending
- Requesting delivery confirmation
- Designating/editing reply-to address (And more on P.4-19 - 4-20)
- Requesting Delivery Report for all messages
- Disabling automatic resend of unsent messages
- Hiding progress bar while sending messages (And more on P.4-29)



Attaching Files

Send attachments to compatible handsets. Follow these steps to attach images to S! Mail:

- 1 In S! Mail Composition window after composing message, select attachment field 

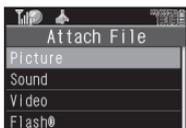

- 2 **Picture**   Select folder 

- 3 Select file 



Attach File Window

- 4   **Transmission starts**

Advanced

-   Changing attached image size  Set Auto Play File (And more on P.4-20)
-  Limiting S! Mail message size  Disabling image auto-resize  Enabling/disabling image auto-open or sound auto-play (And more on P.4-31)

Attaching Non-Image Files

- In , select a folder other than **Picture** and press , then select a file.

Attaching Multiple Files

After , **Attach (1)**   **Attach**

- File**   **From** 
- **X** in **Attach (X)** indicates the number of attached files.

Message Size Limit

When message size reaches certain limit upon attaching a file, one of the following confirmations appears:



Select message size limit or choose **Yes** and press  to proceed. (Images may be resized automatically.) To make selection the default setting hereafter, press  to check **From now on too** check-box. (Confirmation will be disabled.)

If Recipient Cannot Receive Large Messages (Up to 1 MB)

- Message may be truncated or attachments may be lost.

Sending Feeling Mail

- 1 In S! Mail Composition window after composing message,   **Feeling Settings** 



- 2 Select category, e.g., **Happy/Glad** 

- 3 Select item, e.g., **I Love You** 



- 4   **Transmission starts**

Canceling Feeling Mail

[S! Mail Composition Window] Select subject field    Select Pictogram, e.g.,  



Sending Graphic Mail

Follow these steps to:


- Change font size and background color
- Insert images and My Pictograms
- Scroll text

1 In text entry window, (Long)




Graphic Mail Window


2 Font Size: →

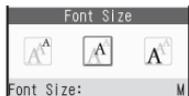


3 Select size → Enter text

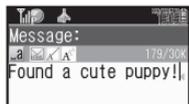

4 BG Color: → Select color →

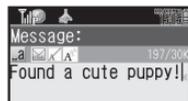

5 Picture → Select folder → Select file →

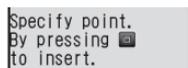

6 Select location → CLEAR /BACK


7 My Pictogram → Select file → CLEAR /BACK



8 Effect →



9 Scrolling →

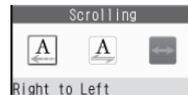

10 Select direction → Enter text

11 Transmission starts

Canceling Last Action

[Graphic Mail Window] Undo →

Cancelling All Graphic Mail Settings

[Graphic Mail Window] Cancel →
→ Yes →

Saving as Templates

After 10, → Save as
Template → Enter name →
→ Save here →

- Only the message text is saved.

Advanced


- Creating Graphic Mail from templates
- Changing text color, size & effect
- Changing text color
- Inserting background sound
- Inserting Flash® file
- Inserting horizontal line
- Flashing text
- Aligning text (left/right/center) (And more on P.4-20 - 4-21)



Sending SMS

Follow these steps to send SMS to a number saved in Phone Book:

1  → **Create New SMS** → 

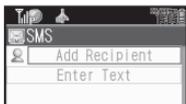

SMS Composition Window

2  **Select recipient field** → 

3  **Phone Book** → 

4  **Select entry** → 

5  **Select number** → 



- Omit 5 if only one number is saved.

6  **Select message text field** → 



Text Entry Window

7  **Enter message** → 



SMS Composition Window

8  → **Transmission starts**

Incoming Calls while Creating Message

- Content is saved temporarily. End the call to return.

When Message Text Exceeds Limit

- A confirmation appears. To convert SMS to S! Mail, follow these steps:

Yes → 

Specifying Line in Dual Mode

[SMS Composition Window]  →

Switch Line →  → **Select line** → 

Advanced

- Using other recipient entry methods
- Adding recipients
- Using Speed Dial/Mail list
- Converting mail type (SMS/S! Mail) (And more on P.4-18)
- Saving without sending
- Requesting delivery confirmation
- Changing Server sent message storage limit (And more on P.4-19 - 4-20)
- Changing Server sent message storage limit
- Changing SMS Server number
- Changing character encoding for composing messages (P.4-32)



Opening & Replying

Opening New Messages

Information window opens for new mail. See P.4-17 to receive PC Mail.



Important Message Retrieval Notes

- By default, complete messages including attachments are retrieved in and outside Japan; transmission fees apply depending on subscribed price plan.
- Automatic message retrieval while abroad may incur high charges since flat-rate packet transmission plans do not apply during international roaming.
- To retrieve only the initial portion of message text automatically, set Message DL to **Manual**; retrieve complete message manually as needed.

Delivery Report

- Information window opens for Delivery Report. Follow these steps to open it:
Delivery Report → → **Select message with report** → →

1 Message →



Message List

2 Select message →



- Message text appears in 3D animation (3D Pictogram).

3 Select 3D Pictogram option



- Message window opens.

Receiving Feeling Mail

- Small Light, Vibration and ringtone respond according to settings.

Attached Images

- Attached images open automatically.

Messages with Quiz

Enter or select answer →

- Message cannot be opened until the correct answer is entered or selected.

Animation View

- When a specific Pictogram is included in subject or message text, corresponding animation appears in message window background.

Mail Notice

- When Message DL is not set to **Auto (All)**, Server sends initial portion of message text in each of the following cases:
 - The message was sent to multiple recipients
 - Files are attached to the message


Advanced

- Opening new mail out of Standby ● Retrieving new S! Mail manually ● Viewing new messages on External Display (And more on P.4-21 - 4-22)
- Muting ringer, etc. for messages sorted into Secret folders ● Disabling 3D Pictogram ● Retrieving complete S! Mail messages manually ● Retrieving specified messages (And more on P.4-29 - 4-31)



Window Description

Message List

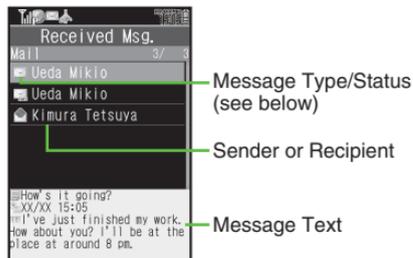


Message Type/Status

	Unread		Mail Notice (remaining portion exists)
	Read		Unread Delivery Report
	Sent		Attachments
	Failed		Protected
	Replied		Priority (High)
	Forwarded		Priority (Low)
	Send Reservation set		USIM Card SMS

SMS or PC appears for SMS/PC Mail messages (SMS, etc.).

Message Window

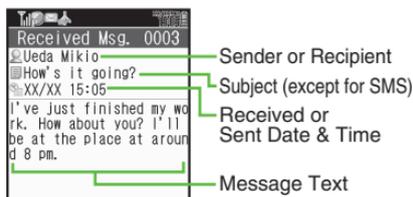

Press to open previous (older) message, or to open next (newer) one.

Line Type Indicators

- When using Double Number in Dual Mode, Line indicators (and) appear in message list.

Changing Font Size

3 (Long) to enlarge or 1 (Long) to reduce

When Rotating Display to Cycloid Position

- Send reply confirmation appears.
 - Choose **Yes** and press to open Mail Composition window. (Original message appears on the left.)
 - Choose **No** and press to close confirmation. (Message window remains in landscape orientation.)
- Press while confirmation appears to make selection the default setting hereafter.

Replying to Messages

1 In message window,



- Original message text is quoted (except for SMS and Graphic Mail).

2 Complete message

Replying to Messages Addressed to Multiple Recipients

After 1, To Sender or Reply All



Auto Reply

- Handset sends a reply automatically when receiving messages from saved numbers or addresses in specified mode (Manner mode, etc.).
- When Rotating Display to Cycloid Position**
- Original message appears on the right.

Advanced


- Using linked info
- Saving attachments to Data Folder
- Looking up message text words in dictionaries
- Jumping to message top/bottom
- Reporting unsolicited message sources as spammers
- Selecting mail type/quote option
- Opening received message for reference
- Replying quickly using fixed text
- Replying to messages automatically
- Viewing messages in Cycloid position (And more on P.4-22 - 4-24)
- Selecting quote option (P.4-29)



Managing & Using Messages

Messaging Folders

Messages are organized in folders by type.

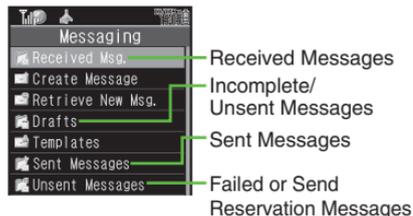


Auto Delete

- Oldest received/sent messages are deleted automatically to save new ones when memory is full. Protect important messages to avoid unintentional deletion.

Opening Help

- Follow these steps in folder list, message list or message window:

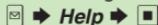

Checking Messages

- 1 → **Received Msg. or Sent Messages**



Folder List


- When a PC Mail Account exists, PC Mail folder (folder with the name specified in Account Name) appears.
- Select Mail folder or PC Mail folder and press to hide/show sub folders. To open full message list, hide sub folders and press .

- 2 **Select folder**



Message List

- 3 **Select message**

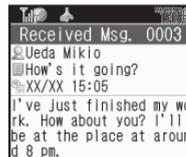

Message Window

Protecting Messages

- 1 **In message list, select message** → **Manage Msg.**

- 2 **Lock**

Canceling Protection

- In , **Unlock**

Advanced

- Selecting multiple messages
- Color-tagging messages
- Deleting messages (And more on P.4-24 - 4-25)
- Forwarding messages
- Sending from Drafts
- Checking Server Mail message count and volume
- Changing message window scroll unit
- Selecting automatic deletion option for received messages
- Canceling automatic deletion of oldest sent messages (And more on P.4-27 - 4-28)



Searching Messages

Search messages by message text, sender/recipient address, etc.

- 1  ➔ **Received Msg. or Sent Messages** ➔ 
- 2  ➔ **Search** ➔ 
- 3 **Search All Msg.** ➔ 
- 4 **Select method** ➔  ➔ **Select/enter address or text** ➔ 

Searching by Folder

In , select folder ➔  ➔ **Search** ➔  ➔ **Search Folder** ➔  ➔ 


Searching Message Text

- Follow these steps to find specific words/phrases; limit search by character type.
- [Message Window]  ➔ **Search Text** ➔  ➔ **Enter text** ➔ 
- Press  or  to jump to next/previous search result.

Hiding Folders

Hide Received Msg./Sent Message folder to require Handset Code for access to the folder and messages within. Chat Folders are not affected.

- 1  ➔ **Received Msg. or Sent Messages** ➔ 
- 2 **Select folder** ➔ 

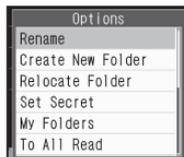

- 3 **Set Secret** ➔  ➔ **Enter Handset Code** ➔  ➔ 

Accessing Secret Folders

After 1,  ➔ **Unlock Temporarily** ➔  ➔ **Enter Handset Code** ➔ 

Advanced

-   Moving messages manually
-  Renaming folders
-  Deleting folders
-  Adding folders
-  Moving folders
-  Changing status of all messages within folders to read
-  Canceling automatic deletion of messages within folders
-  Canceling Secret (P.4-25 - 4-26)



Sorting Messages


Sorting into Designated Folders

Sort messages by sender/recipient or partially matching text in sender/recipient address, subject or SMS message text.


1 ➔ **Received Msg. or Sent Messages** ➔

2 Select target folder ➔

3 **My Folders** ➔ ➔ Select blank entry ➔

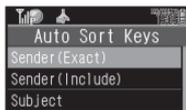

4 **Sender(Exact)**
(**Recipient(Exact)** for Sent Messages) ➔

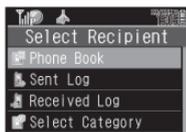

5 Select method ➔ ➔ Select/enter number/address ➔

6 ➔ Saved

Sorting by Part of Mail Address

In 4, **Sender(Include)**
(**Recipient(Include)** for Sent Messages)
➔ ➔ Enter text ➔ ➔ 6


Sorting by Part of Subject/SMS Message Text

In 4, **Subject** ➔ ➔ Enter text ➔ ➔ 6

Filtering Spam


Follow these steps to filter messages from handset numbers/addresses not saved in Phone Book into Spam Folder:
Alternatively, set sort keys to filter messages.

1 ➔ **Settings** ➔ ➔ ➔ **General Settings** ➔

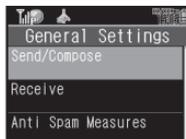

2 **Anti Spam Measures** ➔

3 Enter Handset Code ➔

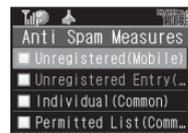

4 **Unregistered(Mobile)** ➔ (✓)

5 ➔

Exempting Messages from Filtering

After 4, **Permitted List(Common)** ➔

➔ Select blank entry ➔ ➔ Select key ➔ ➔ Select/enter number/address/subject ➔ ➔ ➔ (✓) ➔ 5

When a PC Mail Account Exists

- Filter PC Mail messages from addresses not saved in Phone Book.

Advanced

- Re-sorting messages
- Sorting spam by setting keys
- Editing/deleting sort keys (P.4-26)

Using Chat Folders

Organize messages exchanged between handset and Chat members' handsets.
To hide messages, set Chat Folder to Secret.

Saving Members

- 1 → **Chat Folder** →




Chat Folder List

- 2 **Select folder** →




- 3 **Add New Member** →

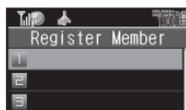

- 4 **Select blank entry** →
• Select saved member to edit number/
address.

- 5 **Select method** → →
**Select/enter number/
address** →

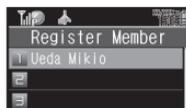

- Repeat 4 - 5 to add members.

- 6 → **Saved**

Changing Members

In 4, select member → →

Change Member → → **From** 5

Deleting Members

In 4, select member → → **Delete**

→ → **Yes** → → 6

Opening Chat Folders

- 1 **In Chat Folder list, select
folder** →



- 2 **Select message** →

4

Messaging

Advanced

- Deleting folders ● Deleting all messages ● Resetting Chat Folders (P.4-26)



Creating Groups for Broadcast Mail

Create Mail Groups to send messages to multiple recipients at one time.

Save target recipients to Phone Book beforehand.

1  → **Settings** → 

2 **Set Mail Group** → 




Mail Group Entry Window

3 **<Add New Group>** →  → **Enter name** → 

4 **Select Group** → 



5 **<Assign New Entry>** →  → **Select entry** → 

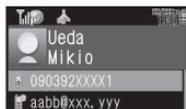

6 **Select number or mail address** → 



- Omit  if only one number or address is saved.
- Repeat  -  to add members.


7  → **Saved**

Advanced

-  ● Renaming Mail Groups ● Deleting Mail Groups/Group members ● Changing Mail Group members (P.4-27)

PC Mail

Receive or reply to PC mail account messages.

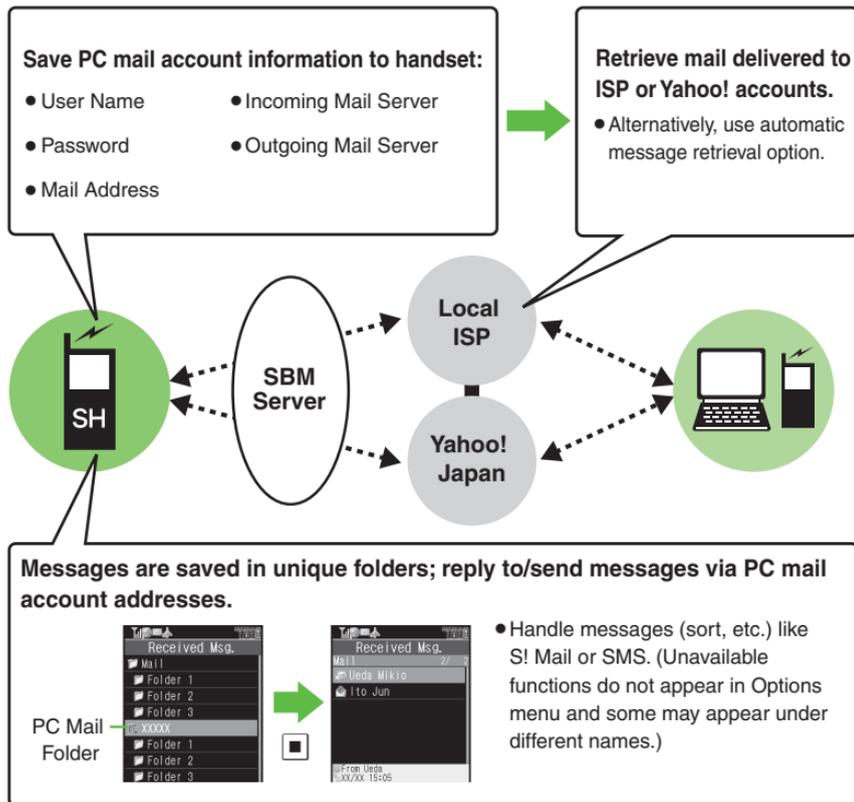

Important PC Mail Usage Notes

- Receiving PC Mail for the first time after PC Mail Account setup may incur high charges due to large-volume packet transmissions.
- Setting handset to retrieve PC Mail automatically may incur high charges; remember this, especially when using handset outside Japan.
- Other functions may slow while handset is checking for new messages.
- Checking for new messages may incur transmission fees even when none exists.
- Single-byte katakana and Pictograms are not supported.
- When messages sent from handset to PC mail account are retrieved by handset (then opened, replied with quotes, forwarded, etc.), included Pictograms may not appear or may appear as different characters.



PC Mail Account Setup

- Proceed with setup according to information supplied by ISP.
- PC Mail services may be unavailable depending on the services, settings or contract details for your PC mail account. Confirm compatibility with POP/SMTP message retrieval/transmission via e-mail software beforehand.

Mandatory Items for Retrieval

User Name	Required to connect to incoming mail server
Password	Required to connect to incoming mail server
ReceivingServer	Incoming mail server address


Mandatory Items for Transmission

Mail Address	Address to use PC Mail
Sender Server	Outgoing mail server address


Setting Other Items

- Edit information as needed; for description, select an item and press .

- 1  → **Settings** →  → **PC Mail Settings** → 

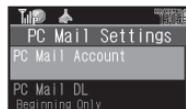

- 2 **PC Mail Account** → 

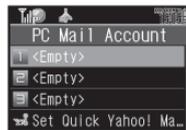

- 3 **<Empty>** → 

- 4 **Account Name** →  → **Enter name** → 

- 5 **Set Receiving** →  → **Select item** →  → **Select/enter item** →  → 

- User Name, Password and ReceivingServer are mandatory.

- 6 **Set Sending** →  → **Select item** →  → **Select/enter item** → 

- Mail Address and Sender Server are mandatory.

- 7  →  → 

- If a confirmation appears, follow onscreen prompts.

Using Yahoo! Mail Addresses

- In , **Set Quick Yahoo! Mail** →  → **Yes or No** → 

- Follow onscreen instructions.
- Choose **No** to create a new account.

Editing Accounts

- In , **select account** →  → **From** 

Deleting Accounts

- In , **select account** →  → **Yes** → 

Saving User ID & Password for Transmission

- If User Name and Password are unset Set Receiving items are automatically used for SMTP authentication. Follow these steps if ISP requires User Name and Password:

- In , **Set Sending** →  → **Sender Auth.** →  → **SMTP Auth.** →  → **User Name** →  → **Enter name** →  → **Password** →  → **Enter password** →  →  → **SAVE** → 



Retrieving New PC Mail

Retrieve new messages from created accounts. If message count is high, some may not be received on the first attempt.

- 1  ➔ 
- 2 
- 3 **Select PC Mail folder** ➔ 
 - ➔ **Select message** ➔ 



Message Window

- Press  to retrieve full message.
- Message window is similar to that of S! Mail.

Deleting Messages

- [Message List] **Select message** ➔ 
- ➔ **Delete** ➔  ➔ **Select option** ➔ 
-  ➔ **Yes** ➔ 

Retrieving Messages by Account

- After 1, select account ➔  ➔ 

Checking Received PC Mail

- 1  ➔ **Received Msg.** ➔ 
 - ➔ **Select folder** ➔ 
 - Message list appears. Message list is similar to that of S! Mail.
- 2 **Select message** ➔ 
 - Message window opens.

Replying to PC Mail

- 1 **In message window,** 
 - PC Mail Composition window opens.
 - Original message text is quoted (except for HTML messages).
- 2 **Complete message** ➔  ➔ **Transmission starts**

Replying without Quoting Original Message Text

- [Message Window]  ➔ **Reply** ➔ 
- ➔ **PC Mail** ➔  ➔ **Complete message** ➔ 

Changing Account for Outgoing Messages

- [PC Mail Composition Window] **Select recipient field** ➔  ➔ **From:** ➔  ➔ **Select account** ➔ 

Sending PC Mail

Follow these steps to create and send PC Mail:

- 1  ➔ **Create Message** ➔ 
- 2 **Select PC Mail Account** ➔ 
- 3 **Complete message** ➔  ➔ **Transmission starts**

Converting PC Mail to S! Mail

- After ,  ➔ **Convert to S! Mail** ➔  ➔ **Yes** ➔ 

Note

- Single-byte katakana and Pictograms are not supported.

Advanced

-   Retrieving complete PC Mail messages
-  Retrieving new messages automatically
-  Retrieving PC Mail for specified folder
-  Disabling automatic word wrap
-  Retrieving complete messages from specified addresses
-  Restricting complete message retrieval by size (P.4-31 - 4-32)



Creating/Sending Messages

Recipient

Using other recipient entry methods	In Mail Composition window, select recipient field → Select method → Select/enter number/address →
Adding recipients	In Mail Composition window, select recipient field → Add Recipient → Select method → Select/enter number/address →
Switching recipient status (To, Cc and Bcc)	In Mail Composition window, select recipient field → Select recipient → Select status → <ul style="list-style-type: none"> Other recipients cannot see numbers/addresses set to Bcc.

Using Speed Dial/Mail list	<p>Saving Recipients</p> Settings → Speed Dial/Mail → <Empty> → Select entry → Select number or mail address → Do not Assign →
----------------------------	---

Using Speed Dial/Mail list	<p>Creating Messages</p> <p>In Standby, - (Speed Dial/Mail entry number) → </p> <ul style="list-style-type: none"> When messaging to SoftBank handset numbers, select S! Mail or SMS and press .
----------------------------	--

Editing/deleting recipients	<p> In Mail Composition window, select recipient field → See below</p>
	<p>Editing Recipients</p> <p>Select recipient → Edit → </p>
	<p>Deleting a Recipient</p> <p>Select recipient → Delete → </p>
	<p>Deleting All Recipients</p> <p>Select recipient → Delete All → Yes → </p>

Editing Speed Dial/Mail list	<p> Settings → Speed Dial/Mail → See below</p>
	<p>Editing Entries</p> <p>Select entry → Change → Select number/address → Select new number/address → </p>
	<p>Canceling Entries</p> <p>Select entry → Remove Selected → Yes → </p>
	<p>Canceling All Entries</p> <p> Remove All → Yes → </p>

Message Text

Inserting signature automatically	<p> Settings → S! Mail Settings → Signature → Edit → Enter signature → Auto Insert → On → </p> <ul style="list-style-type: none"> Signature is inserted above message text when forwarding messages or quoting original message text in replies. Not available for SMS. When using Double Number in Dual Mode, set signature by mode.
-----------------------------------	--

Inserting signature manually	In text entry window, Insert/Font Size → Signature →
------------------------------	--

Inserting ASCII Art	In text entry window, Call ASCII Art → Select entry →
---------------------	---

Previewing 3D Pictogram	In Mail Composition window, 3D Pictogram →
-------------------------	--

Converting mail type (SMS/S! Mail)	In Mail Composition window, Change to SMS or Convert to S! Mail → Yes →
------------------------------------	---



Save/Send Reservation/Cancel

Saving without sending	After completing message, → <i>Save to Drafts</i> →
Sending automatically later	(Start Here) After completing message, → <i>Send Reservation</i> → → See below Auto Send when Signal Returns Within the Network → → <i>Yes</i> →
	Designating Send Date/Time (within one week) <i>Date & Time</i> → → <i>Enter date/time</i> → → <i>Yes</i> →
Canceling sent S! Mail	→ <i>Sent Messages</i> → → <i>Select folder</i> → → <i>Select message</i> → → <i>Set Sent Cancel</i> → → <i>Yes</i> → • Available for messages sent to SoftBank handsets.

Messaging Settings

- For SMS, only Delivery Report and Expiry Time are available.
- For PC Mail, only Reply to Settings and Priority are available.

Requesting delivery confirmation	In Mail Composition window, → <i>Messaging Settings</i> → → <i>Delivery Report</i> → → <i>On</i> → • Delivery Report arrives when message is delivered. • Open sent message to check delivery status indicator: ▪ : Delivered, : Unknown, : Failed • Available when messaging to SoftBank handsets.
Setting priority	In Mail Composition window, → <i>Messaging Settings</i> → → <i>Priority</i> → → <i>Select priority</i> →
Setting message to be deleted from recipient handset once read	In Mail Composition window, → <i>Messaging Settings</i> → → <i>Set Auto Delete</i> → → <i>On</i> → • Available when messaging to SoftBank handsets.

Adding a reply request	In Mail Composition window, → <i>Messaging Settings</i> → → <i>Reply Request</i> → → <i>On</i> → • Available when messaging to SoftBank handsets.
Restricting forward/delete	In Mail Composition window, → <i>Messaging Settings</i> → → <i>Forward NG or Delete NG</i> → → <i>On</i> → • Available when messaging to SoftBank handsets.
Locking message with Quiz	(Start Here) In Mail Composition window, → <i>Messaging Settings</i> → → <i>Quiz</i> → → <i>Switch On/Off</i> → → <i>On</i> → → See below • Available when messaging to SoftBank handsets. Using Preset Questions (Multiple Choice) <i>Select question</i> → → <i>Selection</i> → → <i>Select number</i> → → <i>Enter/edit option</i> → → <i>Enter/edit all options</i> → <i>Select answer</i> → → →
	Using Preset Questions (Exact Answer Entry) <i>Select question</i> → → <i>Match Characters</i> → → <i>Enter answer</i> → → • May be unavailable for some questions.
	Creating Custom Quiz (Multiple Choice) <i><Create Original></i> → → <i>Enter question</i> → → <i>Selection</i> → → <i>Select number</i> → → <i>Enter option</i> → → <i>Complete entry</i> → → <i>Select answer</i> → → →
	Creating Custom Quiz (Exact Answer Entry) <i><Create Original></i> → → <i>Enter question</i> → → <i>Match Characters</i> → → <i>Enter answer</i> → →
Editing assigned Quiz	In Mail Composition window, → <i>Messaging Settings</i> → → <i>Quiz</i> → → <i>Edit Question</i> → → <i>Edit question/options/answer</i> → → → • Available when messaging to SoftBank handsets.



Lowering size limit for outgoing S! Mail messages	In Mail Composition window, ➔ Messaging Settings ➔ ➔ Create Msg. Size ➔ ➔ 300KB ➔
Designating/editing reply-to address	<small>[Start Here]</small> In Mail Composition window, ➔ Messaging Settings ➔ ➔ Reply to Settings ➔ ➔ See below Designating Switch On/Off ➔ ➔ On ➔ ➔ Select method ➔ ➔ Select/enter address ➔ Editing Edit Address ➔ ➔ Edit ➔
Changing Server sent message storage limit	In Mail Composition window, ➔ Messaging Settings ➔ ➔ Expiry Time ➔ ➔ Select option ➔ • Available for SMS only.

■ Attachments

Changing attached image size	Select attached file ➔ ➔ Resize Picture ➔ ➔ Select size ➔ • May be unavailable for some images.
Capturing/recording and attaching	<small>[Start Here]</small> Select attachment field ➔ ➔ See below Still Images Picture ➔ ➔ Take Picture ➔ ➔ ➔ to shoot ➔ Video Video ➔ ➔ Record Video ➔ ➔ ➔ to start recording ➔ ➔ to stop ➔ Accept ➔ ➔ Select storage media ➔ Sounds Sound ➔ ➔ Record Voice ➔ ➔ ➔ to start recording ➔ ➔ to stop ➔ Accept ➔ ➔ Select storage media ➔

Set Auto Play File	Select attached file ➔ ➔ Set Auto Play File ➔ ➔ Switch On/Off ➔ ➔ On ➔ ➔ Enter Message ➔ ➔ Enter comment ➔ ➔ ➔ • Not available for PC Mail.
--------------------	---

■ Graphic Mail

Creating Graphic Mail from templates	Opening Templates from Messaging Menu ➔ Templates ➔ ➔ Select template ➔ ➔ Complete message ➔ • Template size may change when used for creating messages. Opening Templates from S! Mail Composition Window In S! Mail Composition window, ➔ Launch Template ➔ ➔ Select template ➔ ➔ Complete message ➔ • Open a template before entering message text.
Changing text color, size & effect	In text entry window, (Long) ➔ ➔ Select start point ➔ ➔ Highlight text range ➔ ➔ Font Color: , Font Size: or Effect ➔ ➔ Set ➔
Changing text color	In text entry window, (Long) ➔ Font Color: ➔ ➔ Select color ➔ ➔ Enter text
Inserting background sound	<small>[Start Here]</small> In text entry window, (Long) ➔ Insert ➔ ➔ See below Inserting BGM Sound ➔ ➔ Select folder ➔ ➔ Select file ➔ Deleting Delete BGM ➔ ➔ Yes ➔



Inserting Flash® file	In text entry window, (Long) → <i>Insert</i> → → <i>Flash</i> → → Select file →
Previewing Flash® file	In text entry window after inserting Flash® file, → <i>Preview</i> → <ul style="list-style-type: none"> When Graphic Mail window is open, press first.
Deleting Flash® file	In text entry window after inserting Flash® file, move cursor before Flash® icon → <ul style="list-style-type: none"> When Graphic Mail window is open, press first.
Inserting horizontal line	In text entry window, (Long) → <i>Insert</i> → → <i>Line</i> →
Flashing text	In text entry window, (Long) → See below
	Flashing <i>Effect</i> → → <i>Blink</i> → → <i>Blink On</i> → → Enter text
	Canceling → Select start point → → Highlight text range → → <i>Effect</i> → → <i>Blink</i> → → <i>Blink Off</i> →
Aligning text (left/right/center)	In text entry window, (Long) → <i>Effect</i> → → <i>Alignment</i> → → Select option → → Enter text

Receiving/Opening Messages

Receiving

Opening new mail out of Standby	(Long)
Retrieving new S! Mail manually	→ <ul style="list-style-type: none"> When a PC Mail Account exists, select <i>S! Mail</i> and press . Retrieve messages missed while handset is out-of-range.
Retrieving Server Mail list	→ <i>Server Mail Box</i> → → <i>Mail List</i> → → <i>Yes</i> → <ul style="list-style-type: none"> When using Double Number in Dual Mode, select a line and press to proceed.
Retrieving remaining portions	Via Mail Notice In message list, select <i>Mail Notice</i> → → →
	Via Server Mail List → <i>Server Mail Box</i> → → <i>Mail List</i> → → <i>Select message</i> → <ul style="list-style-type: none"> If retrieve list confirmation appears, choose <i>Yes</i> and press .
Retrieving all Server Mail	→ <i>Server Mail Box</i> → → See below
	Directly from Server <i>Retrieve All</i> →
	Via Server Mail List <i>Mail List</i> → → → <i>Retrieve All</i> → <ul style="list-style-type: none"> If retrieve list confirmation appears, choose <i>Yes</i> and press .



Opening

Viewing new messages on External Display



- Available in closed position.

Message Window

Using linked info

Dialing Numbers

In message window, select number → → **Call or Video Call** →

Sending Messages

In message window, select number or mail address → → **Create Message** → → **S! Mail or SMS** → → **Complete message** →

- For mail addresses, omit mail type selection step.

Accessing Internet Sites

In message window, select URL → → **Yes** →

- Select **PC Site Br.** to connect via PC Site Browser.

Saving Location Information URLs

In message window, select URL → → **RegisterMyLocation** → → **Name** → → **Enter name** → →

Setting Location Information as Destination

In message window, select URL → → **Set to Destination** → → **Yes** →

Saving attachments to Data Folder

In message window, select file → → **Save to Data Folder** → → **Enter name** → → **Save here** →

- For templates, **Save as Template** appears. (Omit file name entry step.)

Installing attached widgets

In message window, select file → → **Install Attach** → → **Enter name** →

Using attachments

In message window, select file → → **See below**

As Wallpaper

Set as Wallpaper → → **Enter name** → → **Save here** → → **Vertical or Horizontal** → →

- For images smaller or larger than Display, select an option.

As Ringtone/Ringvideo

Set as Ringtone or Set as Ring Video → → **Enter name** → → **Save here** → → **Select item** →

- For **For New Message** or **For New PC Mail**, enter ring time and press .

Playing slides

In message window, → **Slide Play** →

- A slide consists of message text with attachments.

Saving to Phone Book

Saving Sender Address

In message window, → **Save Address** → → **Select number or mail address** → → **As New Entry** → → **Complete other fields** →

- To add to an existing entry, select **As New Detail**.

Saving Linked Info

In message window, select number or mail address → → **Save to Phone Book or Save Address** → → **As New Entry** → → **Complete other fields** →

- To add to an existing entry, select **As New Detail**.



Copying text	<p>[Start Here] In message window,  → <i>Copy</i> → </p> <p>→ See below</p> <p>Sender/Recipient Number/Address <i>Address</i> →  → <i>Select number/address</i> → </p> <p>Subject or Message Text <i>Subject or Message Text</i> →  → <i>Select first character</i> →  → <i>Highlight text range</i> → </p>
	<p>In message window,  → <i>Copy & Search Dict.</i> →  → <i>Select first character</i> →  → <i>Highlight text range</i> →  → <i>Select dictionary</i> →  → <i>Search</i> →  → <i>Select word</i> → </p>
Looking up message text words in dictionaries	<p>In message window,  → <i>View Settings</i> → </p> <p>→ <i>Scroll Jump</i> →  → <i>Jump to Top or Jump to Bottom</i> → </p>
Jumping to message top/bottom	<p>In message window, select file →  → <i>Remove File</i> →  → <i>Yes</i> → </p>
Deleting attachments	<p>In message window,  → <i>Report Spam</i> → </p> <p>→ </p> <ul style="list-style-type: none"> • Signature is not inserted automatically. • Not available for PC Mail.
Reporting unsolicited message sources as spammers	

■ Replying

Selecting mail type/quote option	<p>In message window,  → <i>Reply</i> →  → <i>Select type/option</i> →  → <i>Complete message</i> → </p>
Opening received message for reference	<p>In message window,  → <i>Rep. with View</i> → </p> <p>→ <i>Select option</i> →  → <i>Complete message</i> → </p>
Replying quickly using fixed text	<p>Editing Quick Reply Text  → <i>Settings</i> →  → <i>General Settings</i> →  → <i>Send/Compose</i> →  → <i>Set Quick Reply</i> →  → <i>Select text</i> →  → <i>Edit</i> → </p> <p>Using Quick Reply In message window,  (Long) → <i>Select text</i> → </p>
Replying to messages automatically	<p>[Start Here]  → <i>Settings</i> →  → <i>General Settings</i> →  → <i>Send/Compose</i> →  → <i>Auto Reply</i> →  → See below</p> <p>Saving Recipients <i>Address Setting</i> →  → <i>Select blank entry</i> →  → <i>Select method</i> →  → <i>Select/enter number/address</i> →  → <i>Select mode</i> →  (<input type="checkbox"/>/ <input checked="" type="checkbox"/>) →  → </p> <ul style="list-style-type: none"> • Select saved recipient and press  to edit number/address. <p>Editing Reply Text <i>Reply Message</i> →  → <i>Select mode</i> →  → <i>Enter text</i> → </p> <ul style="list-style-type: none"> • Edit text for each mode. <p>Activating Auto Reply <i>Switch On/Off</i> →  → <i>On</i> → </p> <ul style="list-style-type: none"> • Replies are sent via S! Mail. • Replies are sent to the same sender only once after each time Auto Reply is activated. • Auto Reply is not available for PC Mail or while abroad.



Viewing messages in Cycloid position	Start Here Settings General Settings Display Rotation See below
	Message Window Reference Reply Off <ul style="list-style-type: none"> Send reply confirmation is disabled.
	Mail Composition Window (for Reply) Reply From Mail Off <ul style="list-style-type: none"> Original message window is hidden.

Managing Messages

Message List

Selecting multiple messages	Selecting In message list, Select message (✓) <ul style="list-style-type: none"> To uncheck, press again.
	Selecting Up to 50 Messages at Once In message list, Manage Msg. Check in Block
	Unchecking All In message list, Unselect All
Color-tagging messages	In message list, Manage Msg. Color Label Select color
Sorting messages	In message list, View Settings Sort Select option
Opening sender/recipient details	In message list, select message View Mail Address Select sender or recipient

Checking memory status	Memory Status Select item <ul style="list-style-type: none"> Press to check memory status by service (SMS & S! Mail or PC Mail). When using Dual Number in Dual Mode, select a mode for SMS & S! Mail. USIM Card SMS message count and volume do not appear.
Opening properties	In message list, select message Message Details
Changing template name display	Templates Item Displayed Select item
Saving SMS messages to USIM Card	In message list, select SMS message Manage Msg. SIM Sync <ul style="list-style-type: none"> Available for compatible USIM Cards.
Changing received message status (read/unread)	In message list, select message Manage Msg. Switch to Unread or Switch to Read



■ Deleting Messages

Deleting messages	<p>One Message In message list, select message → → <i>Delete</i> → → <i>Yes</i> → </p> <ul style="list-style-type: none"> Alternatively, delete an open message.
	<p>All Messages In message list, → <i>Manage Msg.</i> → → <i>Delete All</i> → → <i>Delete All or Except Locked Msg.</i> → → Enter Handset Code → </p>
	<p>All Messages in Drafts or Unsent Messages In message list (Drafts or Unsent Messages), → <i>Delete All</i> → → Enter Handset Code → </p>
Deleting Server Mail via Mail Notice	<p>In message list, select Mail Notice → → <i>Delete</i> → → Select option → → <i>Yes</i> → </p>
Deleting Server Mail via Server Mail list	<p> → <i>Server Mail Box</i> → → <i>Mail List</i> → → See below</p> <ul style="list-style-type: none"> If retrieve list confirmation appears, choose <i>Yes</i> and press .
	<p>One Message Select message → → <i>Delete</i> → → <i>Yes</i> → </p>
	<p>All Messages → <i>Delete All</i> → → Enter Handset Code → → <i>Yes</i> → </p>

Deleting all Server Mail directly from Server	<p> → <i>Server Mail Box</i> → → <i>Delete All</i> → → Enter Handset Code → → See below</p>
	<p>All Retrieved Messages <i>Except New Msg.</i> → </p>
	<p>All Messages <i>Delete All</i> → </p>

■ Folders

Moving messages manually	<p>In message list, select message → → <i>Manage Msg.</i> → → <i>Move to Folder</i> → → Select folder → </p> <ul style="list-style-type: none"> If sort messages confirmation appears, choose <i>Yes</i> and press ; messages sent to/received from the number/address will be sorted into selected folder automatically.
Renaming folders	<p>In folder list, select folder → → <i>Rename</i> → → Enter name → </p> <ul style="list-style-type: none"> Available in Chat Folder list as well.
Deleting folders	<p>In folder list, select folder → → <i>Delete</i> → → Enter Handset Code → </p> <ul style="list-style-type: none"> If delete message confirmation appears, choose <i>Yes</i> and press . When Double Number is active, corresponding folders in other modes are also deleted.
Adding folders	<p>In folder list, → <i>Create New Folder</i> → → Enter name → </p> <ul style="list-style-type: none"> Available in Chat Folder list as well.
Moving folders	<p>In folder list, select folder → → <i>Relocate Folder</i> → → Select location → </p>



Changing status of all messages within folders to read	In folder list, select folder → → <i>To All Read</i> → → <i>Yes</i> →
Canceling automatic deletion of messages within folders	In folder list, select folder → → <i>Protect</i> → <ul style="list-style-type: none"> To cancel protection, select <i>Not Protect</i> and press in the steps above.
Canceling Secret	Unlock Secret folders temporarily and select Secret folder → → <i>Unset Secret</i> → → Enter Handset Code →
■ Sorting into Folders	
Re-sorting messages	In folder list, select folder → → <i>Classify</i> → <ul style="list-style-type: none"> Available in Chat Folder list as well.
Sorting spam by setting keys	→ <i>Settings</i> → → <i>General Settings</i> → → <i>Anti Spam Measures</i> → → Enter Handset Code → → <i>Individual(Common)</i> → (✓) → → Select blank entry → → Select key → → Select/enter number/address/subject → → → →

Editing/deleting sort keys	(Start Here) In folder list, select folder → → <i>My Folders</i> → → Select entry → See below
	Editing Sender/Recipient Key → <i>Replace</i> → → Select method → → Select/enter number/address → →
	Editing Subject Key → <i>Edit</i> → →
	Deleting an Entry → <i>Delete</i> → → <i>Yes</i> → →
Deleting All Entries → <i>Clear All</i> → → <i>Yes</i> → →	
■ Chat Folders	
Deleting folders	→ <i>Chat Folder</i> → → Select folder → → <i>Delete Folder</i> → → Enter Handset Code → <ul style="list-style-type: none"> If delete message confirmation appears, choose <i>Yes</i> and press . When Double Number is active, corresponding folders in other modes are also deleted.
Deleting all messages	→ <i>Chat Folder</i> → → Select folder → → → <i>Manage Msg.</i> → → <i>Delete All</i> → → <i>Yes</i> →
Resetting Chat Folders	→ <i>Chat Folder</i> → → → <i>Reset</i> → → Enter Handset Code → → <i>Yes</i> →



Mail Groups

Renaming Mail Groups	<p>☰ → Settings → ☐ → Set Mail Group → ☐ → Select Group → ☰ → Edit Name → ☐ → Enter name → ☐ → Yes → ☐</p>
Deleting Mail Groups/Group members	<p>Start Here ☰ → Settings → ☐ → Set Mail Group → ☐ → Select Group → See below</p> <p>Mail Groups</p> <p>☰ → Delete → ☐ → Yes → ☐ → Enter Handset Code → ☐</p> <p>Group Members</p> <p>☐ → Select member → ☰ → Remove Entry → ☐ → Yes → ☐ → ☑</p> <ul style="list-style-type: none"> Source Phone Book entries remain even after deleting members.
	Changing Mail Group members

Using Messages

Forwarding messages	<p>In message window, ☰ → Forward → ☐ → Select recipient field → ☐ → Select method → ☐ → Select/enter number/address → ☐ → ☑</p> <ul style="list-style-type: none"> Attached files are forwarded. To forward SMS messages, select S! Mail or SMS and press ☐.
Sending from Drafts	<p>☰ → Drafts → ☐ → Select message → ☐ → Complete message → ☑</p>
Sending unsent messages	<p>Start Here In message list (Unsent Messages), select message → ☰ → See below</p> <p>Sending without Editing</p> <p>Resend → ☐</p> <p>Edit & Send</p> <p>Edit → ☐ → Complete message → ☑</p>
	Using sent messages
Saving schedules from message list	<p>In message list, select message → ☰ → Manage Msg. → ☐ → Save to Calendar → ☐ → Enter subject → ☐ → Enter start/end date/time → ☐ → Complete other fields → ☑</p> <ul style="list-style-type: none"> Source message is accessible from schedule window (via Related Mail in Options menu).



General Settings (Send/Compose)

Requesting Delivery Report for all messages	→ Settings → → General Settings → → Send/Compose → → Delivery Report → → On → • Available when messaging to SoftBank handsets.
Disabling automatic resend of unsent messages	→ Settings → → General Settings → → Send/Compose → → Auto Resend → → Off →
Designating/editing reply-to address	<div style="background-color: #e0e0e0; padding: 2px;"> → Settings → → General Settings → → Send/Compose → → Reply to Settings → → See below </div> <p>Designating</p> Switch On/Off → → On → → Select method → → Select/enter address →
Selecting quote option	→ Settings → → General Settings → → Send/Compose → → Reply With Text → → Select option →
Hiding progress bar while sending messages	→ Settings → → General Settings → → Send/Compose → → Sending Status → → Off(Background) →

General Settings (Receive)

■ Message Notice & Animation View

Muting ringer, etc. for messages sorted into Secret folders	→ Settings → → General Settings → → Receive → → Message Notice → → Secret Folder → → No Response →
Changing alerts for messages received during handset use	<div style="background-color: #e0e0e0; padding: 2px;"> → Settings → → General Settings → → Receive → → Message Notice → → See below </div> <p>Showing New Message Window</p> On Active Screen → → On →
	<p>Selecting Scrolling Notice Option</p> View Setting → → Select option →
	<p>Muting Alert Sound</p> Alert Sound → → Off →
Disabling Animation View	→ Settings → → General Settings → → Receive → → Animation View → → Off →



■ Feeling Mail

Hiding graphics above Information window	☰ → Settings → ☰ → General Settings → ☰ → Receive → ☰ → Link to Feeling → ☰ → Idle Screen Info. → ☰ → Off → ☰
Disabling/changing illumination	[Start Here] ☰ → Settings → ☰ → General Settings → ☰ → Receive → ☰ → Link to Feeling → ☰ → Light → ☰ → See below
	Disabling Switch On/Off → ☰ → Off → ☰
Changing vibration pattern	☰ → Settings → ☰ → General Settings → ☰ → Receive → ☰ → Link to Feeling → ☰ → Vibration Pattern → ☰ → Select pattern → ☰
	Muting/changing ringtones
Muting/changing ringtones	[Start Here] ☰ → Settings → ☰ → General Settings → ☰ → Receive → ☰ → Link to Feeling → ☰ → Ringtone → ☰ → See below
	Muting Ringer Switch On/Off → ☰ → Off → ☰
	Changing Ringtones Assign Tone → ☰ → Select category → ☰ → Select folder → ☰ → Select tone/file → ☰

■ 3D Pictogram

Disabling 3D Pictogram	☰ → Settings → ☰ → General Settings → ☰ → Receive → ☰ → 3D Pictogram → ☰ → Display Effect → ☰ → Disable → ☰
Changing background/speed	[Start Here] ☰ → Settings → ☰ → General Settings → ☰ → Receive → ☰ → 3D Pictogram → ☰ → See below
	Changing Background Background Color → ☰ → Select color or Random → ☰
	Changing Animation Speed Display Speed → ☰ → Select speed → ☰
S! Mail Settings	
■ Automatic Retrieval	
Retrieving complete S! Mail messages manually	☰ → Settings → ☰ → S! Mail Settings → ☰ → See below
	In Japan Message DL(Japan) → ☰ → Manual → ☰
	While Abroad Message DL(Abroad) → ☰ → Manual → ☰



Retrieving specified messages	<p>Start Here ⇒ Settings ⇒ ⇒ S! Mail Settings ⇒ ⇒ Message DL(Japan) or Message DL(Abroad) ⇒ ⇒ Auto (Specify) ⇒ ⇒ See below</p>
	<p>Selecting Sender Types Select item ⇒ (<input type="checkbox"/> / <input checked="" type="checkbox"/>) ⇒ </p>
	<p>Specifying Numbers/Addresses Individual Address ⇒ ⇒ Select blank entry ⇒ ⇒ Select method ⇒ ⇒ Select/enter number/address ⇒ ⇒ </p>
	<p>Deleting an Individual Address Entry Individual Address ⇒ ⇒ Select entry ⇒ ⇒ Delete ⇒ ⇒ Yes ⇒ ⇒ </p>
	<p>Deleting All Individual Address Entries Individual Address ⇒ ⇒ Select entry ⇒ ⇒ Clear All ⇒ ⇒ Yes ⇒ ⇒ </p>

■ Attachments

Limiting S! Mail message size	<p>Start Here ⇒ Settings ⇒ ⇒ S! Mail Settings ⇒ ⇒ Create Msg. Size ⇒ ⇒ 300KB or 1MB ⇒ </p> <ul style="list-style-type: none"> Images are resized automatically when message size exceeds the limit upon attaching them.
Disabling image auto-resize	<p>Start Here ⇒ Settings ⇒ ⇒ S! Mail Settings ⇒ ⇒ Picture Appearance ⇒ ⇒ Normal ⇒ </p> <ul style="list-style-type: none"> Setting applies to PC Mail as well.
Enabling/disabling image auto-open or sound auto-play	<p>Start Here ⇒ Settings ⇒ ⇒ S! Mail Settings ⇒ ⇒ Auto Play File ⇒ ⇒ Pictures or Sounds ⇒ ⇒ On or Off ⇒ </p> <ul style="list-style-type: none"> Setting applies to PC Mail as well.

Attaching captured/recorded files unsaved	<p>Start Here ⇒ Settings ⇒ ⇒ S! Mail Settings ⇒ ⇒ Send File Settings ⇒ ⇒ Attach Only ⇒ </p> <ul style="list-style-type: none"> Setting applies to PC Mail as well.
---	--

PC Mail Settings

Retrieving complete PC Mail messages	<p>Start Here ⇒ Settings ⇒ ⇒ PC Mail Settings ⇒ ⇒ PC Mail DL ⇒ ⇒ PC Mail DL ⇒ ⇒ All Contents ⇒ </p>
--------------------------------------	--

	<p>Start Here ⇒ Settings ⇒ ⇒ PC Mail Settings ⇒ ⇒ Check New Mail ⇒ ⇒ See below</p>
--	--

Enabling Automatic Retrieval

Check New Mail ⇒ ⇒ **On** ⇒ ⇒ Select account ⇒ () ⇒ ⇒

- Setting Check New Mail to **On** may incur high charges; checking for new messages may incur transmission fees even when none exists. Remember this, especially when using handset outside Japan.

Enabling Automatic Retrieval Abroad

Abroad ⇒ ⇒ **Enable** ⇒ ⇒

- Automatically retrieving messages abroad may incur high charges.

Changing Automatic Retrieval Interval

Interval ⇒ ⇒ Select interval ⇒

Disabling Automatic Retrieval during Specified Time

Inactivate Time ⇒ ⇒ **Switch On/Off** ⇒ ⇒ **On** ⇒ ⇒ **Start Time:** ⇒ ⇒ Enter start time ⇒ ⇒ **End Time:** ⇒ ⇒ Enter end time ⇒



Retrieving PC Mail for specified folder	In folder list, select PC Mail folder   <i>Retrieve New</i> 
Disabling automatic word wrap	  <i>Settings</i>   <i>PC Mail Settings</i>   <i>Word wrap</i>   <i>Off</i> 
Retrieving complete messages from specified addresses	  <i>Settings</i>   <i>PC Mail Settings</i>   <i>PC Mail DL</i>   <i>PC Mail DL</i>   <i>DL All From List</i>   See below
	Selecting Sender Types Select item   (<input type="checkbox"/>) 
	Specifying Addresses <i>Individual Address</i>   Select blank entry   Select method   Select/enter address  
	Deleting an Individual Address Entry <i>Individual Address</i>   Select entry   <i>Delete</i>   <i>Yes</i>  
	Deleting All Individual Address Entries <i>Individual Address</i>   Select entry   <i>Clear All</i>   <i>Yes</i>  
Restricting complete message retrieval by size	  <i>Settings</i>   <i>PC Mail Settings</i>   <i>PC Mail DL</i>   <i>Max DL Size</i>  Select account   Select size  • Effective when PC Mail DL is set to <i>All Contents</i> or <i>DL All From List</i> .

SMS Settings

Changing Server sent message storage limit	  <i>Settings</i>   <i>SMS Settings</i>   <i>Expiry Time</i>   Select option 
Changing SMS Server number	  <i>Settings</i>   <i>SMS Settings</i>    <i>Message Center</i>   See below
	Editing <i>Setting1(Default)</i> to <i>Setting3</i>   Edit number  • Do not change Server number unless instructed to do so.
	Deleting <i>Setting2</i> or <i>Setting3</i>   <i>Delete</i>   <i>Yes</i> 
	Activating <i>Setting2</i> or <i>Setting3</i>   <i>Set Default</i>  • Activated number moves to <i>Setting1(Default)</i> and shifts the others down.
Changing character encoding for composing messages	  <i>Settings</i>   <i>SMS Settings</i>  <i>Char-code</i>   Select encoding 



Sending Messages

? Cannot enter message text or attach files

- Attachment size affects text size limit. In turn, text size affects attachment size limit.

? Sending failure appears in Information window

- To resend, follow these steps:
Sending failure → [] → **Select message** → [] → [] → [] → [] → []

? Unsent message is not resent automatically

- Auto Resend attempts to send unsent messages automatically up to two times only.

? Set Auto Play File cannot be set

- Apply to one file per message.
- Not available for Graphic Mail.
- May be unavailable for some files.

? Messaging Settings are not applied

- Settings are valid for one message, and effective when viewed on compatible handsets/applications.
- Delivery Report/Priority setting may not be effective when sent to mail addresses.
- Priority setting does not affect delivery speed.

? Cannot set Messaging Settings

- These settings cannot be applied at the same time; select one per message: Set Auto Delete, Reply Request, Forward NG, Delete NG, Quiz, Set Auto Play File.

? Signature is not inserted automatically

- Auto Insert is available for S! Mail only.

? Cannot cancel sent messages

- Short messages may not be canceled.
- Set Sent Cancel is available for S! Mail only.

? Cannot send PC Mail

- Follow these steps to check User Name and Password for SMTP authentication:
 [] → **Settings** → [] → **PC Mail Settings** → [] → **PC Mail Account** → [] → **Select account** → [] → **Set Sending** → [] → **Sender Auth.** → [] → **SMTP Auth.** → [] → **User Name or Password** → []
- Some ISPs require SMTP authentication setup in addition to Set Receiving setup.



Incoming Messages

? Handset won't ring or vibrate for some incoming messages

- Handset does not ring or vibrate for messages with Low Priority.
- Handset does not ring, vibrate or open Information window for messages filtered as spam.

? A confirmation requesting a reply appears

- To reply, choose **Yes** and press . Confirmation does not appear for replied messages.

? Handset won't respond according to Feeling Mail settings

- Ringtone, Light and Vibration settings in Phone Book take priority.
- Feeling Mail settings are disabled when:
 - Sender is saved in Phone Book as Secret entry
 - The message was filtered as spam
 - The message was sorted to a Secret folder

? Message text appears distorted

- Follow these steps to change encoding:
In message window,  **➔ View Settings**  **➔ Char-code**  **➔ Select option** 

Handling Messages

? Cannot move messages into some folders

- To move to Secret folders, unlock temporarily or cancel Secret beforehand.

? Cannot receive messages

- If  appears, memory is full; delete messages (P.4-25).
- If  appears, move to a place where signal is strong.

? S! Mail is not delivered as sent

- Recipient must be subscribed to S! Mail, Super Mail or Long Mail. The maximum size of messages/ attachments handsets can receive varies by make and model. Confirm compatibility with recipient handsets.

? Still images are not delivered as sent

- Recipient handset may not be JPEG-compatible. Convert JPEG files to PNG.



Video clips are not delivered as sent

- Send video files to S! Mail- or VGS-compatible SoftBank handsets supporting MPEG-4.



Internet Services	5-2
Service Basics	5-2
Yahoo! Keitai	5-3
Using Yahoo! Keitai.....	5-3
PC Site Browser	5-4
Using PC Site Browser	5-4
Browsing	5-5
Basic Operations	5-5

Bookmarks & Saved Pages	5-7
Using Bookmarks & Saved Pages....	5-7
RSS Feeds	5-8
Updating Blogs & News.....	5-8
Additional Functions	5-9
Troubleshooting	5-16

5

Yahoo! Keitai & PC Site Browser



Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SOFTBANK MOBILE Corp. Website (P.15-23).

Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. Information fees may also apply.

Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

Secure Pages

- A confirmation appears before entering and exiting secure pages.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GlobalSign, RSA Security and SECOM Trust Systems cannot be held liable for any damages associated with the use of SSL.

5

Yahoo! Keitai & PC Site Browser

Advanced

-  Clearing cache (temporarily saved information) • Clearing authentication information (And more on P.5-9)
- Disabling manufacture number auto send for authentication • Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.) (And more on P.5-15)




Using Yahoo! Keitai

Opening Main Menu

Internet pages may not open depending on connection/Server status, etc.

1 → Connection starts

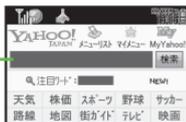

Internet Page

- Yahoo! Keitai Main Menu appears.
- To disconnect, press .

2 Highlight menu item →

- Corresponding page opens.
- Repeat 2 to open additional links.

3 → Yes → → Page closes

Returning to Previous Pages

[Internet Page]  → Previous page opens

- Follow these steps to return to the initial page:

[Internet Page]  → Forward → 

Returning to Yahoo! Keitai Main Menu

[Internet Page]  → Yahoo! Keitai

→ 

User Authentication

Enter user ID or password →  → 

Playing Media Streams (Streaming)

[Internet Page] Select file → 

- Downloaded content cannot be saved.
- Packet transmission fees apply even while stream is paused.
- Streaming sound is heard from Speaker/Headphones regardless of  Sound Output setting.

Using History

1 → Yahoo! Keitai → → History →



2 Select record → → Connection starts

- Corresponding page opens.

3 → Yes → → Page closes

Entering URLs Directly

1 → Yahoo! Keitai → → Enter URL →



2 Enter URL → → Connection starts

- Corresponding page opens.

3 → Yes → → Page closes

Advanced

-   Switching browsers
-  Using previously entered URLs
-  Deleting History records
-  Opening History properties
-  Sorting History records
-  Sending History records via mail (P.5-9)
-  Customizing streaming settings
-  Streaming from Media Player (P.5-12)



Using PC Site Browser

Open PC sites from Yahoo! JAPAN (preset home page).

- Internet pages may not open depending on connection/Server status, etc.
- Browsing PC sites may incur higher charges depending on subscribed price plan.

1 **Yahoo! Keitai** **PC Site Browser**



2 **Homepage** **Connection starts**



Pointer

Internet Page

- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press .

3 **Highlight menu item**

- Corresponding page opens.
- Repeat to open additional links.

4 **Yes** **Page closes**

Returning to Previous Pages

[Internet Page] **Previous page opens**

- Follow these steps to return to the initial page:

[Internet Page] **Forward**

Returning to Yahoo! JAPAN Home

[Internet Page] **Homepage**

User Authentication

Enter user ID or password

Using History

In , **History** **Select record**

Entering URLs Directly

In , **Enter URL** **Enter URL**

Hiding Softkeys

[Internet Page] **Convenient Functions** **Softkey Area** **Off**

Advanced

- Switching browsers
- Using previously entered URLs
- Deleting History records
- Opening History properties
- Sorting History records
- Sending History records via mail (P.5-9)
- Showing navigation map for continuous scroll
- Changing scroll unit
- Hiding PC Site Browser messages (P.5-11)




Basic Operations

Page Browsing

Scrolling Pages

If page content continues beyond view, use to scroll pages.

Long Press to scroll continuously.

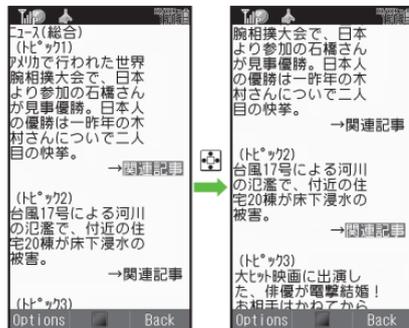

Switching Frames

On framed pages, Long Press to select other frames.



Frames

When pointer navigation is active, point to a frame and press to select it.

Viewing Single Frame

Select frame **Convenient Functions** **Frame In**

■ To return, press .

Tabbed Browsing


Open another page in a new tab and switch between tabs.

Opening a New Tab

1 On a page, select menu item

Tab Menu

2 Open in New Tab

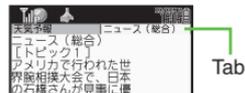

Switching Tabs

1 (Long) **Select tab**

- When pointer navigation is active, point to a tab and press to open it.

Closing Tabs

(Long) **Select tab** **Close Tab or Close All Other Tabs**

Advanced

- Using Web Search
- Searching current page
- Looking up copied words in dictionaries
- Saving files to Data Folder
- Jumping to page top/bottom
- Changing Font Size
- Zooming specific areas
- Disabling automatic image display/sound playback
- Changing scroll unit (And more on P.5-10 - 5-11)



Selecting Text


Activate pointer navigation to enable text selection (Drag Mode). Select text to copy or look up words in dictionaries.

- Text may not be selectable or linked page may open depending on the site or page.
- Follow these steps to use a dictionary:

1 On a page, point to first character ➡ (Long)

- Drag Mode is activated.

2 Highlight text range

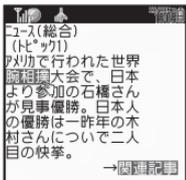

3

- Text range remains unchanged even when pointer is moved.

4 ➡ Select dictionary



- Dictionary opens with text inserted.

5 Search ➡ ➡ Select word




Starting Over

After , point to first character ➡

➡ From

Additional Page Operations

Enter text or select/execute items.

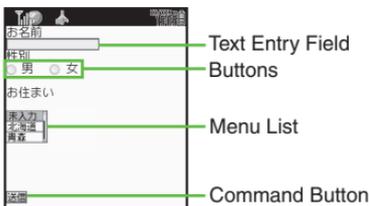

Text Entry

1 On a page, select text entry field ➡

2 Enter text ➡

- Internet page returns.

Using Entered Text (Input Memory)

[Internet page] Select text entry field

➡ ➡ ➡ Insert/Font Size ➡

➡ Input Memory ➡ ➡ Select text

➡

Pull-down Menu Item Selection

1 On a page, select menu list field ➡

2 Select item ➡

When Multiple Selection is Supported

- Select items as needed and press .

Page Item Indicators

Selection Items

Buttons or boxes appear.

1 On a page, select button or box ➡



- / changes to /

Execution Items

Execute the assigned command.

1 On a page, select command ➡



Using Bookmarks & Saved Pages

Bookmarks

Bookmark sites for quick access.

Saving Bookmarks

- 1 On a page, ➔ **Bookmarks**
➔ ➔ **Save** ➔
• Save appears only for savable pages.
- 2 Enter/edit title ➔
- 3 Save ➔

Opening Bookmarks

- 1 ➔ **Yahoo! Keitai** ➔ ➔ **Bookmarks** ➔



- 2 Select title ➔
• Corresponding page opens.

Switching Bookmark Type

After 1, ➔ **Change List** ➔ ➔
Select type ➔

Opening Bookmarks Online

[Internet Page] ➔ **Bookmarks** ➔
 ➔ **Open List** ➔ ➔ Select title
➔

Saved Pages

Save page content; handset opens saved pages without connecting to the Internet.

Saving Pages

- 1 On a page, ➔ **Saved Pages** ➔ ➔ **Save** ➔
• Save appears only for savable pages.

- 2 Enter/edit title ➔

Opening Saved Pages

- 1 ➔ **Yahoo! Keitai** ➔ ➔ **Saved Pages** ➔



- 2 Select page ➔
• Corresponding page opens.

Opening Saved Pages Online

[Internet Page] ➔ **Saved Pages** ➔
 ➔ **Open List** ➔ ➔ Select page
➔

Advanced

- Deleting titles ● Editing titles ● Changing title order ● Sorting titles into folders ● Deleting pages ● Editing page titles ● Changing page order (And more on P.5-12 - 5-13)



Updating Blogs & News

Register RSS-compatible sites; view content updates without opening source sites. Transmission fees apply.

Subscribing to RSS Feeds

 appears for RSS-compatible sites.

 RSS Indicator

Available for PC Site Browser.

- 1 On a compatible page,   **Register In RSS Feed** 
- 2 Select feed   (/)  **Complete selection** 
- 3 **Save** 

• Choose **Yes** to update immediately or **No** and press .

Via RSS Icons

Use RSS icons to subscribe to RSS feeds from sites that are not RSS-compatible. Available for PC Site Browser.

- 1 On a page, select icon 
- 2 **Yes**   **Save** 

Checking Updates


Follow these steps to update all feeds:

- 1   **Yahoo! Keitai** 
- 2 **PC Site Browser**   **RSS Feed** 



RSS Feed List

- 3 **Reload All**   
- 4 **Yes or No** 
- 5 **Select feed** 

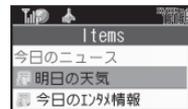

Title List

- 6 **Select title** 
 - Information appears.

Updating Single RSS Feeds

[RSS Feed List] Select feed   **Reload**    **Yes or No** 

Accessing Source Sites

[Title List] Select title   **Select linked title**  **Yes**    **Yes or No** 

Advanced

-  Disabling feed updates
-  Sorting feeds into folders
-  Deleting feeds
-  Sorting feeds
-  Opening feed properties
-  Exchanging feeds with other devices
-  Sending feeds via mail (P.5-14)



Connecting/Browsing	
General	
Switching browsers	On a page, → Convenient Functions → → Change to PC Browser or Change to Y! Keitai → → This Page or Linked Page → → → Yes or No →
Using previously entered URLs	→ Yahoo! Keitai → → See below
	<p>Yahoo! Keitai</p> Enter URL → → → URL Entry Log → → Select URL → →
	<p>PC Site Browser</p> PC Site Browser → → Enter URL → → → → URL Entry Log → → Select URL → →
History	
Deleting History records	→ Yahoo! Keitai → → History → → → Change to PC Browser or Change to Y! Keitai → → See below
	<p>One Record</p> Select record → → Delete → → Yes →
	<p>All Records</p> → Delete All → → Enter Handset Code → → Yes →
Opening History properties	→ Yahoo! Keitai → → History → → Select record → → Details →
Sorting History records	→ Yahoo! Keitai → → History → → → Sort → → By Domain or By Date →

Sending History records via mail

- Yahoo! Keitai → → History → → Select record → → Send URL → → S! Mail or SMS → → Complete message →
- S! Mail Composition window opens automatically depending on character count.

Memory Operation

For PC Site Browser, perform the following sequence instead of **Browser Settings** → .

PC Site Browser → → PC Site Browser Settings →

Clearing cache (temporarily saved information)	→ Yahoo! Keitai → → Browser Settings → → Memory Operation → → Delete Cache → → Yes →
Clearing cookies	→ Yahoo! Keitai → → Browser Settings → → Memory Operation → → Delete Cookies → → Yes →
Clearing authentication information	→ Yahoo! Keitai → → Browser Settings → → Memory Operation → → Delete Auth Info → → Yes →



Page Operations

■ Yahoo! Keitai & PC Site Browser

Using Web Search	On a page, → <i>Convenient Functions</i> → → <i>Web Search</i> → → Enter search text →
Searching current page	On a page, → <i>Convenient Functions</i> → → <i>Search</i> → → Enter search text → • Press to jump to next search result, if any.
Looking up copied words in dictionaries	On a page, → <i>Convenient Functions</i> → → <i>Copy & Search Dict.</i> → → Select first character → → Highlight text range → → Select dictionary → → <i>Search</i> → → Select word, etc. →
Saving files to Data Folder	On a page, → <i>Save Items</i> → → See below
	Files on Page Select file → → <i>Save</i> → → Enter name → → <i>Save here</i> → • Some files are saved automatically. • End memory-consuming operations (TV recording, etc.) beforehand. • Confirm signal is strong, battery is adequately charged and that there is enough free memory beforehand.
	Background Images <i>Save Background Image</i> → → <i>Save</i> → → Enter name → → <i>Save here</i> →
Using linked info	Dialing Numbers On a page, highlight number → → <i>Call or Video Call</i> →
	Sending Messages On a page, highlight number or mail address → → <i>Create Message</i> → → <i>S! Mail or SMS</i> → → Complete message →

Copying text	On a page, → <i>Copy Text</i> → → Select first character → → Highlight text range →
Sending URLs via mail	On a page, → <i>Convenient Functions</i> → → <i>Send URL</i> → → <i>S! Mail or SMS</i> → → Complete message → • S! Mail Composition window opens automatically depending on character count.
Jumping to page top/bottom	On a page, → <i>Convenient Functions</i> → → <i>Jump In Page</i> → → <i>Page Top or Page Bottom</i> →
Opening function shortcuts	On a page, → <i>Help</i> →
Opening page properties	On a page, → <i>Convenient Functions</i> → → <i>Details</i> → → Select item →
Changing encoding to read garbled text	On a page, → <i>Settings</i> → → <i>Char-code</i> → → Select option →
Handling Flash® files	On a page, → <i>Convenient Functions</i> → → <i>Flash®Menu</i> → → See below Pausing/Playing <i>Pause, Resume or Replay</i> → Selecting Image Quality <i>Quality</i> → → Select option →
Updating page content	On a page, → <i>Reload</i> → • To update content in Saved Pages, open a page and follow the steps above.
■ Yahoo! Keitai	
Changing Font Size	On a page, (Long) to enlarge or (Long) to reduce



■ PC Site Browser

Switching view	On a page, → <i>PC Screen or Small Screen</i> → <ul style="list-style-type: none"> In Small Screen view, PC sites are redesigned to fit Display.
Zooming on pages (Zoom Factor)	On a page, (Long) to enlarge or (Long) to reduce
Jumping to specific locations	On a page, (Long) → Quick Movement map appears → Select location →
Zooming specific areas	On a page, point to area → (Long) <ul style="list-style-type: none"> Pointed area is enlarged while is pressed.

Internet Page Settings

■ Yahoo! Keitai & PC Site Browser

For PC Site Browser, perform the following sequence instead of *Browser Settings* → .

PC Site Browser → → *PC Site Browser Settings* →

Disabling automatic image display/sound playback	→ <i>Yahoo! Keitai</i> → → <i>Browser Settings</i> → → <i>Downloads</i> → → See below
	Image Display <i>Images</i> → → <i>Do not Show</i> →
	Sound Playback <i>Sounds</i> → → <i>Do not Play</i> →
Changing Font Size	→ <i>Yahoo! Keitai</i> → → <i>Browser Settings</i> → → <i>Font Size</i> → → Select size →

Using pointer navigation	→ <i>Yahoo! Keitai</i> → → <i>Browser Settings</i> → → <i>Cursor Settings</i> → → See below
	Activating <i>Cursor Mode Settings</i> → → <i>Normal Mode</i> →
	Changing Pointer Speed <i>Speed Settings</i> → → Select speed →
Using Memory Card as primary download storage	→ <i>Yahoo! Keitai</i> → → <i>Browser Settings</i> → → <i>Download to</i> → → <i>Prefer Card</i> → <ul style="list-style-type: none"> Some files may be saved to handset regardless of this setting.

■ Yahoo! Keitai

Changing scroll unit	→ <i>Yahoo! Keitai</i> → → <i>Browser Settings</i> → → <i>Scroll Unit</i> → → Select unit →
----------------------	--

■ PC Site Browser

Showing navigation map for continuous scroll	→ <i>Yahoo! Keitai</i> → → <i>PC Site Browser</i> → → <i>PC Site Browser Settings</i> → → <i>Scroll Settings</i> → → <i>Page Navigation</i> → → On →
Changing scroll unit	→ <i>Yahoo! Keitai</i> → → <i>PC Site Browser</i> → → <i>PC Site Browser Settings</i> → → <i>Scroll Settings</i> → → <i>Scroll Unit</i> → → Select unit →
Hiding PC Site Browser messages	→ <i>Yahoo! Keitai</i> → → <i>PC Site Browser</i> → → <i>PC Site Browser Settings</i> → → <i>Warning Message</i> → → <i>PC Site Browser or Yahoo! Keitai</i> → → Off →



Streaming

Customizing streaming settings	<p>Start Here <input type="checkbox"/> While streaming, <input type="checkbox"/> Settings <input type="checkbox"/> See below</p> <p>Changing Playback Size</p> <p>Display Size <input type="checkbox"/> Select size <input type="checkbox"/></p> <ul style="list-style-type: none"> Playback size may not change depending on file/stream. <p>Setting Backlight Status</p> <p>Backlight <input type="checkbox"/> Select option <input type="checkbox"/></p> <ul style="list-style-type: none"> Selecting <i>Normal Settings</i> applies Display Backlight setting. <p>Adjusting Sound Effects</p> <p>Sound Effects <input type="checkbox"/> Select effect <input type="checkbox"/></p>
	<p>Start Here <input type="checkbox"/> Media Player <input type="checkbox"/> Streaming <input type="checkbox"/> See below</p> <p>Resuming from Stopped Point</p> <p>Last Played <input type="checkbox"/></p> <p>Using Bookmarks</p> <p>Bookmarks <input type="checkbox"/> Select title <input type="checkbox"/></p> <p>Using History</p> <p>History <input type="checkbox"/> Select record <input type="checkbox"/></p>

Bookmarks

Deleting titles	<p>Start Here <input type="checkbox"/> Yahoo! Keitai <input type="checkbox"/> Bookmarks <input type="checkbox"/> See below</p> <p>One Title</p> <p>Select title <input type="checkbox"/> Delete <input type="checkbox"/> Yes <input type="checkbox"/></p> <p>All Titles</p> <p>Delete All <input type="checkbox"/> Enter Handset Code <input type="checkbox"/> Yes <input type="checkbox"/></p>
	<p>Yahoo! Keitai <input type="checkbox"/> Bookmarks <input type="checkbox"/> Select title <input type="checkbox"/> Edit <input type="checkbox"/> Title: <input type="checkbox"/> Enter title <input type="checkbox"/> <input type="text"/></p>
Editing titles	<p>Yahoo! Keitai <input type="checkbox"/> Bookmarks <input type="checkbox"/> Select title <input type="checkbox"/> Edit <input type="checkbox"/> URL: <input type="checkbox"/> Edit <input type="checkbox"/> <input type="text"/></p>
Editing bookmarked URLs	<p>Yahoo! Keitai <input type="checkbox"/> Bookmarks <input type="checkbox"/> Select title <input type="checkbox"/> Edit <input type="checkbox"/> URL: <input type="checkbox"/> Edit <input type="checkbox"/> <input type="text"/></p>
Sending bookmarked URLs via mail	<p>Yahoo! Keitai <input type="checkbox"/> Bookmarks <input type="checkbox"/> Select title <input type="checkbox"/> Send <input type="checkbox"/> As Message <input type="checkbox"/> S! Mail or SMS <input type="checkbox"/> Complete message <input type="checkbox"/> <input type="text"/></p> <ul style="list-style-type: none"> S! Mail Composition window opens automatically depending on character count.
Changing title order	<p>Yahoo! Keitai <input type="checkbox"/> Bookmarks <input type="checkbox"/> Select title <input type="checkbox"/> Change Order <input type="checkbox"/> Select target location <input type="checkbox"/></p>
Opening title properties	<p>Yahoo! Keitai <input type="checkbox"/> Bookmarks <input type="checkbox"/> Select title <input type="checkbox"/> Details <input type="checkbox"/></p>



Sorting titles into folders	Start Here Yahoo! Keitai Bookmarks See below
	Creating Folders Create Folder Enter name
	Moving to Folders Select title Move Select folder Move
	Moving from Folders Select folder Select title Move Move
	Renaming Folders Select folder Rename Enter name
	Deleting All Titles within a Folder Select folder Delete All Enter Handset Code Yes
	Deleting Folders Select folder Delete Enter Handset Code Yes

Saved Pages

Deleting pages	Start Here Yahoo! Keitai Saved Pages See below
	One Page Select page Delete Yes
Editing page titles	All Pages Delete All Enter Handset Code Yes
	Yahoo! Keitai Saved Pages Select page Rename Enter title
Changing page order	Yahoo! Keitai Saved Pages Select page Change Order Select target location
Opening page properties	Yahoo! Keitai Saved Pages Select page Details
Switching page list view	Yahoo! Keitai Saved Pages Select page List View or Preview View



RSS Feeds

Disabling feed updates	<p> <input type="checkbox"/> → <i>Yahoo! Keitai</i> → <input type="checkbox"/> → <i>PC Site Browser</i> → <input type="checkbox"/> → <i>RSS Feed</i> → <input type="checkbox"/> → <i>Select feed</i> → <input type="checkbox"/> → <i>Manage RSS Feed</i> → <input type="checkbox"/> → <i>Restrict Update</i> → <input type="checkbox"/> </p>	
Sorting feeds into folders	<p> <small>Start Here</small> → <input type="checkbox"/> → <i>Yahoo! Keitai</i> → <input type="checkbox"/> → <i>PC Site Browser</i> → <input type="checkbox"/> → <i>RSS Feed</i> → <input type="checkbox"/> → <i>See below</i> </p> <p>Creating Folders</p> <p> <input type="checkbox"/> → <i>Manage RSS Feed</i> → <input type="checkbox"/> → <i>Create Folder</i> → <input type="checkbox"/> → <i>Enter name</i> → <input type="checkbox"/> </p> <p>Moving to Folders</p> <p> <i>Select feed</i> → <input type="checkbox"/> → <i>Manage RSS Feed</i> → <input type="checkbox"/> → <i>Move</i> → <input type="checkbox"/> → <i>Select folder</i> → <input type="checkbox"/> → <i>Move</i> → <input type="checkbox"/> </p> <p>Renaming Folders</p> <p> <i>Select folder</i> → <input type="checkbox"/> → <i>Manage RSS Feed</i> → <input type="checkbox"/> → <i>Rename</i> → <input type="checkbox"/> → <i>Enter name</i> → <input type="checkbox"/> </p> <p>Deleting Folders</p> <p> <i>Select folder</i> → <input type="checkbox"/> → <i>Delete</i> → <input type="checkbox"/> → <i>Enter Handset Code</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/> </p>	
	Deleting feeds	<p> <small>Start Here</small> → <input type="checkbox"/> → <i>Yahoo! Keitai</i> → <input type="checkbox"/> → <i>PC Site Browser</i> → <input type="checkbox"/> → <i>RSS Feed</i> → <input type="checkbox"/> → <i>See below</i> </p> <p>One Entry</p> <p> <i>Select feed</i> → <input type="checkbox"/> → <i>Delete</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/> </p> <p>All Entries</p> <p> <input type="checkbox"/> → <i>Manage RSS Feed</i> → <input type="checkbox"/> → <i>Delete All</i> → <input type="checkbox"/> → <i>Enter Handset Code</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> Alternatively, perform <i>Delete RSS Feed List</i> in Memory Operation (PC Site Browser Settings) to delete all feeds.

Sorting feeds

→ *Yahoo! Keitai* → → *PC Site Browser* → → *RSS Feed* → → *Manage RSS Feed* → → *Sort* → → *Select option* →

Opening feed properties

→ *Yahoo! Keitai* → → *PC Site Browser* → → *RSS Feed* → → *Select feed* → → *Manage RSS Feed* → → *Details* →

Exchanging feeds with other devices

Start Here → → *Yahoo! Keitai* → → *PC Site Browser* → → *RSS Feed* → → *Manage RSS Feed* → → *See below*

Exporting All Feeds

Export All → → *Select location* →

Importing (Adding Feeds)

Import → → *Select file* → → *As New Items* → → *Yes or No* → → *Yes or No* →

Importing (Overwriting Existing Feeds)

Import → → *Select file* → → *Delete All* → → *Enter Handset Code* → → *Yes* → → *Yes or No* → → *Yes or No* →

Sending feeds via mail

→ *Yahoo! Keitai* → → *PC Site Browser* → → *RSS Feed* → → *Select feed* → → *Manage RSS Feed* → → *As Message* → → *Complete message* →



Security Settings

For PC Site Browser, perform the following sequence instead of **Browser Settings** ➔ **■**.

PC Site Browser ➔ **■** ➔ **PC Site Browser Settings** ➔ **■**

Disabling manufacture number auto send for authentication	<p>■ ➔ Yahoo! Keitai ➔ ■ ➔ Browser Settings ➔ ■ ➔ Security Settings ➔ ■ ➔ Manufacture Number ➔ ■ ➔ Off ➔ ■</p>
Disabling referer information delivery to the Server	<p>■ ➔ Yahoo! Keitai ➔ ■ ➔ Browser Settings ➔ ■ ➔ Security Settings ➔ ■ ➔ Send Referrer ➔ ■ ➔ Not Send ➔ ■</p>
Enabling/disabling cookies	<p>■ ➔ Yahoo! Keitai ➔ ■ ➔ Browser Settings ➔ ■ ➔ Security Settings ➔ ■ ➔ Cookies ➔ ■ ➔ Select option ➔ ■</p>
Selecting script execution option	<p>■ ➔ Yahoo! Keitai ➔ ■ ➔ Browser Settings ➔ ■ ➔ Security Settings ➔ ■ ➔ Script Settings ➔ ■ ➔ Select option ➔ ■</p>
Hiding confirmations before entering/exiting secure pages	<p>■ ➔ Yahoo! Keitai ➔ ■ ➔ Browser Settings ➔ ■ ➔ Security Settings ➔ ■ ➔ Secure Prompt ➔ ■ ➔ Do not Show ➔ ■</p>
Opening electronic certificates saved on handset	<p>■ ➔ Yahoo! Keitai ➔ ■ ➔ Browser Settings ➔ ■ ➔ Security Settings ➔ ■ ➔ Root Certificates ➔ ■ ➔ Select certificate ➔ ■</p>

Changing validity of entered user ID/password

■ ➔ **Yahoo! Keitai** ➔ **■** ➔ **Browser Settings**
 ➔ **■** ➔ **Security Settings** ➔ **■** ➔ **Keep Auth Info** ➔ **■** ➔ **Select option** ➔ **■**

- **Per Browsing** retains entered user ID/password during browsing sessions. **On** retains such authentication information even after turning handset off.
- Authentication information may not be retained depending on the site.

Enabling/disabling Ajax (for asynchronous communication)

■ ➔ **Yahoo! Keitai** ➔ **■** ➔ **Browser Settings**
 ➔ **■** ➔ **Security Settings** ➔ **■** ➔ **Restrict Ajax** ➔ **■** ➔ **Select option** ➔ **■**

Resetting

For PC Site Browser, perform the following sequence instead of **Browser Settings** ➔ **■**.

PC Site Browser ➔ **■** ➔ **PC Site Browser Settings** ➔ **■**

Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)	<p>■ ➔ Yahoo! Keitai ➔ ■ ➔ Browser Settings ➔ ■ ➔ Initialized Browser ➔ ■ ➔ Enter Handset Code ➔ ■ ➔ Yes ➔ ■</p>
Restoring default handset settings	<p>■ ➔ Yahoo! Keitai ➔ ■ ➔ Browser Settings ➔ ■ ➔ Reset Settings ➔ ■ ➔ Enter Handset Code ➔ ■ ➔ Yes ➔ ■</p>



Connecting/Browsing

? What is the bar at Display bottom?

- This is a data progress bar; the number beside it indicates transmitted (green) or received (red) data.

Page Operations

? Internet page does not open completely

- Portions of page content may not appear in tabbed browsing; close other tabs.

? Text overlaps

- The site may be designed for browsing on PCs; try *Tiny* font size.
- Text may overlap when Zoom Factor is used; adjust scale.

? Cannot access other functions while browsing the Internet

- When switching between Yahoo! Keitai and PC Site Browser (☐ appears), additional function activation is disabled; close either browser and retry.



Digital TV	6-2
Basics	6-2
Area Setup.....	6-4
Watching TV	6-5
Obtaining Program Information.....	6-7
Watching Two Programs Simultaneously	6-8
TV Player	6-9
Recording Programs.....	6-9
Playing Recorded Programs.....	6-10

TV Timer	6-11
TV Timer & TV Recording Timer....	6-11
Time Shift	6-12
Time Shift Recording & Playback...	6-12
Additional Functions	6-13
Troubleshooting	6-19

6

Digital TV



Basics

932SH supports One Seg terrestrial digital television broadcast services developed for mobile devices in Japan.

Watch Live Television

Set up a channel list for your service area to access available programming. Capture screenshots while watching TV.

Multi Job

Watch TV in one half of Display using the other to access messaging functions, browse the Internet or open Phone Book, etc.

Access TV Listing (EPG)

Access TV Listing (EPG) to find program channels and times; set Reservations by date and time to record shows or activate TV.

View Data Broadcasts

In addition to audio and visuals, enjoy text, program-related information and interactive services.

Record Shows/Time Shift


Record current program for later viewing on handset; if interrupted by incoming calls while watching TV, record it temporarily for delayed playback.

Reserve TV Programs

Record a show or activate TV at a specified time; enter dates & times manually or reference TV Listing electronic program guide.



Portrait & Cycloid Positions

View programs and Data Broadcast in portrait position, or rotate Display to Cycloid position to watch TV in widescreen.

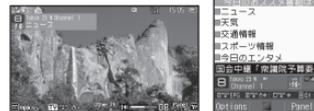

Dual One Seg Tuner for Simultaneous Viewing & Recording

Watch one program in half of Display while another appears in the other half; record both programs simultaneously. Press a key to switch positions for audio. Search other programs in the same time slot easily via program listing.

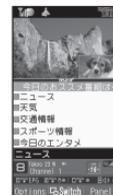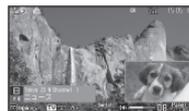

Precautions

- 932SH TV is exclusively for use in Japan.
- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programming may not be viewable or record properly when:
 - Too far from or too close to broadcasting stations
 - In mountainous areas or near tall buildings
 - Aboard trains or in moving vehicles
 - Near high-voltage lines, neon lights or wireless base stations
 - Near railroad tracks or highways
 - Anywhere a jamming signal is broadcast/reception is unstable

Recording Precautions

- Saved files cannot be forwarded or attached to messages.
- 932SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank is not liable for any damages resulting from accidental loss or alteration of recorded content.

Digital TV Antenna

TV Antenna is located behind Display. Move handset to find best reception.



Use optional TV Antenna Connection Cable as needed.

Area Setup

When activating TV for the first time, follow these steps to set up channels by area:

1 



- Setup confirmation appears.

2 **Yes** → 



3 **Select region** → 

4 **Select prefecture** →  → **Select locality** → 



- After setup, channel list appears.

5 



- To watch TV, select **Digital TV** and press .

Watching TV without Completing Area Setup

In , **Other Region** → 

Adding Reception Areas

 →  → **Set Channels** →  → 

Change Area →  → **Select Area** →

 → **Set Area Info** →  → **From** 

Advanced

-  • Switching reception Areas
-  • Renaming Areas
-  • Changing/disabling  function
-  • Editing channels
-  • Deleting all channels in Area
-  • Adding new channels to Area
-  • Updating all channels in the Area (P.6-13)



Watching TV

1 Rotate Display



TV Window

- When rotating Display for the first time, Landscape menu opens; select **Activate Digital TV** and press \square to complete setup.
- Press \square to activate TV in portrait position; Data Broadcast text appears below TV image.

2 Use Keypad to select a channel

- Use \square to switch channels one by one; Long Press to find channel with stable signal automatically.

3 \square \rightarrow Yes \rightarrow \square \rightarrow TV ends

Incoming Calls

- Press \square to answer calls.
- When S! Circle Talk request arrives, press \square to start S! Circle Talk.

When Answering Voice Calls with Memory Card Inserted

- Current program is temporarily recorded; start playback after the call. (Time Shift)


Incoming Messages

- Double beep sounds and New Message notice appears. Long Press \square to open messages.

Key Assignments

Open Options Menu	\square
Toggle Panel On/Off	\square
Start/End Two Screen	\square
Volume Control	\leftarrow \rightarrow
Toggle Display Size	\square \downarrow
Change Area	\square \rightarrow

Panel Description

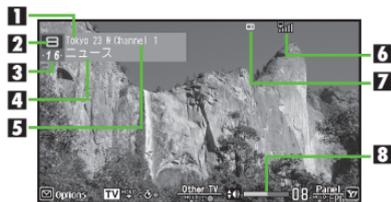

1 Area name	5 Station name
2 Channel key	6 Signal strength*
3 Channel	7 Sound Channel
4 Program name	8 Volume

*The more bars the better.
Indicator position varies with display size.


Advanced

- Viewing key assignments
- Searching current program on the Internet
- Enlarging display size for portrait position
- Smoothing TV images
- Saving current channel
- Selecting an audiovisual mode (And more on P.6-13)
- Adjusting current AV Mode parameters
- Changing panel pattern
- Customizing viewing options for Cycloid position (And more on P.6-14)



Data Broadcast (Japanese)

In portrait position, Data Broadcast text appears below TV image. Use  to select an item and press  to access program-related information and interactive services.
Not available while Two Screen is active.

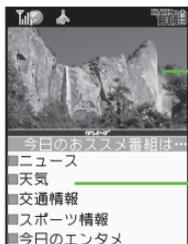

TV Image

Data Broadcast

Data Broadcast Window

Data Broadcast Fees

- Data Broadcast information viewing is free, however, using data links/related services incurs Internet connection fees.
- A confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.

Advanced

- Changing display view ● Returning to initial window ● Deleting information saved from Data Broadcasts ● Hiding Network connection confirmation
- Sending/hiding Location Information ● Sending manufacture number and other information (P.6-15)

Capturing Screenshots

Capture screenshots while watching TV. (May be unavailable if TV was activated by TV Timer, etc.)
Saved images cannot be forwarded, edited, set as Wallpaper or attached to messages.

1 In TV window, 

2 

- Image is saved.

Opening Saved Images

● While Watching TV

- [TV Window]   Useful Func.  
-  TV-Image Folder   Select image  

● From Standby

-   TV   TV-Image Folder
-   Select image  

Enlarging Specific Image Portion

Enlarge image portions temporarily in Cycloid position.
May be unavailable while Two Screen is active, etc.

1 In TV window,  -  (Long)



- Key Assignments:

		
Upper left	Upper center	Upper right
		
Left	Center	Right
		
Lower left	Lower center	Lower right

Multi Job

1 In TV window, 



2 Select function 

- To toggle function windows, press .

3   Function window closes



Obtaining Program Information

Access information on current program, stations or other programs in the same time slot.

TV Listing	Start EPG S! Application to find program channels and times for specified area
Program Info	Open program details via current channel's schedule; set Reservations to record shows or activate TV
Other TV Listing	Open list of programs currently being broadcast; record one while watching current program

TV Listing (Japanese)

- In TV window,  (Long)**
 - EPG application starts; refer to the application's help menu for operational instructions.
 - When using EPG application for the first time, a confirmation appears. Follow onscreen instructions.

Program Info

- In TV window,  
OperateProgram  **
- Program Info.  **



Program Info Window

- Select program  **
 - To return, press  twice.

Setting Recording Timer via Program Info [Program Info Window] Select program

- Timer entries set via Program Info are updated with program changes automatically. Program cancellations cancel corresponding Timer entries. (Poor signal conditions may inhibit updates or cancellations.)

Setting TV Timer via Program Info [Program Info Window] Select program *Programming*

Other TV Listing

- In TV window (Cycloid position), **



Other TV Listing Window

- Select program  **
 - Program details appear.
 - To return, press  twice.

Accessing Other TV Listing in Portrait Position

[TV Window]   *OperateProgram*
   *Other TV Listing*  

Tuning in a Second Program in the Same Time Slot

[Other TV Listing Window] Select program  

Recording Second Program in the Same Time Slot

[Other TV Listing Window] Select program  

- Recording starts. (Two Screen starts.)



Watching Two Programs Simultaneously

932SH has built-in dual One Seg tuner; tune in two programs simultaneously in split screen.

Picture-in-Picture

While main program appears, open a second one (audio muted) in an inset window.

1 In TV window,



- Second program appears. (Two Screen starts.)
- Second program audio is disabled.
- Second program channel selection is active by default. Cancel setting to navigate main program channels.

2 to watch second program

- Program positions switch.

3 Cancels split screen

- Main program appears alone.

Split Screen Restrictions

- Data Broadcast, Other TV Listing, widescreen partial image enlargement, Change Area, Save Channel, etc. are unavailable.




Main Program



Second Program



Second Program

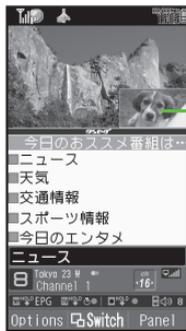


Advanced

-  Using Picture-in-Picture
-  Canceling second program channel selection (P.6-15)

Playing Recorded Programs

- 1 In TV window, ➔ TV Player ➔

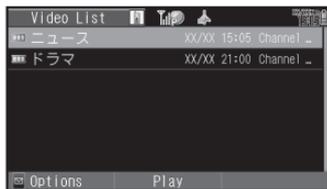

Video List

- indicates the file is unplayable.

- 2 Select file ➔



Playback Window

- Playback starts. (The last played file plays from where it stopped.)

- 3 (Long) ➔ Playback stops

Changing Playback Position

- Slide finger left or right over TOUCH CRUISER during playback; press to resume.
 - Not available during Time Shift playback.

Switching Video List

- After 1, ➔ Change to Phone or Change to MemoryCard ➔

Playback Operations

Adjust volume or enlarge widescreen image portion in the same way as while watching TV.

Fast Forward	¹
Rewind	^{1, 2}
Skip Forward	
Skip Backward	
Pause ³	(in portrait position)
Split File	(Long) ⁴
Set Marker	⁴
Toggle Panel On/Off	

¹ Each press increases speed. To resume normal playback, press (in portrait position).

² Long Press to replay. (Available when no Marker is saved.)

³ In pause, use to reverse/advance frame.

⁴ Not available during Time Shift playback.

Advanced


- Splitting files by specifying a time point
- Playing files repeatedly
- Playing split files
- Checking memory status
- Renaming files
- Deleting files
- Copying files to Memory Card
- Moving files to Memory Card
- Opening file properties
- Playing files with Markers (And more on P.6-17)

TV Timer & TV Recording Timer


1 In TV window, → **Rec./ TimeShift** →

2 **Reservation List** → →

3 **New Entry** →

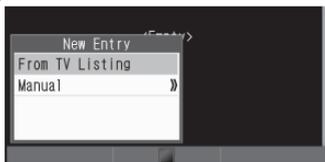

4 **Manual** → → **Programming or Recording** →

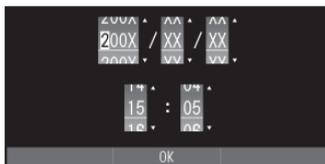

5 Enter start date/time →
→ Enter end date/time →

6 **Channel:** → → **Select channel** → →

- If a confirmation appears, read the message and press .

Setting Timer via EPG

After , **From TV Listing** →

- Refer to the application's help menu for operational instructions.

Timer Recording Precautions


Confirm target channel reception; keep handset open.

- End the current operations.
- Confirm battery is adequately charged and there is enough free memory.

When TV is activated for Timer recording, audio output is redirected to Speaker/Headphones even if Sound Output is set to **Bluetooth Device**. (TV audio is muted.)

At Timer Time (TV Alarm Time)

TV and Alarm activate. Alarm ends after the set duration.

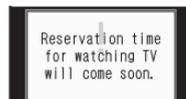

Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

While Watching TV

- Two Screen starts automatically; Timer program appears as second program.

While Using Another Function

- TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV remains off, or the current function ends automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.

Advanced

- Opening/editing/deleting Timer details ● Opening/deleting Timer log ● Customizing TV Alarm settings ● Prioritizing current operation over TV Timer/TV Recording Timer (P.6-18)



Time Shift Recording & Playback

Record current program temporarily for delayed playback.

Recorded content is deleted after playback.

1 While watching TV, (Long) **Recording starts**



Recording in progress

2 While recording, (Long) **Playback starts**

- Playback starts from where recording was started.
- Recording and playback stop when Time Shift playback has caught up to the real-time program.

Tuning in a Second Program during Time Shift Playback

 **Two Screen**  **Activate**

Two Screen 

Stopping Fast Forward to Resume Playback



Playback Operations

Fast Forward	
Skip Forward	
Skip Backward	

Time Shift Recording Automatic Activation

When a Voice Call is answered while watching TV with Memory Card inserted, Time Shift recording starts automatically; Long Press  after the call for playback.

Advanced

-  Disabling Time Shift recording automatic activation (P.6-16)

Area & Channel	
Switching reception Areas	While watching TV, → Select Area →
Renaming Areas	While watching TV, → Set Channels → → Change Area → → Select Area → → Change Area Name → → Enter name →
Changing/disabling function	While watching TV, → Set Channels → → Channel Key Setting → → See below
	<p>Toggle All Receivable Channels By Manual → </p> <p>Disabling Disable → </p>
Editing channels	While watching TV, → Set Channels → → CH Switch → → Select channel → → See below
	<p>Switching Channel Positions Flip → → Select target key → </p> <p>Deleting Channels Delete → → Yes → </p>
Deleting all channels in Area	While watching TV, → Set Channels → → Change Area → → Select Area → → Reset Settings → → Yes →
Adding new channels to Area	While watching TV, → Set Channels → → Change Area → → Select Area → → Channel Update → → Update Further →
Updating all channels in the Area	While watching TV, → Set Channels → → Change Area → → Select Area → → Channel Update → → Update All → → Yes →

Watching	
Viewing key assignments	While watching TV, → Help → <ul style="list-style-type: none"> Also available while recording or playing programs.
Searching current program on the Internet	While watching TV, → Operate Program → → Program Info. Search → → Search → <ul style="list-style-type: none"> Follow onscreen instructions.
Enlarging display size for portrait position	While watching TV, → AV Settings → → Screen Size → → Enlarge →
Viewing widescreen images in original size	While watching TV, → AV Settings → → Screen Size → → Original Size →
Smoothing TV images	While watching TV, → AV Settings → → Smooth Mode → → On → <ul style="list-style-type: none"> May not be effective depending on the image. Not effective while Two Screen is active.
Saving current channel	While watching TV, → Set Channels → → Save Channel → → Select key → <ul style="list-style-type: none"> To overwrite a saved channel, choose Yes and press .
Selecting an audiovisual mode	While watching TV, → AV Settings → → AV Mode → → Select mode → <ul style="list-style-type: none"> TV reception time may shorten depending on the mode.



Adjusting current AV Mode parameters	<p>[Start Here] While watching TV, ➔ AV Settings ➔ ➔ See below</p> <ul style="list-style-type: none"> Change AV Mode (select mode other than <i>Link to Genre</i>) first.
	<p>Brightness</p> <p>Image ➔ ➔ Brightness ➔ ➔ Adjust level ➔ </p>
	<p>Disabling/Enabling Brightness Adjustment via Light Sensor</p> <p>Image ➔ ➔ Brightness ➔ ➔ (□/✓) ➔ </p>
	<p>Adjusting Brightness Automatically by Scene</p> <p>Image ➔ ➔ Control by Scene ➔ ➔ On(Light) or On ➔ </p>
	<p>Other Image-Related Parameters</p> <p>Image ➔ ➔ Select item ➔ ➔ Adjust level ➔ </p> <ul style="list-style-type: none"> Adjust Contrast, Blackness (black level), Color (color density), Tint (skin color tone) and Sharpness.
	<p>Restoring Default Image Settings</p> <p>Image ➔ ➔ Reset ➔ ➔ Yes ➔ </p>
Changing panel pattern	<p>Selecting Sound Option</p> <p>Tone ➔ ➔ Select option ➔ </p>
	<p>While watching TV in portrait position, ➔ Advanced ➔ ➔ Panel Type ➔ ➔ Select pattern ➔ </p>
Customizing viewing options for Cycloid position	<p>[Start Here] While watching TV in Cycloid position, ➔ Advanced ➔ ➔ Landscape Sets. ➔ ➔ See below</p>
	<p>Showing Indicators Always</p> <p>Display Icon ➔ ➔ On ➔ </p>
	<p>Disabling Partial Image Enlargement</p> <p>Enlarge Point ➔ ➔ Off ➔ </p>
Switching One Seg service	<p>While watching TV, ➔ Set Channels ➔ ➔ Select Serv. Station ➔ ➔ Select service ➔ </p> <ul style="list-style-type: none"> Available for programs with multiple services.
Listening to audio from Speakers	<p>While watching TV, ➔ Advanced ➔ ➔ Sound Output ➔ ➔ Loudspeaker ➔ </p>
Using wireless Headphones	<p>While watching TV, (Long)</p> <ul style="list-style-type: none"> Pair SCMS-T DRM scheme compliant Bluetooth® headphones beforehand.
Setting TV to end automatically after a period of time	<p>While watching TV, ➔ Advanced ➔ ➔ Auto Exit ➔ ➔ Auto Exit Time ➔ ➔ Select time ➔ </p>
Disabling auto shut-off when handset is closed	<p>While watching TV, ➔ Advanced ➔ ➔ Auto Exit ➔ ➔ Close Action ➔ ➔ Watch TV ➔ </p>
Changing handset responses to incoming transmissions	<p>[Start Here] ➔ TV ➔ ➔ Settings ➔ ➔ Calls & Alarms ➔ ➔ See below</p>
	<p>Showing Alarm Notice</p> <p>Alarm ➔ ➔ Alarm Notice ➔ </p>
	<p>Showing Calls or S! Circle Talk Requests</p> <p>Select item ➔ ➔ Notice a Call ➔ </p>
Switching audio output to wireless device	<p>Showing New Message Window</p> <p>Incoming Message ➔ ➔ Calls & Alarms ➔ </p>
	<p> ➔ TV ➔ ➔ Settings ➔ ➔ Sound Output ➔ ➔ Bluetooth Device ➔ </p>



Two Screen	
Using Picture-in-Picture	While watching TV, Two Screen Set Two Screen Sub Screen
Canceling second program channel selection	While watching TV, Two Screen CH Op. OtherTVList Off <ul style="list-style-type: none"> When Off, main program channel selection is active.
Data Broadcast	
Changing display view	While viewing Data Broadcast in portrait position, Set Broadcast Data Change View (Data) <ul style="list-style-type: none"> To return to TV window, press .
Returning to initial window	While viewing Data Broadcast in portrait position, Set Broadcast Data Back to Top
Deleting information saved from Data Broadcasts	While watching TV, Set Broadcast Data Delete StationData See below <p>Deleting by Station Select station Delete Yes </p> <p>Deleting All Delete All Enter Handset Code Yes </p>
Hiding Network connection confirmation	While watching TV, Set Broadcast Data Notify Connection Off

Sending/hiding Location Information	While watching TV, Set Broadcast Data Location See below
	Sending Always On
	Hiding Always Off
Sending manufacture number and other information	While watching TV, Set Broadcast Data Manufacture Number On

TV Link (Japanese)

Saving links to Data Broadcasts or related information	While viewing Data Broadcast, select link source <ul style="list-style-type: none"> Link navigation varies by program. Follow onscreen instructions to save links.
Using TV links	TV Link See below <p>Opening TV Links Select link </p> <ul style="list-style-type: none"> Connection fees may apply. <p>Opening Properties Select link Details </p>
Deleting TV links	TV Link See below <p>One Entry Select link Delete Yes </p> <p>All Entries Delete All Enter Handset Code Yes </p>



Subtitle & Sound

Changing subtitle settings	<p>[Start Here] While watching TV,  ▶ Subtitle/Sound  ▶ See below</p> <ul style="list-style-type: none"> • May be unavailable depending on program content or viewing style (TV orientation, Two Screen usage pattern, etc.).
	<p>Showing Subtitles Always Display Subtitle  ▶ On </p>
	<p>Hiding Subtitles Always Display Subtitle  ▶ Off </p>
	<p>Changing Subtitle Language Subtitle Language  ▶ Language 2 </p>
	<p>Showing Subtitle Area Always Auto Subtitle Off  ▶ Off </p>
	<p>Showing Subtitles at the Top Subtitle Position  ▶ Upper </p>
Changing sound settings	<p>[Start Here] While watching TV,  ▶ Subtitle/Sound  ▶ See below</p>
	<p>Selecting Sound Option Sound Type  ▶ Sound2 </p> <ul style="list-style-type: none"> • Available when multiple sounds are supported.
	<p>Listening to Sub Language Sound Channel  ▶ Sub </p>
	<p>Listening to Main & Sub Languages Sound Channel  ▶ Main + Sub </p>

Recording

Recording programs without Data Broadcasts	While watching TV,  ▶ Set Broadcast Data  ▶ Set Recording  ▶ Image Only 
Saving Data Broadcasts to Memory Card	While watching TV,  ▶ Set Broadcast Data  ▶ Image Location  ▶ Memory Card 
Disabling Time Shift recording automatic activation	 ▶ TV  ▶ Settings  ▶ Set Call Time Shift  ▶ Off 
Recording programs to handset	 ▶ TV  ▶ Settings  ▶ Save Recording to  ▶ Phone Memory 



Recorded Programs

Playback

Splitting files by specifying a time point	During playback,
Playing files repeatedly	
Playing split files	

Managing

Checking memory status	
Renaming files	
Deleting files	
	Single Files Select file
	All Files
Copying files to Memory Card	 <ul style="list-style-type: none"> File is moved from handset to Memory Card when the number of copies made exceeds the limit.

Moving files to Memory Card

- Files moved to Memory Card cannot be moved back to handset.

Opening file properties

Markers

Playing files with Markers	During playback
	Skipping between Markers (Long) or (Long) Moving to Specific Markers -
Using Marker List	During playback,
	Starting Playback Select number
	Deleting a Marker Select number
	Deleting All Markers



TV Timer/TV Recording Timer

Opening/editing/ deleting Timer details	<p>[Start Here] While watching TV, → <i>Rec./TimeShift</i> → → <i>Reservation List</i> → → See below</p> <p>Opening Entries Select entry → </p> <p>Editing Entries Select entry → → <i>Edit</i> → → <i>Edit</i> → </p> <ul style="list-style-type: none"> Some entries may not be edited depending on the content. <p>Deleting Entries Select entry → → <i>Delete</i> → → <i>Yes</i> → </p>
	<p>[Start Here] While watching TV, → <i>Rec./TimeShift</i> → → <i>Reservation List</i> → → → See below</p> <p>Opening Timer Log Select record → </p> <p>Playing Recorded Programs Select record → </p> <p>Deleting Records Select record → → <i>Yes</i> → </p>
	<p>[Start Here] While watching TV, → <i>Advanced</i> → → <i>TV Alarm</i> → → See below</p> <p>Changing TV Alarm Time <i>Alarm Time</i> → → Select time → </p> <p>Disabling Tone/Vibration/Small Light <i>Tone, Vibration or Light</i> → → <i>Off</i> → </p> <p>Changing Duration <i>Duration</i> → → Select time → </p>

Prioritizing current operation over TV Timer/TV Recording Timer

→ *TV* → → *Settings* → → *TV Reserve Prior* → → *Off* →



Watching

? TV won't activate

- Battery may be low. Charge battery or install a charged battery.

? Cannot watch TV

- Reception may be poor; change location to improve it. (TV signal strength is independent of handset signal strength.)
- Handset may not have been used for a period of time; retrieve Network Information.
- TV is disabled upon subscription termination.

? Area setup does not complete correctly

- Perform **Update All** in Channel Update. Area setup may not complete correctly depending on the area or service availability.

Recording

? Ringtone does not sound as set while recording

- When a Chaku-Uta[®] file, etc. is set as ringtone, default ringtone may sound for incoming transmissions while recording.

TV Recording Timer

? *Could not start recording. appeared as recording result*

- Recording failed due to low battery/memory, active function, etc.

? *Recording aborted. appeared as recording result*

- Recording was interrupted due to low memory, Memory Card removal, etc.



Camera	7-2
Getting Started	7-2
Photo Camera	7-4
Capturing Still Images	7-4
Using Portrait Photography Features.....	7-5
Video Camera	7-6
Recording Video	7-6
Review	7-7
Opening Saved Files	7-7

Shooting Modes	7-8
Using Shooting Modes	7-8
Editing Images	7-11
Picture Editor	7-11
Composite	7-15
Printing	7-16
Printing Images	7-16
Additional Functions	7-17
Troubleshooting	7-22

7

Camera & Imaging



Getting Started

Capture still images or record video.

Portrait Photography

Automatically locks focus on faces, or releases shutter when subjects smile or turn their faces to camera.

Auto Focus

Measures the distance between subjects and camera to adjust focus.

Multiple Shooting Modes

Apply effect or add frame, capture sequential/panoramic or scan images, or use long exposure.

Review

Open/play last saved mobile camera file quickly with a single key; access older files as needed.

Precautions

- Clean dust/smudges from lens cover with a soft cloth before use.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Subjecting the lens to direct sunlight will damage the camera's color filter.

Auto Shut-off

- Before image capture/recording, mobile camera shuts down after a period of inactivity and handset returns to Standby.

Shutter Click

- Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.



Internal & External Cameras

Use Internal Camera or External Camera; unless noted otherwise, operations in this chapter are described for External Camera. Sizes are limited and shooting modes are not available for Internal Camera.

Camera Key

Press  in Standby to activate mobile camera.

Press  to toggle Photo Viewfinder and Video Viewfinder.

Cycloid Position


Activate mobile camera and rotate Display to Cycloid position to capture images/record in wideview.

Image/recording size changes accordingly.

Display Indicators


The following indicators appear at the top of Display.

Photo Viewfinder

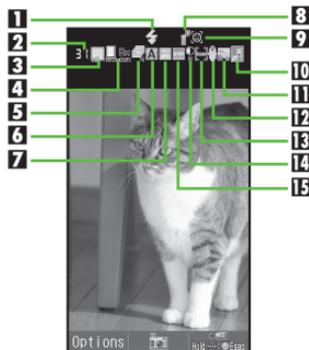

1	Mobile Light	8	Remote Shutter
2	Memory	9	Focus
3	Picture Quality	10	Background Save
4	Picture Size	11	Save to
5	Continuous Shoot	12	Auto Save
6	Scene	13	Image Orientation
7	Long Exposure	14	Shutter Mode
	ISO Sensitivity	15	Exposure
	Self-timer		White Balance

Video Viewfinder

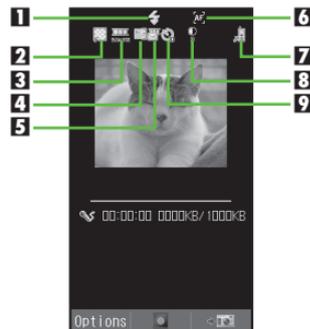

1	Mobile Light	5	Record Time
2	Video Quality	6	Focus
3	Record Size	7	Save to
4	Memory for still image capture	8	Exposure
		9	Self-timer

Advanced

  Opening Help  Changing function assigned to Camera Key () (P.7-17)



Capturing Still Images

1

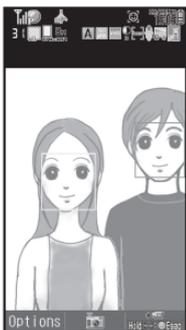


Photo Viewfinder

- Frames appear on detected faces. For details, see P.7-5 "Locking Focus on Faces Automatically."

2 Frame image on Display

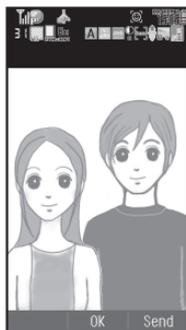


Image Save Window

- Shutter clicks and the captured image is saved.
- Open saved images via Review or Data Folder.

3

- Viewfinder returns.

4 **Camera shuts down**

Sending Captured Images via S! Mail

- After , Select message size limit
- Images may be resized automatically.
 - To make selection the default setting hereafter, press to check **From now on too** check-box.

Sending Captured Images at High Speed via Infrared

- After , (Long) Yes or No

Pre-Image Capture Operations

Zoom In/Out	
Toggle Mode	
Adjust Brightness	
Change Image Size	
Toggle Mobile Light Mode	
Toggle Internal Camera and External Camera	
Open Help	

Advanced

- Activating Mobile Light Adjusting focus quickly for close-up shots (And more on P.7-17)
- Adjusting camera's light sensitivity Changing image size Changing mode according to lighting or subject Adjusting color balance according to lighting conditions (And more on P.7-18 - 7-19)




Using Portrait Photography Features

Locking Focus on Faces Automatically

932SH camera locks focus on faces automatically; frames appear on detected faces. (Portrait auto focus)

Detection may fail depending on face angle, distance from subject or environment.

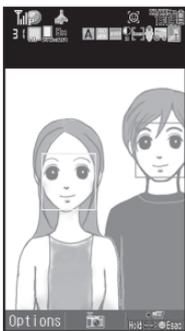

When Multiple Faces are Detected

- Frame appears on each face; slide finger left or right over TOUCH CRUISER to select focus point.

Specifying Focus Point Manually

Set mobile camera to lock focus on a specified area (face, etc.) when capturing images.

- 1 In Photo Viewfinder,
- 2 Shooting Settings
- 3 Focus Setting



- 4 Spot Auto Focus
- A yellow frame appears in center of Display.
- 5 Move frame with TOUCH CRUISER



- Move frame to where you want to lock focus on.
- 6
- Captured image appears.
- Press to return to Viewfinder.

Releasing Shutter upon Smile/Face Detection

Available Shutter Modes:

Smile Shutter (Egao)	Releases shutter when subject smiles
Face Shutter (Furimuki)	Releases shutter when subject turns face to camera

Adjust smile detection level as needed.

- 1 In Photo Viewfinder, (Long)



- Long Press repeatedly to toggle Shutter Mode between **Egao** () appears), **Furimuki** () appears) and **Normal**.

- 2 Shutter is released upon smile/face detection


- Captured image appears.
- Press to return to Viewfinder.

Advanced

- Setting Center Auto Focus Adjusting smile detection level Correcting portrait auto focus images (P.7-18)



Recording Video

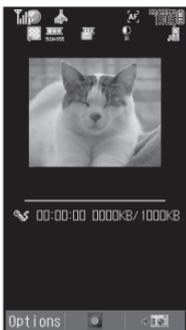

Video Viewfinder

- Omit step of pressing if Video Camera is already active.



- Recording starts after a tone. (To start over, press .)



Video Save Menu

- Recording stops with a tone. (To discard file and start over, press .)



- Video is saved. (Viewfinder returns.)
- Play saved video via Review, Data Folder or Media Player.



■ Pre-Recording Operations

Zoom In/Out	/
Toggle Mode	
Adjust Brightness	/
Change Record Size	
Toggle Mobile Light Mode	
Toggle Internal Camera and External Camera	/
Open Help	

Pausing Recording

After , (press repeatedly to pause/resume)

- May be unavailable depending on recording size.

Playing Unsaved Video

In , **Preview**

Sending Recorded Video via S! Mail

In , **Send** **Save and Send** **Complete message**

- Message creation confirmation appears depending on file size; choose **Yes** and press to proceed. (Choose **No** to cancel attachment.)
- To make selection the default setting hereafter, press to check **From now on too** check-box.
- May not be delivered as sent depending on recording size or recipient device.

Incoming Calls

- If a call arrives before video is saved, recorded clip is temporarily saved. End the call to return.

When Battery Runs Low

- Recording stops. (Recorded clip is saved.)

Advanced

- Activating Mobile Light ● Adjusting focus quickly for close-up shots (And more on P.7-17)
- Capturing images while recording video ● Changing recording time/size ● Enlarging Viewfinder size (And more on P.7-19)



Opening Saved Files

Opening Last Saved File

Open/play last saved mobile camera file quickly with a single key; access older files as needed.

Available in Standby or Viewfinder, as well as while using other functions (with some exceptions).

1 (Long)



Review Window

- To end Review, press .

Enlarging Images

After .

Pausing/Resuming Video

After  (press repeatedly to pause/resume)

Opening Help

[Review Window] 

Accessing Older Files

1 In Review window,



Review File List

- File list appears; press  repeatedly to toggle lists.

2 Select file


- File opens/plays.

Sending Images

Send images to blogs, etc. via mail. Infrared and other options can also be used for sending images to other devices. To send images to blogs, complete Blog Setting beforehand.

1 In Review file list, select image

2 Send/Blog

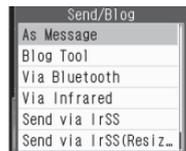

3 Select option

- Follow onscreen instructions.



Using Shooting Modes

May be unavailable depending on selected image/recording size.

Self-timer

1 In Photo/Video Viewfinder,



➔ **Self-timer** ➔

2 Select time ➔



3 Frame image on Display ➔

- After selected time elapses, captured image appears or recording starts.
- To stop recording, press .
- For more, see operation descriptions on P.7-4 or P.7-6.

Releasing Shutter during Countdown After

Incoming Calls/Alarm during Countdown

- Countdown stops. (Self-timer remains active.)

Continuous Shoot (Photo Camera)

Available Modes:

4 Pictures	Capture four separate images with Index Image
9 Pictures	Capture nine separate images with Index Image
Overlapped	Capture five images to create a composite image

1 In Photo Viewfinder, ➔ **Modes** ➔



Mode Menu

2 **Continuous Shoot** ➔

3 **Select mode** ➔ ➔ **Select speed** ➔

4 **Frame image on Display** ➔

- After image capture, Index Image or a composite image appears. (All captured images are saved.)
- When shooting speed is set to **Manual** (4 Pictures and 9 Pictures modes), repeat 4 for each frame.

Checking Captured Images before Saving


- Set Auto Save to **Off** beforehand. After image capture, Index Image or a composite image appears.
 - Follow these steps to save all captured images:
 - ➔ **All Pictures** ➔
 - Follow these steps to save selected image:
 - ➔ **Select image** ➔ ➔ **Selected Picture** ➔



Adding Frames (Photo Camera)

1 In mode menu, **Add Frame** →

2 **Preset Frames** →

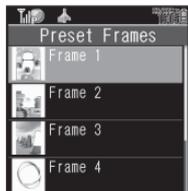

3 **Select frame** →

4 **Frame image on Display** →

- Captured image appears.
- Press to return to Viewfinder.

Using Frames in Data Folder

In , **Data Folder** → → **Select frame** → →

Camera Effects (Photo Camera)

1 In mode menu, **Camera Effects** →



2 **Select effect** →

3 **Frame image on Display** →

- Captured image appears.
- Press to return to Viewfinder.

Long Exposure (Photo Camera)

Capture low-light shots (fireworks, night scenes, etc.) clearly.

1 In mode menu, **Long Exposure** →

2 **On** →

3 **Frame image on Display** →



- Shutter is left open for an extended period of time, then captured image appears.
- Press to return to Viewfinder.



Panorama Picture (Photo Camera)


- 1 In mode menu, **Panorama/Scanner** ➔



Panorama/Scanner Menu

- 2 **Panorama Picture** ➔ ➔ **On** ➔

- 3 **Frame image on Display** ➔

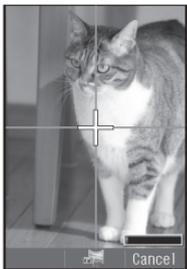

- Move handset slowly to keep aligned with either of yellow lines.
- Image is captured automatically when the bar () turns blue.

4

- Image is saved.

Checking Captured Images before Saving

- Set Auto Save to **Off** beforehand. After image capture, Save menu opens.
 - To check captured images, follow these steps in Save menu: **Preview** ➔
 - To save captured images, follow these steps in Save menu: **Save** ➔

Scanning Images (Photo Camera)

- 1 In Panorama/Scanner menu, **Scanner** ➔

- 2 **Select size** ➔ ➔ **Frame image on Display** ➔



- Move handset slowly to scan the area to capture. (Refer to indicators on Display.)

3

- Image is saved.

Checking Captured Images before Saving

- Set Auto Save to **Off** beforehand. After image capture, Save menu opens.
 - To check captured images, follow these steps in Save menu: **Preview** ➔
 - To save captured images, follow these steps in Save menu: **Save** ➔

Advanced

- Changing Panorama settings
- Changing Panorama image preview method (P.7-19)

Picture Editor

Picture Editor Options

The following options are available. Some images may not be editable depending on file type and size.

Resize	Select from preset sizes or crop image
Frame	Add Frame to images
Paste	Add text/dates to images
Retouch	Dress up images with preloaded visual effects
Stamp	Add stamps to images
Face Arrange	Make smiley, angry or sad faces
Correction	Correct images
Rotate	Rotate images
File Format	Convert file format and change file size

Basic Operation

1 → **Data Folder** →

2 **Pictures** → → **Select image** →

3 → **Edit** →

4 **Picture Editor** →



Picture Editor Menu

5 **Select effect** → → **Edit**



• To start over, press .

6 **When finished**,



7 **Save as New** →

• To overwrite, select **Overwrite** and press . (Omit .)

8 **Enter name** → → **Save here** →

Canceling Effects

After , **Undo** →

■ To restore effect immediately after canceling, select **Redo** and press .



Changing Image Size

Select from preset sizes or crop image.

Resize to Preset Size

- 1 In Picture Editor menu, **Resize** ➔ 



Resize Window

- 2 Select size ➔ 

- 3  Specify display area



- Omit  if there is no rectangle on the image.

- 4 
 - Editing is completed.

Zooming In/Out

After ,  ➔  ➔ 

Cropping Images

- 1 In Resize window, **Cut** ➔ 
- 2  Move + to the upper left corner of the portion to crop ➔ 



- 3  Move + to the lower right corner of the portion to crop ➔ 

- 4 
 - Editing is completed.

Specifying Display Area

After ,  ➔ 

Zooming In/Out

After ,  ➔  ➔ 

Advanced

-   Using additional editing options (P.7-20)

Applying Visual Effects

Render in sepia tones or add blur, etc.

- 1 In Picture Editor menu, *Retouch* ➔




- 2 Select effect ➔




- 3
 - Editing is completed.

Adding Frames

- 1 In Picture Editor menu, *Frame* ➔

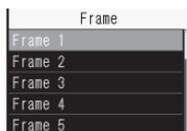

- 2 Select frame ➔

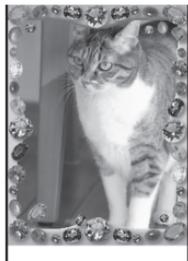

- 3
 - Editing is completed.



Face Arrange

Make faces smiley, sad, etc.

- 1 In Picture Editor menu, **Face Arrange** ➔



Face Arrange Menu

- 2 Select type ➔

- 3

• Editing is completed.

Important Face Arrange Usage Note

- When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

Adjusting Positions

Change the default positions and sizes of targets to fit the image.


- 1 In Face Arrange menu, ➔

- A rectangle appears with + in the upper left corner.

- 2 Move + to top left of face




- 3 Move + to bottom right of face

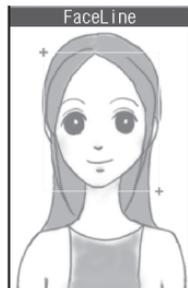

- 4

- Face line is set. Set the eyes and then mouth in the same way.

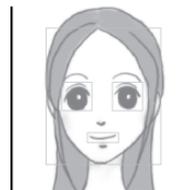

- 5 ➔ Yes ➔ ➔ Save here ➔

- Image is saved as a new entry with Face Arrange positions adjusted. Complete Face Arrange. Face Arrange is applied to the adjusted positions.



Composite

Composite Options

The following options are available. Some images may not be editable depending on file type and size.

Split Picture	Combine up to four images into one
Merge Panorama	Combine two still images into one

Panorama Images

Panorama Image Effects:

Near View	Best suited for close-up shots
Document	Use for images with text
Standard	Apply to other images

1 **Data Folder**

2 **Pictures** **Select image**

3 **Edit**

4 **Composite**

5 **Merge Panorama**



• File selected in 2 is set as left image.

6 **<Empty>** **Select image**

7 **EFFECT** **Select effect**

• Editing is completed.

8 **When finished,**



• Merged image appears.

9

10 **Enter name** **Save here**

Changing Images

After 7, select image

Select image

Switching Image Positions

After 6,

Advanced

Combining reduced images (P.7-20)



Printing Images

Digital Print Order Format (DPOF)

Select images from Memory Card and specify the number of copies to print on DPOF-compatible printers, or at digital printing services.

DPOF settings made on other devices are unusable; delete existing settings to create new ones on handset.

7

Camera & Imaging

1 → **Settings** → → →


2 **Memory Card** → → **DPOF** →

3 **Number of Copies** →



4 **For Each Picture** → →

5 **Select image** →

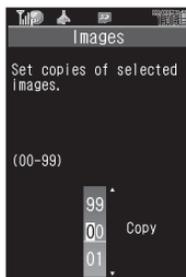

6 **Enter a number of copies to print** →

• For more settings, repeat 5 - 6.

7

Applying a Number to All Images

In 4, **For All Pictures** → → **Enter a number of copies to print** →

Canceling Specified Number

In 6, enter **00** → →

Viewing Current Print Settings

In 3, **Check Settings** →

Using Printers

Connect handset to a Bluetooth®-compatible printer and print images in Pictures folder.

- Activate Bluetooth® on the printer.
- Some images may not be sent depending on file type and size.

1 → **Data Folder** → → **Pictures** →

2 **Select image** → → **Print** →

3 **Via Bluetooth** → → **Select printer** →

4 **Yes** →

- To cancel, press .

When Authorization Code is Required

Enter Authorization Code →

Advanced

• Changing print settings (P.7-21)

Photo Camera & Video Camera

General

Opening Help	In Photo/Video Viewfinder, → Help → <ul style="list-style-type: none"> Press to toggle Help window for key assignments and indicator descriptions.
Changing function assigned to Camera Key ()	→ Camera → → Set Camera Key → → Select function →

Capturing

Activating Mobile Light	In Photo/Video Viewfinder, → Mobile Light → → On or Automatic → <ul style="list-style-type: none"> Low Light is also available for still image capture. Do not use Mobile Light near people's faces or look into the light yourself.
Adjusting brightness	In Photo/Video Viewfinder, → Shooting Settings or Record Settings → → Exposure → → Adjust level
Adjusting focus quickly for close-up shots	In Photo/Video Viewfinder, → Shooting Settings or Record Settings → → Focus Setting → → Macro →
Adjusting focus manually	In Photo/Video Viewfinder, → Shooting Settings or Record Settings → → Focus Setting → → Manual Focus → → Adjust focus → <ul style="list-style-type: none"> To readjust focus, press .

Locking focus	In Photo/Video Viewfinder, <ul style="list-style-type: none"> Frame subject in center of Display first. To start over, press again.
Changing image quality	In Photo/Video Viewfinder, → Picture Quality or Video Quality → → Select quality →
Saving	
Selecting automatic save option	In Photo/Video Viewfinder, → Settings → → Auto Save → → See below For Still Images Select option → <ul style="list-style-type: none"> When Off, press after image capture to save. Saving Video Automatically On →
	Changing save location



Photo Camera

■ General

Changing shutter click sound	In Photo Viewfinder, \rightarrow Settings \rightarrow \rightarrow Shutter Sound \rightarrow \rightarrow Select pattern \rightarrow \rightarrow <ul style="list-style-type: none"> Shutter click sounds for Continuous Shoot, Panorama Picture and Scanner are fixed.
Hiding indicators	In Photo Viewfinder, \rightarrow Settings \rightarrow \rightarrow Display Indicators \rightarrow \rightarrow Hide Indicators \rightarrow \rightarrow
Changing send option assigned to	In Photo Viewfinder, \rightarrow Settings \rightarrow \rightarrow Set Send Key \rightarrow \rightarrow Short press or Long press \rightarrow \rightarrow Select option \rightarrow \rightarrow <ul style="list-style-type: none"> Change send option separately for each key press method.
Disabling quick transition to Viewfinder after saving images	In Photo Viewfinder, \rightarrow Settings \rightarrow \rightarrow Background Save \rightarrow \rightarrow Off \rightarrow \rightarrow

■ Capturing

Adjusting camera's light sensitivity	In Photo Viewfinder, \rightarrow ISO Sensitivity \rightarrow \rightarrow Select level \rightarrow \rightarrow
Changing image size	In Photo Viewfinder, \rightarrow Picture Size \rightarrow \rightarrow Select size \rightarrow \rightarrow <ul style="list-style-type: none"> Select To Wide or To Normal to swap the height and width of Picture Size options.
Changing mode according to lighting or subject	In Photo Viewfinder, \rightarrow Scene \rightarrow \rightarrow Select mode \rightarrow \rightarrow

Setting Center Auto Focus

In Photo Viewfinder, \rightarrow **Shooting Settings** \rightarrow \rightarrow **Focus Setting** \rightarrow \rightarrow **Center Auto Focus** \rightarrow \rightarrow

Adjusting smile detection level

In Photo Viewfinder, \rightarrow **Shooting Settings** \rightarrow \rightarrow **Egao level** \rightarrow \rightarrow **Select level** \rightarrow \rightarrow

- Lower the level when detection is slow.

Adjusting color balance according to lighting conditions

In Photo Viewfinder, \rightarrow **Shooting Settings** \rightarrow \rightarrow **White Balance** \rightarrow \rightarrow **Select mode** \rightarrow \rightarrow

■ Correction/Preview

Correcting portrait auto focus images	Start Here After image capture, \rightarrow Correlate to Face \rightarrow \rightarrow See below <ul style="list-style-type: none"> Available when Auto Save is Off.
	Adjusting Face/Background Brightness Against sun \rightarrow \rightarrow
Checking image details before saving	Blurring Out-of-Focus Portions Portrait \rightarrow \rightarrow
	After image capture, \rightarrow [1] - [9] (Long) <ul style="list-style-type: none"> Available when Auto Save is Off. Use to see outside of enlarged portion. (Press to enlarge further.) To return to captured image, press . Key Assignments: <ul style="list-style-type: none"> (Upper left) (Upper center) (Upper right) (Left) (Center) (Right) (Lower left) (Lower center) (Lower right) May be unavailable depending on image size, etc.



■ Panorama Picture

Changing Panorama settings	<p>Start Here In Photo Viewfinder, Settings Panorama Settings See below</p>
	<p>Hiding Guides</p> <p>Assisting Lines Off </p>
	<p>Locking Display Brightness during Image Capture</p> <p>AE-Lock Enable </p>
Changing Panorama image preview method	<p>In Panorama preview, Manual Scroll or Full Image </p> <ul style="list-style-type: none"> Available when Auto Save is <i>Off</i>.

■ Bluetooth® Watches

Releasing shutter remotely with a Bluetooth® watch	<p>In Photo Viewfinder, press the corresponding button on Bluetooth® watch</p> <ul style="list-style-type: none"> Connect handset to a Bluetooth® watch and set Set Remote Shutter to <i>On</i> beforehand. For details, see the Bluetooth® watch guide.
Disabling remote shutter control via Bluetooth® watches	<p>In Photo Viewfinder, Settings Set Remote Shutter Off </p> <ul style="list-style-type: none"> Available when a Bluetooth® watch is registered.

Video Camera

Capturing images while recording video	<p>While recording, </p> <ul style="list-style-type: none"> Captured images are saved when saving recorded clip; open them via Review or Data Folder.
Changing recording time/size	<p>In Video Viewfinder, Record Time/Size For Message or Extended Video Select size </p>
Enlarging Viewfinder size	<p>In Video Viewfinder, Display Size Enlarge </p>
Recording video without sound	<p>In Video Viewfinder, Microphone Off </p>
Changing video encoding	<p>In Video Viewfinder, Settings Video Encode Select option </p>



Editing Images

Picture Editor

Start Here → **Data Folder** → **Pictures** →
 Select file → Edit →
Picture Editor → See below

Changing Text/Outline Color

Paste → **Select text color** →
 Select outline color →

Adding Text

Paste → **Free Text** → Enter text →
 Move text →

Adding Dates

Paste → **Date** → Move date →

Adding Stamps

Stamp → Select stamp → Move stamp →

Correcting Image Parameters

Correction → Select type →

Rotating Images

Rotate → Select type →

Converting File Format

File Format → **File Format** →
 Select format →

- Changing file format may affect file size/image quality.
- To return to Picture Editor menu, press **ESC**.

Using additional editing options

Using additional editing options

Start Here → **Data Folder** → **Pictures** →
 Select file → Edit →
Picture Editor → See below

Changing File Size

File Format → **File Size** → Select size →

- Changing file size may affect image quality.
- To return to Picture Editor menu, press **ESC**.

Composite

Combining reduced images

Start Here → **Data Folder** → **Pictures** →
 Select file → Edit →
Composite → See below

Creating Split Picture

SplitPicture 480x854 or **SplitPicture 240x320** →
 <Empty> → Select file →
 When finished, Enter name → Save here →

- Repeat from selecting <Empty> as needed.

Previewing Split Picture

While creating Split Picture, View
Composite →

Changing Images

While creating Split Picture, select image →
 Select another →

Deleting Images

While creating Split Picture, select image →
 Remove → Yes →



DPOF

Changing print settings

Start Here  **Settings**   **Connectivity**
 **Memory Card**   **DPOF**   **See below**

Adding Dates to Prints

Settings   **Add Date**   **On**  

Creating an Index Print

Settings   **Index Print**   **On**  

Resetting

Reset Settings   **Yes**  



Mobile Camera

? Mobile camera won't activate/ shuts down automatically

- Battery may be low. Charge battery or install a charged battery.
- Leaving handset at high temperature may cause camera area to heat up, disabling mobile camera activation; wait a while and retry.
- Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown; wait a while and retry.

? Cannot use Background Save or Auto Save

- Background Save/Auto Save is not available when Save Pictures to is set to **Ask Each Time**.

? Display went dark during image capture

- 932SH camera has built-in mechanical shutter and ND filter. Strong shocks to handset during image capture may close mechanical shutter for camera protection, resulting in blank Viewfinder. Reactivate mobile camera to reopen the shutter.

? Captured image appears all white

- When Long Exposure is active (⏱ appears), images captured in daylight or good light appear all white.

Editing Images

? Cannot save/send edited images

- Edited images may be too large to save or send via mail.

DPOF

? Cannot specify print settings properly

- If Memory Card image files have been deleted or renamed on PCs or other devices, reset print settings and start over with settings.



Media Player	8-2
Media Basics	8-2
Music	8-4
Playing Music.....	8-4
Video	8-5
Playing Video.....	8-5

Playlists	8-6
Using Playlists	8-6
S! Appli	8-7
Using S! Applications	8-7
Additional Functions	8-8
Troubleshooting	8-13

8

Media Player & S! Applications



Media Basics

Use Media Player to play music/video on 932SH.

- Download media files from Mobile Internet sites via Media Player directly.
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)
Downloads/Transferred Files

SD AUDIO

(Memory Card)
Transferred SD-Audio Files

WMA

(Memory Card)
Transferred WMA Files

Video File Support

My Videos

(Handset/Memory Card)
Downloads/Recorded Files

When using a Memory Card with SD-Video files recorded on other devices, open them from **SD VIDEO**.

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- When battery is low, Media Player will not play. If battery runs low during playback, Media Player shuts off.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming); downloaded media cannot be saved. Packet transmission fees apply even while stream is paused.

Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.



Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

- 1 ➔ **Media Player** ➔



Media Player Menu

- 2 **Music or Videos** ➔

- 3 **Download Music or Download Videos** ➔

- Follow the links to download media.

Download via Music Search (Japanese)

In **Music Search** ➔

- Follow onscreen instructions.

Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

Saving AAC Files

Convert PC music files to 932SH-compatible format (P.15-21), then save to corresponding Memory Card folder (P.15-24) via Mass Storage. Install USB Cable driver beforehand.

Saving WMA Files

Follow these steps to save WMA files via compatible software:

Copy protected files can only be played on the handset with which the files were transferred.

- 1 ➔ **Media Player** ➔

- 2 **MTP Mode** ➔ ➔ **Yes** ➔



- 3 **Connect handset to a PC via USB Cable**

- Copy music from PC. Refer to the software's help menu for operational instructions.

- 4 ➔ **Yes** ➔ ➔ **Connection ends**

- Disconnect USB Cable.



Playing Music

1 → **Media Player** → → **Music** →

2 **My Music** → → **Select tab (folder)**



Music Playlists Window

3 **All Music** →

4 **Select file** →



Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files. (WMA album art is not supported.)

Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

→ **Yes** →

Playing SD AUDIO or WMA Files

In , **SD AUDIO** or **WMA** → → **From**

Searching Music Files

After , → **Search** → → Enter search text →

Lyric Display-Compatible Files

- Press to display lyrics.

Music Playback Operations

Replay	(Long Press: rewind*)
Skip Forward	(Long Press: fast forward*)
Volume Down	(Long Press: mute)
Volume Up or Cancel Mute	
Pause	
Stop	While paused,
Switch Sound Output	(Long)
Open Help	

*Release for playback.

Music Playback Window Indicators



1 Title	6 Elapsed time
2 Artist name	7 Volume
3 Track number	8 Information link
4 Status	9 Sound Effects
5 Playback Mode	

Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Switching audio output to wireless device
- Playing repeatedly or randomly
- Changing Sound Effects (P.8-8)



Playing Video

1 → **Media Player** → →


2 **My Videos** → → **Phone Memory or Memory Card** →



Video Playlists Window

3 **All Videos** →

4 **Select file** →

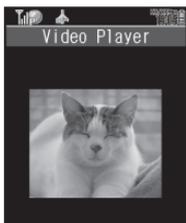

Video Playback Window

5 → **Playback stops**

Playing SD VIDEO Files

In 2, **SD VIDEO** → → 4

Searching Video Files

After , → **Search** → → Enter search text →

At Alarm Time

- Playback stops.

Video Recorded on Other Devices

- Video image may appear rotated.

Video Playback Operations

For pause, volume up/down, sound output or help, see P.8-4 "Music Playback Operations."

Replay	(Long Press: rewind')
Skip Forward	(Long Press while paused: advance frame, Long Press: fast forward')
Toggle Display Size	2

'Release for playback.

Video Playback Window Indicators



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Switching audio output to wireless device
- Playing repeatedly or randomly
- Changing Sound Effects
- Changing playback size
- Setting Backlight status
- Hiding linked information (P.8-8)



Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.


Adding to Playlist

Follow these steps to add a music file to **プレイリスト1**:

- 1 → **Media Player** → → **Music** →




- 2 **My Music** →
- 3 **All Music** → → **Select file** →

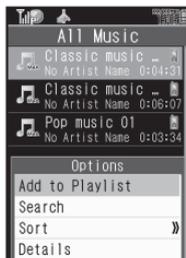

- 4 **Add to Playlist** → → **プレイリスト1** →

Renaming Playlists

- 1 In Playlists window, select **Playlist** →

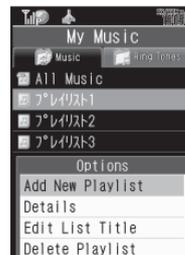

- 2 **Edit List Title** → → **Enter name** →



Advanced

- Organizing Playlists
- Sorting files
- Opening properties
- Deleting/editing SD AUDIO files
- Deleting All WMA files
- Downloading Contents Keys (P.8-9)
- Organizing Playlists
- Sorting files
- Downloading Contents Keys
- Opening properties
- Deleting SD VIDEO files (P.8-10)



Using S! Applications

Try out the preloaded S! Applications or download and use 932SH-compatible S! Applications, including games. Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

Remote Control

- Use **Familink Remote** S! Application (Japanese) to control a TV, VCR, etc. via infrared.

1  → **S! Appli** → 

2 **S! Appli Library** → 



S! Appli Library

3 **Select application** → 

Network S! Applications

- A message appears indicating that Internet connection is required. Follow onscreen instructions.

Incoming Calls

- Incoming calls automatically pause S! Application.

Opening S! Appli Notification History

In  **Notification History** → 

Exiting S! Applications

1 



2 **End** → 

Pausing S! Applications

In  **Suspend** → 

Resuming S! Applications

 → **Resume** → 

- Select **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Select **End** to end the S! Application.

Advanced

- Downloading S! Applications
- Adjusting S! Application sound volume
- Canceling surround effect
- Setting handset responses to incoming transmissions
- Disabling TOUCH CRUISER for S! Applications
- Setting S! Application to activate in Standby
- Setting Permissions
- Opening properties (P.8-11)
- Moving S! Applications to Memory Card
- Changing S! Application settings
- Deleting S! Applications
- Restoring default S! Application settings
- Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 932SH
- Opening Java™ license information (P.8-12)



Managing Music Files

Organizing Playlists	<p>Start Here → Media Player → Music → My Music → Select tab (folder) → See below</p> <p>Adding New Playlists Add New Playlist → Enter name →</p> <p>Deleting Playlists Select Playlist → Delete Playlist → Yes →</p> <p>Deleting Playlist Files Select Playlist → Select file → Delete → Yes →</p> <p>Changing File Order Select Playlist → Select file → Change Order → Move file →</p>
	<p>Sorting files</p> <p>Media Player → Music → My Music → Select tab (folder) → All Music → Sort → Select option →</p>
	<p>Start Here → Media Player → Music → See below</p> <p>SD AUDIO Files SD AUDIO → All Music → Select file → Details →</p> <p>Other Files My Music → Select tab (folder) → Select Playlist → Select file → Details →</p>

Deleting/editing SD AUDIO files

Start Here → **Media Player** → **Music** → **SD AUDIO** → **See below**

Deleting Single Files

All Music → **Select file** → **Delete Track** → **Yes** →

- Source files will be deleted.

Deleting All Files

All Music → **Del. All Tracks** → **Yes** → **Yes** →

- Source files will be deleted.

Editing Title/Artist

All Music → **Select file** → **Edit** → **Select item** → **Enter title or name** →

Deleting All WMA files

Media Player → **Settings** → **Delete All WMA** → **Enter Handset Code** → **Yes** →

- Source files will be deleted.

Downloading Contents Keys

Media Player → **Music** → **My Music** → **Select tab (folder)** → **Select Playlist** → **Select file (with ⌘)** → **Yes** →

- Follow onscreen instructions.



Managing Video Files

Organizing Playlists	<p>Start Here Media Player Videos My Videos Phone Memory or Memory Card See below</p> <p>Adding New Playlists Add New Playlist Enter name </p> <p>Deleting Playlists Select Playlist Delete Playlist Yes </p> <p>Deleting Playlist Files Select Playlist Select file Delete Yes </p> <p>Changing File Order Select Playlist Select file Change Order Move file </p>
	<p> Media Player Videos My Videos Phone Memory or Memory Card All Videos Sort Select option </p>
	<p> Media Player Videos My Videos Phone Memory or Memory Card All Videos Select file (with) Yes </p> <p>• Follow onscreen instructions.</p>
Sorting files	
Downloading Contents Keys	

Opening properties

Start Here **Media Player** **Videos** See below

SD VIDEO Files

SD VIDEO Select file **Details**

Other Files

My Videos **Phone Memory or Memory Card** Select Playlist Select file **Details**

Deleting SD VIDEO files

Media Player **Videos** **SD VIDEO** Select file **Delete** **Yes**

- Source files will be deleted.



S! Applications		
Downloading S! Applications	<p>■ → S! Appli → ■ → S! Appli Library → ■ ↓ Download → ■</p> <ul style="list-style-type: none"> Follow onscreen instructions. 	
Adjusting S! Application sound volume	<p>■ → S! Appli → ■ → Settings → ■ → Application Volume → ■ → Adjust level → ■</p>	
Canceling surround effect	<p>■ → S! Appli → ■ → Settings → ■ → Surround → ■ → Off → ■</p>	
Setting handset responses to incoming transmissions	<p>Start Here ■ → S! Appli → ■ → Settings → ■ → Calls & Alarms → ■ → See below</p> <p>Showing Calls Select item → ■ → Show Call Notice → ■</p> <p>Pausing S! Application for Incoming Mail Incoming Message → ■ → Message Priority → ■</p> <p>Showing Alarm Notice Alarm → ■ → Alarm Notice → ■</p> <p>Showing Incoming S! Appli Request Notice Notification → ■ → Start Notice → ■</p>	
	Disabling TOUCH CRUISER for S! Applications	<p>■ → S! Appli → ■ → Settings → ■ → TOUCH CRUISER → ■ → Off → ■</p>

Setting S! Application to activate in Standby	<p>Start Here ■ → S! Appli → ■ → See below</p> <p>Activating Screensaver Settings → ■ → Screensaver → ■ → Switch On/Off → ■ → On → ■</p> <p>Setting Screensaver S! Appli Library → ■ → Select application → ■ ☰ → As Screensaver → ■</p> <ul style="list-style-type: none"> As Screensaver appears for compatible S! Applications. Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset. <p>Changing Screensaver Activation Time Settings → ■ → Screensaver → ■ → Activation Time → ■ → Enter time → ■</p> <p>Disabling Automatic Screensaver Restart Settings → ■ → Screensaver → ■ → Stop Auto Start → ■ → On → ■</p>	
	Setting Permissions	<p>Start Here ■ → S! Appli → ■ → S! Appli Library → ■ → Select application → ☰ → Permission → ■ → See below</p> <p>Customizing Permissions for S! Appli Operations Select item → ■ → Select option → ■</p> <p>Resetting Permission Settings Reset Settings → ■ → Yes → ■</p>
	Opening properties	<p>■ → S! Appli → ■ → S! Appli Library → ■ → Select application → ☰ → Details → ■</p>



Moving S! Applications to Memory Card	<p> <input type="checkbox"/> → S! Appli → <input type="checkbox"/> → S! Appli Library → <input type="checkbox"/> → <input type="checkbox"/> → Select application → <input type="checkbox"/> (<input type="checkbox"/>/ <input checked="" type="checkbox"/>) → Complete selection → <input type="checkbox"/> → Move to Card → <input type="checkbox"/> </p> <ul style="list-style-type: none"> When an older version of the S! Application is saved, choose Yes or No and press <input type="checkbox"/>. Repeat application selection step as needed before pressing <input type="checkbox"/>. Some S! Applications cannot be moved to Memory Card.
Changing S! Application settings	<p> <input type="checkbox"/> → Start Here → <input type="checkbox"/> → S! Appli → <input type="checkbox"/> → Settings → <input type="checkbox"/> → See below </p> <p>Activating Notification Setting Notification Setting → <input type="checkbox"/> → On → <input type="checkbox"/></p> <p>Setting Backlight Status Backlight → <input type="checkbox"/> → Switch On/Off → <input type="checkbox"/> → Select option → <input type="checkbox"/></p> <ul style="list-style-type: none"> Selecting Normal Settings applies Display Backlight setting. <p>Disabling Backlight Flashing Backlight → <input type="checkbox"/> → Blink → <input type="checkbox"/> → Off → <input type="checkbox"/></p> <p>Disabling Vibration Vibration → <input type="checkbox"/> → Off → <input type="checkbox"/></p>
Deleting S! Applications	<p> <input type="checkbox"/> → S! Appli → <input type="checkbox"/> → S! Appli Library → <input type="checkbox"/> → <input type="checkbox"/> → Select application → <input type="checkbox"/> → Delete → <input type="checkbox"/> → Yes → <input type="checkbox"/> </p> <ul style="list-style-type: none"> Handset Code may be required. Cancel Screensaver to delete Screensaver S! Application.

Restoring default S! Application settings	<p> <input type="checkbox"/> → S! Appli → <input type="checkbox"/> → Settings → <input type="checkbox"/> → Set to Default → <input type="checkbox"/> → Enter Handset Code → <input type="checkbox"/> → Yes → <input type="checkbox"/> </p>
Restoring default S! Appli Library	<p> <input type="checkbox"/> → S! Appli → <input type="checkbox"/> → Settings → <input type="checkbox"/> → Memory All Clear → <input type="checkbox"/> → Enter Handset Code → <input type="checkbox"/> → Yes → <input type="checkbox"/> </p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai[®] service providers for details.) Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications; Near Chat access restriction will be canceled.
Synchronizing Memory Card S! Applications with 932SH	<p> <input type="checkbox"/> → S! Appli → <input type="checkbox"/> → Settings → <input type="checkbox"/> → Synchronization → <input type="checkbox"/> → Yes → <input type="checkbox"/> </p>
Opening Java™ license information	<p> <input type="checkbox"/> → S! Appli → <input type="checkbox"/> → Information → <input type="checkbox"/> </p>



Music

How do I delete files in All Music?

- Delete All Music files via Data Folder (Music or Ring Songs-Tones).

WMA files do not appear (WMA files are not transferable)

- Did you use 932SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform **Delete All WMA** and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)
- WMA files may be corrupted; perform **Delete All WMA** and retry.

Cannot play WMA files

- Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform **Delete All WMA** and retry.

Video

How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

Cannot play video files

- Files created with PC software, etc. may not play.

S! Applications

Cannot move S! Applications to Memory Card

- The S! Application may already be saved or Memory Card memory may be low.

S! Applications do not pause for incoming transmissions despite Calls & Alarms settings

- Regardless of setting, a message appears for Screensaver S! Applications.



Calendar & Tasks	9-2
Calendar	9-2
Tasks	9-4
Alarms	9-6
Using Alarms	9-6
Wakeup TV	9-8
Using Wakeup TV	9-8
Calculator	9-10
Using Calculator	9-10
Expenses Memo	9-11
Adding Expenses	9-11
Osaifu-Keitai®	9-12
Osaifu-Keitai® (Japanese)	9-12
Locking IC Card	9-13
Simulated Call	9-15
Faking Incoming Calls	9-15
Stopwatch	9-16
Using Stopwatch	9-16
Countdown Timer	9-17
Using Countdown Timer	9-17
World Clock	9-18
Opening World Clock	9-18
Hour Minder	9-19
Using Hour Minder	9-19

Pedometer	9-20
Using Pedometer	9-20
Compass	9-22
Using Compass	9-22
S! GPS Navi	9-23
Using S! GPS Navi	9-23
Document Viewer	9-25
Opening PC Documents	9-25
Notepad	9-26
Saving Text	9-26
ASCII Art	9-27
Using ASCII Art	9-27
Voice Recorder	9-28
Recording/Playing Voice	9-28
Scan Barcode	9-29
Scanning Barcodes	9-29
Create QR Code	9-30
Creating QR Codes	9-30
Scan Card	9-31
Scanning Business Cards	9-31
Text Scanner	9-32
Scanning Text	9-32
Additional Functions	9-33
Troubleshooting	9-47

9

Handy Extras

Calendar

Opening Calendar

- 1 **Calendar**



Calendar Window

Key Assignments

	Open previous page		Toggle view
	Open next page		Select week ^{2,3}
	Go to (Today) ¹		Select date ³
	Help		

¹In 6Month View, the current month is selected.

²In Week View, select time block.

³In 6Month View, select month.

Saving Schedules


Follow these steps to save subject, start/end date/time, Alarm and schedule details. Either Subject or Description must be saved per entry.

- 1 In Calendar window, select date




- 2 **<Add New Entry>**

- 3 Enter subject

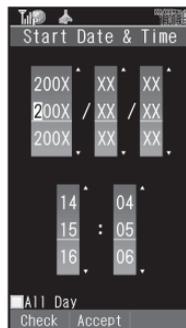

- 4 Enter start date/time

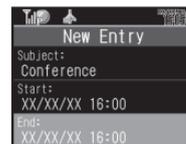

- 5 **End:** Enter end date/time

- 6 **Alarm:**

- 7 **Alarm Time:** Select time

- 8 **Description:** Enter schedule details

- 9 **Saved**

All-Day Schedule

In

Custom Alarm Time

In , **Alarm Time:**

Enter date/time

From

Advanced

- Changing default view
- Jumping to specified date
- Changing date color
- Selecting task view option
- Adding stamps (Month View)
- Hiding schedules
- Saving additional holidays
- Removing/restoring preset holidays
- Setting Category/Location
- Saving repetitive schedules (And more on P.9-33 - 9-34)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

- While Alarm sounds/vibrates, press or .

Stopping Alarm to Open Schedule

- While Alarm sounds/vibrates, press a key other than , , or .

When Another Function is Active

- Alarm may not activate until handset returns to Standby.

Incoming Calls

- Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

Opening Schedules/Tasks

- In Calendar window, select date



Schedule List

- Select schedule or task
- Standby returns**

Opening Task List

In , select task **Go to Tasks**

Accessing Secret Entries

[Calendar Window] **Unlock Temporarily** **Enter Handset Code**

Opening Related Message

Open schedule-related messages saved from Messaging message list.

- In schedule list, select schedule
- Related Mail**
 - Related message opens.
 - To return to schedule window, press .

Deleting Message from Schedule

After , **Related Mail:** **Yes**

Deleting Schedules

One Entry

- In schedule list, select schedule
- Delete**
- This Appointment** **Yes**

All Entries of the Day

- In Calendar window, select date
- Delete** **All This Day** **Yes**

Advanced

- Searching entries
- Checking memory status
- Deleting all entries
- Deleting entries by specifying week (Week View)
- Deleting entries by specifying month (Month/3Month View)
- Deleting entries in six months (6Month View) (P.9-34 - 9-35)

Tasks

Saving Tasks


Follow these steps to save subject, due date/time, Alarm and task details:
Either Subject or Description must be saved per entry.

- 1 → **Tools** → → In PIM/
Life menu, **Tasks** →



- 2 **<Add New Entry>** →


- 3 **Enter subject** →

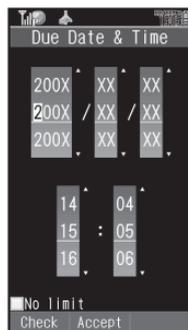

- 4 **Enter due date/time** →



- 5 **Alarm:** →

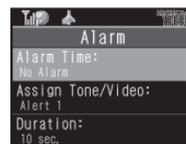

- 6 **Alarm Time:** → → **Select time** → →

- 7 **Description:** → → **Enter task details** →

- 8 → **Saved**

Task with No Due Date/Time

In , → **From**

Custom Alarm Time

In , **Alarm Time:** → → **Other** → → **Enter date/time** → → → → **From**

Advanced

1

- Hiding tasks
- Editing tasks
- Setting priority
- Changing Alarm tone/video & duration
- Changing Alarm volume
- Selecting Vibration option
- Sounding Alarm tone even in Manner mode (P.9-35)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

- While Alarm sounds/vibrates, press or .

Stopping Alarm to Open Task

- While Alarm sounds/vibrates, press a key other than , or .

When Another Function is Active

- Alarm may not activate until handset returns to Standby.

Incoming Calls

- Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

Opening Tasks

- ➔ **Tools** ➔ ➔ In PIM/
Life menu, **Tasks** ➔



Task List

- Use to open completed or uncompleted task list.

- Select task ➔



- ➔ Standby returns

Accessing Secret Entries

After

1
, ➔ **Unlock Temporarily** ➔

➔ Enter Handset Code ➔

Marking Tasks as Completed

After

1
, select task ➔

Deleting Tasks

One Entry

- In task list, select task ➔

- Delete** ➔

- This Task** ➔ ➔ **Yes** ➔

All Completed Tasks

- In task list,

- Delete** ➔ ➔ **All Comp. Tasks** ➔ ➔ **Yes** ➔

Advanced

- Searching tasks ● Sorting tasks by priority ● Checking memory status ● Deleting all tasks (P.9-36)

Using Alarms

Setting Alarm

Follow these steps to set Alarm to sound at a specific time on a specific day of the week:

Set Snooze (Alarm repeats at set interval), Alarm Volume and Duration.

- 1 → **Tools** → → **In PIM/Life menu, Alarms** →



Alarm List


- 2 --:-- → → **Enter hour (24-hour format)** → **Enter minutes** →



- 3 **Repeat:** →



- 4 **Selected Days** →

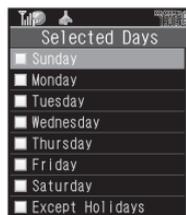

- 5 **Select day** → (/✓) → **Complete selection** →

- 6 **Snooze:** →

- 7 **Select interval** →
 - For custom intervals, select *Other*.

- 8 **Alarm Volume:** →

- 9 **Adjust level** →

- 10 **Duration:** →

- 11 **Select time** →
 - For custom Duration, select *Other*.

- 12 → **Saved**
 - For more settings, repeat 2 - 12.

- 13 → **Alarm setting ends**

Activating Alarm Once or Daily

In 4, *Once* or *Every Day (All)* → → **From** 5

Selecting/Canceling All Days

In 5, → *Check All* or *Uncheck All* →

Excluding Holidays

In 5, select day → (/✓) → **Complete selection** → *Except Holidays* → → → **From** 5

Advanced

1

- Editing entries
- Saving entry name
- Changing Alarm tone/video
- Setting handset to vibrate at Alarm Time
- Sounding Alarm tone even in Manner mode
- Activating Alarm based on World Clock time (P.9-36)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm

- Press a key.

When Another Function is Active

- Alarm may not activate until handset returns to Standby.

Incoming Calls

- Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

When Snooze is Set

Alarm repeats at the set interval. Other Alarms do not activate while handset is Snoozing.

Canceling Snooze

While Snoozing, ➔ Yes ➔

- Snooze is automatically canceled after a period of time.

Canceling Alarm

1 In Alarm list, select entry ➔

2 **Switch Off** ➔

- Reactivate entry to use the same settings.

Reactivating Entry

In , **Switch On** ➔

Deleting Alarm

One Entry

1 In Alarm list, select entry ➔

2 **Reset Alarm** ➔

3 **Yes** ➔

All Entries

1 In Alarm list, select entry ➔ ➔ **Clear All** ➔

2 **Enter Handset Code** ➔ ➔ **Yes** ➔

Using Wakeup TV

Setting Wakeup TV

Follow these steps to activate TV at a specific time on a specific day of the week:

- Complete TV Area Setup beforehand.
- TV may not activate in poor signal conditions.

- 1 **Wakeup TV**



Wakeup TV List


- 2 --:-- **Enter hour (24-hour format)** **Enter minutes**



Wakeup TV Menu

- 3 **Repeat:**

- 4 **Selected Days**

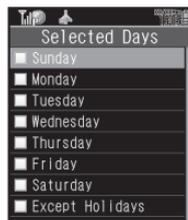

- 5 **Select day** (/✓) **Complete selection**

- 6 **Channel:**

- 7 **Select channel**

- 8 **Saved**

- For more settings, repeat 2 - 8.

- 9 **Wakeup TV setting ends**

Activating TV Once or Daily

- In 4, **Once or Every Day (All)** **From**

Selecting/Canceling All Days

- In 5, **Check All or Uncheck All**

Excluding Holidays

- In 5, **select day** (/✓) **Complete selection** **Except Holidays** **From**

Canceling Alarm

- Alarm activates at Wakeup TV time. To cancel Alarm, follow these steps:
[Wakeup TV Menu] **Alarm On/Off:** **Off** **From**

Adjusting Alarm Volume

- [Wakeup TV Menu] **Alarm Volume:** **Adjust level** **From**

Advanced

- Editing entries
- Changing Alarm tone/video
- Sounding Alarm tone even in Manner mode (P.9-37)

At Wakeup TV Time

TV activates after Alarm.



Stopping Alarm Instantly

- While Alarm sounds/vibrates, press a key.

When Another Function is Active

- TV may not activate depending on the function.

After TV is On for a Period of Time

- Confirmation appears. Choose **Yes** and press to exit TV.

Canceling Wakeup TV

- 1 In Wakeup TV list, select entry ➔

- 2 **Wakeup TV Off** ➔

- Reactivate entry to use the same settings.

Reactivating Entry

- In , **Wakeup TV On** ➔

Deleting Wakeup TV

■ One Entry

- 1 In Wakeup TV list, select entry ➔

- 2 **Reset Alarm** ➔

- 3 **Yes** ➔

■ All Entries

- 1 In Wakeup TV list, select entry ➔ ➔ **Clear All** ➔

- 2 **Enter Handset Code** ➔
➔ **Yes** ➔

Using Calculator

- 1 → **Tools** → → In PIM/
Life menu, **Calculator** →



Calculator Window

- 2 Use Keypad to enter digits
→ **Calculate**
- 3 → **Calculator ends**

Key Assignments	
+ (Add)	
- (Subtract)	
x (Multiply)	
÷ (Divide)	
= (Sum)	
C-CE (Clear)	
CM (Clear Memory)	
RM (Recall Memory)	
M+ (Add to Memory)	
. (Decimal)	
+/- (Positive/Negative Value)	
% (Percentage)	

Memory Calculation

- Clear Memory before starting new Memory calculations.
- Numbers saved in Memory remain until handset power is turned off.

Incoming Calls

- Calculations are not affected. End the call to return to Calculator.

Using % Function

Use to find definite percentage of a known value.

Example: Calculate 30% of 800,000

Enter **800,000** → **x** → **30** → **%**

- **240,000** appears.

Advanced

- Copying calculation results ● Changing exchange rate for currency conversion ● Converting currencies (P.9-37)

Adding Expenses

Entering Expenses

- 1 Enter amount →



- 2




- 3 Select Category → → Saved

Saving under Custom Category

In , Other → → Enter name →

Checking Entries

- 1 → Tools → → In PIM/
Life menu, Expenses Memo
→

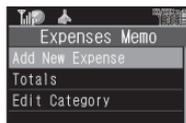

- 2 Totals →



Expenses Memo List

- 3 → Standby returns

Saving Entries to Notepad

[Expenses Memo List] → Save to
Notepad →

- All expense details are saved as a single entry.

Deleting Entries

- One Entry

- 1 In Expenses Memo list,
select entry →

- 2 Delete Item → → Yes →

- All Entries

- 1 In Expenses Memo list,
→ Delete All →

- 2 Enter Handset Code →
→ Yes →

Advanced

- Changing Category of saved entry ● Changing amount ● Renaming Categories (P.9-37)

Osaifu-Keitai® (Japanese)

Osaifu-Keitai® describes IC Card-equipped handsets that support e-money or credit functions/services. Osaifu-Keitai® encompasses a range of IC Card-based services on FeliCa-compatible SoftBank handsets. 932SH supports Osaifu-Keitai®. To use e-money, e-ticketing and reward points, etc., hold handset over a compatible reader/writer at shops, restaurants, and other retail outlets, etc.

Basics

Before using Osaifu-Keitai®, activate Lifestyle-Appli, complete registration, customize settings and charge accounts.

Starting Lifestyle-Appli

- ☐ ➔ *Tools* ➔ ☐ ➔ In PIM/Life menu, *Osaifu-Keitai* ➔ ☐ ➔ *Lifestyle-Appli* ➔ ☐ ➔ Select application ➔ ☐

Lifestyle-Appli Precautions

- Contact Osaifu-Keitai® service providers for Lifestyle-Appli registration and usage details.
- Keep service passwords/customer service contact information, etc. in a separate place.


Using Osaifu-Keitai®

Follow these steps to conduct a transaction:

Example: Making an electronic payment

- Lifestyle-Appli activation is not necessary.
- Transactions are possible even when handset power is off (if battery is adequately charged).
- Calls/Internet transmissions do not affect transactions.

- 1 Place  logo over reader/writer ➔ Confirm scan results

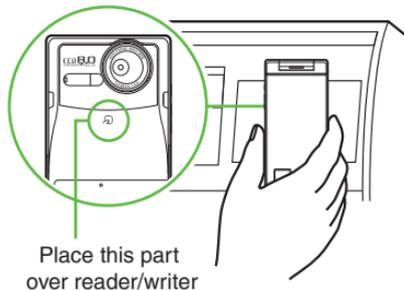

Place this part over reader/writer

- Align handset parallel to reader/writer.

Important Osaifu-Keitai® Usage Note

SoftBank is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.

When Placed Over Sensor

- If recognition is slow, move handset around slightly.
- Handset may respond automatically for some services.

Advanced


- ☞ Enabling to view e-money balances
- Checking e-money balance on External Display
- Moving applications up/down Balance Info list
- Removing applications from Balance Info list (P.9-38)

Locking IC Card


IC Card Lock

Use this function to restrict access to/prevent unauthorized use of Osaifu-Keitai® on handset.

- 1 → **Tools** → → **In PIM/ Life menu, Osaifu-Keitai** →

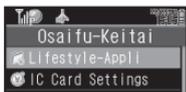

- 2 **IC Card Settings** →

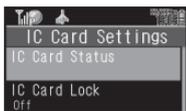

IC Card Settings Menu

- 3 **IC Card Lock** → → **On** →

- 4 **Enter Handset Code** →
→ **Yes** →

Canceling IC Card Lock

- In , **IC Card Lock** → → **Off** →
→ **Enter Handset Code** →

Remote Lock

Disable Osaifu-Keitai® remotely by mail or phone.

Mail Remote Lock	Send mail to activate Remote Lock
Call Remote Lock	Call from a specified phone to activate Remote Lock

Mail Remote Lock

Preparation on Handset

- 1 In **IC Card Settings** menu,
Remote Lock → → **Enter Handset Code** →



- 2 **Mail Remote Lock** →



Mail Remote Lock Menu

- 3 **Remote Lock PW** →

- 4 **Enter password** →

- 5 **Switch On/Off** →

- 6 **On** → →

Canceling Mail Remote Lock

- In , **Off** → →

Activating Remote Lock via Mail

If handset cannot receive mail IC Card Lock is not set.

- 1 **Send S! Mail or e-mail to handset with password as subject**

- After handset receives message, IC Card Lock is set and notice is sent as a reply.

Advanced

- Customizing handset response to reader/writer commands ● Opening IC Card properties ● Changing IC Card Lock notice recipient ● Changing required Missed Call count for Call Remote Lock ● Restoring default Osaifu-Keitai® settings (P.9-38)

Call Remote Lock

■ Preparation on Handset

- 1** In IC Card Settings menu, **Remote Lock** → → Enter Handset Code →




- 2** Call Remote Lock →



Call Remote Lock Menu

- 3** Phone No. to Lck 1 or Phone No. to Lck 2 →

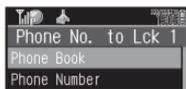

- 4** Phone Book → → Select entry → → Select phone number →

• Select *Phone Number* to enter directly.

- 5** Switch On/Off →

- 6** On → →

Enabling Activation via Public Phone

In **3**, Set Public Phone → → On

→ → From **5**

Canceling Call Remote Lock

In **6**, Off → →

■ **Activating Remote Lock via Phone**
If handset cannot receive calls IC Card Lock is not set.

- 1** Using one of the specified phones, call handset

• Send Caller ID.

- 2** Handset receives call → End the call

• The call is recorded as a Missed Call.

- 3** Within three minutes, repeat **1** - **2** twice



• After the third Missed Call, IC Card Lock is set; a message announces Remote Lock activation. Confirm the message and end the call.

If Series is Interrupted by Another Call

• Missed Call count is reset. Start over from the beginning.

Faking Incoming Calls

Handset rings to emulate an incoming call.

- Save name and phone number to show as Caller ID.
- Ringer may be muted by handset settings. To override Silent setting, see **P.9-39**.

Setting Simulated Call

- 1 → **Tools** → → **In PIM/Life menu, *Simulated Call*** →



Simulated Call Menu

- 2 **Switch On/Off** → → **On** →

- 3 **Set Caller** →



- 4 **Name:** → → **Enter name** →

- 5 **Phone Number:** → → **Enter phone number** → →

- 6 **Assign Tone** → → **Select tone/file** →

- 7 → **PIM/Life menu returns**

When Name and Phone Number are Unset

- Handset rings with Caller ID "Withheld."

Canceling Simulated Call

[Simulated Call Menu] **Switch On/Off**
→ → **Off** → →

Setting Wait Time

[Simulated Call Menu] **Receive Timing**
→ → **Select time** → →

Using Simulated Call

- 1 **(Long)**
 - Available regardless of Display position.
 - Handset rings and incoming Voice Call window opens.
 - Ringtone stops after a period of time.
- 2 **In incoming Voice Call window, press**
- 3 → **Simulated Call ends**

When Receive Timing is Not *Immediately*

- Press or during wait time to cancel Simulated Call activation.
- Simulated Call activation is canceled by incoming calls, Alarms, etc. during wait time.

Advanced

- Starting via Simulated Call menu
- Clearing caller information
- Overriding Silent volume setting (**P.9-39**)

Using Stopwatch

Stopwatch stops when battery runs low.

- 1  ➔ **Tools** ➔  ➔  ➔ **Clock/Gauge** ➔ **Stopwatch** ➔ 



Stopwatch Window

- 2  ➔ **Stopwatch starts**
- 3  ➔ **Stopwatch stops**
 - Press  to resume.
- 4  ➔ **Yes** ➔  ➔ **Stopwatch ends**
 - Records are deleted when Stopwatch ends.

Recording Lap Times

While Stopwatch is running, 

Saving Records to Notepad

After   ➔ **Save to Notepad** ➔ 

Resetting Records


After   ➔ **From** 

Incoming Calls

- Stopwatch is not affected by incoming calls. End the call to return.

Using Countdown Timer

- 1** → **Tools** → → → **Countdown Timer** →

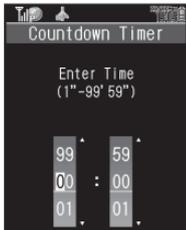

Timer Entry Window

- 2** **Enter minutes** → **Enter seconds** →



Countdown Timer Window

- Press to change time.

- 3** → **Countdown starts**
- Press to stop/resume countdown.

- 4** **Set time elapses** → **Tone sounds**

- 5** → **Yes** → → **Countdown Timer ends**

Using Timer Records

- After **1**, → **Select record** → → → **From** **3**

Resetting Timer

- Stop countdown and**

Incoming Calls

- Countdown is not affected by incoming calls. End the call to return.

When Set Time Elapses

Tone sounds.



Stopping Tone Instantly

- Press or a Side Key. (Tone stops automatically after a period of time.)
- When Timer Time Elapsed during a Call**
- Tone sounds after the call.

Opening World Clock

- 1 → **Tools** → → → **Clock/Gauge** → **World Clock** →



Local Time Zone

World Time Zone

- 2



Set Time Zone Window

- 3 → **Select area** →

- 4 → **World Clock ends**

Advancing One Hour (Daylight Saving)

[Set Time Zone Window]

- To cancel, press .

Adding Custom Time Zone

[Set Time Zone Window] → **Enter city name** → → **+ or -** → →

Enter time difference →

Enter time difference →

Opening World Clock in Standby

- 1 → **Settings** → → → **In Phone menu, Display** →

- 2 **Standby Display** →



- 3 **Clock/Calendar** →

- 4 **World Clock (L), etc.** →

Using Hour Minder

Setting Hour Minder

Follow these steps to activate the hourly time signal at selected hours:

- 1 → **Tools** → → → **Clock/Gauge** → **Hour Minder** →



Hour Minder Menu

- 2 **Switch On/Off** → → **On** →

- 3 **Select Time** →



- 4 **Select hour** → (/✓) → **Complete selection** →

Advanced

- Changing Hour Minder tone/video ● Setting handset to vibrate at Hour Minder Time ● Sounding Hour Minder tone even in Manner mode ● Activating Hour Minder based on World Clock time (P.9-39)

- 5 → **Saved**

- 6 → **Hour Minder setting ends**

Adjusting Hour Minder Volume

- In 2, **Advanced** → → **Volume:** → → **Adjust level** → → → **From** 5

Changing Hour Minder Duration

- In 2, **Advanced** → → **Duration:** → → **Select time** → → → **From** 5


- For custom Duration, select **Other**.

Selecting/Canceling All Hours

- In 4, → **Check All or Uncheck All** →

At Hour Minder Time

Hour Minder activates; sounds/vibrates by related settings.

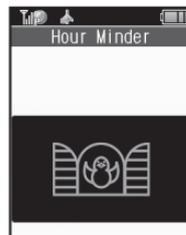

Stopping Tone Instantly

- Press a key.

When Another Function is Active

- Hour Minder does not activate.

Incoming Calls

- Active Hour Minder stops for incoming calls.

Canceling Hour Minder

- 1 In Hour Minder menu, **Switch On/Off** → → **Off** → →

Using Pedometer

Getting Started

- Count based on a pace of approximately 100 steps per minute over even terrain.
- Accuracy may be affected by course, terrain, walking style, etc.
- Avoid holding the handset; use a body worn case or a strap, or place handset inside a pocket or bag.
 - Avoid sudden/erratic movements.
- Steps are not counted in the following cases:
 - While handset is off
 - For the first few steps
 - While handset vibrates
- Handset use may affect accuracy.
- Use Pedometer only as a rough guide.


Adjusting Counter Sensitivity

- **Tools** → **Clock/Gauge** → **Pedometer** → **Settings** → **Step Sensitivity** → **Select option**
 - Select **Low** when steps seem overcounted; select **High** when they seem undercounted.

Saving Body Information

Weight and pace entry required to view full Pedometer data.

- 1 **Tools** → **Clock/Gauge** → **Pedometer**

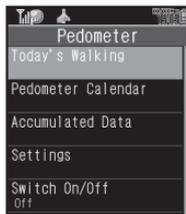

Pedometer Menu

- 2 **Settings** → **Body Info.**
- 3 Enter Handset Code



Body Info Menu

- 4 **Height** → Enter height
- 5 **Weight** → Enter weight
- 6 **Pace** → Yes or No
 - Choose **Yes** to enter pace automatically based on height.
- 7 Enter pace

Editing Body Information

- [Body Info Menu] Select item → Enter value
- For **Pace**, automatic calculation confirmation appears (when height is entered).

Activating Pedometer

- 1 In Pedometer menu, **Switch On/Off**
- 2 **On**

- **Canceling Pedometer**
In 2, **Off**

Pedometer Indicator


When Pedometer is active, today's step count appears in Standby.



Viewing Step Count Records

1 In Pedometer menu, **Today's Walking** →

2

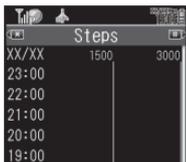

Steps Window

- Press to toggle daily/weekly view.
- Press to open previous day/week, or to open next day/week.

3 **Select time/date** →

- Hourly/daily step counts appear.

4 → **Standby returns**

Resetting Today's Step Count

In , → **Reset Day's Data** → → **Yes** →

Resetting Log

[Steps Window] → **Walk Data Reset** → → Enter Handset Code → → **Yes** →

- Today's data is also reset.

Setting Targets

Information window opens, etc. when target is achieved for these items:

Steps	Walking Time
Exercise	Calories
Distance	Fat burned

1 In Pedometer menu, **Settings** → → **Target** →

2 **Target Settings** →

3 **Select item** → → **Enter value/time** →

- Other target settings may consequently change.

Editing Targets

[Pedometer Menu] **Settings** → → **Target** → → **Target Settings** → → **Select item** → → **Enter value/time** →

When Target is Achieved

- A tone sounds and Information window opens. (Select **Goal Achievement** and press to open Pedometer Calendar.) Follow these steps to mute achievement tone:

[Pedometer Menu] **Settings** → → **Target** → → **Goal Announce** → → **Off** →

About Exercise (Ex)

- Ex and MET indicate amount and intensity of physical activity, respectively. Ex for walking is calculated by multiplying 3 METs by walking duration (hour).

Advanced

- Changing Pedometer indicator
- Using Pedometer Calendar
- Checking accumulated data
- Resetting accumulated data
- Customizing achievement notice (P.9-40)

Using Compass

Opening Compass

- 1  → **Tools** → 
- 2  **Clock/Gauge** → **Compass** → 



Compass Window

- Compass opens; use as a rough guide.

Adjusting Compass

- 1 In **Compass** window,  → 
 - Follow onscreen instructions.

Compass Indicator

- When map is open, compass indicator appears; follow these steps to hide it:
 -  → **Tools** →  →  **Clock/Gauge**
 - **S! GPS Navi** →  → **NAVI**
 - Settings** →  → **Compass Indicator**
 -  → **Off** → 

Using S! GPS NAVI

Use this GPS navigation service to pinpoint current location, find routes to destinations, and more.

Precautions

- Location Information accuracy may be affected when GPS satellite/radio station signal reception is poor. Use S! GPS NAVI under the open sky.
- SoftBank is not liable for any damages resulting from the provided Location Information.

Positioning

- Pinpoints current location using signals transmitted from GPS satellites.


Location Information Accuracy

- Probable distance from the actual position is classified into three levels, from Accuracy 1 (low) to Accuracy 3 (high).
- A confirmation appears when accuracy level is 1 or 2; follow these steps.

Yes or No →

Starting Navi-Appli

- 1 → **Tools** → →
Clock/Gauge → **S! GPS NAVI**
→

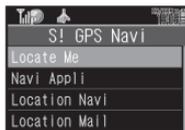

S! GPS NAVI Menu

- 2 **Navi Appli** →
• To disable confirmation, press before .

- 3 **Yes** →

Opening Navi Appli List

[S! GPS NAVI Menu] **Navi Appli List**

→

- To activate Navi Appli, select one and press .

Selecting a Navi-Appli for S! GPS NAVI

[S! GPS NAVI Menu] **NAVI Settings** →

→ **Select Navi Appli** → →

Select application →

Pinpointing Current Location

- 1 In S! GPS NAVI menu,
Locate Me →



- To disable confirmation, press before .

- 2 **Yes** → → **Positioning starts**
• Map of your current location appears.

Opening Location Log

- 1 In S! GPS NAVI menu,
Location Logs →

- 2 **Select record** →
• Details appear.

- 3 → **Menu returns**

Advanced


- Sending current location via mail Changing map source URL Disabling positioning Selecting Location Information transmission option (P.9-40)

Using My Location

Saving Location Information

Follow these steps to save current location as a new entry:

- 1 In S! GPS Navi menu, **My Location List** →

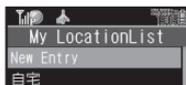

My LocationList Menu

- 2 **New Entry** →
- 3 **Name** → → **Enter name** →
- 4 **Location Info** →
- 5 **From Current Loc.** → → **Positioning complete**
- 6
 - When accuracy level is 1 or 2, choose **No** and press to proceed to .
- 7

Saving as Home

- In , **自宅** → → **From**
- Saving from Location Log**
- In , **From Location Logs** → → **Select record** → →

Opening Entries

- 1 In My LocationList menu, **select entry** →
- 2 **Location Info** →



- 3 → **Details closes**

Deleting Entries

- 1 In My LocationList menu, **select entry**
- 2 → **Delete** → → **Yes** →

Using Location Navi (Japanese)

Locate other S! GPS Navi-compatible handset users or lost handset.

- Location Navi requires a separate contract and initial settings.
- If Double Number is active, service uses Line A regardless of usage mode setting.
- For more about Location Navi, see SOFTBANK MOBILE Corp. Website (P.15-23).

- 1 In S! GPS Navi menu, **Location Navi** →

- Handset connects to the Internet. Follow onscreen instructions.

Advanced

- Using My Location & Location Log ● Saving Location Log records to My Location ● Deleting Location Log records (P.9-41)

Opening PC Documents

Supported File Formats:

PDF (.pdf)


Microsoft® Excel® (.xls)

Microsoft® Word (.doc)

Microsoft® PowerPoint® (.ppt)

- Some files may not appear correctly.
- Download files via the Internet.
- When transferring files from PCs, save to corresponding Memory Card folder (P.15-24).

- 1** ➔ *Tools* ➔ ➔ *Doc./Rec.* ➔ *Document Viewer* ➔

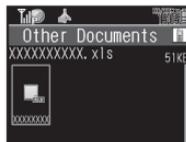

- 2** *Select file* ➔

Zooming In/Out with Loupe (Magnifier)
 In open file, (Long) ➔ *Specify portion* ➔ ➔ *Zoom Out or Zoom In* ➔


Key Assignments

	View whole page
	Scroll
	View upper left
	Toggle full screen view on/off
	View upper right
	Zoom out
	Continuous zoom out
	View center
	Zoom in
	Continuous zoom in
	View lower left
	Jump to page
	View lower right
	Open Help
	Next page
	Previous page
	Fit width
	Rotate 90°

Saving Text

New Notepad Entry

- 1 → **Tools** → → → **Doc./Rec.** → **Notepad** →

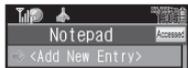

Notepad List

- 2 **<Add New Entry>** →



- 3 Enter text →
- 4 Select Category → → → **Saved**

Sorting Entries Temporarily

[Notepad List]

- Press repeatedly to toggle sort options (Modified, Created, Category and Accessed).

Changing Landscape Notepad List View


[Notepad List] Select entry → → **Setting/Manage** → → **Landscape Display** → → Select option →

Inserting Notepad Text during Text Entry

In a text entry window, → **Notepad** → → **Call Notepad** → → Select entry →

Opening Notepad

- 1 In Notepad list, select entry →

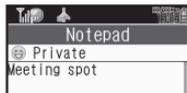

- 2 → **List returns**

Deleting Entries

■ One Entry

- 1 In Notepad list, select entry →

- 2 **Delete Item** → → **Yes** →

■ All Entries

- 1 In Notepad list, select entry → → **Setting/Manage** →

- 2 **Delete All** → → Enter Handset Code → → **Yes** →

Advanced

- Editing Notepad
- Searching text within all entries
- Inserting Notepad text into message text
- Sending entries via S! Mail
- Creating text files
- Importing text files
- Checking memory status
- Opening properties (P.9-41 - 9-42)

Using ASCII Art

Inserting ASCII Art

- 1 In message text entry window,  ➔ *Call ASCII Art* ➔ 



- 2 Select entry ➔ 



Previewing ASCII Art

- In , select entry ➔ 
- Press  to insert ASCII Art.

Editing Entries

- 1  ➔ *Tools* ➔  ➔ 
Doc./Rec. ➔ *ASCII Art* ➔ 



ASCII Art List

- 2 Select entry ➔  ➔ *Edit* ➔ 

Opening Entries

- In , select entry ➔  ➔ *View* ➔ 

Adding New Entries

- In , <Empty> ➔  ➔ *Create ASCII Art* ➔ 

Deleting Entries

- 1 In ASCII Art list, select entry ➔  ➔ *Delete* ➔ 
- 2 *Yes* ➔ 

Recording/Playing Voice

Recording

- If battery runs low while recording, Voice Recorder shuts off.
- Record conversations during calls via **Record Caller Voice**.


- 1 → **Tools** → → → **Doc./Rec.** → **Voice Recorder** →



Recording Window

- 2 → **Recording starts**

- 3 → **Recording stops**

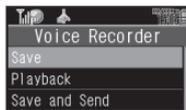

- For **Extended Voice**, recording is saved automatically.

- 4 **Save** →

Play Before Saving

- In 4, **Playback** → → **Playback starts** → → **Playback stops**

Starting Over

- In 4, → **From** 2

Playback

- 1 In recording window, → **Ring Songs-Tones** →



- 2 **Select file** →

Playing Data Folder Files

- **Data Folder** → → **Ring Songs-Tones** → → **Select file** →

Playback Operations

	Adjust volume
	Pause/resume
	Stop

Advanced

- Saving longer recordings
- Sending Voice files via S! Mail
- Switching storage media (P.9-42)

Creating QR Codes

Create QR Codes from these items on handset:


Phone Book	My Details
Text Input	Ring Songs-Tones
Pictures	Notepad

Large items are divided into multiple QR Codes.

Procedure


Follow these steps to create QR Codes from Data Folder files:

- 1 → **Tools** → → → **Doc./Rec.** → **Barcode/Scan** →

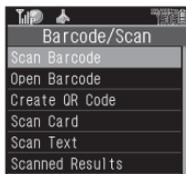

- 2 **Create QR Code** →

- 3 **Data Folder** →

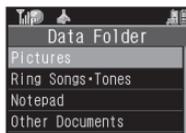

- 4 **Select folder** → → **Select file or entry** →

- QR Code is created.

- 5

- QR Code is saved to Data Folder (Pictures).

From Phone Book Entries

In , **Phone Book** → → **Select entry** → →

From My Details

In , **My Details** → → **Select item** → →

From Entered Text

In , **Text Input** → → **Enter text** → →

Switching Storage Media

In , → **Save to** → → **Phone or Memory Card** → →

Attaching to S! Mail

In , → **Send As** → → **Complete message** →

Incoming Calls


- QR Code creation is not affected by incoming calls. End the call to return.

Scanning Business Cards

Scan business cards and save names, addresses, etc. to Phone Book.

- English business cards may not be scanned correctly.
- Some cards may not be scanned.

- 1** ➔ **Tools** ➔ ➔ **Doc./Rec.** ➔ **Barcode/Scan**
➔

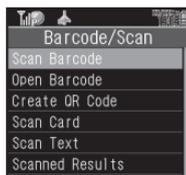

- 2** **Scan Card** ➔


- 3** **Frame card on Display**



Scan Window

- 4** • Press to stop scan.

- 5** ➔ **Scan results appear**

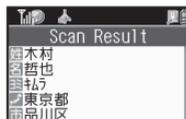

- 6** ➔ • New Phone Book entry is saved.

Key Assignments in Scan Window

- : Toggle focus mode
- : Switch to Photo Camera
- : Focus Lock
- : Mobile Light on/off
- : Adjust brightness
- : Open Help

If Text Exceeds Phone Book Entry Item Character Limit

- Confirmation appears. Follow these steps to delete overage:
Yes ➔

Changing Save Location

- After , ➔ **Save to** ➔ ➔ ➔ ➔

Saving Scanned Image as Phone Book Picture

- After , ➔ **Add Image** ➔ ➔ ➔ ➔

Starting Over

- After , ➔ **Yes** ➔ ➔ ➔ ➔


Advanced

- Saving to Notepad
- Pasting to message text
- Copying text (P.9-44)

Scanning Text


Some text cannot be scanned.

- 1** → **Tools** → →
Doc./Rec. → **Barcode/Scan**
 →

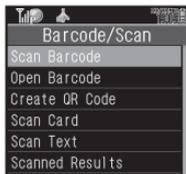

- 2** **Scan Text** →

- 3** **Frame text in center of Display**

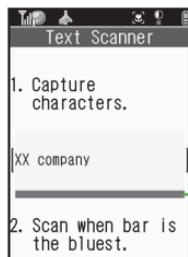

Scan Window

- Adjust to frame text in [].
- Use Focus Adjustment Bar as a guide (better focus in darker blue).

- 4**

- Press to stop scan.

- 5** **Select line** → → **Scan results appear**

- 6**



Key Assignments in Scan Window

: Toggle focus mode

: Switch to Photo Camera

: Focus Lock

: Mobile Light on/off

: Adjust brightness

: Open Help

Correcting Text Type

After , → **Change Mode** → →

Select type → →

Editing Scanned Text

After , → **Select/Edit** → →

Select character → **Select alternative from list or edit directly**
 →

Starting Over

In , → **Yes** → → **From**

Advanced

- Scanning during text entry
- Scanning more text
- Saving scan results
- Saving linked info to Phone Book
- Saving to Notepad
- Opening saved scan results
- Using linked info
- Pasting to message text
- Copying text (P.9-45 - 9-46)

Calendar	
View Settings	
Changing default view	<p>■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ <i>Calendar Settings</i> ➔ ■ ➔ <i>Default View</i> ➔ ■ ➔ Select type ➔ ■</p>
Jumping to specified date	<p>■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ [-8.] ➔ Enter date ➔ ■</p>
Changing date color	<p>[Start Here] ■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ See below</p> <p>By Days of the Week</p> <p>☰ ➔ <i>Calendar Settings</i> ➔ ■ ➔ <i>Set Color</i> ➔ ■ ➔ <i>By Week</i> ➔ ■ ➔ Select day ➔ ■ ➔ Select color ➔ ■</p> <p>By Date</p> <p>Select date ➔ [-4.] ➔ Select color ➔ ■</p> <ul style="list-style-type: none"> • Not available in 6Month View.
	<p>Resetting "By Date" Colors</p> <p>☰ ➔ <i>Calendar Settings</i> ➔ ■ ➔ <i>Set Color</i> ➔ ■ ➔ <i>Reset Color</i> ➔ ■ ➔ Select option ➔ ■ ➔ <i>Yes</i> ➔ ■</p>
Selecting task view option	<p>■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ ☰ ➔ <i>Calendar Settings</i> ➔ ■ ➔ <i>Tasks View</i> ➔ ■ ➔ Select option ➔ ■</p>
Adding stamps (Month View)	<p>■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ Select date ➔ [-2.] ➔ Select stamp ➔ ■</p> <ul style="list-style-type: none"> • Not available in 6Month/Week View.
Hiding schedules	<p>■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ Select date ➔ ■ ➔ Select entry ➔ ■ ➔ ■ ➔ <i>Secret:</i> ➔ ■ ➔ <i>On</i> ➔ ■ ➔ <input type="checkbox"/></p>

Saving additional holidays	<p>[Start Here] ■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ ☰ ➔ <i>Calendar Settings</i> ➔ ■ ➔ <i>Set Holiday</i> ➔ ■ ➔ <input type="checkbox"/> <i>Private</i> ➔ See below</p>
	<p>Adding Holidays</p> <p><Empty> ➔ ■ ➔ Enter name ➔ ■ ➔ Enter date ➔ ■ ➔ Select frequency ➔ ■ ➔ <input type="checkbox"/></p>
	<p>Editing Added Holidays</p> <p>Select holiday ➔ ☰ ➔ <i>Edit</i> ➔ ■ ➔ <i>Name:</i> ➔ ■ ➔ Enter name ➔ ■ ➔ <i>Date:</i> ➔ ■ ➔ Enter date ➔ ■ ➔ Select frequency ➔ ■ ➔ <input type="checkbox"/></p>
Removing/restoring preset holidays	<p>■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ ☰ ➔ <i>Calendar Settings</i> ➔ ■ ➔ <i>Set Holiday</i> ➔ ■ ➔ <input type="checkbox"/> <i>Private or Public</i> ➔ Select holiday ➔ ■ (<input type="checkbox"/>/✓)</p>
Saving/Editing Schedules	
Setting Category/Location	<p>[Start Here] ■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ Select date ➔ ■ ➔ Select entry ➔ ■ ➔ ■ ➔ See below</p>
	<p>Category</p> <p><i>Category:</i> ➔ ■ ➔ Select Category ➔ ■ ➔ <input type="checkbox"/></p>
	<p>Location</p> <p><i>Location:</i> ➔ ■ ➔ Enter location ➔ ■ ➔ <input type="checkbox"/></p>
Saving repetitive schedules	<p>■ ➔ <i>Tools</i> ➔ ■ ➔ In PIM/Life menu, <i>Calendar</i> ➔ ■ ➔ Select date ➔ ■ ➔ Select entry ➔ ■ ➔ <i>Repeat:</i> ➔ ■ ➔ Select frequency ➔ ■ ➔ Enter repeat time ➔ ■ ➔ <input type="checkbox"/></p> <ul style="list-style-type: none"> • Repeat time is not available for <i>Every Year</i>.

Saving S! Friend's Status information	<p>Start Here ■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ Select date ➔ ■ ➔ Select entry ➔ ■ ➔ ■ ➔ S! Friend's Status: ➔ ■ ➔ Link Setting: ➔ ■ ➔ Linked ➔ ■ ➔ See below</p> <p>Availability Answer Status: ➔ ■ ➔ Edit ➔ [Y] ➔ [Y] ➔ [Y] • Set Category first.</p> <p>Comment Comment: ➔ ■ ➔ Enter text ➔ ■ ➔ [Y] ➔ [Y] • Set Category first.</p>
	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ Select date ➔ ■ ➔ Select entry ➔ ■ ➔ ■ ➔ Select item ➔ ■ ➔ Edit in the same manner as saving schedules ➔ [Y]</p>
Editing entries	<p>Start Here ■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ Select date ➔ ■ ➔ Select entry ➔ ■ ➔ ■ ➔ Select item ➔ ■ ➔ Edit in the same manner as saving schedules ➔ [Y]</p>
Changing Alarm tone/video & duration	<p>Start Here ■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ Select date ➔ ■ ➔ Select entry ➔ ■ ➔ ■ ➔ Alarm: ➔ ■ ➔ See below</p> <p>Alarm Tone/Video Assign Tone/Video: ➔ ■ ➔ Select folder ➔ ■ ➔ Select tone/file ➔ ■ ➔ [Y] ➔ [Y] • Select start point if required.</p> <p>Duration Duration: ➔ ■ ➔ Select time ➔ ■ ➔ [Y] ➔ [Y]</p>
	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ [☰] ➔ Alarm Settings ➔ ■ ➔ Alarm Volume: ➔ ■ ➔ Adjust level ➔ ■ ➔ ■ ➔</p>
Changing Alarm volume	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ [☰] ➔ Alarm Settings ➔ ■ ➔ Alarm Volume: ➔ ■ ➔ Adjust level ➔ ■ ➔ ■ ➔</p>
Selecting Vibration option	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ [☰] ➔ Alarm Settings ➔ ■ ➔ Vibration: ➔ ■ ➔ Select option ➔ ■ ➔ ■ ➔</p>

Sounding Alarm tone even in Manner mode	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ [☰] ➔ Alarm Settings ➔ ■ ➔ For Manner Mode: ➔ ■ ➔ Ring ➔ ■ ➔ Yes ➔ ■ ➔</p>
---	--

■ Managing Schedules

Searching entries	<p>Start Here ■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ See below</p> <p>By Subject [6] ➔ Enter text ➔ ■ ➔</p> <p>By Category [9] ➔ Select Category ➔ ■ ➔</p>
	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ Select date ➔ [☰] ➔ Memory Status ➔ ■ ➔</p>
Checking memory status	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ Select date ➔ [☰] ➔ Memory Status ➔ ■ ➔</p>
Deleting all entries	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ [☰] ➔ Delete ➔ ■ ➔ All Appointments ➔ ■ ➔ Enter Handset Code ➔ ■ ➔ Yes ➔ ■ ➔</p>
Deleting entries by specifying week (Week View)	<p>Start Here ■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ See below</p> <p>Within One Week Select date ➔ [☰] ➔ Delete ➔ ■ ➔ All This Week ➔ ■ ➔ Yes ➔ ■ ➔</p> <p>Up to the End of Previous Week Select date ➔ [☰] ➔ Delete ➔ ■ ➔ Up to Last Week ➔ ■ ➔ Yes ➔ ■ ➔</p>
	<p>■ ➔ Tools ➔ ■ ➔ In PIM/Life menu, Calendar ➔ ■ ➔ [☰] ➔ Alarm Settings ➔ ■ ➔ Alarm Volume: ➔ ■ ➔ Adjust level ➔ ■ ➔ ■ ➔</p>

Managing Tasks

Searching tasks	<p>[Start Here] → [] → <i>Tools</i> → [] → In PIM/Life menu, <i>Tasks</i> → [] → [] → <i>Find</i> → [] → See below</p> <p>By Subject <i>By Subject</i> → [] → Enter text → []</p> <p>By Due Date <i>By Due Date</i> → [] → Enter date → []</p>
	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Tasks</i> → [] → [] → <i>Sort</i> → [] → <i>Priority</i> → []</p>
	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Tasks</i> → [] → [] → <i>Memory Status</i> → []</p>
Sorting tasks by priority	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Tasks</i> → [] → [] → <i>Sort</i> → [] → <i>Priority</i> → []</p>
Checking memory status	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Tasks</i> → [] → [] → <i>Memory Status</i> → []</p>
Deleting all tasks	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Tasks</i> → [] → [] → <i>Delete</i> → [] → <i>All Tasks</i> → [] → Enter Handset Code → [] → <i>Yes</i> → []</p>

Alarms

Editing entries	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Alarms</i> → [] → Select entry → [] → Select item → [] → Edit in the same manner as saving entries → [] → []</p>
Saving entry name	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Alarms</i> → [] → Select entry → [] → <i>Subject:</i> → [] → Enter name → [] → []</p>
Changing Alarm tone/video	<p>[Start Here] → [] → <i>Tools</i> → [] → In PIM/Life menu, <i>Alarms</i> → [] → Select entry → [] → <i>Assign Tone/Video:</i> → [] → See below</p> <p>Using Preset Tone or Data Folder File Select folder → [] → Select tone/file → [] → []</p> <ul style="list-style-type: none"> • Select start point if required. <p>Using Customized Screen Tone/Video <i>Customized Screen</i> → [] → []</p>
Setting handset to vibrate at Alarm Time	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Alarms</i> → [] → Select entry → [] → <i>Vibration:</i> → [] → <i>On or Link to Sound</i> → [] → []</p> <ul style="list-style-type: none"> • Select <i>Link to Sound</i> to allow compatible SMAF files to control vibration.
Sounding Alarm tone even in Manner mode	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Alarms</i> → [] → <i>Settings</i> → [] → <i>For Manner Mode</i> → [] → <i>Ring</i> → [] → <i>Yes</i> → []</p>
Activating Alarm based on World Clock time	<p>[] → <i>Tools</i> → [] → In PIM/Life menu, <i>Alarms</i> → [] → <i>Settings</i> → [] → <i>Link to World Clk</i> → [] → <i>On</i> → []</p>

Wakeup TV	
Editing entries	<p> → Tools → → In PIM/Life menu, Wakeup TV → → Select entry → → Select item → → Edit in the same manner as saving entries → → </p>
Changing Alarm tone/video	<p> → Tools → → In PIM/Life menu, Wakeup TV → → Select entry → → Assign Tone/Video: → → See below </p> <p> Using Preset Tone or Data Folder File Select folder → → Select tone/file → → <ul style="list-style-type: none"> • Select start point if required. </p> <p> Using Customized Screen Tone/Video Customized Screen → → </p>
Sounding Alarm tone even in Manner mode	<p> → Tools → → In PIM/Life menu, Wakeup TV → → For Manner Mode → → Ring → → Yes → </p>

Calculator	
Copying calculation results	While result appears, → Copy →
Changing exchange rate for currency conversion	<p> → Tools → → In PIM/Life menu, Calculator → → → Money Converter → → Exchange Rate → → Domestic or Foreign → → Enter rate → </p>
Converting currencies	<p> → Tools → → In PIM/Life menu, Calculator → → Enter amount of money → → Money Converter → → To Domestic or To Foreign → </p> <ul style="list-style-type: none"> • Set Exchange Rate first.
Expenses Memo	
Changing Category of saved entry	<p> → Tools → → In PIM/Life menu, Expenses Memo → → Totals → → Select entry → → Select Category → </p>
Changing amount	<p> → Tools → → In PIM/Life menu, Expenses Memo → → Totals → → Select entry → → Change Amount → → Edit → </p>
Renaming Categories	<p> → Tools → → In PIM/Life menu, Expenses Memo → → Edit Category → → Select Category → → Enter name → </p>

Osaifu-Keitai®

Enabling to view e-money balances	<p>▣ → Tools → ▣ → In PIM/Life menu, Osaifu-Keitai → ▣ → IC Card Settings → ▣ → Balance Info → ▣ → Enter Handset Code → ▣ → <Empty> → ▣ → SI Appli or Lifestyle-Appli → ▣ → Select application → ▣</p> <ul style="list-style-type: none"> • For use with compatible Lifestyle-Applications. • Start Lifestyle-Appli once before adding it to Balance Info list.
Checking e-money balance on External Display	<p>In closed position, ☐ (Long) → Balance appears → ☐ → Balance disappears</p> <ul style="list-style-type: none"> • Use ☐ to view balances of listed entries. • Save Lifestyle-Appli to Balance Info list beforehand. • Balances do not appear if IC Card Lock is active.
Moving applications up/down Balance Info list	<p>▣ → Tools → ▣ → In PIM/Life menu, Osaifu-Keitai → ▣ → IC Card Settings → ▣ → Balance Info → ▣ → Enter Handset Code → ▣ → Select application → ☐ → Move → ▣ → Select location → ▣</p>
Removing applications from Balance Info list	<p>▣ → Tools → ▣ → In PIM/Life menu, Osaifu-Keitai → ▣ → IC Card Settings → ▣ → Balance Info → ▣ → Enter Handset Code → ▣ → Select application → ☐ → Delete → ▣</p>
Customizing handset response to reader/writer commands	<p>▣ → Tools → ▣ → In PIM/Life menu, Osaifu-Keitai → ▣ → IC Card Settings → ▣ → Interface Settings → ▣ → Enter Handset Code → ▣ → Select item → ▣ → Off → ▣</p>
Opening IC Card properties	<p>▣ → Tools → ▣ → In PIM/Life menu, Osaifu-Keitai → ▣ → IC Card Settings → ▣ → IC Card Status → ▣</p>

Changing IC Card Lock notice recipient

Start Here ▣ → **Tools** → ▣ → In PIM/Life menu, **Osaifu-Keitai** → ▣ → **IC Card Settings** → ▣ → **Remote Lock** → ▣ → Enter Handset Code → ▣ → **Mail Remote Lock** → ▣ → **Notice Settings** → ▣ → **Send Notice** → ▣ → See below

Changing Recipient

To Set Recipient → ▣ → **Set Recipient** → ▣ → **Select method** → ▣ → **Select/enter number/address** → ▣ → **☐** → **☐** → **☐**

- Omit step of pressing **☐** when selecting **Phone Book** as setting method.

Disabling Notice

Off → ▣ → **☐** → **☐**

Changing required Missed Call count for Call Remote Lock

▣ → **Tools** → ▣ → In PIM/Life menu, **Osaifu-Keitai** → ▣ → **IC Card Settings** → ▣ → **Remote Lock** → ▣ → Enter Handset Code → ▣ → **Call Remote Lock** → ▣ → **Count for Lock** → ▣ → Enter Missed Call count → ▣ → **☐**

Restoring default Osaifu-Keitai® settings

▣ → **Tools** → ▣ → In PIM/Life menu, **Osaifu-Keitai** → ▣ → **IC Card Settings** → ▣ → **Set to Default** → ▣ → Enter Handset Code → ▣ → **Yes** → ▣

Simulated Call

Starting via Simulated Call menu	<p>▣ → Tools → ▣ → In PIM/Life menu, Simulated Call → ▣ → Receive Simulated Call → ▣ → Yes → ▣</p> <ul style="list-style-type: none"> • Simulated Call starts immediately regardless of Receive Timing setting. • Settings remain even after starting Simulated Call during setup.
Clearing caller information	<p>▣ → Tools → ▣ → In PIM/Life menu, Simulated Call → ▣ → Set Caller → ▣ → Yes → ▣ → Y → Y</p>
Overriding Silent volume setting	<p>▣ → Tools → ▣ → In PIM/Life menu, Simulated Call → ▣ → For Silent Mode → ▣ → Ring → ▣ → Yes → ▣ → Y</p>

Hour Minder

Changing Hour Minder tone/video	<p>Start Here ▣ → Tools → ▣ → Clock/Gauge → Hour Minder → ▣ → Advanced → ▣ → Assign Tone/Video: → ▣ → See below</p> <p>Using Preset Tone or Data Folder File Select folder → ▣ → Select tone/file → ▣ → Y → Y</p> <ul style="list-style-type: none"> • Select start point if required.
	<p>Using Customized Screen Tone/Video Customized Screen → ▣ → Y → Y</p>
Setting handset to vibrate at Hour Minder Time	<p>▣ → Tools → ▣ → Clock/Gauge → Hour Minder → ▣ → Advanced → ▣ → Vibration: → ▣ → On or Link to Sound → ▣ → Y → Y</p> <ul style="list-style-type: none"> • Select Link to Sound to allow compatible SMAF files to control vibration.
Sounding Hour Minder tone even in Manner mode	<p>▣ → Tools → ▣ → Clock/Gauge → Hour Minder → ▣ → Advanced → ▣ → For Manner Mode: → ▣ → Ring → ▣ → Yes → ▣ → Y → Y</p>
Activating Hour Minder based on World Clock time	<p>▣ → Tools → ▣ → Clock/Gauge → Hour Minder → ▣ → Advanced → ▣ → Link to World Clk: → ▣ → On → ▣ → Y → Y</p>

Pedometer

Changing Pedometer indicator	<ul style="list-style-type: none"> ▣ → <i>Settings</i> → ▣ → In Phone menu, <i>Display</i> → ▣ → <i>Standby Display</i> → ▣ → <i>Pedometer</i> → ▣ → <i>Select item</i> → ▣
Using Pedometer Calendar	<ul style="list-style-type: none"> ▣ → <i>Tools</i> → ▣ → <i>Clock/Gauge</i> → <i>Pedometer</i> → ▣ → <i>Pedometer Calendar</i> → ▣ → <i>Select date</i> → ▣ • Degree of achievement appears. • Press <i>[*]</i> or <i>[#]</i> to view previous or next month.
Checking accumulated data	<ul style="list-style-type: none"> ▣ → <i>Tools</i> → ▣ → <i>Clock/Gauge</i> → <i>Pedometer</i> → ▣ → <i>Accumulated Data</i> → ▣ • Change in body information is reflected in the data.
Resetting accumulated data	<ul style="list-style-type: none"> ▣ → <i>Tools</i> → ▣ → <i>Clock/Gauge</i> → <i>Pedometer</i> → ▣ → <i>Accumulated Data</i> → ▣ → <i>Reset Walk Data</i> → ▣ → Enter Handset Code → ▣ → <i>Yes</i> → ▣ • Averages are also reset.
Customizing achievement notice	<ul style="list-style-type: none"> <i>Start Here</i> → ▣ → <i>Tools</i> → ▣ → <i>Clock/Gauge</i> → <i>Pedometer</i> → ▣ → <i>Settings</i> → ▣ → <i>Target</i> → ▣ → <i>Goal Announcement</i> → ▣ → <i>On</i> → ▣ → See below Changing Tone <i>Goal Sound</i> → ▣ → <i>Select pattern</i> → ▣ Changing Tone Volume <i>Goal Volume</i> → ▣ → <i>Adjust level</i> → ▣ Changing Vibration Pattern <i>Vibration</i> → ▣ → <i>Select pattern</i> → ▣ Changing Duration <i>Duration</i> → ▣ → <i>Select time</i> → ▣ • For custom Duration, select <i>Other</i> and press ▣.

S! GPS Navi

Sending current location via mail	<ul style="list-style-type: none"> ▣ → <i>Tools</i> → ▣ → <i>Clock/Gauge</i> → <i>S! GPS Navi</i> → ▣ → <i>Location Mail</i> → ▣ → <i>Positioning complete</i> → ▣ → <i>Complete message</i> → <i>[v]</i> • When accuracy level is 1 or 2, choose <i>No</i> and press ▣ after positioning, then complete message.
Changing map source URL	<ul style="list-style-type: none"> <i>Start Here</i> → ▣ → <i>Tools</i> → ▣ → <i>Clock/Gauge</i> → <i>S! GPS Navi</i> → ▣ → <i>NAVI Settings</i> → ▣ → <i>Map URL Settings</i> → ▣ → See below Adding URLs <Not set> → ▣ → <i>Enter URL</i> → ▣ Setting Destination URL <i>Select URL</i> → ▣ Viewing/Editing/Deleting URLs <i>Select URL</i> → <i>[v]</i> → <i>Display, Edit or Delete</i> → ▣ • Follow onscreen instructions.
Disabling positioning	<ul style="list-style-type: none"> ▣ → <i>Tools</i> → ▣ → <i>Clock/Gauge</i> → <i>S! GPS Navi</i> → ▣ → <i>NAVI Settings</i> → ▣ → <i>Positioning Lock</i> → ▣ → <i>On</i> → ▣ → Enter Handset Code → ▣
Selecting Location Information transmission option	<ul style="list-style-type: none"> ▣ → <i>Tools</i> → ▣ → <i>Clock/Gauge</i> → <i>S! GPS Navi</i> → ▣ → <i>NAVI Settings</i> → ▣ → <i>Send Location Info</i> → ▣ → <i>Select option</i> → ▣ → Enter Handset Code → ▣

Using My Location & Location Log	<p>Start Here Tools Clock/Gauge S! GPS Navi My Location List or Location Logs Select entry or record See below</p>
	<p>Opening Map Yes </p>
	<p>Showing Routes via Navi Appli Go to Yes </p> <ul style="list-style-type: none"> Follow onscreen instructions.
	<p>Inserting into Message Text As Msg. Text Complete message Yes</p>
Saving Location Log records to My Location	<p>Saving to Phone Book Save to Ph.Book As New Entry Complete other fields Yes</p> <ul style="list-style-type: none"> To add to an existing entry, select As New Detail.
	<p> Tools Clock/Gauge S! GPS Navi Location Logs Select record Set as My Location Name Enter name Yes</p>
Deleting Location Log records	<p> Tools Clock/Gauge S! GPS Navi Location Logs Select record Delete or Delete All Yes </p> <ul style="list-style-type: none"> Omit record selection step when deleting all records.

Notepad

Editing Notepad	<p>Start Here Tools Doc./Rec. Notepad Select entry See below</p>
	<p>Editing Text Edit Text Edit </p>
	<p>Changing Category Change Category Select Category </p>
Searching text within all entries	<p> Tools Doc./Rec. Notepad Select entry Search Enter text </p>
Inserting Notepad text into message text	<p> Tools Doc./Rec. Notepad Select entry Send As Message Text S! Mail or SMS Complete message Yes</p> <ul style="list-style-type: none"> S! Mail Composition window opens automatically depending on character count.
Sending entries via S! Mail	<p> Tools Doc./Rec. Notepad Select entry Send Via Message Complete message Yes</p>
Creating text files	<p> Tools Doc./Rec. Notepad Select entry Setting/Manage Create Text File Enter name Save here </p>
Importing text files	<p> Tools Doc./Rec. Notepad Select entry Setting/Manage Import Text File Select file </p>
Checking memory status	<p> Tools Doc./Rec. Notepad Select entry Setting/Manage Memory Status </p>

Opening properties

Voice Recorder

Saving longer recordings

- Insert Memory Card to record in *Extended Voice* mode. (Recording is saved automatically.)

Sending Voice files via S! Mail

- Available in *For Message* mode.

Switching storage media

- Available in *For Message* mode.
- Set to *Ask Each Time* to select media after every recording.

Scan Barcode

[Start Here] In a text entry window, in center of Display

Pasting All Scan Results

Pasting a Part of Scan Results

Scanning during text entry

Scanning continuously

Reading saved barcode images

Saving scan results

Saving to Notepad

in center of Display to continue scanning or *No* and press to view scan results.

in center of Display

in center of Display

Saving linked info to Phone Book	<p> → Tools → → Doc./Rec. → Barcode/Scan → → Scan Barcode → → Frame barcode in center of Display → → Select number or mail address → → Save to Ph.Book → → As New Entry → → Complete other fields → </p> <ul style="list-style-type: none"> • To add to an existing entry, select As New Detail. • When MEMORY: appears in scan results, press to enter the items underlined with a dotted line automatically in Phone Book entry window.
Opening saved scan results	<p> → Tools → → Doc./Rec. → Barcode/Scan → → Scanned Results → → Select file → </p> <ul style="list-style-type: none"> • Select a file and press to rename files, open properties or delete files. • Some files may not open.
Using linked info	<p> → Start Here → → Tools → → Doc./Rec. → Barcode/Scan → → Scan Barcode → → Frame barcode in center of Display → → See below </p>
	<p> Dialing Numbers Select phone number → → </p>
	<p> Sending Messages Select mail address → → Complete message → </p> <ul style="list-style-type: none"> • When MAILTO: appears in scan results, press to enter the items underlined with a dotted line automatically in Composition window.
<p> Accessing Internet Sites Select URL → </p>	

Using images as Wallpaper	<p> → Tools → → Doc./Rec. → Barcode/Scan → → Scan Barcode → → Frame barcode in center of Display → → Select image → → Set as Wallpaper → → Vertical or Horizontal → </p> <ul style="list-style-type: none"> • For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Saving images & melodies	<p> → Tools → → Doc./Rec. → Barcode/Scan → → Scan Barcode → → Frame barcode in center of Display → → Select file → → To Data Folder → </p>
Opening or playing files	<p> → Tools → → Doc./Rec. → Barcode/Scan → → Scan Barcode → → Frame barcode in center of Display → → Select file → </p>
Using images for System Graphics	<p> → Tools → → Doc./Rec. → Barcode/Scan → → Scan Barcode → → Frame barcode in center of Display → → Select image → → As System → → Select item → → Specify display area → </p> <ul style="list-style-type: none"> • Some images may be usable without specifying display area.

Pasting to message text	<p>Start Here → Tools → Doc./Rec. → Barcode/Scan → Scan Barcode → Frame barcode in center of Display → Send Message → See below</p> <p>All Text → S! Mail or SMS → Complete message</p> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.
	<p>Selected Text → Select first character → Highlight text range → S! Mail or SMS → Complete message</p> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.
Copying text	<p>Start Here → Tools → Doc./Rec. → Barcode/Scan → Scan Barcode → Frame barcode in center of Display → See below</p> <p>Text → Copy → Select first character → Highlight text range</p> <p>Number, Address or URL Select number, mail address or URL → Copy Telephone, Copy Address or Copy URL</p>

Scan Card

Saving to Notepad	<p>→ Tools → Doc./Rec. → Barcode/Scan → Scan Card → Frame card in center of Display → Notepad</p>
Pasting to message text	<p>Start Here → Tools → Doc./Rec. → Barcode/Scan → Scan Card → Frame card in center of Display → Send Message → See below</p> <p>All Text → S! Mail or SMS → Complete message</p> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.
	<p>Selected Text → Select first character → Highlight text range → S! Mail or SMS → Complete message</p> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.
Copying text	<p>Start Here → Tools → Doc./Rec. → Barcode/Scan → Scan Card → Frame card in center of Display → See below</p> <p>Text → Copy → Select first character → Highlight text range</p>

Scan Text	
Scanning during text entry	In a text entry window,
Scanning more text	<ul style="list-style-type: none"> • Select <i>Continue Part</i> to enter additional text or <i>Scan More</i> to enter text after a line break.
Saving scan results	
Saving linked info to Phone Book	<ul style="list-style-type: none"> • To add to an existing entry, select <i>As New Detail</i>.
Saving to Notepad	
Opening saved scan results	<ul style="list-style-type: none"> • Select a file and press to rename files, open properties or delete files. • Some files may not open.

Using linked info	
	<p>Dialing Numbers</p>
Pasting to message text	<p>Sending Messages</p>
	<p>Accessing Internet Sites</p>
Pasting to message text	
	<p>All Text</p> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.
	<p>Selected Text</p> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.

Copying text

Start Here   Tools   Doc./Rec. 
Barcode/Scan   Scan Text  
Frame text in center of Display   Select
line    See below

Text

  Copy   Select first character  
 Highlight text range  

Number, Address or URL

Select number, mail address or URL  
Copy Telephone, Copy Address or Copy URL
  

Osaifu-Keitai®



Cannot use Osaifu-Keitai® (S! FeliCa)

- Battery may be low. Charge battery or install a charged battery.



Recognition via reader/writer takes time

- Check  logo area. Foreign articles can block/hamper recognition.



Call Remote Lock does not activate even after specified number of Missed Calls

- Missed Call count is reset by calls from other numbers. If series is interrupted, start over from the beginning.
- When Call Forwarding is active, Missed Calls may not be recorded.

Wakeup TV



TV does not activate with specified channel

- If Wakeup TV Time arrives while TV is active, channel does not switch to the specified one.

Voice Recorder



Cannot record properly

- If incompatible microphone is connected, recording may fail.



Noise/skipping occurs

- Avoid shocks to handset while recording; may cause noise or skipping.



Recording takes time to start

- Recording window may take longer to open as more Voice files are saved on Memory Card.

Scanning Barcode/Card/Text

? Cannot read barcodes properly

- Scan may fail if barcode is dirty or unclear.
- Scan may fail if barcode is scanned under inadequate light.
- Scan may fail if multiple barcodes are captured at one time.

? Cannot read barcodes during text entry

- Scanning is not available during calls or when mobile camera is active.

? Cannot read barcode images in Data Folder automatically

- When scan fails, follow onscreen instructions and select next barcode image manually.

? Cannot scan business cards properly

- Scan fails if business card is printed in light-colored text on a dark background, handwritten or printed in casual/decorative fonts, decorated with a background pattern, or designed with both vertical and horizontal text.
- Scan may fail if business card is printed in light-colored text on a light background, printed in italics or extremely small fonts, decorated with a logo or logo-like text, printed on a glossy paper or other material, or dirty/folded.

? Cannot scan text properly

- Scanning over 35 characters at one time may yield poor results.
- Adjust to frame text in []. Letters at the ends may be distorted.

Mobile Widget	10-2
Customizing Standby Display (Japanese).....	10-2
S! Quick News	10-5
Receiving Content Updates (Japanese)	10-5
S! Information Channel	10-6
S! Information Channel & Weather Indicator (Japanese).....	10-6
e-Books	10-7
Reading e-Books (Japanese)	10-7

S! Friend's Status	10-8
Using S! Friend's Status	10-8
S! Circle Talk	10-11
Using S! Circle Talk	10-11
Near Chat	10-13
Using Near Chat (Japanese).....	10-13
Blog Tool	10-14
Blogging	10-14
Additional Functions	10-16
Troubleshooting	10-23

10

Entertainment & Communication




Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.



Obtaining Widgets

- 1 → **Entertainment** → → **Mobile Widget** →

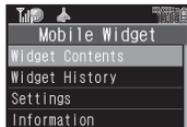

Mobile Widget Menu

- 2 **Widget Contents** →



Widget List

- 3 **Download** →

- Follow onscreen instructions.

Installing Widgets

- Some widgets may need to be installed manually; follow these steps:

[Widget List] Select widget → →

Install → → Yes →

Activating Single Widgets

[Widget List] Select widget → →

Advanced

- Opening properties
- Opening widget notification history
- Canceling automatic updates
- Receiving updates automatically while abroad
- Disabling widget notifications
- Disabling cookies
- Deleting cookies (P.10-16)

Saving Widgets to Standby

- 1 
 - Pointer () appears.
- 2 Use  to select  (OPEN)
 - ➔ 



- Press  to toggle selection.
 - Alternatively, use  to point to  (OPEN) and press .
- 3 Select widget ➔ 
 - Corresponding icon appears in Standby.
 - 4 Use  to specify target location ➔ 

Removing Widgets from Standby

- 1  ➔ Use  to select widget ➔ 
 - ➔ Operation ➔  ➔ Remove ➔ 
 - ➔ Yes ➔ 

Moving Widgets

- 1  ➔ Use  to select widget ➔ 
 - ➔ Operation ➔  ➔ Change Layout ➔  ➔ Specify target location ➔ 

Moving Widgets to Front/Back

- 1  ➔ Use  to select widget ➔ 
 - ➔ Operation ➔  ➔ To Front or To Back ➔ 

Updating View

- 1  ➔ Use  to select widget ➔ 
 - ➔ Operation ➔  ➔ Update View ➔ 

Using Widgets

- 1  ➔ Use  to select widget ➔ 
- 2 
 - Widget activates; follow onscreen instructions.

Using Sheets


Paste widgets and Standby shortcuts on each sheet; toggle sheets to use them.

Saving Widgets on Other Sheets

- 1 In Widget list, select widget
 - ➔ 
- 2 Set as StbyShortcut ➔ 



- 3 Select sheet ➔ 

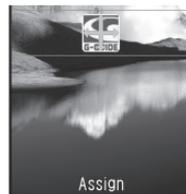

- 4 Specify target location ➔ 

Advanced

-   Logging in to Yahoo!JAPAN
-  Viewing widget-related information
-  Reversing icon selection order with 
-  Slowing pointer speed
-  Editing sheet names
-  Locking sheets (P.10-16 - 10-17)



10 Toggling Sheets

1 [Icon] → [Y] (Long)



- To toggle further, Long Press [Y] or press [Y] repeatedly.
- Sheet name appears at the top, then disappears.
- Save widgets as needed; corresponding icons appear on the current sheet.

Using Locked Sheets

[Icon] → Select [Icon] → [Y] → Enter
Handset Code → [Y]

Deleting Widgets

■ One Entry

1 In Widget list, select widget



- *S!速報ニュース/S!ともだち状況* cannot be deleted.

2 Delete → [Y] → Yes → [Y]

■ All Entries

1 In Widget list, [Icon]

- When an item other than *Download* or *S!速報ニュース/S!ともだち状況* is selected, press [Icon] then select *Manage Items* and press [Y].


2 Delete All → [Y] → Enter Handset Code → [Y]

3 Yes → [Y]

- If there is widget saved in Standby, a confirmation appears.

Using S! Quick News & S! Friend's Status Widget

932SH is preloaded with *S!速報ニュース/S!ともだち状況* (S! Quick News & S! Friend's Status widget) that shows S! Quick News and S! Friend's Status information in Standby.

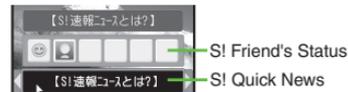

View Settings

■ Setting View Pattern

1 [Icon] → Use [Y] to select S! Quick News/S! Friend's Status widget → [Icon]

2 Operation → [Y] → Pattern Setting → [Y]

3 Select item → [Y] (✓) → [Y]

■ Switching View

1 [Icon] → Use [Y] to select S! Quick News/S! Friend's Status widget → [Icon]

2 Operation → [Y] → Switch Pattern → [Y]

- Repeat the above steps to switch the view.

Advanced

- Adding news items
- Changing news scroll speed
- Showing unread news only
- Showing news images
- Assigning members
- Managing members (P.10-17)

Receiving Content Updates (Japanese)

View content updates or breaking news.
Transmission fees apply.

Registering S! Quick News Items

- 1 → **Entertainment** →
→ **S! Quick News** →



S! Quick News Menu

- 2 **S! Quick News List** →



S! Quick News List

- 3 **登録はこちら** → → **Yes**
→

- Handset connects to the Internet.

- 4 **Select item** →

- Follow onscreen instructions.

Registering with S! Loop Items

- [S! Quick News Menu] **S! Loop List** →
 → **S!ループにアクセス** → → **Yes** →

- Handset connects to the Internet. Refer to the S! Loop help menu for operational instructions.

Opening Information

- 1 **In S! Quick News List, select item** →

- Title list appears.

- 2 **Select title** →



- Press to return to title list, or to open next title.

Updating Items Manually

- [S! Quick News List] **Select item** →
 → **更新** → → **一件 or 全件** →

Receiving S! Loop Item Updates

- [S! Quick News Menu] **S! Loop List**
→ → **Select item** → → **Select title** →

Indicators

Unread Special news	<input type="checkbox"/>	Unread General news
Read Special news	<input type="checkbox"/>	Read General news
Unread News Flash	<input checked="" type="checkbox"/>	Auto update disabled
Read News Flash		

Advanced

- Updating S! Quick News list automatically
- Checking update schedule
- Deleting S! Quick News items
- Resetting S! Quick News List and S! Loop List
- Updating S! Loop items manually
- Updating S! Loop list automatically
- Deleting S! Loop items
- Changing background image
- Accessing source sites
- Disabling image download (P.10-18)



S! Information Channel & Weather Indicator (Japanese)

Subscribe to Japanese mobile periodicals that download to handset automatically; use Weather Indicator as needed. Transmission fees apply.

Service Registration & Content Subscription

- 1   **Entertainment** 
 **S! Information Channel/Weather** 



S! Information Channel Menu

- 2 **Registration/Cancel** 
 • Handset connects to the Internet.
 Follow onscreen instructions.

New Received Information

Information window opens for new S! Information Channel info delivery.

- 1 **While Information window appears, S! Info. Channel** 
 • S! Information Channel page opens. Follow onscreen instructions.
 • S! Information Channel page handling is similar to that of Yahoo! Keitai.

- 2  **Page closes**

Opening Unread Latest Issue
 [S! Information Channel Menu]

Opening Back Issues
 [S! Information Channel Menu]
 Back Issue   Select date 

Using Weather Indicator

After S! Information Channel registration, local area weather indicator appears in Standby.

	Clear skies (day)		Snow
	Clear skies (night)		Thunder showers
	Cloudy		Then
	Rain		Partly/chance of

Example: ☁/☔  Partly cloudy with a chance of rain
 Indicators other than the above also appear for more information.

Manual Update

[S! Information Channel Menu]
 Weather Indicator   Manual Update   Yes 

Advanced

-  ● Hiding Information window for new received info ● Changing Display Size ● Changing scroll unit ● Copying text ● Hiding Weather Indicator in Standby
 ● Canceling Weather Indicator automatic updates ● Hiding Information window for weather updates (And more on P.10-19)



Reading e-Books (Japanese)

Downloading e-Books

1  ➔ **メニューリスト** ➔ 

2 **書籍・コミック・写真集** ➔ 

- Follow onscreen instructions.
- Downloaded e-Books are saved to Data Folder (Books).

Note

- Alternatively, visit SH-web to download e-Books.

e-Book Viewer

Read XPDF books and dictionary files. Some files may not be supported.

1  ➔ **Entertainment** ➔ 



Entertainment Menu

2 **e-Book Viewer** ➔ 

- e-Book Viewer starts. Refer to the e-Book Viewer help menu for operational instructions.

BookSurfing®

Download Contents Keys and read CCF files. Some files may not be supported.

1 In Entertainment menu, **BookSurfing** ➔ 

- BookSurfing® S! Application starts. Refer to the BookSurfing® help menu for operational instructions.

Moving CCF Files via Memory Card

- When purchasing a new handset, move CCF files and retrieve Contents Keys to open the files. Some files may need to be re-downloaded.

Advanced

-  ● Copying text ● Opening non-932SH e-Books (Library) ● Using Library (P.10-20)




Using S! Friend's Status

Exchange current usage status, mood, etc. with compatible handsets.

- Save and organize members in Groups.
- S! Friend's Status requires a separate contract and basic monthly fee.
- Set Connection status to **Online** beforehand.

First S! Friend's Status Use

Follow these steps to register a number saved in Phone Book; Status, Availability and Comment are sent to the members.

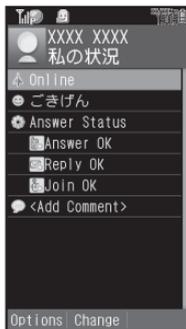

1 (Long)



2 Yes



3 Yes

4 Phone Book

5 Select entry Select phone number



- Omit number selection step if only one number is saved.

6 Yes

- Registration request is sent to the number.

When Request is Accepted

- An acceptance notice arrives; My Status is sent and member's status appears on handset.

Direct Entry

In 4, **Add New Entry** Enter phone number

Advanced

- Adding members
- Deleting members
- Moving members
- Renaming Groups
- Rejecting requests
- Updating manually
- Opening notices
- Sending My Details image (And more on P.10-20 - 10-21)

Opening Member Status

- 1 (Long) Select Group



My Status

Member Status

- 2 Select member



When Cancellation Notice Arrives

- Member is deleted from S! Friend's Status member list.

Changing My Status

Follow these steps to change Status, Availability and Comment; new status is sent to the members.


- 1 (Long) 私の状況



Connection Status

My Status Window

- 2 Select Status, e.g., **ごきげん**

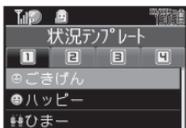

Status Template Window

- 3 Select new Status

- 4 Select Availability, e.g., **Answer OK** Select new Availability

- 5 <Add Comment> Enter text

- 6 Update starts

Changing Connection Status

[My Status Window] **Online (or Offline)** Select status

Changing Status Icon/Label

[Status Template Window] Select Status Status Icon or Status Label Select Pictogram or enter text

Changing Availability Settings at Once

In 4, **Answer Status** Select new Answer Status From 5

Editing My Status Name

[My Status Window] Edit Name Edit



Receiving Request from Unsaved Numbers

When a registration request arrives, a confirmation appears.



1 Yes → []

- Acceptance notice is sent; the number is registered.


Rejecting

In 1, No → [] → Yes → []

- Rejection notice is sent; the number cannot be registered for 24 hours.
- For **Confirm Later**, Information window opens.

Creating Status Templates

Save custom combinations of Status Icon and Status Label to each template.

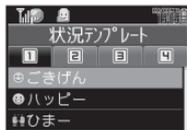

1 In Status Template window,

[] → **New Entry** → []

2 Enter name → []

3 <未定> → []



4 Status Icon → [] → Select Pictogram → []

5 Status Label → [] → Enter text → [] → []

6 Repeat 3 - 5 → [] → Saved

Saving to Data Folder

[Status Template Window] [] Select template → [] → **Save to DF** → [] → **Save here** → []

Loading Templates via Data Folder

[Status Template Window] [] → **Add Template** → [] → Select template → []

Renaming Templates

[Status Template Window] [] Select template → [] → **Edit Temp. Name** → [] → Enter name → []

Advanced

- Resetting templates (P.10-21)



Using S! Circle Talk

Use handset like a walkie-talkie to speak to multiple parties simultaneously.


- A subscription to S! Friend's Status is required.
- Transmission fees apply during S! Circle Talk.

Registering Members

Follow these steps to register a number saved in Phone Book:



- When registering a member for the first time, a confirmation appears. Choose **Yes** and press , then skip ahead to **3**.

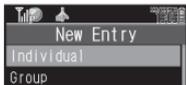

- Omit number selection step if only one number is saved.
- Repeat **4** -  to add members.



Saving as Individuals

- In , **Individual**   - 
- In , **Members List**   **Select member**   
- Omit  when **Individual** is selected in .

Advanced

-   Editing individual members  Editing Groups (P.10-21)



Initiating S! Circle Talk

Follow these steps to send S! Circle Talk requests to members:
Set My Status to **Online** first (P.10-9).

1 



2 Select member or Group 

3   **Transmission starts**

- S! Circle Talk starts when request is accepted by a receiver.
- Loudspeaker activates automatically.

Direct Entry

Enter phone number    
Transmission starts

S! Circle Talk Operations

Speaking

1 Press and hold  when **Press and Hold**  appears
 **You have the floor**



-  **:My Turn** appears when you have the floor.

2 Keep holding  to speak
 **Release**   **Floor is released**

- Warning tone sounds before time limit.

Incoming Calls during S! Circle Talk

- Incoming calls are rejected. Set handset to exit S! Circle Talk to answer incoming calls as needed.

Canceling Loudspeaker

During S! Circle Talk, 

- To reactivate, follow these steps:
  **While message appears,** 

Exiting S! Circle Talk

1   **Connection ends**
• S! Circle Talk ends automatically when there is only one participant left, including yourself.

Rejoining S! Circle Talk

-   **Select most recent S! Circle Talk record**   **Rejoin Circle Talk** 
- An error message appears when S! Circle Talk has ended or maximum number of participants are already engaged.

Accepting S! Circle Talk Request

1 While handset is ringing/vibrating,   **S! Circle Talk starts**

- Alternatively, press .
- S! Circle Talk Operations: left

Advanced

-  Disabling Loudspeaker
-  Exiting S! Circle Talk for incoming calls (P.10-21)



Using Near Chat (Japanese)

Exchange real-time text messages wirelessly with compatible Bluetooth® devices within ten meters. (Available even when handset is out-of-range.) Because this application employs Bluetooth® wireless technology transmission/connection fees do not apply.

Access Restriction

- In the event that this handset may be used by a minor, access to this application may be password restricted by a supervising adult. In this case, Handset Code access must also be managed to prevent the execution of Memory All Clear that may be used to reset the application password.

Sending Near Chat Request

- 1 ➔ **Communication** ➔
➔ **Near chat** ➔



- 2 **Yes** ➔
 - Near Chat S! Application starts.
 - For more, see Near Chat S! Application instructions.

Receiving Near Chat Request

When a Near Chat request arrives, a tone sounds and S! Appli Notification appears.



After a period of inactivity, Information window opens, tone sounds and notification appears.

- 1 **Yes** ➔
 - Near Chat S! Application starts.
 - For more, see Near Chat S! Application instructions.

Rejecting Request

In 1, **No** ➔



Blogging

Save blog details to view or update blogs easily on handset.

Saving Blog Details

Setup for Posting via Mail

Follow these steps to save blog name and address for posting:

- 1 **Communication** **Blog Tool**



- 2 **Add NewEntry**



- 3 **Blog Menu** **Enter name**

- 4 **Blog by send Mail**



Blog Setting Menu (Mail)

- 5 **Blog's Email Address** **Enter mail address**

- 6

Saving Title/Text for Posts

[Blog Setting Menu (Mail)] **Blog's Title or Blog's Text** **Enter title or text**

- Saved title/text is entered automatically when posting.

Setting Image Size for Posting

[Blog Setting Menu (Mail)] **Picture Size** **Select size**

Setup for Posting via the Internet

Save URL for Yahoo! Keitai or PC Site Browser, or both.

- 1 In Blog Setting menu, **Refer/Send by Yahoo! Keitai or Refer/Send by PC Site Browser**



- 2 **Blog's URL** **Enter URL**

- 3 **Refer Blog's URL** **Enter URL**

- 4

Advanced

- Editing entries Deleting entries (P.10-22)



Posting to Blogs

Complete setup for posting via mail/
Internet beforehand.

Posting via Mail

- 1 In Blog Tool window, select entry ➔ 
- 2 **Blog by send Mail** ➔ 
 - S! Mail Composition window opens with address entered.
 - Omit  if no URL is saved for posting.
- 3 Complete message ➔ 

Posting via the Internet

- 1 In Blog Tool window, select entry ➔ 
- 2 **Blog by send Browser** ➔ 
 - Page of URL saved in *Blog's URL* opens.
 - Omit  if no address is saved for posting.
 - If PC Site Browser message appears, follow onscreen prompts.

When URL is Saved for Yahoo! Keitai &
PC Site Browser

After , select browser ➔ 

Opening Blog Page

- 1 In Blog Tool window, select entry ➔ 
 - Page of URL saved in *Refer Blog's URL* opens.
 - If PC Site Browser message appears, follow onscreen prompts.

When URL is Saved for Yahoo! Keitai &
PC Site Browser

After 1, select browser ➔ 



Mobile Widget

Managing

Opening properties	<ul style="list-style-type: none"> ■ ▶ Entertainment ▶ ■ ▶ Mobile Widget ▶ ■ ▶ Widget Contents ▶ ■ ▶ Select widget ▶ Details ▶ ■ <ul style="list-style-type: none"> ● Select widget other than <i>S!速報ニュース!</i>ともだち状況.
--------------------	--

Widget History

Opening widget notification history	Start Here ■ ▶ Entertainment ▶ ■ ▶ Mobile Widget ▶ ■ ▶ Widget History ▶ ■ ▶ See below
	Showing All Text Select record ▶ ☰ ▶ View full text ▶ ■
	Deleting a Record Select record ▶ ☰ ▶ Delete ▶ ■ ▶ Yes ▶ ■
	Deleting All Records Select record ▶ ☰ ▶ Delete All ▶ ■ ▶ Enter Handset Code ▶ ■ ▶ Yes ▶ ■

Settings

Canceling automatic updates	<ul style="list-style-type: none"> ■ ▶ Entertainment ▶ ■ ▶ Mobile Widget ▶ ■ ▶ Settings ▶ ■ ▶ Auto Refresh ▶ ■ ▶ Off ▶ ■
Receiving updates automatically while abroad	<ul style="list-style-type: none"> ■ ▶ Entertainment ▶ ■ ▶ Mobile Widget ▶ ■ ▶ Settings ▶ ■ ▶ AutoConnect Abroad ▶ ■ ▶ On ▶ ■
Disabling widget notifications	<ul style="list-style-type: none"> ■ ▶ Entertainment ▶ ■ ▶ Mobile Widget ▶ ■ ▶ Settings ▶ ■ ▶ Notification Setting ▶ Off ▶ ■

Disabling cookies	<ul style="list-style-type: none"> ■ ▶ Entertainment ▶ ■ ▶ Mobile Widget ▶ ■ ▶ Settings ▶ ■ ▶ Cookies ▶ ■ ▶ Disabled ▶ ■
Deleting cookies	<ul style="list-style-type: none"> ■ ▶ Entertainment ▶ ■ ▶ Mobile Widget ▶ ■ ▶ Settings ▶ ■ ▶ Delete Cookies ▶ ■ ▶ Yes ▶ ■

Operations in Standby

Logging in to Yahoo!JAPAN	<ul style="list-style-type: none"> ☰ ▶ ☰ ▶ Yahoo!JAPAN log in ▶ ■ <ul style="list-style-type: none"> ● Follow onscreen instructions. ● To log out, select Yahoo!JAPAN log out in the above steps.
Viewing widget-related information	<ul style="list-style-type: none"> ☰ ▶ ☰ ▶ Information ▶ ■
Reversing icon selection order with	<ul style="list-style-type: none"> ☰ ▶ ☰ ▶ Move Focus(Reverse) ▶ ■ <ul style="list-style-type: none"> ● To cancel, select Move Focus(Order).
Slowing pointer speed	<ul style="list-style-type: none"> ☰ ▶ ☰ ▶ Cursor Speed ▶ ■ ▶ Slow ▶ ■

Sheets

Editing sheet names	Start Here ▶ ☰ ▶ Sheet Settings ▶ ■ ▶ Change Sheet Name ▶ ■ ▶ See below
	Renaming Select sheet ▶ ■ ▶ Enter name ▶ ■
	Resetting All Sheet Names ☰ ▶ Yes ▶ ■



Locking sheets	<p>Start Here \Rightarrow \Rightarrow Sheet Settings \Rightarrow \Rightarrow Set Sheet Lock \Rightarrow \Rightarrow Enter Handset Code \Rightarrow </p> <p>\Rightarrow See below</p>
	<p>Activating Lock</p> <p>Select sheet \Rightarrow \Rightarrow On \Rightarrow </p>
	<p>Changing Method for Temporary Access</p> <p>Unlock Method \Rightarrow \Rightarrow No Password \Rightarrow </p> <ul style="list-style-type: none"> Press , then select and press to unlock sheet temporarily.
<p>■ S! Quick News & S! Friend's Status Widget (S! Quick News)</p>	
Adding news items	<p> \Rightarrow Use to select S! Quick News/S! Friend's Status widget \Rightarrow \Rightarrow Operation \Rightarrow \Rightarrow Contents Menu \Rightarrow \Rightarrow Add News \Rightarrow \Rightarrow S! Quick News List \Rightarrow \Rightarrow 登録はこちら \Rightarrow \Rightarrow Yes \Rightarrow \Rightarrow Select genre \Rightarrow \Rightarrow Select item \Rightarrow </p> <ul style="list-style-type: none"> Follow onscreen instructions.
	<p> \Rightarrow Use to select S! Quick News/S! Friend's Status widget \Rightarrow \Rightarrow Operation \Rightarrow \Rightarrow Contents Menu \Rightarrow \Rightarrow News Display \Rightarrow \Rightarrow News Speed \Rightarrow \Rightarrow Select speed \Rightarrow </p>
Changing news scroll speed	<p> \Rightarrow Use to select S! Quick News/S! Friend's Status widget \Rightarrow \Rightarrow Operation \Rightarrow \Rightarrow Contents Menu \Rightarrow \Rightarrow News Display \Rightarrow \Rightarrow News Speed \Rightarrow \Rightarrow Select speed \Rightarrow </p>
Showing unread news only	<p> \Rightarrow Use to select S! Quick News/S! Friend's Status widget \Rightarrow \Rightarrow Operation \Rightarrow \Rightarrow Contents Menu \Rightarrow \Rightarrow News Display \Rightarrow \Rightarrow Target News \Rightarrow \Rightarrow Unread Only \Rightarrow </p>
Showing news images	<p> \Rightarrow Use to select S! Quick News/S! Friend's Status widget \Rightarrow \Rightarrow Operation \Rightarrow \Rightarrow Contents Menu \Rightarrow \Rightarrow News Display \Rightarrow \Rightarrow Display Image \Rightarrow \Rightarrow On \Rightarrow </p> <ul style="list-style-type: none"> Available when only S! Quick News area is set to appear on the Panel.

■ **S! Quick News & S! Friend's Status Widget (S! Friend's Status)**

Assigning members	<p>When Pattern Setting is Not Friend's Status(List)</p> <p> \Rightarrow Use to select member field \Rightarrow \Rightarrow Operation \Rightarrow \Rightarrow Contents Menu \Rightarrow \Rightarrow Assign Member \Rightarrow \Rightarrow Select category \Rightarrow \Rightarrow Select entry/member \Rightarrow </p>
	<p>When Pattern Setting is Friend's Status(List)</p> <p> \Rightarrow Use to select S! Quick News/S! Friend's Status widget \Rightarrow \Rightarrow Operation \Rightarrow \Rightarrow Contents Menu \Rightarrow \Rightarrow Assign Member \Rightarrow \Rightarrow Select category \Rightarrow \Rightarrow Select entry/member \Rightarrow \Rightarrow (Empty) \Rightarrow </p>
Managing members	<p>Start Here \Rightarrow Use to select member \Rightarrow \Rightarrow Operation \Rightarrow \Rightarrow Contents Menu \Rightarrow </p> <p>See below</p>
	<p>Deleting Members</p> <p>Delete \Rightarrow \Rightarrow Yes \Rightarrow </p>
	<p>Changing Member Order</p> <p>Move \Rightarrow \Rightarrow (Up) or (Down) \Rightarrow </p>
	<p>Changing Member Icons</p> <p>Change Icon \Rightarrow \Rightarrow Select Pictogram \Rightarrow </p>



S! Quick News

■ Opening/Updating Items

Updating S! Quick News list automatically	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Automatic Update</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>Select item</i> → <input type="checkbox"/> → <input type="checkbox"/> → <i>Select interval or choose On</i> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> • If a confirmation appears, press <input type="checkbox"/>. • When Special is set to <i>On</i>, items are updated every four hours. • When General is set to <i>On</i>, items are updated once a day. • To cancel automatic update, choose <i>Off</i> and press <input type="checkbox"/>. • Updating items may incur high charges. • Only available in Japan.
Checking update schedule	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Check Schedule</i> → <input type="checkbox"/> </p>
Deleting S! Quick News items	<p> <input type="checkbox"/> → <i>Start Here</i> → <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>S! Quick News List</i> → <input type="checkbox"/> → <i>Select item</i> → <input type="checkbox"/> → See below </p> <p>One Entry</p> <p><i>一件</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/></p> <p>All Entries</p> <p><i>全件</i> → <input type="checkbox"/> → <i>Enter Handset Code</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/></p>
Resetting S! Quick News List and S! Loop List	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Delete S! Quick News Lists</i> → <input type="checkbox"/> → <i>Enter Handset Code</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> • Not available during automatic updates.

■ S! Loop

Updating S! Loop items manually	<p> <input type="checkbox"/> → <i>Start Here</i> → <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>S! Loop List</i> → <input type="checkbox"/> → See below </p> <p>One Entry</p> <p><i>Select item</i> → <input type="checkbox"/> → <i>更新</i> → <input type="checkbox"/> → <i>一件</i> → <input type="checkbox"/></p> <p>All Entries</p> <p><i>更新</i> → <input type="checkbox"/> → <i>全件</i> → <input type="checkbox"/></p>
Updating S! Loop list automatically	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Automatic Update</i> → <input type="checkbox"/> → <i>S! Loop</i> → <input type="checkbox"/> → <i>On</i> → <input type="checkbox"/> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> • Items are updated about four times a day. • Only available in Japan.
Deleting S! Loop items	<p> <input type="checkbox"/> → <i>Start Here</i> → <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>S! Loop List</i> → <input type="checkbox"/> → <i>Select item</i> → <input type="checkbox"/> → See below </p> <p>One Entry</p> <p><i>一件</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/></p> <p>All Entries</p> <p><i>全件</i> → <input type="checkbox"/> → <i>Enter Handset Code</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/></p>
■ Other	
Changing background image	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Change Skin</i> → <input type="checkbox"/> → <i>Select pattern</i> → <input type="checkbox"/> </p>
Accessing source sites	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>Select list</i> → <input type="checkbox"/> → <i>Select item</i> → <input type="checkbox"/> → <i>Select title</i> → <input type="checkbox"/> → <i>Select title</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/> </p>
Disabling image download	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Show Image</i> → <input type="checkbox"/> → <i>Off</i> → <input type="checkbox"/> </p>



S! Information Channel

■ Receiving Information

Hiding Information window for new received info	<input type="checkbox"/> → Entertainment → <input type="checkbox"/> → S! Information Channel/Weather → <input type="checkbox"/> → Notification → <input type="checkbox"/> → Off → <input type="checkbox"/>
Requesting re-delivery	<input type="checkbox"/> → Entertainment → <input type="checkbox"/> → S! Information Channel/Weather → <input type="checkbox"/> → Get Latest Contents → <input type="checkbox"/> → Yes → <input type="checkbox"/>

■ Information Pages

Changing Display Size	On a page, <input type="checkbox"/> → Settings → <input type="checkbox"/> → Display Size → <input type="checkbox"/> → Select size → <input type="checkbox"/>
Changing scroll unit	On a page, <input type="checkbox"/> → Settings → <input type="checkbox"/> → Scroll Unit → <input type="checkbox"/> → Select unit → <input type="checkbox"/>
Copying text	On a page, <input type="checkbox"/> → Copy Text → <input type="checkbox"/> → Select first character → <input type="checkbox"/> → Highlight text range → <input type="checkbox"/>
Saving files to Data Folder	On a page, <input type="checkbox"/> → Save Items → <input type="checkbox"/> → Select file → <input type="checkbox"/> → Save → <input type="checkbox"/> → Enter name → <input type="checkbox"/> → Save here → <input type="checkbox"/> <ul style="list-style-type: none"> Some files are saved automatically.
Opening page properties	On a page, <input type="checkbox"/> → Page Information → <input type="checkbox"/>

■ Weather Indicators

Checking weather forecast	<input type="checkbox"/> → Entertainment → <input type="checkbox"/> → S! Information Channel/Weather → <input type="checkbox"/> → Weather Indicator → <input type="checkbox"/> → Weather → <input type="checkbox"/>
Changing weather forecast page font size	On a page, <input type="checkbox"/> → Settings → <input type="checkbox"/> → Font Size → <input type="checkbox"/> → Select size → <input type="checkbox"/>
Hiding Weather Indicator in Standby	<input type="checkbox"/> → Entertainment → <input type="checkbox"/> → S! Information Channel/Weather → <input type="checkbox"/> → Weather Indicator → <input type="checkbox"/> → Settings → <input type="checkbox"/> → Standby Setting → <input type="checkbox"/> → Off → <input type="checkbox"/>
Canceling Weather Indicator automatic updates	<input type="checkbox"/> → Entertainment → <input type="checkbox"/> → S! Information Channel/Weather → <input type="checkbox"/> → Weather Indicator → <input type="checkbox"/> → Settings → <input type="checkbox"/> → Icon Update → <input type="checkbox"/> → Off → <input type="checkbox"/>
Hiding Information window for weather updates	<input type="checkbox"/> → Entertainment → <input type="checkbox"/> → S! Information Channel/Weather → <input type="checkbox"/> → Weather Indicator → <input type="checkbox"/> → Settings → <input type="checkbox"/> → Weather Notif. → <input type="checkbox"/> → Off → <input type="checkbox"/>



e-Books	
Copying text	In open page, 文字列を北' - Select first character Highlight text range
Opening non-932SH e-Books (Library)	Entertainment e-Book Viewer Select file • Some files may not open.
Using Library	Start Here Entertainment e-Book Viewer See below
	Adding Folders New Folder Enter name
	Switching Folders Switch Folders Select folder
	Renaming Folders/Files Select folder/file Change Name Enter name
	Moving Files Select file Move Select folder Move here
	Deleting Folders/Files Select folder/file Delete Yes
	Opening File Properties Select file Details

S! Friend's Status

Members/Groups

Adding members	(Long) Select Group Add Member Select method Select entry or enter phone number Yes
Deleting members	(Long) Select Group Select member Registration Release Yes Yes • Cancellation notice is sent; deleted members cannot be re-registered for 24 hours.
Moving members	(Long) Select Group Select member Change Group Select target Group
Renaming Groups	(Long) Select Group Edit Group Name Enter name
Rejecting requests	Start Here (Long) Settings Request Reply See below
	Rejecting Requests from Unsaved Numbers Confirm if Registered • Rejection notice is sent to rejected numbers automatically.
	Rejecting All Requests Always Ignore • Rejection notice is sent to all requesters automatically.



■ Status/Availability

Saving custom Availability combinations	<p>[⋮] (Long) → [☰] → <i>Settings</i> → [■] → <i>Answer Status</i> → [■] → <i>User Setting</i> → [■] → <i>Select type</i> → [■] → <i>Select Availability</i> → [■] → [✓]</p>
Changing Status Icon Pictogram or Status Label description	<p>[⋮] (Long) → [☰] → <i>Settings</i> → [■] → <i>Status Setting</i> → [■] → [☰] <i>Select template</i> → <i>Select Status</i> → [■] → <i>Status Icon</i> → [■] → <i>Select Pictogram</i> → [■] → <i>Status Label</i> → [■] → <i>Enter text</i> → [■] → [✓]</p>

■ Status Templates

Resetting templates	<p>[Start Here] [⋮] (Long) → <i>私の状況</i> → [■] → <i>Select Status</i> → [■]</p>
	<p>One Template</p> <p>[☰] <i>Select template</i> → [☰] → <i>Reset</i> → [■] → <i>Yes</i> → [■]</p>
	<p>All Templates</p> <p>[☰] → <i>Reset All</i> → [■] → <i>Yes</i> → [■]</p>

■ Member Status & Notices

Updating manually	<p>[⋮] (Long) → [☰] → <i>Settings</i> → [■] → <i>Status Update</i> → [■]</p>
Opening notices	<p>[⋮] (Long) → [☰] → <i>Status Notif. List</i> → [■] → <i>Select notice</i> → [■]</p>

■ My Details

Sending My Details image	<p>[⋮] (Long) → [☰] <i>Select Group</i> → <i>Select member</i> → [☰] → <i>Send Image</i> → [■] → <i>Yes</i> → [■]</p>
--------------------------	---

S! Circle Talk

■ Member List

Editing individual members	<p>[Start Here] [🔴] → <i>Select member</i> → [☰] → <i>See below</i></p> <p>Replacing Members</p> <p><i>Edit</i> → [■] → [☰] → <i>Select method</i> → [■] → <i>Select entry</i> → [■]</p> <p>Deleting Members</p> <p><i>Delete</i> → [■] → <i>Yes</i> → [■]</p>
	<p>[Start Here] [🔴] → <i>Select Group</i> → [☰] → <i>See below</i></p> <p>Editing Group Name/Members</p> <p><i>Edit</i> → [■] → <i>Select target</i> → [■] → <i>Edit/enter</i> → [■] → [✓]</p> <p>Deleting Group Members</p> <p><i>Edit</i> → [■] → <i>Select member</i> → [☰] → <i>Delete</i> → [■] → <i>Yes</i> → [■] → [✓]</p> <p>Deleting Groups</p> <p><i>Delete</i> → [■] → <i>Yes</i> → [■]</p>

■ Settings

Disabling Loudspeaker	<p>[🔴] → [☰] → <i>Loudspeaker</i> → [■] → <i>Off</i> → [■]</p>
Exiting S! Circle Talk for incoming calls	<p>[🔴] → [☰] → <i>Incoming Calls</i> → [■] → <i>Voice Calls or Video Calls</i> → [■] → <i>Accept Calls</i> → [■]</p>



Blog Tool

Editing entries	<ul style="list-style-type: none"> ■ → <i>Communication</i> → ■ → <i>Blog Tool</i> → ■ → Select entry →  → <i>Edit</i> → ■ → Select item → ■ → <i>Edit</i> →  →  • For <i>Blog Menu</i>, omit step of pressing  after editing.
Deleting entries	<ul style="list-style-type: none"> ■ → <i>Communication</i> → ■ → <i>Blog Tool</i> → ■ → Select entry →  → <i>Delete</i> → ■ → <i>Yes</i> → ■





S! Friend's Status

? Cannot use S! Friend's Status

- Set IP Service Setting to *On*.

? Handset rejected a registration request automatically

- Rejection notice is sent automatically when 30 members are already registered or handset fails to respond within two hours.

? Registration request arrived from a deleted member

- Registration request arrives when a member fails to receive cancellation notice within 24 hours.

? Registration request was sent to a member automatically

- Registration request is sent automatically when handset fails to receive rejection/cancellation notice within 24 hours.

? Cannot create Status Templates

- Three templates may already be added; reset one and retry.

S! Circle Talk

? Cannot use S! Circle Talk

- Set IP Service Setting to *On*.

? S! Circle Talk starts automatically

- Check My Status; handset accepts S! Circle Talk requests automatically if S! Circle Talk Availability is set to *Auto Join*.

? Cannot accept S! Circle Talk requests

- Check My Status; handset rejects S! Circle Talk requests automatically if S! Circle Talk Availability is set to *Join NG*.

Near Chat

? Cannot receive Near Chat requests

- S! Appli Request may be set to *Off*.

S! Quick News

? Cannot receive content updates

- Update may fail out-of-range or in poor signal conditions.
- Automatic Update does not affect S! Quick News List News Flash or S! Loop List update items overnight.
- USIM Card replacement cancels Automatic Update.

Handset Security	11-2
Operations Security	11-2
Information Security.....	11-3

Face Recognition	11-4
Using Face Recognition	11-4
Additional Functions	11-6

11

Handset Security



Operations Security

Function Lock

Restrict access to handset functions.

Auto	Lock when Display turns off or handset is closed
Once	Lock immediately; setting is canceled once handset is unlocked
At Power On	Lock when handset is turned on; Handset Code entry window opens

- 1 → **Settings** → → **In Phone menu, Locks** →



Locks Menu

- 2 **Function Lock** →
- 3 **Select item** → → **Enter Handset Code** →

Unlocking Temporarily

While handset is locked, enter **Handset Code** →

When Function Lock is Active

- Press corresponding key to turn handset on/off, answer calls, place callers on hold, end calls, etc.

PIN Entry

Activate PIN Entry to require PIN entry each time handset is turned on.

- 1 **In Locks menu, PIN Entry** → → **Switch On/Off** →
- 2 **On** → → **Enter PIN** →

Secure Remote Lock

Lock a lost handset remotely via PC or another handset. Secure Remote Lock disables all operations except turning handset on, and activates IC Card Lock. For more about Secure Remote Lock, see SOFTBANK MOBILE Corp. Website (P.15-23) or contact SoftBank Mobile Customer Center, General Information (P.15-41).



Advanced

- Changing PINs ● Setting Secure Remote Lock activation message to appear (P.11-6)

Information Security

Application Lock

Restrict access to these functions:

Phone Book

Calendar/Tasks

Yahoo! Keitai

Mail


Notepad

- 1 → **Settings** → → In Phone menu, **Locks** →



Locks Menu

- 2 **Application Lock** →

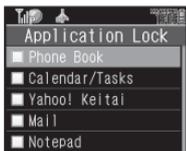

- 3 **Select item** → (✓)
 - For Phone Book, select **No Refer** or **Refer** and press .

- 4 → **Enter Handset Code** →


Temporary Access to Functions

- When accessing functions, enter Handset Code and press .

History Lock

Restrict access to Call Log and sent/received mail records.

- 1 In Locks menu, **History Lock** →

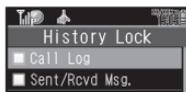

- 2 **Select item** → (✓)

- 3 → **Enter Handset Code** →

Temporary Access to Records

- When accessing records, enter Handset Code and press .

Show Secret Data

Activate Show Secret Data to access Secret entries.

- 1 In Locks menu, **Show Secret Data** →
- 2 **On** → → **Enter Handset Code** →

When Show Secret Data is Active

- Predictive is not available for text entry.

Activating Temporarily with Motion Control

- 1 **Enter Handset Code** → **Shake handset left or right**
 - Show Secret Data is canceled when handset is closed or Display goes dark in Standby.



Using Face Recognition

Capture portraits with mobile camera then match live image to saved ones to unlock handset or access functions/files. If Face Recognition fails, Function Lock activates.

Precautions

- Identification accuracy is not guaranteed. SoftBank cannot be held liable for misuse or any damages associated with the use of Face Recognition.
- Handset Code is required to cancel Face Recognition. Changing the code helps enhance security.
- Osaifu-Keita® is available even when Face Recognition is active.
- When capturing/scanning face, remember these points:
 - Make sure your face is clearly visible.
 - Face should be lit evenly and brightly.

Precautions for Portrait Capture

- Look straight into lens and frame whole face with no expression.
- Do not wear a mask when capturing portraits, even for use with **Low(Mask)**.

Saving User Information

- 1 → **Settings** → → **In Phone menu, Locks** →
- 2 **Face Recognition** →



Face Recognition Menu

- 3 **User Registration** → → **Enter Handset Code** →



- 4 **Select from User 1 to User 5** →



- 5 **User Name:** → → **Enter name** →

- 6 **Register Riddle:** → → **Enter question** →

- 7 **Register Answer:** → → **Enter answer** →

- 8 **Face Image:** →



- 9 **Select from Image 1 to Image 5** →

- Mobile camera activates.

- 10 **Frame your face on Display** → → →

- 11 **Yes** →
 - To save more, repeat 9 - 10.

- 12 → → **Saved**



Advanced

- Editing/deleting user information
- Changing/deleting portraits
- Changing accuracy level (P.11-6)

Scanning Face

Face Recognition window opens when handset is turned on or opened, or whenever Display is refreshed after Display Saving time.


1 Face the Display → Recognition starts



2 If face matches a saved portrait, handset unlocks

When Matching Portrait is Found

Saved question appears.

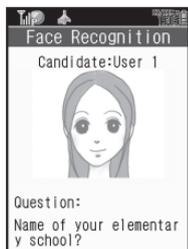

1 [] → Enter answer → []


Advanced

● Changing recognition guide option ● Opening contact information when recognition fails (P.11-6)

If You Cannot Remember the Answer
 In 1, [] → Enter Handset Code → []
When No Question or Answer is Saved
 In 1, Enter Handset Code → []

When Recognition Fails

Function Lock activates.

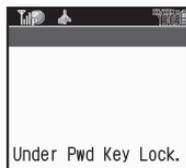

Retrying Face Recognition

1 []

Unlocking with Handset Code

1 Enter Handset Code → []

Activating & Canceling

- 1 In Face Recognition menu, **Switch On/Off** → []
- 2 **On or Off** → [] → Enter Handset Code → []





PIN Entry

Changing PINs

Start Here [] → **Settings** [] → In Phone menu, **Locks** [] → See below

Changing PIN

PIN Entry [] → **Change PIN** [] → Enter current PIN [] → Enter new PIN [] → Re-enter new PIN []

- Activate PIN Entry first.

Changing PIN2

Change PIN2 [] → Enter current PIN2 [] → Enter new PIN2 [] → Re-enter new PIN2 []

Secure Remote Lock

Setting Secure Remote Lock activation message to appear

Start Here [] → **Settings** [] → In Phone menu, **Locks** [] → **Set Lock Message** [] → See below

Saving Message

Message [] → Enter Handset Code [] → Enter message [] → Yes []

Checking Message

Check Message []

Face Recognition

Editing/deleting user information

Start Here [] → **Settings** [] → In Phone menu, **Locks** [] → **Face Recognition** [] → **User Registration** [] → Enter Handset Code [] → Select from **User 1 to User 5** [] → See below

Editing

[] → Select item [] → Change portrait or enter information [] → []

- Edit items in the same way as saving entries.

Deleting

[] → Yes []

Changing/deleting portraits

Start Here [] → **Settings** [] → In Phone menu, **Locks** [] → **Face Recognition** [] → **User Registration** [] → Enter Handset Code [] → Select from **User 1 to User 5** [] → **Face Image:** [] → Select from **Image 1 to Image 5** [] → See below

Changing

[] → [] → Yes [] → [] → [] → []

Deleting

[] → Yes []

Changing accuracy level

[] → **Settings** [] → In Phone menu, **Locks** [] → **Face Recognition** [] → **Security Level** [] → Select level []

- When set to **Low(Mask)**, handset recognizes faces with masks.

Changing recognition guide option

[] → **Settings** [] → In Phone menu, **Locks** [] → **Face Recognition** [] → **Conductor Setting** [] → Select option []

Opening contact information when recognition fails

[] → **Settings** [] → In Phone menu, **Locks** [] → **Face Recognition** [] → **Report** [] → Enter Handset Code [] → Enter contact information []

Data Folder	12-2
Opening Files	12-3
Managing Files & Folders	12-4

Memory Card	12-5
Using Memory Card	12-5
Additional Functions	12-7
Troubleshooting	12-9

12

Data Folder & Memory Card



Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Large still images on Memory Card (images captured with save location set to DCIM)
Ring Songs-Tones*	Downloaded melodies and other sound files
S! Appli*	S! Applications
Widget*	Widgets
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books*	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Decoration Call*	Decoration Call files created on handset or obtained via mail
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

*Contains corresponding Yahoo! Keitai menu shortcut.

Checking Memory Status

☐ ➔ Data Folder ➔ ☐ ➔ Memory Status ➔ ☐ ➔ Phone Memory or Memory Card ➔ ☐

- Delete messages/files when memory is low. Handset performance may be affected when memory is full.



Opening Files


1 Data Folder



- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press \square .

2 Select folder

To open a sub folder, select it and press \square .

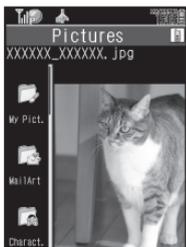

File List

3 Select file



- The content plays or appears.
- To return to file list, press \square .

Handling Open Images

- Press \square to enlarge, or press \square or \square to open next/previous ones. Press \square to rotate 90 degrees clockwise.

S! Mail Attachments

After \square , select file \rightarrow \square \rightarrow Send/ Blog \rightarrow \square \rightarrow As Message \rightarrow \square

- When a confirmation appears, follow onscreen instructions.


Copy Protected Files (≡) or (≡)

- Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.

1 In file list, select file

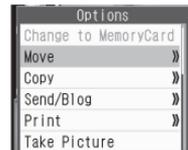

2 Slide Show

- Slide Show starts.

3 Slide Show stops

Changing Interval

In \square , \square \rightarrow Speed \rightarrow \square \rightarrow Select speed \rightarrow \square

- When Speed is set to *Manual*, press \square or \square to advance or reverse frame.

Advanced

- Switching file list view
- Changing image quality
- Changing Slide Show settings
- Showing Softkeys in image view
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.12-7)



Managing Files & Folders

Adding Folders

May be unavailable for some folders.


- 1 ➔ **Data Folder** ➔ ➔
Select folder ➔



File List

- 2 If **Download** is selected or folder is empty, skip ahead to 4.

- 3 **Manage Items** ➔

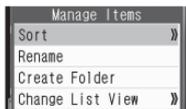

- 4 **Create Folder** ➔ ➔ Enter name ➔

Moving/Copying Files

Some files may not be moved/copied.

- 1 In file list, select file ➔
- 2 **Move or Copy** ➔ ➔
Phone or Memory Card ➔
 - For still images, select **Pictures** or **Mail Art** and press .
- 3 Select folder ➔
- 4 **Move here or Copy here** ➔

Selecting Multiple Files

- 1 In file list,
- 2 Select file ➔
 - Repeat 2 as needed. (To uncheck, select a file with and press .)

Hiding Folders

Restrict access to created folders.

Only handset folders can be hidden.

- 1 In file list, select folder ➔
- 2 **Set Secret** ➔ ➔ Enter Handset Code ➔

Accessing Secret Folders (Unlock Temporarily)

- [File List] ➔ **Unlock Temporarily** ➔ ➔ Enter Handset Code ➔

Canceling Secret

- Unlock Secret folders temporarily and select folder ➔ ➔ **Unset Secret** ➔ ➔ Enter Handset Code ➔

Advanced

- Renaming folders ● Opening file properties ● Renaming files ● Sorting files ● Deleting files & created folders ● Handling SVG files (P.12-8)



Using Memory Card

Use microSD™/microSDHC™ Memory Card (hereafter "Memory Card") to save and organize files for use on 932SH. Use recommended Memory Cards only. For details, see **P.15-23** "microSD™ Memory Card Compatibility."


Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never remove Memory Card or battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.


Inserting & Removing

Turn handset power off first.

1 Open cover

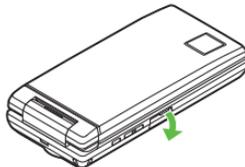


2 Insert card

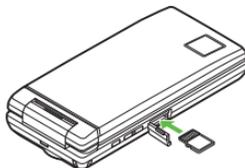


- With terminal side up, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.

3 Close cover

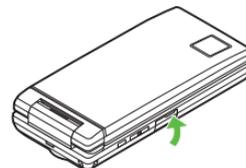

If Appears after Power On


- Memory Card may not be inserted properly; reinsert the card.
- #### Removing Memory Card
- Gently push in card and release it; card pops out. Pull card straight out gently.

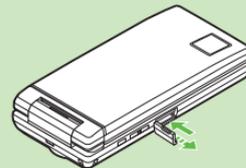

Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.

- 1  → **Settings** →  → 
Connectivity → **Memory Card** → 

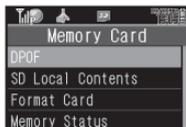

- 2 **Format Card** →  → **Yes**
 → 

- Offline Mode is set. Handset transmissions are suspended until format is complete.

- 3 **Enter Handset Code** → 



- 4 **Yes** → 
 • To cancel, choose **No** and press .

Precaution

- Never remove Memory Card or battery while formatting; may cause damage.

Opening Memory Card Files

- 1  → **Data Folder** → 
 2  → **Change to MemoryCard** → 



 appears

- Memory Card Data Folder opens.

- 3 **Select folder** → 

- 4 **Select file** → 

Advanced

-  ● Using HTML files on Memory Card (P.12-8)



File/Folder View Settings	
Switching file list view	<ul style="list-style-type: none"> ■ → Data Folder → ■ → Select folder → → Manage Items → ■ → Change List View → ■ → Select option → ■
Changing image quality	<ul style="list-style-type: none"> ■ → Data Folder → ■ → Select folder → ■ → Select file → ■ → → Switch Display (Picture Quality for Flash® files) → ■ → Select quality → ■
Changing Slide Show settings	<ul style="list-style-type: none"> → Data Folder → ■ → Select folder → ■ → Select file → → Slide Show → ■ → → See below
	<p>Playing Once</p> <p>Repeat → ■ → Off → ■</p>
	<p>Playing Music</p> <p>BGM Settings → ■ → Switch On/Off → ■ →</p> <p>On → ■</p>
	<p>Changing Music</p> <p>BGM Settings → ■ → Play Ring Tones → ■</p> <p>→ Select folder → ■ → Select file → ■</p>
Showing Softkeys in image view	<ul style="list-style-type: none"> ■ → Data Folder → ■ → Select folder → ■ → Select file → ■ → → SW GuideDisplay → ■ → On → ■

Using Files/Folders	
Using files as Wallpaper	<ul style="list-style-type: none"> ■ → Data Folder → ■ → Select folder → ■ → Select file → → Set as Wallpaper → ■ → Vertical or Horizontal → ■ → ■ <ul style="list-style-type: none"> • For images smaller or larger than Display, select an option and press ■.
Using files as ringtones	<ul style="list-style-type: none"> ■ → Data Folder → ■ → Select folder → ■ → Select file → → Set as Ringtone → ■ → Select item → ■ <ul style="list-style-type: none"> • If prompted, enter ring time and press ■. • If a confirmation appears, follow onscreen instructions.
Using files as ringvideos	<ul style="list-style-type: none"> ■ → Data Folder → ■ → Videos → ■ → Select file → → Set as Ring Video → ■ → Select item → ■ <ul style="list-style-type: none"> • If prompted, enter ring time and press ■.
Saving Phone Book entries	<ul style="list-style-type: none"> ■ → Data Folder → ■ → Select folder → ■ → Select file → → Save to Phone Book → ■ → As New Entry → ■ → Complete other fields → <ul style="list-style-type: none"> • To add to an existing entry, select As New Detail.
Activating mobile camera, etc. in corresponding folders	<ul style="list-style-type: none"> ■ → Data Folder → ■ → Select folder → ■ → → Take Picture, Record Video or Record Voice → ■



Managing Files/Folders

Renaming folders	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → Select folder → → <i>Manage Items</i> → ■ → <i>Rename</i> → ■ → Enter name → ■ <ul style="list-style-type: none"> • Assign different names to folders within a layer.
Opening file properties	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → Select file → → <i>Details</i> → ■
Renaming files	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → Select file → → <i>Manage Items</i> → ■ → <i>Rename</i> → ■ → Enter name → ■
Sorting files	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → → <i>Manage Items</i> → ■ → Sort → ■ → Select method → ■ <ul style="list-style-type: none"> • To reverse the order, sort by the same method again.
Deleting files & created folders	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → See below <p>Single Files</p> <ul style="list-style-type: none"> Select file → → <i>Delete</i> → ■ → Yes → ■ <p>Folder & Files Within</p> <ul style="list-style-type: none"> Select folder → → <i>Delete</i> → ■ → Enter Handset Code → ■ → Yes → ■

Handling SVG files

Line Scroll



Page Scroll

(Up), (Down), (Right), (Left)

Zoom

(Zoom out), (Zoom in)

Rotate

(Counterclockwise), (Clockwise)

Key Action Mode

Default View

Memory Card

Using HTML files on Memory Card

- → *Settings* → ■ → *Connectivity* →
- Memory Card* → ■ → *SD Local Contents* →
- → Select title → ■



Managing Files/Folders



Cannot copy files

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)



Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.



Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 241 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.



Cannot use some characters in file/folder names

- Single-byte Symbols \backslash , /, :, ;, ,, <, >, /, ?, * and " are not supported.



Infrared	13-2
Transferring Files via Infrared	13-3
IC Transmission	13-5
Transferring Files via IC Transmission	13-6
Bluetooth®	13-7
Transferring Files via Bluetooth®	13-8
Mass Storage	13-11
Connecting to PC	13-11

Backup	13-12
Basics	13-12
Backup & Restore	13-13
S! Addressbook Back-up (SAB) ...	13-14
About SAB	13-14
Backup & Restore	13-16
Additional Functions	13-17
Troubleshooting	13-20

13

Connectivity & File Backup



Infrared

Wirelessly transfer files between 932SH and compatible devices.

Transferable Files


Phone Book	Received Msg.
Calendar	Sent Messages
Tasks	Drafts
Notepad	Templates
Bookmarks	Data Folder

- Copy/forward protected files are not transferable.
- Some files may not be transferable; some settings may be lost, or files may not be saved properly. For details, see "Troubleshooting" at the end of this chapter.

Getting Started

Infrared Precautions

Align Infrared Ports of both devices.

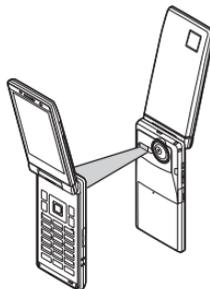

- Do not place objects between devices.
- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during infrared transmissions. Eyesight may be affected.

Transfer Options

One File Transfer	Transfer single files
All File Transfer	Transfer all files by function
IrSS Transfer	Exchange single image files with compatible devices at high speed

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

Authorization Code

- Four-digit code required for infrared transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)



Transferring Files via Infrared

Receiving Files

1 (Long)



 appears

- Infrared is activated.
- Handset receives files if sent within three minutes.
- Handset must be in Standby to accept connection requests.
- To cancel infrared, Long Press .

2 Connection request arrives



Request Window

3 Perform subsequent operations

- To cancel transfer, press .

Subsequent Operations

■ One File Transfer

Yes   Yes  

- If save location confirmation appears, select a location and press .

■ All File Transfer (Adding Files)

Yes   Enter Handset Code 

  Enter Authorization Code 

  As New Items  

■ All File Transfer (Overwriting Existing Files)

Yes   Enter Handset Code 

  Enter Authorization Code 

  Delete All & Save   Yes  

- For Phone Book, My Details except handset phone number is overwritten as well.

■ IrSS Transfer

Yes  

- Files are saved to Data Folder (Pictures).

Advanced

-   Activating Infrared via Main Menu (P.13-17)




Sending Files


One File Transfer

Example: Phone Book entry

- 1 → **Select entry** → → **Send Entry** →

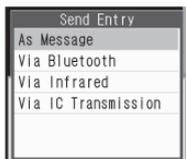


- 2 **Via Infrared** →

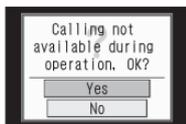

- 3 **Yes** → → **Transfer starts**
 - When finished, entry search window returns.

All File Transfer

- 1 → **Settings** → → → **Connectivity** → **Infrared** →
- 2 **Send All** →
- 3 **Yes** → → **Enter Handset Code** →

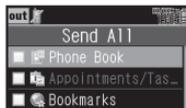

- 4 **Select item** → (/✓) → **Complete selection** →
- 5 **Enter Authorization Code** → → **Transfer starts** →

Sending Phone Book

- In 5, follow these steps to select whether to send Phone Book Pictures:
Yes or No →

Sending JPEG Images at High Speed

- 1 → **Data Folder** →
- 2 **Pictures or DCIM** →
 - For DCIM, select a folder and press .
- 3 **Select image** → (Long)



- 4 **Yes or No** → → **Transfer starts**
 - Images may be reduced automatically before transfer depending on the size.
 - When finished, file list returns.
 - Transfers are one-way; end even if files are not received.

Advanced

- Sending My Details
- Sending non-Phone Book files
- Sending images via IrSS Transfer without reducing size (P.13-17)

IC Transmission


Wirelessly transfer files between 932SH and compatible devices.

- For transferable files, see P.13-2.
- Cancel IC Card Lock beforehand.
- Disconnect Headphones, USB Cable and AC Charger beforehand.

Getting Started

IC Transmission Precautions

Align  logos of both devices.

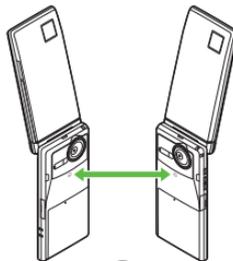

Align  logos

Keep  logos aligned during transfer.

Transfer Options

One File Transfer	Transfer single files
All File Transfer	Transfer all files by function

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

Authorization Code

- Four-digit code required for IC transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)

Advanced


-  Disabling one file reception (P.13-17)



Transferring Files via IC Transmission

Receiving Files

1 Connection request arrives

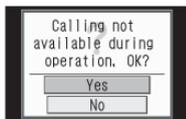

Request Window

- Handset must be in Standby to accept connection requests.

2 Perform subsequent operations

- To cancel transfer, press .

Subsequent Operations

One File Transfer

Yes   Yes  

If save location confirmation appears, select a location and press .

All File Transfer (Adding Files)

Yes   Enter Handset Code  
  Enter Authorization Code  
  As New Items  

All File Transfer (Overwriting Existing Files)

Yes   Enter Handset Code  
  Enter Authorization Code  
  Delete All & Save   Yes  
 


- For Phone Book, My Details except handset phone number is overwritten as well.

Sending Files


One File Transfer

Example: Phone Book entry

1 Select entry Send Entry

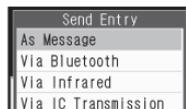

2 Via IC Transmission

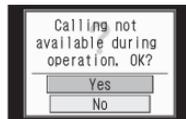

3 Yes Transfer starts

All File Transfer


1 Settings Connectivity IC Transmission



IC Transmission Menu

2 Send All

3 Yes Enter Handset Code

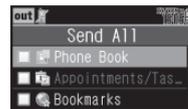

4 Select item Complete selection

5 Enter Authorization Code Transfer starts

Sending Phone Book

- In , follow these steps to select whether to send Phone Book Pictures: Yes or No 

Advanced

-   Sending My Details  Sending non-Phone Book files (P.13-17)



Bluetooth®

Wirelessly transfer files/data between 932SH and compatible devices (watches, handsfree devices, etc.).

- For transferable files, see **P.13-2**.
- 932SH supports simultaneous connection with two devices. (May be unavailable depending on the device type.)
- Bluetooth® connection may not be possible with some Bluetooth® devices.
 - Handset shall be connected to certified Bluetooth® devices that meet the specification standards developed by Bluetooth SIG.
 - Data transfers may fail depending on characteristics or specifications of the certified Bluetooth® devices.
 - Noise may interfere with wireless or handsfree conversations.
- TV audio is supported only on SCMS-T DRM scheme compliant Bluetooth® devices.

Getting Started

Bluetooth® Precautions

Check transmission range of your Bluetooth® device to use with handset properly.

Maximum transmission range for transfers between 932SH handsets is ten meters. (Bluetooth® connection/transfer rate may vary depending on conditions.)


Handsfree Device Precaution

- Handle call operations on the device in use.

Bluetooth® Watches

- Compatible Bluetooth® watches support these functions:
 - Time Correction
 - Alarm Notice
 - News Notice
 - Mail Notice
 - Remote Shutter
 - Mode Settings
 - Quick Silent
 - Caller ID Notice
 - Hold Calls
 - Operator Notice
- For details about functions/operations, see the Bluetooth® watch guide.

Bluetooth® Connection

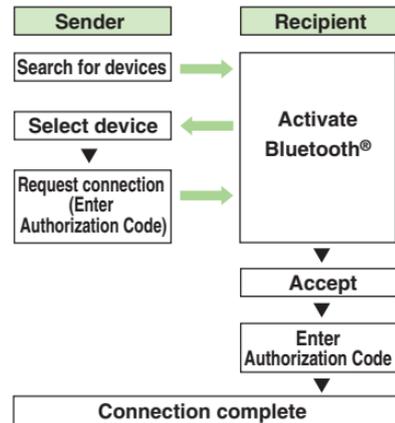

Authorization Code

- 4 to 16-digit code required for Bluetooth® connections. Pairing possible when codes match.
- For handsfree devices, enter specified Authorization Code.

Advanced

- Cloaking handset to avoid connection requests
- Setting idle time after which Bluetooth® is canceled
- Switching audio output to wireless device
- Changing Bluetooth® name for handset
- Talking on handsfree device
- Avoiding connection requests from Bluetooth®-compatible S! Applications in Standby, etc.
- Opening Bluetooth®-related handset properties
- Activating Bluetooth® via Main Menu (**P.13-17**)
- Synchronizing Bluetooth® watch with handset
- Enabling/disabling Bluetooth® watch responses (**P.13-18**)



Transferring Files via Bluetooth®

Activating Bluetooth®

1 [] (Long)



[] appears

- Bluetooth® is activated.
- Handset must be in Standby to accept connection requests from unpaired handsfree devices, etc.
- To cancel Bluetooth®, Long Press [] .

Connecting to Bluetooth® Devices

Device Search & Pairing

Activate Bluetooth® on devices to be paired with.

- 1 [] ➔ **Settings** ➔ [] ➔ []
Connectivity ➔ **Bluetooth**
 ➔ []



Bluetooth Menu

- 2 **Add Device** ➔ []



- To disable confirmation, press [] before 3.

3 []

- Found devices are listed after search.
- Press [] to cancel.

4 **Select device** ➔ []

If a confirmation appears, choose **Yes** and press [] .

5 **Enter the same Authorization Code for handset and the other device** ➔ [] ➔ **Pairing complete**

- On the other device, complete code entry within 30 seconds.
- Authorization Codes are not necessary for paired devices.

Advanced

- Activating Bluetooth® via Main Menu
- Editing Paired Device list
- Disconnecting devices
- Connecting to devices supporting handsfree telephony and audio output by service
- Specifying a preferred device for wireless connection (P.13-17 - 13-18)



Connecting to Paired Devices

1 In Bluetooth menu, *Paired Devices* ➔



Paired Device List

2 Select device ➔

If handset is already connected to another device, disconnection confirmation may appear; choose **Yes** and press .

- The device is connected and (preferred) appears.

Accepting Connection Requests

Follow these steps to accept connection requests from unpaired devices:

1 Connection request arrives



Request Window

2 Yes ➔



3 Enter the same Authorization Code as sender's ➔

- Complete code entry within 30 seconds.



Transferring Files

Follow the steps below to exchange files with paired devices.

- For transferable files, see **P.13-2**.
- When requested, enter Authorization Code.

Receiving Files

1 Connection request arrives



2 Perform subsequent operations

- To cancel transfer, press .

Subsequent Operations

● One File Transfer

Yes    Yes 

- If save location confirmation appears, select a location and press .

● All File Transfer (Adding Files)

Yes    Enter Handset Code
   *As New Items* 

● All File Transfer (Overwriting Existing Files)


Yes    Enter Handset Code
   *Delete All & Save* 
 *Yes* 

Sending Files

■ One File Transfer

Example: Phone Book entry

1   *Select entry*   
Send Entry 

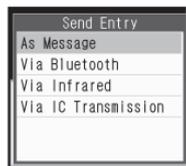

2 *Via Bluetooth* 

3 *Select device* 


4 *Yes*    *Transfer starts*
 • When finished, entry search window returns.

All File Transfer

1 *In Bluetooth menu, Send All*


2 *Select device*   *Yes*

3   *Enter Handset Code*

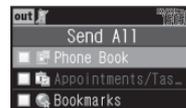4 *Select item*  (/ ) 
Complete selection    
Transfer starts 

Sending Phone Book

- In , Picture transfer confirmation appears; follow these steps:
Yes or No 

Advanced

-  ● Sending My Details ● Sending non-Phone Book files (P.13-18)



Connecting to PC


Accessing Memory Card from PC

Connect handset to a PC via USB Cable to access Memory Card from the PC without removing the card from handset.

- USB Cable may be purchased separately.
- If handset is connected to a PC via USB Cable, disconnect it first.

1  ➔ **Settings** ➔  ➔ 
Connectivity ➔ **USB Mode**
➔ 

2 **Mass Storage** ➔ 

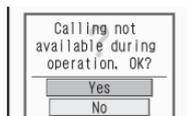

3 **Yes** ➔ 

4 **Connect handset to a PC via USB Cable**

- Use PC to access Memory Card.

5  ➔ **Yes** ➔  ➔ 
Connection ends

- Safely remove handset (recognized as removable hardware device) on the PC, then disconnect USB Cable.

Utility Software (Japanese)

For more PC-related operations, download Utility Software (including USB Cable driver) from the following URL.

- **Utility Software**
<http://k-tai.sharp.co.jp/download/tools/utility/>

Mobile Data Communication Fees

- Using the Internet by connecting handset to PC/PDA via USB Cable or Bluetooth® may incur high charges as large-volume packet transmissions tend to occur in a short period of time.



Basics

Back up information to Memory Card, and restore to handset as needed.

Supported Items

Select items to back up, or transfer all at once.

Items with * are selectable at once via **Check Selection** in Options menu.

Phone Book*	Drafts*
Calendar*	Templates
Tasks*	Contents Keys
Bookmarks*	Data Folder
Notepad*	S! Town
Received Msg.*	Mail Groups
Sent Messages*	User Dictionary

Precautions

- Not available if battery is low.
- Some items may not be transferable; some settings may be lost, or files may not transfer properly. For details, see "Troubleshooting" at the end of this chapter.

Transferring All Items

- Use blank Memory Card for **Backup All Items**. Do not use the card to save other files after **Backup All Items**; backed up content may not be restored properly.

Contents Keys

- Moving Keys to Memory Card creates a special file. Performing Backup again on the same Memory Card overwrites that file. Perform Restore beforehand.




Backup & Restore

Handset to Memory Card

Follow these steps to back up selected items at once:

- 1 → **Settings** → → → **Connectivity** → **Backup/Restore** →

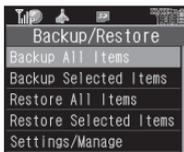

Backup/Restore Menu

- 2 **Backup Selected Items** → → **Enter Handset Code** →
- 3 **Yes** →
- 4 **Select item** → (/✓) → **Complete selection**
 - For *Phone Book*, confirmation appears. Choose **Yes** or **No** and press .

- 5 → **Yes** →
 - To cancel, press .

- 6 **Backup complete** → →

Selecting Multiple Items at Once

In 4, → **Select option** → →
From 5

Selecting/Canceling All Items

In 4, → **Check All or Uncheck All** →

Memory Card to Handset

Follow these steps to restore selected items:

Restoring backed up content to handset overwrites current handset content (with the exception of Contents Keys).

- 1 **In Backup/Restore menu, Restore Selected Items** → → **Enter Handset Code** →
- 2 **Yes** →
- 3 **Select item** → (/✓) → **Complete selection**

- 4
 - If no file list appears, skip ahead to 7.

- 5 **Select file** →
 - Repeat 5 to complete selection.

- 6

- 7 **Yes** →
 - To cancel, press .

- 8 **Restore complete** → →

Selecting Multiple Items at Once

In 3, → **Select option** → →
From 4

Selecting/Canceling All Items

In 3, → **Check All or Uncheck All** →

Changing Restoration Method

After 3, select item → → **Change to Add Mode or Chg. to Overwrite Mode** → → From 4


Advanced

- Backing up all items ● Encoding data for backup ● Restoring all items ● Deleting backup files (P.13-19)



About SAB

Back up Phone Book content in SAB; add Phone Book changes to SAB anytime. Edit SAB online via PC; add SAB changes to Phone Book anytime. Restore lost or altered Phone Book content from SAB.

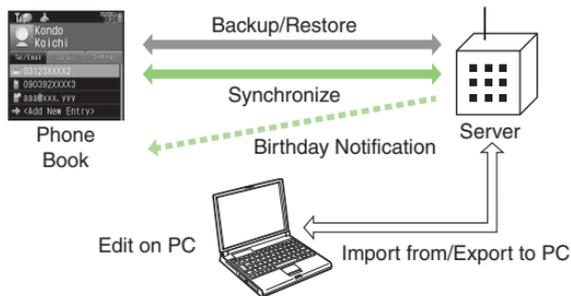

- SAB requires a separate contract and basic monthly fee.
- Use SAB to add Phone Book content to a new compatible SoftBank handset; some conditions apply (P.13-15).
- Use a PC to edit SAB online.
- For more about SAB, see the corresponding Website (P.15-23).
- Sync commands (Backup, Restore and Synchronize) all incur transmission fees.

SAB Sync Commands & Features

Backup/ Restore	Backup	Export Phone Book content to SAB ¹
	Restore	Import SAB content to Phone Book ²
Synchronize	Synchronize	Synchronize Phone Book and SAB ³
	Sync from Client	Add Phone Book changes to SAB ⁴
	Sync from Server	Add SAB changes to Phone Book ⁵
Edit on PC	Import from PC	Upload PC address book info to SAB
	Export to PC	Export SAB content to PC address book
Send Notice ⁶	Birthday Notification	SAB sends reminders via SMS to handset
	Email Address Notification ⁷	Send new handset mail address to specified addresses
	"Disaster Message Board" Message Notification ⁸	Send emergency message board update to specified addresses
Spam Filter	Tomodachi Email Filter ⁹	Always accept messages from mail addresses saved in SAB

¹ Any existing SAB content is deleted.

² Any existing Phone Book content is deleted.

³ If the same entry item is edited in Phone Book and SAB, SAB content is referenced.

⁴ Unrelated SAB changes remain.

⁵ Unrelated Phone Book changes remain.

⁶ Access this function via handset or a PC.

⁷ Backup resets notification setting; handset address is sent to all addresses.

⁸ Backup resets notification setting; updates are not sent to any address.

⁹ Export Phone Book content to SAB beforehand.



Service Usage Outline

Complete Contract

Visit a SoftBank Shop, dial 157 from a SoftBank handset for SoftBank Mobile Customer Center, General Information or access My SoftBank (Japanese) via Yahoo! Keitai.



Receive User ID & Password

After subscription, user ID and password arrive via SMS.

- User ID and password are required to use SAB via a PC.



Use SAB

Export Phone Book content to SAB.

Precautions

■ Unsynchronizable Items

SAB restoration cancels these Phone Book settings:

- Picture, Tone/Video, Light, Vibration

■ Unintentional Phone Book or SAB Content Deletion

- When no Phone Book content exists, selecting *Synchronize*, *Sync from Client* or *Backup* deletes all SAB content.
- When no SAB content exists, selecting *Synchronize*, *Sync from Server* or *Restore* deletes all Phone Book content.

■ Phone Book ⇄ SAB Content Capacity Disparities

When the number of savable items varies between Phone Book and SAB entries, Synchronization reflects lower limit.

■ Contract Termination

SAB content is deleted upon contract termination.

■ SAB Transfers to New Handsets

- **SAB-Compatible 3G Handsets**
SAB remains as last saved and is fully accessible.
- **Other 3G Handsets**
SAB remains as last saved and is accessible via PC.
- **V3/V4/V5/V6/V8 Series**
Service contract is terminated and SAB content is deleted.

■ When Double Number is Active

Regardless of usage mode setting, all Phone Book content is backed up.



Backup & Restore

Backup (Phone Book → SAB)

Any existing SAB content is deleted.

- 1 ➔ **Phone** ➔ ➔ **S! Addressbook Backup** ➔



S! Addressbook Menu

- 2 **Start Sync** ➔ ➔ **Backup** ➔

- 3 **Yes** ➔ ➔ **Enter Handset Code** ➔

- Backup starts; when completed, details appear.

- 4 ➔ **Backup complete**

Canceling Backup

➔ **Yes** ➔

Restore (SAB → Phone Book)

Any existing Phone Book content is deleted.

- 1 In S! Addressbook menu, **Start Sync** ➔ ➔ **Restore** ➔

- 2 **Yes** ➔ ➔ **Enter Handset Code** ➔

- Restore starts; when completed, details appear.

- 3 ➔ **Restore complete**

Canceling Restore

➔ **Yes** ➔

Synchronizing Phone Book

Synchronize Options:

Synchronize	Synchronize Phone Book and SAB
Sync from Client	Add Phone Book changes to SAB
Sync from Server	Add SAB changes to Phone Book

If this is your first use of SAB (new handset), Synchronization is performed via Synchronize regardless of selection.

- 1 In S! Addressbook menu, **Start Sync** ➔ ➔ **Select option** ➔

- 2 **Yes** ➔ ➔ **Enter Handset Code** ➔

- Synchronization starts; when completed, details appear.

- 3 ➔ **Synchronization complete**

Canceling Synchronization

➔ **Yes** ➔

Advanced

- Confirming user ID & password
- Auto synchronization
- Opening log (P.13-19)



Infrared	
Activating Infrared via Main Menu	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Infrared → ■ → Switch On/Off → ■ → On(3 min.) → ■
Sending My Details	<ul style="list-style-type: none"> ■ → ⓘ → ☰ Send My Card → ■ → Via Infrared → ■ → Yes → ■ → Transfer starts
Sending non-Phone Book files	<ul style="list-style-type: none"> In file list, select file → ☰ Send (or Send/Blog) → ■ → Via Infrared → ■ → Yes → ■ → Transfer starts
Sending images via IrSS Transfer without reducing size	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Infrared → ■ → IrSS Key Setting → ■ → Send via IrSS → ■

IC Transmission	
Disabling one file reception	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → IC Transmission → ■ → Recv. Forwarded → ■ → Off(Disabled) → ■
Sending My Details	<ul style="list-style-type: none"> ■ → ⓘ → ☰ Send My Card → ■ → Via IC Transmission → ■ → Yes → ■ → Transfer starts
Sending non-Phone Book files	<ul style="list-style-type: none"> In file list, select file → ☰ Send (or Send/Blog) → ■ → Via IC Transmission → ■ → Yes → ■ → Transfer starts

Bluetooth®	
General	
Cloaking handset to avoid connection requests	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Bluetooth → ■ → My Device Settings → ■ → Visibility → ■ → Hide My Phone → ■
Setting idle time after which Bluetooth® is canceled	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Bluetooth → ■ → My Device Settings → ■ → Bluetooth Timeout → ■ → Select time → ■
Switching audio output to wireless device	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Bluetooth → ■ → My Device Settings → ■ → Sound Output → ■ → Bluetooth Device → ■ • Bluetooth Device is set automatically when connection is made from wireless Headphones.
Changing Bluetooth® name for handset	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Bluetooth → ■ → My Device Settings → ■ → Device Name → ■ → Enter name → ■
Talking on handsfree device	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Bluetooth → ■ → My Device Settings → ■ → Handsfree Setting → ■ → Handsfree Mode → ■
Avoiding connection requests from Bluetooth®-compatible S! Applications in Standby, etc.	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Bluetooth → ■ → My Device Settings → ■ → S! Appli Request → ■ → Off → ■
Opening Bluetooth®-related handset properties	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Bluetooth → ■ → My Device Details → ■ • Press  to view service details.
Activating Bluetooth® via Main Menu	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Bluetooth → ■ → Switch On/Off → ■ → On → ■



Bluetooth® Watches

Synchronizing Bluetooth® watch with handset	<p> Start Here → Settings → Connectivity → Bluetooth → Setting Watch → Set BT-Watch Time → Yes </p> <ul style="list-style-type: none"> Connect handset to a Bluetooth® watch beforehand.
Enabling/disabling Bluetooth® watch responses	<p> Settings → Connectivity → Bluetooth → Setting Watch → Notification → Select item → Permit or Prohibit </p> <ul style="list-style-type: none"> Register a Bluetooth® watch beforehand.

Paired Devices

Editing Paired Device list	<p> Start Here → Settings → Connectivity → Bluetooth → Paired Devices → Select device → See below </p> <p>Renaming Paired Devices</p> <p>Change Name → Enter name</p> <p>Deleting Paired Devices</p> <p>Delete → Yes</p> <ul style="list-style-type: none"> To delete a device connected to handset, choose Yes and press OK.
	<p> Settings → Connectivity → Bluetooth → Paired Devices → Select connected device </p>
	<p> Settings → Connectivity → Bluetooth → Paired Devices → Select device → Select Service → Handsfree function or Audio function </p>
Disconnecting devices	<p> Settings → Connectivity → Bluetooth → Paired Devices → Select connected device </p>
Connecting to devices supporting handsfree telephony and audio output by service	<p> Settings → Connectivity → Bluetooth → Paired Devices → Select device → Select Service → Handsfree function or Audio function </p>

Specifying a preferred device for wireless connection	<p> Start Here → Settings → Connectivity → Bluetooth → Paired Devices → Select device → Set to Prior Connect → See below </p> <p>For Handsfree Telephony</p> <p>Handsfree On</p> <ul style="list-style-type: none"> For Handsfree On, specified device reconnects to handset when placing/receiving calls. <p>For Audio Output</p> <p>Audio On</p> <ul style="list-style-type: none"> For Audio On, Media Player/TV audio output is redirected to specified device automatically when Sound Output is set to Bluetooth Device.

Sending Files

Sending My Details	<p> Send My Card → Via Bluetooth → Select device → Yes → Transfer starts </p>
Sending non-Phone Book files	<p> In file list, select file → Send (or Send/Blog) → Via Bluetooth → Select device → Yes → Transfer starts </p>



Backup

Backup & Restore

Backing up all items	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Backup/Restore → ■ → Backup All Items → ■ → Enter Handset Code → ■ → Yes → ■ → Yes → ■ → Backup complete → ■ → ■
Encoding data for backup	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Backup/Restore → ■ → Settings/Manage → ■ → Encode Settings → ■ → Select item → ■ → On → ■ • Available for Phone Book, Messaging folders, Calendar and Tasks.
Restoring all items	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Backup/Restore → ■ → Restore All Items → ■ → Enter Handset Code → ■ → Yes → ■ → Yes → ■ → Restore complete → ■ → ■
Backup Files	
Deleting backup files	<ul style="list-style-type: none"> ■ → Settings → ■ → ☰ Connectivity → Backup/Restore → ■ → Settings/Manage → ■ → File Management → ■ → Select item → ■ → Select file → ■ (☐/☑) → Complete selection → ▾ → Yes → ■

S! Addressbook Back-up

Confirming user ID & password	<ul style="list-style-type: none"> ▾ → <i>メニューリスト</i> → ■ → My SoftBank → ■ → English → ■ → Password confirmation for S! Address Book → ■ → Follow onscreen instructions
Auto synchronization	<ul style="list-style-type: none"> <small>(Start Here)</small> → ■ → Phone → ■ → S! Addressbook Backup → ■ → Set Auto Sync → ■ → Enter Handset Code → ■ → See below Activating Set On/Off → ■ → On → ■
	<ul style="list-style-type: none"> Changing Auto Sync Frequency Set On/Off → ■ → On → ■ → Set Frequency → ■ → Select frequency → ■ → Enter/select date/time/day of the week → ■ • For <i>After Editing Ph.Book(10 min.)</i>, omit steps for date, time, etc.
	<ul style="list-style-type: none"> Changing Auto Sync Command Set On/Off → ■ → On → ■ → Set Sync Mode → ■ → Select command → ■
Opening log	<ul style="list-style-type: none"> ■ → Phone → ■ → S! Addressbook Backup → ■ → Sync History → ■ → Select record → ■



File Transfer

? Some files are not received

- If storage limit is reached during transfers, remaining files will not be received.

? Cannot receive/accept connection requests even when Infrared/Bluetooth® is On

- Handset may not be in Standby.
- Keypad Lock/Function Lock may be active.
- Software Update may be in progress.

? Phone Book settings are lost

- One file transfer resets these settings:
 - Category, Tone/Video, Light, Vibration, Secret
- Picture setting may be lost depending on image; send the image separately and reassign it.

? Calendar/Tasks settings are lost

- One file transfer resets these settings:
 - Alarm Tone/Video, Secret, S! Friend's Status

? Bookmarks are not saved properly

- Large Bookmarks may not be received correctly.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

? Messages are not saved properly on handset

- Messages may not be received depending on the size.
- Messages received via One File Transfer are saved to Other Documents folder and cannot be used as messages.
- Sky Mail may be received as S! Mail when transferred from other SoftBank handsets via All File Transfer.
- In All File Transfers, overwriting messaging folders deletes sort keys.

? Messages are not saved properly on recipient devices

- Mail Notices are saved as messages, invalidating complete message retrieval.
- When sending messages to other handset models via All File Transfer, Spam Folder messages may be saved to the incoming message folder.
- When sending Draft messages to other handset models via All File Transfer, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

? Cannot find files in DCIM folder

- Received files in DCIM folder are saved to Pictures folder.

Infrared

? Infrared transfer fails

- Infrared Port may be obstructed by dust, etc.; clean with a soft cloth.
- Transfers may fail in direct sunlight, under fluorescent lighting or near infrared equipment.



Backup & Restore

? Backup fails

- Check handset/Memory Card memory; backup may fail if the memory is low.

? Some files are not restored

- If storage limit is reached during Restore, remaining files will not be restored.

? Cannot use backup files on other SoftBank handsets or PCs

- Some backup files may not be usable on other SoftBank handsets or PCs.

? Cannot open backup files

- Some backup files may open only after being restored to handset.

? Phone Book settings are lost

- Picture setting may be lost depending on image; send the image separately and reassign it.

? Messages are not saved properly

- Transfer may delete sort keys.
- Mail Notices are restored as messages, invalidating complete message retrieval.

? Bookmarks are not saved properly

- Yahoo! Keitai, Streaming and PC Site Browser Bookmarks are all backed up as a single file.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

■ Exporting Backed Up Data to Other SoftBank Handsets

? Messages are not saved properly

- If spam filter is available on recipient handset, Spam Folder messages are saved in spam folder regardless of the setting. (If unavailable, they are saved as normal received messages.)
- When restoring Draft messages, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

■ Importing Data Backed Up on Other SoftBank Handsets

? Messages are not saved properly

- Messages may not be restored depending on the size.
- Sky Mail may be restored as S! Mail.



Date & Time	14-2
Clock View/Settings	14-2
Display & Illumination	14-3
Language.....	14-3
Image & Text.....	14-3
Display & Key Illumination	14-3
External Display.....	14-4
Standby Display.....	14-4
Key Illumination	14-4

Ringtones & Sounds	14-5
Handset Response.....	14-5
System Sound.....	14-5
Additional Sound Settings	14-5
Connectivity	14-6
Network	14-6
IP Service	14-6
Reset.....	14-7
Restoring Default Settings.....	14-7

14

Handset Customization



Date & Time Settings

Clock View/Settings

[Start Here](#)   **Settings**   In Phone menu, **Date & Time**  

Setting the date and time	Set Date/Time   Enter the year  Enter the month  Enter the day  Enter the time 
Correcting Clock manually	Time Correction   Manual   Yes   Yes 
Disabling auto Clock correction	Time Correction   Auto Corr. Setting   Off 
Setting auto Clock correction timing	Time Correction   Auto Corr. Setting   On   Select item   (<input type="checkbox"/> /✓)   
Activating Daylight Saving	Daylight Saving   On 
Changing Time Zone	Set Time Zone    Select area 
Adding custom time zone	Set Time Zone    Enter city name    + or -   Enter time difference 
Changing time format to 12 hour	Time Format   12 Hour 
Changing date format	Date Format   Select option 
Starting the Calendar week on Monday	Calendar Format   Monday-Sunday 



Display & Illumination Settings 1

Language

[Start Here](#) **Settings** **Phone menu**

Switching interface between Japanese and English

Language or 言語選択 **English or 日本語**

Image & Text

[Start Here](#) **Settings** **In Phone menu, Display**

Showing preloaded images for incoming calls, etc.

System Graphics **Select item** **Preset Animation (or Pattern 1 to Pattern 3)**

Showing Data Folder images for incoming calls, etc.

System Graphics **Select item** **Select folder** **Select image** **Specify display area**

• Some images may be usable without specifying display area.

Showing Customized Screen for incoming calls, etc.

System Graphics **Select item** **Customized Screen**

• Not available for **Power On** or **Power Off**.

Selecting image enhancement option for Standby and video playback

Vivid Mode **Select option**

Changing font of numbers entered in Standby

Dial Number **Select pattern**

Showing a message each time handset is turned on

Greeting Message **Edit Message** **Enter message** **Switch On/Off** **On**

- When using Double Number in Dual Mode, press in System Graphics menu to switch modes.

Display & Key Illumination

[Start Here](#) **Settings** **In Phone menu, Display**

Disabling display transition effects

Display Effects **Off**

Changing Display/Keypad Backlight illumination time

Backlight **Time Out** **Select time**

Changing Display Brightness

Backlight **Brightness** **Adjust level**

Canceling/activating Light Sensor

Backlight **Brightness**

Changing inactivity time after which Display turns off

Display Saving **Select period**



Display & Illumination Settings 2

External Display

[Start Here](#) [Settings](#) [In Phone menu, Display](#) [External Display](#)

Changing inactivity time after which External Display turns off	<i>Duration</i> Select time
Hiding new received messages	<i>Messages</i> Not Display
Hiding caller info	<i>Caller Display</i> Off
Showing Pedometer	<i>Display Pedometer</i> Select item <ul style="list-style-type: none"> • Activate External Display Backlight and press . • Some items do not appear if body information entry is incomplete.
Changing Clock view	<i>Display Date&Time</i> Select type
Changing Clock font	<i>Clock Type</i> Select pattern

Standby Display

[Start Here](#) [Settings](#) [In Phone menu, Display](#) [Standby Display](#)

Changing Clock/Calendar	<i>Clock/Calendar</i> Select type
Showing Network service provider name in Standby	<i>Show Operator Name</i> On
Hiding Pedometer in Standby	<i>Pedometer</i> Off

Key Illumination

[Start Here](#) [Settings](#) [Phone menu](#)

Disabling Keypad light illumination	<i>Set Key Light</i> Off
-------------------------------------	--



🔊 Ringtone & Sound Settings

Handset Response

[Start Here](#) ▶ ▶ **Settings** ▶ ▶ In Phone menu, **Sounds & Alerts** ▶ ▶

Changing ringtone volume	Volume ▶ ▶ Select item ▶ ▶ Adjust level ▶ ▶
Selecting illumination option for incoming transmissions	Event Light ▶ ▶ Select item ▶ ▶ Switch On/Off ▶ ▶ On, Link to Sound or Off ▶ ▶
Setting illumination color for incoming transmissions	Event Light ▶ ▶ Select item ▶ ▶ Light Color ▶ ▶ Select color ▶ ▶
Enabling/disabling illumination for missed incoming transmissions	Status Light ▶ ▶ Select item ▶ ▶ Switch On/Off ▶ ▶ On or Off ▶ ▶
Setting illumination color for missed incoming transmissions	Status Light ▶ ▶ Select item ▶ ▶ Light Color ▶ ▶ Select color ▶ ▶
Answering calls with other keys	Any Key Answer ▶ ▶ On ▶ ▶ • Use [0] - [9] , [*] , [#] , [**0] , [*#] , [*#0] or [*#] in addition to [*] .

- When using Double Number in Dual Mode, press **[*]** in Volume menu or Event Light menu to switch modes.

System Sound

[Start Here](#) ▶ ▶ **Settings** ▶ ▶ In Phone menu, **Sounds & Alerts** ▶ ▶

Enabling Keypad Tones	System Sounds ▶ ▶ Keypad Tones ▶ ▶ Select tone ▶ ▶
Changing S! Circle Talk tone	System Sounds ▶ ▶ S! Circle Talk ▶ ▶ Select tone ▶ ▶
Changing other System Sounds	System Sounds ▶ ▶ Select item ▶ ▶ Tone ▶ ▶ Select folder ▶ ▶ ▶ Select tone/file ▶ ▶ • For files with limited usage period, choose Yes and press [*] .
Disabling System Sounds	System Sounds ▶ ▶ Select item ▶ ▶ Tone ▶ ▶ Off ▶ ▶ • Not available for S! Circle Talk .
Changing System Sound duration	System Sounds ▶ ▶ Select item ▶ ▶ Duration ▶ ▶ Select/enter time ▶ ▶ • Not available for Keypad Tones or S! Circle Talk .
Changing System Sound volume	Volume ▶ ▶ General Volume ▶ ▶ Adjust level ▶ ▶

Additional Sound Settings

[Start Here](#) ▶ ▶ **Settings** ▶ ▶ Phone menu

Disabling Speakers when using Headphones	Ringer Output ▶ ▶ Earphone ▶ ▶
Selecting Speaker surround option	Sounds & Alerts ▶ ▶ Surround ▶ ▶ Select item ▶ ▶



Connectivity Settings

Network	
	Start Here [] ➔ Settings ➔ [] ➔ Network
Selecting a Network manually	Select Network ➔ [] ➔ Manual ➔ [] ➔ Select Network ➔ []
Adding preferred Networks	Select Network ➔ [] ➔ Set Preferred ➔ [] ➔ Select location ➔ [] ➔ Insert ➔ [] ➔ Select Network ➔ []
Adding preferred Networks to the end	Select Network ➔ [] ➔ Set Preferred ➔ [] ➔ [] ➔ Add to End ➔ [] ➔ Select Network ➔ []
Deleting preferred Networks	Select Network ➔ [] ➔ Set Preferred ➔ [] ➔ Select Network ➔ [] ➔ Delete ➔ []
Adding Networks	Select Network ➔ [] ➔ Add New Network ➔ [] ➔ Add ➔ [] ➔ Enter country code ➔ [] ➔ Enter Network code ➔ [] ➔ Enter name ➔ [] ➔ Select NW Type ➔ [] ➔ Select type ➔ [] <ul style="list-style-type: none"> After selecting Add New Network and pressing [], Network list appears if Network has already been added. To add more, press [] again and proceed.
Editing Networks	Select Network ➔ [] ➔ Add New Network ➔ [] ➔ Select Network ➔ [] ➔ Change ➔ [] ➔ Edit in the same manner as adding Networks ➔ []
Deleting Networks	Select Network ➔ [] ➔ Add New Network ➔ [] ➔ Select Network ➔ [] ➔ Delete ➔ []
Switching Network services manually	Select Service ➔ [] ➔ Manual ➔ [] ➔ Select service ➔ []
Retrieving Network Information	Retrieve NW Info ➔ [] ➔ Yes ➔ []
Checking Network status	Network Info ➔ []
Editing access point names for communication with external devices	External Device ➔ [] ➔ Select name ➔ [] ➔ Edit ➔ []
Clearing access point names for communication with external devices	External Device ➔ [] ➔ Reset ➔ [] ➔ Enter Handset Code ➔ [] ➔ Yes ➔ []

IP Service	
	Start Here [] ➔ Settings ➔ [] ➔ In Phone menu, Locks ➔ []
Disabling IP Service	IP Service Setting ➔ [] ➔ Off ➔ [] ➔ Enter Handset Code ➔ [] <ul style="list-style-type: none"> When Off, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.



Reset Settings

Restoring Default Settings

[Start Here](#) **Settings** **In Phone menu, Master Reset**

Restoring default handset settings	<p>Reset Settings Enter Handset Code Yes Yes </p> <ul style="list-style-type: none"> • Some default settings may not be restored.
Clearing all Phone Book entries, Data Folder files, etc.	<p>Reset All Enter Handset Code Yes Yes </p> <ul style="list-style-type: none"> • Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) • Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. • Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.



USIM Card	15-2
About USIM Card	15-2
USIM Card Installation.....	15-3
Battery	15-4
Battery Installation.....	15-4
Software Update	15-5
Troubleshooting	15-6
Key Assignments	15-8
Pager Codes	15-10
Pager Code List.....	15-10

Character Codes	15-11
Character Code List	15-11
Weather Indicators	15-17
Weather Indicator List	15-17
Specifications	15-18
Memory Card Structure & Contents ...	15-24
Menu List	15-25
Index	15-32
Warranty & Service	15-40
Customer Service	15-41

15


Appendix



About USIM Card

USIM Card is an IC card containing customer and authentication information, including the handset number. USIM Card must be inserted to use this handset. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

Precautions

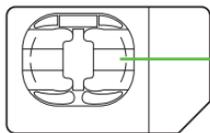

IC Chip

- Do not insert USIM Card into any other IC card device. SoftBank is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Use a dry, soft cloth to clean the USIM Card.
- Do not attach labels to USIM Card. Malfunction may result.

Important

- USIM Card is the property of SoftBank.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P.15-41).

USIM PINs

There are two Security Codes for USIM Card; both are **9999** by default.

PIN	Security Code to prevent unauthorized use of handset
PIN2	Required to clear Call Costs and to set Max Cost, etc.

PIN Lock

- Entering incorrect PIN three consecutive times activates PIN Lock or PIN2 Lock, limiting handset use.

Canceling PIN Lock

- Contact SoftBank Mobile Customer Center, General Information (P.15-41) for your Personal Unblocking Key (PUK Code) and follow these steps:

Enter PUK Code ➔ ➔ **Enter new PIN/PIN2** ➔ ➔ **Re-enter new PIN/PIN2** ➔

- Write down PUK code.

PUK Lock

- Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. Contact SoftBank Mobile Customer Center, General Information (P.15-41) for recovery.




USIM Card Installation

- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

Inserting


- 1 Remove battery (P.15-4)
- 2 Slide in USIM Card with IC chip facing down

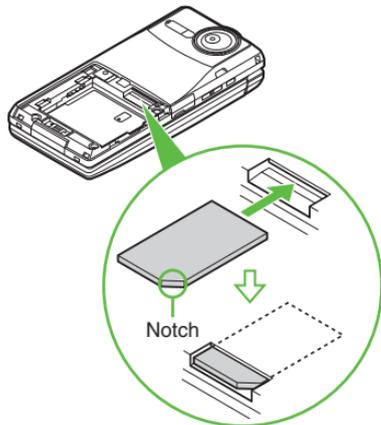

- Reinstall battery (P.15-4).

Removing

- 1 Remove battery
- 2 Gently slide out USIM Card as shown

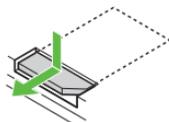

- Reinstall battery.
- Take care not to lose removed USIM Card.

After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

- Some downloaded files may be inaccessible. In addition, S! Applications, BookSurfing®, S! Town and Near Chat may be disabled after USIM Card replacement.



Battery Installation

About Battery

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.

Lithium-ion Battery

- This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.



Li-ion00

- To recycle a used lithium-ion battery, take it to any shop displaying the symbol shown above.
- To avoid fire or electric shock, do not short-circuit or disassemble battery.


Inserting & Removing

1 Remove cover




- Press and slide as shown.

2 Insert battery

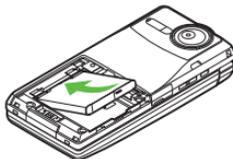

- With logo side up, fit tabs into battery cavity slots.


3 Close cover

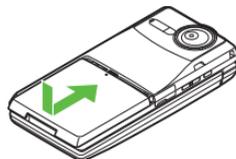

- Position and slide the cover gently as shown until it stops.

Removing

- Turn handset power off and lift battery as shown.

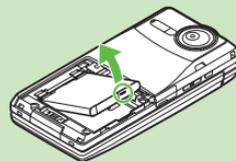

Software Update

Check for firmware updates and download as required.

Precautions


- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand.
- Update will not start if other functions are in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk.
- Always back up important information. SoftBank cannot be held liable for damages from lost information, etc.

Updating Software

Packet transmission fees do not apply to updates (including checking, downloading and rewriting).

1 ➔ **Settings** ➔ ➔ **In Phone menu, Software Update** ➔

2 **Software Update** ➔

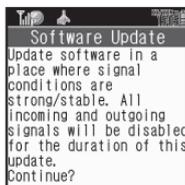

- Follow onscreen instructions.

Setting Update Period (Japanese)

In , **Update Period** ➔

- Follow onscreen instructions.

Update Result

In , **Update Result** ➔

Scheduled Update

Confirmation appears at scheduled update time. Press or wait a while for update to start.

When Updated

Update success notification appears and handset reboots.

After reboot, completion message appears and Information window opens.

Update Result

While Information window appears, **Update Result** ➔

Reboot Failure

- If handset does not return to Standby after update, turn power off, reinsert battery, then restart it. If it still does not restart, contact SoftBank Mobile Customer Center, Customer Assistance (P.15-41).



Troubleshooting

■ General

Problem	Possible Cause	Solution
Handset won't turn on	Was  pressed long enough?	Press  longer.
	Battery may need to be charged or replaced.	Charge battery or install a charged battery.
	Battery may not be properly installed.	Install battery properly (P.15-4).
Handset won't respond	Is Switch On/Off in PIN Entry On ?	If On , PIN is required. Enter PIN according to onscreen prompt.
Insert USIM Card appears	USIM Card may not be properly inserted.	Turn power off and check that USIM Card is properly inserted, then restart handset. If the message still appears, USIM may be damaged.
	The correct USIM Card may not be inserted.	Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.
	There may be debris on IC chip/terminals.	Clean relevant parts with a dry cloth and re-insert.
REFRESH appears and handset returns to Standby	Handset may have been dropped or subjected to shocks.	Handset failed to recognize USIM Card temporarily. This is not a malfunction.
Keypad won't respond	Keypad Lock may be active ( appears).	Cancel Keypad Lock (P.1-23).
	Function Lock may be active ( appears).	Cancel Function Lock (P.11-2).

Problem	Possible Cause	Solution
Battery strength indicator flashes when not charging	Ambient temperature may be outside 5°C to 35°C.	Use within an ambient temperature of 5°C - 35°C.
Saved entry/folder does not appear on handset	Entry/folder may be set to Secret.	Activate Show Secret Data (P.11-3).
Cannot use Predictive	Show Secret Data may be active.	Cancel Show Secret Data.
Handset/AC Charger feels warm	Handset/AC Charger may warm while charging.	Unless handset/AC Charger is too hot to touch, warmth is considered normal. Always avoid prolonged skin contact to prevent burn injuries.
	Handset may warm during extended periods of use.	
	Handset may warm during Video Calls.	
Cannot access Memory Card files	Memory Card may not be properly formatted.	Use 932SH-formatted Memory Cards.
Clock settings are lost	Did you leave handset without battery?	Clock settings remain even when removing battery for replacement, etc. However, if handset is left with no battery or an exhausted one for an extended period of time (approximately one hour), Clock will need to be reset.



Charger/Battery

Problem	Possible Cause	Solution
Battery charges quickly	Remaining charge shortens charging time.	This is normal.
	Battery may be terminally exhausted or defective. (Small Light flashes red.)	Replace battery with a new one.
Battery charges slowly	Charging slows during Video Calls.	End the call to charge faster.
	Battery may be charging via USB.	Use AC Charger.
Battery won't charge	AC Charger may not be properly connected to handset.	Make sure connector is securely inserted and retry.
	AC Charger may not be firmly plugged in to AC outlet.	Remove plug from outlet, re-insert and retry.
	Battery may not be properly installed.	Install battery properly (P.15-4).
	Battery, AC Charger, or Charging Terminals, or Device Port may be obstructed by dust, etc.	Clean terminals, connector and Port with a dry cotton swab and retry.
	Charger, etc. may not be supported.	Use specified AC Charger, etc. only; others may damage battery.

Problem	Possible Cause	Solution
Battery Time seems shorter than usual	High power consuming operations are in use.	Keep handset closed in Standby; reduce TV, SI Application, Media Player and Camera use, and limit transmissions/external connections.
	Using handset in poor conditions may shorten Battery Time.	Avoid prolonged use of handset out-of-range or in poor signal conditions.
	Power hungry settings may be active.	Lower Brightness, select shorter Display Saving/ Backlight time, etc.



Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
[1]	あいうえお あいうえお	アイウエオ アイウエオ	@,/-1 □ (space)	1	1
[2]	かきくけこ	カキクケコ	ABCabc2	2	2
[3]	さしすせそ	サシスセソ	DEFdef3	3	3
[4]	たちつとっ	タチツテトッ	GHIghi4	4	4
[5]	なにぬねの	ナニヌネノ	JKLjkl5	5	5
[6]	はひふへほ	ハヒフヘホ	MNOmno6	6	6
[7]	まみむめも	マミムメモ	PQRSpars7	7	7
[8]	やゆよやゆよ	ヤユヨヤユヨ	TUVtuv8	8	8
[9]	らりるれろ	ラリルレロ	WXYZwxyz9	9	9
[0]	わをんー ・	ワヲンー ・ ・ _1	0	0	0
[*]	Log, Pictogram List (double-byte), Symbol List ³				_____
[#]	、。 # (line break) ? ! □ (space)		、。 # (line break) ?! □ (space)	#	_____

¹ - is available only in single-byte katakana entry.

² Available for phone number entry; some characters may not be enterable in some windows.

³ May not be enterable in some windows.



Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	Conversion (up) ⁴	Cursor up			
	Conversion (down) ⁵	Cursor down ↓ (line break)			
	Cursor left				
	Cursor right				
	Change entry mode				
	Toggle case (for some characters)			_____	
	_____	Toggle mode (upper/ lower and lower case)			_____
	Delete one character				
	Cancel conversion	_____	Cancel conversion ⁶	_____	Delete code
 (Long)	Delete before or after cursor				
	Recover characters deleted with 				
	Re-convert ⁷				
	_____	Re-convert ^{6, 7}			_____
	OK				
	Phonetic Conversion _____				
	Hiragana to Katakana/ Alphanumeric Conversion _____				

⁴Cursor moves up except during conversion.⁵Cursor moves down except during conversion.⁶Available only in single-byte alphanumeric entry.⁷Press  immediately after inserting characters to re-convert them.

Pager Code List

Gray background indicates upper and lower case available. Press **[R]** to switch immediately after character entry.

Double-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&		☺	*1
	8	や	(ゆ)	よ	*	#	Space	♥	*2
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん		°	6	7	8	9	0

Single-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&		☺	*1
	8	ヤ	(ユ)	ヨ	*	#	Space	♥	*2
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン		°	6	7	8	9	0

Double-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	や		ゆ		よ					*2
	9										
	0										

Single-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	ヤ		ユ		ヨ					*2
	9										
	0										

*1 Press **[*7]** **[F0]** to insert **↵** (line break) in mail message text, Notepad, etc.

*2 Press **[*8]** **[F0]** to toggle upper and lower case modes.



Character Code List

First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit																
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9					
010	Space	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	047	ゆ	よ	ら	り	れ	ろ	わ	161	葵	西	穉	悪	握	旭	葦	鯨	188	介	会	解	塊	壊	廻	怪	恠	悔
011	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	048	あ	よ	らん		る	ろ	わ	162	梓	压	乾	扱	宛	姮	蚣	綯	189	恢	懐	戒	回	塊	廻	怪	恠	悔	
012	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	050		ア	イ	ウ	エ	オ	163	帖	或	杏		給	宛	按	暗	案	190		懐	戒	回	塊	廻	怪	恠	悔	
013	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	051	オ	ア	イ	ウ	エ	オ	164	靴				以	伊	位	偉	夷	委	191	蟹	懐	戒	回	塊	廻	怪	恠	悔
014	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	052	オ	ア	イ	ウ	エ	オ	165					以	伊	位	偉	夷	委	192		懐	戒	回	塊	廻	怪	恠	悔
015	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	053	オ	ア	イ	ウ	エ	オ	166					以	伊	位	偉	夷	委	193		懐	戒	回	塊	廻	怪	恠	悔
016	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	054	オ	ア	イ	ウ	エ	オ	167					以	伊	位	偉	夷	委	194		懐	戒	回	塊	廻	怪	恠	悔
017	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	055	オ	ア	イ	ウ	エ	オ	168					以	伊	位	偉	夷	委	195		懐	戒	回	塊	廻	怪	恠	悔
018	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	056	オ	ア	イ	ウ	エ	オ	169					以	伊	位	偉	夷	委	196		懐	戒	回	塊	廻	怪	恠	悔
019	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	057	オ	ア	イ	ウ	エ	オ	170					以	伊	位	偉	夷	委	197		懐	戒	回	塊	廻	怪	恠	悔
020	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	058	オ	ア	イ	ウ	エ	オ	170					以	伊	位	偉	夷	委	198		懐	戒	回	塊	廻	怪	恠	悔
021	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	060	カ	ア	バ	ガ	ダ	ナ	170					以	伊	位	偉	夷	委	200		懐	戒	回	塊	廻	怪	恠	悔
022	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	061	カ	ア	バ	ガ	ダ	ナ	171					以	伊	位	偉	夷	委	201		懐	戒	回	塊	廻	怪	恠	悔
023	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	062	カ	ア	バ	ガ	ダ	ナ	172					以	伊	位	偉	夷	委	202		懐	戒	回	塊	廻	怪	恠	悔
024	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	063	カ	ア	バ	ガ	ダ	ナ	173					以	伊	位	偉	夷	委	203		懐	戒	回	塊	廻	怪	恠	悔
026	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	064	カ	ア	バ	ガ	ダ	ナ	173					以	伊	位	偉	夷	委	204		懐	戒	回	塊	廻	怪	恠	悔
027	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	065	カ	ア	バ	ガ	ダ	ナ	174					以	伊	位	偉	夷	委	205		懐	戒	回	塊	廻	怪	恠	悔
028	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	070	カ	ア	バ	ガ	ダ	ナ	175					以	伊	位	偉	夷	委	206		懐	戒	回	塊	廻	怪	恠	悔
029	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	071	カ	ア	バ	ガ	ダ	ナ	176					以	伊	位	偉	夷	委	207		懐	戒	回	塊	廻	怪	恠	悔
031	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	072	カ	ア	バ	ガ	ダ	ナ	177					以	伊	位	偉	夷	委	208		懐	戒	回	塊	廻	怪	恠	悔
032	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	073	カ	ア	バ	ガ	ダ	ナ	178					以	伊	位	偉	夷	委	209		懐	戒	回	塊	廻	怪	恠	悔
033	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	074	カ	ア	バ	ガ	ダ	ナ	178					以	伊	位	偉	夷	委	210		懐	戒	回	塊	廻	怪	恠	悔
034	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	075	カ	ア	バ	ガ	ダ	ナ	178					以	伊	位	偉	夷	委	211		懐	戒	回	塊	廻	怪	恠	悔
035	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	076	カ	ア	バ	ガ	ダ	ナ	179					以	伊	位	偉	夷	委	212		懐	戒	回	塊	廻	怪	恠	悔
036	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	077	カ	ア	バ	ガ	ダ	ナ	180					以	伊	位	偉	夷	委	213		懐	戒	回	塊	廻	怪	恠	悔
037	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	078	カ	ア	バ	ガ	ダ	ナ	181					以	伊	位	偉	夷	委	214		懐	戒	回	塊	廻	怪	恠	悔
038	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	080	カ	ア	バ	ガ	ダ	ナ	182					以	伊	位	偉	夷	委	215		懐	戒	回	塊	廻	怪	恠	悔
039	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	081	カ	ア	バ	ガ	ダ	ナ	183					以	伊	位	偉	夷	委	216		懐	戒	回	塊	廻	怪	恠	悔
040	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	082	カ	ア	バ	ガ	ダ	ナ	184					以	伊	位	偉	夷	委	217		懐	戒	回	塊	廻	怪	恠	悔
041	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	083	カ	ア	バ	ガ	ダ	ナ	184					以	伊	位	偉	夷	委	218		懐	戒	回	塊	廻	怪	恠	悔
042	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ								185					以	伊	位	偉	夷	委	219		懐	戒	回	塊	廻	怪	恠	悔
043	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ								186					以	伊	位	偉	夷	委	220		懐	戒	回	塊	廻	怪	恠	悔
044	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ								187					以	伊	位	偉	夷	委	221		懐	戒	回	塊	廻	怪	恠	悔
045	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ								187					以	伊	位	偉	夷	委	222		懐	戒	回	塊	廻	怪	恠	悔
046	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ	ゞ	ゝ								187					以	伊	位	偉	夷	委	222		懐	戒	回	塊	廻	怪	恠	悔



Weather Indicator List

Basic Status	
	Clear skies (day)
	Clear skies (night)
	Cloudy
	Rain
	Snow
	Thunder showers
	Chance of rain: 0%
	Chance of rain: 10%
	Chance of rain: 20%
	Chance of rain: 30%
	Chance of rain: 40%
	Chance of rain: 50%
	Chance of rain: 60%
	Chance of rain: 70%
	Chance of rain: 80%
	Chance of rain: 90%
	Chance of rain: 100%
	Then
	Partly/chance of

Pollen Count	
	Low
	Moderate
	High
	Extreme

Cherry Blossom	
	Flowering
	Almost full bloom
	Full bloom
	Beginning of petal fall

Fall Foliage	
	No color change
	Colors appearing
	Peak
	Defoliating

Ultraviolet	
	Low
	Moderate
	High
	Extreme

Typhoon	
	Forming
	Approaching
	Caution necessary

Disaster	
	Heavy rain
	Gale

Information	
	Notification



Specifications

SoftBank 932SH

Weight	Approximately 140 g
Continuous Talk Time	Approximately 250 minutes (3G) Approximately 230 minutes (GSM)
Continuous Standby Time	Approximately 350 hours (3G) Approximately 320 hours (GSM) (closed position)
Charging Time (power off)	AC Charger: Approximately 140 minutes In-Car Charger: Approximately 140 minutes
Dimensions (W x H x D)	Approximately 50 x 109 x 18 mm (closed position, without protruding parts)
Maximum Output	0.25 W (3G) 2.0 W (GSM)

- Above values calculated with battery installed.
- Continuous Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Continuous Standby Time is an average measured with a new, fully charged battery, in closed position without calls or operations, in Standby with stable signals. In Japan (3G service area), the value is calculated with IP Service Setting, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting set to **Off**.
- Talk Time/Standby Time may vary by environment, status, settings, etc.
- Display employs precision technology, however, some pixels may appear brighter/darker.

Handset Materials

Parts	Materials & Finishing
Housing (Display side)	Magnesium alloy/ Chemical conversion treatment, baking finish
Housing (External Display side)	Aluminum alloy/Anodized aluminum finish, acrylic UV curing painting (sealer: acrylic painting)
Housing (rotation support side)	ABS resin, stainless alloy/ Acrylic UV curing painting (sealer: acrylic painting)
Housing (Keypad side)	Nylon resin/Acrylic UV curing painting (sealer: acrylic painting)
Housing (battery side), Battery Cover, back ornament, hinge cover	ABS resin/Acrylic UV curing painting (sealer: acrylic painting)
Housing cover (Display side), camera ornament frame	ABS resin/Discontinuous deposition
Lens cover, screw cover (Display side), Mobile Light cover, External Display window	Acrylic resin
Display window	Acryl, PC resin
Infrared Port	ABS resin
Camera ornament	PET
Rotation stopper	Urethane

Parts	Materials & Finishing
Multi Selector, Start Key, Power On/Off Key, Mail Key, Yahoo! Keitai Key, Shortcuts & A/a Key, Clear/Back Key, Multi Job & Manner Key, Keypad, TV & Text Key, Dictionary Key, Camera Key, Side Keys, Center Key, battery	PC resin
Memory Card Slot Cover, Headphone Port Cover, External Device Port Cover	PC resin, elastomeric resin/Acrylic UV painting
Charging Terminals	SUS/Gold plating (sealer: nickel)
Screw (all pieces)	SWCH16A/Ni plating
USIM pin	Copper alloy/Gold plating (sealer: nickel)

Accessory

Battery

Voltage	3.7V
Battery Type	Lithium-ion
Capacity	800 mAh
Dimensions (W x H x D)	Approximately 39.6 x 34.1 x 5.6 mm (without protruding parts)



Getting Started

■ Standby Shortcut

Savable Items	30 per sheet
----------------------	--------------

Basic Operations

■ Text Entry

User Dictionary	250 entries (5 per reading) Word: 15 characters Reading: 8 hiragana
Acquire Dictionary	5 dictionaries
Paste List	10 text strings
Recoverable Deleted Characters	15,360 characters (30,720 bytes)
Dictionary	Meikyo Japanese Dictionary: Approximately 47,100 words/phrases Genius English-Japanese Dictionary: Approximately 45,700 words/phrases Genius Japanese-English Dictionary: Approximately 55,800 words/phrases

■ Phone Book

Entry	1,000 entries
Name/Reading	Last/First: 32 characters each
Phone Number	5 numbers (32 digits each)
Mail Address	5 addresses (128 characters each)
Category	16 Categories
Address	Postal Code: 20 characters Country: 32 characters Others: 64 characters each
Office	Office Name/Division/Post: 32 characters each
Homepage	1,024 bytes
Note	256 characters
Mail Groups	20 Groups (20 members each) Group name: 16 characters

Calling

Dialed Numbers	Dialed Numbers: 30 records Dialed Ranking: 10 records
Received Calls	30 records
Answer Phone/ Caller Voice	20 messages or 90 seconds
Auto Answer List	10 numbers
Decoration Call	100 KB including 20 characters
Speed Dial/Mail	100 numbers/addresses

Messaging

Memory	Received Msg.	10 MB or 3,000 messages
	Drafts	
	Sent Messages	5 MB (or 1,000 messages for Sent Messages)
	Unsent Messages	
	Templates	90 MB (shared with Data Folder and S! Appli Library)

PC Mail/S! Mail Subject	512 single-byte characters	
PC Mail/S! Mail Message	Approximately 30,000 single-byte characters	
SMS Message	160 single-byte alphanumerics	
Auto Resend	2 times	
Attachment	20 files or 1 MB ¹	
Send Reservation	10 messages	
Signature	256 single-byte characters	
Recipient	20 numbers/addresses	
Folder	20 folders (20 sort keys each)	
Chat Folder	Memory	300 messages per folder
	Folder	10 folders (20 members each)

Graphic Mail	1 sound or Flash [®] file, or 40 images/ My Pictograms (with 1 sound or Flash [®] file)	
3D Pictogram	150 characters	
Auto Reply	20 numbers/addresses (256 single-byte characters each)	
Anti Spam Measures	Individual	20 entries
	Permitted List	20 entries

¹Limit may be lower depending on message text, etc.

■ PC Mail Settings

PC Mail Account	Account	3 accounts
	Account Name	20 characters
Set Receiving	User Name	128 characters
	Password	40 characters
	ReceivingServer	128 characters
Set Sending	Port Number	1 to 65535
	Sender Name	20 characters
	Mail Address	128 characters
PC Mail DL	Individual Address	20 addresses

Yahoo! Keitai & PC Site Browser

Download	Yahoo! Keitai	300 KB per page
	PC Site Browser	1 MB per file
History	300 pages	
URL Entry Log	10 URLs	
Bookmarks/ Saved Pages	100 pages	
Tab	3 tabs at one time	
Input Memory	20 entries	
Streaming History	20 URLs	
RSS Feed	30 entries (60 KB per entry)	



Digital TV

Recorded File	ISDB-T mobile Video profile (SD-Video standard)	
Recording Time (example)	Handset	Approximately 30 minutes
	Memory Card	Approximately 80 minutes on 256 MB Memory Card
Marker	99 Markers (10 per file)	
Split File	99 portions per file	
Time Shift Recording	30 minutes	
Reservation List	5 entries (4 hours each on 1 GB Memory Card)	

Camera & Imaging
Mobile Camera

Effective Pixels	External Camera	8.0 Megapixels
	Internal Camera	310 Kilopixels
Auto Shut-off Time	Approximately 3 minutes	

Photo Camera

Zoom	1x - 20.4x	
Picture Size; Portrait (W x H dots)	8M	2448 x 3264
	3M	1536 x 2048 (QXGA)
	Full HD	1080 x 1920
	2M	1200 x 1600 (UXGA)
	1.2M	960 x 1280 (Quad-VGA)
	Normal HD	768 x 1366
	Wallpaper	480 x 854
	VGA	480 x 640
	QVGA	240 x 320
	QQVGA	120 x 160

Picture Size; Landscape (W x H dots)	3M	2048 x 1536
	Full HD	1920 x 1080
	2M	1600 x 1200
	1.2M	1280 x 960
	Normal HD	1366 x 768
	Wallpaper	854 x 480
Scanner Image Size (W x H dots)	VGA	640 x 480
	QVGA	320 x 240
	QQVGA	160 x 120
	File Format	JPEG
Memory	Approximately 33 files (at 8M, High Quality) on handset with no other files	
File Name	yymmdd_hhmmss	
Shooting Distance	Macro: 10 cm	
Long Exposure	Exposure time: 4 seconds	
Background Save	3 files	
Face Auto Focus	VGA or larger	
Other	Use 40 KB or smaller transparent PNG files as Frames	

Video Camera

Zoom	1x - 5.1x	
Record Size (W x H dots)	Extended Video	864 x 480 (Wide)
		640 x 480 (VGA)
		320 x 240 (QVGA)
		240 x 176 (HQVGA)
		176 x 144 (QCIF)
	For Message	128 x 96 (SubQCIF)
File Format	3GP	
Recording Time per Shot	Extended Video	Approximately 30 minutes* on Memory Card
	For Message	1 MB or 295 KB
File Name	yymmdd_hhmmss	
Recording Distance	1.5 m in good light	
Still Image Capture	3 images	
Recording Pause Supported	HQVGA or larger	

*Varies with handset usage, location or settings.



■ Editing Images

Picture Editor	Resize (W x H dots)	Wallpaper (480 x 854) Power On/Off (480 x 854) Incoming Call (320 x 320) Alarm (480 x 208) Pictogram (96 x 96) VGA (480 x 640) QVGA (240 x 320) Cut
	Retouch	52 x 52 dots or larger JPEG/PNG images
	Paste	16 characters
	Correction	52 x 52 dots or larger JPEG/PNG images
Composite	Merge Panorama	JPEG images between W 48 x H 64 dots and 240 x 320 dots

Media Player

Supported Formats	WMA (.wma), AAC (.mp4/.3gp/.m4a), Secure AAC (SD-Audio standard) (Some files may not play depending on sampling frequency and bit rate)
-------------------	--

S! Applications

Memory	100 items or 90 MB (shared with Templates folder and other folders in Data Folder)
Remote Control	Approximately 5 m

Handy Extras

■ PIM/Life

Calendar/ Tasks	300 entries, Subject: 32 characters Description: 128 characters Location: 16 characters Set Holiday: 10 holidays	
Alarms	5 entries, Subject: 9 characters	
Wakeup TV	Auto Shut-off	Approximately 30 minutes
Calculator	999,999,999,999	
Expenses Memo	30 entries (999,999.99 yen each)	
Osaifu-Keitai®	Remote Lock password: 5 - 16 single-byte alphanumerics	

Preset holidays are based on Japanese calendar as of December 2008.

■ Clock/Gauge

Stopwatch	23 hours 59 minutes 59.9 seconds in 0.1-second increments Lap time: 4 records	
Countdown Timer	99 minutes 59 seconds in 1-second increments	
World Clock	City name: 16 characters	
Pedometer	Today's Walking	Steps: 99,999
		Time: 23 hours 59 minutes 59 seconds
		Exercise: 71.9 Ex
		Calories: 9,999.9 kcal
		Distance: 179.9 km
	Log	Fat burned: 999.9 g
		2 years
		Daily view: 9,999 steps per hour
		Weekly view: 99,999 steps per day

Pedometer	Accumulated Data	All Days: 999 days
		Steps: 99,999,999
		Time: 99,999 hours 59 minutes 59 seconds
		Exercise: 99,999.9 Ex
		Calories: 9,999,999.9 kcal
	Average	Distance: 999,999.9 km
		Fat burned: 999,999.9 g
		Steps: 99,999
		Time: 23 hours 59 minutes 59 seconds
		Exercise: 71.9 Ex Calories: 9,999.9 kcal Distance: 179.9 km Fat burned: 999.9 g
S! GPS Navi	My Location	50 entries

■ Doc./Rec.

Document Viewer	Supported Formats	PDF (.pdf) Microsoft® Excel® (.xls) Microsoft® Word (.doc) Microsoft® PowerPoint® (.ppt)
	File Size	10 MB
Notepad	500 entries (8,192 characters each)	
Voice Recorder	For Message	Approximately 10 minutes per file
	Extended Voice	99 hours 59 minutes 59 seconds
Scan Barcode (Continuous Mode)	UPC/JAN	50 codes
	QR Code	16 codes
Create QR Code	Equivalent of 513 digits, 311 alphanumerics or 131 kanji	
Scan Text	256 characters	



Entertainment & Communication

Widget

Savable Items	4 widgets (S! Quick News & S! Friend's Status: 1, others: 3) per sheet x 4 sheets
----------------------	---

S! Quick News

Savable Items	Special: 1 item News Flash: 1 item General: 4 items
----------------------	---

e-Books

Text Copy	20 characters
------------------	---------------

S! Loop

S! Loop List	5 items
---------------------	---------

S! Friend's Status

Member	30 members
My Status	Name: 7 characters Comment: 15 characters Status Label: 4 characters
Status Templates	Template name: 12 characters

S! Circle Talk

Participant	11 members
Speak Time	30 seconds each
Member List	30 entries (10 members per Group)

Blog Tool

Blog Details	5 entries	
Blog Menu	16 characters	
Blog Settings (Mail)	Email Address	128 characters
	Title	32 characters
	Text	128 characters
	Picture Size	S (320 x 320) M (640 x 640) L (1024 x 1024) Send
Blog Settings (Yahoo! Keitai & PC Site Browser)	URL for Posting	1,024 characters
	URL for Viewing	1,024 characters

Data Folder

Memory	90 MB (shared with Templates folder and S! Appli Library)
---------------	---

Memory Card

Backup File Name	ymmddXX' (XX: 2 digits/alphabets)
-------------------------	-----------------------------------

*ymmdd for Contents Keys.

Connectivity & File Backup

Infrared

Infrared Transfer	IrMC 1.1	
	Range	Within 20 cm
IrSS Transfer (JPEG images)	Receive 2,500 KB or less; send 4,000 KB or less (after resizing)	

Bluetooth®

Communication System	Bluetooth® specification Ver. 2.0
Supported Profiles	Headset Profile Hands-Free Profile Dial-Up Networking Profile Object Push Profile File Transfer Profile Basic Imaging Profile Advanced Audio Distribution Profile Audio/Video Remote Control Profile
Output	Bluetooth® Power Class 2
Range	Within 10 m
Device Search	16 devices
Pairing	32 devices
Device Name	16 characters
Printing	JPEG/PNG images

S! Addressbook Back-up

Log	10 Backup/Restore/ Synchronization records
------------	---

Network

Add Network	5 Networks Country/Network code: 3 digits Name: 25 single-byte characters
--------------------	---



Reference URLs

- **SOFTBANK MOBILE Corp.**
<http://mb.softbank.jp/mb/en/>
- **microSD™ Memory Card Compatibility**
From PC (Japanese)
http://k-tai.sharp.co.jp/peripherals/sd_support.html
From Handset (Japanese)
<http://shweb.sharp.co.jp/>
- **S! Addressbook Back-up**
<http://mb.softbank.jp/mb/en/service/advanced/sab/>
- **SVG-T**
From Handset (Japanese)
http://shweb.sharp.co.jp/svg/index_pdc.html
- **Association for Promotion of Digital Broadcasting**
From PC
<http://www.dpa.or.jp/english/>
From Handset (Japanese)
<http://www.dpa.or.jp/1seg/k/>



Memory Card Structure & Contents

Memory Card Structure			Contents (Location when Viewed on Handset)	
DCIM	XXXSHARP		Still images in DCIM	
PRIVATE	MYFOLDER	Local Contents	SD Local Contents	
		Mail	Messaging folder backups (Received Msg., Sent Messages and Drafts)	
		My Items	Book	e-Book files in Data Folder (Books)
			Bookmarks	Yahoo! Keitai Bookmarks
			Character	PNG files in Data Folder (Character)
			CSI	Decoration Call files in Data Folder (Decoration Call)
			Custom Screens	Customized Screen files in Data Folder (Customized Screen)
			Flash(R)	Flash® Wallpaper files in Data Folder (Flash®)
			Flash(R) Ringtones	Flash® ringtones in Data Folder (Flash® Ringtones)
			Games and More	SI Applications
			Hot Status Template	Template files in Data Folder (Status Templates)
			Mail Art	Files in Data Folder (Mail Art)
			Message Templates	Graphic Mail templates in Templates folder
			Music	Music files in Data Folder (Music)
			Other Documents	Other files in Data Folder (Other Documents)
			Pictograms	GIF files in Data Folder (My Pictograms)
			Pictures	Still images in Data Folder (Pictures)
			Sounds & Ringtones	Melodies and other sound files in Data Folder (Ring Songs-Tones)
			Videos	Video files in Data Folder (Videos)
			Virtual Space	SI Town files
			Widget	Widget files in Data Folder (Widget)
		WMAudio	WMA files for Media Player (WMA)	
			SH_Folder	Application management files
	Utility	Backup files (Phone Book), etc.		
	SHARP	MOBILE	Backup files (User Dictionary), etc.	
	SD_AUDIO		SD-Audio files for Media Player (SD AUDIO)	



Menu List

Messaging

Function	Refer to	
Received Msg.	P.4-10	
Create Message	P.4-4	
Retrieve New Msg.	P.4-21	
Drafts	P.4-27	
Templates	P.4-20	
Sent Messages	P.4-10	
Unsent Messages	P.4-27	
Chat Folder	P.4-13	
Server Mail Box	Mail List	P.4-21
	Retrieve All	P.4-21
	Delete All	P.4-25
	Mailbox Volume	P.4-28
Create New SMS	P.4-7	
Settings	Address Settings	P.4-3
	General Settings	P.4-28
	S! Mail Settings	P.4-30
	PC Mail Settings	P.4-16
	SMS Settings	P.4-32
	Speed Dial/Mail	P.4-18
Set Mail Group	P.4-14	
Memory Status	P.4-24	

Settings: General Settings

	Function	Refer to
Send/ Compose	Delivery Report	P.4-29
	Reply to Settings	P.4-29
	Reply With Text	P.4-29
	Auto Reply	P.4-23
	Set Quick Reply	P.4-23
	Auto Resend	P.4-29
	Sending Status	P.4-29
Receive	Message Notice	P.4-29
	Link to Feeling	P.4-30
	3D Pictogram	P.4-30
	Animation View	P.4-29
Anti Spam Measures		P.4-12
Report Spam		P.4-28
Scroll Unit		P.4-28
Message List View		P.4-28
Address View		P.4-28
Received Msg. View		P.4-28
Sent Msg. View		P.4-28
Auto Delete	Received Msg.	P.4-28
	Sent Messages	P.4-28
Display Rotation		P.4-24

Settings: S! Mail Settings

Function	Refer to	
Message DL(Japan)	P.4-30	
Message DL(Abroad)	P.4-30	
Signature	P.4-18	
Picture Appearance	P.4-31	
Auto Play File	Pictures	P.4-31
	Sounds	P.4-31
Create Msg. Size	P.4-20	
Send File Settings	P.4-31	

Settings: PC Mail Settings

Function	Refer to
PC Mail Account	P.4-16
PC Mail DL	P.4-31
Check New Mail	P.4-31
Word wrap	P.4-32

Settings: SMS Settings

Function	Refer to
Expiry Time	P.4-32
Message Center	P.4-32
Char-code	P.4-32



Yahoo! Keitai

Function	Refer to
Yahoo! Keitai	P.5-3
Bookmarks	P.5-7
Saved Pages	P.5-7
Enter URL	P.5-3
History	P.5-3
PC Site Browser	P.5-4
Browser Settings	P.5-11

PC Site Browser

Function	Refer to
Homepage	P.5-4
Bookmarks	P.5-7
Saved Pages	P.5-7
Enter URL	P.5-4
History	P.5-4
RSS Feed	P.5-8
Yahoo! Keitai	P.5-3

PC Site Browser Settings

Font Size	P.5-11
Scroll Settings	P.5-11
Cursor Settings	P.5-11
Downloads	P.5-11
Memory Operation	P.5-9
Security Settings	P.5-15
Download to	P.5-11
Initialized Browser	P.5-15
Reset Settings	P.5-15
Warning Message	P.5-11
Zoom Factor	P.5-11
Softkey Area	P.5-4

Browser Settings

Function	Refer to
Font Size	P.5-11
Scroll Unit	P.5-11
Cursor Settings	P.5-11
Downloads	P.5-11
Memory Operation	P.5-9
Security Settings	P.5-15
Download to	P.5-11
Initialized Browser	P.5-15
Reset Settings	P.5-15

S! Appli

Function	Refer to
S! Appli Library	P.8-7
Osaifu-Keitai	P.9-12
Notification History	P.8-7
Settings	P.8-12
Information	P.8-12

Settings

Function	Refer to	
Application Volume	P.8-11	
Backlight	P.8-12	
Vibration	P.8-12	
Synchronization	P.8-12	
Notification Setting	P.8-12	
Calls & Alarms	P.8-11	
Screensaver	Switch On/Off	P.8-11
	Activation Time	P.8-11
	Stop Auto Start	P.8-11
Surround	P.8-11	
TOUCH CRUISER	P.8-11	

Function	Refer to
Set to Default	P.8-12
Memory All Clear	P.8-12

TV

Function	Refer to
Digital TV	P.6-5
TV Player	P.6-10
TV-Image Folder	P.6-6
TV Link	P.6-15
TV Listing	P.6-7
Familink Remote	P.1-3
Reservation List	P.6-11
Settings	P.6-14

Settings

Function	Refer to	
TV Alarm	P.6-18	
Broadcast Data	Set Recording	P.6-16
	Image Location	P.6-16
	Notify Connection	P.6-15
	Location	P.6-15
	Manufacture Number	P.6-15
	Delete StationData	P.6-15
Screen Size(Portrait)	P.6-13	
Screen Size(Landscape)	P.6-13	
Landscape Sets.	P.6-14	
Sound Output	P.6-14	
Sound Output	P.6-14	
Set Call Time Shift	P.6-16	



Function		Refer to
Calls & Alarms		P.6-14
TV Reserve Prior		P.6-18
Save Recording to		P.6-16
Auto Exit	Auto Exit Time	P.6-14
	Close Action	P.6-14
Smooth Mode		P.6-13
Set Two Screen		P.6-15

Camera

Function		Refer to
Photo Camera		P.7-4
Video Camera		P.7-6
Scan Barcode		P.9-29
Scan Card		P.9-31
Scan Text		P.9-32
Review		P.7-7
Camera Settings	Picture Size	P.7-18
	Picture Quality	P.7-17
	Advanced	P.7-17
Video Settings	Record Time/Size	P.7-19
	Microphone	P.7-19
	Advanced	P.7-17
Set Camera Key		P.7-17

Photo Camera

Function		Refer to
Shooting Settings	Exposure	P.7-17
	Focus Setting	P.7-17
	Egao level	P.7-18
	White Balance	P.7-18
	Internal Camera	P.7-4
Modes	Add Frame	P.7-9
	Continuous Shoot	P.7-8
	Camera Effects	P.7-9
	Long Exposure	P.7-9
	Panorama/Scanner	P.7-10
Barcode/Scan		P.9-29
Data Folder		P.7-7
Picture Size		P.7-18
Scene		P.7-18
Picture Quality		P.7-17
Self-timer		P.7-8
Settings		P.7-17
ISO Sensitivity		P.7-18
Help		P.7-4
Mobile Light		P.7-17

Video Camera

Function		Refer to
Record Settings	Exposure	P.7-17
	Focus Setting	P.7-17
Display Size		P.7-19
Data Folder		P.7-7
Record Time/Size		P.7-19
Microphone		P.7-19
Video Quality		P.7-17
Self-timer		P.7-8
Settings		P.7-17
Internal Camera		P.7-6
Help		P.7-17
Mobile Light		P.7-17

Camera Settings: Advanced

Function		Refer to
Display Indicators		P.7-18
Shutter Sound		P.7-18
Save Pictures to		P.7-17
Auto Save		P.7-17
Background Save		P.7-18
Set Remote Shutter		P.7-19
Set Send Key		P.7-18

Video Settings: Advanced

Function		Refer to
Save Videos to		P.7-17
Auto Save		P.7-17
Video Encode		P.7-19



Entertainment

Function		Refer to
Mobile Widget		P.10-2
S! Quick News		P.10-5
S! Information Channel/ Weather	What's New	P.10-6
	Back Issue	P.10-6
	Registration/Cancel	P.10-6
	Get Latest Contents	P.10-19
	Notification	P.10-19
	Weather Indicator	P.10-6
BookSurfing		P.10-7
e-Book Viewer		P.10-7

S! Quick News

Function		Refer to
S! Quick News List		P.10-5
S! Loop List		P.10-5
Settings	Automatic Update	P.10-18
	Show Image	P.10-18
	Check Schedule	P.10-18
	Change Skin	P.10-18
	Delete S! Quick News Lists	P.10-18

S! Information Channel/Weather:
Weather Indicator

Function		Refer to
Weather		P.10-19
Manual Update		P.10-6
Settings	Standby Setting	P.10-19
	Weather Notif.	P.10-19
	Icon Update	P.10-19

Tools

PIM/Life

Function		Refer to
Calendar		P.9-2
Alarms		P.9-6
Wakeup TV		P.9-8
Tasks		P.9-4
Calculator		P.9-10
Expenses Memo		P.9-11
Osaifu-Keitai		P.9-12
Simulated Call	Receive Simulated Call	P.9-39
	Switch On/Off	P.9-15
	Set Caller	P.9-15
	Assign Tone	P.9-15
	Receive Timing For Silent Mode	P.9-15 P.9-39

PIM/Life: Osaifu-Keitai

Function		Refer to
Lifestyle-Appli		
IC Card Settings	IC Card Status	P.9-38
	IC Card Lock	P.9-13
	Remote Lock	P.9-13
	Interface Settings	P.9-38
	Balance Info	P.9-38
	Set to Default	P.9-38

Clock/Gauge

Function	Refer to
Stopwatch	P.9-16
Countdown Timer	P.9-17
World Clock	P.9-18
Hour Minder	P.9-19
Pedometer	P.9-20
Compass	P.9-22
S! GPS Navi	P.9-23
Battery Meter	P.1-23

Doc./Rec.

Function		Refer to
Dictionary		P.2-12
Search		P.2-14
Document Viewer		P.9-25
Notepad		P.9-26
Scratch Pad		P.2-15
ASCII Art		P.9-27
Voice Recorder	Record Time	P.9-42
	Ring Songs-Tones	P.9-28
	Save Recording to	P.9-42
Barcode/Scan	Scan Barcode	P.9-29
	Open Barcode	P.9-42
	Create QR Code	P.9-30
	Scan Card	P.9-31
	Scan Text	P.9-32
	Scanned Results	P.9-43
Phone Help		P.1-23



Data Folder

Function	Refer to
Pictures	P.7-11
DCIM	P.12-2
Ring Songs-Tones	P.9-28
S! Appli	P.8-7
Widget	P.10-2
Music	P.12-2
Videos	P.12-2
Lifestyle-Appli	P.9-12
Books	P.12-2
Customized Screen	P.2-4
Status Templates	P.12-2
Decoration Call	P.3-6
Flash@	P.12-2
Other Documents	P.12-2
Memory Status	P.12-2

Media Player

Function	Refer to	
Music	P.8-4	
Videos	P.8-5	
Streaming	P.5-12	
Settings	Sound Output	P.8-8
	Delete All WMA	P.8-9
MTP Mode	P.8-3	

Music

Function	Refer to	
Last Played Music	P.8-8	
My Music	P.8-6	
SD AUDIO	P.8-9	
WMA	P.8-4	
Download Music	P.8-3	
Music Search	P.8-3	
Settings	Sound Effects	P.8-8
	Playback Mode	P.8-8

Videos

Function	Refer to	
Last Played Video	P.8-8	
My Videos	P.8-5	
SD VIDEO	P.8-5	
Download Videos	P.8-3	
Settings	Playback Mode	P.8-8
	Backlight	P.8-8
	Display Size	P.8-8
	Sound Effects	P.8-8
	Web Link Setting	P.8-8

Communication

Function	Refer to
S! Town	P.1-24
S! Loop	P.1-24
S! Friend's Status	P.10-8
S! Circle Talk	P.10-11
Near chat	P.10-13
Blog Tool	P.10-14

Phone

Function	Refer to	
Phone Book	P.2-18	
Add New Entry	P.2-16	
Information	P.1-28	
Call Log	P.3-8	
Play Messages	P.3-4	
Call Voicemail	P.3-11	
Category Control	P.2-17	
My Details	P.1-23	
Speed Dial/Mail	P.3-7	
Mail Groups	P.4-14	
S! Addressbook Backup	P.13-16	
Ph.Book Settings	Sort Entries	P.2-18
	Select Phone Book	P.2-23
	Save New Entry	P.2-23
	New Number Prompt	P.2-21
	Vertical Display	P.2-21
Call Log Settings	Horizontal Display	P.2-21
		P.3-16
Manage Entries	Copy All	P.2-22
	Memory Status	P.2-22
	Change Mode(All)	P.2-23
	Delete All	P.2-22



Settings

■ Phone

Function	Refer to	
Mode Settings	P.1-29	
Display	P.14-3	
Customize	P.2-4	
Sounds & Alerts	P.2-5	
Date & Time	P.14-2	
Set Key Light	P.14-4	
言語選択 (Language)	P.14-3	
User Dictionary	P.2-11	
Display Rotation	Rotate 90° to	P.1-28
	Rotate Back to	P.3-20
TOUCH CRUISER	P.1-29	
Set Key Shortcut	P.1-13	
Motion Control	Quick Shortcut	P.1-20
	Action Settings	P.1-20
	Action Test	P.1-29
	Adjust Sensor	P.1-29
Ringer Output	P.14-5	
Earpiece Volume	P.3-13	
Change Menu	Switch On/Off	P.1-25
	Double Mode	P.1-27
Double Number	Password Entry	P.1-30
	Mode Name	P.1-30
	Reject By Line	P.1-30
	Show Missed	P.1-30
	Packet Warning	P.1-30
	Send Priority	P.1-30
Locks	P.11-2	

Function	Refer to	
Software Update	P.15-5	
Master Reset	Reset Settings	P.14-7
	Reset All	P.14-7

■ Phone: Display

Function	Refer to	
Wallpaper	P.2-3	
System Graphics	P.14-3	
VeilView	Pattern Setting	P.1-30
	Density Setting	P.1-30
Display Effects	P.14-3	
Font Settings	P.2-2	
Standby Display	Clock/Calendar	P.14-4
	Show Operator Name	P.14-4
	Pedometer	P.14-4
Vivid Mode	P.14-3	
Mini Battery	P.1-30	
Greeting Message	Duration	P.14-4
	Messages	P.14-4
External Display	Display Pedometer	P.14-4
	Display Date&Time	P.14-4
	Clock Type	P.14-4
	Caller Display	P.14-4
Backlight	P.14-3	
Display Saving	P.14-3	
Dial Number	P.14-3	

■ Phone: Sounds & Alerts

Function	Refer to
Volume	P.14-5
Ringtone/videos	P.2-5
System Sounds	P.14-5

Function	Refer to
Vibration	P.2-5
Event Light	P.14-5
Status Light	P.14-5
Any Key Answer	P.14-5
Surround	P.14-5

■ Phone: Date & Time

Function	Refer to
Set Date/Time	P.14-2
Time Correction	P.14-2
Daylight Saving	P.14-2
Set Time Zone	P.14-2
Clock/Calendar	P.14-4
World Clock	P.9-18
Alarms	P.9-6
Set Holiday	P.9-33
Time Format	P.14-2
Date Format	P.14-2
Calendar Format	P.14-2

■ Phone: Locks

Function	Refer to
PIN Entry	P.11-2
Change PIN2	P.11-6
Face Recognition	P.11-4
Function Lock	P.11-2
IP Service Setting	P.14-6
Application Lock	P.11-3
History Lock	P.11-3
Show Secret Data	P.11-3
Set Lock Message	P.11-6
Chg. Handset Code	P.1-22



Connectivity

Function		Refer to
Bluetooth		P.13-7
Infrared	Switch On/Off	P.13-17
	Send All	P.13-4
	IrSS Key Setting	P.13-17
IC Transmission	Recv. Forwarded	P.13-17
	Send All	P.13-6
USB Mode	Mass Storage	P.13-11
	MTP Mode	P.8-3
USB Charge		P.1-28
Memory Card		P.12-6
Backup/ Restore	Backup All Items	P.13-19
	Backup Selected Items	P.13-13
	Restore All Items	P.13-19
	Restore Selected Items	P.13-13
	Settings/Manage	P.13-19

Connectivity: Bluetooth

Function	Refer to
Switch On/Off	P.13-17
Add Device	P.13-8
Paired Devices	P.13-9
Send All	P.13-10
Setting Watch	P.13-18
My Device Settings	P.13-17
My Device Details	P.13-17

Connectivity: Memory Card

Function		Refer to
DPOF	Number of Copies	P.7-16
	Settings	P.7-21
	Check Settings	P.7-16
	Reset Settings	P.7-21
SD Local Contents		P.12-8
Format Card		P.12-6
Memory Status		P.12-2

Call

Function		Refer to
Call Time & Cost	Call Timers	P.3-9
	Data Counter	P.3-17
	Call Costs	P.3-9
	Switch On/Off	P.3-4
Answer Phone	Answer Time	P.3-12
	Outgoing Message	P.3-12
	Volume	P.3-12
Voicemail/ Divert	Voicemail	P.3-11
	Diverts	P.3-10
	Cancel All	P.3-11
Video Call	Status	P.3-18
	Camera Picture	P.3-20
	Incoming Picture	P.3-20
	Outgoing Picture	P.3-20
	Hold Guidance Pict	P.3-20
	Backlight	P.3-20
	Loudspeaker	P.3-20
	Mute Microphone	P.3-20
	Remote Monitor	P.3-12
Show My Number	P.3-19	
 Missed Calls	P.3-11	
Int'l Calling	P.3-13	

Function		Refer to
Disp. Time/ Call	Display Call Cost	P.3-17
	Call Time Counter	P.3-17
Call Barring	Outgoing Calls	P.3-19
	Incoming Calls	P.3-19
	Rejected Numbers	P.3-18
	Change NW Password	P.3-18
Minute Minder		P.3-17
Decoration Call	Switch On/Off	P.3-15
	Play in Receiving	P.3-15
	Notice	P.3-15
Set Talk Mode		P.3-20
Set Voice Clear		P.3-20
Auto Answer		P.3-20
Call Waiting		P.3-18

Network

Function	Refer to
Select Network	P.14-6
Select Service	P.14-6
Offline Mode	P.1-21
Retrieve NW Info	P.14-6
Network Info	P.14-6
External Device	P.14-6



Index

Number	
3D Pictogram	4-8, 4-30

A

AC Charger	1-4
Accessing Functions	1-11
Accessory	v
After-Sales Services	15-40
Alarms	9-6
Canceling	9-7
Deleting	9-7
Editing entries	9-36
For Manner Mode	9-36
Link to World Clk	9-36
Animation View	4-8
Answer Phone	3-4, 3-12
Anti Spam Measures	4-12, 4-26
Any Key Answer	14-5
Application Lock	11-3
ASCII Art	9-27
Auto Focus	7-2
Auto Reply	4-9, 4-23
Auto Resend	4-2, 4-29
Auto Retry Function	4-2

B

Backlight	14-3
Backup	13-12
Settings/Manage	13-19
Battery	1-4, 15-4
Battery Cover	1-2
Battery Meter	1-23
Blog Tool	10-14, 10-22
Bluetooth®	13-7
My Device Settings	13-17
Printing images	7-16

Receiving files	13-10
Sending files	13-10, 13-18
Bookmarks	5-7
BookSurfing®	10-7

C

Calculator	9-10, 9-37
Calendar	9-2
Calendar Settings	9-33
Editing schedules	9-34
Call Barring	3-10, 3-18
Call Barring (Incoming Calls)	3-19
Call Barring (Outgoing Calls)	3-19
Call Forwarding	3-10
Call Log	3-8, 3-16
Call Time & Cost	3-9
Data Counter	3-17
Call Time Counter	3-17
Call Waiting	3-10, 3-18
Call Waiting (answering Line 2)	3-18
Caller ID	3-10, 3-19
Camera	7-2
Auto Save	7-17
Capturing Still Images	7-4
Exposure	7-17
Locking focus	7-17
Macro	7-17
Manual Focus	7-17
Mobile Light	7-17
Picture Quality	7-17
Recording Video	7-6
Review	7-7
Save Pictures to	7-17
Save Videos to	7-17
Self-timer	7-8
Send/Blog	7-7
Video Quality	7-17
Center Access Code	1-22

Change NW Password	3-18
Change PIN	11-6
Change PIN2	11-6
Character Code List	15-11
Charging	1-4
Charging Terminals	1-2
Chat Folder	4-13, 4-26
Clock/Calendar	14-4
Closed Position	1-2
Compass	9-22
Composite	7-15
Countdown Timer	9-17
Create Msg. Size	4-20, 4-31
Create QR Code	9-30
Customer Service	15-41
Customized Screen (Japanese)	2-4
Cycloid Position	1-2

D

Data Broadcast (Japanese)	6-6
Change View (Data)	6-15
Returning to initial window	6-15
Set Recording	6-16
Data Folder	12-2
Files (attaching)	4-5, 12-3
Files (moving/copying)	12-4
Files (opening)	12-3
Files (renaming)	12-8
Folders (adding)	12-4
Selecting Multiple Files	12-4
Set Secret (folders)	12-4
Slide Show	12-3
Date & Time	14-2
Daylight Saving	9-18, 14-2
Decoration Call	3-6, 3-15
Delivery Report	4-8, 4-19, 4-29
Dialing from Call Log records	3-16
Dictionary	2-12



- Digital TV (→ TV)** 6-2
- Adding Reception Areas 6-4
 - Area Setup 6-4
 - Auto Exit 6-14
 - Calls & Alarms 6-14
 - Change Area 6-13
 - Image 6-14
 - Landscape Sets 6-14
 - Program Info. Search 6-13
 - Save Recording to 6-16
 - Screen Size 6-13
 - Set Call Time Shift 6-16
 - Set Channels 6-13
 - Set Two Screen 6-15
 - Smooth Mode 6-13
 - Sound Output 6-14
 - Sound Output 6-14
 - Subtitle/Sound 6-16
 - Tone 6-14
 - TV Alarm 6-18
- Display** 1-2, 1-7
- Display (settings)** 14-3
 - Display Call Cost** 3-17
 - Display Effect** 4-30
 - Display Effects** 14-3
 - Display Positions** 1-2
 - Display Rotation** 1-17
 - Display Saving** 14-3
 - Document Viewer** 9-25
 - Double Number** 1-25, 1-30
 - Download Dictionary** 2-11
 - DPOF** 7-16
 - Add Date 7-21
 - Check Settings 7-16
 - For All Pictures 7-16
 - Index Print 7-21
- Dual Mode** 1-26
- E**
- Earpiece** 1-2
- Earpiece Volume** 3-13
- e-Book Library** 10-20
 - e-Book Viewer** 10-7
 - e-Books (Japanese)** 10-7, 10-20
 - Emergency Calls** 3-2
 - English** 14-3
 - Event Light** 14-5
 - Expenses Memo** 9-11
 - External Camera** 1-2
 - External Device Port** 1-2
 - External Display** 1-2, 1-10, 14-4
- F**
- Face Arrange** 7-14
 - Face Recognition** 11-4
 - Feeling Mail (receiving)** 4-8
 - Feeling Mail (sending)** 4-5
 - Focus (locking)** 7-17
 - Focus Setting** 7-17
 - Font Size** 2-2
 - Format Card** 12-6
 - Function Lock** 11-2
- G**
- General Notes** xii
 - Graphic Mail** 4-6
 - Group Calling** 3-10, 3-18
 - Group Calling (opening another line)** 3-18
 - Guide Usage Notes** ii
- H**
- Handset Code** 1-22
 - Handset Keys** 1-3
 - Handset mail address** 4-3
 - Handset Parts** 1-2
 - Handset Power On/Off** 1-6
 - Handset Responses** 2-5
 - Headphone Port** 1-2
 - Headphones (answering calls)** 3-12
 - History Lock** 11-3
- Hold** 3-12
 - Hour Minder** 9-19
 - Assign Tone/Video 9-39
 - For Manner Mode 9-39
 - Link to World Clk 9-39
 - Vibration 9-39
- I**
- IC Card** 9-13
 - IC Card Lock** 9-13
 - IC Transmission** 13-5
 - Indicators** 1-8
 - Camera (Viewfinder) 7-3
 - Display 1-8
 - External Display 1-10
 - Messaging (message list) 4-9
 - Music Playback Window 8-4
 - Video Playback Window 8-5
 - Infrared window** 1-7
 - Infrared** 13-2
 - Receiving files 13-3
 - Sending files 13-4, 13-17
 - Infrared Port** 1-2
 - Internal Antenna** 1-2
 - Internal Camera** 1-2
 - International calls** 3-3, 3-13
 - Internet** 5-2
 - Accessing 5-3, 5-4
 - Basic Operations 5-5
 - Browser Settings 5-11
 - Enter URL 5-3, 5-4
 - History 5-3, 5-4
 - Saving Bookmarks/pages 5-7
 - Int'l Call** 3-4
 - IP Service Setting** 14-6
 - IrSS Transfer** 13-2
- K**
- Key Assignments** 15-8
 - Keypad Lock** 1-23



L

Language	14-3
Large Font Menu	2-2
Light Sensor	1-2, 14-3
Link to Feeling	4-30
Link to World Clik.....	9-36, 9-39
Location Navi.....	9-24
Locks.....	1-22, 11-2
Loudspeaker.....	3-14, 3-20, 10-21

M

Mail Groups	4-14
Changing members	4-27
Deleting	4-27
Edit Name.....	4-27
Main Menu.....	1-11
Manner mode.....	1-21
Mass Storage.....	13-11
Master Reset.....	14-7
Format Card	12-6
Reset All	14-7
Reset Settings	14-7
Max Cost	3-17
Media Player	8-2
Delete All WMA	8-9
Playlists	8-6, 8-9, 8-10
Sound Output	8-8
Memory All Clear (S! Applications)	8-12
Memory Card	12-5
Format Card	12-6
Opening files	12-6
Memory Card Structure & Contents	15-24
Menu List	15-25
Camera	15-27
Communication	15-29
Data Folder.....	15-29
Entertainment	15-28
Media Player.....	15-29
Messaging.....	15-25

Phone	15-29
S! Appli	15-26
Settings	15-30
Tools	15-28
TV	15-26
Yahoo! Keitai.....	15-26
Message List View	4-28
Message Notice.....	4-29
Messages (creating/sending).....	4-4, 4-7, 4-17
3D Pictogram	4-18
Attachments.....	4-20
Drafts	4-27
Edit	4-27
Edit & Send.....	4-27
Graphic Mail	4-20
Inserting signature manually	4-18
Messaging Settings	4-19
Preview Message	4-4
Recipient status	4-18
Recipients (editing).....	4-18
Resend	4-27
Save to Drafts	4-19
Send Reservation	4-19
Set Auto Play File	4-20
Set Sent Cancel.....	4-19
Signature	4-18
Speed Dial/Mail	4-18
Templates	4-20
Messages (deleting).....	4-17, 4-25
Auto Delete	4-28
Messages (forwarding)	4-28
Messages (protecting)	4-10
Messages (receiving/checking)	4-8
Mail List	4-21
Message List	4-9, 4-24
Message Window	4-9, 4-22
Opening new mail out of Standby.....	4-21
Retrieving complete S! Mail messages manually	4-30
Retrieving PC Mail.....	4-17, 4-31

Save to Data Folder	4-22
Messages (sorting)	4-12
Anti Spam Measures	4-12, 4-26
Messaging (→ SMS, S! Mail, PC Mail)	4-2
General Settings.....	4-28
PC Mail Settings.....	4-31
Receive (settings).....	4-29
S! Mail Settings.....	4-30
Send/Compose (settings)	4-29
SMS Settings.....	4-32
Microphone	1-2
Minute Minder	3-17
Missed Call Notification.....	3-11
Mobile Light	1-2
Mobile Widget	10-2
Mode Settings.....	1-29
Motion Control.....	1-19
MTP Mode	8-3
Multi Job	1-14
Music (deleting).....	8-9
Music (downloading).....	8-3
Music (playing)	8-4, 8-8
My Details	1-23
Sending via Bluetooth®	13-18
Sending via IC Transmission	13-17
Sending via Infrared	13-17

N

Navi Appli.....	9-23
Near Chat (Japanese)	10-13
Network Password	1-22
Notepad	9-26
Edit Text	9-41
Change Category	9-41

O

Offline Mode	1-21
Optional Services.....	3-10
Optional Services (checking status)	3-18
Osaifu-Keitai®	9-12



Balance Info	9-38
Checking e-money balance.....	9-38
IC Card Settings	9-13
Locking.....	9-13
Set to Default	9-38

P

Pager Code List	15-10
PC (connecting handset)	13-11
PC Mail.....	4-2, 4-15
PC Mail (sending)	4-17
PC Site Browser	5-4
Pedometer	9-20
Pen Light	1-23
Phone Book (deleting)	2-22
Phone Book (editing)	2-21
Phone Book (saving)	2-16
Phone Book (using).....	2-18
Phone Book search	2-18
Phone Help	1-23
Picture Editor	7-11
PIN.....	15-2
PIN2.....	15-2
PIN Entry	11-2
PIN Lock	15-2
Playlists	8-6, 8-9, 8-10
Portrait Position	1-2
Printing (→ DPOF).....	7-16
Printing (Bluetooth®).....	7-16

Q

Quick Operations	1-11
Quick Reply	4-23

R

Received Msg. View	4-28
Record Caller Voice	3-14
Reference URLs	15-23
Reject (calls)	3-12
Remote Lock (Osaifu-Keitai®).....	9-13

Call Remote Lock.....	9-14
Count for Lock	9-38
Mail Remote Lock	9-13
Notice Settings	9-38
Remote Monitor	3-12
Reply	4-9, 4-17, 4-23
Auto Reply.....	4-23
Quick Reply.....	4-23
Opening received message for reference.....	4-23
Reset (→ Master Reset)	14-7
Reset All	14-7
Reset Settings.....	14-7
Retrieve NW Info.....	14-6
Retrieving Network Information	1-6
Review	7-7
Rotate 90° to.....	1-17
RSS Feeds	5-8

S

S! Addressbook Back-up	13-14
Confirming user ID & password	13-19
Set Auto Sync	13-19
Sync History	13-19
S! Applications.....	8-7
S! Circle Talk	10-11, 10-21
Accepting requests.....	10-12
Initiating.....	10-12
IP Service Setting	14-6
Registering Members	10-11
S! Familiar Usability	2-4
S! FeliCa (→ Osaifu-Keitai®)	9-12
S! Friend's Status	10-8, 10-20
IP Service Setting	14-6
Opening Member Status	10-9
S! GPS Navi	9-23
S! Information Channel (Japanese)	10-6, 10-19
Weather Indicator.....	10-6
S! Loop (Japanese).....	1-24
S! Mail	4-2

Attaching Files.....	4-5
Create Msg. Size	4-20, 4-31
Feeling Mail	4-5
Graphic Mail	4-6
S! Mail Settings	4-30
S! Mail (sending)	4-4
S! Quick News (Japanese)	10-5
Automatic Update	10-18
Deleting Items	10-18
S! Loop List	10-18
S! Town (Japanese)	1-24
Safety Precautions	vi
SAR	xviii
Saved Pages.....	5-7, 5-13
Scan Barcode	9-29
Open Barcode	9-42
Scanning during text entry	9-42
Using scan results.....	9-43
Scan Card	9-31
Using scan results.....	9-44
Scan Text	9-32
Scanning during text entry	9-45
Using scan results.....	9-45
Schedules (→ Calendar)	9-2
Scratch Pad	2-15
Screenshots (capturing)	6-6
SD Local Contents.....	12-8
Search	2-14
Security Codes.....	1-22
Sent Msg. View.....	4-28
Set as Wallpaper	12-7
Set Date/Time	14-2
Set Key Light.....	14-4
Set Key Shortcut.....	1-13
Set Sent Cancel.....	4-19
Set Talk Mode	1-16, 3-14, 3-20
Set Time Zone	9-18, 14-2
Set to Default (S! Applications)	8-12
Set Voice Clear	1-16, 3-14, 3-20
Shortcuts.....	1-11



Recorded programs (deleting)	6-17
Recorded programs (renaming)	6-17
Simultaneous recording	6-9
Split File	6-17
TV Reserve Prior	6-18
TV Timers (watching/recording)	6-11
Setting Timer via Program Info	6-7
Timer entries (editing/deleting)	6-18
Timer log records (opening/deleting)	6-18
TV Alarm	6-18
Wakeup TV	9-8

U

USB Charge	1-4, 1-28
User Dictionary	2-11
Deleting entries	2-20
USIM Card	15-2
USIM PINs (→ PIN)	15-2
Utility Software	13-11

V

VeilView	1-23
Vibration	2-5
Video (deleting)	8-10
Video (downloading)	8-3
Video (playing)	8-5, 8-8
Video (recording)	7-6
Display Size	7-19
Microphone	7-19
Record Time/Size	7-19
Video (recording & sending)	7-6
Video Calling	3-5
Remote Monitor	3-12
Video Calls (answering)	3-5
Video Calls (placing)	3-5
Voice Calling	3-3
Voice Calls (answering)	3-3
Voice Calls (placing)	3-3
Voice Calls (placing while abroad)	3-4
Voice Recorder	9-28

Record Time	9-42
Save and Send	9-42
Save Recording to	9-42
Voicemail	3-10
Volume (ringtones)	14-5

W

Wakeup TV	9-8
Wallpaper	2-3
Slide W paper	2-3
Warranty	15-40
Weather Indicator	10-6
Icon Update	10-19
Manual Update	10-6
Weather	10-19
Weather Indicator List	15-17
Widgets	10-2, 10-16
World Clock	9-18

Y

Yahoo! Keitai	5-3
----------------------------	------------

Objectives

Accessing Secret Files/Entries

Data Folder	12-4
Messaging folders	4-11
Phone Book	2-17
Schedules/tasks	9-3

Accessing the Internet

From message text	4-22
From scan results	9-43, 9-45
Media Player	8-3
PC Site Browser	5-4
RSS Feeds	5-8
Yahoo! Keitai	5-3

Browsing/Viewing

Document Viewer	9-25
e-Books	10-7
PC Site Browser	5-4
S! Information Channel	10-6

S! Quick News	10-5
Yahoo! Keitai	5-3

Calculating

Calculator	9-10
Expenses Memo	9-11

Canceling

Alarm	9-7
Answer Phone	3-4
Call Forwarding	3-11
Customized Screen	2-19
Download Dictionary	2-11
Function Lock	11-2
Hour Minder	9-19
IC Card Lock	9-13
Keypad Lock	1-23
Large Font Menu	2-2
Manner mode	1-21
Offline Mode	1-21
S! Familiar Usability	2-19
S! Information Channel	10-6
Secret folders	4-26, 12-4
Simple Menu	1-16
Speed Dial entries	3-7
Voicemail	3-11

Changing

Font Size	2-2
Font Weight	2-2
Handset Code	1-22
Handset mail address	4-3
Network Password	3-18
PIN & PIN2	11-6

Changing Ringtones

Phone Book	2-17
Ringtones/videos	2-5
Via Data Folder	12-7

Composing/Sending Messages

Feeling Mail	4-5
From Call Log records	3-16
From Internet pages	5-10
From message text	4-22



- From Phone Book 2-22
- From received messages 4-9
- From scan results 9-43, 9-45
- From Scratch Pad 2-15
- From sent messages 4-27
- Graphic Mail 4-6, 4-20
- PC Mail 4-17
- S! Mail 4-4
- SMS 4-7
- Copying**
- Calculation results 9-37
- Data Folder files 12-4
- From text entry window 2-10
- Scan results 9-44, 9-46
- Text (e-Books) 10-20
- Text (Internet pages) 5-10
- Text (Messaging) 4-23
- Text (S! Information Channel pages) ... 10-19
- Downloading**
- Customized Screen 2-4
- e-Books 10-7
- Music 8-3
- S! Applications 8-11
- Video 8-3
- Widgets 10-2
- Exchanging Files**
- Bluetooth® 13-7
- IC Transmission 13-5
- Infrared 13-2
- IrSS Transfer 13-2
- Mass Storage 13-11
- MTP Mode 8-3
- Hiding Files/Entries**
- Data Folder 12-4
- Messaging folders 4-11
- Phone Book 2-17
- Schedules/tasks 9-33, 9-35
- Inserting/Removing**
- Battery 15-4
- Memory Card 12-5
- USIM Card 15-3
- Locking/Restricting**
- Application Lock 11-3
- Call Log 11-3
- Function Lock 11-2
- Incoming/outgoing calls 3-18, 3-19
- Keypad Lock 1-23
- Mail records 11-3
- Osaifu-Keitai® 9-13
- PIN Entry 11-2
- TOUCH CRUISER 1-29
- Managing Schedules**
- Calendar 9-2
- Tasks 9-4
- Measuring Time**
- Countdown Timer 9-17
- Stopwatch 9-16
- Notifying Phone Number**
- Opening My Details 1-23
- Via Bluetooth® 13-18
- Via IC Transmission 13-17
- Via Infrared 13-17
- Placing Calls**
- By entering phone numbers 3-3
- From Call Log records 3-16
- From Internet pages 5-10
- From message text 4-22
- From Phone Book 2-18
- From scan results 9-43, 9-45
- International calls 3-3
- Speed Dial 3-7
- Video Calls 3-5
- While abroad 3-4
- Playing**
- Answer Phone messages/Caller Voice 3-4
- Files (Scan Barcode) 9-43
- Music 8-4
- Recorded TV programs 6-10
- Recorded TV programs from Timer log .. 6-18
- Split files (TV) 6-17
- Streams 5-12
- Video 8-5
- Voice files 9-28
- Voicemail messages 3-11
- Rejecting**
- Calls from public phones 3-18
- Calls from specific numbers 3-18
- Calls from unsaved numbers 3-18
- Calls with undisplayable Caller ID 3-18
- Calls without Caller ID 3-18
- Near Chat requests 10-13
- Resetting/Formatting**
- All settings 14-7
- Handset 14-7
- Memory Card 12-6
- Saving**
- Backup 13-13
- Captured still images 7-4, 7-8, 7-10
- Draft messages 4-19
- Edited still images 7-11
- Files (Internet) 5-10
- Files (S! Information Channel pages) ... 10-19
- Graphic Mail templates 4-6
- Mail attachments 4-22
- Notepad entries 9-26
- Phone Book entries 2-16
- Recorded video 7-6
- Scan results 9-42, 9-44
- TV channels 6-13
- Saving Phone Book Entries**
- Add New Entry 2-16
- Data Folder files 12-7
- During a call 3-14
- From Call Log records 3-16
- From message text 4-22
- From received messages 4-22
- From scan results 9-43, 9-45
- Scanning**
- Business cards 9-31
- QR Codes 9-29



- Text..... 9-32
- Searching**
- Messages..... 2-14, 4-11
- Music to download 8-3
- Music to play 8-4
- Notepad entries..... 9-41
- Phone Book 2-18
- Text (Internet pages) 5-10
- TV program information 6-13
- Video to play 8-5
- Web Search 2-14
- Sending via Mail**
- ASCII Art entries 9-27
- Data Folder files 4-5, 12-3
- Notepad entries..... 9-41
- QR Codes 9-30
- Scan results 9-44, 9-45
- Still images..... 7-4, 7-7
- URLs 5-10, 5-12
- Video 7-6
- Voice files 9-42
- Setting Wallpaper**
- From attached files..... 4-22
- From Phone menu 2-3
- From scan results..... 9-43
- Via Data Folder 12-7
- Showing in Standby**
- Clock/Calendar..... 14-4
- S! Applications 8-11
- Wallpaper..... 2-3
- World Clock..... 9-18
- Using as Alarm Clock**
- Alarm..... 9-6
- Hour Minder 9-19
- Wakeup TV 9-8
- Using Away from Home**
- Alarm..... 9-6
- Camera 7-2
- Compass..... 9-22
- Digital TV 6-2
- Hour Minder 9-19
- Osaifu-Keitai® 9-12
- Pedometer..... 9-20
- Pen Light 1-23
- S! GPS Navi 9-23
- Scratch Pad..... 2-15
- Search..... 2-14
- Voice Recorder..... 9-28



Warranty & Service

■ Warranty

Warranty is provided when you purchase handset.

- Check the name of distributor and date of purchase.
- Read contents and keep in a safe place.
- The warranty term is described in the warranty.

■ After-Sales Services

See **P.15-6** "Troubleshooting" before contacting SoftBank for service or repairs.

If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (**P.15-41**) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, possible repairs are performed upon request at subscriber expense.

For other services, contact the distributor, the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (**P.15-41**).

Replacement parts are available for 6 years after termination of production.

- SoftBank is not liable for any damages resulting from use of this product.
- SoftBank is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.



Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at **157**
for General Information or **113** for Customer Assistance

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(International charges apply.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113



SoftBank 932SH User Guide

March 2009, First Edition

SOFTBANK MOBILE Corp.

For additional information, please visit a SoftBank Shop.

Model: SoftBank 932SH

Manufacturer: SHARP CORPORATION



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルに協力も。

Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.



Mind your mobile manners when carrying a handset.