

Digital TV	6-2
Basics	6-2
Area Setup.....	6-4
Watching TV	6-5
Obtaining Program Information.....	6-7
Watching Two Programs Simultaneously	6-8
TV Player.....	6-9
Recording Programs.....	6-9
Playing Recorded Programs.....	6-10

TV Timer	6-11
TV Timer & TV Recording Timer	6-11
Time Shift	6-12
Time Shift Recording & Playback ...	6-12
Additional Functions	6-13
Troubleshooting.....	6-19

6

Digital TV



Basics

932SH supports One Seg terrestrial digital television broadcast services developed for mobile devices in Japan.

Watch Live Television

Set up a channel list for your service area to access available programming. Capture screenshots while watching TV.

Multi Job

Watch TV in one half of Display using the other to access messaging functions, browse the Internet or open Phone Book, etc.

Access TV Listing (EPG)

Access TV Listing (EPG) to find program channels and times; set Reservations by date and time to record shows or activate TV.

View Data Broadcasts

In addition to audio and visuals, enjoy text, program-related information and interactive services.

Record Shows/Time Shift

 
Record current program for later viewing on handset; if interrupted by incoming calls while watching TV, record it temporarily for delayed playback.

Reserve TV Programs

Record a show or activate TV at a specified time; enter dates & times manually or reference TV Listing electronic program guide.

Portrait & Cycloid Positions

View programs and Data Broadcast in portrait position, or rotate Display to Cycloid position to watch TV in widescreen.



Dual One Seg Tuner for Simultaneous Viewing & Recording

Watch one program in half of Display while another appears in the other half; record both programs simultaneously. Press a key to switch positions for audio. Search other programs in the same time slot easily via program listing.



Precautions


- 932SH TV is exclusively for use in Japan.
- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programming may not be viewable or record properly when:
 - Too far from or too close to broadcasting stations
 - In mountainous areas or near tall buildings
 - Aboard trains or in moving vehicles
 - Near high-voltage lines, neon lights or wireless base stations
 - Near railroad tracks or highways
 - Anywhere a jamming signal is broadcast/ reception is unstable

Recording Precautions

- Saved files cannot be forwarded or attached to messages.
- 932SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank is not liable for any damages resulting from accidental loss or alteration of recorded content.

Digital TV Antenna

TV Antenna is located behind Display. Move handset to find best reception.

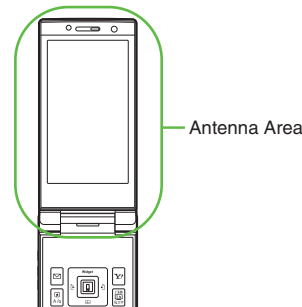

Use optional TV Antenna Connection Cable as needed.

Area Setup


When activating TV for the first time, follow these steps to set up channels by area:


1 



• Setup confirmation appears.

2 Yes 

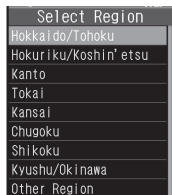

3 Select region 


4 Select prefecture  
Select locality  



• After setup, channel list appears.

5 



 





• To watch TV, select **Digital TV** and press .


 



Watching TV without Completing Area Setup

In , Other Region 



Adding Reception Areas

    Set Channels  

Change Area   Select Area 

  Set Area Info   From 

Advanced

-  • Switching reception Areas • Renaming Areas • Changing/disabling  function • Editing channels • Deleting all channels in Area • Adding new channels to Area • Updating all channels in the Area (P.6-13)



Watching TV

1 Rotate Display



TV Window

- When rotating Display for the first time, Landscape menu opens; select **Activate Digital TV** and press to complete setup.
- Press to activate TV in portrait position; Data Broadcast text appears below TV image.

2 Use Keypad to select a channel

- Use to switch channels one by one; Long Press to find channel with stable signal automatically.

3 ➔ Yes ➔ ➔ TV ends

Incoming Calls

- Press to answer calls.
- When S! Circle Talk request arrives, press to start S! Circle Talk.

When Answering Voice Calls with Memory Card Inserted

- Current program is temporarily recorded; start playback after the call. (Time Shift)

Incoming Messages

- Double beep sounds and New Message notice appears. Long Press to open messages.

Key Assignments

Open Options Menu	
Toggle Panel On/Off	
Start/End Two Screen	
Volume Control	
Toggle Display Size	
Change Area	

Panel Description



1 Area name	5 Station name
2 Channel key	6 Signal strength*
3 Channel	7 Sound Channel
4 Program name	8 Volume



*The more bars the better.
Indicator position varies with display size.

Advanced

- Viewing key assignments
- Searching current program on the Internet
- Enlarging display size for portrait position
- Smoothing TV images
- Saving current channel
- Selecting an audiovisual mode (And more on **P.6-13**)
- Adjusting current AV Mode parameters
- Changing panel pattern
- Customizing viewing options for Cycloid position (And more on **P.6-14**)



Data Broadcast (Japanese)

In portrait position, Data Broadcast text appears below TV image. Use  to select an item and press  to access program-related information and interactive services.
Not available while Two Screen is active.



Data Broadcast Window

Data Broadcast Fees

- Data Broadcast information viewing is free, however, using data links/related services incurs Internet connection fees.
- A confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.

Capturing Screenshots

Capture screenshots while watching TV.
(May be unavailable if TV was activated by TV Timer, etc.)
Saved images cannot be forwarded, edited, set as Wallpaper or attached to messages.


1 In TV window,

2





- Image is saved.

Opening Saved Images

• While Watching TV

- [TV Window]  ➔ Useful Func. ➔  ➔ TV-Image Folder ➔  ➔ Select image ➔ 

• From Standby

-  ➔ TV ➔  ➔ TV-Image Folder ➔  ➔ Select image ➔ 




 
 




Enlarging Specific Image Portion

Enlarge image portions temporarily in Cycloid position.
May be unavailable while Two Screen is active, etc.

1 In TV window, - (Long)



- Key Assignments:

		
Upper left	Upper center	Upper right
		
Left	Center	Right
		
Lower left	Lower center	Lower right

Multi Job

1 In TV window,



2 Select function ➔

- To toggle function windows, press .

3 ➔ Function window closes

Advanced

- Changing display view ● Returning to initial window ● Deleting information saved from Data Broadcasts ● Hiding Network connection confirmation
- Sending/hiding Location Information ● Sending manufacture number and other information (P.6-15)

Obtaining Program Information

Access information on current program, stations or other programs in the same time slot.


TV Listing	Start EPG S! Application to find program channels and times for specified area
Program Info	Open program details via current channel's schedule; set Reservations to record shows or activate TV
Other TV Listing	Open list of programs currently being broadcast; record one while watching current program

TV Listing (Japanese)

- In TV window, [Y] (Long)**
 - EPG application starts; refer to the application's help menu for operational instructions.
 - When using EPG application for the first time, a confirmation appears. Follow onscreen instructions.

Program Info

- In TV window, [M] ➡**
OperateProgram ➡ [Q]
- Program Info. ➡ [Q]**

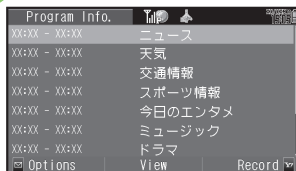

Program Info Window

- Select program ➡ [Q]**
 - To return, press [BACK] twice.

Setting Recording Timer via Program Info [Program Info Window] Select program ➡ [Y] ➡ [Q]

- Timer entries set via Program Info are updated with program changes automatically. Program cancellations cancel corresponding Timer entries. (Poor signal conditions may inhibit updates or cancellations.)

Setting TV Timer via Program Info [Program Info Window] Select program ➡ [M] ➡ Programming ➡ [Q]

Other TV Listing

- In TV window (Cycloid position), [Q]**



Other TV Listing Window

- Select program ➡ [M]**
 - Program details appear.
 - To return, press [BACK] twice.

Accessing Other TV Listing in Portrait Position

[TV Window] [M] ➡ OperateProgram ➡ [Q] ➡ Other TV Listing ➡ [Q]

Tuning in a Second Program in the Same Time Slot

[Other TV Listing Window] Select program ➡ [Q]

Recording Second Program in the Same Time Slot

[Other TV Listing Window] Select program ➡ [Y]

- Recording starts. (Two Screen starts.)



Watching Two Programs Simultaneously

932SH has built-in dual One Seg tuner; tune in two programs simultaneously in split screen.

Picture-in-Picture

While main program appears, open a second one (audio muted) in an inset window.

1 In TV window,



- Second program appears. (Two Screen starts.)
- Second program audio is disabled.
- Second program channel selection is active by default. Cancel setting to navigate main program channels.

2 to watch second program


- Program positions switch.

3 Cancels split screen



- Main program appears alone.

Split Screen Restrictions

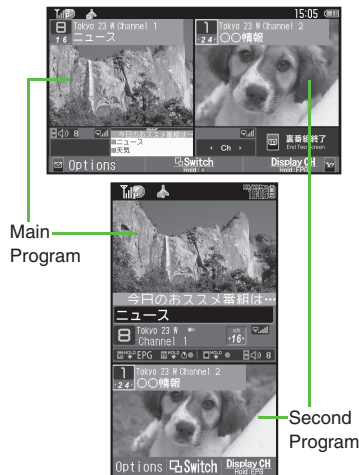- Data Broadcast, Other TV Listing, widescreen partial image enlargement, Change Area, Save Channel, etc. are unavailable.



Advanced

-  Using Picture-in-Picture
-  Canceling second program channel selection (P.6-15)

Recording Programs

Record current program on handset or Memory Card.

- Clip is saved to handset (or Memory Card, if inserted).
- When Small Light flashes yellow, reception is poor; change location to improve it: Small Light illuminates green for moderate, or blue for strong reception.

1 In TV window, (Long) ➔ Recording starts




Recording Window

- Changing volume, etc. does not affect recordings.

2 (Long) ➔ Recording ends

Recording Programs in Portrait Position [TV Window] (Long)

- To end, Long Press  while recording.

Recording Second Program in the Same Time Slot

- Open Other TV Listing in TV window, then select a program and start recording.
- Channel selection does not affect recording of second program.

Memory/Battery Runs Low or Video Call/S! Circle Talk Request is Accepted

- Recording stops. (Recorded clip is saved.)


Saving Files via the Internet while Recording

- While recording programs to handset, confirm there is enough free memory before saving files.

Dubbing 10

- 932SH supports Dubbing 10 copy protection scheme that allows recorded programs to be copied from handset to Memory Card. Open file properties to check the remaining number of copies allowed to be made.

Recording while Two Screen is Active

Recording of main program starts. To record second program simultaneously, press  and proceed. (Simultaneous recording)

- Memory Card is required for simultaneous recording.
- During simultaneous recording, operations are available for main program only.



Recording main program



Program positions switch



Simultaneous recording


Advanced

-  ● Recording programs without Data Broadcasts ● Saving Data Broadcasts to Memory Card ● Recording programs to handset (P.6-16)



Playing Recorded Programs

1 In TV window, [TV] ➔ TV Player ➔ [■]

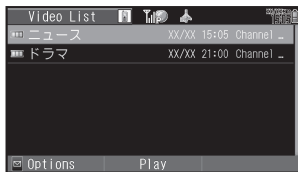

Video List

- [■] indicates the file is unplayable.

2 Select file ➔ [■]



Playback Window

- Playback starts. (The last played file from where it stopped.)

3 [Y] (Long) ➔ Playback stops

Changing Playback Position

- Slide finger left or right over TOUCH CRUISER during playback; press [■] to resume.
 - Not available during Time Shift playback.

Switching Video List

After 1, [TV] ➔ *Change to Phone or Change to MemoryCard* ➔ [■]

Playback Operations

Adjust volume or enlarge widescreen image portion in the same way as while watching TV.

Fast Forward	[■] ¹
Rewind	[■] ^{1, 2}
Skip Forward	[■#]
Skip Backward	[■#]
Pause ³	[■] ([Y] in portrait position)
Split File	[■] (Long) ⁴
Set Marker	[■] ⁴
Toggle Panel On/Off	[■]

¹ Each press increases speed. To resume normal playback, press [■] ([Y] in portrait position).

² Long Press to replay. (Available when no Marker is saved.)

³ In pause, use [■] to reverse/advance frame.

⁴ Not available during Time Shift playback.

Advanced


- Splitting files by specifying a time point
- Playing files repeatedly
- Playing split files
- Checking memory status
- Renaming files
- Deleting files
- Copying files to Memory Card
- Moving files to Memory Card
- Opening file properties
- Playing files with Markers (And more on P.6-17)

TV Timer & TV Recording Timer


1 In TV window, ➔ **Rec./TimeShift** ➔

2 **Reservation List** ➔ ➔

3 **New Entry** ➔

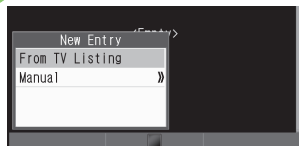

4 **Manual** ➔ ➔ **Programming or Recording** ➔

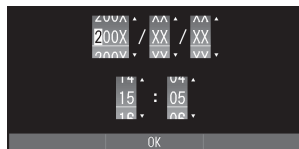

5 Enter start date/time ➔ ➔ Enter end date/time ➔

6 **Channel:** ➔ ➔ **Select channel** ➔ ➔

- If a confirmation appears, read the message and press .

Setting Timer via EPG

After **4**, **From TV Listing** ➔

- Refer to the application's help menu for operational instructions.

Timer Recording Precautions

Confirm target channel reception; keep handset open.

- End the current operations.
- Confirm battery is adequately charged and there is enough free memory.

When TV is activated for Timer recording, audio output is redirected to Speaker/Headphones even if Sound Output is set to **Bluetooth Device**. (TV audio is muted.)

At Timer Time (TV Alarm Time)

TV and Alarm activate. Alarm ends after the set duration.



Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

While Watching TV

- Two Screen starts automatically; Timer program appears as second program.

While Using Another Function

- TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV remains off, or the current function ends automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.

Advanced

- Opening/editing/deleting Timer details ● Opening/deleting Timer log ● Customizing TV Alarm settings ● Prioritizing current operation over TV Timer/TV Recording Timer (P.6-18)



Time Shift Recording & Playback

Record current program temporarily for delayed playback.

Recorded content is deleted after playback.

1 While watching TV, (Long) ➔ Recording starts



Recording in progress

2 While recording, (Long) ➔ Playback starts

- Playback starts from where recording was started.
- Recording and playback stop when Time Shift playback has caught up to the real-time program.


 

Tuning in a Second Program during Time Shift Playback

 ➔ *Two Screen* ➔  ➔ *Activate Two Screen* ➔ 


Stopping Fast Forward to Resume Playback



Playback Operations

Fast Forward	
Skip Forward	
Skip Backward	

Time Shift Recording Automatic Activation

When a Voice Call is answered while watching TV with Memory Card inserted, Time Shift recording starts automatically; Long Press  after the call for playback.

Advanced

-  ● Disabling Time Shift recording automatic activation (P.6-16)



Area & Channel	
Switching reception Areas	While watching TV, → Select Area →
Renaming Areas	While watching TV, → Set Channels → → Change Area → → Select Area → → Change Area Name → → Enter name →
Changing/disabling function	<div> Start Here While watching TV, → Set Channels → → Channel Key Setting → → See below </div> <p>Toggle All Receivable Channels By Manual → </p> <p>Disabling Disable → </p>
Editing channels	<div> Start Here While watching TV, → Set Channels → → CH Switch → → Select channel → → See below </div> <p>Switching Channel Positions Flip → → Select target key → </p> <p>Deleting Channels Delete → → Yes → </p>
Deleting all channels in Area	While watching TV, → Set Channels → → Change Area → → Select Area → → Reset Settings → → Yes →
Adding new channels to Area	While watching TV, → Set Channels → → Change Area → → Select Area → → Channel Update → → Update Further →
Updating all channels in the Area	While watching TV, → Set Channels → → Change Area → → Select Area → → Channel Update → → Update All → → Yes →

Watching	
Viewing key assignments	While watching TV, → Help → <ul style="list-style-type: none"> Also available while recording or playing programs.
Searching current program on the Internet	While watching TV, → Operate Program → → Program Info. Search → → Search → <ul style="list-style-type: none"> Follow onscreen instructions.
Enlarging display size for portrait position	While watching TV, → AV Settings → → Screen Size → → Enlarge →
Viewing widescreen images in original size	While watching TV, → AV Settings → → Screen Size → → Original Size →
Smoothing TV images	While watching TV, → AV Settings → → Smooth Mode → → On → <ul style="list-style-type: none"> May not be effective depending on the image. Not effective while Two Screen is active.
Saving current channel	While watching TV, → Set Channels → → Save Channel → → Select key → <ul style="list-style-type: none"> To overwrite a saved channel, choose Yes and press .
Selecting an audiovisual mode	While watching TV, → AV Settings → → AV Mode → → Select mode → <ul style="list-style-type: none"> TV reception time may shorten depending on the mode.



Adjusting current AV Mode parameters	<p>[Start Here] While watching TV, ➔ AV Settings ➔ ➔ See below</p> <ul style="list-style-type: none"> Change AV Mode (select mode other than Link to Genre) first.
	<p>Brightness</p> <p>Image ➔ ➔ Brightness ➔ ➔ Adjust level ➔ </p>
	<p>Disabling/Enabling Brightness Adjustment via Light Sensor</p> <p>Image ➔ ➔ Brightness ➔ ➔ (/✓) ➔ </p>
	<p>Adjusting Brightness Automatically by Scene</p> <p>Image ➔ ➔ Control by Scene ➔ ➔ On(Light) or On ➔ </p>
	<p>Other Image-Related Parameters</p> <p>Image ➔ ➔ Select item ➔ ➔ Adjust level ➔ </p> <ul style="list-style-type: none"> Adjust Contrast, Blackness (black level), Color (color density), Tint (skin color tone) and Sharpness.
Changing panel pattern	<p>Restoring Default Image Settings</p> <p>Image ➔ ➔ Reset ➔ ➔ Yes ➔ </p>
	<p>Selecting Sound Option</p> <p>Tone ➔ ➔ Select option ➔ </p>
Customizing viewing options for Cycloid position	<p>[Start Here] While watching TV in Cycloid position, ➔ Advanced ➔ ➔ Landscape Sets. ➔ ➔ See below</p> <p>Showing Indicators Always</p> <p>Display Icon ➔ ➔ On ➔ </p> <p>Disabling Partial Image Enlargement</p> <p>Enlarge Point ➔ ➔ Off ➔ </p>

Switching One Seg service	<p>While watching TV, ➔ Set Channels ➔ ➔ Select Serv. Station ➔ ➔ Select service ➔ </p> <ul style="list-style-type: none"> Available for programs with multiple services.
Listening to audio from Speakers	<p>While watching TV, ➔ Advanced ➔ ➔ Sound Output ➔ ➔ Loudspeaker ➔ </p>
Using wireless Headphones	<p>While watching TV, (Long)</p> <ul style="list-style-type: none"> Pair SCMS-T DRM scheme compliant Bluetooth® headphones beforehand.
Setting TV to end automatically after a period of time	<p>While watching TV, ➔ Advanced ➔ ➔ Auto Exit ➔ ➔ Auto Exit Time ➔ ➔ Select time ➔ </p>
Disabling auto shut-off when handset is closed	<p>While watching TV, ➔ Advanced ➔ ➔ Auto Exit ➔ ➔ Close Action ➔ ➔ Watch TV ➔ </p>
Changing handset responses to incoming transmissions	<p>[Start Here] ➔ TV ➔ ➔ Settings ➔ ➔ Calls & Alarms ➔ ➔ See below</p>
	<p>Showing Alarm Notice</p> <p>Alarm ➔ ➔ Alarm Notice ➔ </p>
	<p>Showing Calls or SI Circle Talk Requests</p> <p>Select item ➔ ➔ Notice a Call ➔ </p>
	<p>Showing New Message Window</p> <p>Incoming Message ➔ ➔ Calls & Alarms ➔ </p>
Switching audio output to wireless device	<p> ➔ TV ➔ ➔ Settings ➔ ➔ Sound Output ➔ ➔ Bluetooth Device ➔ </p>



Two Screen	
Using Picture-in-Picture	While watching TV, \Rightarrow Two Screen \Rightarrow \Rightarrow Set Two Screen \Rightarrow \Rightarrow Sub Screen \Rightarrow
Canceling second program channel selection	While watching TV, \Rightarrow Two Screen \Rightarrow \Rightarrow CH Op. OtherTVList \Rightarrow \Rightarrow Off \Rightarrow <ul style="list-style-type: none"> When Off, main program channel selection is active.

Data Broadcast	
Changing display view	While viewing Data Broadcast in portrait position, \Rightarrow Set Broadcast Data \Rightarrow \Rightarrow Change View (Data) \Rightarrow <ul style="list-style-type: none"> To return to TV window, press .
Returning to initial window	While viewing Data Broadcast in portrait position, \Rightarrow Set Broadcast Data \Rightarrow \Rightarrow Back to Top \Rightarrow
Deleting information saved from Data Broadcasts	Start Here While watching TV, \Rightarrow Set Broadcast Data \Rightarrow \Rightarrow Delete StationData \Rightarrow \Rightarrow See below Deleting by Station Select station \Rightarrow \Rightarrow Delete \Rightarrow \Rightarrow Yes \Rightarrow Deleting All \Rightarrow Delete All \Rightarrow \Rightarrow Enter Handset Code \Rightarrow \Rightarrow Yes \Rightarrow
Hiding Network connection confirmation	While watching TV, \Rightarrow Set Broadcast Data \Rightarrow \Rightarrow Notify Connection \Rightarrow \Rightarrow Off \Rightarrow

Sending/hiding Location Information	Start Here While watching TV, \Rightarrow Set Broadcast Data \Rightarrow \Rightarrow Location \Rightarrow \Rightarrow See below
	Sending Always On \Rightarrow
Sending manufacture number and other information	Hiding Always Off \Rightarrow
	While watching TV, \Rightarrow Set Broadcast Data \Rightarrow \Rightarrow Manufacture Number \Rightarrow \Rightarrow On \Rightarrow

TV Link (Japanese)	
Saving links to Data Broadcasts or related information	While viewing Data Broadcast, select link source \Rightarrow <ul style="list-style-type: none"> Link navigation varies by program. Follow onscreen instructions to save links.
Using TV links	Start Here \Rightarrow TV \Rightarrow \Rightarrow TV Link \Rightarrow \Rightarrow See below Opening TV Links Select link \Rightarrow <ul style="list-style-type: none"> Connection fees may apply. Opening Properties Select link \Rightarrow \Rightarrow Details \Rightarrow
Deleting TV links	Start Here \Rightarrow TV \Rightarrow \Rightarrow TV Link \Rightarrow \Rightarrow See below One Entry Select link \Rightarrow \Rightarrow Delete \Rightarrow \Rightarrow Yes \Rightarrow All Entries \Rightarrow Delete All \Rightarrow \Rightarrow Enter Handset Code \Rightarrow \Rightarrow Yes \Rightarrow



Subtitle & Sound

Changing subtitle settings	<p>Start Here While watching TV, ➔ Subtitle/Sound ➔ ➔ See below</p> <ul style="list-style-type: none"> May be unavailable depending on program content or viewing style (TV orientation, Two Screen usage pattern, etc.).
	<p>Showing Subtitles Always</p> <p>Display Subtitle ➔ ➔ On ➔ </p>
	<p>Hiding Subtitles Always</p> <p>Display Subtitle ➔ ➔ Off ➔ </p>
	<p>Changing Subtitle Language</p> <p>Subtitle Language ➔ ➔ Language 2 ➔ </p>
	<p>Showing Subtitle Area Always</p> <p>Auto Subtitle Off ➔ ➔ Off ➔ </p>
	<p>Showing Subtitles at the Top</p> <p>Subtitle Position ➔ ➔ Upper ➔ </p>
Changing sound settings	<p>Start Here While watching TV, ➔ Subtitle/Sound ➔ ➔ See below</p>
	<p>Selecting Sound Option</p> <p>Sound Type ➔ ➔ Sound2 ➔ </p> <ul style="list-style-type: none"> Available when multiple sounds are supported.
	<p>Listening to Sub Language</p> <p>Sound Channel ➔ ➔ Sub ➔ </p>
	<p>Listening to Main & Sub Languages</p> <p>Sound Channel ➔ ➔ Main + Sub ➔ </p>

Recording

Recording programs without Data Broadcasts	<p>While watching TV, ➔ Set Broadcast Data ➔ ➔ Set Recording ➔ ➔ Image Only ➔ </p>
Saving Data Broadcasts to Memory Card	<p>While watching TV, ➔ Set Broadcast Data ➔ ➔ Image Location ➔ ➔ Memory Card ➔ </p>
Disabling Time Shift recording automatic activation	<p> ➔ TV ➔ ➔ Settings ➔ ➔ Set Call Time Shift ➔ ➔ Off ➔ </p>
Recording programs to handset	<p> ➔ TV ➔ ➔ Settings ➔ ➔ Save Recording to ➔ ➔ Phone Memory ➔ </p>



Recorded Programs

■ Playback

Splitting files by specifying a time point	During playback, ➔ <i>Split File</i> ➔ ➔ <i>Select Point</i> ➔ ➔ <i>Specify point</i> ➔ ➔ <i>Confirm</i> ➔
Playing files repeatedly	➔ <i>TV</i> ➔ ➔ <i>TV Player</i> ➔ ➔ ➔ <i>Playback Pattern</i> ➔ ➔ <i>Repeat</i> ➔
Playing split files	➔ <i>TV</i> ➔ ➔ <i>TV Player</i> ➔ ➔ <i>Select split file</i> ➔ ➔ <i>Select file</i> ➔

■ Managing

Checking memory status	➔ <i>TV</i> ➔ ➔ <i>TV Player</i> ➔ ➔ ➔ <i>Memory Remaining</i> ➔
Renaming files	➔ <i>TV</i> ➔ ➔ <i>TV Player</i> ➔ ➔ <i>Select file</i> ➔ ➔ <i>Rename</i> ➔ ➔ <i>Enter name</i> ➔
Deleting files	<p><i>Start Here</i> ➔ <i>TV</i> ➔ ➔ <i>TV Player</i> ➔ ➔ <i>See below</i></p> <p><i>Single Files</i> <i>Select file</i> ➔ ➔ <i>Delete</i> ➔ ➔ <i>Yes</i> ➔ </p> <p><i>All Files</i> ➔ <i>Delete All</i> ➔ ➔ <i>Enter Handset Code</i> ➔ ➔ <i>Yes</i> ➔ </p>
Copying files to Memory Card	➔ <i>TV</i> ➔ ➔ <i>TV Player</i> ➔ ➔ ➔ <i>Change to Phone</i> ➔ ➔ <i>Select file</i> ➔ ➔ <i>Copy to Card</i> ➔ ➔ <i>Yes</i> ➔

• File is moved from handset to Memory Card when the number of copies made exceeds the limit.

Moving files to Memory Card

➔ *TV* ➔ ➔ *TV Player* ➔ ➔ ➔ *Change to Phone* ➔ ➔ *Select file* ➔ ➔ *Move to Card* ➔ ➔ *Yes* ➔

- Files moved to Memory Card cannot be moved back to handset.

Opening file properties

➔ *TV* ➔ ➔ *TV Player* ➔ ➔ *Select file* ➔ ➔ *Details* ➔

Markers

Playing files with Markers

Start Here During playback ➔ *See below*

Skipping between Markers

(Long) or (Long)

Moving to Specific Markers

0 - (<9)

Using Marker List

Start Here During playback, ➔ *Set Marker* ➔ ➔ *Marker List* ➔ ➔ *See below*

Starting Playback

Select number ➔

Deleting a Marker

Select number ➔ ➔ *Delete* ➔

Deleting All Markers

➔ *Delete All* ➔ ➔ *Yes* ➔



TV Timer/TV Recording Timer

Opening/editing/ deleting Timer details	<p>[Start Here] While watching TV, ➔ Rec./TimeShift ➔ ➔ Reservation List ➔ ➔ See below</p> <p>Opening Entries Select entry ➔ </p> <p>Editing Entries Select entry ➔ ➔ Edit ➔ ➔ Edit ➔ • Some entries may not be edited depending on the content.</p> <p>Deleting Entries Select entry ➔ ➔ Delete ➔ ➔ Yes ➔ </p>
	<p>[Start Here] While watching TV, ➔ Rec./TimeShift ➔ ➔ Reservation List ➔ ➔ ➔ See below</p> <p>Opening Timer Log Select record ➔ </p> <p>Playing Recorded Programs Select record ➔ </p> <p>Deleting Records Select record ➔ ➔ Yes ➔ </p>
	<p>[Start Here] While watching TV, ➔ Advanced ➔ ➔ TV Alarm ➔ ➔ See below</p> <p>Changing TV Alarm Time Alarm Time ➔ ➔ Select time ➔ </p> <p>Disabling Tone/Vibration/Small Light Tone, Vibration or Light ➔ ➔ Off ➔ </p> <p>Changing Duration Duration ➔ ➔ Select time ➔ </p>

Prioritizing current
operation over TV
Timer/TV
Recording Timer

➔ **TV** ➔ ➔ **Settings** ➔ ➔ **TV Reserve Prior** ➔ ➔ **Off** ➔



Watching

? TV won't activate

- Battery may be low. Charge battery or install a charged battery.

? Cannot watch TV

- Reception may be poor; change location to improve it. (TV signal strength is independent of handset signal strength.)
- Handset may not have been used for a period of time; retrieve Network Information.
- TV is disabled upon subscription termination.

? Area setup does not complete correctly

- Perform **Update All** in Channel Update. Area setup may not complete correctly depending on the area or service availability.

Recording

? Ringtone does not sound as set while recording

- When a Chaku-Uta® file, etc. is set as ringtone, default ringtone may sound for incoming transmissions while recording.

TV Recording Timer

? *Could not start recording.* appeared as recording result

- Recording failed due to low battery/memory, active function, etc.

? *Recording aborted.* appeared as recording result

- Recording was interrupted due to low memory, Memory Card removal, etc.

