

Data Folder	12-2
Opening Files	12-3
Managing Files & Folders	12-4

Memory Card	12-5
Using Memory Card	12-5
Additional Functions	12-7
Troubleshooting	12-9

12

Data Folder & Memory Card



Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Large still images on Memory Card (images captured with save location set to DCIM)
Ring Songs-Tones*	Downloaded melodies and other sound files
S! Appli*	S! Applications
Widget*	Widgets
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books*	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Decoration Call*	Decoration Call files created on handset or obtained via mail
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

*Contains corresponding Yahoo! Keitai menu shortcut.

Checking Memory Status

 
☐ ➔ Data Folder ➔ ☐ ➔ Memory Status ➔ ☐ ➔ Phone Memory or Memory Card ➔ ☐

- Delete messages/files when memory is low. Handset performance may be affected when memory is full.



Opening Files


1 → Data Folder →

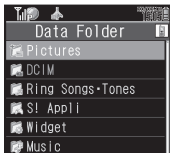

- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press .

2 →

 To open a sub folder, select it and press .

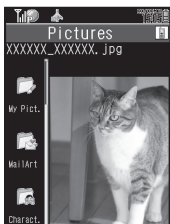

File List

3 →



- The content plays or appears.
- To return to file list, press .

Handling Open Images

- Press to enlarge, or press or to open next/previous ones. Press to rotate 90 degrees clockwise.

S! Mail Attachments

After , select file → → *Send/ Blog* → → *As Message* →

- When a confirmation appears, follow onscreen instructions.

 
Copy Protected Files (≡) or (≠)

- Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.

1 →

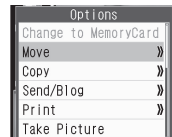

2 *Slide Show* →

- Slide Show starts.

3 → *Slide Show stops*

Changing Interval

In , → *Speed* → → *Select speed* →

- When Speed is set to *Manual*, press or to advance or reverse frame.

Advanced

- Switching file list view
- Changing image quality
- Changing Slide Show settings
- Showing Softkeys in image view
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.12-7)



Managing Files & Folders

Adding Folders

May be unavailable for some folders.

 
- 1 ➔ **Data Folder** ➔ ➔
Select folder ➔



File List

- 2 If **Download** is selected or folder is empty, skip ahead to 4.

- 3 **Manage Items** ➔



- 4 **Create Folder** ➔ ➔ Enter name ➔

Moving/Copying Files

Some files may not be moved/copied.

- 1 In file list, select file ➔
- 2 **Move or Copy** ➔ ➔
Phone or Memory Card ➔
• For still images, select **Pictures** or **Mail Art** and press .
- 3 Select folder ➔
- 4 **Move here or Copy here** ➔

Selecting Multiple Files

- 1 In file list,
- 2 Select file ➔
• Repeat 2 as needed. (To uncheck, select a file with and press .)

Hiding Folders

Restrict access to created folders.

Only handset folders can be hidden.

- 1 In file list, select folder ➔
- 2 **Set Secret** ➔ ➔ Enter Handset Code ➔

Accessing Secret Folders (Unlock Temporarily)

- [File List] ➔ **Unlock Temporarily**
➔ ➔ Enter Handset Code ➔

Canceling Secret

- Unlock Secret folders temporarily and select folder ➔ ➔ **Unset Secret** ➔ ➔ Enter Handset Code ➔

Advanced

- Renaming folders ● Opening file properties ● Renaming files ● Sorting files ● Deleting files & created folders ● Handling SVG files (P.12-8)



Using Memory Card

Use microSD™/microSDHC™ Memory Card (hereafter "Memory Card") to save and organize files for use on 932SH. Use recommended Memory Cards only. For details, see **P.15-23** "microSD™ Memory Card Compatibility."

 
Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never remove Memory Card or battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.


Inserting & Removing

Turn handset power off first.

1 Open cover

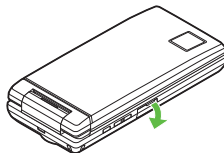


2 Insert card

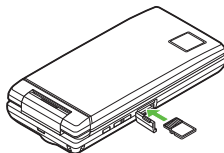 


- With terminal side up, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.

 3 Close cover

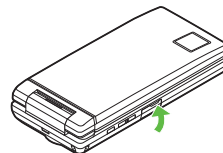

If Appears after Power On

 
- Memory Card may not be inserted properly; reinsert the card.
- #### Removing Memory Card
- Gently push in card and release it; card pops out. Pull card straight out gently.

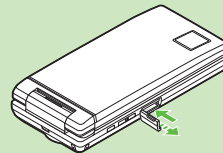

Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.

 - 1  → **Settings** →  → 
Connectivity → **Memory Card** → 





- 2 **Format Card** →  → **Yes**
 → 

- Offline Mode is set. Handset transmissions are suspended until format is complete.

- 3 **Enter Handset Code** → 







 
- 4 **Yes** → 
 • To cancel, choose **No** and press .

Precaution

- Never remove Memory Card or battery while formatting; may cause damage.


Opening Memory Card Files

- 1  → **Data Folder** → 
 2  → **Change to MemoryCard** → 

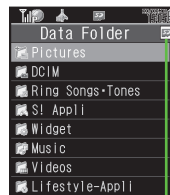


 appears

- Memory Card Data Folder opens.

- 3 **Select folder** → 
 4 **Select file** → 

Advanced

-  ● Using HTML files on Memory Card (P.12-8)



File/Folder View Settings	
Switching file list view	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → <i>Select folder</i> → → <i>Manage Items</i> → ■ → <i>Change List View</i> → ■ → <i>Select option</i> → ■
Changing image quality	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → <i>Select folder</i> → ■ → <i>Select file</i> → ■ → → <i>Switch Display</i> (<i>Picture Quality</i> for Flash® files) → ■ → <i>Select quality</i> → ■
Changing Slide Show settings	<ul style="list-style-type: none"> → <i>Data Folder</i> → ■ → <i>Select folder</i> → ■ → <i>Select file</i> → → <i>Slide Show</i> → ■ → → <i>See below</i>
	<p>Playing Once</p> <ul style="list-style-type: none"> <i>Repeat</i> → ■ → <i>Off</i> → ■
	<p>Playing Music</p> <ul style="list-style-type: none"> <i>BGM Settings</i> → ■ → <i>Switch On/Off</i> → ■ → <i>On</i> → ■
	<p>Changing Music</p> <ul style="list-style-type: none"> <i>BGM Settings</i> → ■ → <i>Play Ring Tones</i> → ■ → <i>Select folder</i> → ■ → <i>Select file</i> → ■
Showing Softkeys in image view	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → <i>Select folder</i> → ■ → <i>Select file</i> → ■ → → <i>SW GuideDisplay</i> → ■ → <i>On</i> → ■

Using Files/Folders	
Using files as Wallpaper	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → <i>Select folder</i> → ■ → <i>Select file</i> → → <i>Set as Wallpaper</i> → ■ → <i>Vertical or Horizontal</i> → ■ → ■ • For images smaller or larger than Display, select an option and press ■.
Using files as ringtones	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → <i>Select folder</i> → ■ → <i>Select file</i> → → <i>Set as Ringtone</i> → ■ → <i>Select item</i> → ■ • If prompted, enter ring time and press ■. • If a confirmation appears, follow onscreen instructions.
Using files as ringvideos	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → <i>Videos</i> → ■ → <i>Select file</i> → → <i>Set as Ring Video</i> → ■ → <i>Select item</i> → ■ • If prompted, enter ring time and press ■.
Saving Phone Book entries	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → <i>Select folder</i> → ■ → <i>Select file</i> → → <i>Save to Phone Book</i> → ■ → <i>As New Entry</i> → ■ → <i>Complete other fields</i> → • To add to an existing entry, select <i>As New Detail</i>.
Activating mobile camera, etc. in corresponding folders	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → <i>Select folder</i> → ■ → → <i>Take Picture, Record Video or Record Voice</i> → ■



Managing Files/Folders

Renaming folders	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → Select folder → → <i>Manage Items</i> → ■ → <i>Rename</i> → ■ → Enter name → ■ <ul style="list-style-type: none"> • Assign different names to folders within a layer.
Opening file properties	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → Select file → → <i>Details</i> → ■
Renaming files	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → Select file → → <i>Manage Items</i> → ■ → <i>Rename</i> → ■ → Enter name → ■
Sorting files	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → → <i>Manage Items</i> → ■ → Sort → ■ → Select method → ■ <ul style="list-style-type: none"> • To reverse the order, sort by the same method again.
Deleting files & created folders	<ul style="list-style-type: none"> ■ → <i>Data Folder</i> → ■ → Select folder → ■ → See below <p>Single Files</p> <ul style="list-style-type: none"> Select file → → <i>Delete</i> → ■ → Yes → ■ <p>Folder & Files Within</p> <ul style="list-style-type: none"> Select folder → → <i>Delete</i> → ■ → Enter Handset Code → ■ → Yes → ■

Handling SVG files

Line Scroll



Page Scroll

(Up), (Down), (Right), (Left)

Zoom

(Zoom out), (Zoom in)

Rotate

(Counterclockwise), (Clockwise)

Key Action Mode

0

Default View

5

Memory Card

Using HTML files on Memory Card

- → *Settings* → ■ → *Connectivity* →
- Memory Card* → ■ → *SD Local Contents* →
- → Select title → ■



Managing Files/Folders



Cannot copy files

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)



Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.



Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 241 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.



Cannot use some characters in file/folder names

- Single-byte Symbols ¥, /, :, ;, ,, <, >, /, ?, # and " are not supported.

