

<b>Date &amp; Time .....</b>	<b>14-2</b>
Clock View/Settings .....	14-2
<b>Display &amp; Illumination .....</b>	<b>14-3</b>
Language.....	14-3
Image & Text.....	14-3
Display & Key Illumination .....	14-3
External Display.....	14-4
Standby Display .....	14-4
Key Illumination .....	14-4

<b>Ringtones &amp; Sounds .....</b>	<b>14-5</b>
Handset Response.....	14-5
System Sound.....	14-5
Additional Sound Settings .....	14-5
<b>Connectivity .....</b>	<b>14-6</b>
Network .....	14-6
IP Service .....	14-6
<b>Reset.....</b>	<b>14-7</b>
Restoring Default Settings.....	14-7

# 14





## Handset Customization



# 🔧 Date & Time Settings

## Clock View/Settings

[Start Here](#) ▶ ▶ **Settings** ▶ ▶ In Phone menu, **Date & Time** ▶ ▶

Setting the date and time	<b>Set Date/Time</b> ▶ ▶ Enter the year ▶ Enter the month ▶ Enter the day ▶ Enter the time ▶ ▶
Correcting Clock manually	<b>Time Correction</b> ▶ ▶ <b>Manual</b> ▶ ▶ <b>Yes</b> ▶ ▶ <b>Yes</b> ▶ ▶
Disabling auto Clock correction	<b>Time Correction</b> ▶ ▶ <b>Auto Corr. Setting</b> ▶ ▶ <b>Off</b> ▶ ▶
Setting auto Clock correction timing	<b>Time Correction</b> ▶ ▶ <b>Auto Corr. Setting</b> ▶ ▶ <b>On</b> ▶ ▶ <b>Select item</b> ▶ ▶ ▶ (□/✓) ▶ ▶ 
Activating Daylight Saving	<b>Daylight Saving</b> ▶ ▶ <b>On</b> ▶ ▶
Changing Time Zone	<b>Set Time Zone</b> ▶ ▶  <b>Select area</b> ▶ ▶
Adding custom time zone	<b>Set Time Zone</b> ▶ ▶  ▶ ▶ <b>Enter city name</b> ▶ ▶  + or - ▶ ▶ <b>Enter time difference</b> ▶ ▶
Changing time format to 12 hour	<b>Time Format</b> ▶ ▶ <b>12 Hour</b> ▶ ▶
Changing date format	<b>Date Format</b> ▶ ▶ <b>Select option</b> ▶ ▶
Starting the Calendar week on Monday	<b>Calendar Format</b> ▶ ▶ <b>Monday-Sunday</b> ▶ ▶



# Y Display & Illumination Settings 1

## Language

[Start Here](#) **Settings** **Phone menu**

Switching interface between Japanese and English

**Language or 言語選択** **English or 日本語**

## Image & Text

[Start Here](#) **Settings** **In Phone menu, Display**

Showing preloaded images for incoming calls, etc.

**System Graphics** **Select item** **Preset Animation (or Pattern 1 to Pattern 3)**

Showing Data Folder images for incoming calls, etc.

**System Graphics** **Select item** **Select folder** **Select image** **Specify display area**

• Some images may be usable without specifying display area.

Showing Customized Screen for incoming calls, etc.

**System Graphics** **Select item** **Customized Screen**

• Not available for **Power On** or **Power Off**.

Selecting image enhancement option for Standby and video playback

**Vivid Mode** **Select option**

Changing font of numbers entered in Standby

**Dial Number** **Select pattern**

Showing a message each time handset is turned on

**Greeting Message** **Edit Message** **Enter message** **Switch On/Off** **On**

- When using Double Number in Dual Mode, press in System Graphics menu to switch modes.

## Display & Key Illumination

[Start Here](#) **Settings** **In Phone menu, Display**

Disabling display transition effects

**Display Effects** **Off**

Changing Display/Keypad Backlight illumination time

**Backlight** **Time Out** **Select time**

Changing Display Brightness

**Backlight** **Brightness** **Adjust level**

Canceling/activating Light Sensor

**Backlight** **Brightness**

Changing inactivity time after which Display turns off


**Display Saving** **Select period**



## 🔧 Display & Illumination Settings 2

### External Display

[Start Here](#) ▶ ▶ Settings ▶ ▶ In Phone menu, *Display* ▶ ▶ External Display ▶ ▶

Changing inactivity time after which External Display turns off	<i>Duration</i> ▶ ▶ Select time ▶ ▶
Hiding new received messages	<i>Messages</i> ▶ ▶ Not Display ▶ ▶
Hiding caller info	<i>Caller Display</i> ▶ ▶ Off ▶ ▶
Showing Pedometer	<i>Display Pedometer</i> ▶ ▶ Select item ▶ ▶ <ul style="list-style-type: none"> <li>• Activate External Display Backlight and press .</li> <li>• Some items do not appear if body information entry is incomplete.</li> </ul>
Changing Clock view	<i>Display Date&amp;Time</i> ▶ ▶ Select type ▶ ▶
Changing Clock font	<i>Clock Type</i> ▶ ▶ Select pattern ▶ ▶

### Standby Display

[Start Here](#) ▶ ▶ Settings ▶ ▶ In Phone menu, *Display* ▶ ▶ Standby Display ▶ ▶

Changing Clock/Calendar	<i>Clock/Calendar</i> ▶ ▶ Select type ▶ ▶
Showing Network service provider name in Standby	<i>Show Operator Name</i> ▶ ▶ On ▶ ▶
Hiding Pedometer in Standby	<i>Pedometer</i> ▶ ▶ Off ▶ ▶

### Key Illumination

[Start Here](#) ▶ ▶ Settings ▶ ▶ Phone menu

Disabling Keypad light illumination	<i>Set Key Light</i> ▶ ▶ Off ▶ ▶
-------------------------------------	----------------------------------



# 🔊 Ringtone & Sound Settings

## Handset Response

[Start Here](#) ▶ ▶ **Settings** ▶ ▶ In Phone menu, **Sounds & Alerts** ▶ ▶

Changing ringtone volume	<b>Volume</b> ▶ ▶ Select item ▶ ▶ Adjust level ▶ ▶
Selecting illumination option for incoming transmissions	<b>Event Light</b> ▶ ▶ Select item ▶ ▶ Switch On/Off ▶ ▶ On, Link to Sound or Off ▶ ▶
Setting illumination color for incoming transmissions	<b>Event Light</b> ▶ ▶ Select item ▶ ▶ Light Color ▶ ▶ Select color ▶ ▶
Enabling/disabling illumination for missed incoming transmissions	<b>Status Light</b> ▶ ▶ Select item ▶ ▶ Switch On/Off ▶ ▶ On or Off ▶ ▶
Setting illumination color for missed incoming transmissions	<b>Status Light</b> ▶ ▶ Select item ▶ ▶ Light Color ▶ ▶ Select color ▶ ▶
Answering calls with other keys	<b>Any Key Answer</b> ▶ ▶ On ▶ ▶ • Use <b>[0]</b> - <b>[9]</b> , <b>[*]</b> , <b>[#]</b> , <b>[**0]</b> , <b>[*0]</b> , <b>[*#]</b> or <b>[*]</b> in addition to <b>[*]</b> .

- When using Double Number in Dual Mode, press **[\*]** in Volume menu or Event Light menu to switch modes.

## System Sound

[Start Here](#) ▶ ▶ **Settings** ▶ ▶ In Phone menu, **Sounds & Alerts** ▶ ▶

Enabling Keypad Tones	<b>System Sounds</b> ▶ ▶ Keypad Tones ▶ ▶ Select tone ▶ ▶
Changing S! Circle Talk tone	<b>System Sounds</b> ▶ ▶ S! Circle Talk ▶ ▶ Select tone ▶ ▶
Changing other System Sounds	<b>System Sounds</b> ▶ ▶ Select item ▶ ▶ Tone ▶ ▶ Select folder ▶ ▶ ▶ Select tone/file ▶ ▶ • For files with limited usage period, choose <b>Yes</b> and press <b>[*]</b> .
Disabling System Sounds	<b>System Sounds</b> ▶ ▶ Select item ▶ ▶ Tone ▶ ▶ Off ▶ ▶ • Not available for <b>S! Circle Talk</b> .
Changing System Sound duration	<b>System Sounds</b> ▶ ▶ Select item ▶ ▶ Duration ▶ ▶ Select/enter time ▶ ▶ • Not available for <b>Keypad Tones</b> or <b>S! Circle Talk</b> .
Changing System Sound volume	<b>Volume</b> ▶ ▶ General Volume ▶ ▶ Adjust level ▶ ▶

## Additional Sound Settings

[Start Here](#) ▶ ▶ **Settings** ▶ ▶ Phone menu

Disabling Speakers when using Headphones	<b>Ringer Output</b> ▶ ▶ Earphone ▶ ▶
Selecting Speaker surround option	<b>Sounds &amp; Alerts</b> ▶ ▶ Surround ▶ ▶ Select item ▶ ▶



## Connectivity Settings

Network	
	<a href="#">Start Here</a> <b>Settings</b> <b>Network</b>
Selecting a Network manually	<b>Select Network</b> <b>Manual</b> <b>Select Network</b>
Adding preferred Networks	<b>Select Network</b> <b>Set Preferred</b> <b>Select location</b> <b>Insert</b> <b>Select Network</b>
Adding preferred Networks to the end	<b>Select Network</b> <b>Set Preferred</b> <b>Add to End</b> <b>Select Network</b>
Deleting preferred Networks	<b>Select Network</b> <b>Set Preferred</b> <b>Select Network</b> <b>Delete</b>
Adding Networks	<b>Select Network</b> <b>Add New Network</b> <b>Add</b> <b>Enter country code</b> <b>Enter Network code</b> <b>Enter name</b> <b>Select NW Type</b> <b>Select type</b> <ul style="list-style-type: none"> <li>• After selecting <b>Add New Network</b> and pressing   , Network list appears if Network has already been added. To add more, press    again and proceed.</li> </ul>
Editing Networks	<b>Select Network</b> <b>Add New Network</b> <b>Select Network</b> <b>Change</b> <b>Edit in the same manner as adding Networks</b>
Deleting Networks	<b>Select Network</b> <b>Add New Network</b> <b>Select Network</b> <b>Delete</b>
Switching Network services manually	<b>Select Service</b> <b>Manual</b> <b>Select service</b>
Retrieving Network Information	<b>Retrieve NW Info</b> <b>Yes</b>
Checking Network status	<b>Network Info</b>
Editing access point names for communication with external devices	<b>External Device</b> <b>Select name</b> <b>Edit</b>
Clearing access point names for communication with external devices	<b>External Device</b> <b>Reset</b> <b>Enter Handset Code</b> <b>Yes</b>

IP Service	
	<a href="#">Start Here</a> <b>Settings</b> <b>In Phone menu, Locks</b>
Disabling IP Service	<b>IP Service Setting</b> <b>Off</b> <b>Enter Handset Code</b> <ul style="list-style-type: none"> <li>• When <b>Off</b>, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.</li> </ul>



# Reset Settings

## Restoring Default Settings

[Start Here](#) **Settings** **In Phone menu, Master Reset**

Restoring default handset settings	<p><b>Reset Settings</b> <b>Enter Handset Code</b> <b>Yes</b> <b>Yes</b> </p> <ul style="list-style-type: none"> <li>• Some default settings may not be restored.</li> </ul>
Clearing all Phone Book entries, Data Folder files, etc.	<p><b>Reset All</b> <b>Enter Handset Code</b> <b>Yes</b> <b>Yes</b> </p> <ul style="list-style-type: none"> <li>• Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)</li> <li>• Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications.</li> <li>• Handset Code returns to the default setting.</li> </ul>

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

