

 
 
 
 
Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Power On/Off	1-6
Handset Power On/Off.....	1-6
Display & Indicators	1-7
Display	1-7
Indicators	1-9
Accessing Functions	1-11
Main Menu	1-12
Shortcuts Menu & Key Shortcut	1-13
Toggling Active Functions (Multi Job)	
.....	1-14
Standby Shortcuts	1-15
Using Simplified Menus (Simple Menu)	
.....	1-17

Motion Control	1-18
External Display	1-20
Using External Display	1-20
Mobile Manners	1-25
Security Codes	1-26
Basic Tools	1-27
My Details & Basic Tools	1-27
Double Number	1-28
Using Double Number	1-28
Modes.....	1-29
Additional Functions	1-31

1

Getting Started

Parts & Functions

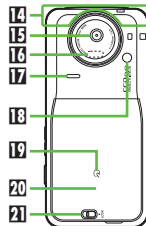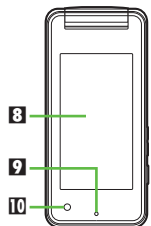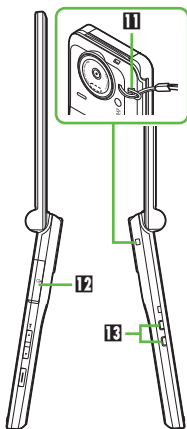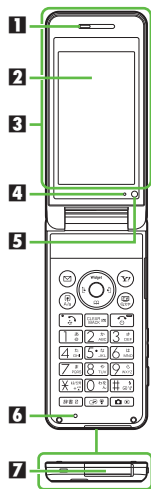

- 1 Earpiece
- 2 Display
- 3 TV Antenna Location
- 4 Pressure Vent
- 5 Light Sensor
- 6 Microphone
- 7 External Device Port (with Port Cover)
- 8 External Display
- 9 Small Light
- 10 UV Sensor
- 11 Strap Eyelet
- 12 Headphone Port (with Port Cover)
- 13 Charging Terminals
- 14 Internal Antenna Location
- 15 External Camera (lens cover)
- 16 Infrared Port
- 17 Speaker
- 18 Mobile Light
- 19 Logo
- 20 Battery Cover
- 21 Battery Cover Lever

- Do not cover or place stickers, etc. over Pressure Vent, UV Sensor, Light Sensor or Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Handset Positions

Handset Closed



Keep handset closed when not in use.

 
Handset Open



Open handset to place or answer calls, enter text, etc.

Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with **^** via Set Key Shortcut as needed.

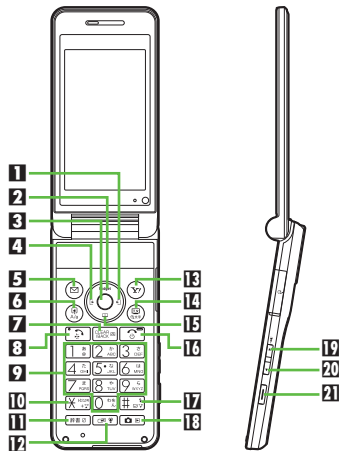

- 1 Multi Selector (right)** Open Received Calls. Long Press to activate/cancel Infrared[®].
- 2 Multi Selector (up)** Open Mobile Widget window. Long Press to open PC Site Browser menu[^].
- 3 Center Key** Open Main Menu. Long Press to activate/cancel Keypad Lock.

- 4 Multi Selector (left)** Open Dialed Numbers. Long Press to activate/cancel Bluetooth[®].
- 5 Mail Key** Open Messaging menu. Long Press to open SI Mail Composition window[^].
- 6 Shortcuts & A/a Key** Open Shortcuts menu. Long Press to show active indicators (Status Icon List).
- 7 Clear/Back Key** Play Answer Phone messages. Long Press to activate/cancel Answer Phone.
- 8 Start Key** Open All Calls. Long Press to open Double Number Mode menu.
- 9 Keypad** Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- 10 * Key** Enter *, +, P, ? and -. Long Press to open S! Friend's Status member list.
- 11 Dictionary Key** Open Dictionary. Long Press to activate VeilView.
- 12 Multi Job & Manner Key** Select handset mode. Long Press to activate/cancel Manner mode.
- 13 Yahoo! Keitai Key** Open Yahoo! Keitai portal. Long Press to activate Familink Remote[^].
- 14 TV & Text Key** Activate TV. Long Press to open Change Menu window.
- 15 Multi Selector (down)** Open Phone Book. Long Press to create new Phone Book entries[^].

- 16 Power On/Off Key** Toggle Standby display. Long Press to turn handset power off.
- 17 # Key** Enter #. Long Press to activate/cancel Manner mode.
- 18 Camera Key** Activate mobile camera. Long press to activate Review.

Side Keys

- 19 Volume Up Key** Long Press to illuminate Mobile Light. **Closed:** Toggle Home Panels. Long Press to illuminate Mobile Light.
- 20 Volume Down Key** Show/hide Softkeys. **Closed:** Toggle Home Panels.
- 21 Shutter Key** Open Home Panel. Long Press to close it. **Closed:** Open Active Menu. Long Press to return to Home Panel.

Multi Selector & Side Keys

- In this guide, Multi Selector and Side Key operations are indicated as follows:

Press or	
Press or	
Press , , or	
Press or	

1 Charging Battery

Battery must be inserted in handset to charge it.

Charging Battery Overseas

- SoftBank is not liable for problems resulting from charging battery abroad.

Desktop Holder

Together with Desktop Holder, use specified AC Charger ZTDAA1 (sold separately) only.

 
- In this guide, ZTDAA1 is referred to as "AC Charger."
- **AC Charger and Desktop Holder are not waterproofed. Do not charge battery while handset is wet.**
- Clock appears on External Display while charging; use handset as a desk clock.
- Handset and AC Charger may warm during charging.

Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.

Important Desktop Holder Usage Notes


- Do not subject to force/pressure.
- Do not attempt to open handset while placed in Desktop Holder.

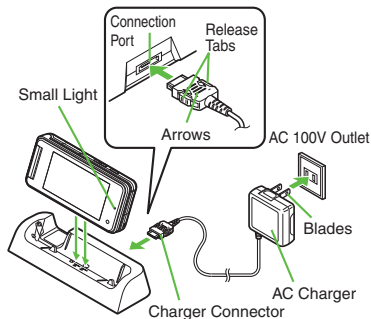

1 Insert AC Charger connector into Desktop Holder

- With arrows up, insert connector until it clicks.

 2 Extend blades and plug AC Charger into AC outlet



3 Place handset onto Desktop Holder

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

4 Disconnect 934SH from Desktop Holder

5 Unplug AC Charger

- Pull AC Charger straight out.
- Squeeze release tabs when removing AC Charger connector.

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

 
Desktop Holder Materials

- Desktop Holder includes a part containing plant-derived resin, a new eco-friendly material which is expected to reduce CO₂ emissions and oil usage in the entire product life cycle compared to conventional petroleum resin.

Charging with AC Charger Only

Insert AC Charger connector into External Device Port.

Use Desktop Holder to prevent water seepage via External Device Port.

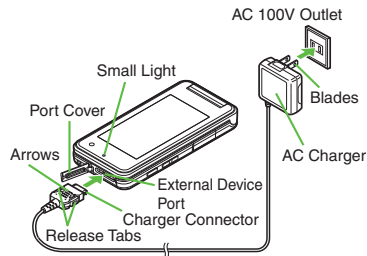**USB Charge**

Connect handset (with power on) to PC via USB Cable to charge battery.


- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.

In-Car Charger

In-Car Charger may be purchased separately.

Important In-Car Charger Usage Notes

 - Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

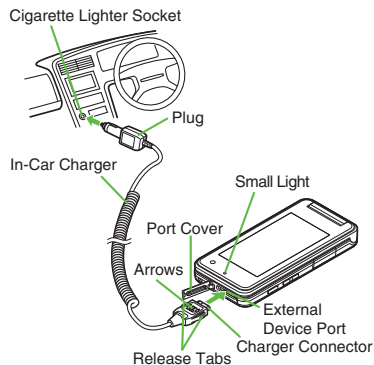**1 Open Port Cover****2 Connect In-Car Charger**

- With arrows up, insert connector until it clicks.

3 Plug Charger into cigarette lighter socket**4 Start car engine**

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

5 Unplug Charger**6 Disconnect handset**

- Squeeze release tabs to remove connector.

7 Replace Port Cover**Advanced**


- Disabling USB Charge (P.1-31)

1 Handset Power On/Off

Power On

 
Follow these steps when powering on 934SH for the first time:

1 (Long)

- Power On Graphic and waterproofing guidance appear; follow the steps below.
 → **設定**
 → **Language** → **English**
 → **(Long)** → **(Long)** →
 Change Menu window opens

2 Select option

Guide descriptions are based on Standard Menu.



- My Details setup starts.

3 Enter last name

Enter first name

- Change Menu display option confirmation appears.

4 Yes or No



Standby

 
- Choose **No** to enter Standby immediately after powering on.

When USIM Card is Not Installed

- **Insert USIM Card** appears; insert the card to use handset.

Retrieving Network Information

Handset initiates Network Information retrieval when , ,  or  is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and TV; retrieval automatically sets Clock:

1 Yes

2

 
Power Off

1 (Long)

- After Power Off Graphic, handset shuts down.

Display

Standby

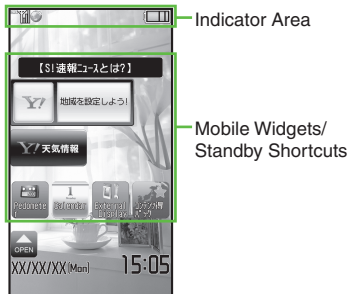


Hereafter, most screenshots omit Mobile Widgets and Standby Shortcuts.

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)

 1 (Long)

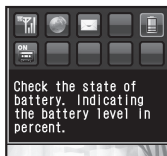

- Active indicators are enlarged; description for selected indicator appears.
- Use to select indicators to view their descriptions.
- Press to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

Information

Information window opens at the bottom for Missed Calls, new mail, etc.






Information Window

 
Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press to open it.

Advanced

- Handling Information list (P.1-31)

Softkeys



Functions/operations assigned to , , and  appear at the bottom of Display in portrait orientation with handset open.

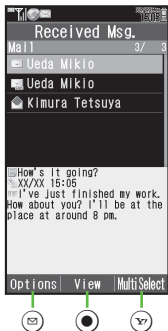

Display Saving



 
Display goes dark after Display Saving time elapses. Press any key to activate it.

Backlight


- Backlight turns off after Time Out time elapses. Press  -  to illuminate it (key press may affect active function).







Indicators

Display Indicators

,  and  indicate line type in Dual Mode (P.1-28).

Basic Status














1		Within 3G range
		Within GSM range
		International roaming in progress
2		Signal strength ¹
3		Packet transmission available
4		Battery strength ²

¹The more bars the better.

 
²Battery strength % (appears when Display activates, etc.) is an approximation.













Function Status

 


1		Active S! Application
		Paused S! Application
1		Music playback in progress
		TV recording in progress (handset)
		TV recording in progress (Memory Card)
2		Memory Card in use
		Memory Card formatting
2		TV Timer/TV Recording Timer set
3		Music playback in progress (via Bluetooth®)
4		Multiple functions (Multi Job) active




Notifications




1		Unread mail
		Unread Delivery Report
2		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
3		New Voicemail
4		Missed Call or new mail on idle line
5		S! Appli/Mobile Widget Notification
6		Contents Key received
7		Unread S! Information Channel info
		Software Update result
		Unread S! Quick News info
8		Unread S! Friend's Status notification or unanswered registration request

Warnings




1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/misinserted

 Transmissions


1	SSL browsing in progress ¹
	Waiting packet transmission
2	Receiving mail
	Sending mail
3	S! Friend's Status online
	Positioning in progress ²
4	Software Update in progress
	USB Cable connected
	USB transmission in progress
	Infrared transmission in progress
	Infrared file transfer in progress
	Bluetooth [®] transmission ready
5	Bluetooth [®] transmission in progress (appears for multiple connections)
	Bluetooth [®] talk in progress
	IC Transmission in progress
	S! Addressbook Back-up transmission in progress
	PC Site Browser in use
6	RSS-compatible site
7	Weather Indicator
8	Infrared transmission ready

¹Hidden while Mobile Widget is in use.

 ²Flashes while positioning.

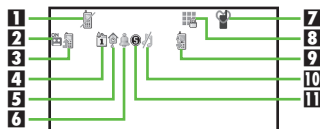Settings


1	Offline Mode active
2	Answer Phone active
3	Call Forwarding or Voicemail active (forwarding condition: Always [*])
4	Schedule/Task (Alarm set)
	Schedule/Task (Alarm unset)
5	Hour Minder active
6	Alarm set
	Wakeup TV set
	Manner mode active
7	Drive mode active
	Original mode active
	VeilView active
8	Keypad Lock active
	IC Card Lock active
9	Auto Answer or Remote Monitor active

	Ringtone (Silent)
10	Ringtone (Increasing Volume)
	Vibration active
11	Show Secret Data active
	Function Lock active

^{*}Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

Accessing Functions

Use the following methods as needed.

Main Menu



 
Repeat menu item selection.

Select menu items

Enter numbers

Use shortcuts

Quick Operations

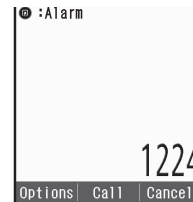


Enter numbers to access functions.
To activate functions, press the corresponding key.

Shortcuts



Access assigned functions (changeable).

 Key Shortcut

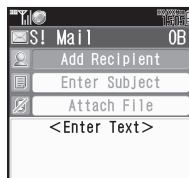

Long Press , or to access assigned functions (changeable).

Standby Shortcuts



 
Save functions to Standby.

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.

Main Menu

Menu Item Selection

1

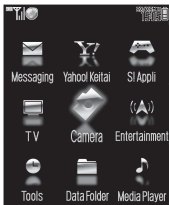

- Main Menu opens.

2 Use to select menu item



- Menu/window opens.
- If Sub Menu opens, use to select an item and press .

Tabs

- Menus/lists in a single window appear in separate tabs; use to toggle tabs.



Tab

Reverse Navigation

- Press . If a confirmation appears, follow onscreen prompts.

Returning to Standby

- Press . If a confirmation appears, follow onscreen prompts.

Simple Menu

- Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

Main Menu Items

Messaging	Open/create messages, etc.
Yahoo! Keitai	Browse the Internet
SI! Appli	Use SI! Applications including games
TV	Watch/record TV programs
Camera	Capture images or record video
Entertainment	Read e-Books, receive news updates, etc.
Tools	Manage schedules, set Alarm, scan QR Codes, etc.
Data Folder	Open files saved on handset/Memory Card
Media Player	Play/download media files
Communication	Communicate with other users in various ways
Phone	Search contacts, add entries, etc.
Settings	Customize handset interface, sounds, etc.

Shortcuts Menu & Key Shortcut

Shortcuts Menu

Access assigned functions via Shortcuts menu.

1



Shortcuts Menu

2 **Select function**

- Menu/window opens.

Changing Default Shortcuts

In 2, select numbered function **Assign Function** **Select menu item** **Select new item**

- To assign menu items, select one and press .

Assigning Files & Folders

In 2, select numbered function **Assign Data** **Select file/folder**

- For folders, select **Set this folder** and press .

Key Shortcut

In Standby, Long Press or to access assigned functions.

	Open SI Mail Composition window
	Activate Familink Remote
	Open PC Site Browser menu
	Create new Phone Book entries
	Activate/cancel Bluetooth®
	Activate/cancel Infrared

Changing Assigned Functions

Follow these steps to assign Calculator to .

 
1 **Settings**

2 **In Phone menu, Set Key Shortcut**



Key Shortcut Menu

3 **Long press**

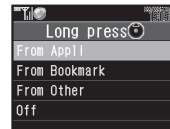

4 **From Appli**

5 **Tools** **In PIM/Lifestyle menu, Calculator**

Bookmark

In 4, **From Bookmark**

Select title **Yes**

Infrared or Show Secret Data On/Off

In 4, **From Other** **Select item**

Canceling Assigned Function

In 4, **Off**

Advanced

Changing item order Restoring default shortcuts (P.1-31)

 
1 Getting Started

1 Toggling Active Functions (Multi Job)

Multi Job Feature

Access a function in Shortcuts menu while another is active.


While browsing the Internet

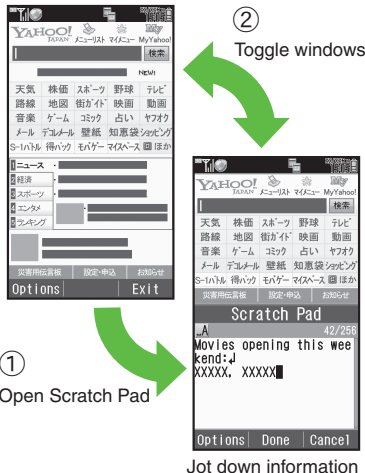

- Multi Job may not activate from some menus/windows (e.g., ringtone/ringvideo selection, etc.).
- Multi Job is disabled while (gold) appears.

Using Multi Job

 - 1 In a function window,** In text entry/dial windows, Long Press .

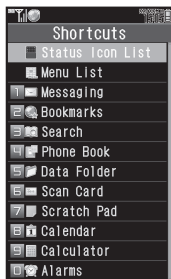


- 2 Select function**



- Menu/window opens.

 - 3 To toggle active windows,**

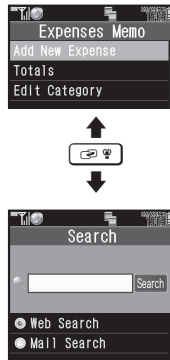

- 4 Multi Job ends**
- If a confirmation appears, follow onscreen prompts.

Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.



Shortcuts

Saving Shortcuts to Standby

1

2 Use to select (OPEN)



3



4 Select item

- Corresponding icon appears in Standby.
- >> appears when more items are available.

5 Use to specify target location

Saving from Menu/Window

- In Options menu, select **Set as StbyShortcut** (may not appear for some items); select sheet as needed.

Using Pointer ()

- After 1, Long Press to activate pointer navigation; select widgets, etc.
- To cancel pointer navigation, Long Press .

Using Shortcuts

1 Use to select icon



- Menu/window opens or command is executed.

 
Advanced



- Sorting icons
- Moving icons
- Moving icons to front/back (P.1-31)

1 Toggling Sheets

Toggle sheets to use Standby Shortcuts and widgets pasted on each sheet.

1  → 



- To toggle further, press  or .
- Sheet name appears at the top, then disappears.
- Save Standby Shortcuts as needed; corresponding icons appear on the current sheet.

 
Using Locked Sheets

 → Select  →  → Enter
Handset Code → 

Removing Shortcuts from Standby

1  → Use  to select icon
→ 


2 **Operation** → 

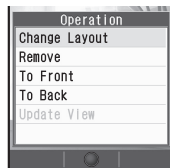

3 **Remove** → 

4 **Yes** → 

 
Advanced

-  ● Removing icons at once by sheet ● Editing sheet names ● Locking sheets (P.1-31 - 1-32)

Using Simplified Menu (Simple Menu)

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.

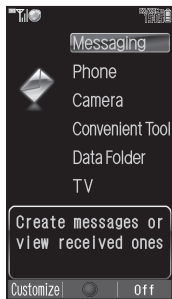

- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).


Menu Items

Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Play Messages, Answer Phone, Call VM, My Details, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Scan Barcode, Scan Card, Kanji Grabber, Scan Text, Review, Photo Settings, Video Settings, SetCameraKey
Convenient Tool	Calendar, Alarms, Calculator, Assignment, Dictionary, Notepad, Pedometer, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
Data Folder	-
TV	-

Key assignments are largely the same as those in Standard Menu.

Activating Simple Menu

 1 (Long)

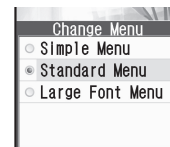

2 **Simple Menu**

While Using an Incompatible Function

- End the function before activating Simple Menu.

Canceling Simple Menu

 
(Long) **Standard Menu**

Motion Control

Sensor detects handset orientation or movement. Move handset to navigate pages, select files, etc.

- Cancel Keypad Lock and activate Display first. (Not necessary for activating Quick Silent.)
- Activate Motion Control by function beforehand.

Change Orientation

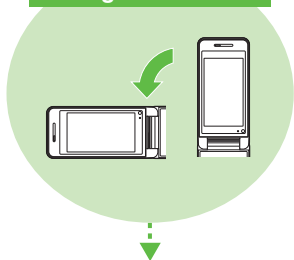


Display Change

Rotate handset 90 degrees counterclockwise and return. Display orientation changes accordingly.

Display Rotation

Digital TV
PC Site Browser
Document Viewer
Image Viewer

 Turn Over

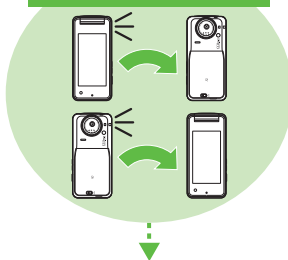

Activate Quick Silent

Turn handset over to instantly mute ringer and stop vibration.

Ringer

 
Incoming Calls,
Alarms, etc.

Vibration

Incoming Calls,
Alarms, etc.

- Some tones may not be silenced.

Shake Left/Right

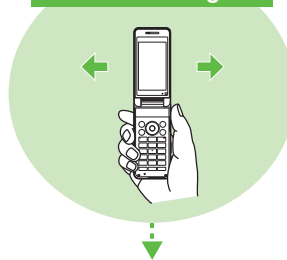

Navigate Functions

Shake to the left to navigate back, or right to navigate forward.

Music

Music Player

Channels

Digital TV

Images

Data Folder
(Pictures)

Pages

Document
Viewer

- While Multi Job is active, active windows toggle.

Shake Forward or Backward**Zoom In/Zoom Out**

Shake forward to enlarge, or backward to reduce.

Fonts

Yahoo! Keitai
Message Window

Zoom Image

Data Folder
(Pictures)

 
Zoom Page

PC Site Browser
Document Viewer

 toggling Motion Control On/Off

1 → **Settings** →

2 In Phone menu, **Motion Control** →



Motion Control Menu

3 **Action Settings** →

4 **Select function** →

5 **On or Off** →

Activating Show Secret Data Temporarily

Enter Handset Code → Shake handset left or right

- Close handset in Standby to cancel Show Secret Data.

Important Motion Control Usage Notes

- Hold/shake handset correctly to avoid unintended results.
- Motion Control may be unavailable while handset is ringing/vibrating.
- Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently to avoid injury/breakage. Do not shake handset roughly; handset may slip, resulting in injury or damage.

Advanced

- Disabling Display rotation
- Practicing Motion Control actions (P.1-32)

Using External Display

934SH employs a large External Display; view menus/information items, check UV level, or convert it into a compact mirror --all with handset closed.

Home Panel

Clock appears on External Display with handset closed in Standby by default.


- To open Home Panel with handset open, press  in Standby.

 


Home Panel

- Show Calendar, Battery Meter, preset/Data Folder images, etc. on Home Panel or make it reflective like a mirror.

toggling Home Panels

Use  to toggle three Home Panels.

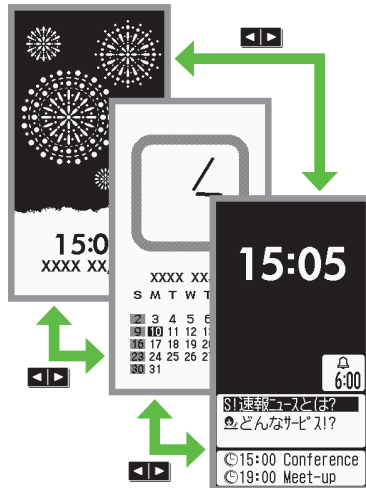

Customize each Home Panel separately as needed.

Opening Information

Indicator and number of calls/messages, etc. appear for Missed Calls, new mail, etc.



 
Missed Call



New Mail



- Active Menu opens.

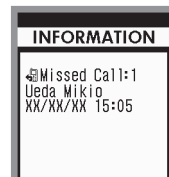

- Details window opens.

Active Menu

Open these items/information on External Display:

Schedule	UV Checker
Help ¹	Weather indicator ²
S! Quick News	Balance Info ³
Pedometer	Etiquette Mirror ⁴
Memo ⁵	Information ⁶

¹Access guide to External Display settings/operations.

²Register with S! Information Channel for related information.

³Check e-money balances.

⁴Use External Display as a mirror.


⁵Open notes pasted on Standby display.

⁶Appears for unchecked Information items.


Show some Active Menu item information on Home Panel or hide some items on Active Menu as needed.

 
Schedule

- Entries appear below Active Menu and remain for approximately 30 minutes after scheduled time.

1 In Home Panel, 

Active Menu

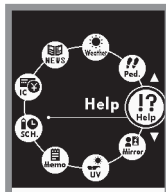

- Brief information appears below Active Menu.
- To return to Home Panel, Long Press .

2 Use   to select item

- Information changes accordingly.

3 

Details Window

- Item opens.
- To return to Active Menu, Long Press .
- To return to Home Panel, press .

Details Window Description

Schedule



Use **◀▶** to select date; schedules and Phone Book birthdays appear, if any.

UV Checker



Level Indicators

- To check UV level, turn UV Sensor toward the sun and press **▶**.

- Level Description:
(Higher levels indicate greater ultraviolet intensity.)


Level*	Description
Low	0 No/very little ultraviolet detected
	1 Safe to be outdoors
	2 Safe to be outdoors (with caution)
	3 Seek shade during daylight hours; UV protection use recommended
	4 Seek shade during daylight hours; use UV protection
High	5 Avoid sunlight, especially outdoors

*Level indicators are for reference only.

UV Checker Usage Notes

- Measurement is affected by handset's angle to the sun, etc.; actual UV level may be higher than indicated.
- Do not cover UV Sensor.
- Measurement may fail if UV Sensor is obstructed by dust, etc.

 Help

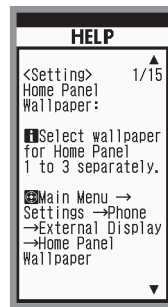

Use **◀▶** to see more.

Weather indicator



Use **◀▶** to see more.

■ S! Quick News



Use ◀▶ to see more.

■ Balance Info



Home Panel returns after a while.

■ Pedometer



Press ▶ to update step count immediately. (Auto update interval is approximately one minute.)

■ Etiquette Mirror



■ Memo



Use ◀▶ to see more.

■ Information



 
Use ◀▶ to see more.

Showing Indicators

Signal strength, battery strength, Clock, etc. appear.

1 **Settings**

2 **In Phone menu, External Display**

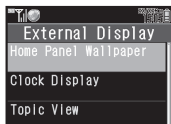

External Display Menu

3 **Show Indicators**

 
4 **Icon+Mini Clock**

Showing Info on Home Panel

Show Pedometer, Weather Indicators, Alarm setting, schedules and S! Quick News titles. Information/Clock may be hidden depending on Home Panel Wallpaper.

1 **In External Display menu, Topic View**

2 **Select Home Panel**



3 **Select item** (/✓)

4

Hiding Active Menu Items

Hide Pedometer, Weather indicator, S! Quick News and Balance Info on Active Menu.

1 **In External Display menu, Active Menu Info**



2 **Select item** (/✓)

3

Using for Other Functions**Photo Camera (Self Portraits)**

1 **In Photo Viewfinder,**

- Face position guide appears on External Display.

2 **Use guide to find best position**

- Captured image is saved.

Relaxation Time

Close handset while using Relaxation Time; animation appears on External Display. Use to adjust volume.

Advanced

- Selecting Home Panel Wallpaper
- Showing Clock
- Selecting images for incoming calls, etc.
- Hiding caller info
- Changing Clock view for charging
- Selecting External Display view (handset open)
- Changing image/video capture graphic (And more on P.1-32 - 1-33)

Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.

1 (Long)




- Manner mode is set.

When Manner Mode is Active

- Ringtones and other sounds are muted.
- 934SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.

Canceling Manner Mode

 (Long)

 
Offline Mode

Temporarily suspends all transmissions.

1 **Settings** **Network**



2 **Offline Mode**

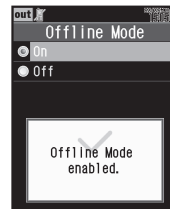3 **On**



- Offline Mode is set.

Canceling Offline Mode

In  **Off** 

Advanced

-   Changing handset modes  Creating a custom mode  Resetting Mode Settings (P.1-33)

Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank is not liable for misuse or damages.

Handset Code	9999 by default; use or change some functions
Center Access Code	4-digit code selected at contract; access Optional Services via landlines or change contract details
Network Password*	4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring)

*Change as needed.

 
Incorrect Code Entry

- **Handset code is incorrect!** appears; try again.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.

Changing Handset Code


Enter four to eight digits for new Handset Code.

1 → **Settings** →

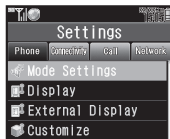

Phone Menu

 2 **Locks** →

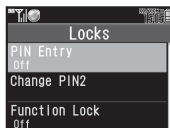

3 **Chg. Handset Code** →



4 **Enter current Handset Code** →



5 **Enter new Handset Code** →



6 **Re-enter new Handset Code** →

My Details & Basic Tools

My Number



- Handset phone number and the name entered at initial setup appear.

Editing My Details


After 1,  (select tab)  Select item
   Select item   Edit 

VeilView

Activate VeilView to prevent peeping.




Canceling VeilView

 (Long)

 
Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
-  does not turn off handset power.

Incoming Calls while Keypad Lock is Active

- Keypad Lock is temporarily canceled; press  to answer calls. Keypad Lock reactivates after the call.

Canceling Keypad Lock



Pen Light



- Mobile Light illuminates.



Important Pen Light Usage Note

- Do not point Pen Light at people or look at it directly.

Battery Meter




- Approximate battery strength appears.

Battery Strength %

- 100% may not appear even when battery is full. This is by design; not a malfunction.

Phone Help



- For **Indicators**, select category and press .

Advanced

 
-   Clearing My Details  Toggling My Details in Dual Mode  Changing battery strength indicator pattern  Changing VeilView pattern/density (P.1-34)

Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- While abroad, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.15-41).

Two Phone Numbers & Two Mail Addresses

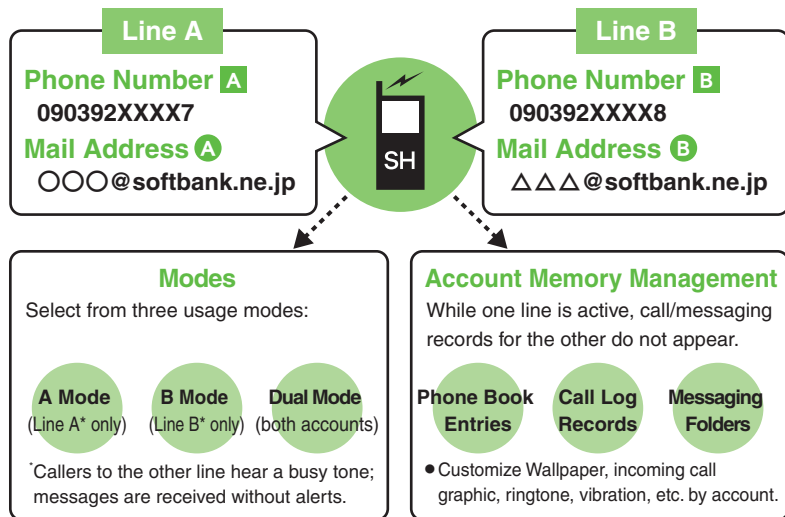

Activating Double Number

Make sure signal is stable.

- 1 → **Settings** →
- 2 In Phone menu, **Double Number** →
- 3 **Switch On/Off** →
- 4 **On** →
- 5 **Enter Handset Code** → → **Yes** →

Canceling Double Number

In , **Off** → →

- When Double Number is canceled:
 - Line B calls and SMS messages are redirected to Line A Phone Number.
 - Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
 - Double Number account is not affected.

Modes

Activate **A Mode** to use Line A only, **B Mode** to use Line B only, or **Dual Mode** to use both accounts.

A Mode

Receive Calls to Line A Only

- Place calls or send messages via Line A.

A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

B Mode

Receive Calls to Line B Only

- Place calls or send messages via Line B.

B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status, S! Circle Talk and Decoration Call are unavailable.

Advanced

- Omitting Handset Code entry when switching modes
- Renaming Double Number modes
- Showing indicator for calls missed or new mail on idle line
- Hiding Internet connection confirmation (P.1-34)

Dual
Mode

Receive Calls to Both Accounts

- Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

Phone Book Entries

Specify A, B or Dual.

Messaging








Select Line A or Line B.
Sender Address changes accordingly.

Calling


Select Line A or Line B.
Caller ID changes accordingly.

- ,  and  indicate line type in Phone Book entries, message lists, Call Log records, etc.


Switching Modes

-  (Long)
- Enter Handset Code  
- Select mode  
 - For *B Mode* confirmation appears.
- Yes  

In Dual Mode

During an operation, if prompt window below appears, select a line and press .



If customizable by line, line indicator appears bottom right; press  to switch.



If line selection is otherwise required, follow onscreen prompts.

Advanced

-  Rejecting calls to either line in Dual Mode
-  Setting main line for Dual Mode (P.1-34)

USB Charge

Disabling USB Charge → → *Settings* → → → *Connectivity* → *USB Charge* → → *Disable* →

Information

Handling Information list

Start Here → → *Phone* → → See below

Opening List Manually Information →

Clearing List Information → → → *Yes* →

Shortcuts

Changing item order → → → Select numbered function → → *Move* → → Select target location →

Restoring default shortcuts → → → Select numbered function → → *Set to Default* → → *Yes* →

Standby Shortcut

Operations in Standby

Sorting icons

→ → → *Sort Icon* → → Select method →

- Widgets are not affected.

Moving icons

→ Use to select icon → → *Operation* → → *Change Layout* → → Specify target location →

Moving icons to front/back

→ Use to select icon → → *Operation* → → *To Front* or *To Back* →

Removing icons at once by sheet

Start Here → → → *Operate from List* → → *Remove* → → See below

All Icons

Remove All → → → *Shortcut* → Select sheet → → *Yes* →

Selected Icons

Select also Remove → → → *Shortcut* → Select icon → → → Complete selection → → *Yes* →

Sheets

Editing sheet names	<p>[Start Here] <i>Settings</i> <i>Sheet Settings</i> <i>Change Sheet Name</i> </p> <p>See below</p> <p>Renaming</p> <p>Select sheet Enter name </p> <p>Resetting All Sheet Names</p> <p> </p>
	<p>[Start Here] <i>Settings</i> <i>Sheet Settings</i> <i>Set Sheet Lock</i> Enter Handset Code See below</p> <p>Activating Lock</p> <p>Select sheet <i>On</i> </p> <p>Changing Method for Temporary Access</p> <p><i>Unlock Method</i> <i>No Password</i> </p> <ul style="list-style-type: none"> Press , then select and press to unlock sheet temporarily.

Motion Control

Disabling Display rotation	<p> <i>Settings</i> In Phone menu, <i>Motion Control</i> <i>Display Change</i> </p> <p>Select function <i>Off</i> </p>
Practicing Motion Control actions	<p> <i>Settings</i> In Phone menu, <i>Motion Control</i> <i>Action Test</i> Select item </p> <ul style="list-style-type: none"> Follow onscreen instructions.

External Display

Home Panel

Selecting Home Panel Wallpaper	<p>[Start Here] <i>Settings</i> In Phone menu, <i>External Display</i> <i>Home Panel Wallpaper</i> <i>Select Home Panel</i> See below</p> <p>Preset Graphics</p> <p>Select graphic </p> <p>Data Folder Images</p> <p><i>Pictures</i> Select image </p> <p>Customized Screen</p> <p><i>Customized Screen</i> </p>
	Showing Clock
Selecting images for incoming calls, etc.	<p>[Start Here] <i>Settings</i> In Phone menu, <i>External Display</i> <i>System Graphics</i> <i>Select item</i> See below</p> <ul style="list-style-type: none"> Data Folder images and Customized Screens may be unsettable depending on item. <p>Preset Graphics</p> <p>Select pattern </p> <p>Data Folder Images</p> <p><i>Pictures</i> Select image </p> <p>Customized Screen</p> <p><i>Customized Screen</i> </p>

Incoming Calls & Charging

Hiding caller info	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, External Display → ● → Caller Display → ● → Off → ●
Hiding Phone Book Categories for incoming calls	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, External Display → ● → Call Groups View → ● → Off → ●
Changing Clock view for charging	<ul style="list-style-type: none"> Start Here ● → Settings → ● → In Phone menu, External Display → ● → Desk Clock Mode → ● → See below
	<ul style="list-style-type: none"> Changing Pattern Pattern Setting → ● → Select pattern → ●
	<ul style="list-style-type: none"> Hiding Clock Switch On/Off → ● → Off → ●

View Settings

Selecting External Display view (handset open)	<ul style="list-style-type: none"> Start Here ● → Settings → ● → In Phone menu, External Display → ● → Open View → ● → See below
	<ul style="list-style-type: none"> Preset Graphics Pattern → ● → Select pattern → ●
	<ul style="list-style-type: none"> Data Folder Images Pattern → ● → Pictures → ● → Select image → ● → ●
	<ul style="list-style-type: none"> Mirror Etiquette Mirror → ●
Changing orientation	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, External Display → ● → Direction Display → ● → Normal or Charging → ● → Vertical or Horizon → ●
	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, External Display → ● → Direction Display → ● → Normal or Charging → ● → Vertical or Horizon → ●

Changing image/video capture graphic	<ul style="list-style-type: none"> In Photo/Video Viewfinder, (Ⓜ) → Settings → ● → External Display → ● → Select pattern → ●
Changing music playback graphic	<ul style="list-style-type: none"> During playback, (Ⓜ) → Sub Pattern Setting → ● → Select pattern → ●
Hiding Osaifu-Keitai® transaction graphic	<ul style="list-style-type: none"> ● → Tools → ● → In PIM/Lifestyle menu, Osaifu-Keitai → ● → IC Card Settings → ● → External Display → ● → Off → ●

Mode

Changing handset modes	<ul style="list-style-type: none"> Start Here ● → Settings → ● → In Phone menu, Mode Settings → ● → See below
	<ul style="list-style-type: none"> Selecting a Handset Mode Select mode → ●
Creating a custom mode	<ul style="list-style-type: none"> Customizing Handset Modes Select mode → (Ⓜ) → Select item → ● → ● Adjust settings ● Not available for Normal mode.
	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, Mode Settings → ● → Original → (Ⓜ) → Select item → ● → Adjust settings
Resetting Mode Settings	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, Mode Settings → ● → Select mode → (Ⓜ) → Enter Handset Code → ● → Yes → ●

My Details

Clearing My Details

● → [0-9] → [0-9] → *Reset My Details* → ● →

Yes → ●

Toggling My Details in Dual Mode

● → [0-9] → [0-9] → *Switch to B* or *Switch to A* → ●

Battery Meter

Changing battery strength indicator pattern

● → *Settings* → ● → In Phone menu, *Display* → ● → *Mini Battery* → ● → *Select pattern* → ●

- For **Clock & Battery level**, indicators appear in turn. To change interval, press [0-9].
- For **Battery level**, approximate battery strength appears as a percentage.

VeilView

Changing VeilView pattern/density

[Start Here] ● → *Settings* → ● → In Phone menu, *Display* → ● → *VeilView* → ● → See below

Pattern

Pattern Setting → ● → *Select pattern* → ● → *Select scale* or *Animation* → ●

Density

Density Setting → ● → *Select density* → ●

Double Number

All Modes

Omitting Handset Code entry when switching modes

● → *Settings* → ● → In Phone menu, *Double Number* → ● → *Password Entry* → ● → *Off* → ● → *Enter Handset Code* → ●

Renaming Double Number modes

● → *Settings* → ● → In Phone menu, *Double Number* → ● → *Mode Name* → ● → *Select mode* → ● → *Enter name* → ● → *Select icon* → ●

A Mode & B Mode

Showing indicator for calls missed or new mail on idle line

● → *Settings* → ● → In Phone menu, *Double Number* → ● → *Show Missed* → ● → *On* → ●

Hiding Internet connection confirmation

● → *Settings* → ● → In Phone menu, *Double Number* → ● → *Packet Warning* → ● → *Off* → ●

- Available for B Mode.

Dual Mode

Rejecting calls to either line in Dual Mode

● → *Settings* → ● → In Phone menu, *Double Number* → ● → *Reject By Line* → ● → *Select line* → ● → *On* → ●

Setting main line for Dual Mode

● → *Settings* → ● → In Phone menu, *Double Number* → ● → *Send Priority* → ● → *Select option* → ●