

<b>Media Player</b> .....	<b>8-2</b>
Media Basics .....	8-2
<b>Music</b> .....	<b>8-4</b>
Playing Music.....	8-4
<b>Video</b> .....	<b>8-5</b>
Playing Video.....	8-5

<b>Playlists</b> .....	<b>8-6</b>
Using Playlists .....	8-6
<b>S! Appli</b> .....	<b>8-7</b>
Using S! Applications .....	8-7
<b>Additional Functions</b> .....	<b>8-8</b>
<b>Troubleshooting</b> .....	<b>8-13</b>

# 8

## Media Player & S! Applications



## Media Basics

Use Media Player to play music/video on 934SH.

- Download media files from Mobile Internet sites via Media Player or transfer files from PCs or AQUOS Blu-ray Disc recorders (hereafter "Blu-ray Disc recorders").
- Transfer PC music files and save them on Memory Card.

### Music File Support

#### My Music

(Handset/Memory Card)

Downloads/Transferred Files

#### SD AUDIO

(Memory Card)

Transferred SD-AudioFiles

#### WMA

(Memory Card)

Transferred WMA Files

### Video File Support

#### My Videos

(Handset/Memory Card)

Downloads/Recorded Files

#### Recorder Contents/ SD VIDEO

(Memory Card)

Transferred SD-Video Files

### Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- When battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download). Packet transmission fees apply even while playback is paused.

### Compatibility

 
- Files transferred from PCs cannot be used as ringtones or System Sounds.



## Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

### 1 **Media Player**

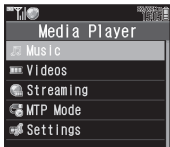


Media Player Menu

### 2 **Music or Videos**

### 3 **Download Music or Download Videos**

- Follow the links to download media.

#### Download via Music Search (Japanese)

In  **Music Search** 

- Follow onscreen instructions.

## Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

### Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

 
## Saving AAC Files

Convert PC music files to 934SH-compatible format (P.15-21), then save to corresponding Memory Card folder (P.15-24) via Mass Storage. Install USB Cable driver beforehand.

## Saving WMA Files

Follow these steps to save WMA files via compatible software:  
(Copy protected files can only be played on the handset with which the files were transferred.)

### 1 **Connect handset to a PC via USB Cable**

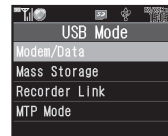

### 2 **MTP Mode**


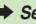

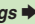



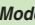
- Copy music from PC. Refer to the software's help menu for operational instructions.

### 3 **Yes**

#### Connection ends

- Disconnect USB Cable.

#### If Menu in 1 Does Not Appear

- Follow these steps:
  -   **Settings**    **Connectivity**
  -  **USB Mode**   **From 2**
  - Operations on the PC may be required; if prompted, follow onscreen instructions.



# Playing Music

1 → **Media Player** → → **Music** →

2 **My Music** → → **Select tab (folder)**



Music Playlists Window

3 **All Music** →

4 **Select file** →



Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files. (WMA album art is not supported.)

## Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

→ **Yes** →

**Playing SD AUDIO or WMA Files**  
In , **SD AUDIO** or **WMA** → → **From**

### Searching Music Files

After , → **Search** → → Enter search text →

### Lyric Display-Compatible Files

- Press to display lyrics.

## Music Playback Window Description



1	Title	6	Elapsed time
2	Artist name	7	Volume
3	Track number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

## Music Playback Operations

<b>Replay</b>	(Long Press: rewind <sup>1</sup> )
<b>Skip Forward</b>	(Long Press: fast forward <sup>1</sup> )
<b>Volume Down</b>	(Long Press: mute)
<b>Volume Up or Cancel Mute</b>	
<b>Pause</b>	
<b>Stop</b>	While paused,
<b>Switch Sound Output</b>	(Long)
<b>Open Help</b>	

<sup>1</sup>Release for playback.

## Advanced

- Resuming from stopped point
- Specifying start point
- Playing repeatedly or randomly
- Changing Sound Effects (And more on **P.8-8**)



## Playing Video

1 → **Media Player** → → **Videos** →

 
2 **My Videos** → → **Phone Memory or Memory Card** →



Video Playlists Window

3 **All Videos** →

4 **Select file** →

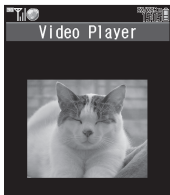

Video Playback Window

5 → **Playback stops**

**Playing Video Files Transferred from Blu-ray Disc Recorders**

In 2, **Recorder Contents** → → 4

**Playing SD VIDEO Files**

In 2, **SD VIDEO** → → 4

**Searching Video Files**

After 3, → **Search** → → Enter search text →

**At Alarm Time**

- Playback stops.

**Video Recorded on Other Devices**

- Video image may appear rotated.

### Video Playback Operations

For pause, volume up/down, sound output or help, see P.8-4 "Music Playback Operations."

<b>Replay</b>	 (Long Press: rewind <sup>†</sup> )
<b>Skip Forward</b>	 (Long Press while paused: advance frame, Long Press: fast forward <sup>†</sup> )
<b>Toggle Display Size</b>	

<sup>†</sup>Release for playback.

### Video Playback Window Description



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

### Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Switching audio output to wireless device
- Playing repeatedly or randomly
- Changing Sound Effects
- Changing playback size
- Setting Backlight status
- Hiding linked information (P.8-8)



 
## Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.


### Adding to Playlist

Follow these steps to add a music file to **プレイリスト1**:

- 1 → **Media Player** → → **Music** →

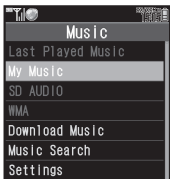

 
- 2 **My Music** →
- 3 **All Music** → → **Select file** →

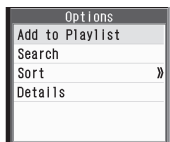

- 4 **Add to Playlist** → → **プレイリスト1** →

### Renaming Playlists

 - 1 In Playlists window, select **Playlist** →

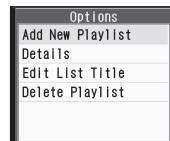

- 2 **Edit List Title** → → **Enter name** →



### Advanced

- Organizing Playlists
- Sorting files
- Opening properties
- Deleting/editing SD AUDIO files
- Deleting All WMA files
- Downloading Contents Keys (P.8-9)
- Organizing Playlists
- Sorting files
- Downloading Contents Keys
- Opening properties
- Deleting SD VIDEO files
- Renaming files transferred from Blu-ray Disc recorders (And more on P.8-10)



## Using S! Applications

 
Try out the preloaded S! Applications or download and use 934SH-compatible S! Applications, including games. Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

### Remote Control

- Use **ファミリツケ** for AQUOS

S! Application (Japanese) to control a TV, VCR, etc. via infrared.

- 1 → **S! Appli** →
- 2 **S! Appli Library** →

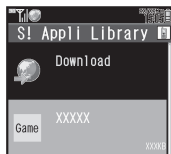

S! Appli Library

- 3 **Select application** →

### Network S! Applications

- A message appears indicating that Internet connection is required. Follow onscreen instructions.

### Incoming Calls

 
- Incoming calls automatically pause S! Application.

### Opening S! Appli Notification History

In , **Notification History** →

## Exiting S! Applications

- 1

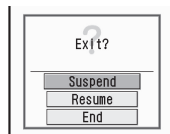

- 2 **End** →

### Pausing S! Applications

In , **Suspend** →

### Resuming S! Applications

→ **Resume** →

- Select **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Select **End** to end the S! Application.

## Advanced

- Downloading S! Applications
- Adjusting S! Application sound volume
- Canceling surround effect
- Setting handset responses to incoming transmissions
- Setting S! Application to activate in Standby
- Setting Permissions
- Opening properties (P.8-11)
- Moving S! Applications to Memory Card
- Changing S! Application settings
- Deleting S! Applications
- Restoring default S! Application settings
- Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 934SH
- Opening Java™ license information (P.8-12)



## Media Playback

### Music & Video

Resuming from stopped point	<ul style="list-style-type: none"> <li>● → <i>Media Player</i> → ● → <i>Music or Videos</i> → ●</li> <li>● → <i>Last Played Music or Last Played Video</i> → ●</li> </ul>
Specifying start point	<ul style="list-style-type: none"> <li>During playback, (⏮) → <i>Time Search</i> → ● → ●</li> <li>Enter time → ●</li> </ul>
Accessing linked information	<ul style="list-style-type: none"> <li>During playback, (⏮) → <i>Access Web Link</i> → ●</li> <li>→ <i>Yes</i> → ●</li> </ul>
Switching audio output to wireless device	<ul style="list-style-type: none"> <li>● → <i>Media Player</i> → ● → <i>Settings</i> → ● → ●</li> <li>🔊 <i>Sound Output</i> → ● → <i>Bluetooth Device</i> → ●</li> </ul>

### Music

Playing repeatedly or randomly	<ul style="list-style-type: none"> <li>(Start Here) During playback, (⏮) → <i>Playback Mode</i> → ● → ● → <i>See below</i></li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat One File</i></li> <li><i>Repeat</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat All Files</i></li> <li><i>Repeat All</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Play Randomly</i></li> <li><i>Random</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat Randomly</i></li> <li><i>Random Repeat</i> → ●</li> </ul>
Changing Sound Effects	<ul style="list-style-type: none"> <li>During playback, (⏮) → <i>Sound Effects</i> → ● → ●</li> <li>Select effect → ●</li> </ul>

### Video

Some functions may be unavailable depending on file.

Playing repeatedly or randomly	<ul style="list-style-type: none"> <li>(Start Here) During playback, (⏮) → <i>Settings</i> → ● → ● → <i>Playback Mode</i> → ● → ● → <i>See below</i></li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat One File</i></li> <li><i>Repeat</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Repeat All Files</i></li> <li><i>Repeat All</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Play Randomly</i></li> <li><i>Random</i> → ●</li> </ul>
Changing Sound Effects	<ul style="list-style-type: none"> <li>During playback, (⏮) → <i>Settings</i> → ● → ● → <i>Sound Effects</i> → ● → ● → <i>Select effect</i> → ●</li> </ul>
Changing playback size	<ul style="list-style-type: none"> <li>During playback, (⏮) → <i>Settings</i> → ● → ● → <i>Display Size</i> → ● → ● → <i>Select size</i> → ●</li> </ul>
Setting Backlight status	<ul style="list-style-type: none"> <li>During playback, (⏮) → <i>Settings</i> → ● → ● → <i>Backlight</i> → ● → <i>Select option</i> → ●</li> <li>● Selecting <i>Normal Settings</i> applies Display Backlight settings.</li> </ul>
Hiding linked information	<ul style="list-style-type: none"> <li>During playback, (⏮) → <i>Settings</i> → ● → ● → <i>Web Link Setting</i> → ● → ● → <i>Off</i> → ●</li> </ul>





## Managing Music Files

Organizing Playlists	<p><b>Start Here</b> ● ➔ <b>Media Player</b> ➔ ● ➔ <b>Music</b> ➔ ● ➔ <b>My Music</b> ➔ ● ➔ <b>Select tab (folder)</b> ➔ <b>See below</b></p> <p><b>Adding New Playlists</b>          ● ➔ <b>Add New Playlist</b> ➔ ● ➔ <b>Enter name</b> ➔ ●</p> <p><b>Deleting Playlists</b>  <b>Select Playlist</b> ➔ ● ➔ <b>Delete Playlist</b> ➔ ● ➔ <b>Yes</b> ➔ ●</p> <p><b>Deleting Playlist Files</b>  <b>Select Playlist</b> ➔ ● ➔ <b>Select file</b> ➔ ● ➔ <b>Delete</b> ➔ ● ➔ <b>Yes</b> ➔ ●</p> <p><b>Changing File Order</b>  <b>Select Playlist</b> ➔ ● ➔ <b>Select file</b> ➔ ● ➔ <b>Change Order</b> ➔ ● ➔ <b>Move file</b> ➔ ●</p>
	<p>● ➔ <b>Media Player</b> ➔ ● ➔ <b>Music</b> ➔ ● ➔ <b>My Music</b> ➔ ● ➔ <b>Select tab (folder)</b> ➔ <b>All Music</b> ➔ ● ➔ <b>Sort</b> ➔ ● ➔ <b>Select option</b> ➔ ●</p>
	<p><b>Start Here</b> ● ➔ <b>Media Player</b> ➔ ● ➔ <b>Music</b> ➔ ● ➔ <b>See below</b></p> <p><b>SD AUDIO Files</b>  <b>SD AUDIO</b> ➔ ● ➔ <b>All Music</b> ➔ ● ➔ <b>Select file</b> ➔ ● ➔ <b>Details</b> ➔ ●</p> <p><b>Other Files</b>  <b>My Music</b> ➔ ● ➔ <b>Select tab (folder)</b> ➔ ● ➔ <b>Select Playlist</b> ➔ ● ➔ <b>Select file</b> ➔ ● ➔ <b>Details</b> ➔ ●</p>
Sorting files	
Opening properties	

## Deleting/editing SD AUDIO files

**Start Here** ● ➔ **Media Player** ➔ ● ➔ **Music** ➔ ● ➔ **SD AUDIO** ➔ ● ➔ **See below**

**Deleting Single Files**

**All Music** ➔ ● ➔ **Select file** ➔ ● ➔ **Delete Track** ➔ ● ➔ **Yes** ➔ ●

- Source files will be deleted.

**Deleting All Entries**

**All Music** ➔ ● ➔ **Del. All Tracks** ➔ ● ➔ **Yes** ➔ ● ➔ **Yes** ➔ ●

- Source files will be deleted.

**Editing Title/Artist**

**All Music** ➔ ● ➔ **Select file** ➔ ● ➔ **Edit** ➔ ● ➔ **Select item** ➔ ● ➔ **Enter title or name** ➔ ●

## Deleting All WMA files

● ➔ **Media Player** ➔ ● ➔ **Settings** ➔ ● ➔ **Delete All WMA** ➔ ● ➔ **Enter Handset Code** ➔ ● ➔ **Yes** ➔ ●

- Source files will be deleted.

## Downloading Contents Keys

● ➔ **Media Player** ➔ ● ➔ **Music** ➔ ● ➔ **My Music** ➔ ● ➔ **Select tab (folder)** ➔ **Select Playlist** ➔ ● ➔ **Select file (with ⌘)** ➔ ● ➔ **Yes** ➔ ●

- Follow onscreen instructions.



## Managing Video Files

Organizing Playlists	<p><b>Start Here</b> → <b>Media Player</b> → <b>Videos</b> → <b>My Videos</b> → <b>Phone Memory or Memory Card</b> → See below</p> <p><b>Adding New Playlists</b> Add New Playlist → Enter name</p> <p><b>Deleting Playlists</b> Select Playlist → Delete Playlist → Yes</p> <p><b>Deleting Playlist Files</b> Select Playlist → Select file → Delete → Yes</p> <p><b>Changing File Order</b> Select Playlist → Select file → Change Order → Move file</p>
	<p>→ <b>Media Player</b> → <b>Videos</b> → <b>My Videos</b> → <b>Phone Memory or Memory Card</b> → <b>All Videos</b> → Sort → Select option</p>
	<p>→ <b>Media Player</b> → <b>Videos</b> → <b>My Videos</b> → <b>Phone Memory or Memory Card</b> → <b>All Videos</b> → Select file (with %)</p> <p>• Follow onscreen instructions.</p>
Sorting files	
Downloading Contents Keys	

Opening properties	<p><b>Start Here</b> → <b>Media Player</b> → <b>Videos</b> → See below</p> <p><b>SD VIDEO Files</b> SD VIDEO → Select file → Details</p> <p><b>Files Transferred from Blu-ray Disc Recorders</b> Recorder Contents → Select file → Details</p> <p><b>Other Files</b> My Videos → Phone Memory or Memory Card → Select Playlist → Select file → Details</p>
	<p>→ <b>Media Player</b> → <b>Videos</b> → <b>SD VIDEO</b> → Select file → Delete → Yes</p> <p>• Source files will be deleted.</p>
	<p>→ <b>Media Player</b> → <b>Videos</b> → Recorder Contents → Select file → Rename → Enter name</p>
Deleting SD VIDEO files	
Renaming files transferred from Blu-ray Disc recorders	
Checking Memory Card memory status	
Deleting files transferred from Blu-ray Disc recorders	<p><b>Start Here</b> → <b>Media Player</b> → <b>Videos</b> → Recorder Contents → See below</p> <p><b>Single Files</b> Select file → Delete → Yes</p> <p><b>All Files</b> Delete All → Enter Handset Code → Yes</p>



## S! Applications

Downloading S! Applications	<ul style="list-style-type: none"> <li>● → S! Appli → ● → S! Appli Library → ●</li> <li>→ Download → ●</li> <li>● Follow onscreen instructions.</li> </ul>
Adjusting S! Application sound volume	<ul style="list-style-type: none"> <li>● → S! Appli → ● → Settings → ● →</li> <li>Application Volume → ● → Adjust level → ●</li> </ul>
Canceling surround effect	<ul style="list-style-type: none"> <li>● → S! Appli → ● → Settings → ● →</li> <li>Surround → ● → Off → ●</li> </ul>
Setting handset responses to incoming transmissions	<ul style="list-style-type: none"> <li>Start Here ● → S! Appli → ● → Settings → ●</li> <li>→ Calls &amp; Alarms → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li>Showing Calls</li> <li>Select item → ● → Show Call Notice → ●</li> </ul>
	<ul style="list-style-type: none"> <li>Pausing S! Application for Incoming Mail</li> <li>Incoming Message → ● → Message Priority → ●</li> </ul>
	<ul style="list-style-type: none"> <li>Showing Alarm Notice</li> <li>Alarm → ● → Alarm Notice → ●</li> </ul>
	<ul style="list-style-type: none"> <li>Showing Incoming S! Appli Request Notice</li> <li>Notification → ● → Start Notice → ●</li> </ul>

## Setting S! Application to activate in Standby

	<ul style="list-style-type: none"> <li>Start Here ● → S! Appli → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li>Activating Screensaver</li> <li>Settings → ● → Screensaver → ● → Switch On/Off → ● → On → ●</li> </ul>
	<ul style="list-style-type: none"> <li>Setting Screensaver</li> <li>S! Appli Library → ● → Select application → ●</li> <li>☺ → As Screensaver → ●</li> <li>● As Screensaver appears for compatible S! Applications.</li> <li>● Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.</li> </ul>
	<ul style="list-style-type: none"> <li>Changing Screensaver Activation Time</li> <li>Settings → ● → Screensaver → ● →</li> <li>Activation Time → ● → Enter time → ●</li> </ul>
	<ul style="list-style-type: none"> <li>Disabling Automatic Screensaver Restart</li> <li>Settings → ● → Screensaver → ● → Stop Auto Start → ● → On → ●</li> </ul>
Setting Permissions	<ul style="list-style-type: none"> <li>Start Here ● → S! Appli → ● → S! Appli Library</li> <li>→ ● → Select application → ☺ → Permission</li> <li>→ ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li>Customizing Permissions for S! Appli Operations</li> <li>Select item → ● → Select option → ●</li> </ul>
	<ul style="list-style-type: none"> <li>Resetting Permission Settings</li> <li>Reset Settings → ● → Yes → ●</li> </ul>
Opening properties	<ul style="list-style-type: none"> <li>● → S! Appli → ● → S! Appli Library → ●</li> <li>→ Select application → ☺ → Details → ●</li> </ul>



<b>Moving S! Applications to Memory Card</b>	<ul style="list-style-type: none"> <li>● → <i>S! Appli</i> → ● → <i>S! Appli Library</i> → ● →</li> <li>Ⓜ → <i>Select application</i> → ● (□/✓) →</li> <li><b>Complete selection</b> → Ⓜ → <i>Move to Card</i> → ●</li> <li>• When an older version of the S! Application is saved, choose <b>Yes</b> or <b>No</b> and press ●.</li> <li>• Repeat application selection step as needed before pressing Ⓜ.</li> <li>• Some S! Applications cannot be moved to Memory Card.</li> </ul>
<b>Changing S! Application settings</b>	<p><b>Start Here</b> ● → <i>S! Appli</i> → ● → <i>Settings</i> → ●</p> <p>→ <b>See below</b></p> <p><b>Activating Notification Setting</b>  <i>Notification Setting</i> → ● → <i>On</i> → ●</p> <p><b>Setting Backlight Status</b>  <i>Backlight</i> → ● → <i>Switch On/Off</i> → ● →</p> <p><b>Select option</b> → ●</p> <ul style="list-style-type: none"> <li>• Selecting <b>Normal Settings</b> applies Display Backlight settings.</li> </ul> <p><b>Disabling Backlight Flashing</b>  <i>Backlight</i> → ● → <i>Blink</i> → ● → <i>Off</i> → ●</p> <p><b>Disabling Vibration</b>  <i>Vibration</i> → ● → <i>Off</i> → ●</p>
<b>Deleting S! Applications</b>	<ul style="list-style-type: none"> <li>● → <i>S! Appli</i> → ● → <i>S! Appli Library</i> → ●</li> <li>→ <i>Select application</i> → Ⓜ → <i>Delete</i> → ● →</li> <li><b>Yes</b> → ●</li> <li>• Handset Code may be required.</li> <li>• Cancel Screensaver to delete Screensaver S! Application.</li> </ul>

<b>Restoring default S! Application settings</b>	<ul style="list-style-type: none"> <li>● → <i>S! Appli</i> → ● → <i>Settings</i> → ● →</li> <li><i>Set to Default</i> → ● → <i>Enter Handset Code</i> → ● →</li> <li><b>Yes</b> → ●</li> </ul>
<b>Restoring default S! Appli Library</b>	<ul style="list-style-type: none"> <li>● → <i>S! Appli</i> → ● → <i>Settings</i> → ● →</li> <li><i>Memory All Clear</i> → ● → <i>Enter Handset Code</i> → ● →</li> <li><b>Yes</b> → ●</li> <li>• Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)</li> <li>• Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications; Near Chat access restriction will be canceled.</li> </ul>
<b>Synchronizing Memory Card S! Applications with 934SH</b>	<ul style="list-style-type: none"> <li>● → <i>S! Appli</i> → ● → <i>Settings</i> → ● →</li> <li><i>Synchronization</i> → ● → <b>Yes</b> → ●</li> </ul>
<b>Opening Java™ license information</b>	<ul style="list-style-type: none"> <li>● → <i>S! Appli</i> → ● → <i>Information</i> → ●</li> </ul>



## Music

### ? How do I delete files in All Music?

- Delete All Music files in My Music via Data Folder (Music or Ring Songs-Tones).

### ? WMA files do not appear (WMA files are not transferable)

- Did you use 934SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform **Delete All WMA** and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)
- WMA files may be corrupted; perform **Delete All WMA** and retry.

### ? Cannot play WMA files

- Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform **Delete All WMA** and retry.

## Video

### ? How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

### ? Cannot play video files

- Files created with PC software, etc. may not play.

## S! Applications

### ? Cannot move S! Applications to Memory Card

- Memory Card memory may be low or the S! Application may already be saved.

### ? S! Applications do not pause for incoming transmissions despite Calls & Alarms settings

- Regardless of setting, a message appears for Screensaver S! Applications.

