Calendar & Tasks	9-2
Calendar	9-
Tasks	9-
Alarms	9-
Using Alarms	
Wakeup TV	9-9
Using Wakeup TV	9-9
Relaxation Time	9-1
Playing Animation with Music &	
Illumination	9-1
Calculator	9-1
Using Calculator	
Expenses Memo	9-1
Adding Expenses	
Osaifu-Keitai®	9-1
Osaifu-Keitai® (Japanese)	9-1
Locking IC Card	9-1
Simulated Call	9-18
Faking Incoming Calls	9-1
Stopwatch	9-19
Using Stopwatch	9-19
Countdown Timer	9-20
Using Countdown Timer	9-2
World Clock	9-2
Opening World Clock	9-2

Hour Minder	9-22
Using Hour Minder	9-22
Pedometer	9-23
Using Pedometer	
Document Viewer	9-25
Opening PC Documents	9-25
Notepad	9-26
Saving Text	
ASCII Art	9-27
Using ASCII Art	9-27
Voice Recorder	9-28
Recording/Playing Voice	
Scan Barcode	9-29
Scanning Barcodes	9-29
Create QR Code	9-30
Creating QR Codes	
Scan Card	9-31
Scanning Business Cards	
Scan Text	
Scanning Text	
Kanji Grabber	
Using Kanji Grabber	
Additional Functions	
Troubleshooting	

9

Handy Extras



Calendar

Opening Calendar

① ◆ Tools ◆ ② ◆ In PIM/ Lifestyle menu, Calendar ◆ ③



Calendar Window

Toggling View

Press v to toggle Calendar window.



Month View



3Month View



6Month View



Week View

Key Assignments

All Views

Open Previous Page	Hundard Hard
Open Next Page	T of
Open Help	O ne

■ Month/3Month View

Select Date	:
Go to Current Date	5 .*

6Month View

Go to Current Month	5 ta
Select Month	•••

Week View

Select Date	•
Select Time Block	②



⁽b) Changing default view Jumping to specified date Changing date color Selecting task view option Adding stamps (Month/3Month View) Hiding schedules Saving additional holidays Removing/restoring holidays (P.9-34)

Saving Schedules

 
Follow these steps to save subject, start/ end date/time. Alarm and schedule details: (Enter Subject or Description to save entry.)

In Calendar window, select date **→** (•)



<Add New Entry> ▶ ●

Enter subject 🖈 💿



Enter start date/time

◆

●



- End:

 Enter end date/time **→** (•)
- Alarm:

 ◆

 •
- Alarm Time:

 ◆ (•)

 ◆ Select time **→** (•) **→** (•)
- Description:

 ◆ (•)

 ◆ Enter schedule details

 ◆

 ●
- (Yr) → Saved

All-Day Schedule In \bigcirc . \bigcirc \Rightarrow \bigcirc \Rightarrow From \bigcirc **Custom Alarm Time** In ②. Alarm Time: → ④ → Other → From 3

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

 While Alarm sounds/vibrates, press ①, ③ or .

Stopping Alarm to Open Schedule

 While Alarm sounds/vibrates, press a key other than (), (or) or .

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.







Schedule List

- Select schedule or task ▶ ●

Opening Task List
In ②, select task → ③ → Go to
Tasks → ⑥

Accessing Secret Entries
[Calendar Window] ⑤ → Unlock
Temporarily → ⑥ → Enter Handset
Code → ⑥

Opening Related Message

Open schedule-related messages saved from Messaging message list.

- In schedule list, select schedule ▶ ●
- 🔼 🔊 **→** Related Mail **→** 💿
 - Related message opens.
 - To return to schedule window, press ...

Deleting Message from Schedule

After ①, ⑥ → Related Mail: → ⑥ →

Yes → ⑥ → ♡

Deleting Schedules

- One Entry
- In schedule list, select schedule ▶
- Delete → → This
 Appointment → → Yes
 → ●
- All Entries of the Day
- In Calendar window, select date ▶ ⊠
- Delete → → All This Day
 → → Yes → ●

 




Tasks

Saving Tasks

 
Follow these steps to save subject, due date/time, Alarm and task details: (Enter Subject or Description to save entry.)











Enter due date/time → ●



🔒 Alarm: 🖈 💿



- Alarm Time:

 Select time

 Select v

 Select
- Description:

 ● Enter task details ●
- Saved

Task with No Due Date/Time
In ②, ③ → ⑥ → From ②
Custom Alarm Time
In ③, Alarm Time: → ⑥ → Other →
⑥ → Enter date/time → ⑥ → ⊙ →
From ②

Hiding tasks Editing tasks Setting priority Changing Alarm tone/video & duration Changing Alarm volume Selecting Vibration option Sounding Alarm tone even in Manner mode (P.9-36 - 9-37)



Stopping Alarm to Return to Standby

While Alarm sounds/vibrates, press , or
 or

 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or
 or

 or

 or

 or

 or

 or

Stopping Alarm to Open Task

 While Alarm sounds/vibrates, press a key other than , or .

 
When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

Opening Tasks





Task List

- Use to open completed or uncompleted task list.
- Select task → ●



😭 💿 🕈 Standby returns

Accessing Secret Entries

After ①, ⊗ → Unlock Temporarily →

● ➤ Enter Handset Code → ●

Marking Tasks as Completed
After ①, select task ▶ ☞

 
Deleting Tasks

- One Entry
 - \rceil In task list, select task 🖈 🖾
- Delete → ●
- 👍 This Task ♦ 💿 ♦ Yes ♦ 💿
- All Completed Tasks
- በ In task list, 🖾
- Delete → ●
- All Comp. Tasks → →
 Yes → ●

Using Alarms

Setting Alarm

Follow these steps to set Alarm to sound at a specific time on a specific day of the week: (Set Snooze--Alarm repeats at set interval--Alarm Volume and Duration.)





Alarm List

 












- Select day → (□/☑) → Complete selection → ♡
- Snooze: ▶ ●
- Select interval **→**
 - For custom intervals, select Other.

- 🛐 Alarm Volume: Þ 💿
- Adjust level **→** ●
- Duration:

 ●
- Select time

 For custom Duration, select *Other*.
- ► For more settings, repeat ② ②.

Activating Alarm Once or Daily In ②, Once or Every Day (All) → ● From ⑤

Selecting/Canceling All Days
In ⑤, ⑥ ➡ Check All or Uncheck All

▶ ● Excluding Holidays

cluding Holidays
In \odot , select day \blacktriangleright \odot (\square/\square) \blacktriangleright Complete selection \blacktriangleright Except
Holidays \blacktriangleright \odot \blacktriangleright \odot \blacktriangleright From \odot





At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm

Press a key.

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

,

When Snooze is Set

Alarm repeats at the set interval. Other Alarms do not activate while handset is Snoozing.

Canceling Snooze

While Snoozing, **● Yes ●**

 Snooze is automatically canceled after a period of time.

Canceling Alarm

🚹 In Alarm list, select entry 🖈 🖾



Switch Off **→** ●

 
 Reactivate entry to use the same settings.

Reactivating Entry

In ⊘, Switch On **→** ●

Deleting Alarm

One Entry



Reset Alarm → ●

? Yes ▶ 💿

All Entries

📊 In Alarm list, select entry 🕈 🖾

Clear All → ●

Enter Handset Code

→ Yes → ●



Using Wakeup TV

Setting Wakeup TV

Follow these steps to activate TV at a specific time on a specific day of the week:

- Complete TV Area Setup beforehand.
- TV may not activate in poor signal conditions.
- (•) **→** *Tools* **→** (•) **→** In PIM/ Lifestyle menu, Wakeup TV

 


 
Wakeup TV List





Wakeup TV Menu







- Select day **→ (**□/**(**□/**(**) **→** Complete selection **→** 🔊
- Channel: **▶**
 - Select channel **→** ●
 - (¬) → Saved
 - For more settings, repeat 2 3.
- ends

Activating TV Once or Daily In ②, Once or Every Day (All) → • **⇒** From **⑤** Selecting/Canceling All Days In ⑤, Ø → Check All or Uncheck All **▶ (•)**

Excluding Holidays In \bigcirc , select day \Rightarrow \bigcirc (\square/\square) Complete selection **→** Except

Canceling Alarm

 Alarm activates at Wakeup TV time. To cancel Alarm, follow these steps:

[Wakeup TV Menu] Alarm On/Off: ▶ (•) **→** Off **→** (•) **→** From (3)

Adjusting Alarm Volume

[Wakeup TV Menu] Alarm Volume: > Adjust level
 From
 From

Wakeup TV setting

At Wakeup TV Time

TV activates after Alarm.



Stopping Alarm Instantly

- While Alarm sounds/vibrates, press a key.
- When Another Function is Active
- TV may not activate depending on the function.

After TV is On for a Period of Time

 Confirmation appears. Choose Yes and press () to exit TV.

Canceling Wakeup TV

- In Wakeup TV list, select entry **→** (□)
- • Reactivate entry to use the same settings.

In ②, Wakeup TV On → •

Deleting Wakeup TV

Reactivating Entry

 
- One Entry In Wakeup TV list, select entry **▶** 🖾
- Reset Alarm **→** •
- Yes **▶** •
- All Entries
- In Wakeup TV list, select entry **▶** 🖾
- Enter Handset Code **→**

Handy Extras

Playing Animation with Music & Illumination

Play preset animations or downloaded Flash® files with music and illumination. Set playback time, volume and illumination pattern as needed.

- ① → Tools → ⊙ → In PIM/ Lifestyle menu, Relaxation Time → ⊙
- Select type →
 - Animation appears.
 - For *Flash*®, select a file and press .
 - Key LEDs do not illuminate for soundless Flash® files.



Follow these steps to set playback time, volume and Key Illumination pattern:

- ① ◆ Tools ◆ ④ ◆ In PIM/ Lifestyle menu, Relaxation Time ◆ ⑥
- Settings → ●



- R Playback Time → ●
- Select time →
 - For custom playback time, select Other.
- **⑤** Volume **→**
- Adjust level **→** ●





- 옹 Key Pattern 🕈 💿
- Select pattern → → •
- **③** → Standby returns



 


Using Calculator

● → Tools → ● → In PIM/ Lifestyle menu, Calculator



Calculator Window







▶ Calculator ends

Key Assignments + (Add) • **•** - (Subtract) **(** × (Multiply) **②** ÷ (Divide) (•) = (Sum) C·CE (Clear) CM (Clear Memory) (E) (E) RM (Recall Memory) 5 (Y/) M+ (Add to Memory) X man . (Decimal) +/- (Positive/Negative Value) # ... (F) % (Percentage)

Memory Calculation

- Clear Memory before starting new Memory calculations.
- Numbers saved in Memory remain until handset power is turned off.

Incoming Calls

 Calculations are not affected. End the call to return to Calculator.

Using % Function

Use ® to find definite percentage of a known value.

Example: Calculate 30% of 800,000 Enter $800,000 \Rightarrow x \Rightarrow 30 \Rightarrow \%$

240,000 appears.





Adding Expenses

Entering Expenses









Saving under Custom Category
In ②, Other ▶ ● ▶ Enter name ▶ ●

Checking Entries

● → Tools → ● → In PIM/ Lifestyle menu, Expenses Memo → ●



🕖 Totals 🕈 💿



Expenses Memo List

Saving Entries to Notepad [Expenses Memo List] ^② → Save to Notepad → ⑥

All expense details are saved as a single entry.

Deleting Entries

- One Entry
- In Expenses Memo list, select entry ▶ ⊠
- Delete Item → ●
- Yes → ●
- All Entries
- 🚹 In Expenses Memo list, 🖾
- Delete All → ●

Osaifu-Keitai® (Japanese)

Osaifu-Keitai® describes IC Card-equipped handsets that support e-money or credit functions/services. Osaifu-Keitai® encompasses a range of IC Card-based services on FeliCa-compatible SoftBank handsets. 934SH supports Osaifu-Keitai®. To use e-money, e-ticketing and reward points, etc., hold handset over a compatible reader/writer at shops, restaurants, and other retail outlets, etc.

Basics

Before using Osaifu-Keitai®, activate Lifestyle-Appli, complete registration, customize settings and charge accounts.

Starting Lifestyle-Appli

♦ Tools ♦ ● In PIM/Lifestyle menu, Osaifu-Keitai ♦ ● \$
 Lifestyle-Appli ♦ ● \$ Select application \$ ●

 
Lifestyle-Appli Precautions

- Contact Osaifu-Keitai[®] service providers for Lifestyle-Appli registration and usage details
- Keep service passwords/customer service contact information, etc. in a separate place.

Using Osaifu-Keitai®

Follow these steps to conduct a transaction: Example: Making an electronic payment

- Lifestyle-Appli activation is not necessary.
- Transactions are possible even when handset power is off (if battery is adequately charged).
- Calls/Internet transmissions do not affect transactions.
- Place logo over reader/ writer → Confirm scan results



Place this part over reader/writer

• Align handset parallel to reader/writer.

Important Osaifu-Keitai® Usage Note

 SoftBank is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.

When Placed Over Sensor

- If recognition is slow, move handset around slightly.
- Handset may respond automatically for some services.



Locking IC Card

IC Card Lock

Restrict access to/prevent unauthorized use of Osaifu-Keitai® on handset.







 
Canceling IC Card Lock
In ②, IC Card Lock ◆ ● ◆ Off ◆ ●

◆ Enter Handset Code ◆ ●





IC Card Settings Menu





Remote Lock


Disable Osaifu-Keitai® remotely by mail or phone.


Mail Remote Lock	Send mail to activate Remote Lock
Call Remote	Call from a specified phone to activate Remote Lock
Lock	to activate Remote Lock

Mail Remote Lock

   
Preparation on Handset














Mail Remote Lock Menu

- **3** Remote Lock PW **→**
- Enter password ▶ ●
- Switch On/Off → ●
- ② On → ③ → 🕏

Canceling Mail Remote Lock
In ⊕, Switch On/Off ⇒ ● → Off →
● → ♡

 ■ Activating Remote Lock via Mail
If handset cannot receive mail IC Card
Lock is not set.



 After handset receives message, IC Card Lock is set and notice is sent as a reply.

- Call Remote Lock
- Preparation on Handset
- ① ◆ Tools ◆ ♦ In PIM/ Lifestyle menu, Osaifu-Keitai ♦ ⑥
- IC Card Settings → ●
- Remote Lock → ► Enter Handset Code → ●



Call Remote Lock → ●



Call Remote Lock Menu

Phone No. to Lck 1 or Phone No. to Lck 2 ▶ ●



- Phone Book → → Select entry → ● → Select phone number → ●
 - Select *Phone Number* to enter directly.
- Switch On/Off → ●
 On → → ☞

Enabling Activation via Public Phone
In ⊕, Set Public Phone → ● → On
→ ● → From ②

Canceling Call Remote Lock
In ⊕, Switch On/Off → ● → Off →
● → ♡

■ Activating Remote Lock via Phone
If handset cannot receive calls IC Card
Lock is not set

- Using one of the specified phones, call handset

 Send Caller ID.
- Handset receives call

 End the call
- The call is recorded as a Missed Call.
- Within three minutes, repeat

 • twice



 After the third Missed Call, IC Card Lock is set; a message announces Remote Lock activation. Confirm the message and end the call.

If Series is Interrupted by Another Call

 Missed Call count is reset. Start over from the beginning.

- Save name and phone number to show as Caller ID.
- Ringer may be muted by handset settings.
 To override Silent setting, see P.9-40.

Setting Simulated Call

● → Tools → ● In PIM/ Lifestyle menu, Simulated Call → ●



Simulated Call Menu







- Name: → Enter name
 → ●
- Phone Number: → →
 Enter phone number → ●

 → □
- Select tone/file → Select

When Name and Phone Number are Unset • Handset rings with Caller ID "Withheld."

Canceling Simulated Call
[Simulated Call Menu] Switch On/Off

[Simulated Call Menu] Switch On/Of

Setting Wait Time

[Simulated Call Menu] Receive Timing

→ • Select time → • → >

Using Simulated Call

Available with handset open.



(Long)

- Handset rings and incoming Voice Call window opens.
- Ringtone stops after a period of time.
- In incoming Voice Call window, press
 - Voice Call window opens. (Softkeys are dummies.)
- **③** → Simulated Call ends

When Receive Timing is Not *Immediately*● Press ③ or during wait time to

- Press or well during wait time to cancel Simulated Call activation.
- Simulated Call activation is canceled by incoming calls, Alarms, etc. during wait time.

Using Stopwatch

Stopwatch stops when battery runs low.





Stopwatch Window





Press to resume.



 Records are deleted when Stopwatch ends. Recording Lap Times
While Stopwatch is running, ⊚
Saving Records to Notepad
After ⓒ, ⊚ ⇒ Save to Notepad ⇒ ●
Resetting Records
After ⓒ, ⊛ ⇒ From ❷
Incoming Calls
● Stopwatch is not affected by incoming calls. End the call to return.





Timer Entry Window

 
seconds **→** (•)



Countdown Timer Window

• Press (to change time.

- **(•) →** Countdown starts
- Press to stop/resume countdown.
- Set time elapses **→** Tone sounds



Using Timer Records After ①, ☑ → Select record → ⊙ →

● From ⑤

Resetting Countdown Timer Stop countdown and (2) **Incoming Calls**

· Countdown is not affected by incoming calls. End the call to return

When Set Time Elapses

Tone sounds.



Stopping Tone Instantly

• Press • or a Side Key. (Tone stops automatically after a period of time.)

 
When Timer Time Elapsed during a Call

Tone sounds after the call.

Opening World Clock

 \bullet \rightarrow Tools \rightarrow \bullet Clocks/Gauges **→** World Clock **→** (•)







Advancing One Hour (Daylight Saving) [Set Time Zone Window] (29) ■ To cancel, press (Yr). **Adding Custom Time Zone** [Set Time Zone Window]

→ Enter city name → • • + or - → • • → Enter time difference

◆

●

Opening World Clock in Standby

- **Settings → In** Phone menu, *Display* **→ ●**
- Standby Display **▶** ●



- Clock/Calendar

 ◆ (•)
- World Clock (L), etc.

 ◆





Set Time Zone Window



Setting Hour Minder

Follow these steps to activate the hourly time signal at selected hours:





Hour Minder Menu





Advanced



Select hour ▶ ● (□/☑) ▶ Complete selection ▶ ☞







Changing Hour Minder Duration
In ②. Advanced → ○ → Duration:

 → ● Select time → ●

 From □

■ For custom Duration, select *Other*.

Selecting/Canceling All Hours
In ②, ◎ → Check All or Uncheck All

▶ (

At Hour Minder Time

Hour Minder activates; sounds/vibrates by related settings.



Stopping Tone Instantly

Press a key.

When Another Function is Active

- Hour Minder does not activate. **Incoming Calls**
- Active Hour Minder stops for incoming calls.

Canceling Hour Minder





Handy Extras

Changing Hour Minder tone/video Setting handset to vibrate at Hour Minder Time Sounding Hour Minder tone even in Manner mode Activating Hour Minder based on World Clock time (P.9-40)

Using Pedometer

Getting Started

- Count based on a pace of approximately 100 steps per minute over even terrain.
- Accuracy may be affected by course, terrain, walking style, etc.
- Avoid holding the handset; use a body worn case or a strap, or place handset inside a pocket or bag.
 - Avoid sudden/erratic movements.
- Steps are not counted in the following cases:
 - While handset is off
 - For the first few steps
 - While handset vibrates
- Handset use may affect accuracy.
- Use Pedometer only as a rough guide.

Adjusting Counter Sensitivity

- ♠ Tools ♠ ♠ ♦ Clocks/
 Gauges ♠ Pedometer ♠ ♠ ♠
 Settings ♠ ♠ Step Sensitivity ♠
 ♠ ♦ Select option ♠ ♠
- Select Low when steps seem overcounted; select High when they seem undercounted

Saving Body Information

Weight and pace entry required to view full Pedometer data.





Pedometer Menu

- Settings → Body Info.

 → ●
- Enter Handset Code → ●



Body Info Menu

- Height → ★ Enter height
- Weight → ► Enter weight → ●
- Pace → → Yes or No → ●

 Choose Yes to enter pace automatically based on height.
- Enter pace → ❤

Editing Body Information [Body Info Menu] Select item ▶ ●

- **→** Enter value **→ ⑤ → ⑤**
- For Pace, automatic calculation confirmation appears (when height is entered).

Activating Pedometer

- **2** On **→**

Canceling Pedometer In ②, Off ▶ ●



Pedometer Indicator

When Pedometer is active, today's step count appears in Standby.



Viewing Step Count Records

In Pedometer menu, Today's Walking **→** (•)







 
Steps Window

- Press (r) to toggle daily/weekly view.
- Press ∑ to open previous day/ week, or # at to open next day/week.



- Select time/date **→** (•)
- Hourly/daily step counts appear.





In ②, ◎ → Reset Day's Data → ● Yes → ●

Resetting Log

Reset → ● ► Enter Handset Code → () → Yes → ()

■ Todav's data is also reset.

Setting Targets

Information window opens, etc. when target is achieved for these items:



- In Pedometer menu, Settings → ● Target → ●
- Target Settings **→** •
- Select item **→ ● →** Enter value/time

 ◆
 - Other target settings may consequently change.

Editing Targets

Select item ⇒ (a) ⇒ Enter value/ time **→** •

When Target is Achieved

 A tone sounds and Information window opens. (Select Goal Achievement and press () to open Pedometer Calendar.) Follow these steps to mute achievement tone:

[Pedometer Menu] Settings → • • → ● Off ● ●

About Exercise (Ex)

 Ex and MET indicate amount and intensity of physical activity, respectively. Ex for walking is calculated by multiplying 3 METs by walking duration (hour).

Advanced



Handy Extras

🤔 Changing Pedometer indicator Ousing Pedometer Calendar Ochecking accumulated data Resetting accumulated data Customizing achievement notice (P.9-40 - 9-41)

Opening PC Documents

Supported File Formats:

PDF (.pdf)

Microsoft® Excel® (.xls)

Microsoft® Word (.doc)

Microsoft® PowerPoint® (.ppt)

- Some files may not appear correctly.
- Download files via the Internet.
- When transferring files from PCs, save to corresponding Memory Card folder (P.15-24).





Select file

◆ ●

Zooming In/Out with Loupe (Magnifier)
In open file,

(Long) → Specify
portion →

Expected Specify
Specify
Portion →

Expecify
Specify
Spec

Key Assignments	
View Whole Page	•
Scroll	:
View Upper Left	1 *
Toggle Full Screen View On/Off	2 tr
View Upper Right	3 de
Zoom Out	4 th / -
Continuous Zoom Out	4 [₹] (Long)
View Center	5 .x
Zoom In	6 mmc /
Continuous Zoom In	ি (Long)
View Lower Left	7.00
Jump to Page	8 * TUV
View Lower Right	9 ws/s2
Open Help	O se
Next Page	# © Y
Previous Page	X +2
Fit Width	<u>\$</u>
Rotate 90 Degrees	\(\mathbb{y}\)



New Notepad Entry





Notepad List





Enter text → ●



Sorting Entries Temporarily [Notepad List] (*)

Opening Notepad

In Notepad list, select entry

→ ●



CLIST returns

Deleting Entries

One Entry

n Notepad list, select entry

⇒ ⊠



 
Selected Entries

In Notepad list, select entry

Setting/Manage

Output

Description:





Unchecking All In ©. Uncheck A

In €, Uncheck All • •

All Entries

In Notepad list, select entry →

Setting/Manage →

O



Advanced



Handy Extras

 
Searching text within all entries Inserting Notepad text into message text Sending entries via S! Mail Creating text files Importing text files Checking memory status Opening properties (P.9-41)

Using ASCII Art

Inserting ASCII Art

In message text entry window, ⊕ → Call ASCII Art → ●







Previewing ASCII Art In ⊘, select entry ⇒ ☺ ■ Press ⊙ to insert ASCII Art.

Editing Entries





ASCII Art List



Opening Entries In ⊘, select entry ▶ ⊚ ▶ View ▶ ● Adding New Entries In ⊘, <Empty> ▶ ● Create ASCII Art ▶ ●

Deleting Entries

- In ASCII Art list, select entry

 → □ → Delete → ●
- Yes → ●

Recording/Playing Voice

Recording

- Recording stops if battery runs low while recording.
- Record conversations during calls via Record Caller Voice.





Recording Window

- Recording starts
 Recording starts



 
- For Extended Voice, recording is saved automatically.
- Save → ●

Playback

In recording window, ⑤ ►

Ring Songs Tones ► ●





Playback Operations

Adjust Volume	③
Pause/Resume	•
Stop	Scale of the second



Scanning Barcodes

Scan UPC/JAN (1D barcodes) or QR Codes (2D barcodes).

- Membership file or password may be required when scanning barcodes.
- Some barcodes may not be scanned.







🔰 Scan Barcode 🕈 💿





Scan Window

- Use Focus Adjustment Bar as a quide (better focus in darker blue).
- If focus is poor, press 🐨 to switch to Shutter mode.



Scan starts

- If recognition takes time, slowly adjust the distance between handset and barcode.
- Press to stop scan.

 
Tone sounds **→** Scan results appear



Split Data


- After scanning, confirmation appears.
 Follow onscreen prompt(s).
- Scan results do not appear until all split data is scanned.

Starting Over




Key Assignments in Scan Window

Toggle Focus Mode	3 **
Switch to Photo Camera	7 *
Focus Lock	ů.
Mobile Light On/Off	₩ °
Adjust Brightness	••
Open Help	0 50E

 



 

Large items are divided into multiple QR Codes.

Procedure

Follow these steps to create QR Codes from Data Folder files:





Create QR Code → ●





- Select folder

 Select file or entry

 Select
 - QR Code is created.



 QR Code is saved to Data Folder (Pictures). From Phone Book Entries

In ⑤, Phone Book ▶ ⑥ ▶ Select entry ▶ ⑥ ▶ ⑤

From My Details

In €, My Details → ● 🔊 → 🖯

From Entered Text

In ⓒ, Text Input → ⑥ → Enter text

▶ () ♦ (:

Switching Storage Media

In ⑤, ৷ Save to ▶ ⑥ ▶ Phone

or *Memory Card* **→ ● ● ●** Attaching to S! Mail

In ⑤, ৷ → Send As Message → ⑥

→ Complete message → 🐑

 
Incoming Calls

 QR Code creation is not affected by incoming calls. End the call to return.

Scanning Business Cards

Scan business cards and save names, addresses, etc. to Phone Book.

- English business cards may not be scanned correctly.
- Some cards may not be scanned.











Scan Window

- 40
 - Press 🐨 to stop scan.
- 🕞 💿 🖈 Scan results appear



- **(a) (b) (b)**
 - New Phone Book entry is saved.

If Text Exceeds Phone Book Entry Item Character Limit

 Confirmation appears. Follow these steps to delete overage:

Yes **▶ ●**

Switching Storage Media

After ⑤, ◎ **⇒** Save to **⇒** ⑥ **⇒** Select storage media **⇒** ⑥ **⇒** ⑥

Saving Scanned Image as Phone Book Picture

After \bigcirc , \otimes \Rightarrow Add Image \Rightarrow \bullet \Rightarrow On \Rightarrow \bullet

Starting Over

After \bigcirc , \bigcirc \Rightarrow Yes \Rightarrow \bigcirc \Rightarrow From \bigcirc

Key Assignments in Scan Window

Toggle Focus Mode	3 **
Switch to Photo Camera	7 *
Focus Lock	\$
Mobile Light On/Off	# 97
Adjust Brightness	••
Onen Heln	(20 th

Scanning Text

Scan text and save it to Notepad, etc. Available Modes:

Full	Capture text in full screen and scan a selected line
Line	Capture a few lines of text and scan a selected line

 
- \bullet To toggle mode, press $\textcircled{\ensuremath{\mathfrak{D}}}$ in scan window.
- Some text cannot be scanned.







- To change mode, press 😉 in scan window.
- Frame text in center of Display



Scan Window

- Scan starts
 Press ७ to stop scan.





🖊 🗵

Notepad
→

Correcting Text Type

After ⑤, ⑥ ♦ Change Mode ♦ ⑥
♦ Select type ♦ ⑥ ♦ From ⑥

Editing Scanned Text

After ⑤, ⑥ ♦ Select/Edit ♦ ⑥ ♦

Select character ♦ Select alternative from list or edit directly ♦ From ⑥

Starting Over

In ⑥, ⑥ ♦ Yes ♦ ⑥ ♦ From ⑥

Key Assignments in Scan Window

Toggle Focus Mode	3 🛎
Switch to Photo Camera	7.*
Focus Lock	2
Mobile Light On/Off	# o.v
Adjust Brightness	⊙
Open Help	0 %



Using Kanji Grabber

Scan a word of up to ten kanji and look it up in dictionaries.

Some text cannot be scanned.





Kanji Grabber **→** ●





- - Scan results (kanji) appear.
- Select dictionary **→** Search **→** •
- Select word, etc. **→**
 - Definition/translation window opens.


Starting Over

In ⑤, ഈ ➡ From ⑥

Key Assignments in Scan Window

Toggle 2x Magnification On/Off	\(\nabla_{y}\)
Toggle Focus Mode	3 3
Switch to Photo Camera	7 *
Focus Lock	Û
Mobile Light On/Off	# o't
Adjust Brightness	⊙
Open Help	O se



 



Calendar	
■ View Settings	
Changing default view	Tools T
Jumping to specified date	● → Tools → ● → In PIM/Lifestyle menu, Calendar → ● → ⑧ → ■ Enter date → ●
	Start Here → Tools in PIM/Lifestyle menu, Calendar See below
Changing date color	By Days of the Week ② → Calendar Settings → ● → Set Color → ● → By Week → ● → Select day → ● → Select color → ●
	By Date Select date
	Resetting "By Date" Colors ③
Selecting task view option	Tools T
Adding stamps (Month/3Month View)	● * Tools * ● * In PIM/Lifestyle menu, Calendar * ● * Select date * ② * Select stamp * ●
Hiding schedules	 Tools In PIM/Lifestyle menu, Calendar Select date Select entry Secret: On

	Start Here
Saving additional holidays	Adding Holidays <empty> ● ● Enter name ● ● Enter date ● ● Select frequency ● ● ♥ ⊙</empty>
	Editing Added Holidays Select holiday © Date: Name: Enter name ODAte: DATE: DESCRIPTION Enter name ODATE: DESCRIPTION En
Removing/ restoring holidays	 Tools In PIM/Lifestyle menu, Calendar Set Holiday Select holiday (□/√)

■ Saving/Editing Schedules

Setting Category/ Location	Start Here
	Category Category: Select Category
	Location Location: ● ● Enter location ● ● ●
Creating Categories	Start Here
	Renaming Categories Select Category → ● ★ Edit Category Name → ● ★ Enter name → ●
	Changing Icons Select Category
	Resetting ③ → Reset Settings → ● → Enter Handset Code → ● → Yes → ●
Saving repetitive schedules	Tools Select date Select entry Select frequency Select entry Select e

	Start Here ● → Tools → ● → In PIM/Lifestyle menu, Calendar → ● → Select date → ● → Select entry → ● → ● → S! Friend's Status:
Saving S! Friend's	
Status information	Availability Answer Status: ● ◆ Edit ◆ ※ ◆ ※ • Set Category first.
	Comment: Comment: Set Category first.
Editing entries	● Tools ● ■ In PIM/Lifestyle menu, Calendar ● ■ Select date ■ ● Select entry ● ● ● Select item ● ● Edit in the same manner as saving schedules ● ♡
Changing Alarm tone/video & duration	Start Here
	Alarm Tone/Video Assign Tone/Video: Select folder Select tone/file Select start point if required.
	Duration Duration: Select time Duration: Durat
Changing Alarm volume	● * Tools * ● * In PIM/Lifestyle menu, Calendar * ● * ⑤ * Alarm Settings * ● Alarm Volume: * ● * Adjust level * ●
Selecting Vibration option	● Tools ● In PIM/Lifestyle menu, Calendar ● □ ■ Alarm Settings ● Vibration: ● ■ Select option ■



	→ Tools →
Sounding Alarm	
•	Calendar ⇒ ● ⇒ 🖾 ⇒ Alarm Settings ⇒ ●
tone even in	⇒ For Manner Mode: ⇒ ● ⇒ Ring ⇒ ● ⇒
Manner mode	- For Mailler Mode: Ring
Mariner mode	Yes ⇒ ●

■ Managing Schee	■ Managing Schedules	
	Start Here ● → Tools → ● In PIM/Lifestyle menu, Calendar → ● → See below	
Searching entries	By Subject	
	By Category	
Checking memory status	● * Tools * ● * In PIM/Lifestyle menu, Calendar * ● * Select date * © * Memory Status * ●	
Deleting all entries	● Tools ● In PIM/Lifestyle menu, Calendar ● ● ⑤ Delete ● All Appointments ● Enter Handset Code ● Yes ● ⑥	
Deleting entries by specifying week (Week View)	Start Here ● → Tools → ● In PIM/Lifestyle menu, Calendar → ● → See below	
	Within One Week Select date ⇒ ⊗ ⇒ Delete ⇒ ● → All This Week ⇒ ● → Yes ⇒ ●	
	Up to the End of Previous Week Select date ⇒ ⊚ ⇒ Delete ⇒ ● ⇒ Up to Last Week ⇒ ● ≯ Yes ⇒ ●	

Deleting entries by specifying month (Month/3Month View)	Start Here
	Within One Month Select date → ② → Delete → ● → All This Month → ● → Yes → ●
	Up to the End of Previous Month Select date ⇒ ② ⇒ Delete ⇒ ● ⇒ Up to Last Month ⇒ ● → Yes ⇒ ●
Deleting entries in six months (6Month View)	● * Tools * ● In PIM/Lifestyle menu, Calendar * ● * ⑤ * Delete * ● * All This 6Months * ● * Yes * ●

Tasks

Task List

Hiding tasks	● → Tools → ● → In PIM/Lifestyle menu, Tasks → ● → Select task → □ → Edit → ●
	⇒ Secret: ⇒ ● ⇒ On ⇒ ● ⇒ 🖭

■ Saving/Editing Tasks

Editing tasks	● ** Tools ** ● ** In PIM/Lifestyle menu, Tasks ** ● ** Select task ** ◎ ** Edit ** ● ** Select item ** ● ** Edit in the same manner as saving tasks ** ©
Setting priority	● ** Tools ** ● ** In PIM/Lifestyle menu, Tasks ** ● ** Select task ** ② ** Edit ** ● ** Priority: ** ● ** Select priority ** ● ** ②



Changing Alarm tone/ video & duration	Start Here
	Alarm Tone/Video Assign Tone/Video: Select folder Select tone/file Select start point if required.
	Duration Duration: Select time Duration: Durat
Changing Alarm volume	● * Tools * ● In PIM/Lifestyle menu, Tasks * ● * ③ * Alarm Settings * ● * Alarm Volume: * ● * Adjust level * ●
Selecting Vibration option	● Tools ● ● In PIM/Lifestyle menu, Tasks ● ● ③ → Alarm Settings ● ● Vibration: ● ● Select option ● ●
Sounding Alarm tone even in Manner mode	● * Tools * ● * In PIM/Lifestyle menu, Tasks * ● * ◎ * Alarm Settings * ● * For Manner Mode: * ● * Ring * ● * Yes • ●

■ Managing lasks	
	Start Here
Searching tasks	By Subject By Subject
	By Due Date By Due Date ● ■ Enter date ●
Sorting tasks by priority	● → Tools → ● → In PIM/Lifestyle menu, Tasks → ● → 🖾 → Sort → ● → Priority → ●
Checking memory status	● → Tools → ● → In PIM/Lifestyle menu, Tasks → ● → □ → Memory Status → ●
Deleting all tasks	Tools → ● In PIM/Lifestyle menu, Tasks → ⊕ ⊕ Delete → All Tasks • Enter Handset Code → Ves → ●

Alarms

Editing entries	● Tools ● In PIM/Lifestyle menu, Alarms ● Select entry ● Select item ● Edit in the same manner as saving entries ● ©
Saving entry name	● ** Tools ** ● ** In PIM/Lifestyle menu, Alarms ** ● ** Select entry ** ● ** Subject: •* ● ** Enter name ** ● ** ⊙
	Start Here
Changing Alarm tone/video	Using Preset Tone or Data Folder File Select folder → ● ⇒ Select tone/file ⇒ ⊙ • Select start point if required.
	Using Customized Screen Tone/Video Customized Screen
Setting handset to vibrate at Alarm Time	 Tools In PIM/Lifestyle menu, Alarms Select entry Vibration: On or Link to Sound Select Link to Sound Select Link to Sound Select Link to Sound
Sounding Alarm tone even in Manner mode	● * Tools * ● * In PIM/Lifestyle menu, Alarms * ● * Settings * ● * For Manner Mode * ● * Ring * ● * Yes * ●
Activating Alarm based on World Clock time	● Tools • ● In PIM/Lifestyle menu, Alarms • ● Settings • ● Link to World Clk • ● On • ●

Wakeup TV

Editing entries	● Tools ● ● In PIM/Lifestyle menu, Wakeup TV ● ● Select entry ● ● Select item ● ● Edit in the same manner as saving entries ● Θ
	Start Here
Changing Alarm tone/video	Using Preset Tone or Data Folder File Select folder → ● → Select tone/file → ● ∞ • Select start point if required.
	Using Customized Screen Tone/Video Customized Screen
Sounding Alarm	Tools In PIM/Lifestyle menu,
tone even in	Wakeup TV → ● → For Manner Mode → ● →
Manner mode	Ring → ● Yes → ●

Calculator

Copying calculation results	While result appears, ⊚ → Copy → ●
Changing exchange rate for currency conversion	Tools In PIM/Lifestyle menu, Calculator Money Converter Exchange Rate Domestic or Foreign Enter rate
Converting currencies	● Tools ● ● In PIM/Lifestyle menu, Calculator ● ● Enter amount of money ■ Money Converter ● ● To Domestic or To Foreign ● ● • Set Exchange Rate first.



Expenses Memo Changing Category Expenses Memo > • Totals > • > of saved entry ● → Tools → ● → In PIM/Lifestyle menu, Changing amount Edit ⇒ ● Renaming Categories Select Category → ● Enter name → ●

Osaifu-Kei<u>tai®</u>

Enabling to view e-money balances	● Tools ● In PIM/Lifestyle menu, Osaifu-Keitai ● IC Card Settings ● Balance Info ● Enter Handset Code ● Empty> ● S! Appli or Lifestyle-Appli ● Select application ● For use with compatible Lifestyle-Applications. • Start Lifestyle-Appli once before adding it to Balance Info list.
Moving applications up/down Balance Info list	 Tools In PIM/Lifestyle menu, Osaifu-Keitai IC Card Settings Balance Info Enter Handset Code Select application Move Select target location
Removing applications from Balance Info list	● Tools ● In PIM/Lifestyle menu, Osaifu-Keitai ● IC Card Settings ● ■ Balance Info ● Enter Handset Code ● Select application ● Delete ●

Customizing handset response to reader/writer commands	 Tools In PIM/Lifestyle menu, Osaifu-Keitai IC Card Settings Interface Settings Enter Handset Code Select item Off
Opening IC Card properties	● Tools ● ● In PIM/Lifestyle menu, Osaifu-Keitai ● ● IC Card Settings ● ● ■ IC Card Status ● ●
	Start Here
Changing IC Card Lock notice recipient	Changing Recipient To Set Recipient Select method Select/enter number/address Select/selecting Phone Book as setting method.
	Disabling Notice Off → ● → □□□ → □□
Changing required Missed Call count for Call Remote Lock	 Tools In PIM/Lifestyle menu, Osaifu-Keitai IC Card Settings Remote Lock Call Remote Lock Count for Lock Enter Missed Call count ✓
Restoring default Osaifu-Keitai [®] settings	 Tools In PIM/Lifestyle menu, Osaifu-Keitai IC Card Settings Set to Default Enter Handset Code Yes



Starting via Simulated Call menu	● Tools ● In PIM/Lifestyle menu, Simulated Call ● Receive Simulated Call ● Pes ● ■ Simulated Call starts immediately regardless of Receive Timing setting. ■ Settings remain even after starting Simulated Call during setup.
Clearing caller information	● * Tools * ● In PIM/Lifestyle menu, Simulated Call * ● * Set Caller * ● * ◎ * Yes * ● * ② * ②
Overriding Silent volume setting	● Tools ● ● In PIM/Lifestyle menu, Simulated Call ● For Silent Mode ● ● Ring ● Yes ● ♥ ♡

Hour	Minder
------	--------

Changing Hour Minder tone/video	● Tools ● ⇔ Clocks/Gauges Hour Minder ● Advanced ● → Assign Tone/Video: ● Select folder ◆ ● Select tone/file ● ● ⊕ ⊕ ⊕ ⊕ Select start point if required.
Setting handset to vibrate at Hour Minder Time	● * Tools * • * Clocks/Gauges * Hour Minder * • * Advanced * • * Vibration: * • * On or Link to Sound * • * Select Link to Sound to allow compatible SMAF files to control vibration.

Sounding Hour Minder tone even in Manner mode	● Tools ● O Clocks/Gauges Hour Minder ● Advanced ● For Manner Mode: ● Ring ● Yes ● ●
Activating Hour Minder based on	● → Tools → ● → ⊙ Clocks/Gauges → Hour Minder → ● → Advanced → ● → Link
World Clock time	to World Clk: ⇒ • On ⇒ • • • •

Pedometer

Changing Pedometer indicator	Settings In Phone menu, Display Standby Display Pedometer Select item O
Using Pedometer Calendar	● Tools ● ● Clocks/Gauges ● Pedometer ● ● Pedometer Calendar ● ● Select date ● ● Degree of achievement appears. • Press ※ or #= to view previous or next month.
Checking accumulated data	● Tools ● ● ○ Clocks/Gauges → Pedometer ● ● Accumulated Data ● ● Change in body information is reflected in the data.
Resetting accumulated data	● Tools ● ● Clocks/Gauges ● Pedometer ● ● Accumulated Data ● ● Code ● Peset Walk Data ● ● Enter Handset Code ● ● Yes ● ● Averages are also reset.

Customizing achievement notice	Start Here
	Changing Tone Goal Sound
	Changing Tone Volume Goal Volume
	Selecting Vibration Option Vibration
	Changing Duration Duration Select time For custom Duration, select Other and press .

8.7	_	$\overline{}$		_
- 1	[0]	re.	ы	(6)

Editing Notepad	Start Here
	Editing Text Edit Text ● Edit • Edit
	Changing Category Change Category Select Category ●
Searching text within all entries	● * Tools * • • • Doc./Rec. * Notepad • • Select entry * • Search • • • Enter text * •
Inserting Notepad text into message text	● Tools ● Doc./Rec. Notepad ● Select entry ● Send ● As Message Text ● SI Mail or SMS ● Complete message ♥ ● SI Mail Composition window opens automatically depending on character count.

Sending entries via S! Mail	● * Tools * ● * ◆ Doc./Rec. * Notepad • • Select entry * ● * Send * ● * Via Message * • Complete message * •
Creating text files	 Tools
Importing text files	Tools Doc./Rec. Notepad Select entry Doc./Rec. Notepad Import Text File Doc./Rec.
Checking memory status	● Tools ● ● ⊙ Doc./Rec. → Notepad ● ● Select entry ● ⊜ → Setting/Manage ● ● Memory Status ●
Opening properties	● → Tools → ● → Occ./Rec. → Notepad → ● → Select entry → □ → Details → ●

Voice Recorder

	Tools Tools Doc./Rec. Voice
	Recorder → ● → 🖾 → Record Time → ● →
Saving longer	Extended Voice ⇒ ● ⇒ ● Recording
recordings	starts ⇒ ● ⇒ Recording ends
	 Insert Memory Card to record in Extended Voice
	mode. (Recording is saved automatically.)
	Tools T
Sending Voice files via S! Mail	Recorder ⇒ ● ⇒ ● Recording starts ⇒ ●
	Recording ends ⇒ Save and Send ⇒ ●
	Complete message
	Available in <i>For Message</i> mode.
	•



	● ▼ Tools ▼ ● ♥ ⊙ Doc./Rec. ▼ Voice Recorder ▼ ● ♥ ⊗ ▼ Save Recording to ▼ ● Select option ▼ ●
	Recorder ⇒ ● ⇒ 🖾 ⇒ Save Recording to ⇒
Switching storage	Select option Select option
media	 Available in For Message mode.
	 Set to Ask Each Time to select media after every
	recording.

Scan Barcode

Scanning during text entry	Start Here In a text entry window, ② → Scan → ③ → Scan Code → ④ → Frame barcode in center of Display → ⑥ → See below
	Pasting All Scan Results
	Pasting a Part of Scan Results ③ → Select first character → ● → Highlight text range → ●
Scanning continuously	● Tools ● ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● ● ◎ Continuous Scan ● ● On ● Frame barcode in center of Display ● • Choose Yes to continue scanning or No and press ● to view scan results.
Reading saved barcode images	● Tools • ● ◆ ⊙ Doc./Rec. • Barcode/ Scan • ● ◆ Open Barcode • ● Select file • ●
Saving scan results	● * Tools * ● * * Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * ③ * Save * ●

Saving to Notepad	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * ③ * Notepad * ●
Saving linked info to Phone Book	● Tools ● ● ODC./Rec. ■ Barcode/ Scan ● Scan Barcode ● ● Frame barcode in center of Display ● ● Select number or mail address ■ ◎ ■ Save to Ph.Book ● ● As New Entry ● ● Complete other fields ● ② ● To add to an existing entry, select As New Detail. ● When MEMORY: appears in scan results, press ● to enter the items underlined with a dotted line automatically in Phone Book entry window.
Opening saved scan results	● Tools ● ● Onc./Rec. ■ Barcode/ Scan ● Scanned Results ● ● Select file ● ● • Select a file and press ⊕ to rename files, open properties or delete files. • Some files may not open.
	Start Here ● → Tools → ● → ⊙ Doc./Rec. → Barcode/Scan → ● → Scan Barcode → ● → Frame barcode in center of Display → ● → See below Dialing Numbers Select phone number → ● → ふ
Using linked info	Sending Messages Select mail address → ● Complete message → ● • When MAILTO: appears in scan results, press ● to enter the items underlined with a dotted line automatically in Composition window. Accessing Internet Sites Select URL → ●



	01-11-01-0-1
Using images as Wallpaper	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select image ● Set as Wallpaper ● ● • For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Saving images & melodies	● Tools ● → ⊙ Doc./Rec. → Barcode/ Scan ● ● Scan Barcode ● ● Frame barcode in center of Display ● ● Select file ● ③ ● To Data Folder ● ●
Opening or playing files	● Tools ● ● ⊖ Doc./Rec. ■ Barcode/ Scan ● ● Scan Barcode ● ● ► Frame barcode in center of Display ● ● Select file ● ●
Using images for System Graphics	● Tools ● ⊖ Doc./Rec. Barcode/ Scan ● ● Scan Barcode ● Frame barcode in center of Display ● Select image ● As System ● Select item ● Specify image area ● • Some images may be usable without specifying image area.

Pasting to message text	Start Here ● → Tools → ● → ⊙ Doc./Rec. → Barcode/Scan → ● → Scan Barcode → ● → Frame barcode in center of Display → ● → ○ → Send Message → ● → See below
	All Text
	Selected Text ③ Select first character → ● Highlight text range → ● S! Mail or SMS → ● ★ Complete message → ● • S! Mail Composition window opens automatically depending on character count.
Copying text	Start Here ● → Tools → ● → ⊙ Doc./Rec. → Barcode/Scan → ● → Scan Barcode → ● → Frame barcode in center of Display → ● → See below
	Text ② → Copy → ● → Select first character → ● → Highlight text range → ●
	Number, Address or URL Select number, mail address or URL Copy Telephone, Copy Address or Copy URL


Scan Card

	-
Saving to Notepad	● * Tools * ● * * Doc./Rec. * Barcode/ Scan * ● * Scan Card * ● * Frame card in center of Display * ● * ● * ③ * Notepad * ●
Pasting to message text	Start Here
	All Text
	Selected Text ③ ▶ Select first character ▶ ● ▶ Highlight text range ▶ ● ▶ SI Mail or SMS ▶ ● ▶ Complete message ▶ ○ ◆ SI Mail Composition window opens automatically depending on character count.
Copying text	Start Here
	Text ② → Copy → ● → Select first character → ● → Highlight text range → ●

Scan Text

Scanning and	In a text entry window, ⊚ → Scan → ● →
pasting during text	Scan Text ⇒ ● ⇒ Frame text in center of
entry	Display → ● → Select line → ● → ●
	● → Tools → ● → ⊙ Doc./Rec. → Barcode/ Scan → ● → Scan Text → ● → Frame text in
	center of Display → ● Select line → ●
Scanning more text	Select line 4
	Select Continue Part to enter additional text or
	Scan More to enter text after a line break.
	Tools O O Doc./Rec. Barcode/
Saving scan results	Scan ⇒ ● ⇒ Scan Text ⇒ ● ⇒ Frame text in
	center of Display → ● Select line → ● →
	● ⇒ ⊠ ⇒ Save ⇒ ●
	● → Tools → ● → • Doc./Rec. → Barcode/
	Scan → ● Scan Text → ● Frame text in
Saving linked info	center of Display → ● Select line → ● →
to Phone Book	Select number or mail address
to Filotie Book	Save to Ph.Book ⇒ ● ⇒ As New Entry ⇒ ●
	→ Complete other fields → √
	 To add to an existing entry, select As New Detail.
	Tools →
	Scan → ● Scanned Results → ● Select
Opening saved	file • •
scan results	Select a file and press to rename files, open
	properties or delete files.
	Some files may not open.

Using linked info	Start Here ● → Tools → ● → ⇔ Doc./Rec. → Barcode/Scan → ● → Scan Text → ● → Frame text in center of Display → ● → Select line → ● → ● → See below Dialing Numbers Select phone number → ● → ▷ Sending Messages Select mail address → ● Complete message → ♡
	Accessing Internet Sites Select URL
Pasting to message text	Start Here ● → Tools → ● → ⊙ Doc./Rec. → Barcode/Scan → ● → Scan Text → ● → Frame text in center of Display → ● → Select line → ● → ● → ○ → Send Message → ● → See below
	All Text (a) ⇒ S! Mail or SMS ⇒ (b) → Complete message ⇒ (c) • S! Mail Composition window opens automatically depending on character count.
	Selected Text ② Select first character → ● Highlight text range → ● S! Mail or SMS → ● ★ Complete message → ○ S! Mail Composition window opens automatically depending on character count.

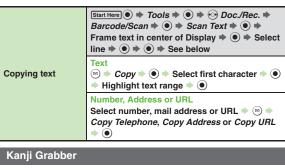



Osaifu-Keitai®



Cannot use Osaifu-Keitai® (S! FeliCa)

• Battery may be low. Charge battery or install a charged battery.



Recognition via reader/writer takes time

• Check logo area. Foreign articles can block/hamper recognition.



Call Remote Lock does not activate even after specified number of Missed Calls

- . Missed Call count is reset by calls from other numbers. If series is interrupted, start over from the beginning.
- When Call Forwarding is active, Missed Calls may not be recorded.

Wakeup TV



TV does not activate with specified channel

• If Wakeup TV Time arrives while TV is active, channel does not switch to the specified one.

Voice Recorder



Cannot record properly

• If incompatible microphone is connected, recording may fail.



Noise/skipping occurs

 Avoid shocks to handset while recording; may cause noise or skipping.



Recording takes time to start

• Recording window may take longer to open as more Voice files are saved on Memory Card.

Scanning Barcode/Card/Text



Cannot read barcodes properly

- · Scan may fail if barcode is dirty or unclear.
- · Scan may fail if barcode is scanned under inadequate light.
- · Scan may fail if multiple barcodes are captured at one time.



Cannot read barcodes during text entry

· Scanning is not available during calls or when mobile camera is active.



Cannot read barcode images in **Data Folder automatically**

· When scan fails, follow onscreen instructions and select next barcode image manually.



Cannot scan business cards properly

- Scan fails if business card is printed in light-colored text on a dark background, handwritten or printed in casual/decorative fonts, decorated with a background pattern, or designed with both vertical and horizontal text.
- Scan may fail if business card is printed in light-colored text on a light background, printed in italics or extremely small fonts, decorated with a logo or logo-like text, printed on a glossy paper or other material, or dirty/folded.



Cannot scan text properly

- · Scanning over 35 characters at one time may yield poor results.
- Adjust to frame text in []. Letters at the ends may be distorted.

