

Date & Time	14-2
Date & Time	14-2
Display & Illumination	14-3
Language	14-3
Image & Text	14-3
Display & Backlight	14-3
Standby Display	14-4
Key Backlight	14-4
Incoming Transmissions	14-5
Handset Response	14-5

Sounds	14-6
System Sounds	14-6
Additional Sound Settings	14-6
Connectivity	14-7
Network	14-7
IP Service	14-8
Location Information	14-8
Reset	14-9
Restoring Default Settings	14-9

14

Handset Customization



🔧 Date & Time Settings

Date & Time

[Start Here](#) → Settings → In Phone menu, *Date & Time*

Setting the date and time	<i>Set Date/Time</i> → Enter the year → Enter the month → Enter the day → Enter the time
Correcting Clock manually	<i>Time Correction</i> → <i>Manual</i> → <i>Yes</i> → <i>Yes</i>
Disabling auto Clock correction	<i>Time Correction</i> → <i>Auto Corr. Setting</i> → <i>Off</i>
Setting auto Clock correction timing	<i>Time Correction</i> → <i>Auto Corr. Setting</i> → <i>On</i> → Select item → (☐/☑) → yr →
Activating Daylight Saving	<i>Daylight Saving</i> → <i>On</i>
Changing Time Zone	<i>Set Time Zone</i> → Select area
Adding custom time zone	<i>Set Time Zone</i> → Enter city name → + or - → Enter time difference
Changing time format to 12 hour	<i>Time Format</i> → <i>12 Hour</i>
Changing date format	<i>Date Format</i> → Select option
Starting the Calendar week on Monday	<i>Calendar Format</i> → <i>Monday-Sunday</i>



⌘ Display & Illumination Settings 1

Language

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ Phone menu

Switching interface between Japanese and English

Language or 言語選択 ➔ ● ➔ **English** or 日本語 ➔ ●

Image & Text

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Display** ➔ ●

Showing preloaded images for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Preset Animation (or Pattern 1 to Pattern 3)** ➔ ●

Showing Data Folder images for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Select folder** ➔ ● ➔ **Select image** ➔ ● ➔ **Specify image area** ➔ ●
 ● Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Customized Screen** ➔ ● ➔ ●
 ● Not available for **Power On** or **Power Off**.

Selecting image enhancement option for Standby and video playback

Vivid Mode ➔ ● ➔ **Select option** ➔ ●

Changing font of numbers entered in Standby

Dial Number ➔ ● ➔ **Select pattern** ➔ ●

Showing a message each time handset is turned on

Greeting Message ➔ ● ➔ **Edit Message** ➔ ● ➔ **Enter message** ➔ ● ➔ **Switch On/Off** ➔ ● ➔ **On** ➔ ●

Display & Backlight

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Display** ➔ ●

Disabling display transition effects

Display Effects ➔ ● ➔ **Off** ➔ ●

Changing Display/key Backlight illumination time

Backlight ➔ ● ➔ **Time Out** ➔ ● ➔ **Select time** ➔ ●

Changing Display Brightness

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔ **Adjust level** ➔ ●

Canceling/activating Light Sensor

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔  (□/✓) ➔ ●

Changing inactivity time after which Display turns off

Display Saving ➔ ● ➔ **Select period** ➔ ●



🔧 Display & Illumination Settings 2

Standby Display

[Start Here](#) → Settings → In Phone menu, *Display* → Standby Display →

Changing Clock/Calendar *Clock/Calendar* → Select type →

Showing Network service provider name in Standby *Show Operator Name* → On →

Hiding Pedometer in Standby *Pedometer* → Off →

Key Backlight

[Start Here](#) → Settings → Phone menu

Disabling key Backlight illumination *Set Key Light* → Off →

Changing Key Illumination pattern by event *Sounds & Alerts* → *Set Key Illumi* → Select item → Key Pattern → Select pattern →





















































































Disabling Key Illumination by event *Sounds & Alerts* → *Set Key Illumi* → Select item → Switch On/Off → Off →



Incoming Transmission Settings

Handset Response

[Start Here](#)    **Settings**    In Phone menu, **Sounds & Alerts**  

Changing ringtone volume	Volume    Select item    Adjust level  
Setting illumination color	Event Light    Select item    Light Color    Select color  
Changing Key Illumination patterns	Event Light    Select item    Key Pattern    Select pattern  
Selecting illumination option	Event Light    Select item    Switch On/Off    On, Link to Sound or Off   <ul style="list-style-type: none"> • For Link to Sound, press  again.
Enabling/disabling illumination for missed transmissions	Status Light    Select item    Switch On/Off    On or Off  
Setting illumination color for missed transmissions	Status Light    Select item    Light Color    Select color  
Answering calls with other keys	Any Key Answer    On   <ul style="list-style-type: none"> • Use    -  ,  ,  , , , ,  or  in addition to .



Sound Settings

System Sounds

Start Here ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Sounds & Alerts** ➔ ●

Enabling Keypad Tones	System Sounds ➔ ● ➔ Keypad Tones ➔ ● ➔ Select tone ➔ ●
Changing S! Circle Talk tone	System Sounds ➔ ● ➔ S! Circle Talk ➔ ● ➔ Select tone ➔ ●
Changing other System Sounds	System Sounds ➔ ● ➔ Select item ➔ ● ➔ Tone or Sound ➔ ● ➔ Select folder ➔ ● ➔ Select tone/file ➔ ● ● For files with limited usage period, choose Yes and press ●.
Disabling System Sounds	System Sounds ➔ ● ➔ Select item ➔ ● ➔ Tone or Sound ➔ ● ➔ Off ➔ ● ● Not available for S! Circle Talk .
Changing System Sound duration	System Sounds ➔ ● ➔ Select item ➔ ● ➔ Duration ➔ ● ➔ Select/enter time ➔ ● ● Not available for Keypad Tones or S! Circle Talk .
Changing System Sound volume	Volume ➔ ● ➔ General Volume ➔ ● ➔ Adjust level ➔ ●

Additional Sound Settings

Start Here ● ➔ **Settings** ➔ ● ➔ **Phone menu**

















































Disabling Speaker when using Headphones	Ringer Output ➔ ● ➔ Earphone ➔ ●
Activating Speaker surround	Sounds & Alerts ➔ ● ➔ Surround ➔ ● ➔ On ➔ ●



Connectivity Settings 1

Network

Start Here  → Settings  → Network 

Selecting a Network manually	Select Network  → Manual  → Select Network 
Adding preferred Networks	Select Network  → Set Preferred  → Select target location  → Insert  → Select Network 
Adding preferred Networks to the end	Select Network  → Set Preferred  → Add to End  → Select Network 
Deleting preferred Networks	Select Network  → Set Preferred  → Select Network  → Delete 
Adding Networks	Select Network  → Add New Network  → Add  → Enter country code  → Enter Network code  → Enter name  → Select NW Type  → Select type  <ul style="list-style-type: none"> • After selecting Add New Network and pressing , Network list appears if Network has already been added. To add more, press  again and proceed.
Editing Networks	Select Network  → Add New Network  → Select Network  → Change  → Edit in the same manner as adding Networks 
Deleting Networks	Select Network  → Add New Network  → Select Network  → Delete 
Switching Network services manually	Select Service  → Manual  → Select service 
Retrieving Network Information	Retrieve NW Info  → Yes 
Checking Network status	Network Info 
Editing access point names for external devices	External Device  → Select name  → Edit 
Clearing access point names for external devices	External Device  → Reset  → Enter Handset Code  → Yes 



🔧 Connectivity Settings 2

IP Service

[Start Here](#) → Settings → In Phone menu, Locks

Disabling IP Service

IP Service Setting → Off → Enter Handset Code

- When **Off**, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.

Location Information

[Start Here](#) → Settings → Network → Location Info

Adding/editing Location Information destination URLs

URL Setting → <Empty> (or select URL) → Edit → Enter URL

- Default URL is not editable.

Specifying Location Information destination URL

URL Setting → Select URL

Viewing Location Information destination URL

URL Setting → Select URL → Display

Deleting Location Information destination URLs

URL Setting → Select URL → Delete → Yes

Hiding Location Information

Datum On/Off → Off → Enter Handset Code

Changing Location Information confirmation option

Location Property → Select option

Suppressing Information window after sending Location Information automatically

Inform Location → Do not Show → Enter Handset Code

Opening sent Location Information records

Offer Loc. Logs → Select record

Deleting sent Location Information records

Offer Loc. Logs → Select record → Delete or Delete All → Yes



Reset Settings

Restoring Default Settings

[Start Here](#) → **Settings** → **In Phone menu, Master Reset**

Restoring default handset settings	<p>Reset Settings → Enter Handset Code → Yes → Yes</p> <ul style="list-style-type: none"> Some default settings may not be restored.
Clearing all Phone Book entries, Data Folder files, etc.	<p>Reset All → Enter Handset Code → Yes → Yes</p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

