

<b>USIM Card</b> .....	<b>15-2</b>
About USIM Card .....	15-2
USIM Card Installation.....	15-3
<b>Battery</b> .....	<b>15-4</b>
Battery Installation.....	15-4
<b>Software Update</b> .....	<b>15-5</b>
<b>Cleaning Handset</b> .....	<b>15-6</b>
<b>Troubleshooting</b> .....	<b>15-7</b>
<b>Key Assignments</b> .....	<b>15-9</b>
<b>Pager Codes</b> .....	<b>15-11</b>
Pager Code List.....	15-11
<b>Character Codes</b> .....	<b>15-12</b>
Character Code List.....	15-12

<b>Weather Indicators</b> .....	<b>15-18</b>
Weather Indicator List .....	15-18
<b>Specifications</b> .....	<b>15-19</b>
Memory Card Structure & Contents	
.....	15-24
<b>Menu List</b> .....	<b>15-25</b>
<b>Index</b> .....	<b>15-32</b>
<b>Warranty &amp; Service</b> .....	<b>15-40</b>
<b>Customer Service</b> .....	<b>15-41</b>

# 15

 
## Appendix



## About USIM Card

USIM Card is an IC card containing customer and authentication information, including the handset number. USIM Card must be inserted to use this handset. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

### Precautions

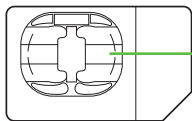

IC Chip

- Do not insert USIM Card into any other IC card device. SoftBank is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Use a dry, soft cloth to clean the USIM Card.
- Do not attach labels to USIM Card. Malfunction may result.

### Important

- USIM Card is the property of SoftBank.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P.15-41).

### USIM PIN

4-digit code (**9999** by default); activate PIN Entry to restrict usage.

#### PUK Lock

- Entering incorrect PIN three consecutive times activates PIN Lock, limiting handset use.

#### Canceling PIN Lock

- Contact SoftBank Mobile Customer Center, General Information (P.15-41) for your Personal Unblocking Key (PUK Code) and follow these steps:

**Enter PUK Code** ➔ ● ➔ **Enter new PIN** ➔ ● ➔ **Re-enter new PIN** ➔ ●

- Write down PUK code.

#### PUK Lock

- Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. Contact SoftBank Mobile Customer Center, General Information (P.15-41) for recovery.

 


## USIM Card Installation


- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

### Inserting


- 1 Remove battery (P.15-4)
- 2 Using Tab, pull out Tray as shown until it clicks

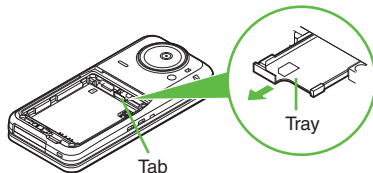

 - 3 Slide in USIM Card with IC chip facing up




- 4 Push in Tray fully

 


- Reinstall battery (P.15-4).

### Removing

 - 1 Remove battery
- 2 Using Tab, pull out Tray as shown until it clicks

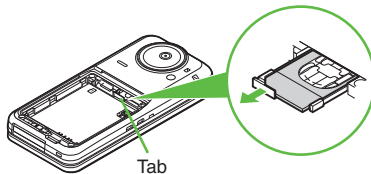

 - 3 Lift and slide out USIM Card as shown



- Reinstall battery.
- Take care not to lose removed USIM Card.

### After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

- Some downloaded files may be inaccessible. In addition, S! Applications, BookSurfing® and Near Chat may be disabled after USIM Card replacement.



# Battery Installation

## About Battery

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.
- To maintain water resistance, close Battery Cover properly.
- Battery is not waterproofed.

### Lithium-ion Battery

 
- This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.



- To recycle a used lithium-ion battery, take it to any shop displaying the symbol shown above.
- To avoid fire or electric shock, do not short-circuit or disassemble battery.

## Inserting & Removing

### 1 Unlock Battery Cover

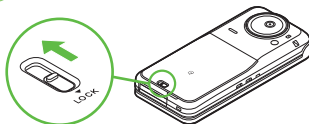


### 2 Remove cover




- Lift as shown.
 
### 3 Insert battery

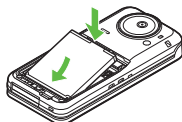


- With logo side up, fit tabs into battery cavity slots.

### 4 Close cover

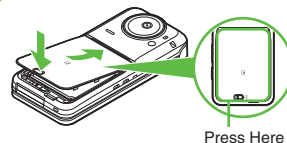 

- Fit cover top into slot, then press down firmly.


### 5 Lock cover

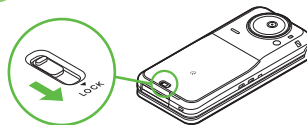 

- Slide switch as shown until it clicks.
- Close cover firmly. Water may seep inside handset when there is debris between cover and base.

### Removing

 - Turn handset power off and lift battery as shown.

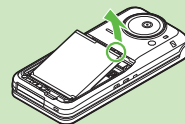

## Software Update




Check for firmware updates and download as required.

### Precautions

 
- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand.
- Update will not start if other functions are in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk.
- Always back up important information. SoftBank cannot be held liable for damages from lost information, etc.

### Updating Software

Packet transmission fees do not apply to updates (including checking, downloading and rewriting).

1  ➔ **Settings** ➔  ➔ **In Phone menu, Software Update** ➔ 

2 **Software Update** ➔ 

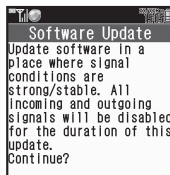

- Follow onscreen instructions.

### Setting Update Period (Japanese)


In  **Update Period** ➔ 

- Follow onscreen instructions.

### Update Result

In  **Update Result** ➔ 

### Scheduled Update


Confirmation appears at scheduled update time. Press  or wait a while for update to start.

### When Updated

Update success notification appears and handset reboots.

After reboot, completion message appears and Information window opens.

### Update Result

While Information window appears, **Update Result** ➔ 

### Reboot Failure

- If handset does not return to Standby after update, turn power off, reinsert battery, then restart it. If it still does not restart, contact SoftBank Mobile Customer Center, Customer Assistance (P.15-41).



## Cleaning Handset

### Washing Handset

With Battery Cover locked, hold handset approximately 10 cm below faucet or shower head and wash with low-pressure tap water (6 liters/min. or lower) at normal temperature (5°C - 35°C). Wash with your hands, taking care not to open the covers; do not use a brush or sponge. Dry handset before use.

 
- Before washing handset, make sure that Battery Cover and Port Covers are closed firmly.
- Do not use a washing machine or ultrasonic cleaner.
- Do not place handset in a microwave oven to dry it. Battery/handset may leak, burst, overheat or ignite; may cause malfunction, accident or injury.
- Do not dry handset by exposing it to extreme heat (e.g., hot air from dryers, etc.); may cause warping, discoloration or damage.

### Drying Handset


Dry these parts/areas after washing handset:

Hinge	Earpiece
Microphone	Speaker

- 1 Wipe handset surface with dry cloth
- 2 Holding hinge firmly by its sides, shake handset about 20 times

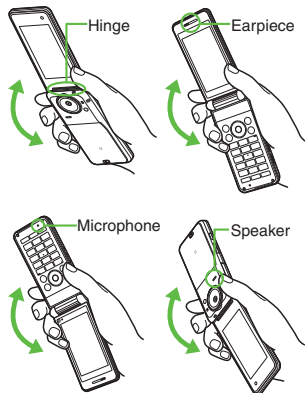

 - 3 Pat against dry cloth to remove moisture from grooves

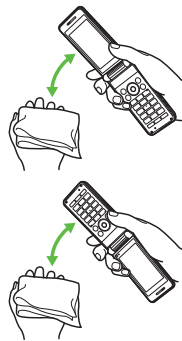

- 4 Leave handset on dry cloth for approximately 2 - 3 hours at room temperature





#### Do Not Use Wet Handset

- Voice quality may be affected, or moisture may transfer to clothes, bag, etc.
- Moisture may short-circuit External Device Port.
- Exposure to cold may freeze moisture causing malfunction.



# Troubleshooting

## ■ General

Problem	Possible Cause	Solution
<b>Handset won't turn on</b>	Was  pressed long enough?	Press  longer.
	Battery may need to be charged or replaced.	Charge battery or install a charged battery.
	Battery may not be properly installed.	Install battery properly (P.15-4).
<b>Handset won't respond</b>	Is <b>Switch On/Off</b> in PIN Entry <b>On</b> ?	If <b>On</b> , PIN is required. Enter PIN according to onscreen prompt.
<b>Insert USIM Card appears</b>	USIM Card may not be properly inserted.	Turn power off and check that USIM Card is properly inserted, then restart handset. If the message still appears, USIM may be damaged.
	The correct USIM Card may not be inserted.	Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.
	There may be debris on IC chip/terminals.	Clean relevant parts with a dry cloth and re-insert.
<b>REFRESH appears and handset returns to Standby</b>	Handset may have been dropped or subjected to shocks.	Handset failed to recognize USIM Card temporarily. This is not a malfunction.
<b>Keypad won't respond</b>	Keypad Lock may be active (  appears).	Cancel Keypad Lock (P.1-27).
	Function Lock may be active (  appears).	Cancel Function Lock (P.11-2).

Problem	Possible Cause	Solution
<b>Battery strength indicator flashes when not charging</b>	Ambient temperature may be outside 5°C to 35°C.	Use within an ambient temperature of 5°C - 35°C.
<b>Saved entry/folder does not appear on handset</b>	Entry/folder may be set to Secret.	Activate Show Secret Data (P.11-3).
<b>Cannot use Predictive</b>	Show Secret Data may be active.	Cancel Show Secret Data.
<b>Handset/AC Charger feels warm</b>	Handset/AC Charger may warm while charging.	Unless handset/AC Charger is too hot to touch, warmth is considered normal. Always avoid prolonged skin contact to prevent burn injuries.
	Handset may warm during extended periods of use.	
	Handset may warm during Video Calls.	
<b>Cannot access Memory Card files</b>	Memory Card may not be properly formatted.	Use 934SH-formatted Memory Cards.
<b>Clock settings are lost</b>	Did you leave handset without battery?	Clock settings remain even when removing battery for replacement, etc. However, if handset is left with no battery or an exhausted one for an extended period of time (approximately one hour), Clock will need to be reset.



■ **Charger/Battery**

Problem	Possible Cause	Solution
<b>Battery charges quickly</b>	Remaining charge shortens charging time.	This is normal.
	Battery may be terminally exhausted or defective. (Small Light flashes red.)	Replace battery with a new one.
<b>Battery charges slowly</b>	Charging slows during Video Calls.	End the call to charge faster.
	Battery may be charging via USB.	Use AC Charger.
<b>Battery won't charge</b>	AC Charger may not be properly connected to handset.	Make sure connector is securely inserted and retry.
	AC Charger may not be firmly plugged in to AC outlet.	Remove plug from outlet, re-insert and retry.
	Battery may not be properly installed.	Install battery properly (P.15-4).
	Battery, AC Charger, or Charging Terminals, or Device Port may be obstructed by dust, etc.	Clean terminals, connector and Port with a dry cotton swab and retry.
	Charger, etc. may not be supported.	Use specified AC Charger, etc. only; others may damage battery.

Problem	Possible Cause	Solution
<b>Battery Time seems shorter than usual</b>	High power consuming operations are in use.	Keep handset closed in Standby; reduce TV, S! Application, Media Player and Camera use, and limit transmissions/external connections.
	Using handset in poor conditions may shorten Battery Time.	Avoid prolonged use of handset out-of-range or in poor signal conditions.
	Power hungry settings may be active.	Lower Brightness, select shorter Display Saving/ Backlight time, etc.





## Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
[1 2]	あいうえお あいうえお	アイウエオ アイウエオ	@./_-1 □ (space)	1	1
[2 3]	かきくけこ	カキクケコ	ABCabc2	2	2
[3 4]	さしすせそ	サシスセソ	DEFdef3	3	3
[4 5]	たちつてとつ	タチツテトツ	GHIghi4	4	4
[5 6]	なにぬねの	ナニヌネノ	JKLjkl5	5	5
[6 7]	はひふへほ	ハヒフヘホ	MNOmno6	6	6
[7 8]	まみむめも	マミムメモ	PQRSpqrs7	7	7
[8 9]	やゆよやゆよ	ヤユヨヤユヨ	TUVtuv8	8	8
[9 0]	らりるれろ	ラリルレロ	WXYZwxyz9	9	9
[0 12]	わをんー ..	ワヲンー ..*_1	0	0	0
[X 12]	Log, Pictogram List (double-byte), Symbol List <sup>3</sup>				✕ + P (pause) ? - <sup>2</sup>
[# 12]	.. # (line break) ? ! □ (space)		.. # (line break) ?! □ (space)	#	

<sup>1</sup> - is available only in single-byte katakana entry.

<sup>2</sup> Available for phone number entry; some characters may not be enterable in some windows.

<sup>3</sup> May not be enterable in some windows.



## Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	Conversion (up) <sup>4</sup>	Cursor up			
	Conversion (down) <sup>5</sup>	Cursor down ↓ (line break)			
	Cursor left				
	Cursor right				
	Switch entry modes (except during conversion)				
	Toggle Personal Mode <sup>6</sup>	_____	Toggle Personal Mode <sup>6,7</sup>	_____	
	Toggle case (for some characters)		_____		
	_____	Toggle mode (upper/ lower and lower case)		_____	
	Delete one character				
	Cancel conversion	_____	Cancel conversion <sup>7</sup>	_____	Delete code
 (Long)	Delete before or after cursor				
	Recover characters deleted with				
	Re-convert <sup>8</sup>	_____	Re-convert <sup>7,8</sup>	_____	
	OK				
	Phonetic Conversion	_____			
	Hiragana to Katakana/ Alphanumeric Conversion	_____			

<sup>4</sup>Cursor moves up except during conversion.

<sup>5</sup>Cursor moves down except during conversion.

<sup>6</sup>Available during conversion.

<sup>7</sup>Available only in single-byte alphanumeric entry.


<sup>8</sup>Press immediately after inserting characters to re-convert them.





# Pager Code List

Gray background indicates upper and lower case available. Press  to switch immediately after character entry.

## Double-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&		*1	
	8	や	(	ゆ	)	よ	*	#	Space		*2
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	.	。	6	7	8	9	0

## Single-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&		*1	
	8	ヤ	(	ユ	)	ヨ	*	#	Space		*2
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	.	。	6	7	8	9	0




## Double-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	や		ゆ		よ					*2
	9										
	0					.	。				

## Single-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	ヤ		ユ		ヨ					*2
	9										
	0					.	。				

\*1 Press    to insert  (line break) in mail message text, Notepad, etc.

\*2 Press    to toggle upper and lower case modes.



# Character Code List

First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit															
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9				
010										047	ゆ	よ	ら	る	れ	ろ	わ	わ	161	葵	菫	蕪	握	旭	葦	鈔	188	介	会	解	回	塊	廻	快	怪	恠
011	↓	°	°	°	°	°	°	°	°	048	ぬ	系	を	ん					162	梓	乾	粟	宛	蛇	鮎	189	恢	懷	戒	拐	塊	廻	快	怪	恠	
012	↑	°	°	°	°	°	°	°	°									163	粘	栗		安	庵	鮎	鮎	190	恢	懷	戒	拐	塊	廻	快	怪	恠	
013	←	°	°	°	°	°	°	°	°	050	ア	イ	ウ	エ	オ			164	較	否		安	庵	鮎	鮎	191	蟹	懷	戒	拐	塊	廻	快	怪	恠	
014	→	°	°	°	°	°	°	°	°	051	オ	ア	イ	ウ	エ	オ										192	蟹	懷	戒	拐	塊	廻	快	怪	恠	
015	↖	°	°	°	°	°	°	°	°	052	カ	キ	ク	ケ	コ											193	蟹	懷	戒	拐	塊	廻	快	怪	恠	
016	↗	°	°	°	°	°	°	°	°	053	サ	シ	ス	セ	ソ											194	蟹	懷	戒	拐	塊	廻	快	怪	恠	
017	↘	°	°	°	°	°	°	°	°	054	タ	チ	ツ	テ	ト											195	蟹	懷	戒	拐	塊	廻	快	怪	恠	
018	↙	°	°	°	°	°	°	°	°	055	ト	ニ	フ	ヘ	バ											196	蟹	懷	戒	拐	塊	廻	快	怪	恠	
019	★	○	●	◇	◇	◇	◇	◇	◇	056	ポ	ピ	プ	ペ	ポ											197	蟹	懷	戒	拐	塊	廻	快	怪	恠	
020	◆	□	■	▲	▼	▼	▼	▼	▼	057	ヨ	ヨ	ヨ	ヨ	ヨ											198	蟹	懷	戒	拐	塊	廻	快	怪	恠	
021	→	↑	↓	▲	▼	▼	▼	▼	▼	058	コ	コ	コ	コ	コ											199	蟹	懷	戒	拐	塊	廻	快	怪	恠	
022																										200	蟹	懷	戒	拐	塊	廻	快	怪	恠	
023	↖	↗	↘	↙	↘	↙	↘	↙	↘	060	ア	イ	ウ	エ	オ											170	迂	迂	迂	迂	迂	迂	迂	迂	迂	
024	↗	↘	↙	↘	↙	↘	↙	↘	↙	061	カ	キ	ク	ケ	コ											171	迂	迂	迂	迂	迂	迂	迂	迂	迂	
	↘	↙	↘	↙	↘	↙	↘	↙	↘	062	γ	φ	χ	ψ	ω											172	迂	迂	迂	迂	迂	迂	迂	迂	迂	
026	∠	∞	∞	∞	∞	∞	∞	∞	∞	063	θ	ι	κ	λ	μ											173	迂	迂	迂	迂	迂	迂	迂	迂	迂	
027	∞	∞	∞	∞	∞	∞	∞	∞	∞	064	θ	ι	κ	λ	μ											174	迂	迂	迂	迂	迂	迂	迂	迂	迂	
028	∞	∞	∞	∞	∞	∞	∞	∞	∞	065	σ	τ	υ	φ	χ											175	迂	迂	迂	迂	迂	迂	迂	迂	迂	
029	∞	∞	∞	∞	∞	∞	∞	∞	∞	070	Α	Β	Γ	Δ	Ε											176	迂	迂	迂	迂	迂	迂	迂	迂	迂	
031										071	И	Й	К	Л	М											177	迂	迂	迂	迂	迂	迂	迂	迂	迂	
032	4	5	6	7	8	9	0	1	2	072	У	Ф	Х	Ц	Ч											178	迂	迂	迂	迂	迂	迂	迂	迂	迂	
033										073	Ь	Э	Ю	Я												179	迂	迂	迂	迂	迂	迂	迂	迂	迂	
034	H	R	S	J	T	A	K	L	V	074	б	в	г	д	е											180	迂	迂	迂	迂	迂	迂	迂	迂	迂	
035	I	S	J	T	A	K	L	V	W	075	г	д	е	ё	ж											181	迂	迂	迂	迂	迂	迂	迂	迂	迂	
036	H	R	S	J	T	A	K	L	V	076	к	л	м	н	о											182	迂	迂	迂	迂	迂	迂	迂	迂	迂	
037	f	g	h	i	s	a	k	u	v	077	ф	я														183	迂	迂	迂	迂	迂	迂	迂	迂	迂	
038	p	q	r	s	t	c	m	w	x	078	ю	я														184	迂	迂	迂	迂	迂	迂	迂	迂	迂	
039																										185	迂	迂	迂	迂	迂	迂	迂	迂	迂	
040										080	一	一	一	一	一											186	迂	迂	迂	迂	迂	迂	迂	迂	迂	
041										081	一	一	一	一	一											187	迂	迂	迂	迂	迂	迂	迂	迂	迂	
042										082	一	一	一	一	一											188	迂	迂	迂	迂	迂	迂	迂	迂	迂	
043										083	一	一	一	一	一											189	迂	迂	迂	迂	迂	迂	迂	迂	迂	
044																										190	迂	迂	迂	迂	迂	迂	迂	迂	迂	
045																										191	迂	迂	迂	迂	迂	迂	迂	迂	迂	
046										160	一	一	一	一	一											192	迂	迂	迂	迂	迂	迂	迂	迂	迂	



First Three Digits										Last Digit										First Three Digits										Last Digit																
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9							
223	蕎	鄉	鏡	饗	驚	仰	堯	堯	堯	号	壕	拷	濠	轟	趨	克	刻	293	從	戎	柔	汎	獸	縱	重	統	叔	329	煽	旋	穿	線	箭	薦	薦	踐	0	1	2	3	4	5	6	7	8	9
224	業	局	曲	極	玉	柯	杆	仰	堯	告	囗	酷	濠	轟	趨	克	刻	294	夙	宿	淑	祝	澗	重	熟	術	330	縲	羨	羨	羨	羨	羨	羨	羨	踐	0	1	2	3	4	5	6	7	8	9
225	巾	錦	斤	欽	欽	欣	欣	欣	欣	忽	忽	忽	忽	忽	忽	忽	忽	295	述	述	述	述	述	述	述	述	331	選	選	選	選	選	選	選	選	踐	0	1	2	3	4	5	6	7	8	9
226	芹	錦	斤	欽	欽	欣	欣	欣	欣	昏	昏	昏	昏	昏	昏	昏	昏	296	旬	旬	旬	旬	旬	旬	旬	旬	332	全	全	全	全	全	全	全	全	踐	0	1	2	3	4	5	6	7	8	9
226																		297	醒	醒	醒	醒	醒	醒	醒	醒	332										0	1	2	3	4	5	6	7	8	9
227	俱	句	句	狗	玫	短	苦	驅	九									298	恕	恕	恕	恕	恕	恕	恕	恕	333										0	1	2	3	4	5	6	7	8	9
228	駒	愚	愚	虞	喰	空	偶	驅	九									299	恕	恕	恕	恕	恕	恕	恕	恕	334										0	1	2	3	4	5	6	7	8	9
229	串	愚	愚	虞	喰	空	偶	驅	九									300	恕	恕	恕	恕	恕	恕	恕	恕	335										0	1	2	3	4	5	6	7	8	9
230	栗	栗	栗	栗	栗	栗	栗	栗	栗									301	恕	恕	恕	恕	恕	恕	恕	恕	336										0	1	2	3	4	5	6	7	8	9
231	栗	栗	栗	栗	栗	栗	栗	栗	栗									302	恕	恕	恕	恕	恕	恕	恕	恕	337										0	1	2	3	4	5	6	7	8	9
232																		303	恕	恕	恕	恕	恕	恕	恕	恕	338										0	1	2	3	4	5	6	7	8	9
232	卦	袂	徑	偵	刑	叢	啓	啓	啓									304	恕	恕	恕	恕	恕	恕	恕	恕	339										0	1	2	3	4	5	6	7	8	9
233	圭	契	徑	偵	刑	叢	啓	啓	啓									305	恕	恕	恕	恕	恕	恕	恕	恕	340										0	1	2	3	4	5	6	7	8	9
234	携	契	徑	偵	刑	叢	啓	啓	啓									306	恕	恕	恕	恕	恕	恕	恕	恕	341										0	1	2	3	4	5	6	7	8	9
235	繫	契	徑	偵	刑	叢	啓	啓	啓									307	恕	恕	恕	恕	恕	恕	恕	恕	342										0	1	2	3	4	5	6	7	8	9
237	傑	契	徑	偵	刑	叢	啓	啓	啓									308	恕	恕	恕	恕	恕	恕	恕	恕	343										0	1	2	3	4	5	6	7	8	9
238	侯	契	徑	偵	刑	叢	啓	啓	啓									309	恕	恕	恕	恕	恕	恕	恕	恕	344										0	1	2	3	4	5	6	7	8	9
239	侯	契	徑	偵	刑	叢	啓	啓	啓									310	恕	恕	恕	恕	恕	恕	恕	恕	345										0	1	2	3	4	5	6	7	8	9
240																		311	恕	恕	恕	恕	恕	恕	恕	恕	346										0	1	2	3	4	5	6	7	8	9
241	肩	契	徑	偵	刑	叢	啓	啓	啓									312	恕	恕	恕	恕	恕	恕	恕	恕	347										0	1	2	3	4	5	6	7	8	9
242	嶮	契	徑	偵	刑	叢	啓	啓	啓									313	恕	恕	恕	恕	恕	恕	恕	恕	348										0	1	2	3	4	5	6	7	8	9
243	紋	契	徑	偵	刑	叢	啓	啓	啓									314	恕	恕	恕	恕	恕	恕	恕	恕	349										0	1	2	3	4	5	6	7	8	9
243																		315	恕	恕	恕	恕	恕	恕	恕	恕	350										0	1	2	3	4	5	6	7	8	9
244	姑	孤	孤	孤	孤	孤	孤	孤	孤									316	恕	恕	恕	恕	恕	恕	恕	恕	351										0	1	2	3	4	5	6	7	8	9
245	胡	孤	孤	孤	孤	孤	孤	孤	孤									317	恕	恕	恕	恕	恕	恕	恕	恕	352										0	1	2	3	4	5	6	7	8	9
246	顧	孤	孤	孤	孤	孤	孤	孤	孤									318	恕	恕	恕	恕	恕	恕	恕	恕	353										0	1	2	3	4	5	6	7	8	9
247	御	孤	孤	孤	孤	孤	孤	孤	孤									319	恕	恕	恕	恕	恕	恕	恕	恕	354										0	1	2	3	4	5	6	7	8	9
248	乞	孤	孤	孤	孤	孤	孤	孤	孤									320	恕	恕	恕	恕	恕	恕	恕	恕	354										0	1	2	3	4	5	6	7	8	9
249	乞	孤	孤	孤	孤	孤	孤	孤	孤									321	恕	恕	恕	恕	恕	恕	恕	恕	355										0	1	2	3	4	5	6	7	8	9
250	乞	孤	孤	孤	孤	孤	孤	孤	孤									322	恕	恕	恕	恕	恕	恕	恕	恕	356										0	1	2	3	4	5	6	7	8	9
251	巧	孤	孤	孤	孤	孤	孤	孤	孤									323	恕	恕	恕	恕	恕	恕	恕	恕	357										0	1	2	3	4	5	6	7	8	9
252	巧	孤	孤	孤	孤	孤	孤	孤	孤									324	恕	恕	恕	恕	恕	恕	恕	恕	358										0	1	2	3	4	5	6	7	8	9
253	巧	孤	孤	孤	孤	孤	孤	孤	孤									325	恕	恕	恕	恕	恕	恕	恕	恕	359										0	1	2	3	4	5	6	7	8	9
254	巧	孤	孤	孤	孤	孤	孤	孤	孤									326	恕	恕	恕	恕	恕	恕	恕	恕	360										0	1	2	3	4	5	6	7	8	9
255	巧	孤	孤	孤	孤	孤	孤	孤	孤									327	恕	恕	恕	恕	恕	恕	恕	恕	361										0	1	2	3	4	5	6	7	8	9
256	巧	孤	孤	孤	孤	孤	孤	孤	孤									328	恕	恕	恕	恕	恕	恕	恕	恕	362										0	1	2	3	4	5	6	7	8	9



First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit																		
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6		7	8	9	0	1	2	3	4	5	6	7	8	9						
363	つ									392	粘	乃	迺	之	之	囊	惱	濃	納	能	424	僻	壁	碧	別	警	茂	筵	偏	變	ゆ									449	愉	愈	油	癒	佑	優	勇	友	幽
364	槌	追	痛	塚	津	津	津	津	津	393	腦	膿	農	視	蚕	惱	濃	納	能	425	片	篇	篇	邊	遍	便	宛	弁	450	偷	愈	油	癒	佑	優	勇	友	幽											
365	漬	柘	辻	郷	堀	堀	堀	堀	堀	394	は	は	は	は	は	は	は	は	は	426	靴	靴	靴	靴	靴	靴	靴	靴	451	悠	憂	油	癒	佑	優	勇	友	幽											
366	孀	紉	爪	釣	鶴	鶴	鶴	鶴	鶴	395	波	派	派	派	派	派	派	派	派	426	穗	保	鋪	圃	圃	圃	圃	圃	452	祐	裕	誘	遊	郵	郵	郵	郵	幽											
366	て									396	堤	堤	堤	堤	堤	堤	堤	堤	堤	427	穂	保	鋪	圃	圃	圃	圃	圃	452	よ									452	余	揚	預	預	預	預	預	予		
367	刺	貞	呈	堤	亭	亭	亭	亭	亭	397	排	派	派	派	派	派	派	派	派	428	俸	基	基	基	基	基	基	基	453	与	預	預	預	預	預	預	預	予											
368	梯	挺	堤	堤	底	底	底	底	底	398	陪	派	派	派	派	派	派	派	派	429	抱	基	基	基	基	基	基	基	454	余	預	預	預	預	預	預	預	予											
369	艇	抵	蹄	蹄	庭	庭	庭	庭	庭	399	陪	派	派	派	派	派	派	派	派	430	抱	基	基	基	基	基	基	基	455	余	預	預	預	預	預	預	預	予											
370	的	邸	鄭	鄭	泥	泥	泥	泥	泥	400	爆	縛	縛	縛	縛	縛	縛	縛	縛	431	蜂	望	望	望	望	望	望	望	456	余	預	預	預	預	預	預	預	予											
371	鐵	典	填	展	添	添	添	添	添	401	煩	飯	飯	飯	飯	飯	飯	飯	飯	432	望	望	望	望	望	望	望	望	456	余	預	預	預	預	預	預	預	予											
372	轉	顛	点	展	店	店	店	店	店	402	煩	飯	飯	飯	飯	飯	飯	飯	飯	433	望	望	望	望	望	望	望	望	456	余	預	預	預	預	預	預	預	予											
373	と									403	煩	飯	飯	飯	飯	飯	飯	飯	飯	434	望	望	望	望	望	望	望	望	457	裸	來	萊	雷	雷	雷	雷	雷	羅											
373	吐	塗	妬	屠	斗	斗	斗	斗	斗	404	煩	飯	飯	飯	飯	飯	飯	飯	飯	435	望	望	望	望	望	望	望	望	458	裸	來	萊	雷	雷	雷	雷	雷	羅											
374	賭	途	都	都	砥	砥	砥	砥	砥	405	煩	飯	飯	飯	飯	飯	飯	飯	飯	436	味	枚	摩	麻	麻	麻	麻	麻	458	履	梨	理	璃	陸	陸	陸	陸	利											
375	怒	倒	嶋	嶋	冬	冬	冬	冬	冬	406	卑	否	妃	彼	悲	罪	批	匪	匪	437	鱗	亦	萬	幕	膜	末	末	末	459	履	梨	理	璃	陸	陸	陸	陸	利											
376	怒	倒	嶋	嶋	冬	冬	冬	冬	冬	407	比	否	妃	彼	悲	罪	批	匪	匪	438	鱗	亦	萬	幕	膜	末	末	末	460	履	梨	理	璃	陸	陸	陸	陸	利											
377	怒	倒	嶋	嶋	冬	冬	冬	冬	冬	408	比	否	妃	彼	悲	罪	批	匪	匪	439	鱗	亦	萬	幕	膜	末	末	末	461	履	梨	理	璃	陸	陸	陸	陸	利											
378	怒	倒	嶋	嶋	冬	冬	冬	冬	冬	409	比	否	妃	彼	悲	罪	批	匪	匪	440	鱗	亦	萬	幕	膜	末	末	末	462	履	梨	理	璃	陸	陸	陸	陸	利											
379	答	筒	湯	騰	騰	騰	騰	騰	騰	410	比	否	妃	彼	悲	罪	批	匪	匪	441	蜜	羨	味	魅	已	已	已	已	463	厘	累	累	累	累	累	累	累	利											
380	鏡	陶	頭	騰	騰	騰	騰	騰	騰	411	肘	否	妃	彼	悲	罪	批	匪	匪	442	蜜	羨	味	魅	已	已	已	已	464	厘	累	累	累	累	累	累	累	利											
381	鏡	陶	頭	騰	騰	騰	騰	騰	騰	412	肘	否	妃	彼	悲	罪	批	匪	匪	443	蜜	羨	味	魅	已	已	已	已	465	厘	累	累	累	累	累	累	累	利											
382	鏡	陶	頭	騰	騰	騰	騰	騰	騰	413	肘	否	妃	彼	悲	罪	批	匪	匪	444	蜜	羨	味	魅	已	已	已	已	466	厘	累	累	累	累	累	累	累	利											
383	鏡	陶	頭	騰	騰	騰	騰	騰	騰	414	肘	否	妃	彼	悲	罪	批	匪	匪	445	蜜	羨	味	魅	已	已	已	已	467	厘	累	累	累	累	累	累	累	利											
384	獨	獨	獨	獨	獨	獨	獨	獨	獨	415	肘	否	妃	彼	悲	罪	批	匪	匪	446	蜜	羨	味	魅	已	已	已	已	468	厘	累	累	累	累	累	累	累	利											
385	頓	頓	頓	頓	頓	頓	頓	頓	頓	415	肘	否	妃	彼	悲	罪	批	匪	匪	447	蜜	羨	味	魅	已	已	已	已	469	厘	累	累	累	累	累	累	累	利											
386	な									415	府	怖	付	夫	富	富	富	富	富	442	名	命	盟	迷	銘	鳴	姪	牝	冥	ろ									470	露	勞	魯	魯	魯	魯	魯	露		
387	謎	灘	捺	鍋	那	那	那	那	那	416	府	怖	付	夫	富	富	富	富	富	443	免	綿	綿	迷	迷	迷	迷	迷	471	露	勞	魯	魯	魯	魯	魯	魯	露											
388	軟	灘	捺	鍋	那	那	那	那	那	417	府	怖	付	夫	富	富	富	富	富	444	免	綿	綿	迷	迷	迷	迷	迷	472	露	勞	魯	魯	魯	魯	魯	魯	露											
388	に									419	府	怖	付	夫	富	富	富	富	富	445	孟	毛	盲	網	耗	模	茂	妄	ろ									473	露	勞	魯	魯	魯	魯	魯	露			
389	虹	廿	日	乳	二	二	二	二	二	420	粉	物	付	夫	富	富	富	富	富	446	目	毛	盲	網	耗	模	茂	妄	473	露	勞	魯	魯	魯	魯	魯	魯	露											
390	如	尿	乳	入	二	二	二	二	二	421	粉	物	付	夫	富	富	富	富	富	447	目	毛	盲	網	耗	模	茂	妄	473	露	勞	魯	魯	魯	魯	魯	魯	露											
390	ぬ~の									422	粉	物	付	夫	富	富	富	富	富	447	目	毛	盲	網	耗	模	茂	妄	わ									474	梓	驚	互	巨	巨	巨	巨	惑			
391	祢	寧	葱	猫	熱	年	念	捻	襪	422	幣	弊	弊	弊	弊	弊	弊	弊	弊	448	矢	厄	也	治	夜	爺	耶	野	474	梓	驚	互	巨	巨	巨	巨	巨	惑											
391	ぬ									423	幣	弊	弊	弊	弊	弊	弊	弊	弊	449	鐘	厄	也	治	夜	爺	耶	野	彌	わ									475	碗	驚	互	巨	巨	巨	巨	惑		





















 

 












## Weather Indicator List





### Basic Status

	Clear skies (day)
	Clear skies (night)
	Cloudy
	Rain
	Snow
	Thunder showers
	Chance of rain: 0%
	Chance of rain: 10%
	Chance of rain: 20%
	Chance of rain: 30%
	Chance of rain: 40%
	Chance of rain: 50%
	Chance of rain: 60%
	Chance of rain: 70%
	Chance of rain: 80%
	Chance of rain: 90%
	Chance of rain: 100%
	Then
	Partly/chance of





### Pollen Count

	Low
	Moderate
	High
	Extreme





### Cherry Blossom

	Flowering
	Almost full bloom
	Full bloom
	Beginning of petal fall




### Fall Foliage

	No color change
	Colors appearing
	Peak
	Defoliating



### Ultraviolet

	Low
	Moderate
	High
	Extreme


### Typhoon

	Forming
	Approaching
	Caution necessary

### Disaster

	Heavy rain
	Gale

### Information

	Notification
---	--------------



## Specifications

SoftBank 934SH	
<b>Weight</b>	Approximately 129 g
<b>Continuous Talk Time</b>	Approximately 230 minutes (3G) Approximately 220 minutes (GSM)
<b>Continuous Standby Time</b>	Approximately 300 hours (3G) Approximately 270 hours (GSM) (handset closed)
<b>Charging Time (power off)</b>	AC Charger: Approximately 135 minutes In-Car Charger: Approximately 140 minutes
<b>Dimensions (W x H x D)</b>	Approximately 50 x 108 x 15.9 mm (handset closed, without protruding parts)
<b>Maximum Output</b>	0.25 W (3G) 2.0 W (GSM)

- Above values calculated with battery installed.
- Continuous Talk Time is an average measured with a new, fully charged battery, with stable signals without moving handset.
- Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, with External Display Home Panel Wallpaper set to **Analogue Clock**, with stable signals without moving handset. In Japan (3G service area), the value is calculated with IP Service Setting, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting set to **Off**.
- Talk Time/Standby Time may vary by environment, status, settings, etc.

- Display employs precision technology, however, some pixels may appear brighter/darker.

### ■ Handset Materials

Parts	Materials & Finishing
Housing (Display side, Keypad side)	Nylon resin/SUS (insert-molded)/Discontinuous deposition/UV painting
Housing (Keypad side hinge), Side Keys (Volume Up Key, Volume Down Key, Shutter Key)	PC resin/UV painting
Housing (Keypad back), hinge rotation stopper, Battery Cover	Nylon resin/Discontinuous deposition/UV painting
Back panel, camera ornament panel (including Infrared Port, camera lens)	Acrylic resin/Back printing
Display window	PC-Acrylic hybrid material/Back printing
Center Key, Multi Selector, Mail Key, Yahoo! Keitai Key, Shortcuts & A/a Key, TV & Text Key, Start Key, Power On/Off Key, Keypad, Dictionary Key, Multi Job & Manner Key, Camera Key	UV curing resin/Back printing
External Device Port Cover, Headphone Port Cover, Memory Card Slot	PC resin/Elastomer/Discontinuous deposition/UV painting

Parts	Materials & Finishing
Charging Terminals	SUS/Gold plating (sealer: nickel)
Screws (Display side)	SWCH16A/Trivalent chromate
Screws (Keypad side, battery side bottom)	SWCH12A/Trivalent chromate (white)
Screws (battery side center)	SWCH16A/Trivalent chromate (black)
USIM pin	Copper alloy/Gold plating (sealer: nickel)
USIM Tray	POM

### Accessories

#### ■ Battery

<b>Voltage</b>	3.7V
<b>Battery Type</b>	Lithium-ion
<b>Capacity</b>	710 mAh
<b>Dimensions (W x H x D)</b>	Approximately 37.7 x 46.9 x 4.2 mm (without protruding parts)

#### ■ Desktop Holder

<b>Input Voltage/Current</b>	DC 5.4V/700 mA
<b>Output Voltage/Current</b>	DC 5.4V/700 mA
<b>Charging Temperature</b>	5°C to 35°C
<b>Dimensions (W x H x D)</b>	Approximately 131.5 x 29 x 46 mm



## Getting Started

## ■ Standby Shortcut

<b>Savable Items</b>	30 per sheet
----------------------	--------------

## Basic Operations

## ■ Text Entry

<b>User Dictionary</b>	250 entries (5 per reading) Word: 30 characters Reading: 8 hiragana
<b>Acquire Dictionary</b>	5 dictionaries
<b>Paste List</b>	10 text strings
<b>Recoverable Deleted Characters</b>	30,720 single-byte characters
<b>Dictionary</b>	Meikyo Japanese Dictionary: Approximately 47,100 words/phrases Genius English-Japanese Dictionary: Approximately 45,700 words/phrases Genius Japanese-English Dictionary: Approximately 55,800 words/phrases

## ■ Phone Book

<b>Entry</b>	1,000 entries
<b>Name/Reading</b>	Last/First: 32 characters each
<b>Phone Number</b>	5 numbers (32 digits each)
<b>Mail Address</b>	5 addresses (128 characters each)
<b>Category</b>	16 Categories
<b>Address</b>	Postal Code: 20 characters Country: 32 characters Others: 64 characters each
<b>Office</b>	Office Name/Division/Post: 32 characters each
<b>Homepage</b>	1,024 bytes
<b>Note</b>	256 characters
<b>Mail Groups</b>	20 Groups (20 members each) Group name: 16 characters

## Calling

<b>Dialed Numbers</b>	Dialed Numbers: 30 records Dialed Ranking: 10 records
<b>Received Calls</b>	30 records
<b>Answer Phone/ Caller Voice</b>	20 messages or 90 seconds
<b>Auto Answer List</b>	10 numbers
<b>Decoration Call</b>	100 KB including 20 characters
<b>Speed Dial/Mail</b>	100 numbers/addresses

## Messaging

<b>Memory</b>	Received Msg.	10 MB or 3,000 messages
	Drafts	
	Sent Messages	5 MB (or 1,000 messages for Sent Messages)
	Unsent Messages	
	Templates	80 MB (shared with Data Folder and S! Appli Library)
<b>PC Mail/S! Mail Subject</b>	512 single-byte characters	
<b>PC Mail/S! Mail Message</b>	Approximately 30,000 single-byte characters	
<b>SMS Message</b>	160 single-byte alphanumerics	
<b>Auto Resend</b>	2 times	
<b>Attachment</b>	20 files or 1 MB <sup>1</sup>	
<b>Send Reservation</b>	10 messages	
<b>Signature</b>	256 single-byte characters	
<b>Recipient</b>	20 numbers/addresses	
<b>Folder</b>	20 folders (20 sort keys each)	
<b>Chat Folders</b>	Memory	300 messages per folder
	Folder	10 folders (20 members each)

<b>Graphic Mail</b>	1 sound or Flash <sup>®</sup> file, or 40 images/ My Pictograms (with 1 sound or Flash <sup>®</sup> file)	
<b>Auto Reply</b>	20 numbers/addresses (20 digits or 256 single-byte characters each)	
<b>Anti Spam Measures</b>	Individual Permitted List	20 entries
		20 entries

<sup>1</sup>Limit may be lower depending on message text, etc.

## ■ PC Mail Settings

<b>PC Mail Account</b>	Account	3 accounts
	Account Name	20 characters
<b>Set Receiving</b>	User Name	128 characters
	Password	40 characters
	ReceivingServer	128 characters
<b>Set Sending</b>	Port Number	1 to 65535
	Sender Name	20 characters
<b>PC Mail DL</b>	Mail Address	128 characters
	Individual Address	20 addresses

## Yahoo! Keitai &amp; PC Site Browser

<b>Download</b>	Yahoo! Keitai	300 KB per page 10 MB for progressive downloads
	PC Site Browser	1 MB per file
<b>History</b>	300 pages	
<b>URL Entry Log</b>	10 URLs	
<b>Bookmarks &amp; Saved Pages</b>	100 pages	
<b>Tab</b>	3 tabs at one time	
<b>Input Memory</b>	20 entries	
<b>Streaming History</b>	20 URLs	
<b>RSS Feeds</b>	30 entries (60 KB per entry)	



## Digital TV

<b>Recorded File</b>	ISDB-T mobile Video profile (SD-Video standard)	
<b>Recording Time (example)</b>	Handset	Approximately 30 minutes
	Memory Card	Approximately 80 minutes on 256 MB Memory Card
<b>Marker</b>	99 Markers (10 per file)	
<b>Split File</b>	99 portions per file	
<b>Time Shift Recording</b>	30 minutes	
<b>Reservation List</b>	5 entries (4 hours each on 1 GB Memory Card)	

## Camera & Imaging

### Mobile Camera

<b>Effective Pixels</b>	8.0 Megapixels
<b>Auto Shut-off Time</b>	Approximately 3 minutes

### Photo Camera

<b>Zoom</b>	1x - 20.4x	
<b>Picture Size (W x H dots)</b>	8M	2448 x 3264
	5M	1944 x 2592
	3M	1536 x 2048
	Full HD	1080 x 1920
	Wallpaper	480 x 854
	VGA	480 x 640
	QVGA	240 x 320
<b>Scanner Image Size (W x H dots)</b>	Free, 1200 x 640, 480 x 1488, 1280 x 960	
<b>File Format</b>	JPEG	
<b>Memory</b>	Approximately 30 files (at 8M, High Quality) on handset with no other files	
<b>File Name</b>	yymmdd_hhmmss	
<b>Shooting Distance</b>	Macro: 10 cm	

<b>Background Save</b>	3 files
<b>Face Auto Focus</b>	VGA or larger
<b>Other</b>	Use 40 KB or smaller transparent PNG files as Frames

### Video Camera

<b>Zoom</b>	1x - 5.1x	
<b>Record Size (W x H dots)</b>	Extended Video	864 x 480 (Wide)
		640 x 480 (VGA)
		320 x 240 (QVGA)
	For Message	176 x 144 (QCIF)
		128 x 96 (SubQCIF)
		320 x 240 (QVGA)
		176 x 144 (QCIF)
		128 x 96 (SubQCIF)

<b>File Format</b>	3GP
--------------------	-----

<b>Recording Capacity per Shot</b>	Extended Video	Approximately 30 minutes* on Memory Card
	For Message	1 MB or 295 KB

<b>File Name</b>	yymmdd_hhmmss
------------------	---------------

<b>Recording Distance</b>	1.5 m in good light
---------------------------	---------------------

<b>Still Image Capture</b>	3 images
----------------------------	----------

<b>Recording Pause Supported</b>	QVGA or larger
----------------------------------	----------------

\*Varies with handset usage, location or settings.

## Editing Images

<b>Picture Editor</b>	Resize (W x H dots)	Wallpaper (480 x 854) Power On/Off (480 x 854) Alarm (480 x 208) Pictogram (96 x 96) VGA (480 x 640) QVGA (240 x 320) Cut
	Retouch	52 x 52 dots or larger JPEG/PNG images
	Paste	16 characters
	Correction	52 x 52 dots or larger JPEG/PNG images
<b>Composite</b>	Merge	JPEG images between W 48 x H 64 dots and 240 x 320 dots
	Panorama	JPEG images between W 48 x H 64 dots and 240 x 320 dots

## Media Player

<b>Supported Formats</b>	WMA (.wma), AAC (.mp4/.3gp/.m4a), Secure AAC (SD-Audio standard) (Some files may not play depending on sampling frequency and bit rate)	
	<b>All Music List</b>	Shows up to 350 files each
	Music	
	Chaku-Uta®	
	WMA	
	SD AUDIO	Shows up to 999 files

## S! Applications

<b>Memory</b>	100 items or 80 MB (shared with Messaging Templates folder and other folders in Data Folder)
<b>Remote Control</b>	Approximately 5 m



## Handy Extras

## ■ PIM/Lifestyle

<b>Calendar/ Tasks</b>	300 entries, Subject: 32 characters Description: 128 characters Location: 16 characters Set Holiday: 10 holidays	
<b>Alarms</b>	5 entries, Subject: 9 characters	
<b>Wakeup TV</b>	Auto Shut-off	Approximately 30 minutes
<b>Calculator</b>	999,999,999,999	
<b>Expenses Memo</b>	30 entries (999,999.99 yen each)	
<b>OsaiFu-Keita<sup>®</sup></b>	Remote Lock password: 5 - 16 single-byte alphanumerics	

\*Preset holidays are based on Japanese calendar as of March 2009.

## ■ Clocks/Gauges

<b>Stopwatch</b>	23 hours 59 minutes 59.9 seconds in 0.1-second increments Lap time: 4 records	
<b>Countdown Timer</b>	99 minutes 59 seconds in 1-second increments	
<b>World Clock</b>	City name: 16 characters	
<b>Pedometer</b>	Today's Walking	Steps: 99,999
		Time: 23 hours 59 minutes 59 seconds
		Exercise: 71.9 Ex
		Calories: 9,999.9 kcal
		Distance: 179.9 km
	Log	Fat burned: 999.9 g
		2 years
		Daily view: 9,999 steps per hour
		Weekly view: 99,999 steps per day

<b>Pedometer</b>	Accumulated Data	All Days: 999 days
		Steps: 99,999,999
		Time: 99,999 hours 59 minutes 59 seconds
		Exercise: 99,999.9 Ex
		Calories: 9,999,999.9 kcal
	Average	Distance: 999,999.9 km
		Fat burned: 999,999.9 g
		Steps: 99,999
		Time: 23 hours 59 minutes 59 seconds
		Exercise: 71.9 Ex
		Calories: 9,999.9 kcal
		Distance: 179.9 km
		Fat burned: 999.9 g

## ■ Doc./Rec.

<b>Document Viewer</b>	Supported Formats	PDF (.pdf) Microsoft <sup>®</sup> Excel <sup>®</sup> (.xls) Microsoft <sup>®</sup> Word (.doc) Microsoft <sup>®</sup> PowerPoint <sup>®</sup> (.ppt)
	File Size	10 MB
<b>Notepad</b>	500 entries	(8,192 characters each)
<b>Voice Recorder</b>	For Message	Approximately 10 minutes (message size limit: 1 MB) or 3 minutes (message size limit: 300 KB) per file
	Extended Voice	99 hours 59 minutes 59 seconds
<b>Scan Barcode (Continuous Mode)</b>	UPC/JAN	50 codes
	QR Code	16 codes

<b>Create QR Code</b>	Equivalent of 513 digits, 311 alphanumerics or 131 kanji
<b>Scan Text</b>	256 characters

## Entertainment &amp; Communication

## ■ Mobile Widget

<b>Savable Items</b>	4 widgets (S! Quick News & S! Friend's Status: 1, others: 3) per sheet x 4 sheets
----------------------	---

## ■ S! Quick News

<b>Savable Items</b>	Special: 1 item News Flash: 1 item General: 4 items
----------------------	---

## ■ e-Books

<b>Text Copy</b>	20 characters
------------------	---------------

## ■ S! Friend's Status

<b>Member</b>	30 members
<b>My Status</b>	Name: 7 characters Comment: 15 characters Status Label: 4 characters
<b>Status Templates</b>	Template name: 12 characters

## ■ S! Circle Talk

<b>Participant</b>	11 members
<b>Speak Time</b>	30 seconds each
<b>Member List</b>	30 entries (10 members per Group)



## ■ Blog Tool

<b>Blog Details</b>	5 entries	
<b>Blog Title</b>	16 characters	
<b>Blog Settings (Mail)</b>	Email Address	128 characters
	Title	32 characters
	Text	128 characters
	Picture Size	S (320 x 320) M (640 x 640) L (1024 x 1024) Send
<b>Blog Settings (Yahoo! Keitai &amp; PC Site Browser)</b>	URL for Posting	1,024 characters
	URL for Viewing	1,024 characters

## Data Folder

<b>Memory</b>	80 MB (shared with Messaging Templates folder and S! Appli Library)
---------------	---

## Memory Card

<b>Backup File Name</b>	yymmddXX* (XX: 2 digits/alphabets)
-------------------------	------------------------------------

\*ymmdd for Contents Keys.

## Connectivity & File Backup

### ■ Infrared

<b>Infrared Transfer</b>	IrMC 1.1	
	Range	Within 20 cm
<b>IrSS Transfer (JPEG images)</b>	Receive 2,500 KB or less; send 4,000 KB or less (after resizing)	

### ■ Bluetooth®

<b>Communication System</b>	Bluetooth® specification Ver. 2.0
<b>Supported Profiles</b>	Headset Profile
	Hands-Free Profile
	Dial-up Networking Profile
	Object Push Profile
	File Transfer Profile
	Basic Imaging Profile
	Advanced Audio Distribution Profile
	Audio/Video Remote Control Profile
<b>Output</b>	Bluetooth® Power Class 2
<b>Range</b>	Within 10 m
<b>Device Search</b>	16 devices
<b>Pairing</b>	32 devices
<b>Device Name</b>	16 characters
<b>Printing</b>	JPEG/PNG images

### ■ S! Addressbook Back-up

<b>Log</b>	10 Backup/Restore/Synchronization records
------------	---

## Network

<b>Add Network</b>	5 Networks
	Country/Network code: 3 digits Name: 25 single-byte characters

## Reference URLs

- **SOFTBANK MOBILE Corp.**  
<http://mb.softbank.jp/en/>
- **S! Addressbook Back-up**  
[http://mb.softbank.jp/en/price\\_plans/basic\\_option.html](http://mb.softbank.jp/en/price_plans/basic_option.html)
- **Messaging Basics**  
[http://mb.softbank.jp/en/customer\\_support/mail.html](http://mb.softbank.jp/en/customer_support/mail.html)
- **Custom Handset Address**  
<https://www.email.softbank.ne.jp/help/e/address.html>
- **Yahoo! Keitai**  
[http://mb.softbank.jp/en/customer\\_support/web.html](http://mb.softbank.jp/en/customer_support/web.html)
- **Secure Remote Lock**  
[http://mb.softbank.jp/en/price\\_plans/basic\\_option.html](http://mb.softbank.jp/en/price_plans/basic_option.html)
- **microSD™ Memory Card Compatibility**  
From PC (Japanese)  
[http://k-tai.sharp.co.jp/peripherals/sd\\_support.html](http://k-tai.sharp.co.jp/peripherals/sd_support.html)  
From Handset (Japanese)  
<http://shweb.sharp.co.jp/>
- **Compatible Blu-ray Disc Recorders**  
<http://www.sharp.co.jp/bd/spec/index.html> (Japanese)
- **SVG-T**  
From Handset (Japanese)  
[http://shweb.sharp.co.jp/svgt/index\\_pdc.html](http://shweb.sharp.co.jp/svgt/index_pdc.html)
- **Association for Promotion of Digital Broadcasting**  
From PC  
<http://www.dpa.or.jp/english/>  
From Handset (Japanese)  
<http://www.dpa.or.jp/1seg/k/>



## Memory Card Structure & Contents

Memory Card Structure			Contents (Location when Viewed on Handset)	
DCIM	XXXSHARP		Still images in DCIM	
PRIVATE	MYFOLDER	Local Contents	SD Local Contents	
		Mail	Messaging folder backups (Received Msg., Sent Messages and Drafts)	
		My Items	Book	e-Book files in Data Folder (Books)
			Bookmarks	Yahoo! Keitai Bookmarks
			Character	PNG files in Data Folder (Character)
			CSI	Decoration Call files in Data Folder (Decoration Call)
			Custom Screens	Customized Screen files in Data Folder (Customized Screen)
			Flash(R)	Flash® Wallpaper files in Data Folder (Flash®)
			Flash(R) Ringtones	Flash® ringtones in Data Folder (Flash® Ringtones)
			Games and More	SI Applications
			Hot Status Template	Template files in Data Folder (Status Templates)
			Mail Art	Files in Data Folder (Mail Art)
			Message Templates	Graphic Mail templates in Templates folder
			Music	Music files in Data Folder (Music)
			Other Documents	Other files in Data Folder (Other Documents)
			Pictograms	GIF files in Data Folder (My Pictograms)
			Pictures	Still images in Data Folder (Pictures)
			Sounds & Ringtones	Melodies and other sound files in Data Folder (Ring Songs-Tones)
			Videos	Video files in Data Folder (Videos)
		Widget	Widget files in Data Folder (Widget)	
		WMAudio	WMA files for Media Player (WMA)	
	SH_Folder	Application management files		
	Utility	Backup files (Phone Book), etc.		
	SHARP	MOBILE	Backup files (User Dictionary), etc.	
	SD_AUDIO		SD-Audio files for Media Player (SD AUDIO)	





# Menu List

## Messaging

Function	Refer to	
Received Msg.	P.4-12	
Create Message	P.4-4	
Retrieve New Msg.	P.4-23	
Drafts	P.4-29	
Templates	P.4-22	
Sent Messages	P.4-12	
Unsent Messages	P.4-29	
Chat Folder	P.4-15	
Server Mail Box	Mail List	P.4-23
	Retrieve All	P.4-23
	Delete All	P.4-27
	Mailbox Volume	P.4-29
Create New SMS	P.4-7	
Settings	Address Settings	P.4-3
	General Settings	P.4-30
	S! Mail Settings	P.4-32
	PC Mail Settings	P.4-18
	SMS Settings	P.4-34
	Speed Dial/Mail	P.4-20
Set Mail Group	P.4-16	
Memory Status	P.4-26	

## Settings: General Settings

	Function	Refer to	
Send/ Compose	Delivery Report	P.4-30	
	Reply to Settings	P.4-30	
	Reply With Text	P.4-30	
	Auto Reply	P.4-25	
	Set Quick Reply	P.4-25	
	Auto Resend	P.4-30	
	Sending Status	P.4-30	
	Restrictions Setting	P.4-8	
	Receive	Message Notice	P.4-31
		Link to Feeling	P.4-31
Animation View		P.4-31	
Anti Spam Measures	P.4-14		
Report Spam	P.4-30		
Scroll Unit	P.4-30		
Message List View	P.4-30		
Address View	P.4-30		
Received Msg. View	P.4-30		
Sent Msg. View	P.4-30		
Auto Delete	Received Msg.	P.4-30	
	Sent Messages	P.4-30	

## Settings: S! Mail Settings

Function	Refer to	
Message DL(Japan)	P.4-11	
Message DL(Abroad)	P.4-11	
Signature	P.4-20	
Picture Appearance	P.4-32	
Auto Play	Pictures	P.4-32
File	Sounds	P.4-32
Create Msg. Size	P.4-22	
DL Size Limit	P.4-32	
Send File Settings	P.4-32	

## Settings: PC Mail Settings

Function	Refer to
PC Mail Account	P.4-18
PC Mail DL	P.4-33
Check New Mail	P.4-33
Word wrap	P.4-33

## Settings: SMS Settings

Function	Refer to
Expiry Time	P.4-34
Message Center	P.4-34
Char-code	P.4-34



## Yahoo! Keitai

Function	Refer to
Yahoo! Keitai	P.5-3
Bookmarks	P.5-7
Saved Pages	P.5-7
Enter URL	P.5-3
History	P.5-3
PC Site Browser	P.5-4
Browser Settings	P.5-11

## PC Site Browser

Function	Refer to
Homepage	P.5-4
Bookmarks	P.5-7
Saved Pages	P.5-7
Enter URL	P.5-4
History	P.5-4
RSS Feed	P.5-8
Yahoo! Keitai	P.5-3

### PC Site Browser Settings

Font Size	P.5-11
Scroll Settings	P.5-12
Cursor Settings	P.5-11
Downloads	P.5-11
Memory Operation	P.5-9
Security Settings	P.5-15
Download to	P.5-11
Initialized Browser	P.5-15
Reset Settings	P.5-15
Warning Message	P.5-12
Zoom Factor	P.5-11
Softkey Area	P.5-4

## Browser Settings

Function	Refer to
Font Size	P.5-11
Scroll Unit	P.5-11
Cursor Settings	P.5-11
Downloads	P.5-11
Memory Operation	P.5-9
Security Settings	P.5-15
Download to	P.5-11
Initialized Browser	P.5-15
Reset Settings	P.5-15

## S! Appli

Function	Refer to
S! Appli Library	P.8-7
Osaifu-Keitai	P.9-14
Notification History	P.8-7
Settings	P.8-12
Information	P.8-12

## Settings

Function	Refer to	
Application Volume	P.8-11	
Backlight	P.8-12	
Vibration	P.8-12	
Synchronization	P.8-12	
Notification Setting	P.8-12	
Calls & Alarms	P.8-11	
Screensaver	Switch On/Off	P.8-11
	Activation Time	P.8-11
	Stop Auto Start	P.8-11
Surround	P.8-11	
Set to Default	P.8-12	
Memory All Clear	P.8-12	

## TV

Function	Refer to
Digital TV	P.6-4
TV Player	P.6-9
TV-Image Folder	P.6-6
TV Link	P.6-14
TV Listing	P.6-7
Familink Remote	P.1-3
Reservation List	P.6-10
Settings	P.6-13
Recorder Contents	P.6-16

## Settings

Function	Refer to	
TV Alarm	P.6-17	
Broadcast Data	Set Recording	P.6-15
	Image Location	P.6-15
	Notify Connection	P.6-14
	Location	P.6-14
	Manufacture Number	P.6-14
	Delete StationData	P.6-14
Screen Size	P.6-4	
Set Landscape	P.6-13	
Sound Output	P.6-13	
Sound Output	P.6-13	
Set Call Time Shift	P.6-15	
Calls & Alarms	P.6-14	
TV Reserve Prior	P.6-17	
Save Recording to	P.6-15	
Auto Exit	Auto Exit Time	P.6-13
	Close Action	P.6-13
Smooth Mode	P.6-12	



Camera		
Function		Refer to
Photo Camera		P.7-3
Video Camera		P.7-7
Scan Barcode		P.9-29
Scan Card		P.9-31
Kanji Grabber		P.9-33
Scan Text		P.9-32
Review		P.7-9
Photo Settings	Picture Size	P.7-20
	Focus Setting	P.7-20
	Save Setting	P.7-19
	Shutter Setting	P.7-20
	Settings	P.7-19
Video Settings	Record Time/Size	P.7-22
	Shake Reducing	P.7-22
	Microphone	P.7-22
	Save Setting	P.7-19
Set Camera Key		P.7-19
■ Photo Camera		
Function		Refer to
Scene		P.7-6
Picture Size		P.7-20
Focus Setting		P.7-19
Save Setting	Save Pictures to	P.7-19
	Auto Save	P.7-19
	Background Save	P.7-20
Shutter Setting	Egao level	P.7-20
	Shutter Mode	P.7-6
	Shutter Sound	P.7-20
	Set Remote Shutter	P.7-21

Function		Refer to
Self-timer		P.7-10
Camera Mode	Video Camera	P.7-7
	Scan Barcode	P.9-29
	Scan Card	P.9-31
	Kanji Grabber	P.9-33
	Scan Text	P.9-32
Data Folder		P.7-19
Modes	Add Frame	P.7-11
	Continuous Shoot	P.7-10
	Self Portrait Guide	P.1-24
	Camera Effects	P.7-11
	Long Exposure	P.7-11
	Panorama/Scanner	P.7-12
Settings	Picture Quality	P.7-19
	ISO Sensitivity	P.7-20
	White Balance	P.7-20
	Exposure	P.7-19
	Shake Reducing	P.7-20
	External Display	P.1-33
	Display Setting	P.7-20
	Set Send Key	P.7-20
Help		P.7-19
Mobile Light		P.7-19

## ■ Video Camera

Function		Refer to
Record Time/Size		P.7-22
Focus Setting		P.7-19
Save Setting		P.7-19
Display Size		P.7-22
Self-timer		P.7-10
Shake Reducing		P.7-22
Data Folder		P.7-19
Settings	Video Quality	P.7-19
	Exposure	P.7-19
	Microphone	P.7-22
	External Display	P.1-33
Help		P.7-19
Mobile Light		P.7-19

## ■ Video Settings: Save Setting

Function		Refer to
Save Videos to		P.7-19
Auto Save		P.7-19
Video Encode		P.7-22
Audio Encode		P.7-22



## Entertainment

Function		Refer to
Mobile Widget	Widget Contents	P.10-2
	Widget History	P.10-16
	Settings	P.10-16
	Information	P.10-17
S! Quick News		P.10-5
S! Information Channel/ Weather	What's New	P.10-6
	Back Issue	P.10-6
	Registration/Cancel	P.10-6
	Get Latest Contents	P.10-19
	Notification	P.10-19
Weather Indicator		P.10-6
BookSurfing		P.10-7
e-Book Viewer		P.10-7

## S! Quick News

Function		Refer to
S! Quick News List		P.10-5
Settings	Automatic Update	P.10-18
	Show Image	P.10-19
	Check Schedule	P.10-18
	Change Skin	P.10-19
	Delete S! Quick News Lists	P.10-18

S! Information Channel/Weather:  
Weather Indicator

Function		Refer to
Weather		P.10-20
Manual Update		P.10-6
Settings	Standby Setting	P.10-20
	Weather Notif.	P.10-20
	Icon Update	P.10-20

## Tools

## PIM/Lifestyle

Function		Refer to
Calendar		P.9-2
Alarms		P.9-7
Wakeup TV		P.9-9
Relaxation Time		P.9-11
Tasks		P.9-5
Calculator		P.9-12
Expenses Memo		P.9-13
Osaifu-Keitai		P.9-14
Simulated Call	Receive Simulated Call	P.9-40
	Switch On/Off	P.9-18
	Set Caller	P.9-18
	Assign Tone	P.9-18
	Receive Timing	P.9-18
	For Silent Mode	P.9-40

## PIM/Lifestyle: Osaifu-Keitai

Function		Refer to
Lifestyle-Appli		P.9-14
IC Card Settings	IC Card Status	P.9-39
	IC Card Lock	P.9-15
	Remote Lock	P.9-16
	Interface Settings	P.9-39
	Balance Info	P.9-39
	External Display	P.1-33
	Set to Default	P.9-39

## Clocks/Gauges

Function	Refer to
Stopwatch	P.9-19
Countdown Timer	P.9-20
World Clock	P.9-21
Hour Minder	P.9-22
Pedometer	P.9-23
Battery Meter	P.1-27

## Doc./Rec.

Function		Refer to
Dictionary		P.2-12
Search		P.2-14
Document Viewer		P.9-25
Notepad		P.9-26
Scratch Pad		P.2-15
ASCII Art		P.9-27
Voice Recorder	Record Time	P.9-41
	Ring Songs-Tones	P.9-28
	Save Recording to	P.9-42
Barcode/ Scan	Scan Barcode	P.9-29
	Open Barcode	P.9-42
	Create QR Code	P.9-30
	Scan Card	P.9-31
	Kanji Grabber	P.9-33
Barcode/ Scan	Scan Text	P.9-32
	Scanned Results	P.9-42
Phone Help		P.1-27



Data Folder	
Function	Refer to
Pictures	P.7-13
DCIM	P.12-2
Ring Songs-Tones	P.9-28
S! Appli	P.8-7
Widget	P.10-2
Music	P.12-2
Videos	P.12-2
Lifestyle-Appli	P.9-14
Books	P.12-2
Customized Screen	P.2-4
Status Templates	P.12-2
Decoration Call	P.3-6
Flash@	P.12-2
Other Documents	P.12-2
Memory Status	P.12-2

Media Player		
Function	Refer to	
Music	P.8-4	
Videos	P.8-5	
Streaming	P.5-12	
MTP Mode	P.8-3	
Settings	Sound Output	P.8-8
	Delete All WMA	P.8-9

Music		
Function	Refer to	
Last Played Music	P.8-8	
My Music	P.8-6	
SD AUDIO	P.8-9	
WMA	P.8-4	
Download Music	P.8-3	
Music Search	P.8-3	
Settings	Sound Effects	P.8-8
	Playback Mode	P.8-8

Videos		
Function	Refer to	
Last Played Video	P.8-8	
My Videos	P.8-5	
Recorder Contents	P.8-5	
SD VIDEO	P.8-5	
Download Videos	P.8-3	
Settings	Playback Mode	P.8-8
	Backlight	P.8-8
	Display Size	P.8-8
	Sound Effects	P.8-8
	Web Link Setting	P.8-8

Communication	
Function	Refer to
S! Friend's Status	P.10-8
S! Circle Talk	P.10-11
Near chat	P.10-13
Blog Tool	P.10-14

Phone		
Function	Refer to	
Phone Book	P.2-16	
Add New Entry	P.2-16	
Information	P.1-31	
Call Log	P.3-8	
Play Messages	P.3-4	
Call Voicemail	P.3-13	
Set Category	P.2-17	
My Details	P.1-27	
Speed Dial/Mail	P.3-7	
Mail Groups	P.4-16	
S! Addressbook Backup	P.13-14	
Ph.Book Settings	Sort Entries	P.2-18
	Select Phone Book	P.2-23
	Save New Entry	P.2-23
	New Number Prompt	P.2-21
	View Settings	P.2-21
Call Log Setting	P.3-17	
Manage Entries	Copy All	P.2-22
	Memory Status	P.2-22
	Change Mode(All)	P.2-23
	Delete All	P.2-22



## Settings

## ■ Phone

Function	Refer to	
Mode Settings	P.1-33	
Display	P.14-3	
External Display	P.1-24	
Customize	P.2-4	
Sounds & Alerts	P.2-5	
Date & Time	P.14-2	
Set Key Light	P.14-4	
言語選択 (Language)	P.14-3	
User Dictionary	P.2-11	
Set Key Shortcut	P.1-13	
Motion Control	P.1-19	
Ringer Output	P.14-6	
Earpiece Volume	P.3-15	
Change Menu	P.1-17	
Double Number	Switch On/Off	P.1-28
	Double Mode	P.1-30
	Password Entry	P.1-34
	Mode Name	P.1-34
	Reject By Line	P.1-34
	Show Missed	P.1-34
Locks	Packet Warning	P.1-34
	Send Priority	P.1-34
		P.11-2
Software Update	P.15-5	
Master Reset	Reset Settings	P.14-9
	Reset All	P.14-9

## ■ Phone: Display

Function	Refer to	
Wallpaper	P.2-3	
System Graphics	P.14-3	
VeilView	P.1-34	
Display Effects	P.14-3	
Font Settings	P.2-2	
Standby Display	Clock/Calendar	P.14-4
	Show Operator Name	P.14-4
	Pedometer	P.9-40
Vivid Mode	P.14-3	
Mini Battery	P.1-34	
Greeting Message	P.14-3	
Backlight	P.14-3	
Display Saving	P.14-3	
Dial Number	P.14-3	

## ■ Phone: External Display

Function	Refer to
Home Panel Wallpaper	P.1-32
Clock Display	P.1-32
Topic View	P.1-24
Active Menu Info	P.1-24
System Graphics	P.1-32
Desk Clock Mode	P.1-33
Open View	P.1-33
Direction Display	P.1-33
Caller Display	P.1-33
Call Groups View	P.1-33
Show Indicators	P.1-24

## ■ Phone: Sounds &amp; Alerts

Function	Refer to
Volume	P.14-5
Ringtone/videos	P.2-5
System Sounds	P.14-6
Vibration	P.2-5
Event Light	P.14-5
Set Key Illumi	P.14-4
Status Light	P.14-5
Any Key Answer	P.14-5
Surround	P.14-6

## ■ Phone: Date &amp; Time

Function	Refer to
Set Date/Time	P.14-2
Time Correction	P.14-2
Daylight Saving	P.14-2
Set Time Zone	P.14-2
Clock/Calendar	P.14-4
World Clock	P.9-21
Alarms	P.9-7
Set Holiday	P.9-34
Time Format	P.14-2
Date Format	P.14-2
Calendar Format	P.14-2



### Phone: Locks

Function	Refer to
PIN Entry	P.11-2
Function Lock	P.11-2
IP Service Setting	P.14-8
Function Control	P.11-4
Application Lock	P.11-3
History Lock	P.11-3
Show Secret Data	P.11-3
Set Lock Message	P.11-5
Chg. Handset Code	P.1-26

### Connectivity

Function	Refer to	
Bluetooth	P.13-7	
Infrared	Switch On/Off	P.13-17
	Send All	P.13-4
	IrSS Key Setting	P.13-17
IC Transmission	1 File Reception	P.13-17
	Send All	P.13-6
USB Mode	Mass Storage	P.13-11
	Recorder Link	P.13-11
	MTP Mode	P.8-3
USB Charge	P.1-31	
Memory Card	P.12-7	
Backup/ Restore	Backup All Items	P.13-19
	Backup Selected Items	P.13-13
	Restore All Items	P.13-19
	Restore Selected Items	P.13-13
	Settings/Manage	P.13-19

### Connectivity: Bluetooth


Function	Refer to
Switch On/Off	P.13-17
Add Device	P.13-8
Paired Devices	P.13-9
Send All	P.13-10
Setting Watch	P.13-18
My Device Settings	P.13-17
My Device Details	P.13-17

### Connectivity: Memory Card

Function	Refer to	
DPOF	Number of Copies	P.7-18
	Settings	P.7-23
	Check Settings	P.7-18
	Reset Settings	P.7-23
SD Local Contents	P.12-9	
Format Card	P.12-7	
Memory Status	P.12-2	

### Call

Function	Refer to	
Call Time/ Data Counter	Call Timers	P.3-9
	Data Counter	P.3-18
	Call Time Counter	P.3-17
	Minute Minder	P.3-17
Answer Phone	Switch On/Off	P.3-4
	Answer Time	P.3-14
	Outgoing Message	P.3-14
	Volume	P.3-14
Voicemail/ Divert	Voicemail	P.3-13
	Diverts	P.3-12
	Cancel All	P.3-13
	Status	P.3-19

Function	Refer to	
Video Call	Camera Picture	P.3-20
	Incoming Picture	P.3-20
	Outgoing Picture	P.3-20
	Hold Guidance Pict	P.3-20
	Backlight	P.3-20
	Loudspeaker	P.3-20
	Mute Microphone	P.3-20
Remote Monitor	P.3-14	
Show My Number	P.3-20	
 Missed Calls	P.3-13	
Int'l Calling	Int'l Prefix	P.3-15
	Country Codes	P.3-15
	Auto Add Code	P.3-15
Call Barring	Bar Outgoing Calls	P.3-19
	Restrict Destinations	P.3-10
	Bar Incoming Calls	P.3-20
	Reject Numbers	P.3-18
	Change NW Password	P.3-19
Decoration Call	Switch On/Off	P.3-16
	Play in Receiving	P.3-16
	Notice	P.3-17
Auto Answer	P.3-20	
Call Waiting	P.3-19	

### Network

Function	Refer to
Select Network	P.14-7
Select Service	P.14-7
Offline Mode	P.1-25
Retrieve NW Info	P.14-7
Location Info	P.14-8
Network Info	P.14-7
External Device	P.14-7



## Index

## A

AC Charger .....	1-4
Accessing Functions .....	1-11
Accessories .....	v
After-Sales Services .....	15-40
Alarms .....	9-7
Canceling .....	9-8
Deleting .....	9-8
Editing entries .....	9-38
For Manner Mode .....	9-38
Link to World Clk .....	9-38
Animation View .....	4-9
Answer Phone .....	3-4, 3-14
Anti Spam Measures .....	4-14, 4-28
Any Key Answer .....	14-5
Application Lock .....	11-3
ASCII Art .....	9-27
Auto Focus .....	7-2
Auto Reply .....	4-10, 4-25
Auto Resend .....	4-2, 4-30
Auto Retry Function .....	4-2

## B

Backlight .....	14-3
Backup .....	13-12
Settings/Manage .....	13-19
Bar Incoming Calls .....	3-20
Bar Outgoing Calls .....	3-19
Battery .....	1-4, 15-4
Battery Cover .....	1-2
Battery Cover Lever .....	1-2
Battery Meter .....	1-27
Blog Tool .....	10-14, 10-22
Bluetooth® .....	13-7
Blu-ray Disc recorders .....	13-11
Bookmarks .....	5-7

BookSurfing® .....	10-7
--------------------	------

## C

Calculator .....	9-12, 9-38
Calendar .....	9-2
Calendar Settings .....	9-34
Editing schedules .....	9-35
Call Barring .....	3-12, 3-19
Call Forwarding .....	3-12
Call Log .....	3-8, 3-17
Call Time Counter .....	3-17
Call Waiting .....	3-12, 3-19
Call Waiting (answering Line 2) .....	3-19
Caller ID .....	3-12, 3-20
Camera .....	7-2
Auto Save .....	7-19
Capturing Still Images .....	7-3
Exposure .....	7-19
Locking focus .....	7-19
Macro .....	7-19
Manual Focus .....	7-19
Mobile Light .....	7-19
Picture Quality .....	7-19
Recording Video .....	7-7
Review .....	7-9
Save Pictures to .....	7-19
Save Videos to .....	7-19
Self-timer .....	7-10
Send/Blog .....	7-9
Video Quality .....	7-19
Center Access Code .....	1-26
Change NW Password .....	3-19
Change PIN .....	11-5
Character Code List .....	15-12
Charging .....	1-4
Charging Terminals .....	1-2
Chat Folder .....	4-15, 4-28
Clock/Calendar .....	14-4

Composite .....	7-17
Countdown Timer .....	9-20
Create Msg. Size .....	4-22, 4-32
Create QR Code .....	9-30
Customer Service .....	15-41
Customized Screen (Japanese) .....	2-4

## D

Data Broadcast (Japanese) .....	6-5
Change View (Data) .....	6-14
Returning to initial window .....	6-14
Set Recording .....	6-15
Data Center .....	3-18
Data Folder .....	12-2
Files (attaching) .....	4-5, 12-3
Files (moving/copying) .....	12-4
Files (opening) .....	12-3
Files (renaming) .....	12-9
Folders (adding) .....	12-4
Selecting Multiple Files .....	12-4
Set Secret (folders) .....	12-4
Slide Show .....	12-3
Date & Time .....	14-2
Daylight Saving .....	9-21, 14-2
Decoration Call .....	3-6, 3-16
Delivery Report .....	4-9, 4-21, 4-30
Desktop Holder .....	v
Dialing from Call Log records .....	3-17
Dictionary .....	2-12
Digital TV (→ TV) .....	6-2
Adding Reception Areas .....	6-3
Area Setup .....	6-3
Auto Exit .....	6-13
AV Settings .....	6-12
Calls & Alarms .....	6-14
Change Area .....	6-12
Program Info. Search .....	6-12
Screen Size .....	6-4





Set Channels .....	6-12
Sound Output .....	6-13
Subtitle/Sound .....	6-15
TV Alarm .....	6-17
<b>Display</b> .....	1-2, 1-7
<b>Display (settings)</b> .....	14-3
<b>Display Effects</b> .....	14-3
<b>Display Saving</b> .....	14-3
<b>Document Viewer</b> .....	9-25
<b>Double Number</b> .....	1-28, 1-34
<b>Download Dictionary</b> .....	2-11
<b>DPOF</b> .....	7-18
Add Date .....	7-23
Check Settings .....	7-18
For All Pictures .....	7-18
Index Print .....	7-23
<b>Dual Mode</b> .....	1-29

## E

<b>Earpiece</b> .....	1-2
<b>Earpiece Volume</b> .....	3-15
<b>e-Book Library</b> .....	10-20
<b>e-Book Viewer</b> .....	10-7
<b>e-Books (Japanese)</b> .....	10-7, 10-20
<b>Emergency Calls</b> .....	3-2
<b>English</b> .....	14-3
<b>Event Light</b> .....	14-5
<b>Expenses Memo</b> .....	9-13
<b>External Camera</b> .....	1-2
<b>External Device Connection</b> .....	13-11
<b>External Device Port</b> .....	1-2
<b>External Display</b> .....	1-2, 1-20

## F

<b>Face Arrange</b> .....	7-16
<b>Feeling Mail (receiving)</b> .....	4-9
<b>Feeling Mail (sending)</b> .....	4-5
<b>Focus (locking)</b> .....	7-19
<b>Focus Setting</b> .....	7-19
<b>Font Size</b> .....	2-2

<b>Format Card</b> .....	12-7
<b>Function Control</b> .....	11-4
<b>Function Lock</b> .....	11-2

## G

<b>General Notes</b> .....	xii
<b>Graphic Mail</b> .....	4-6
<b>Group Calling</b> .....	3-12, 3-19
<b>Group Calling (opening another line)</b> .....	3-19
<b>Guide Usage Notes</b> .....	ii

## H

<b>Handset Closed</b> .....	1-2
<b>Handset Code</b> .....	1-26
<b>Handset Keys</b> .....	1-3
<b>Handset mail address</b> .....	4-3
<b>Handset Open</b> .....	1-2
<b>Handset Parts</b> .....	1-2
<b>Handset Positions</b> .....	1-2
<b>Handset Power On/Off</b> .....	1-6
<b>Handset responses</b> .....	2-5
<b>Headphone Port</b> .....	1-2
<b>Headphones (answering calls)</b> .....	3-14
<b>History Lock</b> .....	11-3
<b>Hold</b> .....	3-14
<b>Home Panel</b> .....	1-20
<b>Hour Minder</b> .....	9-22
Assign Tone/Video .....	9-40
For Manner Mode .....	9-40
Link to World Clk .....	9-40
Vibration .....	9-40

## I

<b>IC Card Lock</b> .....	9-15
<b>IC Card Settings</b> .....	9-15
<b>IC Transmission</b> .....	13-5
<b>Indicators</b> .....	1-9
Camera (Viewfinder) .....	7-3, 7-8
Display .....	1-9
Messaging (message list) .....	4-10

<b>Music Playback Window</b> .....	8-4
<b>SI Quick News</b> .....	10-5
<b>Video Playback Window</b> .....	8-5
<b>Information window</b> .....	1-7
<b>Infrared</b> .....	13-2
Receiving files .....	13-3
Sending files .....	13-4, 13-17
<b>Infrared Port</b> .....	1-2
<b>Internal Antenna</b> .....	1-2
<b>International calls</b> .....	3-3, 3-15
<b>Internet</b> .....	5-2
Accessing .....	5-3, 5-4
Basic Operations .....	5-5
Browser Settings .....	5-11
Enter URL .....	5-3, 5-4
History .....	5-3, 5-4
Saving Bookmarks/pages .....	5-7
<b>Int'l Call</b> .....	3-4
<b>IP Service Setting</b> .....	14-8
<b>IrSS Transfer</b> .....	13-2

## K

<b>Kanji Grabber</b> .....	9-33
<b>Key Assignments</b> .....	15-9
<b>Keypad Lock</b> .....	1-27

## L

<b>Language</b> .....	14-3
<b>Large Font Menu</b> .....	2-2
<b>Light Sensor</b> .....	1-2, 14-3
<b>Link to Feeling</b> .....	4-31
<b>Link to World Clk</b> .....	9-38, 9-40
<b>Locks</b> .....	1-26, 11-2
<b>Loudspeaker</b> .....	3-15, 3-20, 10-22

## M

<b>Mail Groups</b> .....	4-16
Changing members .....	4-28
Deleting .....	4-28
Edit Name .....	4-28



- |   |                |   |            |                                   |          |
|---|----------------|---|------------|-----------------------------------|----------|
| <b>Main Menu</b> .....                            | 1-11           | Recipients (editing).....                           | 4-20       | <b>Multi Job</b> .....            | 1-14     |
| <b>Manner mode</b> .....                          | 1-25           | Resend .....  | 4-29       | <b>Music (deleting)</b> .....     | 8-9      |
| <b>Mass Storage</b> .....                         | 13-11          | Save to Drafts .....                                | 4-21       | <b>Music (downloading)</b> .....  | 8-3      |
| <b>Master Reset</b> .....                         | 14-9           | Send Reservation .....                              | 4-21       | <b>Music (playing)</b> .....      | 8-4, 8-8 |
| Format Card .....                                 | 12-7           | Set Auto Play File .....                            | 4-22       | <b>My Details</b> .....           | 1-27     |
| Reset All .....                                   | 14-9           | Set Sent Cancel.....                                | 4-21       | Sending via IC Transmission ..... | 13-17    |
| Reset Settings .....                              | 14-9           | Signature .....                                     | 4-20       | Sending via Infrared .....        | 13-17    |
| <b>Media Player</b> .....                         | 8-2            | Speed Dial/Mail .....                               | 4-20       |                                   |          |
| Delete All WMA .....                              | 8-9            | Templates .....                                     | 4-22       |                                   |          |
| Playlists .....                                   | 8-6, 8-9, 8-10 | <b>Messages (deleting)</b> .....                    | 4-19, 4-26 |                                   |          |
| <b>Memory All Clear (S! Applications)</b> .....   | 8-12           | Auto Delete .....                                   | 4-30       |                                   |          |
| <b>Memory Card</b> .....                          | 12-5           | <b>Messages (forwarding)</b> .....                  | 4-29       |                                   |          |
| Format Card .....                                 | 12-7           | <b>Messages (protecting)</b> .....                  | 4-12       |                                   |          |
| Opening files .....                               | 12-7           | <b>Messages (receiving/checking)</b> .....          | 4-9        |                                   |          |
| <b>Memory Card Structure &amp; Contents</b> ..... | 15-24          | Accessing new mail out of Standby .....             | 4-23       |                                   |          |
| <b>Menu List</b> .....                            | 15-25          | DL Size Limit .....                                 | 4-32       |                                   |          |
| Camera .....                                      | 15-27          | Mail List .....                                     | 4-23       |                                   |          |
| Communication .....                               | 15-29          | Message List .....                                  | 4-10, 4-26 |                                   |          |
| Data Folder .....                                 | 15-29          | Message Window .....                                | 4-10, 4-24 |                                   |          |
| Entertainment .....                               | 15-28          | Retrieving complete S! Mail messages manually ..... | 4-11       |                                   |          |
| Media Player .....                                | 15-29          | Retrieving PC Mail .....                            | 4-19, 4-33 |                                   |          |
| Messaging .....                                   | 15-25          | Save to Data Folder .....                           | 4-24       |                                   |          |
| Phone .....                                       | 15-29          | <b>Messages (sorting)</b> .....                     | 4-14       |                                   |          |
| S! Appli .....                                    | 15-26          | Anti Spam Measures .....                            | 4-14, 4-28 |                                   |          |
| Settings .....                                    | 15-30          | <b>Messaging (→ SMS, S! Mail, PC Mail)</b> .....    | 4-2        |                                   |          |
| Tools .....                                       | 15-28          | General Settings .....                              | 4-30       |                                   |          |
| TV .....  | 15-26          | PC Mail Settings .....                              | 4-33       |                                   |          |
| Yahoo! Keitai .....                               | 15-26          | Receive (settings) .....                            | 4-31       |                                   |          |
| <b>Message List View</b> .....                    | 4-30           | S! Mail Settings .....                              | 4-32       |                                   |          |
| <b>Message Notice</b> .....                       | 4-31           | Send/Compose (settings) .....                       | 4-30       |                                   |          |
| <b>Messages (creating/sending)</b> .....          | 4-4, 4-7, 4-19 | SMS Settings .....                                  | 4-34       |                                   |          |
| Attachments .....                                 | 4-22           | <b>Microphone</b> .....                             | 1-2        |                                   |          |
| Drafts .....                                      | 4-29           | <b>Minute Minder</b> .....                          | 3-17       |                                   |          |
| Edit .....  | 4-29           | <b>Missed Call Notification</b> .....               | 3-13       |                                   |          |
| Edit & Send .....                                 | 4-29           | <b>Mobile Light</b> .....                           | 1-2        |                                   |          |
| Graphic Mail .....                                | 4-22           | <b>Mobile Widget</b> .....                          | 10-2       |                                   |          |
| Inserting signature manually .....                | 4-20           | <b>Mode Settings</b> .....                          | 1-33       |                                   |          |
| Messaging Settings .....                          | 4-21           | <b>Motion Control</b> .....                         | 1-18       |                                   |          |
| Preview Message .....                             | 4-4            | <b>MTP Mode</b> .....                               | 8-3        |                                   |          |
| Recipient status .....                            | 4-20           |   |            |                                   |          |

## N

- |                                   |       |
|-----------------------------------|-------|
| <b>Near Chat (Japanese)</b> ..... | 10-13 |
| <b>Network Password</b> .....     | 1-26  |
| <b>Notepad</b> .....              | 9-26  |
| Edit Text .....                   | 9-41  |
| Change Category .....             | 9-41  |

## O

- |  |      |
|--|------|
| <b>Offline Mode</b> .....                        | 1-25 |
| <b>Optional Services</b> .....                   | 3-12 |
| <b>Optional Services (checking status)</b> ..... | 3-19 |
| <b>Osaifu-Keitai® (Japanese)</b> .....           | 9-14 |
| Balance Info (checking e-money balance) ...      | 1-21 |
| Balance Info (settings) .....                    | 9-39 |
| IC Card Settings .....                           | 9-15 |
| Locking .....                                    | 9-15 |
| Set to Default .....                             | 9-39 |

## P

- |                                      |           |
|--------------------------------------|-----------|
| <b>Pager Code List</b> .....         | 15-11     |
| <b>PC (connecting handset)</b> ..... | 13-11     |
| <b>PC Mail</b> .....                 | 4-2, 4-17 |
| <b>PC Mail (sending)</b> .....       | 4-19      |
| <b>PC Site Browser</b> .....         | 5-4       |
| <b>Pedometer</b> .....               | 9-23      |
| <b>Pen Light</b> .....               | 1-27      |
| <b>Personal Mode</b> .....           | 2-7       |
| <b>Phone Book (deleting)</b> .....   | 2-22      |
| <b>Phone Book (editing)</b> .....    | 2-22      |
| <b>Phone Book (saving)</b> .....     | 2-16      |
| <b>Phone Book (using)</b> .....      | 2-18      |
| <b>Phone Book search</b> .....       | 2-18      |



Phone Help .....	1-27
Picture Editor .....	7-13
PIN .....	15-2
PIN Entry .....	11-2
PIN Lock .....	15-2
Playlists .....	8-6, 8-9, 8-10
Pressure Vent.....	1-2
Printing .....	7-18
Printing (Bluetooth®) .....	7-18

## Q

Quick Operations .....	1-11
Quick Reply .....	4-25
Quick Silent .....	1-18

## R

Received Msg. View .....	4-30
Record Caller Voice .....	3-16
Recorder Contents .....	8-5
Reference URLs .....	15-23
Reject (calls) .....	3-14
Relaxation Time .....	9-11
Remote Lock (Osaifu-Keitai®) .....	9-16
Call Remote Lock .....	9-17
Count for Lock .....	9-39
Mail Remote Lock .....	9-16
Notice Settings .....	9-39
Remote Monitor .....	3-14
Reply .....	4-10, 4-19, 4-25
Auto Reply .....	4-25
Opening received message for reference .....	4-25
Set Quick Reply .....	4-25
Reply Assist Dictionary .....	2-11
Reset (→ Master Reset) .....	14-9
Reset All .....	14-9
Reset Settings .....	14-9
Retrieve NW Info .....	14-7
Retrieving Network Information .....	1-6
Review .....	7-9

RSS Feeds .....	5-8
-----------------	-----

## S

S! Addressbook Back-up .....	13-14
Confirming user ID & password .....	13-19
Set Auto Sync .....	13-19
Sync History .....	13-19
S! Applications .....	8-7
S! Circle Talk .....	10-11, 10-22
Accepting requests .....	10-12
Initiating .....	10-12
IP Service Setting .....	14-8
Registering Members .....	10-11
S! Familiar Usability .....	2-4
S! FeliCa (→ Osaifu-Keitai®) .....	9-14
S! Friend's Status .....	10-8, 10-21
IP Service Setting .....	14-8
Opening Member Status .....	10-9
S! Information Channel (Japanese) .....	10-6, 10-19
Weather Indicator .....	10-6
S! Mail .....	4-2
Attaching Files .....	4-5
Create Msg. Size .....	4-22, 4-32
Feeling Mail .....	4-5
Graphic Mail .....	4-6
S! Mail Settings .....	4-32
S! Mail (sending) .....	4-4
S! Quick News (Japanese) .....	10-5
Automatic Update .....	10-18
Deleting items .....	10-18
Safety Precautions .....	vi
SAR .....	xx
Saved Pages .....	5-7, 5-13
Scan Barcode .....	9-29
Open Barcode .....	9-42
Scanning during text entry .....	9-42
Using scan results .....	9-42
Scan Card .....	9-31
Using scan results .....	9-44

Scan Text .....	9-32
Scanning and pasting during text entry .....	9-44
Using scan results .....	9-45
Schedules (→ Calendar) .....	9-2
Scratch Pad .....	2-15
SD Local Contents .....	12-9
Search .....	2-14
Security Codes .....	1-26
Sent Msg. View .....	4-30
Set as Wallpaper .....	12-8
Set Date/Time .....	14-2
Set Key Light .....	14-4
Set Key Shortcut .....	1-13
Set Sent Cancel .....	4-21
Set Time Zone .....	9-21, 14-2
Set to Default (S! Applications) .....	8-12
Shortcuts .....	1-11
Show My Number .....	3-20
Show Secret Data .....	11-3
Side Keys .....	1-3
Signature .....	4-20
Simple Menu .....	1-17
Simulated Call .....	9-18
Slide W paper .....	2-3
Small Light .....	1-2
SMS .....	4-2
SMS Settings .....	4-34
SMS (sending) .....	4-7
Snooze .....	9-7, 9-8
Softkeys .....	1-8
Software Update .....	15-5
Sounds & Alerts .....	2-5, 14-5
Speaker .....	1-2
Specifications .....	15-19
Specifications (by function) .....	15-20
Basic Operations .....	15-20
Calling .....	15-20
Camera & Imaging .....	15-21
Connectivity & File Backup .....	15-23
Data Folder .....	15-23



Digital TV .....	15-21
Entertainment & Communication .....	15-22
Getting Started .....	15-20
Handy Extras .....	15-22
Media Player .....	15-21
Memory Card .....	15-23
Messaging .....	15-20
Network .....	15-23
S! Applications .....	15-21
Yahoo! Keitai & PC Site Browser .....	15-20
<b>Speed Dial/Mail .....</b>	<b>3-7, 4-20</b>
<b>Standby .....</b>	<b>1-6</b>
<b>Standby Shortcuts .....</b>	<b>1-15</b>
<b>Status Icon List .....</b>	<b>1-7</b>
<b>Status Light .....</b>	<b>14-5</b>
<b>Status Templates .....</b>	<b>12-2</b>
<b>Still images (capturing) .....</b>	<b>7-3</b>
Add Frame .....	7-11
Camera Effects .....	7-11
Continuous Shoot .....	7-10
Focus .....	7-20
ISO Sensitivity .....	7-20
Long Exposure .....	7-11
Panorama Picture .....	7-12
Picture Size .....	7-20
Scanner .....	7-12
Scene .....	7-6
Shake Reducing .....	7-20
Shutter Mode .....	7-6
Shutter Sound .....	7-20
White Balance .....	7-20
<b>Still images (capturing &amp; sending) ....</b>	<b>7-3, 7-4</b>
<b>Still images (editing) .....</b>	<b>7-13</b>
Additional editing options .....	7-22
Changing sizes .....	7-14
Face Arrange .....	7-16
Merge Panorama .....	7-17
<b>Stopwatch .....</b>	<b>9-19</b>
<b>Strap Eyelet .....</b>	<b>1-2</b>
<b>Streaming .....</b>	<b>5-3</b>

<b>Swap Calls .....</b>	<b>3-19</b>
<b>System Graphics .....</b>	<b>14-3</b>
<b>System Sounds .....</b>	<b>14-6</b>

## T

<b>Table of Contents .....</b>	<b>iii</b>
<b>Tasks .....</b>	<b>9-5</b>
Deleting Tasks .....	9-6
Editing tasks .....	9-36
Opening Tasks .....	9-6
<b>Text (editing) .....</b>	<b>2-10</b>
<b>Text Entry .....</b>	<b>2-6</b>
Emoticons .....	2-8
Hiragana .....	2-7
Hiragana to Katakana/Alphanumeric Conversion .....	2-9
Input/Conversion .....	2-20
Inserting line breaks .....	2-19
Inserting Phone Book entry items .....	2-19
Inserting spaces .....	2-19
Katakana .....	2-8
Mail & Web Extensions .....	2-9
One-Hiragana Conversion .....	2-8
Personal Mode .....	2-7
Phonetic Conversion .....	2-7
Pictograms & Symbols .....	2-8
Quick Conversion .....	2-9
Reset Log .....	2-19
Switching Entry Modes .....	2-6
Undo conversion or recover deleted characters .....	2-19
Using Character Codes .....	2-19
Using Pager Code .....	2-19
When Target Word is Not Listed .....	2-7
<b>Time Correction .....</b>	<b>14-2</b>
<b>Time Shift .....</b>	<b>6-11</b>
<b>Troubleshooting .....</b>	<b>15-7</b>
<b>TV (watching) .....</b>	<b>6-4</b>
Channels (saving) .....	6-12
Data Broadcast (Japanese) .....	6-5

Help .....	6-12
Program Info .....	6-7
TV Listing (Japanese) .....	6-7
<b>TV Player .....</b>	<b>6-9</b>
<b>TV programs (recording/playing) .....</b>	<b>6-8, 6-9</b>
Details .....	6-16
Marker List .....	6-17
Markers .....	6-17
Memory Remaining .....	6-16
Playback Pattern .....	6-16
Playing split files .....	6-16
Recorded programs (deleting) .....	6-16
Recorded programs (renaming) .....	6-16
Split File .....	6-16
TV Reserve Prior .....	6-17
<b>TV Timers (watching/recording) .....</b>	<b>6-10</b>
Setting Timer via Program Info .....	6-7
Timer entries (editing/deleting) .....	6-17
Timer log records (opening/deleting) .....	6-17
TV Alarm .....	6-17
Wakeup TV .....	9-9

## U

<b>USB Charge .....</b>	<b>1-5, 1-31</b>
<b>User Dictionary .....</b>	<b>2-11</b>
Deleting entries .....	2-20
<b>USIM Card .....</b>	<b>15-2</b>
<b>USIM PIN (→ PIN) .....</b>	<b>15-2</b>
<b>Utility Software .....</b>	<b>13-11</b>
<b>UV Checker .....</b>	<b>1-21</b>
<b>UV Sensor .....</b>	<b>1-2</b>

## V

<b>VelView .....</b>	<b>1-27</b>
<b>Vibration .....</b>	<b>2-5</b>
<b>Video (deleting) .....</b>	<b>8-10</b>
<b>Video (downloading) .....</b>	<b>8-3</b>
<b>Video (playing) .....</b>	<b>8-5, 8-8</b>
<b>Video (recording) .....</b>	<b>7-7</b>
Display Size .....	7-22



Microphone .....	7-22
Record Time/Size .....	7-22
<b>Video (recording &amp; sending).....</b>	<b>7-8</b>
<b>Video Calling.....</b>	<b>3-5</b>
Remote Monitor .....	3-14
<b>Video Calls (answering).....</b>	<b>3-5</b>
<b>Video Calls (placing).....</b>	<b>3-5</b>
<b>Voice Calling.....</b>	<b>3-3</b>
<b>Voice Calls (answering).....</b>	<b>3-3</b>
<b>Voice Calls (placing).....</b>	<b>3-3</b>
<b>Voice Calls (placing while abroad).....</b>	<b>3-4</b>
<b>Voice Recorder.....</b>	<b>9-28</b>
Record Time .....	9-41
Save and Send.....	9-41
Save Recording to.....	9-42
<b>Voicemail.....</b>	<b>3-12, 3-13</b>
<b>Volume (ringtones).....</b>	<b>14-5</b>

## W

<b>Wakeup TV.....</b>	<b>9-9</b>
<b>Wallpaper.....</b>	<b>2-3</b>
Slide W paper .....	2-3
<b>Warranty.....</b>	<b>15-40</b>
<b>Weather Indicator.....</b>	<b>10-6</b>
Icon Update.....	10-20
Manual Update.....	10-6
Weather.....	10-20
<b>Weather Indicator List.....</b>	<b>15-18</b>
<b>Widgets.....</b>	<b>10-2</b>
<b>World Clock.....</b>	<b>9-21</b>

## Y

<b>Yahoo! Keitai.....</b>	<b>5-3</b>
---------------------------	------------

## Objectives

### Accessing Secret Files/Entries

Data Folder .....	12-4
Messaging folders.....	4-13
Phone Book.....	2-17
Schedules/tasks.....	9-4

### Accessing the Internet

From message text.....	4-24
From scan results.....	9-42, 9-45
Media Player .....	8-3
PC Site Browser.....	5-4
RSS Feeds.....	5-8
Yahoo! Keitai .....	5-3

### Browsing/Viewing

Document Viewer.....	9-25
e-Books.....	10-7
PC Site Browser.....	5-4
S! Information Channel .....	10-6
S! Quick News.....	10-5
Yahoo! Keitai .....	5-3

### Calculating

Calculator.....	9-12
Expenses Memo .....	9-13

### Canceled

Alarm.....	9-8
Answer Phone.....	3-4
Call Forwarding.....	3-13
Customized Screen.....	2-19
Download Dictionary.....	2-11
Function Lock.....	11-2
Hour Minder.....	9-22
IC Card Lock.....	9-15
Keypad Lock.....	1-27
Large Font Menu.....	2-2
Manner mode.....	1-25
Offline Mode.....	1-25
S! Familiar Usability.....	2-19
S! Information Channel .....	10-6
Secret folders.....	4-27, 12-4
Simple Menu.....	1-17
Speed Dial entries.....	3-7
Voicemail.....	3-13

### Changing

Font Size.....	2-2
Font Weight.....	2-2
Handset Code.....	1-26

Handset mail address.....	4-3
Network Password .....	3-19
PIN.....	11-5

### Changing Ringtones

Phone Book.....	2-17
Ringtone/videos.....	2-5
Via Data Folder .....	12-8

### Composing/Sending Messages

Feeling Mail.....	4-5
From Call Log records.....	3-17
From Internet pages.....	5-10
From message text.....	4-24
From Phone Book.....	2-22
From received messages.....	4-10
From scan results.....	9-42, 9-45
From Scratch Pad.....	2-15
From sent messages.....	4-29
Graphic Mail.....	4-6, 4-22
Inserting ASCII Art.....	9-27
PC Mail.....	4-19
S! Mail.....	4-4
SMS.....	4-7

### Copying

Calculation results.....	9-38
Data Folder files.....	12-4
From text entry window.....	2-10
Scan results.....	9-43, 9-44, 9-45
Text (e-Books).....	10-20
Text (Internet pages).....	5-10
Text (Messaging).....	4-24
Text (S! Information Channel pages).....	10-19

### Downloading

Customized Screen.....	2-4
e-Books.....	10-7
Music.....	8-3
S! Applications.....	8-11
Video.....	8-3
Widgets.....	10-2

### Exchanging Files

IC Transmission.....	13-5
----------------------	------



- Infrared ..... 13-2
- Mass Storage ..... 13-11
- MTP Mode ..... 8-3
- Hiding Files/Entries**
- Data Folder ..... 12-4
- Messaging folders ..... 4-13
- Phone Book ..... 2-17
- Schedules/tasks ..... 9-34, 9-36
- Inserting/Removing**
- Battery ..... 15-4
- Memory Card ..... 12-5
- USIM Card ..... 15-3
- Locking/Restricting**
- Application Lock ..... 11-3
- Call Log ..... 11-3
- Function Lock ..... 11-2
- Incoming/outgoing calls ..... 3-19, 3-20
- Keypad Lock ..... 1-27
- Mail records ..... 11-3
- Osai-fu-Keitai® ..... 9-15
- PIN Entry ..... 11-2
- Managing Schedules**
- Calendar ..... 9-2
- Tasks ..... 9-5
- Measuring Time**
- Countdown Timer ..... 9-20
- Stopwatch ..... 9-19
- Notifying Phone Number**
- Opening My Details ..... 1-27
- Via IC Transmission ..... 13-17
- Via Infrared ..... 13-17
- Placing Calls**
- By entering phone numbers ..... 3-3
- From Call Log records ..... 3-17
- From Internet pages ..... 5-10
- From message text ..... 4-24
- From Phone Book ..... 2-18
- From scan results ..... 9-42, 9-45
- International calls ..... 3-3
- Speed Dial ..... 3-7
- Video Calls ..... 3-5
- While abroad ..... 3-4
- Playing**
- Answer Phone messages/Caller Voice ..... 3-4
- Files (Scan Barcode) ..... 9-43
- Music ..... 8-4
- Recorded TV programs ..... 6-9
- Recorded TV programs from Timer log... 6-17
- Split files (TV) ..... 6-16
- Streams ..... 5-12
- Video ..... 8-5
- Video (transferred from Blu-ray Disc recorders) ..... 8-5
- Voice files ..... 9-28
- Voicemail messages ..... 3-13
- Rejecting**
- Calls from public phones ..... 3-11
- Calls from specified numbers ..... 3-11
- Calls from unsaved numbers ..... 3-11
- Undisplayable Caller ID ..... 3-11
- Withheld Caller ID ..... 3-11
- Resetting/Formatting**
- All settings ..... 14-9
- Handset ..... 14-9
- Memory Card ..... 12-7
- Saving**
- Backup ..... 13-13
- Captured still images ..... 7-3, 7-10, 7-12
- Draft messages ..... 4-21
- Edited still images ..... 7-13
- Files (Internet) ..... 5-10
- Files (S! Information Channel pages) ... 10-19
- Graphic Mail templates ..... 4-6
- Mail attachments ..... 4-24
- Notepad entries ..... 9-26
- Phone Book entries ..... 2-16
- Recorded video ..... 7-7
- Scan results ..... 9-42, 9-44
- TV channels ..... 6-12
- Add New Entry ..... 2-16
- Data Folder files ..... 12-9
- During a call ..... 3-16
- From Call Log records ..... 3-17
- From message text ..... 4-24
- From received messages ..... 4-24
- From scan results ..... 9-42, 9-44
- Scanning**
- Business cards ..... 9-31
- Kanji ..... 9-33
- QR Codes ..... 9-29
- Text ..... 9-32
- Searching**
- Messages ..... 2-14, 4-13
- Music to download ..... 8-3
- Music to play ..... 8-4
- Notepad entries ..... 9-41
- Phone Book ..... 2-18
- Text (Internet pages) ..... 5-10
- TV program information ..... 6-12
- Video to play ..... 8-5
- Web Search ..... 2-14
- Sending via Mail**
- Data Folder files ..... 4-5, 12-3
- Notepad entries ..... 9-41
- QR Codes ..... 9-30
- Scan results ..... 9-43, 9-44, 9-45
- Still images ..... 7-4, 7-9
- URLs ..... 5-10, 5-12
- Video ..... 7-8
- Voice files ..... 9-41
- Setting Wallpaper**
- From attached files ..... 4-24
- From Phone menu ..... 2-3
- From scan results ..... 9-43
- Via Data Folder ..... 12-8
- Showing in Standby**
- Clock/Calendar ..... 14-4
- S! Applications ..... 8-11
- Wallpaper ..... 2-3



World Clock.....	9-21
<b>Using as Alarm Clock</b>	
Alarm.....	9-7
Hour Minder .....	9-22
Wakeup TV .....	9-9
<b>Using Away from Home</b>	
Alarm.....	9-7
Camera .....	7-2
Digital TV .....	6-2
Hour Minder .....	9-22
Osaifu-Keitai®.....	9-14
Pedometer.....	9-23
Pen Light .....	1-27
Scratch Pad.....	2-15
Search.....	2-14
Voice Recorder.....	9-28



### Warranty & Service

#### ■ Warranty

Warranty is provided when you purchase handset.

- Check the name of distributor and date of purchase.
- Read contents and keep in a safe place.
- The warranty term is described in the warranty.

#### ■ After-Sales Services

See **P.15-7** "Troubleshooting" before contacting SoftBank for service or repairs.

If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (**P.15-41**) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, possible repairs are performed upon request at subscriber expense.

For other services, contact the distributor, the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (**P.15-41**).

Replacement parts are available for 6 years after termination of production.

- SoftBank is not liable for any damages resulting from use of this product.
- SoftBank is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.





## Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

### SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at **157**  
for General Information or **113** for Customer Assistance

### SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**  
(International charges apply.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎0088-240-157
	Customer Assistance	☎0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎0088-241-157
	Customer Assistance	☎0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎0088-242-157
	Customer Assistance	☎0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎0088-250-157
	Customer Assistance	☎0088-250-113

