

| | |
|---|------------|
| Camera | 7-2 |
| Getting Started | 7-2 |
| Photo Camera | 7-3 |
| Capturing Still Images | 7-3 |
| Using Portrait Photography Features | 7-5 |
| Video Camera | 7-7 |
| Recording Video | 7-7 |
| Review | 7-9 |
| Opening Saved Files | 7-9 |

| | |
|-----------------------------------|-------------|
| Shooting Modes | 7-10 |
| Using Shooting Modes | 7-10 |
| Editing Images | 7-13 |
| Picture Editor | 7-13 |
| Composite | 7-17 |
| Printing | 7-18 |
| Printing Images | 7-18 |
| Additional Functions | 7-19 |
| Troubleshooting | 7-24 |

7

Camera & Imaging



Getting Started

Capture still images or record video.

Portrait Photography

Automatically locks focus on faces, or releases shutter when subjects smile or turn their faces to camera.

Auto Focus

Measures the distance between subjects and camera to adjust focus.

Multiple Shooting Modes

Apply effect or add frame, capture sequential/panoramic or scan images, or use long exposure.

Review

Open/play last saved mobile camera file quickly; access older files as needed.

Precautions

- Clean dust/smudges from lens cover with soft dry cloth before use.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Exposing lens to direct sunlight may damage color filter and affect image color.



Auto Shut-off

- Before image capture/recording, mobile camera shuts down after a period of inactivity and handset returns to Standby.

Shutter Click

- Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.

Advanced

-  ● Opening Help ● Changing function assigned to Camera Key () (P.7-19)




Capturing Still Images

1



Photo Viewfinder

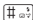- Frames appear on detected faces. For details, see "Using Portrait Photography Features."
- Mobile Light may illuminate automatically depending on ambient light level. Press  twice to toggle setting **Off**.

2 Frame subject on Display ➔



Captured Image Window

- Shutter clicks; captured image is saved.
- Open saved images via Review or Data Folder.

3

- Viewfinder returns.


4 ➔ Camera shuts down

Sending Captured Images at High Speed via Infrared

After 2,  (Long) ➔ Yes ➔ 


- Set recipient device to ready beforehand.

Photo Viewfinder Indicators

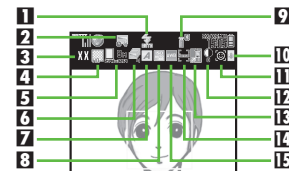


| | | | |
|---|------------------|----|-----------------|
| 1 | Mobile Light | 9 | Remote Shutter |
| 2 | Auto Save | 10 | Shake Reducing |
| 3 | Memory | 11 | Focus |
| 4 | Picture Quality | 12 | Exposure |
| 5 | Picture Size | 13 | Background Save |
| 6 | Continuous Shoot | | Save to |
| 7 | Long Exposure | 14 | Shutter Mode |
| 7 | Scene | 15 | White Balance |
| 8 | ISO Sensitivity | | |
| | Self-timer | | |

Advanced


-  ● Accessing files from Viewfinder ● Adjusting brightness ● Adjusting focus quickly for close-up shots ● Changing shutter click sound ● Changing Mobile Light mode ● Changing image size ● Adjusting color balance according to lighting conditions (And more on P.7-19 - 7-20)



■ Showing Large Indicators

Press  in Photo Viewfinder to show large indicators along the edges of Display.



Press  to toggle indicator view (Normal, Icon On, Icon Off and Guidance).

Accessing Settings via Indicators

 (Long) ➡ Select function ➡ 

Pre-Image Capture Operations






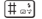

| | |
|--------------------------|---|
| Zoom In/Out |  |
| Toggle Mode |  |
| Adjust Brightness |  |
| Change Image Size |  |
| Change Quality |  |
| Toggle Mobile Light Mode |  |
| Open Help |  |

Image Size & Print/Display Size

935SH Picture Size & Corresponding Print/Display Size:

| | |
|-----------|----------------------------|
| 8M | A3 prints |
| 5M | A3 prints |
| 3M | A4 prints |
| Full HD | Full HD display wallpaper* |
| Wallpaper | 935SH Wallpaper |
| VGA | VGA display wallpaper* |
| QVGA | QVGA display wallpaper* |

*For image specifications, see **P.15-21**

"Photo Camera."


Auto Resize Zoom


- At **8M**, Picture Size changes with zoom scale (print quality may be affected); check the size on indicator before image capture.

Sending Captured Images via Mail

1 In captured image window,



- Mail Composition window opens.
- Message size confirmation appears depending on image size or handset settings; select message size limit and press . Images may be resized automatically.

To make selection the default setting hereafter, press  to check **From now on too.** check-box.


2 Complete message ➡




Using Portrait Photography Features

Locking Focus on Faces Automatically

935SH camera locks focus on faces automatically; frames appear on detected faces. (Portrait auto focus)
Detection may fail depending on face angle, distance from subject or environment.

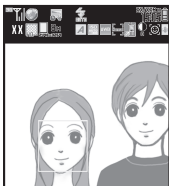

When Multiple Faces are Detected

- Frame appears on each face; use  to select one on which to lock focus.

Capturing with Focus Lock

Lock focus on subject; camera continuously focuses on the subject even if it moves.

- Chase Focus tracks the subject's movement, and Continuous AF adjusts focus as the distance to the subject changes.
- Chase Focus distinguishes the subject by color; light-colored subjects or subjects having the same color as the background may not be tracked correctly.


1 In Photo Viewfinder, frame subject in center of Display

2



- Focus Lock is set.



- Captured image appears.
- Press  to return to Viewfinder.

Canceling Focus Lock



Advanced

-  ● Adjusting smile detection level ● Setting Center Auto Focus ● Correcting portrait auto focus images (And more on P.7-20 - 7-21)








Releasing Shutter upon Smile/ Face Detection

Available Shutter Modes:

| | |
|---------------------------|--|
| Egao focus shutter | Releases shutter when subject smiles |
| Furimuki shutter | Releases shutter when subject turns face to camera |

Adjust smile detection level as needed.

- In Photo Viewfinder,** 
 - Press  to toggle Shutter Mode between **Egao** ( appears), **Furimuki** ( appears) and **Normal**.

- Shutter is released upon smile/face detection**
 - Captured image appears.
 - Press  to return to Viewfinder.

Capturing with Tailored Settings

In Auto mode, 935SH camera detects subject type/environment (Portrait, Landscape, Night, Portrait+Night, Food, Scan Text, Scan Barcode or Scan Card) and applies suitable settings automatically. Select a specific mode for a particular subject/environment.




Examples of Specific Modes:




| | |
|------------------|-------------------------|
| Baby | Brightens skin tone |
| Food | Yields vivid colors |
| Sea | Enhances the blue |
| Fireworks | Intensifies the black |
| Pet | Increases shutter speed |

- In Photo Viewfinder,**   **Scene** 



Scene Menu

- Select mode**  
 - For **Auto**, select **Find Only Scene** (to disable Scan Card and Scan Barcode) or **Find Card/Barcode** and press .






- Frame subject in center of Display**  
 - Captured image appears.
 - Press  to return to Viewfinder.


Toggle Scene Menu Pages

[Scene Menu] 

Saving Custom Settings


- To save the current camera settings, follow these steps:

[Scene Menu] **User Settings**    **Yes**  


 - To load saved settings, open Scene menu then select **User Settings** and press .




Recording Video

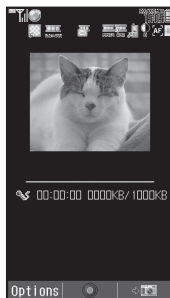

Video Viewfinder


- Omit step of pressing  if Video Camera is already active.



- Recording starts after a tone. (To start over, press .)



Save Menu

- Recording stops with a tone. (To discard file and start over, press .)



- Video is saved. (Viewfinder returns.)
- Play saved video via Review, Data Folder or Media Player.



Pausing Recording

After **2**,  (press to pause/resume)

- May be unavailable depending on recording size.

Playing Unsaved Video

In **4**, *Preview* 






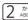
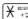


Incoming Calls

- If a call arrives before video is saved, recorded clip is temporarily saved. End the call to return.







When Battery Runs Low

- Recording stops. (Recorded clip is saved.)

Pre-Recording Operations

| | |
|--------------------------|---|
| Zoom In/Out |  /  |
| Toggle Mode |  |
| Adjust Brightness |  /  |
| Change Record Size |  |
| Change Quality |  |
| Toggle Mobile Light Mode |  |
| Open Help |  |

Advanced

-   Accessing files from Viewfinder  Adjusting focus quickly for close-up shots (And more on **P.7-19**)
-  Activating Mobile Light  Capturing images while recording video (still image capture)  Changing recording time/size (And more on **P.7-22**)



Video Viewfinder Indicators



| | |
|----------------------------------|------------------|
| 1 Mobile Light | 7 Shake Reducing |
| 2 Video Quality | 8 Focus |
| 3 Record Size | 9 Exposure |
| 4 Memory for still image capture | 10 Save to |
| 5 Record Time | 11 Audio Encode |
| 6 Self-timer | 12 Video Encode |

Sending Recorded Video via Mail

May not be delivered as sent depending on recording size or recipient device.

1 In Save menu, **Send** ➔

2 **Save and Send** ➔



- Mail Composition window opens.
- Message creation confirmation appears depending on file size; choose **Yes** and press to proceed. (Choose **No** to cancel attachment.) To make selection the default setting hereafter, press to check **From now on too.** check-box.

3 **Complete message** ➔



Opening Saved Files

Opening Last Saved File

Open/play last saved mobile camera file; access older files as needed.
Available in Standby or Viewfinder, as well as while using other functions (with some exceptions).

1 (Long)



Review Window

- To end Review, press .


Enlarging Images

After 1, 

Pausing/Resuming Video


After 1,  (press to pause/resume)

Opening Help


[Review Window] 

Accessing Older Files

1 In Review window,

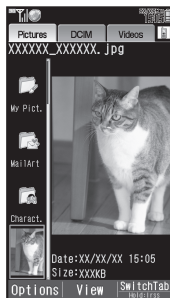

Review File List

- File list appears.
- Press  to toggle lists.

2 Select file


- File opens/plays.

Sending Images

Send images to blogs, etc. via mail.
Infrared and other options can also be used for sending images to other devices.
To send images to blogs, complete Blog Setting beforehand.

1 In Review file list, select image

2 Send/Blog

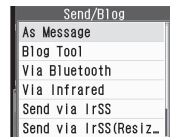

3 Select option

- Follow onscreen instructions.



Using Shooting Modes

May be unavailable depending on selected image/recording size.


Self-timer

1 In Photo/Video Viewfinder, ➔ **Self-timer** ➔

2 Select time ➔



3 Frame subject on Display ➔

- After selected time elapses, captured image appears or recording starts.
- To stop recording, press .
- For more, see operation descriptions on P.7-3 or P.7-7.

Releasing Shutter during Countdown After ,

- ### Incoming Calls/Alarm during Countdown
- Countdown stops. (Self-timer remains active.)

Continuous Shoot (Photo Camera)

Available Modes:

| | |
|------------|---|
| 4 Pictures | Capture four separate images with Index Image |
| 9 Pictures | Capture nine separate images with Index Image |
| Overlapped | Capture five images to create a composite image |

1 In Photo Viewfinder, ➔ **Modes** ➔



Mode Menu




2 **Continuous Shoot** ➔

3 Select mode ➔ ➔ Select speed ➔

4 Frame subject on Display ➔

- After image capture, Index Image or a composite image appears. (All captured images are saved.)
- When shooting speed is set to **Manual** (4 Pictures and 9 Pictures modes), repeat 4 for each frame.

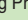Checking Captured Images before Saving

- Set Auto Save to **Off** beforehand. After image capture, Index Image or a composite image appears.
 - Long Press  to save all captured images.
 - Follow these steps to save selected image:  **Select image** ➔ 



Adding Frames (Photo Camera)

1 In Photo Viewfinder, ➔ Modes ➔

2 Add Frame ➔

3 Preset Frames ➔



4 Select frame ➔

5 Frame subject on Display ➔

- Captured image is saved.
- Press to return to Viewfinder.

Using Frames in Data Folder

In , Data Folder ➔ ➔ Select frame ➔ ➔ ➔ Frame subject on Display ➔

Camera Effects (Photo Camera)

1 In Photo Viewfinder, ➔ Modes ➔

2 Camera Effects ➔



3 Select effect ➔

4 Frame subject on Display ➔

- Captured image is saved.
- Press to return to Viewfinder.

Long Exposure

Capture low-light shots (fireworks, night scenes, etc.) clearly.

1 In mode menu, Long Exposure ➔

2 Select time ➔

3 Frame subject on Display ➔



- Shutter is left open for an extended period of time, then captured image appears.
- Press to return to Viewfinder.



Panorama Picture (Photo Camera)

1 In Photo Viewfinder, ➔ **Modes** ➔


2 **Panorama/Scanner** ➔



Panorama/Scanner Menu

3 **Panorama Picture** ➔ ➔ **On** ➔

4 **Frame subject on Display** ➔

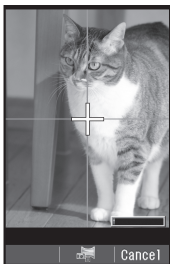

- Move handset slowly to keep aligned with either of yellow lines.
- Image is captured automatically when the bar () turns blue.

5

- Image is saved.

Checking Captured Images before Saving

- Set Auto Save to **Off** beforehand. After image capture, Save menu opens.
 - To check captured images, follow these steps in Save menu: **Preview** ➔
 - To save captured images, follow these steps in Save menu: **Save** ➔

Scanning Images (Photo Camera)


1 In Photo Viewfinder, ➔ **Modes** ➔

2 **Panorama/Scanner** ➔

3 **Scanner** ➔

4

Select size ➔ ➔ **Frame subject on Display** ➔

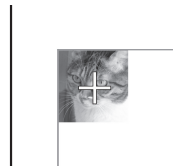

- Move handset slowly to scan the area to capture. (Refer to indicators on Display.)

5

- Captured image is saved.

Checking Captured Images before Saving

- Set Auto Save to **Off** beforehand. After image capture, Save menu opens.
 - To check captured images, follow these steps in Save menu: **Preview** ➔
 - To save captured images, follow these steps in Save menu: **Save** ➔

Advanced

- Changing Panorama settings Changing Panorama image preview method (P.7-21)



Picture Editor

Picture Editor Options

The following options are available. Some images may not be editable depending on file type and size.

| | |
|---------------------|---|
| Resize | Select from preset sizes or crop image |
| Frame | Add Frame to images |
| Paste | Add text/dates to images |
| Retouch | Dress up images with preloaded visual effects |
| Stamp | Add stamps to images |
| Face Arrange | Make smiley, angry or sad faces |
| Correction | Correct images |
| Rotate | Rotate images |
| File Format | Convert file format and change file size |


Basic Operation

1 ➔ **Data Folder** ➔

2 **Pictures** ➔ ➔ **Select image** ➔

3 ➔ **Edit** ➔

4 **Picture Editor** ➔

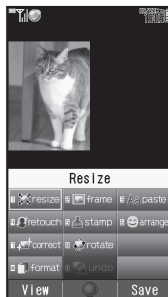

Picture Editor Menu

5 **Select effect** ➔ ➔ **Edit**



• To start over, press .

6 **When finished,**



7 **Save as New** ➔

• To overwrite, select **Overwrite** and press . (Omit .)

8 **Enter name** ➔ ➔ **Save here** ➔

Canceling Effects

After , **Undo** ➔

■ To restore effect immediately after canceling, select **Redo** and press .




Changing Image Size

Select from preset sizes or crop image.

Resize to Preset Size

- 1 In Picture Editor menu,
Resize ➡ ●

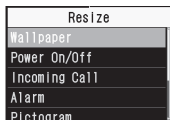

Resize Window

- 2 Select size ➡ ●

- 3 ● Specify image area



- If crop frame does not appear, omit 3.


- 4 ●
- Editing is complete.

Zooming In/Out

After 3, 4 ➡ 4 ➡ 4

Cropping Images

- 1 In Resize window, **Cut** ➡ ●
- 2 ● Move + to the upper left corner of the portion to crop ➡ ●

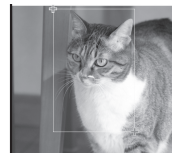

- 3 ● Move + to the lower right corner of the portion to crop ➡ ●

- 4 ●
- Editing is complete.

Specifying Image Area

After 3, 4 ➡ 4

Zooming In/Out

After 3, 4 ➡ 4 ➡ 4


Advanced

- Using additional editing options (P.7-22)

Applying Visual Effects

Render in sepia tones or add blur, etc.

- 1 In Picture Editor menu, *Retouch* ➔ ●

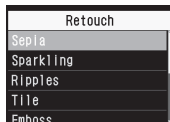


- 2 Select effect ➔ ●



- 3 ●
 - Editing is complete.

Adding Frames

- 1 In Picture Editor menu, *Frame* ➔ ●

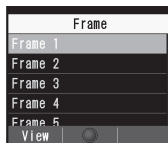

- 2 Select frame ➔ ●



- 3 ●
 - Editing is complete.



Face Arrange

Make faces smiley, sad, etc.

1 In Picture Editor menu, *Face Arrange* ➔ ●



Face Arrange Menu

2 Select type ➔ ●

3 ●

- Editing is complete.

Important Face Arrange Usage Note

- When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

Adjusting Positions

Change the default positions and sizes of targets to fit the image.

1 In Face Arrange menu, ●




- A rectangle appears with + in the upper left corner.

2 ● Move + to top left of face




3 ● Move + to bottom right of face

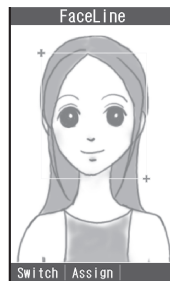

4 ●

- Face line is set. Set the eyes and then mouth in the same way.

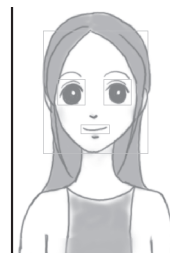

5 ● ➔ Yes ➔ ● ➔ Save here ➔ ●

- Image is saved as a new entry with Face Arrange positions adjusted. Complete Face Arrange. Face Arrange is applied to the adjusted positions.



Composite

Composite Options

The following options are available. Some images may not be editable depending on file type and size.

| | |
|-----------------------|------------------------------------|
| Split Picture | Combine up to four images into one |
| Merge Panorama | Combine two still images into one |

Panorama Images

Panorama Image Effects:

| | |
|------------------|--------------------------------|
| Near View | Best suited for close-up shots |
| Document | Use for images with text |
| Standard | Apply to other images |

- 1 ● ➔ **Data Folder** ➔ ●
- 2 **Pictures** ➔ ● ➔ **Select image** ➔ ●
- 3 ● ➔ **Edit** ➔ ●
- 4 **Composite** ➔ ●

5 Merge Panorama ➔ ●



- File selected in 2 is set as left image.

6 <Empty> ➔ ● ➔ **Select image** ➔ ●

7 EFFECT ➔ ● ➔ **Select effect** ➔ ●

- Editing is complete.

8 When finished, ●



- Merged image appears.

9 ●

10 Enter name ➔ ● ➔ **Save here** ➔ ●

Changing Images

After 7, select image ➔ ● ➔ ● ➔ ● ➔

Select image ➔ ●

Switching Image Positions

After 8, ●

Advanced

- Combining reduced images (P.7-23)



Printing Images

Digital Print Order Format (DPOF)


Select images from Memory Card and specify the number of copies to print on DPOF-compatible printers, or at digital printing services.

DPOF settings made on other devices are unusable; delete existing settings to create new ones on handset.

7


Camera & Imaging

 - 1 → **Settings** → →
- 2 **Memory Card** → → **DPOF** →
- 3 **Number of Copies** →



- 4 **For Each Picture** → →
- 5 **Select folder** →

- 5 **Select image** →

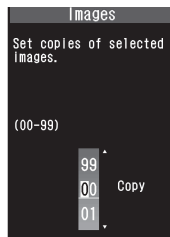

- 6 **Enter a number of copies to print** →

• For more settings, repeat 5 - 6.

- 7

Applying a Number to All Images

In 4, **For All Pictures** → → Enter a number of copies to print →

Canceling Specified Number

In 6, enter 00 → →

Viewing Current Print Settings

In 6, **Check Settings** →

Using Printers

Connect handset to a Bluetooth®-compatible printer and print images in Pictures folder.

- Activate Bluetooth® on the printer.
- Some images may not be sent depending on file type and size.

- 1 → **Data Folder** → → **Pictures** →

- 2 **Select image** → → **Print** →

- 3 **Via Bluetooth** → → **Select printer** →

- 4 **Yes** →
 - To cancel, press .

When Authorization Code is Required

Enter Authorization Code →

Advanced

Changing print settings (P.7-23)

Photo Camera & Video Camera

General

| | |
|---|---|
| Accessing files from Viewfinder | In Photo/Video Viewfinder, ➔ Data Folder ➔ ➔ ➔ |
| Opening Help | In Photo/Video Viewfinder, ➔ Help ➔ • Press to toggle Help window for indicator descriptions and key assignments. |
| Changing function assigned to Camera Key () | ➔ Camera ➔ ➔ Set Camera Key ➔ ➔ Select function ➔ |

Capturing

| | |
|--|---|
| Adjusting brightness | In Photo/Video Viewfinder, ➔ Settings ➔ ➔ Exposure ➔ ➔ Adjust level |
| Adjusting focus quickly for close-up shots | In Photo/Video Viewfinder, ➔ Focus Setting ➔ ➔ Macro ➔ |
| Adjusting focus manually | In Photo/Video Viewfinder, ➔ Focus Setting ➔ ➔ Manual Focus ➔ ➔ ➔ Adjust focus ➔ • To readjust focus, press . |
| Locking focus | In Photo/Video Viewfinder, • Frame subject in center of Display first. • To start over, press again. |
| Changing image quality | In Photo/Video Viewfinder, ➔ Settings ➔ ➔ Picture Quality or Video Quality ➔ ➔ Select quality ➔ |

Saving

| | |
|---------------------------------|---|
| Selecting automatic save option | In Photo/Video Viewfinder, ➔ Save Setting ➔ ➔ Auto Save ➔ ➔ See below |
| | For Still Images Select option ➔ • When Off , press after image capture to save. |
| Changing save location | Saving Video Automatically On ➔ |
| | In Photo/Video Viewfinder, ➔ Save Setting ➔ ➔ Save Pictures to or Save Videos to ➔ ➔ ➔ Select option ➔ |



Photo Camera

■ General

| | |
|--|--|
| Changing shutter click sound | In Photo Viewfinder, ➔ Shutter Setting ➔ ➔ Shutter Sound ➔ ➔ Select pattern ➔ • Shutter click sounds for Continuous Shoot, Panorama Picture and Scanner are fixed. |
| Switching indicator view | In Photo Viewfinder, ➔ Settings ➔ ➔ Display Setting ➔ ➔ Select option ➔ |
| Changing send option assigned to | In Photo Viewfinder, ➔ Settings ➔ ➔ Set Send Key ➔ ➔ Short press or Long press ➔ ➔ Select option ➔ • Change send option separately for each key press method. |
| Disabling quick transition to Viewfinder after saving images | In Photo Viewfinder, ➔ Save Setting ➔ ➔ Background Save ➔ ➔ Off ➔ |

■ Capturing

| | |
|--------------------------------------|---|
| Changing Mobile Light mode | In Photo Viewfinder, ➔ Mobile Light ➔ ➔ Select mode ➔ • Do not use Mobile Light near people's faces or look into the light yourself. |
| Adjusting camera's light sensitivity | In Photo Viewfinder, ➔ Settings ➔ ➔ ISO Sensitivity ➔ ➔ Select level ➔ • ISO Sensitivity is Auto (~800) by default. However, 800 or higher sensitivity may be applied depending on environment. |
| Changing image size | In Photo Viewfinder, ➔ Picture Size ➔ ➔ Select size ➔ |

Adjusting smile detection level

In Photo Viewfinder, ➔ **Shutter Setting** ➔ ➔ **Egao level** ➔ ➔ **Select level** ➔
 • Lower the level when detection is slow.

Adjusting color balance according to lighting conditions

In Photo Viewfinder, ➔ **Settings** ➔ ➔ **White Balance** ➔ ➔ **Select mode** ➔

Disabling shake reduction

In Photo Viewfinder, ➔ **Settings** ➔ ➔ **Shake Reducing** ➔ ➔ **Off** ➔

■ Focus

Setting Center Auto Focus

In Photo Viewfinder, ➔ **Focus Setting** ➔ ➔ **Center Auto Focus** ➔

Specifying focus point manually

In Photo Viewfinder, ➔ **Focus Setting** ➔ ➔ **Spot Auto Focus** ➔
 • A frame appears on Display; use to move frame over target focus point.

Canceling Continuous AF

In Photo Viewfinder, ➔ **Focus Setting** ➔ ➔ **Continuous AF** ➔ ➔ **Off** ➔

Canceling Chase Focus

In Photo Viewfinder, ➔ **Focus Setting** ➔ ➔ **Chase Focus** ➔ ➔ **Off** ➔

Changing Focus Mark

In Photo Viewfinder, ➔ **Focus Setting** ➔ ➔ **Focus Mark** ➔ ➔ **Select pattern** ➔



■ Correction & Preview

| | |
|---------------------------------------|--|
| Correcting portrait auto focus images | <p>Start Here After image capture, ➔ <i>Correlate to Face</i> ➔ ➔ See below</p> <ul style="list-style-type: none"> Available when Auto Save is <i>Off</i>. |
| | <p>Adjusting Face/Background Brightness</p> <p><i>Against sun</i> ➔ ➔ </p> |
| | <p>Blurring Out-of-Focus Portions</p> <p><i>Portrait</i> ➔ ➔ </p> |
| | <p>Brightening backlit subjects (Dynamic Range Adjustment)</p> <p>After image capture, </p> <ul style="list-style-type: none"> May be unavailable or require access via Options menu depending on Auto Save setting. |
| Seeking guidance for better shots | <p>After image capture, (Long)</p> <ul style="list-style-type: none"> Follow onscreen instructions. Available when Auto Save is <i>Off</i>. |

■ Panorama Picture

| | |
|--|---|
| Changing Panorama settings | <p>Start Here In Photo Viewfinder, ➔ <i>Modes</i> ➔ ➔ <i>Panorama/Scanner</i> ➔ ➔ See below</p> |
| | <p>Hiding Guides</p> <p><i>Assisting Lines</i> ➔ ➔ <i>Off</i> ➔ </p> |
| | <p>Locking Display Brightness during Image Capture</p> <p><i>AE-Lock</i> ➔ ➔ <i>Enable</i> ➔ </p> |
| Changing Panorama image preview method | <p>In Panorama preview, ➔ <i>Manual Scroll</i> or <i>Full Image</i> ➔ </p> <ul style="list-style-type: none"> Available when Auto Save is <i>Off</i>. |

■ Bluetooth® Watches

| | |
|---|---|
| Releasing shutter remotely with a Bluetooth® watch | <p>In Photo Viewfinder, press the corresponding button on Bluetooth® watch</p> <ul style="list-style-type: none"> Connect handset to a Bluetooth® watch and set Set Remote Shutter to <i>On</i> beforehand. For details, see the Bluetooth® watch guide. |
| Disabling remote shutter control via Bluetooth® watches | <p>In Photo Viewfinder, ➔ <i>Shutter Setting</i> ➔ ➔ <i>Set Remote Shutter</i> ➔ ➔ <i>Off</i> ➔ </p> <ul style="list-style-type: none"> Available when a Bluetooth® watch is registered. |



Video Camera

| | |
|--|--|
| Activating Mobile Light | In Video Viewfinder, Mobile Light On or Automatic • Do not use Mobile Light near people's faces or look into the light yourself. |
| Capturing images while recording video (still image capture) | While recording, • Captured images are saved when saving recorded clip; open them via Review or Data Folder. |
| Changing recording time/size | In Video Viewfinder, Record Time/Size For Message or Extended Video Select size |
| Enlarging Viewfinder size | In Video Viewfinder, Display Size Enlarge |
| Recording video without sound | In Video Viewfinder, Settings Microphone Off |
| Changing video encoding | In Video Viewfinder, Save Setting Video Encode or Audio Encode Select option |
| Disabling shake reduction | In Video Viewfinder, Shake Reducing Off |

Editing Images

Picture Editor

Data Folder **Pictures**
Select file **Edit**
Picture Editor **See below**

Changing Text/Outline Color

Paste **Select text color**
Select outline color

Adding Text

Paste **Free Text** **Enter text**
Move text

Adding Dates

Paste **Date** **Move date**

Adding Stamps

Stamp **Select stamp** **Move stamp**

Correcting Image Parameters

Correction **Select type**

Rotating Images

Rotate **Select type**

Converting File Format

File Format **File Format**
Select format
 • Changing file format may affect file size/image quality.
 • To return to Picture Editor menu, press .

Changing File Size

File Format **File Size** **Select size**
 • Changing file size may affect image quality.
 • To return to Picture Editor menu, press .

Using additional editing options



Composite

| | |
|--------------------------|---|
| Combining reduced images | Start Here → Data Folder → Pictures → Select file → Edit → Composite → See below |
| | Creating Split Picture <i>SplitPicture 480x854 or SplitPicture 240x320</i> → <Empty> → Select file → When finished, Enter name → Save here → • Repeat from selecting <Empty> as needed. |
| | Previewing Split Picture While creating Split Picture, View Composite → |
| | Changing Images While creating Split Picture, select image → → Select another → |
| | Deleting Images While creating Split Picture, select image → → Remove → Yes → |

DPOF

| | |
|-------------------------|---|
| Changing print settings | Start Here → Settings → Connectivity → Memory Card → DPOF → See below |
| | Adding Dates to Prints Settings → Add Date → On → |
| | Creating an Index Print Settings → Index Print → On → |
| | Resetting Reset Settings → Yes → |





Mobile Camera

? Mobile camera won't activate/ shuts down automatically

- Battery may be low. Charge battery or install a charged battery.
- Leaving handset at high temperature may cause camera area to heat up, disabling mobile camera activation; wait a while and retry.
- Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown; wait a while and retry.

? Cannot use Background Save or Auto Save

- Background Save/Auto Save is not available when Save Pictures to is set to **Ask Each Time**.



Display went dark during image capture

- 935SH camera has built-in mechanical shutter and ND filter. Strong shocks to handset during image capture may close mechanical shutter for camera protection, resulting in blank Viewfinder. Reactivate mobile camera to reopen the shutter.



Image is dark or distorted

- Avoid capturing strong light sources (sun, lamps, etc.) in the background.



Captured image appears all white

- When Long Exposure is active (⏱, etc. appears), images captured in daylight or good light appear all white.

Editing Images



Cannot save/send edited images

- Edited images may be too large to save or send via mail.

DPOF



Cannot specify print settings properly

- If Memory Card image files have been deleted or renamed on PCs or other devices, reset print settings and start over with settings.