

Data Folder	12-2
Opening Files	12-3
Managing Files & Folders	12-4

Memory Card.....	12-5
Using Memory Card	12-5
Additional Functions	12-8
Troubleshooting.....	12-10

12

Data Folder & Memory Card



Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Large still images on Memory Card (images captured with save location set to DCIM)
Ring Songs-Tones*	Downloaded melodies and other sound files
S! Appli*	S! Applications
Widget*	Widgets
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books*	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Decoration Call*	Decoration Call files created on handset or obtained via mail
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

*Contains corresponding Yahoo! Keitai menu shortcut.

Checking Memory Status


☉ ➔ Data Folder ➔ ☉ ➔ Memory Status ➔ ☉ ➔ Phone Memory or Memory Card ➔ ☉

- The category **Others**: includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.



Opening Files


1 Data Folder

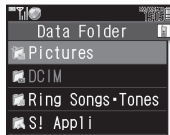

- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press .

2 Select folder

To open a sub folder, select it and press .

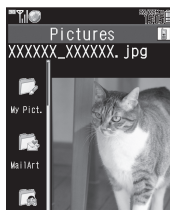

File List

3 Select file



- The content plays or appears.
- To return to file list, press .

Handling Open Images

- Press to enlarge, or press / or / to open next or previous image. Press to rotate 90 degrees clockwise.

Attaching to Mail

After , select file **Send/ Blog** **As Message**

- If a confirmation appears, follow onscreen instructions.

 
Copy Protected Files (or)

- Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.

1 In file list, select file



2 Slide Show

- Slide Show starts.

3 Slide Show stops

Changing Interval

After , **Speed** **Select speed**

- When Speed is set to **Manual**, press / or / to advance or reverse frame.

Note

- Backlight stays on during Slide Show; exit to save battery power.

Advanced

- Switching file list view
- Changing image quality
- Changing Slide Show settings
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.12-8 - 12-9)



Managing Files & Folders

Adding Folders

May be unavailable for some folders.

 
- 1 → **Data Folder** → → → → **Select folder** →



File List

- 2 If **Download** is selected or folder is empty, skip ahead to 4.

- 3 **Manage Items** →



- 4 **Create Folder** → → **Enter name** →

Moving/Copying Files

Some files may not be moved/copied.

- 1 In file list, select file →
- 2 **Move or Copy** → → **Phone or Memory Card** →
 - For still images, select **Pictures** or **Mail Art** and press .
- 3 **Select folder** →
- 4 **Move here or Copy here** →

Selecting Multiple Files

- 1 In file list,
- 2 **Select file** →
 - Repeat 2 as needed. (To uncheck, select a file with and press .)

Hiding Folders

Restrict access to created folders.

Only handset folders can be hidden.

- 1 In file list, select folder →
- 2 **Set Secret** → → **Enter Handset Code** →

Accessing Secret Folders (Unlock Temporarily)

[File List] → **Unlock Temporarily** → → **Enter Handset Code** →

Canceling Secret

Unlock Secret folders temporarily and select Secret folder → → **Unset Secret** → → **Enter Handset Code** →

Advanced

- Renaming folders ● Opening file properties ● Renaming files ● Sorting files ● Deleting files & created folders ● Handling SVG files (P.12-9)

Using Memory Card

Use microSD™/microSDHC™ Memory Card (hereafter "Memory Card") to save and organize files for use on 936SH. Use recommended Memory Cards only. For details, see P.15-23 "microSD™ Memory Card Compatibility."


Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never remove Memory Card or battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.


Inserting & Removing

Power handset off first.

1 Unlock Battery Cover

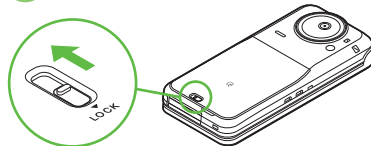


2 Remove cover

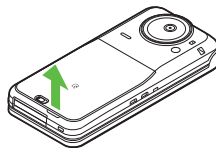


- Lift as shown.

3 Remove battery

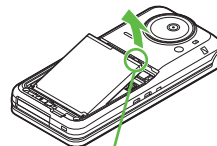

- Take hold of Battery Tab here and lift as shown.


4 Insert card

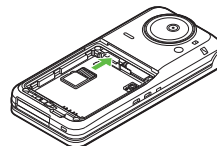

- With terminal side up, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.



5 Insert battery

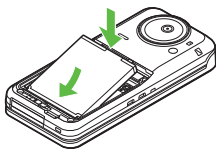

- With logo side up, fit tabs into battery cavity slots.


6 Close cover



Press firmly along edges

- Fit cover top into slot, then press down firmly.

7 Lock cover

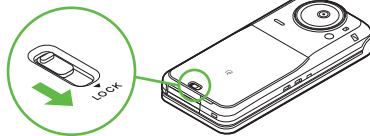


- Slide switch as shown until it clicks.
- Close cover firmly. Water may seep inside handset when there is debris between cover and base.

If Appears after Power On

- Memory Card may not be inserted properly; reinsert the card.

Removing Memory Card


- Gently push in card and release it; card pops out. Pull card straight out gently.

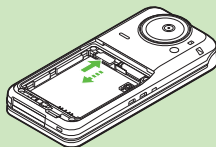

Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.


- 1 **Settings** **Connectivity** **Memory Card**

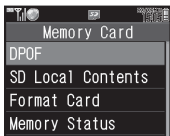

- 2 **Format Card** **Yes**

- Offline Mode is set. Handset transmissions are suspended until format is complete.

- 3 **Enter Handset Code**

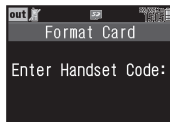


- 4 **Yes**
- To cancel, choose **No** and press .

Precaution

- Never remove Memory Card or battery while formatting; may cause damage.

Opening Memory Card Files

- 1 **Data Folder**
- 2 **Change to MemoryCard**

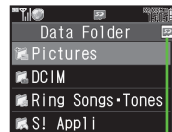

appears

- Memory Card Data Folder opens.

- 3 **Select folder**

To open a sub folder, select it and press .

- 4 **Select file**

Advanced

- Using HTML files on Memory Card (P.12-9)



File/Folder View Settings

Switching file list view	<p>● → <i>Data Folder</i> → ● → Select folder → ⊖</p> <p>→ <i>Manage Items</i> → ● → <i>Change List View</i> →</p> <p>● → Select option → ●</p>
Changing image quality	<p>● → <i>Data Folder</i> → ● → Select folder → ●</p> <p>→ Select file → ● → ⊖ → <i>Switch Display</i> (<i>Picture Quality</i> for Flash® files) → ● → Select quality → ●</p>
Changing image transition effect when using	<p>● → <i>Data Folder</i> → ● → Select folder → ●</p> <p>→ Select file → ● → ⊖ → <i>Switch Effect</i> → ●</p> <p>→ Select effect → ●</p>
Changing Slide Show settings	<p>Start Here ● → <i>Data Folder</i> → ● → Select folder</p> <p>→ ● → Select file → ⊖ → <i>Slide Show</i> → ●</p> <p>→ ⊖ → See below</p>
	<p>Playing Once</p> <p><i>Repeat</i> → ● → <i>Off</i> → ●</p>
	<p>Disabling Music</p> <p><i>BGM Settings</i> → ● → <i>Switch On/Off</i> → ● → <i>Off</i> → ●</p>
	<p>Changing Music</p> <p><i>BGM Settings</i> → ● → <i>Play Ring Tones</i> → ●</p> <p>→ Select folder → ● → Select file → ●</p>
	<p>Changing Key Illumination Pattern</p> <p><i>Illumination</i> → ● → <i>Key Pattern</i> → ● →</p> <p>Select pattern → ● → ⊙</p>
<p>Disabling Key Illumination</p> <p><i>Illumination</i> → ● → <i>Switch On/Off</i> → ● →</p> <p><i>Off</i> → ● → ⊙</p>	

Changing Slide Show settings	<p>Start Here ● → <i>Data Folder</i> → ● → Select folder</p> <p>→ ● → Select file → ⊖ → <i>Slide Show</i> → ●</p> <p>→ ⊖ → See below</p>
	<p>Hiding Softkeys</p> <p><i>SW Guide Display</i> → ● → <i>Off</i> → ●</p>
	<p>Setting Backlight to Turn Off after a Period of Time</p> <p><i>Always Backlight</i> → ● → <i>Off</i> → ●</p> <ul style="list-style-type: none"> Choosing <i>Off</i> applies Display Backlight settings. (Display remains on during Slide Show regardless of Display Saving setting.)
Showing Softkeys in image view	<p>Changing Image Transition Effect</p> <p><i>Switch Effect</i> → ● → Select effect → ●</p>
	<p>● → <i>Data Folder</i> → ● → Select folder → ●</p> <p>→ Select file → ● → ⊖ → <i>SW Guide Display</i></p> <p>→ ● → <i>On</i> → ●</p>
Using Files/Folders	
Using files as Wallpaper	<p>● → <i>Data Folder</i> → ● → Select folder → ● →</p> <p>Select file → ⊖ → <i>Set as Wallpaper</i> → ● → ●</p> <ul style="list-style-type: none"> For images smaller or larger than Display, select an option and press ●.
Using files as ringtones	<p>● → <i>Data Folder</i> → ● → Select folder → ●</p> <p>→ Select file → ⊖ → <i>Set as Ringtone</i> → ● → ●</p> <p>Select item → ●</p> <ul style="list-style-type: none"> If prompted, enter ring time and press ●. If a confirmation appears, follow onscreen instructions.



Using files as ringvideos	<ul style="list-style-type: none"> ● → Data Folder → ● → Videos → ● → Select file → ⊞ → Set as Ring Video → ● → Select item → ● ● If prompted, enter ring time and press ●.
Saving Phone Book entries	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ⊞ → Save to Phone Book → ● ● → As New Entry → ● → Complete other fields → ▾ ● To add to an existing entry, select As New Detail.
Activating mobile camera, etc. in corresponding folders	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → ⊞ → Take Picture, Record Video or Record Voice → ●

Managing Files/Folders

Renaming folders	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select folder → ⊞ → Manage Items → ● → Rename → ● → Enter name → ● ● Assign different names to folders within a layer.
Opening file properties	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ⊞ → Details → ●
Renaming files	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ⊞ → Manage Items → ● → Rename → ● → Enter name → ●
Sorting files	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → ⊞ → Manage Items → ● → Sort → ● → Select method → ●

Deleting files & created folders	<ul style="list-style-type: none"> Start Here ● → Data Folder → ● → Select folder → ● → See below
	<ul style="list-style-type: none"> Single Files Select file → ⊞ → Delete → ● → Yes → ●
Handling SVG files	<ul style="list-style-type: none"> Folder & Files Within Select folder → ⊞ → Delete → ● → Enter Handset Code → ● → Yes → ●
	<ul style="list-style-type: none"> Line Scroll ⊞
	<ul style="list-style-type: none"> Page Scroll 2 (Up), 8 (Down), 6 (Right), 4 (Left)
	<ul style="list-style-type: none"> Zoom 1 (Zoom out), 3 (Zoom in)
	<ul style="list-style-type: none"> Rotate 7 (Counterclockwise), 9 (Clockwise)
	<ul style="list-style-type: none"> Key Action Mode 0
	<ul style="list-style-type: none"> Default View 5

Memory Card

Using HTML files on Memory Card	<ul style="list-style-type: none"> ● → Settings → ● → Connectivity → Memory Card → ● → SD Local Contents → ● → Select title → ●
---------------------------------	---



Managing Files/Folders

? Cannot copy files

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)

? Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.

? Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 241 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.

? Cannot use some characters in file/folder names

- Single-byte Symbols $\$, /, ;, :, ,, <, >, /, ?, \#$ and " are not supported.

