

Date & Time	14-2
Date & Time	14-2
Display & Illumination	14-3
Language	14-3
Image & Text	14-3
Display & Backlight	14-3
Standby Display	14-4
Key Backlight	14-4
Incoming Transmissions	14-5
Handset Response	14-5

Sounds	14-6
System Sounds	14-6
Additional Sound Settings	14-6
Connectivity	14-7
Network	14-7
IP Service	14-8
Location Information	14-8
Reset	14-9
Restoring Default Settings	14-9

14


































































Handset Customization



Date & Time Settings

Date & Time

[Start Here](#)   **Settings**   **In Phone menu, Date & Time**  

Setting the date and time	<i>Set Date/Time</i>   Enter the year  Enter the month  Enter the day  Enter the time  
Correcting Clock manually	<i>Time Correction</i>   Manual   Yes   Yes  
Disabling auto Clock correction	<i>Time Correction</i>   Auto Corr. Setting   Off  
Setting auto Clock correction timing	<i>Time Correction</i>   Auto Corr. Setting   On   Select item     (<input type="checkbox"/> <input checked="" type="checkbox"/>)    
Activating Daylight Saving	<i>Daylight Saving</i>   On  
Changing Time Zone	<i>Set Time Zone</i>   Select area  
Adding custom time zone	<i>Set Time Zone</i>     Enter city name   + or -   Enter time difference  
Changing time format to 12 hour	<i>Time Format</i>   12 Hour  
Changing date format	<i>Date Format</i>   Select option  
Starting the Calendar week on Monday	<i>Calendar Format</i>   Monday-Sunday  



⌘ Display & Illumination Settings 1

Language

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ Phone menu

Switching interface between Japanese and English

Language or 言語選択 ➔ ● ➔ **English** or 日本語 ➔ ●

Image & Text

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Display** ➔ ●

Showing preloaded images for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Preset Animation (or Pattern 1 to Pattern 3)** ➔ ●

Showing Data Folder images for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Select folder** ➔ ● ➔ **Select image** ➔ ● ➔ **Specify image area** ➔ ●
 ● Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Customized Screen** ➔ ● ➔ ●
 ● Not available for **Power On** or **Power Off**.

Selecting image enhancement option for Standby and video playback

Vivid Mode ➔ ● ➔ **Select option** ➔ ●

Changing font of numbers entered in Standby

Dial Number ➔ ● ➔ **Select pattern** ➔ ●

Showing a message each time handset is powered on

Greeting Message ➔ ● ➔ **Edit Message** ➔ ● ➔ **Enter message** ➔ ● ➔ **Switch On/Off** ➔ ● ➔ **On** ➔ ●

Display & Backlight

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Display** ➔ ●

Disabling display transition effects

Display Effects ➔ ● ➔ **Off** ➔ ●

Changing Display/key Backlight illumination time

Backlight ➔ ● ➔ **Time Out** ➔ ● ➔ **Select time** ➔ ●

Changing Display Brightness

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔ **Adjust level** ➔ ●

Canceling/activating Light Sensor

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔  (/) ➔ ●

Changing inactivity time after which Display turns off

Display Saving ➔ ● ➔ **Select period** ➔ ●



🔧 Display & Illumination Settings 2

Standby Display

[Start Here](#) → Settings → In Phone menu, *Display* → Standby Display →

Changing Clock/Calendar *Clock/Calendar* → Select type →

Showing Network service provider name in Standby *Show Operator Name* → On →

Hiding Pedometer in Standby *Pedometer* → Off →

Key Backlight

[Start Here](#) → Settings → Phone menu

Disabling key Backlight illumination *Set Key Light* → Off →

Changing Key Illumination pattern by event *Sounds & Alerts* → *Set Key Illumi* → Select item → Key Pattern → Select pattern →

Disabling Key Illumination by event *Sounds & Alerts* → *Set Key Illumi* → Select item → Switch On/Off → Off →



✂ Incoming Transmission Settings

Handset Response

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Phone menu, **Sounds & Alerts** ➔ ●

Changing ringtone volume	Volume ➔ ● ➔ Select item ➔ ● ➔ Adjust level ➔ ●
Setting illumination color	Event Light ➔ ● ➔ Select item ➔ ● ➔ Light Color ➔ ● ➔ Select color ➔ ●
Changing Key Illumination patterns	Event Light ➔ ● ➔ Select item ➔ ● ➔ Key Pattern ➔ ● ➔ Select pattern ➔ ●
Selecting illumination option	Event Light ➔ ● ➔ Select item ➔ ● ➔ Switch On/Off ➔ ● ➔ On, Link to Sound or Off ➔ ● • For Link to Sound , press ● again.
Enabling/disabling illumination for missed transmissions	Status Light ➔ ● ➔ Select item ➔ ● ➔ Switch On/Off ➔ ● ➔ On or Off ➔ ●
Setting illumination color for missed transmissions	Status Light ➔ ● ➔ Select item ➔ ● ➔ Light Color ➔ ● ➔ Select color ➔ ●
Answering calls with other keys	Any Key Answer ➔ ● ➔ On ➔ ● • Use - , , , , , , or in addition to .



Sound Settings

System Sounds

Start Here → Settings → In Phone menu, *Sounds & Alerts* →

Enabling Keypad Tones	<i>System Sounds</i> → Keypad Tones → Select tone →
Changing S! Circle Talk tone	<i>System Sounds</i> → S! Circle Talk → Select tone →
Changing other System Sounds	<i>System Sounds</i> → Select item → Tone or Sound → Select folder → Select tone/file → • For files with limited usage period, choose Yes and press .
Disabling System Sounds	<i>System Sounds</i> → Select item → Tone or Sound → Off → • Not available for <i>S! Circle Talk</i> .
Changing System Sound duration	<i>System Sounds</i> → Select item → Duration → Select/enter time → • Not available for <i>Keypad Tones</i> or <i>S! Circle Talk</i> .
Changing System Sound volume	<i>Volume</i> → General Volume → Adjust level →

Additional Sound Settings

Start Here → Settings → Phone menu

Disabling Speaker when using Headphones	<i>Ringer Output</i> → Earphone →
Activating Speaker surround	<i>Sounds & Alerts</i> → Surround → On →



Connectivity Settings 1

Network

[Start Here](#) **Network**

Selecting a Network manually	<i>Select Network</i> <i>Manual</i> <i>Select Network</i>
Adding preferred Networks	<i>Select Network</i> <i>Set Preferred</i> <i>Select target location</i> <i>Insert</i> <i>Select Network</i>
Adding preferred Networks to the end	<i>Select Network</i> <i>Set Preferred</i> <i>Add to End</i> <i>Select Network</i>
Deleting preferred Networks	<i>Select Network</i> <i>Set Preferred</i> <i>Select Network</i> <i>Delete</i>
Adding Networks	<i>Select Network</i> <i>Add New Network</i> <i>Add</i> <i>Enter country code</i> <i>Enter Network code</i> <i>Enter name</i> <i>Select NW Type</i> <i>Select type</i> <ul style="list-style-type: none"> • After selecting Add New Network and pressing , Network list appears if Network has already been added. To add more, press again and proceed.
Editing Networks	<i>Select Network</i> <i>Add New Network</i> <i>Select Network</i> <i>Change</i> <i>Edit in the same manner as adding Networks</i>
Deleting Networks	<i>Select Network</i> <i>Add New Network</i> <i>Select Network</i> <i>Delete</i>
Switching Network services manually	<i>Select Service</i> <i>Manual</i> <i>Select service</i>
Retrieving Network Information	<i>Retrieve NW Info</i> <i>Yes</i>
Checking Network status	<i>Network Info</i>
Editing access point names for external devices	<i>External Device</i> <i>Select name</i> <i>Edit</i>
Clearing access point names for external devices	<i>External Device</i> <i>Reset</i> <i>Enter Handset Code</i> <i>Yes</i>



🔧 Connectivity Settings 2

IP Service

[Start Here](#) → Settings → In Phone menu, Locks →

Disabling IP Service

IP Service Setting → Off → Enter Handset Code →

- When **Off**, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.

Location Information

[Start Here](#) → Settings → Network → Location Info →

Adding/editing Location Information destination URLs

URL Setting → <Empty> (or select URL) → Edit → Enter URL →

- Default URL is not editable.

Specifying Location Information destination URL

URL Setting → Select URL →

Viewing Location Information destination URL

URL Setting → Select URL → Display →

Deleting Location Information destination URLs

URL Setting → Select URL → Delete → Yes →

Hiding Location Information

Datum On/Off → Off → Enter Handset Code →

Changing Location Information confirmation option

Location Property → Select option →

Suppressing Information window after sending Location Information automatically

Inform Location → Do not Show → Enter Handset Code →

Opening sent Location Information records

Offer Loc. Logs → Select record →

Deleting sent Location Information records

Offer Loc. Logs → Select record → Delete or Delete All → Yes →



Reset Settings

Restoring Default Settings

[Start Here](#) → **Settings** → **In Phone menu, Master Reset**

Restoring default handset settings	<p>Reset Settings → Enter Handset Code → Yes → Yes</p> <ul style="list-style-type: none"> Some default settings may not be restored.
Clearing all Phone Book entries, Data Folder files, etc.	<p>Reset All → Enter Handset Code → Yes → Yes</p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

