 


Music Player & S! Appli

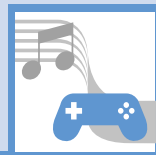

About Music Player	9-2
Playback Windows	9-3
Downloading Music	9-4
Music Playback.....	9-5
Playing Music.....	9-5
Using Playlists	9-6
S! Appli.....	9-8
About S! Appli.....	9-8
Downloading S! Appli.....	9-8
Activating S! Appli	9-8
Advanced Features	9-10
Music Player.....	9-10
S! Appli	9-12

9

 


About Music Player

Use Music Player to play and organize songs on handset.

- Access the Internet to download music.
- Also play videos with Music Player. When *Auto-change Screen* is set to *ON*, turn handset to its left side to view in full screen mode.

- Some files are unplayable depending on their format.
- Alarm notification, received calls, etc. while playing music will pause play. For videos, select the same video to resume watching.

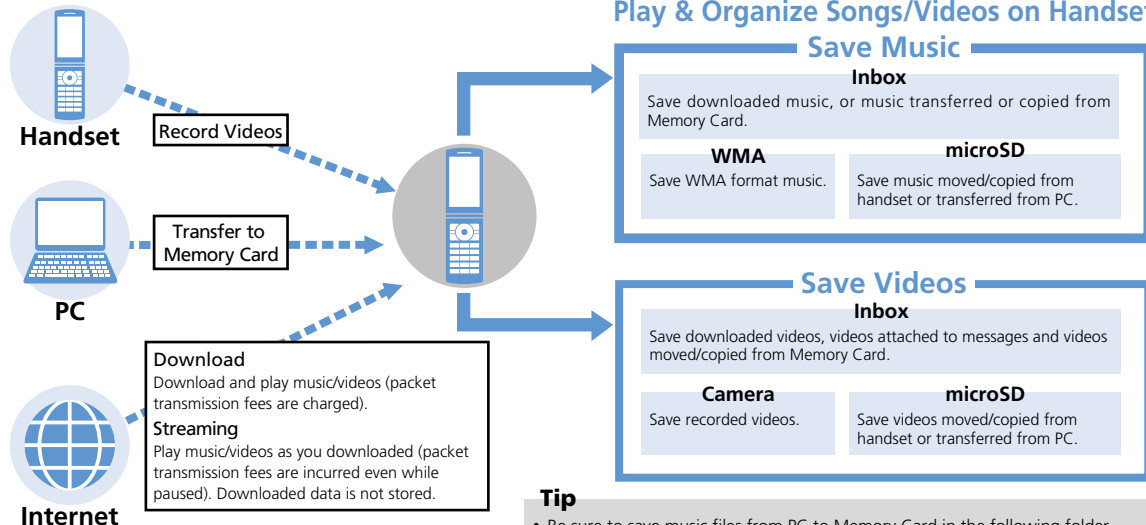


Tip

- Be sure to save music files from PC to Memory Card in the following folder.
 ¥PRIVATE¥MYFOLDER¥My Items¥Music



 Playback Windows

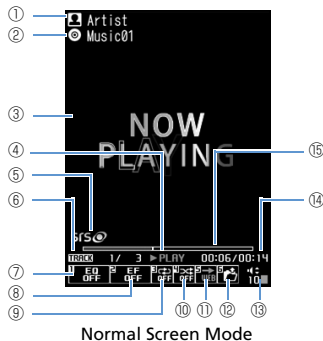

Normal Screen Mode



Full Screen Mode (For Video Playback)

①	Artist Name <Creator> ¹
②	Title
③	Playback Image or Jacket Image <Video> ¹
④	Playback Status ▶PLAY Play ⏸PAUSE Pause ⏏FF Fast Forward ⏮REWIND Rewind ▶SLOW Slow Play ² ⏪PLAY Fast Play ²
⑤	Sound Effect on (always on)
⑥	Current Track/Total Tracks in Folder (Current File Number/Total Files in Folder)
⑦	Equalizer EQ OFF Pop Live Vocal Break CLLight Woods Ballad Rap Concert Rock Kiss Loud Modes by Music Type/Genre User1 User2 User3 User settings
⑧	Sound Effect EF OFF TruMute CSS14 BassConte Alternative Clearblue Voice Ste Beat Wave Extreme LiveBall Modes by Song Type User1 User2 User3 User settings
⑨	Repeat Mode OFF ⏮ Repeat All ³ ⏮ Repeat One ³
⑩	Shuffle Mode ⌘ ON ³ OFF


⑪	To Web Connect to the URL in the song.
⑫	Song/file Selection
⑬	Volume
⑭	Elapsed Playback Time/Total Playback Time
⑮	Playback Position ⏮ indicates the current playback position. Use ⏮ to move playback position during pause.

- 1 Descriptions in < > apply to video playback.
- 2 Available during video playback.
- 3 Available during music playback.



Downloading Music

- Check the fees, expiration date, etc. on the download site.

1  ⇒ **Music** ⇒  ⇒ **Download Music** ⇒  ⇒ **YES** ⇒ 

2 Follow onscreen instructions

Transferring from PC

- Convert music CD data to WMA format and store to memory card using Windows Media® Player.

1  ⇒ **Settings** ⇒  ⇒ **External Connection** ⇒  ⇒ **USB Mode Setting** ⇒  ⇒ **MTP Mode** ⇒ 

2 Connect handset to your PC with a USB cable

Music can now be transferred by operation from your PC. See the Help for “Windows Media® Player” for details.

3 Transfer WMA data from your PC to memory card

4 Once transferred, remove USB cable from your PC and handset Remove from PC according to method for the OS.

Note

- Windows Media® Player 10 is unsupported. Use Windows Media® Player 11.

Tip

 
- After transferring WMA data, return *USB Mode Setting* to *Communication Mode*.



Playing Music


1 → **Music** →

2 Select a folder →



Song List

 3 Select a song →

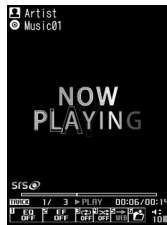

Music Playback Window
(Video Playback Window)

Tip

- Alternatively, in Standby, press and hold to start Music Player. Play resumes from where it was paused last.
- Use any Bluetooth® compatible audio device (P. 13-5).
- To play videos downloaded or recorded with camera:
 → **Data Folder** → → **Videos** →
 → Select a folder → → Specify a video to play
- When video is about to be played the first time with **Auto-change Screen** set to **OFF**, a confirmation appears asking whether to play video in Full Screen Mode all the time. Select **YES** or **NO** and press . Confirmation no longer appears.

Playback Operations

While Handset is Open

Pause/Play	or
Adjust Volume	or press and hold
Play from Beginning Play Previous Song or Video	or press and hold

Play Next Song/Video	or press and hold
Rewind	Press and hold
Fast Forward	Press and hold
Move Playback Position	during pause
Open/Close Menu	
Select a Song/File	or
Equalizer ¹	
Sound Effect ¹	
Repeat Mode ¹	
Shuffle Mode ¹	
Access the Internet	
Toggle Normal Screen and Full Screen ^{2 3 4}	
Toggle Jacket Image	or When there are several jacket images.
End Playback	

1 Press key to toggle on/off.

2 Unavailable during streaming.

3 Available when playing videos.

4 Available when **Auto-change Screen** is set to **OFF**.



While Handset is Closed

Adjust Volume	⇨ 77- or ⇨
Playing from Beginning Play Previous Song or Video	Press and hold ⇨77-
Play Next Song/Video	Press and hold ⇨

Using Playlists

Use playlists to play songs by genre or by artist, or gather your favorite songs and arrange them in your favorite order.

- Songs saved on memory card can also be added to playlists.

Creating a Playlist

- 1 ⇨ **Music** ⇨ ⇨ **Playlist** ⇨



Playlists Window

- 2 ⇨ **Create Playlist** ⇨

- 3 Select a folder ⇨ ⇨ Select a song ⇨

 
Repeat this step to add other songs.

- 4 When all songs are selected ⇨ ⇨ Enter playlist name ⇨

Playing Songs from Playlist

- 1 [Playlists] window ⇨ Select a playlist ⇨

To play all songs in the playlist, press .



Playlist

- 2 Select a song ⇨

Songs play back in the listed order.

Tip

- To play all songs, select **All Tracks** in Playlists window and press (twice).

More Features

Advanced

Playing Music/Video

- Resume Playback
- Use Menu
- File Information
- Repeat
- Set Preferred Sound Quality
- Set Preferred Sound Effect
- Specify Play Start Position
- Change Video Playback Speed
- Use a Different Function While Playing Music
- Open Lyrics
- Open Jacket Image
- Check Operation Methods

P. 9-10

Organizing Songs

- Set a Song as Ringtone
- Search for Songs
- Change Order of Songs
- Check Volume of Saved Music
- Delete All Music in WMA Folder

P. 9-11

Playlists

- Add Songs to Playlist
- Change Order of Playlist Songs
- Cancel Playlist Songs
- Edit a Playlist Name
- Add All Music in Memory Card to Playlist



- Copy a Playlist
- Check Playlist Information
- Delete Playlists

(▶ P. 9-11)

Customize

Playback Window

- Change Design of Playback Window
- Set Image Display Size

(▶ P. 14-25)



About S! Appli

S! Appli are applications designed for SoftBank handsets. Download games and other applications.

About Lifestyle-Appli

Handset includes Osaifu-Keitai®-compatible S! Appli "Lifestyle-Appli" (P. 11-3). Change Lifestyle-Appli settings as any other S! Appli.

About Network S! Appli

Since network S! Appli require network (Internet) connection, transmission fees are incurred. A confirmation may appear when an application is connecting to the network. Follow onscreen instructions.

Tip

- For information on transmission fees, contact SoftBank Mobile Customer Center, General Information (P. 15-61).

About License Information

To check Java™ and JBlend™ license information:

- 1 ⇒ **S! Appli** ⇒ ⇒ **Information** ⇒

Downloading S! Appli

- 1 ⇒ **S! Appli** ⇒ ⇒ **S! Appli List** ⇒ ⇒ **Download S! App** ⇒ ⇒ **YES** ⇒

Follow onscreen instructions.

Note

- Check the battery level before downloading S! Appli. If the battery level is low, download may fail.
- If you replace USIM Card due to damage or loss, downloaded S! Appli are no longer available.
- If you initialize handset when using an S! Appli moved to Memory Card, the S! Appli will no longer be usable. You will need to download it again.
- When using an S! Appli moved to Memory Card, using the procedures below will resave the S! Appli to your handset and the S! Appli in Memory Card will no longer be usable.
 - Download the same S! Appli with no Memory Card inserted
 - Download the same S! Appli with different Memory Card inserted
 Use an S! Appli resaved to handset as it is in handset, or again move it to Memory Card.

Tip

- For how to download Lifestyle-Appli, see P. 11-2.
- See S! Appli's Help menu or the download site for operational information.

Activating S! Appli

- 1 ⇒ **S! Appli** ⇒ ⇒ **S! Appli List** ⇒



S! Appli List

- 2 Select an application ⇒

Tip

- S! Appli is paused when a call arrives. When the call ends, a prompt appears. Select **Resume** to resume the S! Appli.
- To end S! Appli: While running, ⇒ **End** ⇒



More Features

Advanced

S! Appli


- Check S! Appli Information
- Check Volume of Saved S! Appli
- Delete an S! Appli

 P. 9-12)

Customize


When Running S! Appli

- Set Sound Volume
- Set Vibration
- Set Backlight
- Set Blinking of Backlight
- Allow/Prohibit S! Appli to Connect to Network
- Allow S! Appli to Read User Data
- Allow/Prohibit S! Appli to Write Personal Information
- Allow S! Appli to Obtain Location Information
- Reset Security Settings of S! Appli

 P. 14-25)

S! Appli

- Reset S! Appli Settings
- Delete All S! Appli

 P. 14-26)



Music Player

Start Here

[Music Playback] window	P. 9-5
[Video Playback] window	P. 9-5
[Song List]	P. 9-5
[Playlists] window	P. 9-6
[Playlist]	P. 9-6

Playing Music/Video

Resume Playback

→ **Music** → ● → **Resume Play** → ●

Use Menu

[Music Playback] window/[Video Playback] window → → Select an item → ●*
*Press to toggle.

File Information

[Music Playback] window/[Video Playback] window → → **Detail Info** → ● → **File Property** or **Video Info** → ●

Repeat

[Music Playback] window → → **Action Setting** → ● → **Repeat Setting** → ● → **All Repeat** or **Single Repeat** → ●

Set Preferred Sound Quality

[Music Playback] window/[Video Playback] window → → **Action Setting** → ● → **Sound Effect** → ● → **Equalizer** → ● → Select user setting 1 to 3 → → Set level for each wavelength → ●

- To return sound quality to initial state
→ Select user setting 1 to 3 → (twice) → ●

Set Preferred Sound Effect

[Music Playback] window/[Video Playback] window → → **Action Setting** → ● → **Sound Effect** → ● → **Effect** → ● → Select user setting 1 to 3 → → Set level for each effect → ●

- To set by existing effects
→ Select user setting 1 to 3 → → → Select effect → ●
- To return sound effect to initial state
→ Select user setting 1 to 3 → (twice) → ●

Specify Play Start Position

[Music Playback] window → → **Play Menu** → ● → **Position to Play** → ● → Specify play start position with → ●

Change Video Playback Speed

[Video Playback] window → → **Play Menu** → ● → **Fast or Slow** → ●
 Press to return to normal speed.

Use a Different Function While Playing Music

[Music Playback] window → → **Switch to BGM** → ● → Activate another function
 In Standby, press and hold during BGM playback to end Music Player.

Open Lyrics

[Music Playback] window → → **Detail Info** → ● → **Lyric** → ●
 Use to toggle between lyrics.

Open Jacket Image

[Music Playback] window → → **Detail Info** → ● → **Jacket Image** → ●
 Use to toggle jacket images.



Check Operation Methods

[Video Playback] window \rightarrow $\sqrt{\text{R}}$ \rightarrow **Help** \rightarrow ●

Organizing Songs

Set a Song as Ringtone

[Song List] \rightarrow Select a song \rightarrow $\sqrt{\text{R}}$ \rightarrow **Select Ring Tone** \rightarrow ● (\rightarrow \rightarrow to specify play start position \rightarrow ●) \rightarrow Select ringtone item \rightarrow ●

Search for Songs

[Song List], [Playlists] window or [Playlist] \rightarrow $\sqrt{\text{R}}$ \rightarrow **Search** \rightarrow ● \rightarrow **Title** \rightarrow ● \rightarrow Enter condition \rightarrow ●
 \rightarrow Select a song from search results and press ● to play it.

Change Order of Songs

[Song List] / [Playlist] \rightarrow $\sqrt{\text{R}}$ \rightarrow **Sort** \rightarrow ●
 \rightarrow Select a criterion \rightarrow ●

Check Volume of Saved Music

[Song List] \rightarrow $\sqrt{\text{R}}$ \rightarrow **Memory Info** \rightarrow ●

Delete All Music in WMA Folder

$\sqrt{\text{M}}$ \rightarrow **Music** \rightarrow ● \rightarrow **WMA** \rightarrow ● \rightarrow $\sqrt{\text{R}}$
 \rightarrow **Delete All** \rightarrow ● \rightarrow Enter Security Code
 \rightarrow ● \rightarrow **YES** \rightarrow ●

Playlists

Add Songs to Playlist

[Playlist] \rightarrow $\sqrt{\text{R}}$ \rightarrow **Edit Playlist** \rightarrow ● \rightarrow **Add Music** \rightarrow ● \rightarrow Select a folder \rightarrow ●
 \rightarrow Select songs \rightarrow ● \rightarrow $\sqrt{\text{R}}$ \rightarrow **YES** \rightarrow ●
 \rightarrow The songs you selected are added at the end of the playlist.

Change Order of Playlist Songs

[Playlist] \rightarrow Select a song \rightarrow $\sqrt{\text{R}}$ \rightarrow **Edit Playlist** \rightarrow ● \rightarrow **Sort Playlist** \rightarrow ● \rightarrow Select a position \rightarrow ●

Cancel Playlist Songs

[Playlist] \rightarrow Select a song \rightarrow $\sqrt{\text{R}}$ \rightarrow **Edit Playlist** \rightarrow ● \rightarrow **Release Settings** \rightarrow ●
 ● To Select **Release This**
 \rightarrow **Release This** \rightarrow ● \rightarrow **YES** \rightarrow ●
 ● To Select **Release Selected**
 \rightarrow **Release Selected** \rightarrow ● \rightarrow Select songs
 \rightarrow ● \rightarrow $\sqrt{\text{R}}$ \rightarrow **YES** \rightarrow ●
 ● To Select **Release All**
 \rightarrow **Release All** \rightarrow ● \rightarrow Enter Security Code
 \rightarrow ● \rightarrow **YES** \rightarrow ●

Edit a Playlist Name

[Playlists] window \rightarrow Select a playlist \rightarrow $\sqrt{\text{R}}$ \rightarrow **Edit Playlist Name** \rightarrow ● \rightarrow Edit playlist name \rightarrow ●

Add All Music in Memory Card to Playlist

[Playlists] window \rightarrow $\sqrt{\text{R}}$ \rightarrow **Update All Tracks** \rightarrow ● \rightarrow **YES** \rightarrow ●

Copy a Playlist

[Playlists] window \rightarrow Select a playlist \rightarrow $\sqrt{\text{R}}$ \rightarrow **Copy to Playlist** \rightarrow ●



Check Playlist Information

[Playlists] window → Select a playlist → → **Playlist Info** → ●

Delete Playlists

[Playlists] window → Select a playlist → → **Delete Playlist** → ●

- To Select *Delete This*
→ **Delete This** → ● → **YES** → ●
- To Select *Delete Selected*
→ **Delete Selected** → ● → Select playlists
→ ● → → **YES** → ●
- To Select *Delete All*
→ **Delete All** → ● → **YES** → ●

Delete an S! Appli

[S! Appli List] → Select an S! Appli →
→ **Delete** → ● → **YES** → ●

S! Appli

Start Here

[S! Appli List] P. 9-8

Check S! Appli Information

[S! Appli List] → Select an S! Appli →
→ **Properties** → ●

Check Volume of Saved S! Appli

[S! Appli List] → → **Memory Info** → ●