 


# Customization

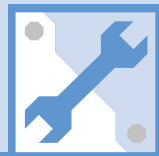

Clock, Display & Sounds .....	14-2
Phone Book & Calls.....	14-12
Mail.....	14-16
Internet.....	14-20
TV .....	14-22
Camera .....	14-24
Player & S! Appli.....	14-25
Entertainment.....	14-27
Other Settings.....	14-29

## 14



## Clock

Start Here ⇒ **Settings** ⇒ ● ⇒ **Clock** ⇒ ●

Hide Clock	⇒ <b>Clock Display</b> ⇒ ● ⇒ <b>Display</b> ⇒ ● ⇒ <b>OFF</b> ⇒ ●
Clock Size	⇒ <b>Clock Display</b> ⇒ ● ⇒ <b>Size</b> ⇒ ● ⇒ Select a size ⇒ ●
Clock Color	⇒ <b>Clock Display</b> ⇒ ● ⇒ <b>Color</b> ⇒ ● ⇒ <b>Black</b> or <b>White</b> ⇒ ●
Set Auto Time Adjustment	⇒ <b>Set Main Time</b> ⇒ ● ⇒ <b>Time Adjustment</b> ⇒ ● ⇒ <b>Auto</b> ⇒ ● ⇒ Select a time zone ⇒ ● <ul style="list-style-type: none"> <li>• Press  to change city/area name in Time Zone Selection field.</li> <li>• If auto time adjustment is still not performed, open Yahoo! Keitai top page again and perform <b>Reload</b> before returning to Standby.</li> </ul>
Manually Adjust Time	⇒ <b>Set Main Time</b> ⇒ ● ⇒ <b>Time Adjustment</b> ⇒ ● ⇒ <b>Manual(Date Time Set)</b> ⇒ ● ⇒ Select a time zone ⇒ ● ⇒ Enter date and time ⇒ ●
Summer Time	⇒ <b>Set Main Time</b> ⇒ ● ⇒ <b>Summer Time</b> ⇒ ● ⇒ <b>ON</b> ⇒ ●

Time Zone (Sub Clock)	⇒ <b>Set Sub Clock</b> ⇒ ● ⇒ <b>Display Method</b> ⇒ ● ⇒ <b>Always</b> ⇒ ● ⇒ Select a time zone ⇒ ●
Hide Sub Clock	⇒ <b>Set Sub Clock</b> ⇒ ● ⇒ <b>Display Method</b> ⇒ ● ⇒ <b>OFF</b> ⇒ ●
Summer Time (Sub Clock)	⇒ <b>Set Sub Clock</b> ⇒ ● ⇒ <b>Summer Time</b> ⇒ ● ⇒ <b>ON</b> ⇒ ●
Time Zone Major City (Sub Clock)	⇒ <b>Set Sub Clock</b> ⇒ ● ⇒ <b>Area Name</b> ⇒ ● ⇒ <b>Display</b> ⇒ ●

## Alarm

Start Here ⇒ **Settings** ⇒ ● ⇒ **Clock** ⇒ ●

Set Priority at Alarm Notification Time	⇒ <b>Alarm Setting</b> ⇒ ● ⇒ <b>Operation Preferred</b> or <b>Alarm Preferred</b> ⇒ ●
Change Alarm Tone	⇒ <b>Clock Alarm Tone Set</b> ⇒ ● ⇒ Select an item ⇒ ● ⇒ Set an alarm tone



## Auto Power On/Off

Set Auto Power On/Off*	<p><b>MENU</b> → <b>Settings</b> → ● → <b>Clock</b> → ● → <b>Auto Power ON</b> or <b>Auto Power OFF</b> → ● → <b>ON</b> → ● → Enter time → ● → <b>1 Time</b> or <b>Daily</b> → ●</p>
------------------------	--

\* When near high precision electronic devices or devices using weak signals, or in areas where handset use is forbidden (aboard aircraft, in hospitals, etc.), set **Auto Power ON** to **OFF** and turn handset power off.

## Style Mode Settings

Start Here	<b>MENU</b> → <b>Settings</b> → ● → <b>Style Mode Setting</b> → ●
Set Display Design Collectively	<p>→ Select a style → ● → <b>YES</b> → ● (→ <b>YES</b> or <b>NO</b> → ●)</p>
Check Style Mode Settings	<p>→ Select a style →  →</p> <ul style="list-style-type: none"> <li>Details of some items can be checked by selecting an item and pressing .</li> </ul>
Edit Title of a Style	<p>→ Select a style →  → <b>Edit Title</b> → ● → Edit title → ●</p>
Save Current Style Mode Settings as Favorite	<p>→ <b>お気に入り</b> (Favorites) →  →  → <b>Take Setting Info</b> → ● → <b>YES</b> → ●</p> <ul style="list-style-type: none"> <li>The current style mode settings can later be recalled collectively from <b>お気に入り</b> when they are changed.</li> </ul>

Change Each Item for Favorites	<p>→ <b>お気に入り</b> (Favorites) →  → Select an item → ● → Set an image</p>
Clear All Favorite Settings	<p>→ <b>お気に入り</b> (Favorites) →  → <b>Reset Setting Info</b> → ● → <b>YES</b> → ●</p>

## Display Settings

Start Here **MENU** → **Settings** → ● → **Display** → ●

Wallpaper	<p>→ <b>Display Setting</b> → ● → <b>Stand-by Display</b> → ● → <b>My Picture</b> or <b>Videos</b> → ● → Set an image/video (→ Select a layout → ● (twice))</p>
Show Calendar in Standby	<p>→ <b>Display Setting</b> → ● → <b>Stand-by Display</b> → ● → <b>Calendar</b> → ● → <b>Background</b> → ● → Set an image → ● (twice)</p> <ul style="list-style-type: none"> <li>Select <b>No Background</b> if you do not want any image in the background of the calendar.</li> <li>Press ●, use  to select the calendar and press ● to operate it. Use  to switch to the previous/next month. Press ● to activate Schedule.</li> </ul>



# Clock, Display & Sounds

Set Wallpaper Image to Change When Handset Returns to Standby	<p>⇒ <b>Display Setting</b> ⇒ ● ⇒ <b>Stand-by Display</b> ⇒ ● ⇒ <b>Random Display</b> ⇒ ● ⇒ Select a folder ⇒ ● ⇒ Select a layout ⇒ ●</p> <ul style="list-style-type: none"> <li>Each time handset returns to Standby, a different wallpaper image appears. Images are randomly selected from the set folder.</li> </ul>
Set a Wake-up Image	<p>⇒ <b>Display Setting</b> ⇒ ● ⇒ <b>Wake-up Display</b> ⇒ ● ⇒ <b>My Picture</b> ⇒ ● ⇒ Set an image</p>
Set a Wake-up Message	<p>⇒ <b>Display Setting</b> ⇒ ● ⇒ <b>Wake-up Display</b> ⇒ ● ⇒ <b>Message</b> ⇒ ● ⇒ Enter message ⇒ ●</p>
Set an Outgoing Call/Message Image	<p>⇒ <b>Display Setting</b> ⇒ ● ⇒ <b>Dialing, Video Call Dialing or Mail Sending</b> ⇒ ● ⇒ Set an image</p>
Set Image or Video for Incoming Call/Message	<p>⇒ <b>Display Setting</b> ⇒ ● ⇒ <b>Calling, Video Call Calling or Mail Receiving</b> ⇒ ● ⇒ <b>Select Calling Disp. or Select Receiving Disp.</b> ⇒ ● (⇒ <b>My Picture</b> or <b>Videos</b> ⇒ ●) ⇒ Set an image/video</p>
Set Image for New Message/Received Result Window	<p>⇒ <b>Display Setting</b> ⇒ ● ⇒ <b>Retrieve New or Mail Rec'd Result</b> ⇒ ● ⇒ Set an image</p>
Display Color Scheme	<p>⇒ <b>Display Design</b> ⇒ ● ⇒ <b>Color Theme</b> ⇒ ● ⇒ Select a color ⇒ ●</p>

Battery Level Indicator/Signal Strength Indicator Design	<p>⇒ <b>Display Design</b> ⇒ ● ⇒ <b>Icon Pattern</b> ⇒ ● ⇒ <b>Battery Icon</b> or <b>Antenna Icon</b> ⇒ ● ⇒ Select a pattern ⇒ ●</p>
Set Softkey Color	<p>⇒ <b>Display Design</b> ⇒ ● ⇒ <b>Soft Key</b> ⇒ ● ⇒ Select a color ⇒ ●</p>
Set Font Type	<p>⇒ <b>Font</b> ⇒ ● ⇒ <b>Font Type</b> ⇒ ● ⇒ <b>Gothic</b> or <b>Ming-cho</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Alternatively, press and hold [7] in Standby to make font settings.</li> </ul>
Set Font Thickness	<p>⇒ <b>Font</b> ⇒ ● ⇒ <b>Thickness</b> ⇒ ● ⇒ <b>Thin</b> or <b>Bold</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Alternatively, press and hold [7] in Standby to make font settings.</li> </ul>
Set Font Sizes Collectively	<p>⇒ <b>Font</b> ⇒ ● ⇒ <b>Character Size</b> ⇒ ● ⇒ <b>Standard</b> or <b>X-large</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Items settable with <b>Separate Setting</b> for <b>Character Size</b> can be set collectively.</li> <li>Alternatively, press and hold [7] in Standby to make font settings.</li> </ul>
Set Font Size for Each Function Window	<p>⇒ <b>Font</b> ⇒ ● ⇒ <b>Character Size</b> ⇒ ● ⇒ <b>Separate Setting</b> ⇒ ● ⇒ Select a window ⇒ ● ⇒ Select a size ⇒ ● ⇒ ☒</p> <ul style="list-style-type: none"> <li>Alternatively, press and hold [7] in Standby to make font settings.</li> <li>In PC Site Browser, only available in Small Screen view.</li> </ul>



<b>Interface Language</b>	<p>⇒ 言語選択 ⇒ ● ⇒ 日本語 (or English) ⇒ ●</p> <ul style="list-style-type: none"> <li>To change interface language from Japanese to English:</li> </ul> <p>⇒ MENU ⇒ 設定 ⇒ ● ⇒ ディスプレイ ⇒ ● ⇒ Language ⇒ ● ⇒ English ⇒ ●</p>
<b>Set Image List View</b>	<p>⇒ Viewer Settings ⇒ ● ⇒ Picture or Title ⇒ ●</p>
<b>Set Auto-change Screen</b>	<p>⇒ Auto-change Screen ⇒ ● ⇒ ON or OFF ⇒ ●</p> <ul style="list-style-type: none"> <li>Press  to do training in tilting handset.</li> </ul>
<b>Guard from Prying Eyes</b>	<p>⇒ Privacy Angle ⇒ ● ⇒ ON ⇒ ●</p> <ul style="list-style-type: none"> <li>Alternatively, press and hold  in Standby to toggle on and off. The other party may hear a short beep when this operation is performed during a call.</li> <li>When <i>Privacy Angle</i> is set, Display is whitish and the viewing angle is narrower.</li> <li>Turn power off then on again to cancel Privacy Angle.</li> </ul>
<b>Show New S! Mail/SMS Message Info While Viewing TV</b>	<p>⇒ Quick Info Setting ⇒ ● ⇒ Display Sender or Display Sender/Subject ⇒ ●</p>
<b>Set Effect for Screen Change</b>	<p>⇒ Screen Effect ⇒ ● ⇒ Select an item ⇒ ●</p> <ul style="list-style-type: none"> <li>Select an item and press  to check details.</li> </ul>

## Display Quality

- ⇒ Image Display Mode ⇒ ● ⇒ Normal, Vivid or Dynamic ⇒ ●
- TV image quality setting follows the *Visual Image Effect* setting in *TV Effect*.
  - A preview image for each mode appears during selection in *Image Display Mode* to check the effect.

## Backlight

Start Here ⇒ Settings ⇒ ● ⇒ Display ⇒ ● ⇒ Backlight ⇒ ●

### Set Backlight & Power Saving

- ⇒ Lighting ⇒ ● ⇒ ON or OFF ⇒ ● (⇒ Select time Backlight is lit ⇒ ●) ⇒ ON or OFF ⇒ ● (⇒ Enter a time before the Power Saver Mode is activated)
- When the Power Saver Mode is activated, nothing appears in Standby. Pressing any key cancels the Power Saver Mode.

### Set Backlight during Charging

- ⇒ Charging ⇒ ● ⇒ Standard or All Time ON ⇒ ●










 

 
 


 
# Clock, Display & Sounds

Set Brightness of Backlight	<p>⇒ <b>Brightness</b> ⇒ ● ⇒ <b>ON</b> or <b>OFF</b> ⇒ ●</p> <p>⇒ Select a Level ⇒ ●</p> <ul style="list-style-type: none"> <li>• When set to <b>ON</b>, Display Backlight automatically adjusts to surrounding brightness; Key Backlight automatically switches on/off.</li> <li>• <b>Brightness</b> is <b>Level 4</b> by default. For maximum brightness, set to <b>Level 6</b>. Note that a higher setting will decrease battery time faster.</li> </ul>
-----------------------------	---

## Desktop Icons

Start Here  ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ ●

Set Desktop Theme	<p>⇒ <b>Desktop Icon</b> ⇒ ● ⇒ Select a theme</p> <p>⇒ ● ⇒ <b>YES</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>• Press  to see details of the selected theme.</li> </ul>
Change Icon Design of a Theme	<p>⇒ <b>Desktop Icon</b> ⇒ ● ⇒ Select a theme</p> <p>⇒  ⇒ Select an icon ⇒  ⇒ <b>CHG Icon Image</b> ⇒ ● ⇒ <b>Select Icon Image</b> or <b>Default Icon Image</b> ⇒ ● (⇒ Set and icon)</p>
Change Order of Icons of a Theme	<p>⇒ <b>Desktop Icon</b> ⇒ ● ⇒ Select a theme</p> <p>⇒  ⇒ Select an icon ⇒  ⇒ <b>Sort</b> ⇒ ●</p> <p>⇒ ● ⇒ Select a position ⇒ ●</p>

Copy Icons to Another Theme	<p>⇒ <b>Desktop Icon</b> ⇒ ● ⇒ Select a theme</p> <p>⇒  ⇒ Select an icon ⇒  ⇒ <b>Copy</b> ⇒ ● ⇒ <b>Copy This, Copy Selected</b> or <b>Copy All</b> ⇒ ● ⇒ Select a destination theme ⇒ ● (⇒ Select icons ⇒ ● ⇒ )</p> <ul style="list-style-type: none"> <li>• When <b>Copy Selected</b> or <b>Copy All</b> is selected, select <b>YES</b> and press ● at the end of the procedure.</li> </ul>
Move Icons to Another Theme	<p>⇒ <b>Desktop Icon</b> ⇒ ● ⇒ Select a theme</p> <p>⇒  ⇒ Select an icon ⇒  ⇒ <b>Move</b> ⇒ ● ⇒ <b>Move This, Move Selected</b> or <b>Move All</b> ⇒ ● ⇒ Select a destination theme ⇒ ● (⇒ Select icons ⇒ ● ⇒ ) ⇒ <b>YES</b> ⇒ ●</p>
Delete Icons of a Theme	<p>⇒ <b>Desktop Icon</b> ⇒ ● ⇒ Select a theme</p> <p>⇒  ⇒ Select an icon ⇒  ⇒ <b>Delete</b> ⇒ ● ⇒ <b>Delete This, Delete selected</b> or <b>Delete All</b> ⇒ ● (⇒ Select icons ⇒ ● ⇒ ) ⇒ <b>YES</b> ⇒ ●</p>
Set New S! Mail/SMS Indicator in 3D	<p>⇒ <b>3D Display Setting</b> ⇒ ● ⇒ <b>ON</b> ⇒ ●</p>



## Menu Display Settings

Start Here → **Settings** → ● → **Display** → ● → **Menu Display Set** → ●

List View and Details View	<p>→ <b>Menu Display</b> → ● → <b>List</b> or <b>Detail</b> → ●</p> <ul style="list-style-type: none"> <li>Select View for menus from  → <b>Settings</b> → ●.</li> </ul>
Set Main Menu Theme	<p>→ <b>Theme</b> → ● → Select a theme → ● (→ <b>YES</b> or <b>NO</b> → ●)</p>
Change Icon Design (Original Theme)	<p>→ <b>Theme</b> → ● → <b>Original Theme</b> → ●</p> <p>→ Select a menu item → ● → Set an image</p> <ul style="list-style-type: none"> <li>Change Main Menu icons to any preferred image.</li> <li>Press  to check current setting.</li> </ul>
Change Background (Original Theme)	<p>→ <b>Theme</b> → ● → <b>Original Theme</b> → ●</p> <p>→ <b>Background Image</b> → ● → Set an image</p> <ul style="list-style-type: none"> <li>Change Main Menu background to any preferred image.</li> <li>Press  to check current setting.</li> </ul>
Reset Original Theme Settings	<p>→ <b>Theme</b> → ● → <b>Original Theme</b> → ●</p> <p>→ Select a menu item →  → <b>Reset</b> or <b>All reset</b> → ● → <b>YES</b> → ●</p> <ul style="list-style-type: none"> <li>Only available when any Original theme settings have been changed.</li> </ul>

Save Last Selected Menu Item to Memory

→ **Memory Focus** → ● → **ON** → ●

Start Here →

Add a Menu Item to Original Menu

→ **<Not Recorded>** → → Select a function → ● (→ **YES** → ●)

Change Order of Original Menu Items

→ Select an item → → **Sort** → ● → Select a position → ●

Cancel Original Menu Items

→ Select an item → → **Release** or **Release All** → ● → **YES** → ●

Reset Original Menu

→ → **Reset Org. Menu** → ● → **YES** → ●

## Standby Indicators

Enable Indicator Selector

→ **Settings** → ● → **Display** → ● → **Icons Setting** → ● → **ON** → ●

- The indicators at the top of Display are enabled by pressing ● in Standby. Use to select an indicator and press ● to access the corresponding function.



## External Display (Indicator display)

Start Here ⇒ **Settings** ⇒ ⇒ **Display** ⇒ ⇒ **Indicator Display** ⇒ ⇒ **ON** ⇒

Notifications/ Animation	⇒ <b>Disp. Clock Only</b> ⇒  ⇒ <b>ON</b> ⇒  ⇒  • Select <b>OFF</b> to set notifications (incoming messages, etc.) and animation (alarm, etc.) to appear.
Set Clock Pattern	⇒ <b>Clock Type</b> ⇒  ⇒ Select a pattern ⇒  ⇒
Set Messages to Appear	⇒ <b>Called, Mail or Connection</b> ⇒  ⇒ <b>ON</b> ⇒  ⇒
Set Time Signal	⇒ <b>Time Signal</b> ⇒  ⇒ <b>ON</b> ⇒  ⇒ <b>Set Time</b> ⇒  ⇒ <b>30 Minutes</b> or <b>60 Minutes</b> ⇒  ⇒ <b>Set Color</b> ⇒  ⇒ Select a color ⇒  ⇒ <b>Set Pattern</b> ⇒  ⇒ Select a pattern ⇒  ⇒  (twice)
Set Viewable Time	⇒ <b>Display Time</b> ⇒  ⇒ <b>15 Seconds, 30 Seconds</b> or <b>60 Seconds</b> ⇒  ⇒

## Incoming Call/Message Alerts

Start Here ⇒ **Settings** ⇒ ⇒ **Incoming Call** ⇒

Adjust Ringtone Volume	⇒ <b>Ring Volume</b> ⇒  ⇒ <b>Phone, Video Call or Mail</b> ⇒  ⇒  to adjust volume ⇒ • When <b>Step</b> is set, the ringtone volume increases every three seconds. When <b>Silent</b> is set, no ringtone sounds.
Set a Ringtone	⇒ <b>Select Ring Tone</b> ⇒  ⇒ <b>Phone, Video Call or Mail</b> ⇒  ⇒ <b>Select Ring Tone</b> ⇒  ⇒ Select an item ⇒  (⇒ Select a folder ⇒ ) ⇒ Set a ringtone
Set Random Playback of Melodies as Ringtones	⇒ <b>Select Ring Tone</b> ⇒  ⇒ <b>Phone, Video Call or Mail</b> ⇒  ⇒ <b>Select Ring Tone</b> ⇒  ⇒ <b>Random Melody</b> ⇒  ⇒ Select a folder ⇒ • Melodies in the selected folder are played at random as ringtones.
Set Ringtone Duration for Incoming Message	⇒ <b>Mail Ring Time</b> ⇒  ⇒ <b>Mail</b> ⇒  ⇒ <b>ON</b> ⇒  ⇒ Enter ringing duration • When <b>OFF</b> is set, no ringtone sounds and handset does not vibrate when receiving messages.





Set Vibration*	<p>⇒ <b>Vibrator</b> ⇒ ● ⇒ <b>Phone, Video Call or Mail</b> ⇒ ● ⇒ Select a pattern ⇒ ●</p> <ul style="list-style-type: none"> <li>When <i>Melody Linkage</i> is set, handset vibration is linked to the set ringtone melody. Handset may not vibrate depending on the set ringtone.</li> </ul>
Set Illumination Color	<p>⇒ <b>Illumination</b> ⇒ ● ⇒ <b>Set Color</b> ⇒ ●</p> <p>⇒ <b>Phone, Video Call or Mail</b> ⇒ ● ⇒ Select a color ⇒ ●</p>
Set Illumination Pattern	<p>⇒ <b>Illumination</b> ⇒ ● ⇒ <b>Set Pattern</b> ⇒ ●</p> <p>⇒ Select a pattern ⇒ ●</p> <ul style="list-style-type: none"> <li>When <i>Melody Linkage</i> is set, illumination pattern is linked to the set ringtone melody. Illumination may not flash depending on the set ringtone.</li> </ul>
Set Illumination to Flash for Missed Calls/New Messages	<p>⇒ <b>Illumination</b> ⇒ ● ⇒ <b>Missed Info</b> ⇒ ● ⇒ <b>ON</b> ⇒ ●</p>
Set an Incoming Call/Message Image	<p>⇒ <b>Select Ring Tone</b> ⇒ ● ⇒ <b>Phone, Video Call or Mail</b> ⇒ ● ⇒ <b>Select Calling Disp.</b> or <b>Select Receiving Disp.</b> ⇒ ● (⇒ <b>My Picture</b> or <b>Videos</b> ⇒ ●) ⇒ Set an image/video</p>

Show Phone Book Entry Images for Incoming Calls/ Messages

⇒ **Disp. Phone Book Image** ⇒ ● ⇒ **ON** ⇒ ●

\* When *Vibrator* is not set to *OFF*, be careful not to let handset fall off a desk or slide too close to a stove, etc. when it vibrates.

## Answering Incoming Calls

Start Here ⇒ **Settings** ⇒ ● ⇒ **Incoming Call** ⇒ ●

Set to Answer Calls by Pressing Any Key

⇒ **Answer Setting** ⇒ ● ⇒ **Any Key Answer** ⇒ ●

- Answer incoming voice calls by pressing a key from and . The any key answer function is disabled for incoming video calls.

Set to Mute Ringtone by Pressing Any Key

⇒ **Answer Setting** ⇒ ● ⇒ **Quick Silent** ⇒ ●

- Mute the ringtone by pressing a key from (for voice calls only), , or by opening handset.



## Manner Mode

Start Here ⇒ **Settings** ⇒ ⇒ **Incoming Call** ⇒ ⇒ **Manner Mode Setting** ⇒

Set Manner Mode Type	⇒ <b>Manner Mode Set</b> ⇒  ⇒ Select a Manner Mode ⇒ <ul style="list-style-type: none"> <li>When <i>Super Silent</i> is set, all tones emitted through the earpiece are also muted.</li> </ul>
Configure Original Manner Mode	⇒ <b>Manner Mode Set</b> ⇒  ⇒ <b>Original</b> ⇒  ⇒ Set each item ⇒
Set Time for Auto Manner Mode Start	⇒ <b>Manner Start Time</b> ⇒  ⇒ <b>Start Time Set1</b> or <b>Start Time Set2</b> ⇒  ⇒  ⇒  ⇒ Enter time ⇒  ⇒  ⇒  ⇒ <b>1 Time, Daily (D)</b> or <b>Select Day (W)</b> ⇒  ⇒ (Select day ⇒ ) ⇒
Set Time for Auto Manner Mode Release	⇒ <b>Manner Release Time</b> ⇒  ⇒ <b>Release Time Set1</b> or <b>Release Time Set2</b> ⇒  ⇒  ⇒  ⇒ Enter time ⇒  ⇒  ⇒  ⇒ <b>1 Time, Daily (D)</b> or <b>Select Day (W)</b> ⇒  ⇒ (Select day ⇒ ) ⇒
Toggle Auto Manner Mode Start and Release On/Off	⇒ <b>Manner Start Time</b> or <b>Manner Release Time</b> ⇒  ⇒ Select an item ⇒ <ul style="list-style-type: none"> <li>Press  to toggle on/off. Settings (e.g., time) are not updated.</li> <li>To cancel all settings at once: ⇒  ⇒ <b>Release All</b> ⇒  ⇒ <b>YES</b> ⇒ </li> </ul>

## Checking Call Logs

Start Here ⇒ **Settings** ⇒ ⇒ **Incoming Call** ⇒

Notify Missed Calls with Tone (When  Pressed)	⇒ <b>Info Notice Setting</b> ⇒  ⇒ <b>ON</b> ⇒ <ul style="list-style-type: none"> <li>Two short beeps sound twice when there are missed calls, and three short beeps sound when there are none.</li> </ul>
Change Colors of Names, Phone Numbers and E-mail Addresses in Call and Message Log Windows	⇒ <b>Disp. Call/Receive No.</b> ⇒  ⇒ Select a color ⇒ <ul style="list-style-type: none"> <li>Press  to toggle the color palette between 16 colors and 256 colors.</li> <li>To reset the color settings, press .</li> </ul>

## Sounds

Start Here ⇒ **Settings** ⇒ ⇒ **Other Settings** ⇒

Set Key Sound Off	⇒ <b>Keypad Sound</b> ⇒  ⇒ <b>OFF</b> ⇒
Set to Play Charging Start/End Tones	⇒ <b>Charge Sound</b> ⇒  ⇒ <b>ON</b> ⇒



Set Handset Open/Close Sound	<p>⇒ <i>Open-close Sound</i> ⇒ ● ⇒ <i>Open Sound</i> or <i>Close Sound</i> ⇒ ● ⇒ <i>Melody*</i></p> <p>⇒ ● ⇒ Select a tone ⇒ ● ⇒ <i>Ring Time</i></p> <p>⇒ ● ⇒ Select a setting ⇒ ●</p> <p>* Select <i>OFF</i> to set the tone off.</p>
------------------------------	---

Start Here ⇒ **Tools** ⇒ ● ⇒ **Voice Announce** ⇒ ●

Record Sound to Set as Ringtone or Outgoing Message	<p>⇒ Select an item ⇒ ● ⇒ <b>YES</b> ⇒ ● ⇒</p> <p>Record sound (for about 15 seconds)</p> <ul style="list-style-type: none"> <li>• Press ● to stop recording.</li> </ul>
Play Recorded Sound	<p>⇒ Select an item with ★ ⇒ ●</p>
Delete Recorded Sound	<p>⇒ Select an item with ★ ⇒  ⇒ <b>Erase</b></p> <p>⇒ ● ⇒ <b>YES</b> ⇒ ●</p>

## Earphone-Microphone

Start Here ⇒ **Settings** ⇒ ●

Audio Output	<p>⇒ <i>External Connection</i> ⇒ ● ⇒ <i>Headset Usage Setting</i> ⇒ ● ⇒ <i>Headset+speaker</i> or <i>Headset Only</i> ⇒ ●</p>
Microphone Setting	<p>⇒ <i>External Connection</i> ⇒ ● ⇒ <i>Headset Mic. Setting</i> ⇒ ● ⇒ <i>Built-in Microphone</i> or <i>Headset Microphone</i> ⇒ ●</p>

Answer Calls Automatically	<p>⇒ <i>External Connection</i> ⇒ ● ⇒ <i>Auto Answer Setting</i> ⇒ ● ⇒ <i>Phone</i> or <i>Video Call</i> ⇒ ● ⇒ <i>ON</i> ⇒ ● ⇒ Enter ring time</p>
Save a Phone Number to Dial with an Earphone-Microphone	<p>⇒ <i>Dialing</i> ⇒ ● ⇒ <i>Headset SW to Dial</i> ⇒ ● ⇒ <i>Voice Call</i> ⇒ ● ⇒ Search Phone Book ⇒ Select an entry ⇒ ● ⇒ Select a phone number ⇒ ●</p>



## Phone Book

Set Preferred Search Method	[Phone Book Search] window (P. 2-21) → Select a search method →  → OK → ● <ul style="list-style-type: none"> <li>To cancel the preferred search method, press  in Phone Book Search window, select the search method with ★, and then press .</li> </ul>
Change Group Name	[Phone Book Entry List] (P. 2-21) →  → <b>Group Setting</b> → ● → Select a group → ● → Edit group name → ● <ul style="list-style-type: none"> <li>The name remains the same only for <i>No Group</i>.</li> </ul>
Do Not Send Phone Book Entry Images via Infrared	→ <b>Tools</b> → ● → <b>Forwarding Image</b> → ● → OFF → ●

## S! Addressbook Back-up

Start Here → **Tools** → ● → **S! Addressbook Back-up** → ●

Set Auto Synchronize	→ <b>Auto Sync Settings</b> → ● → ON/OFF → ● → ON → ● → Enter Security Code → ● → Select synchronize timing → ● (→ Set synchronize cycle and day) → Select synchronize type → ● → YES → ● (twice)
----------------------	---

Set Auto Synchronize Off	→ <b>Auto Sync Settings</b> → ● → ON/OFF → ● → OFF → ●
Check Auto Synchronize Settings	→ <b>Auto Sync Settings</b> → ● → Confirm Settings → ●

## Outgoing Calls

Start Here → **Settings** → ● → **Dialing** → ●

Save Area Code and Country Code as Prefix Numbers	→ <b>Prefix Setting</b> → ● → Select an item →  → Enter name → ● → Enter prefix numbers → ●
Save Touch Tones	→ <b>Pause Dial</b> → ● →  → Enter touch tone numbers → ● <ul style="list-style-type: none"> <li>Press and hold  to enter "p" (Pause).</li> </ul>
Set Numbers after "*" as Sub Address	→ <b>Sub-address Setting</b> → ● → ON → ●



## International Calls

Start Here → **Settings** → ● → **Dialing** → ● → **Int'l Dial Assistance** → ●

Change International Access Code Automatically Dialed with "+"	<p>→ <b>Auto Int'l Call Set.</b> → ● → <b>ON</b> → ●</p> <p>→ Select a country code → ● → Select an international access code → ●</p> <ul style="list-style-type: none"> <li>• When <b>OFF</b> is set, the international access code is not entered when you press and hold .</li> <li>• Select an international access code you set in <b>IDD Prefix Setting</b>.</li> </ul>
Change a Country Code	<p>→ <b>Country Code Setting</b> → ● → Select an item →  → Enter country name → ● → Enter country code → ●</p>
Save an International Access Code	<p>→ <b>IDD Prefix Setting</b> → ● → Select an item →  → Enter international access name → ● → Enter international access code → ●</p>

## Call Settings

Start Here → **Settings** → ● → **Talk** → ●

Set Reconnection Tone	<p>→ <b>Reconnect Signal</b> → ● → <b>High Tone</b> or <b>Low Tone</b> → ●</p>
-----------------------	--

Set Noise Reduction	<p>→ <b>Noise Reduction</b> → ● → <b>ON</b> → ●</p>
Set Weak Signal Alarm	<p>→ <b>Quality Alarm</b> → ● → <b>High Tone</b> or <b>Low Tone</b> → ●</p> <ul style="list-style-type: none"> <li>• Alarm may not sound before call is disconnected, if signal strength drops suddenly.</li> </ul>
Set Clarity of Other Party Voice	<p>→ <b>Hyper Clear Voice</b> → ● → <b>High, Low</b> or <b>OFF</b> → ●</p>
Automatically Record During Voice Call	<p>→ <b>Auto Voice Memo</b> → ● → <b>ON</b> → ●</p> <ul style="list-style-type: none"> <li>• Record latest 60 seconds of call (two recordings).</li> </ul>
Change Color of Illumination While Calling	<p>→ <b>Illumination in Talk</b> → ● → Select a pattern → ●</p>
Set Outgoing Message while Call is on Hold	<p>→ <b>Set Hold Tone</b> → ● → <b>On Hold Tone</b> → ● → Select a hold tone → ● (→ ●)</p> <ul style="list-style-type: none"> <li>• Select a hold tone and press  to check guidance message.</li> </ul>
Set Closing Sound Off	<p>→ <b>Setting When Folded</b> → ● → <b>No Tone</b> → ●</p>
End Call By Closing Handset	<p>→ <b>Setting When Folded</b> → ● → <b>End the Call</b> → ●</p>



## Call Costs

Start Here → **Settings** → → **Call Time/Charge** →

<b>Set Auto Reset of Total Call Cost</b>	<p>→ <b>Auto Reset Total Cost</b> →  → Enter Security Code →  → <b>Auto Reset</b> →  → <b>ON</b> or <b>OFF</b> →  (→ Enter PIN2 → )</p> <ul style="list-style-type: none"> <li>When <b>ON</b> is set, the total call cost indication is automatically reset to zero at twelve midnight on the first day of each month.</li> </ul>
<b>Set a Maximum Call Cost Limit*</b>	<p>→ <b>Set Max Cost Limit</b> →  → Enter Security Code →  →  →  → Enter cost limit →  →  →  → <b>ON</b> →  →  →  → Set alarm tone →  →  → to adjust volume →  →  → Enter PIN2 → </p> <ul style="list-style-type: none"> <li>A call ends automatically and  appears in Display when the total call cost exceeds the set maximum limit.</li> <li>When the set total call cost limit has been reached, all outgoing calls are disabled. To enable outgoing calls, set the maximum call cost limit to 0: → <b>Set Max Cost Limit</b> →  → Enter Security Code →  →  →  (twice) →  → Enter PIN2 → </li> </ul>

\* Cost display may not be available depending on your subscription. If unavailable, you will also be unable to set a cost limit.

## Video Calls

Start Here → **Settings** → → **Video Call** →

<b>Set Outgoing Image for Video Calls</b>	<p>→ <b>Select Image</b> →  → Select an item →  → <b>Pre-installed</b> or <b>Original</b> → </p> <ul style="list-style-type: none"> <li>To set an image other than the preinstalled image: → <b>Original</b> →  → <b>Change Setting</b> →  → Set an image • Press  to check image.</li> </ul>
<b>Redial Automatically as Voice Call When Video Call Connection Fails</b>	<p>→ <b>Auto Redial as Voice</b> →  → <b>ON</b> → </p>
<b>Set an Image to Appear in Main Window</b>	<p>→ <b>Display Setting</b> →  → <b>Main Display</b> →  → <b>Other Side</b> or <b>My Side</b> → </p>
<b>Reverse Front Camera Image</b>	<p>→ <b>Display Setting</b> →  → <b>Front Camera Reverse</b> →  → <b>ON</b> → </p>
<b>Automatically Switch to Handsfree Mode in Video Calls</b>	<p>→ <b>Hands-free Switch</b> →  → <b>ON</b> → </p>



## Global Roaming

Start Here ⇒ **Settings** ⇒ ● ⇒ **Int'l Roaming Set** ⇒ ●

Show Operator Name While Roaming

⇒ **Display Operator Name** ⇒ ● ⇒ **Display ON** ⇒ ●

<p><b>Set Operator</b></p>	<p>⇒ <b>NW Search Mode</b> ⇒ ● ⇒ <b>Manual</b> ⇒ ● ⇒ Select an operator ⇒ ●</p> <ul style="list-style-type: none"> <li>When <i>Auto</i> is set, an available operator is set automatically.</li> <li>Use this procedure when handset is out of the service area of the currently used operator.</li> </ul>
<p><b>Search Available Operator</b></p>	<p>⇒ <b>NW Search Mode</b> ⇒ ● ⇒ <b>Network Re-search</b> ⇒ ● ⇒ Select an operator ⇒ ●</p> <ul style="list-style-type: none"> <li>Available when <i>NW Search Mode</i> is set to <i>Manual</i>.</li> </ul>
<p><b>Set Priority for Operators</b></p>	<p>⇒ <b>PLMN Setting</b> ⇒ ● ⇒ Select an operator ⇒  ⇒ <b>Change Priority</b> ⇒ ● ⇒ Select a position on the priority list ⇒ ● ⇒  ⇒ <b>YES</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>When <i>Auto</i> is set under <i>NW Search Mode</i>, you are automatically connected to the highest priority operator among available operators.</li> </ul>
<p><b>Change Network</b></p>	<p>⇒ <b>Select Network</b> ⇒ ● ⇒ <b>AUTO, 3G or GSM/GPRS</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Set to <i>AUTO</i> or network used in current location.</li> </ul>



## Header/Signature Settings

Start Here for S! Mail → **Mail Setting** → ●

Start Here for PC Mail → → **PC Mail Settings** → ●

### Edit Header/Signature

→ **Header/Signature** → ● → **Edit Header** or **Edit Signature** → ● (twice) → Edit header/signature →

- Save *Header/Signature* for both S! Mail and PC Mail.

### Insert Header/Signature Automatically

→ **Header/Signature** → ● → **Insert Setting** → ● → Check item(s) → ● →

- Set Insert settings for both S! Mail and PC Mail and the respective header/signature is automatically inserted. However, when you switch from S! Mail Composition window to PC Mail Composition window, S! Mail header/signature remains (PC Mail header/signature is not inserted).

## S! Mail Settings

Start Here → **Mail Setting** → ● → **S! Mail Settings** → ●

### Request Delivery Report

→ **Delivery Report** → ● → **ON** → ●

- Delivery Report arrives when recipient has received your S! Mail. *S! Mail Report* appears in Subject field of Delivery Report.

### Set Default Mail Size

→ **Compose Mail Size** → ● → **300KB** or **2MB** → ●

- If set to **300KB**, a confirmation appears when message size exceeds 300 KB.

## SMS Settings

Start Here → **Mail Setting** → ● → **SMS Settings** → ●

### Request Delivery Report

→ **SMS Report Request** → ● → **ON** → ●

- Delivery Report arrives when recipient has received your SMS message. *SMS Report* appears in Subject field of Delivery Report.

### Set Server Storage Period of SMS Messages

→ **SMS Validity Period** → ● → Select a period → ●

- When *None* is set, SMS messages you send are not stored on the server.





Set SMS Input Language	⇒ <i>SMS Input Character</i> ⇒ ● ⇒ <i>Japanese (70char.)</i> or <i>English(160char.)</i> ⇒ ●
------------------------	--

## PC Mail Setting

Set Default Account	☑ ⇒ ▼ ⇒ <i>PC Mail Settings</i> ⇒ ● ⇒ <i>Send/Recv. Settings</i> ⇒ ● ⇒ <i>Outgoing Account</i> ⇒ ● ⇒ Select an account ⇒ ●
---------------------	--

## Incoming Message Settings

Start Here for S! Mail ☑ ⇒ *Mail Setting* ⇒ ●

Start Here for PC Mail ☑ ⇒ ▼ ⇒ *PC Mail Settings* ⇒ ●

Do Not Show Emotion Indicators	⇒ <i>Emotion/Keyword</i> ⇒ ● ⇒ Uncheck <i>Disp. Emotion</i> ⇒ ☑
Show Keyword Indicators	⇒ <i>Emotion/Keyword</i> ⇒ ● ⇒ Put a checkmark to <i>Disp. Keyword</i> ⇒ Select a keyword entry field ⇒ ● ⇒ Enter keyword ⇒ ● ⇒ ☑ <ul style="list-style-type: none"> <li>When handset receives an S! Mail containing the specified keyword, a keyword indicator ① - ③ appears.</li> <li>In case a message contains both the content that matches an emotion indicator (P. 5-10) and a specified keyword, the keyword indicator takes priority.</li> </ul>

Delete Keywords	⇒ <i>Emotion/Keyword</i> ⇒ ● ⇒ Select a keyword ⇒ ☑ ⇒ <i>Delete Keyword</i> or <i>Delete All Keyword</i> ⇒ ● ⇒ YES ⇒ ● ⇒ ☑ <ul style="list-style-type: none"> <li>To delete all keywords, uncheck <i>Disp. Keyword</i>.</li> </ul>
Set Priority When Receiving Messages during Operation	⇒ <i>Receiving Setting</i> ⇒ ● ⇒ <i>Alarm Preferred</i> or <i>Operation Preferred</i> ⇒ ●

## Incoming S! Mail Messages

Start Here ☑ ⇒ *Mail Setting* ⇒ ●

Set Whether to Read Out Received Messages	⇒ <i>Read Out Setting</i> ⇒ ● ⇒ <i>Read Out Received Mail</i> ⇒ ● ⇒ ON or OFF ⇒ ● <ul style="list-style-type: none"> <li>Mail is only read out while in Japanese Language Mode.</li> </ul>
Set Voice to Read Out Messages	⇒ <i>Read Out Setting</i> ⇒ ● ⇒ <i>Select Voice</i> ⇒ ● ⇒ Select a voice type ⇒ ● <ul style="list-style-type: none"> <li>Mail is only read out while in Japanese Language Mode.</li> </ul>
Set Mail Retrieval Method	⇒ <i>S! Mail Settings</i> ⇒ ● ⇒ <i>Auto Receiving</i> ⇒ ● ⇒ <i>Manual, Auto(300KB)</i> or <i>Auto(1MB)</i> ⇒ ●



<b>Restrict Incoming S! Mail Size</b>	<p>⇒ <b>S! Mail Settings</b> ⇒ ● ⇒ <b>Receiving Size</b>          ⇒ ● ⇒ <b>300KB</b> or <b>2MB</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>When set to <b>300KB</b>, messages are resized to 300 KB. Attachments may be resized or deleted on the server. Once resized, messages cannot be retrieved again at original size.</li> </ul>
---------------------------------------	--

## Incoming PC Mail Messages

Start Here ⇒ ⇒ **PC Mail Settings** ⇒ ● ⇒  
**Send/Recv. Settings** ⇒ ●

<b>Set New Message Retrieval Method</b>	<p>⇒ <b>Auto Check</b> ⇒ ● ⇒ <b>Auto</b> or <b>Manual</b>          ⇒ ● (⇒ ●)</p>
<b>Retrieve Notification Only or Full Message</b>	<p>⇒ <b>Auto Receiving</b> or <b>Manual Receiving</b> ⇒ ●          ⇒ <b>Part</b> or <b>All</b> ⇒ ●</p>
<b>Set Interval for New Message Retrieval</b>	<p>⇒ <b>Check Interval</b> ⇒ ● ⇒ <b>30 Minutes, 1 Hour, 2 Hours, 4 Hours, 8 Hours</b> or <b>24 Hours</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Available when <b>Auto Check</b> is set to <b>Auto</b>.</li> <li>Battery life is also shortened when a short check interval is set.</li> <li>Messages are checked at intervals based on the time at which setting was performed. Even if you change the time indicated by handset Clock, the time at which <b>Check Interval</b> was set is used as the basis.</li> </ul>

<b>Set New Message Retrieval Off During Set Hours</b>	<p>⇒ <b>Inactivate Time</b> ⇒ ● ⇒ Enter time ⇒ ●</p> <ul style="list-style-type: none"> <li>Available when <b>Auto Check</b> is set to <b>Auto</b>.</li> <li>If inactive time is set to 24 hours, messages are no longer automatically received.</li> <li>Messages may not be automatically received depending on the combination of <b>Check Interval</b> and <b>Inactivate Time</b>.</li> </ul>
<b>New Message Retrieval While Abroad</b>	<p>⇒ <b>Auto Check in Roaming</b> ⇒ ● ⇒ <b>ON</b> or <b>OFF</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Available when <b>Auto Check</b> is set to <b>Auto</b>.</li> </ul>

## Reply Settings

Start Here for S! Mail ⇒ **Mail Setting** ⇒ ●

Start Here for PC Mail ⇒ ⇒ **PC Mail Settings** ⇒ ●

<b>Quote Message Marks</b>	<p>⇒ <b>Header/Signature</b> ⇒ ● ⇒ <b>Edit Quotation Marks</b> ⇒ ● ⇒ Edit quotation mark ⇒ ●</p> <ul style="list-style-type: none"> <li>Set quote message marks for both S! Mail and PC Mail.</li> </ul>
----------------------------	--



## Message Window/Messaging Settings

Start Here for S! Mail → **Mail Setting** → ●

Start Here for PC Mail → → **PC Mail Settings** → ●

Set Default Mail Menu	→ <b>Priority Mail Menu</b> → ● → <b>S! Mail Menu</b> or <b>PC Mail Menu</b> → ●
Set Message List View	→ <b>Mail List Disp.</b> → ● → <b>2 Lines, 1 Line</b> or <b>1 Line+Body</b> → ● → <b>Subject, Name</b> or <b>Address</b> → ●
Set Auto-Play for Melody Attachments	→ <b>Start Attachment(auto)</b> → ● → <b>ON</b> → ● • Automatic play only for received mail.
Set Scroll Unit	→ <b>Scroll</b> → ● → <b>1 Line, 3 Lines</b> or <b>5 Lines</b> → ●
Set Font Size	→ <b>Font Size</b> → ● → Select a size → ●
Check Mail Settings	→ <b>Check Mail Settings</b> or <b>Check PC Mail Settings</b> → ●
Restore to Default Settings	→ <b>Reset Mail Settings</b> or <b>Reset PC Mail Settings</b> → ● → Enter Security Code → ● → <b>YES</b> → ●

## SMS Server Settings

Start Here → **Settings** → ● → **Connection Settings** → ● → **SMS Center Selection** → ●

Change SMS Center Address	→ <b>819066519300</b> → ● → Enter SMS Center address → ● → <b>International</b> or <b>Unknown</b> → ● • Address is 819066519300 by default. SMS may become unavailable if Center address is changed.
Reset to SoftBank SMS Center Address	→ <b>Reset</b> → ● → Enter Security Code → ● → <b>YES</b> → ●

## PC Mail Account Settings

Start Here → → **PC Mail Settings** → ● → **Account Settings** → ● → Select an account → ●

Edit Account Name	→ <b>Edit Account name</b> → ● → Edit account name → ●
Reset PC Mail Account Settings	→ <b>Reset Account Settings</b> → Enter Security Code → ● → <b>YES</b> → ●



## Internet

Start Here for Yahoo! Keitai Press and hold → **Browser Settings** → ●

Start Here for PC Site Browser Press and hold → **PC Site Browser** → ● → **PC Site Brw. Settings** → ●

Set Scroll Unit/Speed	→ <i>Scroll</i> → ● → <i>Whole Page, Half Page or Single Line</i> → ●
Enable/Disable Image Download	→ <i>Downloads</i> → ● → <i>Display Images</i> → ● → <i>ON or OFF</i> → ●
Set Auto-Play for Melody Attachments	→ <i>Downloads</i> → ● → <i>Play Sounds</i> → ● → <i>ON or OFF</i> → ●
Clear Cache	→ <i>Memory Manager</i> → ● → <i>Delete Cache</i> → ● → Enter Security Code → ● → <i>YES</i> → ●
Delete Cookies	→ <i>Memory Manager</i> → ● → <i>Delete Cookies</i> → ● → <i>YES</i> → ●
Initialize Memory Status of Internet	→ <i>Initialized Browser</i> → ● → Enter Security Code → ● → <i>YES</i> → ●
Set Whether to Send Manufacture Number	→ <i>Security</i> → ● → <i>Manufacture Number</i> → ● → <i>ON or OFF</i> → ●

Set Whether to Send Referer	→ <i>Security</i> → ● → <i>Send Referer</i> → ● → <i>ON or OFF</i> → ●
Enable/Disable Cookies	→ <i>Security</i> → ● → <i>Cookie Settings</i> → ● → Select an option → ●
Set Whether to Activate Scripts	→ <i>Security</i> → ● → <i>Script Settings</i> → ● → Select an option → ●
Check Internet Settings	→ <i>Check Settings</i> or <i>Check PC Site Brw. Set</i> → ●
Reset Internet Settings	→ <i>Reset</i> or <i>Reset PC Site Brw. Set</i> → ● → Enter Security Code → ● → <i>YES</i> → ●

## Yahoo! Keitai

Start Here Press and hold → **Browser Settings** → ●

Set Font Size	→ <i>Font Size</i> → ● → Select a size → ●
Set Flash® Sound On/Off	→ <i>Flash Sound Effect</i> → ● → <i>ON or OFF</i> → ●



## PC Site Browser

**Start Here** Press and hold  ⇒ **PC Site Browser** ⇒ ● ⇒  
**PC Site Brw. Settings** ⇒ ●

Do Not Show Alert When Activating PC Site Browser & Switching Browsers	⇒ <b>Warning Messages</b> ⇒ ● ⇒ <b>OFF</b> ⇒ ●
Set Page Layout	⇒ <b>Display Mode Settings</b> ⇒ ● ⇒ <b>PC Screen</b> or <b>Small Screen</b> ⇒ ● ⇒ Select a size ⇒ ●



## Channel List

Start Here → TV → ● → **Channel List** → ●

Change Title of Channel List	→ Select a channel list →  → <b>Edit Title</b> → ● → Edit title → ●
Delete a Channel List	→ Select a channel list →  → <b>Delete This</b> → ● → YES → ● <ul style="list-style-type: none"> <li>The currently used channel list cannot be deleted.</li> </ul>
Assign Channels to Remote Control Numbers	→ Select a channel list →  →  → <b>Remote Control No.</b> → ● → Select a remote control number → ● → Select a channel → ● → Repeat the same step →  → YES → ●
Delete a Channel	→ Select a channel list →  → Select a channel →  → <b>Delete This</b> → ● → YES → ● <ul style="list-style-type: none"> <li>Delete a channel from any channel list except for the currently used list.</li> </ul>

## Image & Sound

Start Here → TV → ● → **User Settings** → ●

Set Subtitle Display	→ <b>Subtitles</b> → ● → ON ( <b>Wide:Bottom</b> ), ON ( <b>Wide:Top</b> ) or OFF → ●
Show/Hide Icons in Landscape View	→ <b>Icon Always Show</b> → ● → ON or OFF → ●
Save Battery by Dimming Backlight	→ <b>TV Power Saving</b> → ● → YES → ● <ul style="list-style-type: none"> <li>Following these steps when TV Power Saving is on will cancel TV Power Saving.</li> </ul>
Set Sound On While Handset Closed	→ <b>TV Sound While Closed</b> → ● → ON → ● <ul style="list-style-type: none"> <li>When set to ON and handset is closed, a page connected from data broadcast automatically updates. Packet transmission fees apply.</li> </ul>
Keep Backlight On When Viewing TV	→ <b>Display Light</b> → ● → <b>Constant Light</b> → ● <ul style="list-style-type: none"> <li>TV Power Saving must be off to set Display Light.</li> </ul>
Set Backlight Duration for Viewing TV	→ <b>Display Light</b> → ● → <b>Lighting Duration</b> → ● → Enter lighting time <ul style="list-style-type: none"> <li>TV Power Saving must be off to set Display Light.</li> </ul>
Set Sound Effects	→ <b>TV Effect</b> → ● → <b>Sound Effect</b> → ● → Select an effect → ● <ul style="list-style-type: none"> <li>TV Power Saving must be off to set TV Effect.</li> </ul>



Set Visual Image Effects	<p>⇒ <b>TV Effect</b> ⇒ ● ⇒ <b>Visual Image Effect</b></p> <p>⇒ ● ⇒ Select an effect ⇒ ●</p> <ul style="list-style-type: none"> <li>• <i>TV Power Saving</i> must be off to set <i>TV Effect</i>.</li> </ul>
Set TV to Pause or Continue for Incoming Calls (Time Shift Playback)	<p>⇒ <b>Time Shift Setup</b> ⇒ ● ⇒ <b>Auto ON</b> or <b>Auto OFF</b> ⇒ ●</p>

## Data Broadcasts

Start Here ⇒ **TV** ⇒ ● ⇒ **User Settings** ⇒ ● ⇒ **Data BC Settings** ⇒ ●

Set Whether to Show Images in Pages Accessed from Data Broadcasts	<p>⇒ <b>Set Image Disp.</b> ⇒ ● ⇒ <b>ON</b> or <b>OFF</b> ⇒ ●</p>
Enable/Disable Sound Effects of Data Broadcasts	<p>⇒ <b>Sound Effect</b> ⇒ ● ⇒ <b>ON</b> or <b>OFF</b> ⇒ ●</p>
Show Confirmation Window Again	<p>⇒ <b>Reset Disp. Set.</b> ⇒ ● ⇒ <b>YES</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>• Once you select <b>YES</b>(By default) in a confirmation window for accessing a web page from Data Broadcast, the window no longer appears. Use this procedure to set the window to reappear.</li> </ul>

## Recording Programs

Continue/End Recording at Low Battery	<p> ⇒ <b>TV</b> ⇒ ● ⇒ <b>User Settings</b> ⇒ ● ⇒ <b>Rec. While Low Battery</b> ⇒ ● ⇒ <b>ON</b> or <b>OFF</b> ⇒ ●</p>
---------------------------------------	--

## Other Settings

Start Here ⇒ **TV** ⇒ ● ⇒ **User Settings** ⇒ ●

Check TV Settings	<p>⇒ <b>Check TV Settings</b> ⇒ ●</p>
Reset Channel Settings	<p>⇒ <b>Reset Channel Setting</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ●</p>
Clear Data Broadcast Memory	<p>⇒ <b>Reset Storage Area</b> ⇒ ● ⇒ Select an affiliated station ⇒  ⇒ <b>Delete This</b> or <b>Delete All</b> ⇒ ● (⇒ Enter Security Code ⇒ ●) ⇒ <b>YES</b> ⇒ ●</p>
Reset TV Settings	<p>⇒ <b>Reset TV Settings</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ●</p>



## Camera/Video Settings

Set Shutter Sound	[Photo Viewfinder] (P. 7-6)/[Video Viewfinder] (P. 7-8) →  → <b>Shutter Sound</b> → ● → Select a shutter sound → ●
Set Level of Smile for Smile Mode	[Smile Mode Viewfinder] (P. 7-10) →  → <b>Camera Settings</b> → ● → <b>Smile Level</b> → ● → Select a level → ●
Set Display for Landscape View Shooting	[Photo Viewfinder] (P. 7-6)/[Video Viewfinder] (P. 7-8) →  → <b>Icon Always Show</b> → ● → <b>ON</b> or <b>OFF</b> → ● <ul style="list-style-type: none"> <li>Below icons do not appear if set to <b>OFF</b>. <ul style="list-style-type: none"> <li>● Photo Viewfinder <ul style="list-style-type: none"> <li>Focus Frame, Auto Timer, Storage Capacity</li> </ul> </li> <li>● For Video Viewfinder or Shooting window <ul style="list-style-type: none"> <li>Auto Timer, Storage Capacity, Recording Status, Recording Time (remaining)</li> </ul> </li> </ul> </li> </ul>
Set Interval for Continuous Shooting	[Continuous Shooting Viewfinder] (P. 7-10) →  → <b>Interval/Number</b> → ● → <b>Shot Interval</b> → ● → <b>0.5 Seconds</b> , <b>1.0 Seconds</b> or <b>2.0 Seconds</b> → ● <ul style="list-style-type: none"> <li><b>Shot Interval</b> is available when <b>CHG Camera-mode</b> (P. 7-6) is set to <b>A-Continuous Mode</b>.</li> </ul>

Set Number of Shots for Continuous Shooting	[Continuous Shooting Viewfinder] (P. 7-10) →  → <b>Interval/Number</b> → ● → <b>Shot Number</b> → ● → Enter Shot Number → ●
---	---

## File Storage

Set Storage Location for Still Images/Videos	[Photo Viewfinder] (P. 7-6)/[Video Viewfinder] (P. 7-8) →  → <b>Select to Save</b> → ● → <b>Phone</b> or <b>microSD</b> → ● → Select a folder → ● <ul style="list-style-type: none"> <li>To save videos on memory card, select a folder of Inbox.</li> </ul>
--	---





## Playback Window

Change Design of Playback Window	[Music Playback] window (P. 9-5) →  → <b>Action Setting</b> → ● → <b>Change Skin</b> → ● → Select a design → ●
Set Image Display Size	[Video Playback] window (P. 9-5) →  → <b>Action Setting</b> → ● → <b>Set Image Disp.</b> → ● → <b>Normal</b> or <b>Fit in Display</b> → ● <ul style="list-style-type: none"> <li>Available when playing in Normal Screen mode.</li> </ul>

## When Running S! Appli

Start Here → **S! Appli** → ● → **Settings** → ●

Set Sound Volume	→ <b>Sound/Vib Settings</b> → ● → <b>Volume</b> → ● →  to adjust volume → ●
Set Vibration	→ <b>Sound/Vib Settings</b> → ● → <b>Vibration</b> → ● → <b>ON</b> or <b>OFF</b> → ●
Set Backlight	→ <b>Backlight Settings</b> → ● → <b>Switch ON/OFF</b> → ● → <b>Always ON, Always OFF</b> or <b>Link To Phone Set.</b> → ●
Set Blinking of Backlight	→ <b>Backlight Settings</b> → ● → <b>Blink</b> → ● → <b>ON</b> or <b>OFF</b> → ●

Start Here → **S! Appli** → ● → **S! Appli List** → ●

Allow/Prohibit S! Appli to Connect to Network	→ Select an S! Appli →  → <b>Security Settings</b> → ● → <b>Net Access</b> → ● → <b>All Permit, Prompt at 1st only, Prompt each time</b> or <b>Disable</b> → ● <ul style="list-style-type: none"> <li>Available with network-capable S! Appli.</li> </ul>
Allow S! Appli to Read User Data	→ Select an S! Appli →  → <b>Security Settings</b> → ● → <b>Read User Data</b> → ● → <b>All Permit, Prompt at 1st only, Prompt each time</b> or <b>Disable</b> → ● <ul style="list-style-type: none"> <li>Available with S! Appli that can read user data.</li> </ul>
Allow/Prohibit S! Appli to Write Personal Information	→ Select an S! Appli →  → <b>Security Settings</b> → ● → <b>Write/Del User Data</b> → ● → <b>All Permit, Prompt at 1st only, Prompt each time</b> or <b>Disable</b> → ● <ul style="list-style-type: none"> <li>Available with S! Appli that can write and delete user data.</li> </ul>
Allow S! Appli to Obtain Location Information	→ Select an S! Appli →  → <b>Security Settings</b> → ● → <b>Location Info</b> → ● → <b>Prompt at 1st only, Prompt each time</b> or <b>Disable</b> → ● <ul style="list-style-type: none"> <li>Available with S! Appli that can use location information.</li> </ul>
Reset Security Settings of S! Appli	→ Select an S! Appli →  → <b>Security Settings</b> → ● → <b>Reset Security Set.</b> → ● → <b>YES</b> → ●



## S! Appli

Start Here  ⇒ **S! Appli** ⇒ ● ⇒ **Settings** ⇒ ●

Reset S! Appli Settings	⇒ <b>Reset</b> ⇒ ● ⇒ <b>Set to Default</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ●
Delete All S! Appli	⇒ <b>Reset</b> ⇒ ● ⇒ <b>Delete All S! App</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ● • Some S! Appli are not deleted.



## Mobile Widget

Start Here → **Entertainment** → ● → **Mobile Widget**  
 → ● → **Settings** → ●

Check Auto Synchronize Settings	→ <b>Auto Refresh</b> → ● → <b>ON</b> or <b>OFF</b> → ●
Set Whether to Automatically Transmit When Abroad	→ <b>Auto Roaming</b> → ● → <b>ON</b> or <b>OFF</b> → ●
Delete All Widgets from Desktop Page	→ <b>Delete Content</b> → ● → Select a Desktop page → ● → <b>YES</b> → ●
Set Whether to Use Cookies	→ <b>Cookies</b> → ● → <b>ON</b> or <b>OFF</b> → ●
Delete Cookies	→ <b>Delete Cookies</b> → ● → <b>YES</b> → ●
Set Widgets On/Off	→ <b>Standby Disp. Set.</b> → ● → <b>ON</b> or <b>OFF</b> → ●

## S! Quick News

Start Here → **Entertainment** → ● → **S! Quick News**  
 → ● → **Settings** → ●

Set Automatic Updates for S! Quick News	→ <b>Auto Refresh</b> → ● → Select an item → ● → Select update interval, <b>ON</b> or <b>OFF</b> → ● (twice)
Hide S! Quick News in Standby	→ <b>Standby Settings</b> → ● → <b>Standby Disp. Set.</b> → ● → <b>OFF</b> → ● (twice)
Set Ticker Speed	→ <b>Standby Settings</b> → ● → <b>Speed Settings</b> → ● → <b>Fast, Normal</b> or <b>Slow</b> → ● (twice)
Set Information to appear in S! Quick News	→ <b>Standby Settings</b> → ● → <b>Unread &amp; Read Set.</b> → ● → <b>Unread Only</b> or <b>Unread &amp; Read</b> → ● (twice)
Hide S! Quick News Images	→ <b>Set Image Disp.</b> → ● → <b>OFF</b> → ● (twice)
Reset S! Quick News Registered Contents	→ <b>Del. Quick News</b> → ● → <b>YES</b> → ● (twice) → Enter Security Code → ● (three times)



## S! Info Channel

Start Here  → **Entertainment** → ● → **S! Info**  
**Ch./Weather** → ● → **Settings** → ●

Set Whether to Display Desktop Icon For New Received Information	→ <b>S! Information Notif.</b> → ● → <b>ON</b> or <b>OFF</b> → ●
Set Font Size for Web Pages	→ <b>Font Size</b> → ● → Select font size → ●

## Weather Indicators

Start Here  → **Entertainment** → ● →  
**S! Info Ch./Weather** → ● → **Weather**  
**Indicator** → ● → **Settings** → ●

Set Whether to Automatically Update Weather Information	→ <b>Weather Update</b> → ● → <b>ON</b> or <b>OFF</b> → ● (→ <b>YES</b> → ●)
Set Whether to Display Weather Indicators in Standby	→ <b>Standby Setting</b> → ● → <b>ON</b> or <b>OFF</b> → ●

Set Whether to Display Desktop Icon For New Received Information

→ **Weather Notif.** → ● → **ON** or **OFF** → ●



## Text Entry

Start Here ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●  
⇒ **Character Input Set** ⇒ ●

Set Text Input Method	⇒ <b>Input Mode</b> ⇒ ● ⇒ Select an input method ⇒ ●
Set Word Prediction	⇒ <b>Prediction</b> ⇒ ● ⇒ <b>ON</b> or <b>OFF</b> ⇒ ●
Set to Show T9 Suggestion Words in Kanji or Hiragana	⇒ <b>T9 Change Mode</b> ⇒ ● ⇒ <b>T9 Kanji Change Mode</b> or <b>T9 Kana Change Mode</b> ⇒ ●
Clear Learning History	⇒ <b>Clear Learned</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>T9/Expect Words/Pic.</b> or <b>Kana/Kanji Change/Face</b> ⇒ ●
Change Font Size	⇒ <b>CHG Input Size</b> ⇒ ● ⇒ Select a size ⇒ ●
Set Auto Cursor Movement in 5-Touch Mode	⇒ <b>Auto Cursor</b> ⇒ ● ⇒ <b>Fast, Normal, Slow</b> or <b>OFF</b> ⇒ ●

## Shortcut Key

Change Function Assigned to Shortcut Key ⇒ **Settings** ⇒ ● ⇒ **Other Setting** ⇒ ● ⇒ **Shortcut-key Setting** ⇒ ● ⇒  
Select a function ⇒ ● ⇒ **YES** ⇒ ●  
• To return to original settings, press , select **Reset Shortcut-key**, and press ●.

## Closed Illumination

Start Here ⇒ **Settings** ⇒ ● ⇒ **Illumination** ⇒ ● ⇒ **Closed Illum.** ⇒ ● ⇒ **ON** ⇒ ●

Set Flashing Color for Handset Close	⇒ <b>Set Color</b> ⇒ ● ⇒ Select a color ⇒ ●
Set Flashing Pattern for Handset Close	⇒ <b>Set Pattern</b> ⇒ ● ⇒ Select a pattern ⇒ ●



# Other Settings

## Key Illumination

Start Here → **Settings** → ● → **Illumination** → ● → **Key Illumination** → ● → **ON** → ●

Set Illumination for Power On/Off	→ <b>Power ON</b> or <b>Power OFF</b> → ● → <b>ON</b> or <b>OFF</b> → ●
Set Illumination for Incoming or Outgoing Calls	→ <b>Incoming Call</b> or <b>Dialing</b> → ● → Set a pattern
Set Illumination for Call Start	→ <b>Talking Start</b> → ● → Set a pattern
Set Illumination for Sending/Receiving Messages	→ <b>Mail Receiving</b> or <b>Mail Sending</b> → ● → Set a pattern
Set Illumination for Emotion-Expressing Mail	→ <b>Emotion</b> → ● → <b>Always, Unread Mail Only</b> or <b>OFF</b> → ●
Set Illumination for Alarm Notification	→ <b>Alarm</b> → ● → Set a pattern
Set Illumination for Snooze Notification	→ <b>Snooze</b> → ● → <b>ON</b> or <b>OFF</b> → ●

Set Illumination for Ir/IC Transmission	→ <b>Ir/IC Exchanging</b> → ● → <b>ON</b> or <b>OFF</b> → ●
Set Illumination for Missed Call or New Message	→ <b>Missed Call</b> → ● → Set a pattern
Set Illumination for When Handset Opens	→ <b>Open</b> → ● → Set a pattern
Set Illumination for Special Events	→ <b>Event</b> → ● → <b>ON</b> or <b>OFF</b> → ●

## Key Backlight

Set Key Backlight Color	→ <b>Settings</b> → ● → <b>Illumination</b> → ● → <b>Key Backlight</b> → ● → Select a color → ●
-------------------------	---

## Osaifu-Keitai®

Set Illumination for IC Card	→ <b>Tools</b> → ● → <b>Osaifu-Keitai</b> → ● → <b>IC Card Illumination</b> → ● → <b>ON</b> or <b>OFF</b> → ●
------------------------------	---



Delete all Lifestyle-Appli	⇒ <b>S! Appli</b> ⇒ ● ⇒ <b>Settings</b> ⇒ ● ⇒ <b>Reset</b> ⇒ ● ⇒ <b>Delete All LifeApp</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ● • Some Lifestyle-Appli are not deleted.
Set Whether to Enable Opening from Reader/Writer	⇒ <b>Tools</b> ⇒ ● ⇒ <b>Osaifu-Keitai</b> ⇒ ● ⇒ <b>Interface Settings</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>Browser</b> ⇒ ● ⇒ <b>ON</b> or <b>OFF</b> ⇒ ●

## S! GPS Navi

Start Here ⇒ **Tools** ⇒ ● ⇒ **S! GPS Navi** ⇒ ● ⇒ **NAVI Settings** ⇒ ●

Set Default Navi Appli	⇒ <b>Map Setting</b> ⇒ ● ⇒ <b>Select Navi Appli</b> ⇒ ● ⇒ Select a Navi Appli ⇒ ●
Begin Positioning Before/After Activating Map	⇒ <b>Map Setting</b> ⇒ ● ⇒ <b>Map Activate Setting</b> ⇒ ● ⇒ <b>After Positioning</b> or <b>Before Positioning</b> ⇒ ●
Save Map URL	⇒ <b>Map URL Settings</b> ⇒ ● ⇒ <b>&lt;Not Recorded&gt;</b> ⇒  ⇒ Enter Security Code ⇒ ● ⇒ <b>Map URL Name</b> ⇒ ● ⇒ Enter URL name ⇒ ● ⇒ <b>Map URL</b> ⇒ ● ⇒ Enter URL ⇒ ● ⇒

Edit URL Name	⇒ <b>Map URL Settings</b> ⇒ ● ⇒ Select a map URL ⇒  ⇒ Enter Security Code ⇒ ● ⇒ Select name ⇒ ● ⇒ Enter name ⇒ ● ⇒ Select URL ⇒ ● ⇒ Edit URL ⇒ ● ⇒ <ul style="list-style-type: none"> <li>• The map URL set by default cannot be edited.</li> </ul>
Delete Map URL	⇒ <b>Map URL Settings</b> ⇒ ● ⇒ Select a map URL ⇒  ⇒ <b>Delete</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ● <ul style="list-style-type: none"> <li>• The map URL set by default cannot be deleted.</li> </ul>
Set Map URL	⇒ <b>Map URL Settings</b> ⇒ ● ⇒ Select a map URL ⇒ ●
Set Location Information Send Method	⇒ <b>Send Location Info</b> ⇒ ● ⇒ <b>Confirm, Send</b> or <b>Not Send</b> ⇒ ●

## Bluetooth®

Start Here ⇒ **Tools** ⇒ ● ⇒ **Bluetooth** ⇒ ● ⇒ **Bluetooth Settings** ⇒ ●

Set Detection Time for Device	⇒ <b>Time-out to Search</b> ⇒ ● ⇒ Enter search time
-------------------------------	---



## Other Settings

Set Whether to Send Ring Tone for Voice Call, Video Call to Headset or Handsfree Device	<p>⇒ <b>Forward Ring Tone</b> ⇒ ● ⇒ <b>ON</b> or <b>OFF</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Ring tone will also sound from handset if <i>Headset Usage Setting</i> is set to <i>Headset+speaker</i> and <i>Forward Ring Tone</i> is set to <i>OFF</i>.</li> </ul>
Set Whether to Enable Calling from External Device	<p>⇒ <b>Dial From Other Device</b> ⇒ ● ⇒ <b>Valid</b> or <b>Invalid</b> ⇒ ●</p>
Check Handset Bluetooth® Information	<p>⇒ <b>Bluetooth Info</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Press  to change name of added device.</li> </ul>

## Wi-Fi

Start Here ⇒ **Settings** ⇒ ● ⇒ **Wi-Fi Setting** ⇒ ●

Show Confirmation Before Switching to 3G	<p>⇒ <b>Wi-Fi/3G Change Set</b> ⇒ ● ⇒ <b>Confirm Mode</b> or <b>Auto Mode</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>Unavailable when <i>ON/OFF</i> is set to <i>OFF</i>.</li> </ul>
Reset Wi-Fi Setting	<p>⇒ <b>Reset Wi-Fi Setting</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ●</p>

Start Here ⇒ **Settings** ⇒ ● ⇒ **Wi-Fi Setting** ⇒ ● ⇒ **Manual Setup** ⇒ ● ⇒ **Profile Setting** ⇒ ● ⇒ **Select a profile** ⇒ ●

Change Profile Name*	<p>⇒ <b>Set Profile Name</b> ⇒ ● ⇒ Enter profile name ⇒ ● ⇒  (twice)</p>
Set ESSID*	<p>⇒ <b>Wi-Fi Detail Setting</b> ⇒ ● ⇒ <b>ESSID Setting</b> ⇒ ● ⇒ Enter ESSID ⇒ ● ⇒  (three times)</p> <ul style="list-style-type: none"> <li>ESSID is an ID for preventing unintended network crossing. Specify the same setting as for the access point.</li> </ul>
Select Wireless Mode Setting*	<p>⇒ <b>Wi-Fi Detail Setting</b> ⇒ ● ⇒ <b>Radio Mode Setting</b> ⇒ ● ⇒ <b>Auto(802.11b/g)</b> or <b>802.11b</b> ⇒ ● ⇒  (three times)</p>
Set IP Address*	<p>⇒ <b>IP Setting</b> ⇒ ● ⇒ <b>IP Address Setting</b> ⇒ ● ⇒ <b>Automatic Setup</b> or <b>Manual Setup</b> ⇒ ● ( ⇒ <b>IP Address</b>, <b>Subnet Mask</b> and <b>Default Gateway</b> ⇒ ● ⇒ Enter setting values ⇒ ●) ⇒  (three times)</p>
Set DNS Server*	<p>⇒ <b>IP Setting</b> ⇒ ● ⇒ <b>DNS Setting</b> ⇒ ● ⇒ <b>Automatic Setup</b> or <b>Manual Setup</b> ⇒ ● ( ⇒ <b>Primary DNS</b> and <b>Secondary DNS</b> ⇒ ● ⇒ Enter setting values ⇒ ● ⇒  (three times)</p>





Use HTTP Proxy Server*	<p>⇒ <b>HTTP Proxy Setting</b> ⇒ ● ⇒ <b>ON</b> ⇒ ●</p> <p>⇒ <b>Server Address, Port Number(HTTP), Port Number(SSL) and Unset Proxy Address</b> ⇒ ● ⇒ Enter setting values ⇒ ● ⇒  (three times)</p> <ul style="list-style-type: none"> <li>Available when <i>Wi-Fi Access Mode</i> is set to <i>Direct Access</i>.</li> </ul>
Set Security Method*	<p>⇒ <b>Set Security Method</b> ⇒ ● ⇒ <b>None, WEP, WPA/WPA2-PSK or WPA2-PSK</b> ⇒ ●</p> <p>( ⇒ Enter or select setting values ⇒ ●)</p> <p>⇒  (twice)</p>
Set to Use Public Wireless LAN*	<p>⇒ <b>Public Wi-Fi Setting</b> ⇒ ● ⇒ <b>ON</b> ⇒ ●</p> <p>⇒ <b>ID and Password</b> ⇒ ● ⇒ Enter ID and password ⇒ ● ⇒  (three times)</p> <ul style="list-style-type: none"> <li>When using a profile other than <i>BB モバイルポイント</i>, ID and password entry may be required even if an ID and password are already set.</li> <li>Does not guarantee connection to all public wireless LAN services.</li> </ul>
Set Access Mode*	<p>⇒ <b>Wi-Fi Access Mode</b> ⇒ ● ⇒ <b>Keitai Wi-Fi or Direct Access</b> ⇒ ● ⇒  (twice)</p>

\* After setting, in Manual Setup window (P. 13-13), press (Finish).

## Resetting Handset

Start Here ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●

Reset All Settings to Default	<p>⇒ <b>Reset Settings</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ●</p>
Initialize Handset to Default Status	<p>⇒ <b>Initialize</b> ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ <b>YES</b> ⇒ ● ⇒ <b>YES</b> ⇒ ●</p> <ul style="list-style-type: none"> <li>When the initialization is completed, handset automatically shuts down and restarts.</li> <li>When handset is initialized, all data downloaded and saved on handset are deleted and cannot be restored.</li> <li>Your Security Code will also be reset to default.</li> </ul>

