

USIM Card.....	1-2
About USIM Card	1-2
USIM Card Installation	1-3
USIM PINs	1-3
Parts & Functions.....	1-4
Handset	1-4
Opening/Closing Handset	1-6
Key Operations in Standby	1-6
Display	1-8
About Battery	1-11
Before Charging	1-11
Battery Installation	1-13
Charging Battery	1-14
Handset Power On/Off.....	1-15
Manner Mode	1-16
Minding Mobile Manners.....	1-16
Manner-related Features	1-16
Activating Manner Mode	1-17
Activating Offline Mode	1-17
Activating Driving Mode	1-17
Handset Menus.....	1-18
Main Menu	1-18
Menu Numbers	1-19
Accessing Functions/Info from Standby	1-20
Touch Panel.....	1-21


Standby Options & Event Indicators	1-22
Event Indicators.....	1-22
Mobile Widget (Japanese).....	1-22
S! Quick News (Japanese).....	1-22
Shortcuts.....	1-23
Customizing User Interface	1-23
Customized Screen	1-23
Changing Display Font.....	1-24
Private Menu	1-25
Opening Private Menu	1-25
Customizing Private Menu	1-25
Adding Shortcuts.....	1-25
Simple Menu.....	1-26
Activating Simple Menu	1-26
Simple Menu	1-27
Passwords.....	1-28
Phone Password	1-28
Center Access Code	1-28
Security Code	1-28
Multi Task	1-29
Activating Another Function.....	1-29
Ending Current Functions.....	1-29
View Blind	1-30
My Number	1-30

USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use handset or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.

USIM Card

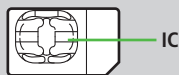

- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction.

If **USIM not inserted After power-off Insert USIM** appears, re-insert USIM Card properly then restart handset.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (☎P.19-34).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

Note

 
- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

USIM Card Installation

- Remove battery (➡P.1-13) then follow steps below.


Inserting

- 1 With IC chip down, insert USIM Card

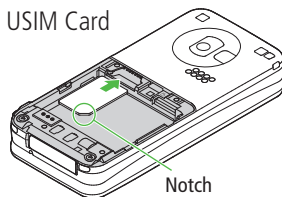

Removing

 - 1 Slide out USIM Card gently

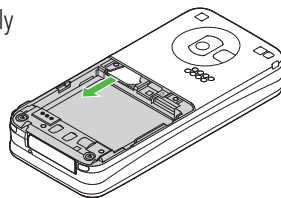

Note

- Do not force USIM Card into or out of handset; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

USIM PINs

There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to **9999** by default.
- PIN/PIN2 can be changed (➡P.12-3).

PIN	4 to 8-digit code used to prevent unauthorized handset use. <ul style="list-style-type: none"> ● When PIN Authentication is ON (➡P.12-2), PIN entry is required each time handset is turned on (with USIM Card inserted).
PIN2	Required to clear call times/costs or set maximum cost (➡P.18-9).

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unblocking Key (PUK/PUK2) (➡P.12-3).

 
- For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (➡P.19-34).

Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (➡P.19-34).

Parts & Functions

Handset

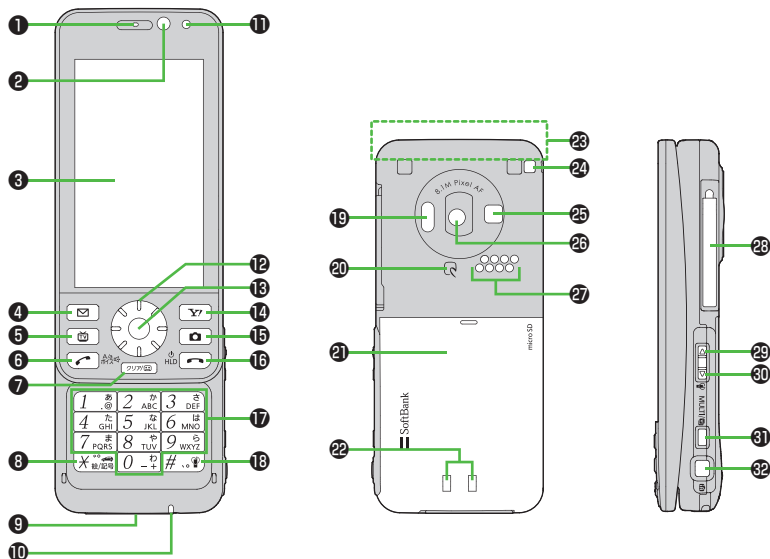

Using Earphone/Microphone or Video Output Cable

Connect following accessories (A) and (B) to External Port.

 
(A) Earphone/microphone or video output cable

(B) Stereo Earphone Conversion Cable

<Operation>

① Connect flat plug (A) to flat terminal (B)

② Connect plug (B) to External Port

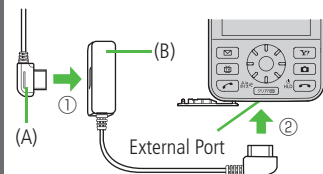

- Do not press answer button on earphone/microphone when connecting. Doing so may cause earphone/microphone to malfunction. In that case, pull out earphone/microphone, and connect again.

1 Earpiece**2 Inside Camera**

- Use during Video Calls
- Capture a self-portrait

3 Display**4 [Envelope Icon] Mail Key**

- Open Messaging menu
- Execute Upper Left Softkey function (P.viii)

5 [TV Icon] TV Key

- Activate TV
- Execute Lower Left Softkey function (P.viii)

6 [Phone Icon] Send Key

- Initiate or answer calls
- Toggle upper/lower case in text entry windows
- Use Voice Dial

7 [Pencil Icon] Clear/Memo Key

- Delete characters
- Cancel menus
- Use Answer Phone

8 [X Icon] */Pictograph/Symbol/Driving Mode Key

- Enter "X"
- Access pictographs in text entry windows
- Access symbol list from pictograph list
- Toggle Driving Mode

9 External Port

- Connect AC Charger (sold separately), Stereo Earphone Conversion Cable (not included) or other accessories here

10 Microphone**11 Light Sensor**

- Detects ambient light

12 [Speed Dial Icon] Speed Selector

- Move cursor or select menus (P.viii)

13 Notification Light/Charging Indicator

- Flashes for incoming transmissions
- Lights for charging

14 [Yahoo! Icon] Yahoo! Keitai Key

- Open Yahoo! Keitai Main Menu
- Execute Upper Right Softkey function (P.viii)

15 [Camera Icon] Camera Key

- Activate Camera/Video Camera
- Execute Lower Right Softkey function (P.viii)

16 [End/Escape & Power Key]

- Power on/off (P.1-15)
- End calls
- Return to Standby

17 [0-9] Keypad

- Enter phone number/text

18 [#]#/Manner Key

- Enter "#"
- Toggle Manner Mode

19 Infrared Port

- Transfer data via Infrared

20 [Logo Icon] Logo

- Place Logo over a reader/writer when using Osaifu-Keitai® (P.13-11)

21 Battery Cover**22 Charging Terminals****23 Antenna****24 Strap Eyelet****25 Flash/Photo Light**

- Lights/flashes during Camera use
- Use when shooting in dark places

26 Outside Camera**27 Speaker****28 TV Antenna****29 [Up Arrow Icon] Upper Side Key**

- Increase earpiece/TV volume
- Activate Album-Touch

30 [Down Arrow Icon] Lower Side Key

- Decrease earpiece/TV volume
- [Closed Position]

31 [Multi/Widget Icon] MULTI/Widget Key

- Open TASK MENU
- View list of available widgets

 
32 [Shutter Icon] Shutter Key

- Activate Camera-Touch
- Capture still images/videos

Opening/Closing Handset

Slide Display up/down.

Do not touch keypad when opening/closing handset; may cause malfunction.

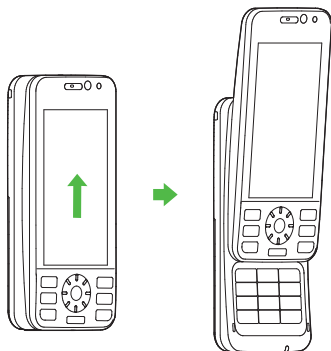















 
 








 
 





 

 
 
Note






 






- Customize handset to answer/end calls, etc. by opening/closing handset (P.18-7, P.18-9).
- Do not touch Display when opening/closing handset with Album-Touch or Camera-Touch activated; may cause malfunction.

Key Operations in Standby

Press or press and hold (more than one second) a key in Standby to execute the following.

Key Operation		Function
	Short Press	Initiate a call
	Long Press	Voice dial
	Short Press	Show/hide widgets
	Long Press (2 + sec)	Turn off power
	Short Press	Open Main Menu
	Long Press	Activate/cancel Keyguard
	Short Press	Play Answer Phone
	Long Press	Activate/cancel Answer Phone
	Short Press	Activate Camera
	Long Press	Activate Video Camera
	Short Press	Activate Digital TV
	Long Press	Activate/cancel IC Card Lock
	Short Press	Open Messaging Menu
	Long Press	Open S! Mail Composition window
	Short Press	Access Yahoo! Keitai
	Long Press	Open Yahoo! Keitai Menu
	Short Press	Select Event Indicator, Shortcut, widget, Status Indicator, S! Quick News ticker
	Long Press	Activate Slideshow-Touch

Key Operation	Function
 Short Press	Open Phone Book search window
 Long Press	Open Phone Book entry window
 Short Press	Open Incoming Call Logs
 Long Press	Open Received address logs
 Short Press	Open Redial logs
 Long Press	Open Sent address logs
 Short Press	Enter "1"
 Long Press	Open Phone Book page "あ"
 Short Press	Enter "2"
 Long Press	Open Phone Book page "か"
 Short Press	Enter "3"
 Long Press	Open Phone Book page "さ"
 Short Press	Enter "4"
 Long Press	Open Phone Book page "た"
 Short Press	Enter "5"
 Long Press	Open Phone Book page "な"
 Short Press	Enter "6"
 Long Press	Open Phone Book page "は"
 Short Press	Enter "7"
 Long Press	Open Phone Book page "ま"
 Short Press	Enter "8"
 Long Press	Open Phone Book page "や"
 Short Press	Enter "9"
 Long Press	Open Phone Book page "ら"
 Short Press	Enter "0"
 Long Press	Open Phone Book page "わ"


Key Operation	Function
 Short Press	Enter "＊"
 Long Press	Activate/Cancel Driving Mode
 Short Press	Enter "#"
 Long Press	Activate/Cancel Manner Mode
 Short Press	Increase earpiece volume
 Long Press	Activate Album-Touch
 Short Press	Decrease earpiece volume
 Long Press	Decrease earpiece volume ¹ / Activate/Cancel Manner Mode ²
 Short Press	Activate Camera-Touch
 Long Press	—
 Short Press	Activate TASK MENU
 Long Press	Open Widget List

¹ Available only when handset is open

² Available only when handset is closed

Display

 Display Indicators

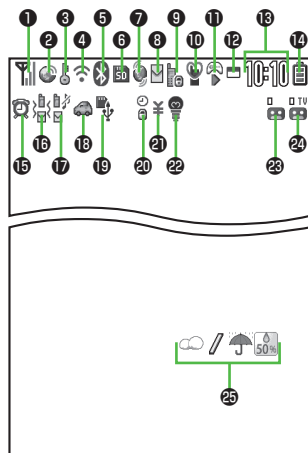

● 15 - 24 are Status Indicators. Access functions from respective indicators (P.1-20).

1 Signal Strength

Strong Moderate Weak Low

Offline Mode Active

Out-of-Range

- 2
 - Packet Transmission in Progress (PC)
 - Dial-up Connection Established on PC
 - 3G/GSM Packet Transmitting
 - Operator (set for Select Operator)
 - Out-of-Range
 - 3G/GSM 3G/GSM Packet Transmission Available*
 - 3G/GSM 3G/GSM Packet Transmission Unavailable*

* Appears only while abroad

- 3
 - Secure Content
 - S! Addressbook Back-up Synchronizing
 - Auto Sync Settings Active
- 4
 - PC Site Browser Active
 - Infrared Transmission
 - IC Transmission
 - USB Cable Connected
 - Keyguard Active
- 5
 - Software Update (Notification/Updating/Result)

1415 Voice Mail

(Blue) Bluetooth® Device Connected

(Black) Bluetooth® Power Save Mode

6 microSD Card

- Inserted
- Reading/Writing Data
- Write-protected
- Unsupported
- Unusable

USB Cable (Not Included) Connected

















- microSD Mode
- MTP Mode

During Call























- During Video Call
- During Voice Call














- 7
 - Positioning
 - New S! Quick News Information
 - New S! Information Channel info
- 8
 - Unsent Message
 - Unread Message
 - Incoming Mail Memory Full

9 Security


-  Privacy Key Lock Active
 -  Personal Data Lock Active
 -  Key Pad Dial Lock Active
 -  IC Card Lock Active
 -  Secret Mode and Secret Data Only Active
 -  Key Pad Dial Lock, Secret Mode and Secret Data Only Active
 -  Key Pad Dial Lock and Personal Data Lock Active
 -  Secret Mode, Secret Data Only and IC Card Lock Active
 -  Privacy Key Lock and IC Card Lock Active
 -  Personal Data Lock and IC Card Lock Active
 -  Key Pad Dial Lock and IC Card Lock Active
 -  Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active
 -  Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active
- 10  Manner Mode Active
-  Manner Mode (set in User Mode)
-  Remote Monitoring Active

11 S! Appli

-  Paused
 -  Active
 -  Auto Start Request Received
 -  Start Request Received while Paused
 -  Start Request Received while Active
- 12  One Function Active
-  Multiple Functions Active
-  Digital TV Active
-  Recording TV Program
-  During Timer Recording
-  TV Recording Paused
-  Music Playback
-  Music Paused
- 13 Time
- 14 **Battery Level**
-  →  →  →  (Red)
- 15  (Red) Alarm Set (Today)
-  (Blue) Alarm Set (After Today)
- 16  Vibration Active (Incoming Call)
-  Vibration Active (Incoming Message)
-  Vibration Active (Incoming Call/Message)

- 17  Incoming Call Ringtone Disabled
-  Incoming Message Ringtone Disabled
-  Incoming Call/Message Ringtone Disabled
- 18  Driving Mode
- 19  microSD Mode set for USB Mode
-  MTP Mode set for USB Mode
- 20  Timer Lock at Close Active
- 21  Call Charge Reached Upper Limit
- 22  Back Light OFF
-  View Blind ON
-  Back Light OFF; View Blind ON
- 23  Answer Phone Active (Number of Answer Phone Messages (Voice Calls))
- 24  Answer Phone Active (Number of Answer Phone Messages (Video Calls))
- 25 Weather Indicator (P.8-3)

Note

 
- To show indicator description: **Main Menu**
 ► **Settings** ► **Display Settings**
 ► **Describe Icons** ►  to highlight an indicator

Motion Control

Change handset orientation to switch Portrait/Landscape View.

■ Use Motion Control in These Windows

- Still images/videos/PC movies
- Digital TV
- PC Site Browser
- Yahoo! Keitai (default setting: OFF)
- etc

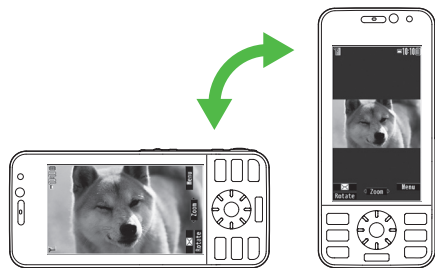

Note

- Motion Control may not function depending on handset orientation.
- For still images, Motion Control remains active even when handset is turned 90°clockwise or 180°.

Tip

Settings

- Disable All Motion Control Settings
- Customize Motion Control Settings per Function (P.18-6)

About Battery


Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

Charging Time & Operating Time Estimates

		3G	GSM
Charging Time		130 minutes*	
Standby Time		640 hours*	370 hours*
Talk Time	Voice Call	220 minutes*	230 minutes*
	Video Call	120 minutes*	—

* Approximate value

- 3G Mode/GSM Mode:  P.2-11
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.

Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

Battery Time

- Using handset in poor conditions may shorten battery time.
 - Extreme temperatures
 - Impaired handset, battery or Charging Terminals
 - Signal is weak/handset is out-of-range
 - Handset is left mid-operation (not in Standby)
 - Viewing TV, playing music or using S! Appli, etc.



- Extending battery time

Example:

- Turn Back Light Time **OFF** (☞P.18-5)
- Select **OFF** for Key Tone (☞P.18-3)

When Battery Runs Out

- Unless a Call is in Progress

A message appears and warning tone sounds for 10 seconds. Handset power turns off automatically after one minute; press any key except  or  to cancel warning tone manually. Charge or replace battery.

 
- If Manner Mode is active, nothing sounds.

- During a Call

A message appears and warning tone sounds via Earpiece or Speaker. After 20 seconds, call ends and handset shuts down in one minute. Charge or replace battery.

Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☞P.1-9) or a message appears on Display.

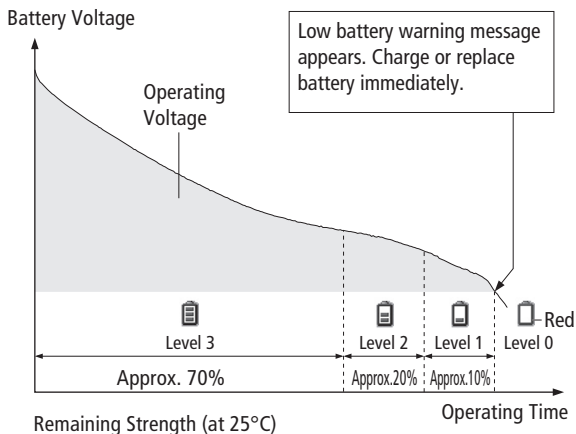


Note

- Alternatively, check battery level from **Main Menu** ► **Settings** ► **Phone Settings** ► **Battery** ► **Battery Level**

Battery Installation


- Always turn off handset power before removing battery.

 1 Press and slide to remove cover

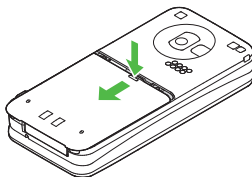


2 Insert Battery

 Align battery contacts with handset pins.

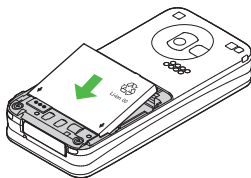


Remove Battery

 Lift battery out as shown.

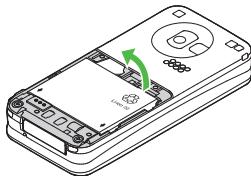

3 Replace battery cover

 Cover should click into place.

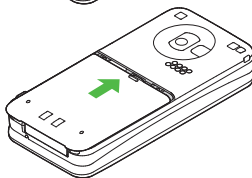

Note

- Lithium-ion batteries are valuable and recyclable resources.
 - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
 - To avoid fire or electric shock, do not:
 - Short-circuit battery
 - Disassemble battery

 


Li-ion 00

Charging Battery

Use only specified AC Charger (sold separately).

Charging Time: Approximately 130 minutes

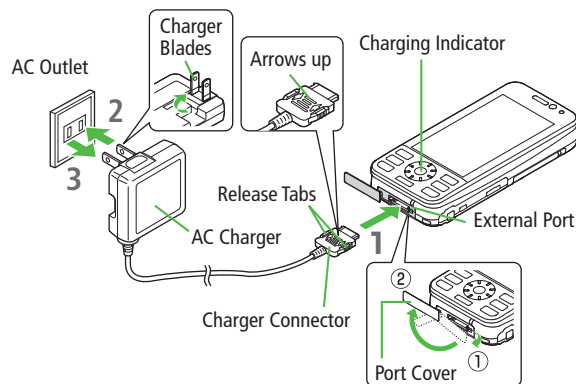

1 Connect AC Charger to handset

Insert Charger Connector (printed side up) into External Port.

2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

- When Charging Indicator flashes, remove AC Charger and battery from handset then attach them again.

- Charge Sound is heard when charging starts/ends.

When handset is turned off or in Manner Mode, nothing sounds.

3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

Note

- For details, read AC Charger instructions.
- Alternatively, charge battery by using Desktop Holder (not included).

Tip

- Charging Start/End Tone Off (P. 18-3)

Handset Power On/Off

1 Press and hold

 
Start-up window appears and handset enters Standby.

- Enter PIN if PIN Authentication is ON (➡P.12-2).

2 Press for 2+ seconds

Handset shuts down.

- Do not turn on handset immediately after turning off. Wait a few seconds.

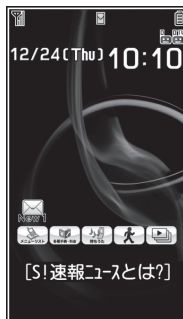

Standby

Initial Setup




The first time handset powers up and Initial setting window appears, select **YES** and set the following: (Each item can be set separately.)

Date & Time* (➡P.18-8)	Set date and time
Phone Password (➡P.12-2)	Enter 9999, and enter new Phone Password (4-8 digits)
Key Tone (➡P.18-3)	Select ON or OFF
Speed Selector Sound (➡P.18-6)	Select a pattern or OFF
Font Size (➡P.18-6)	Set Display font size all at once
Keyguard (➡P.12-4)	Select ON or OFF

* May be automatically set

View Information Messages

At time of purchase, information message is provided for your convenience.

-  to highlight an Event Indicator (➡P.1-22), then press 
 -  → **Incoming Mail** → **Received** → Select a message
- Widget appears in Standby after information message is viewed.

Note


- If **USIM not inserted After power-off Insert USIM** appears, clean and properly re-insert USIM Card then restart handset.
- After a period of inactivity, Display turns off.



Retrieving Network Information

When ,  or  is pressed for the first time in Standby, handset initiates Network Information retrieval;  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ► **Settings**
► **Connectivity** ► **Retrieve NW Info** ► **YES**



Keyguard

Activate Keyguard by pressing and holding  in Standby to avoid key operation error while carrying handset. Open handset to cancel Keyguard temporarily.

-  appears when Keyguard is set.
- To cancel Keyguard, repeat operation.
- To avoid canceling Keyguard even when opening handset:
(Keyguard: P.12-4)

Tip

Settings

- Change Wallpaper ● Add Calendar to Wallpaper
- Change Wallpaper Randomly (P.18-3) ● Change Start-up Window (P.18-4)






 
Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.


- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner-related Features



Manner Mode ( P.1-17)	Press Manner key to mute handset tones and activate vibration for incoming transmissions.
Vibration Mode ( P.18-2)	Activate in public places, meetings, etc. for silent call/message alerts.
Ringer Volume ( P.18-2)	Mute call/message tones.
Offline Mode ( P.1-17)	Suspend all handset transmissions.
Answer Phone ( P.2-15)	Use to handle incoming calls when inappropriate/unsafe to answer.
Driving Mode ( P.1-17)	While driving, send a voice message informing the caller that you cannot answer the call (Handset does not ring.).

Activating Manner Mode

Press one key to mute handset tones and activate vibration for incoming transmissions.

- Manner Mode settings can be changed (P.18-7).
- When Manner Mode is active,  appears.

1 In Standby, press and hold

- To cancel: Press and hold  again
- To activate/cancel while handset is closed:
Press and hold 



Note


- Shutter click and incoming tone via Earphone (**Level 1**) sound even in Manner Mode.
- When Music Player or Digital TV activates in Manner Mode, confirmation appears asking whether to cancel Manner Mode.
- When **Prefer manner mode** is **OFF** (P.13-7), Alarm sounds even if Manner Mode is active.

Tip

Settings ● Set Manner Mode Type (P.18-7)

Activating Offline Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

- When Offline Mode is active,  appears.

Main Menu ► Settings ► Call Settings ► Offline Mode

1 YES

- To cancel: Follow the same steps.

Note

- Offline Mode disables Bluetooth®/Infrared/IC transmissions. Bluetooth® handsfree devices cannot be used either.

Activating Driving Mode

Handset does not ring for incoming calls. Voice guidance informs the caller you are unavailable and handset records voice/video messages.

- When Driving Mode is active,  appears.

1 In Standby, press and hold

 
- To cancel: Press and hold  again






Note

- When Answer Phone memory is full, incoming calls are rejected.
- Check ringtone when earphone/microphone is connected.

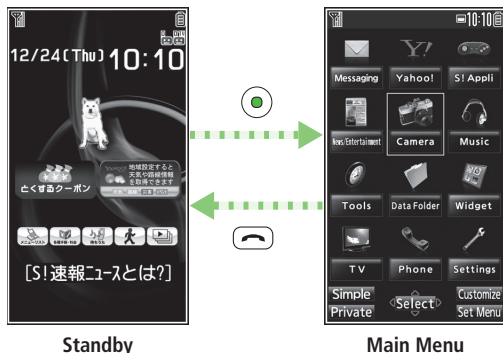Handset Menus

Main Menu















- In Standby,**  Main Menu appears.
 - To change Main Menu theme:
 **[Set Menu]** → Select a theme
-  **to highlight an icon** →  Selected function menu appears.
 - To return to Standby: 

Note

- Standby window returns after 15 seconds of inactivity in Main Menu.

Main Menu Icons

Messaging  Create new/view received messages	Yahoo! (Yahoo! Keitai)  Enjoy Mobile Net & PC Site browsing...	S! Appli  Download, set and use S! Appli
News/Entertainment  Use S! Quick News or E-books	Camera  Capture images or record videos	Music (Music Player)  Use Music Player
Tools  Set Alarm or save Calendar entries...	Data Folder  Open files saved on handset/microSD Card	Widget (Mobile Widget)  Use Mobile Widget
TV  View TV or record/timer-record programs	Phone  Access Phone Book, save contact information...	Settings  Adjust/customize handset settings

Tip

Settings

- Change Display Color Scheme ● Change Main Menu Icons
- Change Main Menu Background (P.18-4)

Menu Numbers

 
Use keypad to select functions or menu items.

Unnumbered Menu Items

When numbers do not appear, select items as shown.

Main Menu

(#) to select **Settings** from Main Menu

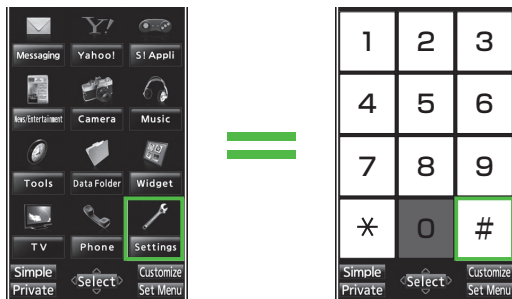

- Press (0) to show Account Details. To open Phone top menu, select **Phone** by pressing (6)

 
When Menu Icons is Set to Basic or Customize

Menus cannot be selected from Main Menu by keypad.

Open menu items by entering specific number in Main Menu (Quick Open Menu: P.19-14).

Top Menu Opened from Main Menu

(2) to select **Display Settings**

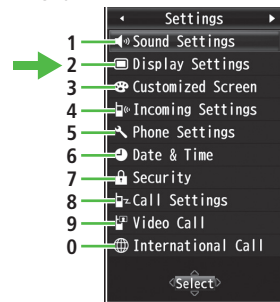


Example: Settings Top Menu

Numbered Menu Items

Press key corresponding to menu number to select a menu.

 In Display Settings (from **Settings** Top Menu), (5) to select **Back Light Time**

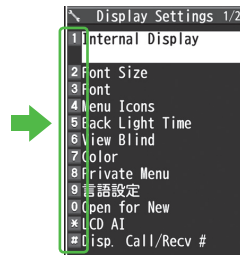

Accessing Functions/Info from Standby



Select indicators/ticker in Standby to access functions and information.

Available Items

- Event Indicator (P.1-22)
- Mobile Widget (P.7-2)
- S! Quick News (P.8-4)
- S! Information Channel/Weather (P.8-2)
- Shortcuts (P.1-23)
- Status Indicators (P.1-8)

1 In Standby,





Pointer () appears.

- Press  or  to return to Standby (Pointer disappears).

2 Use to move pointer () to an indicator, icon or ticker →

 [Select]

Indicator, icon or ticker is selected. Function name appears.

- Press and hold  to move pointer () continuously
- To cancel selection:  or 




3 [Select]

Function or information appears.

When Widgets Do Not Appear

Pointer () does not appear. After Step 1, use  to highlight an item

→  [Select] to show function or information

- To show/hide widgets: 

Using Pointer ()

> In Standby,  →  [Menu] → Select an item (See below)

Item	Operation/Description
to widgets list	Open Widget List
Yahoo!JAPAN Login	Open Yahoo! JAPAN log in window
Stand-by Display	Change Standby wallpaper > Select a folder → Select an image

Touch Panel

 
Use Touch Panel in Camera-Touch or Album-Touch mode.





- Remove sheet from Display. Do not affix any stickers on Display.
- Touch Panel operations are invalid while Display backlight is off. Press any key to turn backlight on.
- 0 - 9, *, # keys are unavailable when using Touch Panel with the exception of Phone Password entry.

Notes

- Touch Panel may not respond to sharp objects (e.g. pens), fingernails, gloved fingers or when objects are placed on Display.
- To avoid malfunctions, do not touch Display with wet fingers or press Display too hard.

Touch Panel Operations

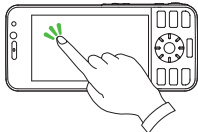Tap [Select items, execute functions, etc.]	Tap Display 
---	--

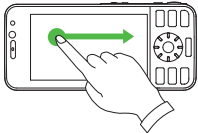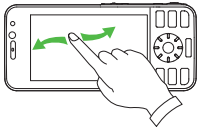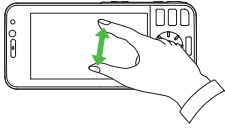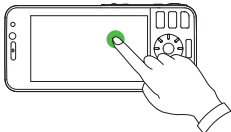    Drag [Scroll screen, etc.]	Drag item to target location and release 
Swipe [Move, scroll screen, etc.]	Swipe your finger across Display in desired direction 
Pinch [Enlarge/reduce screen]	Spread (enlarge) or pinch (reduce) on Display using two fingers 
Hold [Continuous zoom, etc.]	Touch and hold an item 

1 Standby Options & Event Indicators

Check various indicators and information in Standby.

- To access functions/information from indicators: ☞P.1-20

Event Indicators

Event Indicators appear for missed calls, messages, etc.



Events

Missed calls	Missed calls (☞P.2-14)
New message	New messages (☞P.14-10)
Have Answer Ph Msg	Recorded caller messages (☞P.2-16)
Voice mail	New Voice Mail (☞P.2-19)
Had incoming call(s)	If Missed Call Notification is active, indicator appears for calls missed while handset is off, out-of-range, engaged, etc. (☞P.2-20)
New S! Info Channel	S! Information Channel (received updates) (☞P.8-2)
New Weather	Weather Indicator (received updates) (☞P.8-3)

 
Other Information

- Missed alarm (☞P.13-6)
- S! Appli startup notice (☞P.16-3)
- USB Mode setting (☞P.11-11)
- Missed location information request
- Auto location information notice (☞P.17-3)
- Timer (☞P.5-13)
- Content Key (☞P.10-5)
- Software Update result (☞P.19-13)

Mobile Widget (Japanese)

Paste various widgets to Standby to access information or tools from Standby.


- Mobile Widget: ☞P.7-2
- To show/hide widgets: ☞

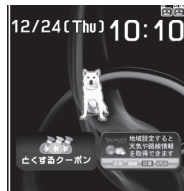

S! Quick News (Japanese)

By default, S! Quick News appears at bottom of Display.

 - S! Quick News: ☞P.8-4
- Show/hide S! Quick News: ☞P.18-18



Shortcuts

Access frequently used functions from Standby.

- Following shortcuts are set by default:
 - メニューリスト (Menu List)*
 - 各種手続き・料金 (Manage Account/Fees)*
 - 待ちうた (Machi-Uta®)*
 - Pedometer
 - Slideshow-Touch
- * Requires network connection. Available in Japanese only.



Shortcuts

Adding Shortcuts

- Some functions are not available for shortcuts.

- 1 Open a function, [Menu] → **Add shortcut icon → YES**

Scroll Shortcuts

Five shortcuts appear at a time. To scroll more shortcuts, first press [Left] or [Right] to hide widgets, then press [Up] and use [Down] to scroll shortcuts.

Editing/Deleting Shortcuts

- 1 In Standby, [Home] → [Up] to move pointer → Highlight a shortcut
- 2 [Menu] [Menu] → Select an item (See below)

Item	Operation/Description
Edit title	> Edit title
Sort	> Select an item → Select a target → [Finish] → YES
Delete this	> YES
Delete all	> YES

Customizing User Interface

Customized Screen

Download and set Customized Screen to personalize user interface, ringtone, etc., to a selected theme.

Downloading Customized Screen





Main Menu ► Data Folder ► Customized Screen

- 1 **Customized Screen → YES**

Website providing characters or applications appears.
Follow onscreen instructions.

- To manage Customized Screen applications in Data Folder:
P.10-11

Setting Customized Screen

- 1 In Standby, 
- 2  [Customize] → *Customized Screen*
- 3 Highlight a theme →  [Set]
 - To toggle thumbnail and list:  [Change]
- 4 **YES**

Note

- Customized Screen cannot be set when battery is low.
- Other functions are not available while switching. For some seconds after switching is complete, all calls/messages may be blocked.
- Alternatively, **Main Menu ► Settings ► Customized Screen**
To cancel, select **Release Settings**.
- When Simple menu is active, Customized Screen settings are not reflected. To reflect settings, cancel Simple menu.

Changing Display Font

Change Display font. Fonts can also be downloaded.

Downloading Fonts

Main Menu ► Settings ► Display Settings ► Font

1 **Download Font → YES**

Follow onscreen instructions.

- For details on Font folder (Data Folder):  P.10-11

Note

- While Personal Data Lock is set, fonts cannot be downloaded.

Changing Font

Main Menu ► Settings ► Display Settings ► Font

1 Select a folder → Highlight a font → [Set]

 
Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.

Opening Private Menu

- 1 In Standby, → [Private]
Private Menu appears.
● To return to Main Menu: [Normal]
- 2 Select a menu

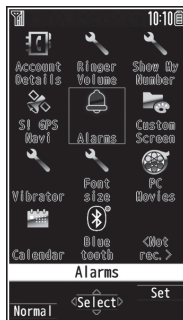

Private Menu Window

Change Private Menu Background

- > After Step 1, [Set] → [Menu] → *Change BG image* → Select a folder → Select an image

Customizing Private Menu

 
- 1 In Standby, → [Private] → [Set]
- 2 Highlight a target → [Menu] → *Add to menu*
- 3 Select an item

Cancel Functions

- > In Step 2, (highlight a function → [Menu] → *Release this* or *Release all* → YES

Reset Private Menu

- > In Step 2, [Menu] → *Reset menu* → YES

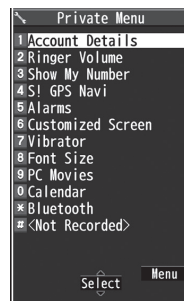

Private Menu Setting Window

Adding Shortcuts

- 1 In Standby, → [Private] → [Set]
- 2 [Menu] → *Add shortcut icon* → YES

 
Note

- Alternatively, open Private Menu setting window from
Main Menu ► **Settings** ► **Display Settings** ► **Private Menu**


Simple Menu

Activate Simple menu to limit menu options to basic ones.

- Handset is limited to basic operations (P.1-27).

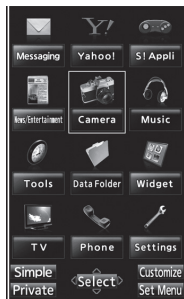

Normal Mode
Window

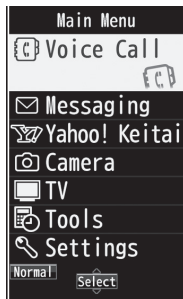 

Simple Menu
Window

Activating Simple Menu

1 In Standby, → [Simple] → YES

2 YES or NO

- Select **YES** to set all items in Font Size (P.18-6) to **Large**.
- To open Simple menu: in Standby.

Cancel Simple Menu

> In Standby, → [Normal] → YES

Note

- Turning off the power does not cancel Simple menu.
- Widgets and SI Quick News do not appear in Standby while Simple menu is active. Customized Screen setting is canceled.

Simple Menu

Simple Menu	Page
Voice Call	
Outgoing Log	2-13
Incoming Log	2-13
Phone Book	4-6
Create New Phone Book	4-3
Answer Phone	2-15
Account Details	1-30
Messaging	
Incoming Mail	14-15
Create New	14-4
Retrieve New	14-14
Drafts	14-15
Sent Messages	14-15
Create New SMS	14-7
Yahoo! Keitai	
Yahoo! Keitai	15-2
Bookmarks	15-8
Saved Pages	15-8
Enter URL	15-4

Simple Menu	Page
Camera	
Take Pictures	6-6
Shoot Videos	6-7
Camera-Touch	6-13
See Pictures	6-12
Watch Videos	6-12
Album-Touch	6-15
TV	
Watch TV	5-5
Timer Recording	5-13
Channel Setting	5-4
Tools	
Data Folder	10-2
Alarms	13-6
Calendar	13-2
Calculator	13-8
Notepad	13-8
Receive via Infrared	11-2

Simple Menu	Page
Settings	
Ringtones/Volume	1-16 18-2
Screen/Fonts	18-3 to 18-6
Call Time & Cost	18-9
Date & Time	18-8
Security	12-2 13-12 19-12
Call Settings	2-18 to 2-22

Passwords

Phone Password, Center Access Code and Security Code are needed for handset use.

Phone Password

<Default> 9999

4 to 8-digit number required to use/change some handset functions.

- Enter number within 15 seconds.
- _ appears for each digit entered.
- Phone Password can be changed on handset (☞P.12-2).

Center Access Code

4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.

- Do not attempt to change Center Access Code. For details, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

Security Code

4-digit number specified at initial subscription, required to restrict handset services (☞P.2-21).

- Enter number within 15 seconds.
- If entered incorrectly three times, Security Code settings lock; Security Code & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (☞P.19-34) for details.
- Security Code can be changed on handset (☞P.2-21).

Note

- Write down Phone Password, Center Access Code and Security Code. Do not reveal Phone Password, Center Access Code and Security Code. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).


Multi Task

Activate up to three functions from four different groups at the same time.

Group	Function
① Messaging Group	Messaging
② Yahoo! Keitai/S! Appli Group	Yahoo! Keitai/S! Appli/News/Entertainment
③ Tools Group	Music Player*/Camera/Tools/Data Folder/TV/Phone/Mobile Widget
④ Settings Group	Settings

* Functions other than Tools Group may be included.

 - [▼] appears above the icons of an active group.
- [] appears for single function in use; [] for multiple functions in use.

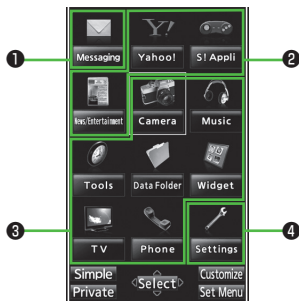


Tip

- Other Functions while Watching TV (P.5-8)
- Using Other Functions while Listening to Music (Play Background) (P.9-7)

Activating Another Function

Activate another function from a different group. Multi Task is unavailable when Simple menu is active.

 - 1 [MULTI/] → *Open Menu* →
Select a function

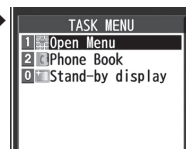

TASK MENU Window

Note

- If another function is selected from same group, confirmation appears. Select **YES** to cancel current function and start a new function.

Ending Current Functions

- 1 []

■ End All Active Functions

> [MULTI/] → [END] → YES

View Blind

Activate View Blind to protect Display from prying eyes.

Main Menu ► Settings ► Display Settings ► View Blind

1 *ON*

2 Select a level


- Set level 1-3 (Level 3 is the highest level).

Note

- Alternatively, press and hold (8) to activate/cancel. Previously selected level takes priority.
- View Blind cannot be activated: While in Standby; while S! Appli is active; while Privacy Key Lock is active; during All Reset; when phone number is being entered

My Number

Confirm handset phone number in Account Details (P.4-12). Also confirm data saved in Account Details: name, mail address, etc.

1 In Standby,  → 
Account Details appears.

