

# Handset Security

|   |              |
|---|--------------|
| <b>Changing Phone Password .....</b>                  | <b>12-2</b>  |
| <b>Security Functions .....</b>                       | <b>12-2</b>  |
| USIM PINs .....                                       | 12-2         |
| Keyguard .....  | 12-4         |
| Privacy Key Lock .....                                | 12-5         |
| Personal Data Lock .....                              | 12-5         |
| Activating Lock when Closing Handset .....            | 12-7         |
| Secure Remote Lock .....                              | 12-8         |
| Key Pad Dial Lock .....                               | 12-9         |
| Additional Lock Functions .....                       | 12-9         |
| <b>Restricting Calls/Messages .....</b>               | <b>12-10</b> |
| Hiding Call Logs and Sent/Received Address List ..... | 12-10        |
| Secret Mode/Secret Data Only .....                    | 12-10        |
| Setting Secret Mail .....                             | 12-11        |
| Mail Security .....                                   | 12-12        |
| Call Restrictions .....                               | 12-12        |
| Delaying Ringtone .....                               | 12-13        |
| Rejecting Unknown Callers .....                       | 12-13        |
| Rejecting Calls without Caller ID .....               | 12-13        |
| <b>Reset .....</b>                                    | <b>12-14</b> |
| Reset Settings .....                                  | 12-14        |
| All Reset .....                                       | 12-14        |

# Changing Phone Password

<Default> 9999

## Change Phone Password as required.

- For Phone Password details: P.1-28

Main Menu ► Settings ► Security ► Change Phone Password

- 1 Enter current 4-8-digit Phone Password
- 2 Enter new 4-8-digit Phone Password → **YES**

# Security Functions

## USIM PINs

- For more information about PINs: P.1-3

### Note

- Emergency numbers (110, 119, 118) are not dialable in PIN/PIN2, PUK/PUK2 entry window.

## PIN Authentication

Activate to require PIN entry each time handset is turned on.

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **PIN Authentication**
- 2 **ON** or **OFF**
- 3 Enter PIN

## Changing PIN/PIN2

- Set **PIN Authentication** to **ON** before changing PIN (☞P.12-2).

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **Change PIN** or **Change PIN2**
- 2 Enter current PIN/PIN2
- 3 Enter new PIN/PIN2
- 4 Reenter new PIN/PIN2

## PIN Lock & Cancellation (PUK/PUK2)

**PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unlocking Key (PUK/PUK2).**

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).




- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2

### Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (turning off power counts as one incorrect entry). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

## Keyguard


Lock handset keys to prevent accidental operation except when answering incoming calls.

- While set,  appears in Standby.
- By default, Keyguard temporarily cancels when handset opens (Keyguard Setting: Right).
- Activate Keyguard when specified time elapses after closing handset (Timer Lock at Close: P.12-7)

1 In Standby, press and hold 

- To toggle Keyguard settings, repeat operation.

### While Keyguard is Active

- Emergency numbers (110, 119, 118) are dialable even when Keyguard is set to **Lock Even Slide Open**. Entered numbers do not appear on Display. Once numbers are dialed, Keyguard is canceled.
- Press  to disable Calendar event tone or Alarm.
- Keyguard can be canceled even during a call.

#### Note

- Alternatively, **Main Menu** ► **Settings** ► **Security** ► **Keyguard** ► **ON** or **OFF** to activate/deactivate Keyguard
- Turning off power does not cancel Keyguard.

## Keyguard Setting

<Default> Unlock When Slide Open

Set whether to cancel Keyguard temporarily when opening handset.

**Main Menu** ► **Settings** ► **Security** ► **Keyguard Setting**

1 **Lock Even Slide Open** or  
**Unlock When Slide Open**

## Privacy Key Lock

<Default> OFF

Set Privacy Key Lock to require Phone Password for using handset except for turning handset on/off and answering calls.

- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Privacy Key Lock

### 1 Enter Phone Password

- To cancel Privacy Key Lock, enter Phone Password in Standby. If Phone Password is incorrectly entered five times, handset turns off.

#### While Privacy Key Lock is Active

- Emergency numbers (110, 119, 118) are dialable even when Privacy Key Lock is active.
- Only phone numbers appear on Display for incoming calls.
- Calls cannot be received by Bluetooth® headsets or handsfree devices.
- Message ringtones or Alarm tones are disabled.
- Calendar event tone or Alarm is disabled.
- S! Quick News and some indicators do not appear. They appear after Privacy Key Lock is canceled.

#### Note

- Turning off power does not cancel Privacy Key Lock.

## Personal Data Lock

Set Personal Data Lock to prevent others from reading or tampering with your personal information in Phone Book or Data Folder. Activate to require Phone Password for accessing personal data.

### Locked Functions/Data

- Messaging
- S! Appli
- Phone Book search/saving/setting
- Memory Manager/ Memory Status (Phone Book)
- Account Details
- Notepad
- Calendar
- Tasks
- Shortcuts
- Event Indicators
- Camera/Video Camera
- Album-Touch
- Lifestyle Appli
- microSD Backup
- Answer Phone
- Voice Recorder
- Customized Screen
- Voice Announce
- Post blog
- Yahoo! Keitai viewing/setting
- PC Site Browser viewing/setting
- Bookmarks/ Saved Pages
- BookSurfing®/e-Book Viewer
- Mobile Widget
- S! Quick News
- S! Information Channel/Weather
- Content Key obtaining/backup
- Voice Dial
- S! GPS Navi
- Data Folder\*
- Music Player
- Digital TV
- Bar Code Reader
- Receive via Infrared/Bluetooth®
- IC Data transmission
- Alarm
- Dictionary
- Pedometer
- Reset Settings/All Reset
- Software Update

\* Font setting is available.

## Activating/Canceling Personal Data Lock

<Default> Deactivate


- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Personal Data Lock

### 1 Enter Phone Password → *Activate/Deactivate*

- To cancel Personal Data Lock, repeat operation. If Timer Lock at Close is set, password entry is requested when handset is opened.

#### Canceling Personal Data Lock Temporarily

When Phone Password is entered,  disappears and disabled functions become temporarily available.

- Once handset returns to Standby while no functions are active, Personal Data Lock is active again.
- Some functions remain unavailable. Deactivate Personal Data Lock to use the following:
  - Receiving IC data
  - Reject unknown

#### Note

- While Personal Data Lock is set, some indicators do not appear in Standby. They appear after lock is canceled.
- Turning off power does not cancel Personal Data Lock.

## Customizing Personal Data Lock

Enable/disable Alarm, incoming message notification, etc. while Personal Data Lock is active.

Main Menu ► Settings ► Security ► Personal Data Lock

### 1 Enter Phone Password → *Customize* → Select an item (See below)

| Item                     | Operation/Description   |
|--------------------------|---|
| <b>Alarm Tone</b>        | Enable/disable Alarms (Calendar, TV timer, or other alerts) or TV Timer Recording.<br>> Select an item → <b>Accept</b> (Enable) or <b>Not Accept</b> (Disable)  |
| <b>Incoming Call Act</b> | Show/hide Event Indicator (incoming messages) or Phone Book entry information (incoming calls).<br>> Select an item <ul style="list-style-type: none"> <li><b>Incoming Message</b> → <b>Accept</b> (Show indicator) or <b>Not Accept</b> (Hide indicator)</li> <li><b>Phone Book Available</b> → <b>Accept</b> (Show Phone Book Entry information) or <b>Not Accept</b> (Hide information)</li> </ul>   |
| <b>Display/Tone</b>      | Enable/disable Display settings, ringtones or indicators.<br>> Select an item <ul style="list-style-type: none"> <li><b>Internal Display</b> → <b>Accept</b> (Enable Display Settings) or <b>Not Accept</b> (Disable)</li> <li><b>Ring Tones</b> → <b>Accept</b> (Enable Sound Settings) or <b>Not Accept</b> (Disable)</li> <li><b>S! Quick News</b> → <b>Accept</b> (Show information) or <b>Not Accept</b> (Hide information)</li> <li><b>S! Info Ch./Weather</b> → <b>Accept</b> (Show indicators) or <b>Not Accept</b> (Hide indicators)</li> <li><b>Widget Contents</b> → <b>Accept</b> (Show widgets) or <b>Not Accept</b> (Hide widgets)</li> </ul> |

## Showing Personal Data Lock OFF Window when Opening Handset

<Default> OFF

Main Menu ► Settings ► Security ► Lock OFF at Open

- 1 Enter Phone Password
- 2 **Personal Data Lock** → ON

### Note

- When Timer Lock at Close and Lock OFF at Open are both active, canceling Personal Data Lock when opening handset temporarily cancels lock. However, lock activates again when specified time elapses after closing handset.

## Activating Lock when Closing Handset

<Default> Keyguard: OFF  
Personal Data Lock: OFF

Set **Timer Lock at Close** to automatically activate Keyguard or **Personal Data Lock** when specified time has elapsed after handset is closed.

- While set,  appears in Standby.

Main Menu ► Settings ► Security ► Timer Lock at Close

- 1 Enter Phone Password
- 2 **Keyguard** or **Personal Data Lock** → Select a time  
When **Personal Data Lock** is selected, confirmation appears asking whether to activate Lock OFF at Open.
  - When **OFF** is selected, setting is canceled.

## Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

### Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ▶ Yahoo! ▶ メニューリスト ▶ My SoftBank  
▶ English

Follow onscreen instructions.

#### Note

- Emergency numbers (110, 119, 118) are dialable even while Secure Remote Lock is set.

## Showing Messages during Secure Remote Lock

<Default> OFF

Set Display message to appear when Secure Remote Lock is active.

- Use preset message or create a message.

Main Menu ▶ Settings ▶ Security ▶ Lock Message

- 1 Enter Phone Password
- 2 *Display Setting* → ON

### Save Lock Messages

> After Step 1, *Message* → Enter a message



## Key Pad Dial Lock

<Default> Deactivate

**Allow dialing only from Phone Book entries and lock dialing with keypad. Unauthorized use of handset can be prevented.**

- While locked,  appears in Standby.

### Unavailable Operations

- Dialing with keypad
- Phone Book (saving, editing, deleting, copying from microSD Card, and sending/receiving via Infrared, IC transmission and Bluetooth®)
- Sending S! Mail/SMS (manually entering addresses)

### Available Operations

- Dialing from Phone Book or Voice Dial
- Dialing from Redial, Outgoing Call Logs, Incoming Call Logs, Sent address, or Received address (only phone numbers/mail addresses saved in Phone Book)

**Main Menu ▶ Settings ▶ Security ▶ Key Pad Dial Lock**

## 1 Enter Phone Password

- To cancel Key Pad Dial Lock, repeat operation.

### Note

- Emergency numbers (110, 119, 118) are dialable even while Key Pad Dial Lock is set.

## Additional Lock Functions

### IC Card Lock

Deactivate Osaifu-Keitai® functions (☞P.13-12).

### Remote Lock

Deactivate Osaifu-Keitai® functions remotely (☞P.13-12).

# Restricting Calls/Messages

## Hiding Call Logs and Sent/Received Address List

<Default> ON

Main Menu ► Settings ► Incoming Settings ► Call Logs

- 1 Enter Phone Password
- 2 Select an item (See below)

| Item     | Operation/Description                                 |
|----------|---|
| Incoming | Show/hide Incoming Call Logs/Received address list    |
| Outgoing | Show/hide Redial/Outgoing Call Logs/Sent address list |

### 3 OFF

#### Note

- While Incoming Call Logs is **OFF**, Answer Phone (Voice Calls) does not play. Selecting Missed Call indicator does not show Incoming Call Logs.

## Secret Mode/Secret Data Only

<Default> Deactivate

Phone Book entries and calendar events saved as secret data appear only when Secret Mode/Secret Data Only is active.

- Set Phone Book or Calendar events as secret data (Phone Book: P.4-7, 4-8 / Calendar events: P.13-5)

Main Menu ► Settings ► Security

- 1 Select an item (See below)

| Item             | Operation/Description   |
|------------------|---|
| Secret Mode      | View all data including secret data <ul style="list-style-type: none"><li>• While set,  appears in Standby.</li></ul> |
| Secret Data Only | View only secret data <ul style="list-style-type: none"><li>• While set,  flashes in Standby.</li></ul>               |

- 2 Enter Phone Password  
For Secret Data Only, number of saved secret data appears.

### Cancel Secret Mode/Secret Data Only

- > In Standby, or follow Step 1 above
- disappears.
- When widgets are shown, to hide and press again.

## Cancel Secret Mode/Secret Setting

> In Phone Book/Calendar event window,  [Menu] → *Release secret*

### Note

- Select whether to save data edited/saved in Secret Mode as secret data. Data saved/edited in Secret Data Only are saved as secret data.
- Turn off handset to cancel secret setting.

### Tip


**Settings** ● Disable Learning for Secret Mode/Secret Data Only (P.18-11)

## Setting Secret Mail

<Default> ON

### Hide messages to/from secret Phone Book entries.

- Even if Secret Mail Display is set to **OFF**, secret mail appears when Secret Mode/Secret Data Only is active.

1  → *Settings*

2 *Universal Settings* → *Secret Mail Display*

3 Enter Phone Password

4 **OFF**


### Note

- When both Spam Filter and Secret Mail Display are set, messages from Phone Book entries saved as secret mode are sorted into Spam Folder (Safe List: P.14-17).


## Mail Security

Set handset to require Phone Password for opening mail boxes or operating Server Mail.

-  appears for set mail boxes and Server Mail box.

1  → **Settings**

2 **Universal Settings** → **Mail Security**

3 Enter Phone Password → Check items →  **[Finish]**

■ **Set/Cancel Mail Security by Incoming Mail or Sent/Unsent Folder**

>  → **Incoming Mail** or **Sent/Unsent** → Highlight a folder →

 **[Menu]** → **Mail Security** → Enter Phone Password

-  appears for set folders.

## Call Restrictions


Reject/accept/forward calls from specified phone numbers, or restrict calling unspecified phone numbers.

1  → Search Phone Book

2 Select an entry →  **[Menu]** → **Restrictions**

3 Enter Phone Password

4 Select an item (See below)


| Item                    | Operation/Description  |
|-------------------------|--|
| <b>Restrict Dialing</b> | Allow calls only to specified numbers  |
| <b>Call Rejection</b>   | Reject specified numbers   |
| <b>Call Acceptance</b>  | Accept from specified numbers only   |
| <b>Call Forwarding</b>  | Automatically forward specified numbers<br><ul style="list-style-type: none"> <li>• Set destination numbers (Call Forwarding:  P.2-18)</li> </ul> |

- To cancel, repeat operation.

■ **View/Cancel Phone Book Restrictions**

> **Main Menu** ► **Phone** ► **Restrictions** ► Enter Phone Password  
 ► Select an item\* ► Select a Phone Book entry ► Select a number  
 ► **YES**

\* ★ appears for set item.

- Highlight an item,  **[Menu]** → **Release Settings** → **YES** to cancel restriction on all specified numbers.

#### Note

- Missed call indicator appears in Standby for calls from rejected numbers.

## Delaying Ringtone

<Default> OFF

Delay ringtone/vibration for Voice/Video Calls from unknown numbers.

Main Menu ► Settings ► Incoming Settings  
► Ring Time Settings ► Ring Starting Time

1 **ON** → Enter start time

■ Hide Missed Call Records (Disconnected during Ringtone Delay)

> Main Menu ► Settings ► Incoming Settings  
► Ring Time Settings ► Missed Calls Display ► Not Display

## Rejecting Unknown Callers

<Default> Accept

Main Menu ► Settings ► Security ► Reject Unknown

1 Enter Phone Password → **Reject**

## Rejecting Calls without Caller ID

<Default> Accept

Reject calls without Caller ID or from pay phones.

Main Menu ► Settings ► Security ► Call Setting w/o ID

1 Enter Phone Password

2 Select an item → **Reject**

# Reset

## Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset Settings

1 Enter Phone Password → **YES**

### Note

- Some default settings may not be restored.
- Reset Settings cancels Navi Appli settings in S! GPS Navi. Set a Navi Appli to activate from **Select Navi Appli** (☞P.18-25).

## All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► All Reset

1 Enter Phone Password → **YES** → **YES**  
Handset automatically turns off and restarts.

### Note

- Fully charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/microSD Card files are not affected.
- Data transmission settings (set via PC) are not affected.
- Non-restorable items when deleted by All Reset:
  - Customized settings, Call Logs, downloaded S! Appli, etc.