

# Basic Operations

## 2

<b>Accessing Functions .....</b>	<b>2-2</b>
Using Toolbar .....	2-2
Using Widgets (Japanese) .....	2-2
Using Main Menu .....	2-3
Using Favorite Menu .....	2-4
Using Shortcut Keys .....	2-4
Built-in Stand .....	2-4
<b>Incoming Settings .....</b>	<b>2-5</b>
Changing Volume .....	2-5
Changing Ringtone .....	2-5
Setting Vibration .....	2-5
<b>Standby Display Options .....</b>	<b>2-6</b>
Wallpaper .....	2-6
Slide Show .....	2-6
<b>Widgets (Japanese) .....</b>	<b>2-7</b>
Window Operations .....	2-7
<b>Text Entry .....</b>	<b>2-8</b>
Text Entry Window .....	2-8
Text Entry Flow .....	2-9
Changing Entry Methods .....	2-9
Changing Entry Mode .....	2-9
Kana/Kanji .....	2-10
Katakana/Alphabet/Number .....	2-11
Symbol .....	2-11
Pictograms/Emoticons .....	2-11
Line Break .....	2-12
Entering Space .....	2-12
Hangul .....	2-13
Using Quick Address List .....	2-13
Deleting/Editing .....	2-13

<b>User's Dictionary (Japanese) .....</b>	<b>2-14</b>
Editing User's Dictionary .....	2-14
Saving to User's Dictionary .....	2-14
<b>Phone Book .....</b>	<b>2-15</b>
Phone Book Window .....	2-16
Creating New Entries .....	2-17
Entry Search .....	2-18
Calling from Phone Book .....	2-19
Deleting Phone Book Entries .....	2-19
<b>Advanced Settings .....</b>	<b>2-20</b>
Standby .....	2-20
Text Entry .....	2-20
User's Dictionary .....	2-20
Phone Book .....	2-20

## Accessing Functions

Use these methods to access handset applications:

- Toolbar
- Widgets
- Main Menu
- Favorites Menu
- Shortcut Keys
- Built-in stand

## Using Toolbar

Tap Phone, Messaging, Yahoo! or Menu in Standby. Frequently used functions/settings (e.g., **Select** or **Save**) appear in Toolbar. Items and numbers vary by menu or function.

Tap an item in Toolbar to execute it.



Toolbar

## Using Widgets (Japanese)








Tap Widget Bar or Standby Widgets to select functions or use them in Standby. Choose from four styles for widget appearance; set different widget layouts for each. See "Adding Widget to Standby" (P.9-15) for details.



Standby Widgets (default)

Default: The following widgets appear in Standby.

Package/Widget	Function
A Package	
	Otousan widget (P.9-13)
	Coupons (P.9-13)
	Menu list (P.9-14)
	My SoftBank (P.9-14)
	S! Quick News (P.9-17)
B Package	
	Widget Store (P.9-13)
	MySpace Mobile (P.9-13)
	Machi-Uta (P.9-14)
	S-1 battle (P.9-14)

Package/Widget	Function
C Package	
	michi (P.9-13)
	SoftBank Mobile Gourmet (P.9-13)
	Easy movie (P.9-14)
	Easy music (P.9-14)
D Package	
	Bijo Goyomi (P.9-13)
	Gnavi (P.9-13)
	Content Value Package (P.9-14)

## Using Main Menu

### 1 In Standby, tap Menu



Main Menu


### 2 Tap an item

### 3 Repeat 2 to select target function


Example: Selecting *Wallpapers*  
*Settings* → *Display settings* → *Wallpapers*




Tap Settings

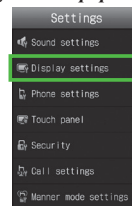

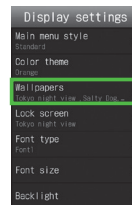


Tap Display Settings

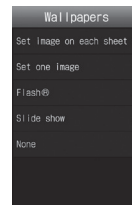

Tap Wallpapers



 Wallpaper Menu Appears

- Press  to return to the previous operation step.
- Press  to exit menu. Handset returns to Standby. If multiple functions are active, active window appears.
- Press  to cancel menu. Handset returns to Standby or previous window. In some menus, a confirmation appears.


## Using Favorite Menu

Swipe screen upward to open **Favorite Menu**. In Favorite Menu screen, tap shortcut icons to activate functions.

- Swipe screen downward to open Favorites screen. Call or send message to contacts added to Favorites. For details, see "Favorites" (P.3-7).

## Adding Shortcut Icon

- 1 In Standby, swipe screen upward

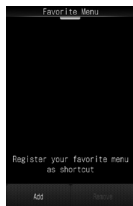










- 2 Tap Add → Tap menu item → Check item → Tap Add

## Removing Shortcut Icon

- 1 In Standby, swipe screen upward
- 2 Tap Remove → Check item to remove → Tap Remove

## Using Shortcut Keys


Use the following keys while in Standby to access functions.

Key	Menu/Function
	Open Call Log (outgoing)
 (1 + seconds)	Open Recordings list
	Activate/Cancel Key Lock
	Select Manner mode
 (1 + seconds)	Toggle Manner mode On/Off
	Adjust Earpiece volume
 (2 + seconds)	Activating Dummy Call (set by Side Key (down))
 (2 + seconds)	Activate TV
 (2 + seconds)	Activate Camera

## Built-in Stand

Open Built-in stand to automatically access assigned functions (complete setup beforehand).

- 1 Tap *Menu* → *Settings* → *Phone settings* → *Auto activation settings*
- 2 *Photo movie*/*Music Player*/*Movie Player*/*Sub camera*/*TV*/*TV player*/*Yahoo! Keitai*/*PC site browser*/*Off*

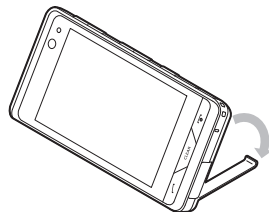

## Incoming Settings

Adjust Volume, Ringtone and Vibration settings. Use Ringtone/Vibration pattern to identify caller.

### Changing Volume

Select from six volume levels: 0 (mute) to 5.

- 1 Tap Menu → *Settings* → *Sound settings* → *Volume*




- 2 Tap **+**, **-** or move slider (3) to adjust volume

### Changing Ringtone

Besides presets, get Ring songs, music, videos, or Flash® Ringtones via the Internet for handset use.

- 1 Tap Menu → *Settings* → *Sound settings* → *Ringtone*

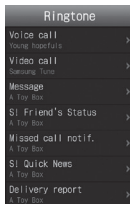


- 2 Select incoming type
- 3 Select Ringtone type
- 4 Select Ringtone file

Tap after file name to play sample.

### Setting Vibration

Select Vibration Pattern from seven options: *Off*, *Pattern 1* to *Pattern 5*, and *Link to sound*.

- 1 Tap Menu → *Settings* → *Sound settings* → *Vibration*

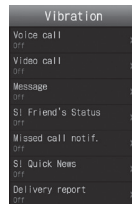

- 2 Select incoming type
- 3 Select Vibration

- To Cancel Vibration  
*Off*
- To Select Vibration Pattern  
*Pattern1* to *pattern5*
- To Link Vibration to Ringtone  
*Link to sound*


Tap after file name to play sample.

## Standby Display Options

### Wallpaper

Set still image, animation or Slide show to appear in Standby. Alternatively, set *Wallpapers* to *None*.

#### 1 Tap Menu → *Settings* → *Display settings* → *Wallpapers*

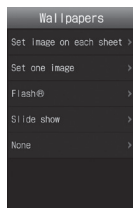

#### 2 Set Wallpaper

##### To Set an Image for Each Sheet

*Set image on each sheet* → Select a sheet → Select file location → Select file → Tap Set

##### To Use a Single Image for All Pages

*Set one image* → Select file location → Select file → Tap Set

##### To Set a Flash® File as Wallpaper

*Flash®* → Select file → Tap Set

##### To Set Slide Show

*Slide show* → (P.2-6 Slide Show 2)


##### To Set None

*None*

### Slide Show

Set up to nine images to appear in sequence in Standby.

#### 1 Tap Menu → *Settings* → *Display settings* → *Wallpapers* → *Slide show*

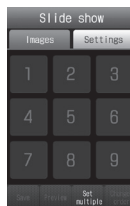

#### 2 Add still images

##### To Add Images One by One

Select a part where no still image is assigned to → Select a still image

- With Memory Card inserted, select a file from Pictures or Digital Camera folder.

##### To Add Images at Once

Tap Set multiple → Check still images to add → Tap OK

- Tap to select a Memory Card file.

#### 3 Edit Slide show

##### To Preview

Tap Preview → *Yes* (fit to screen) or *No* (original proportion)

##### To Set Effect

Tap Settings tab → *Effect* → Select an item

##### To Change Transmission Time for a Still Image

Tap Settings tab → *Transition time* → Select time

#### 4 Tap Save → *Yes* (fit to screen) / *No* (original proportion)

##### • To adjust slide size

To fit image to Display, choose *Yes* in 4.  
For original proportion, choose *No*.

### Advanced

#### Advanced Settings (P.2-20)

- Enlarging & Viewing Still Image
- Rotating Still Images

## Widgets (Japanese)

Add various applications to Standby Display to access/activate information/functions quickly.

### Preinstalled Widgets

・美女暦 (BIJO ごよみ)	・Memo (Blue)
・とくするクーポン	・Memo (Red)
・ぐるなびウィジェット	・Countdown timer
・mixi	・Light
・マイスペース	・S! Information Channel
・@アーティストと友達に♪	・S! Friend's Status
・お父さんウィジェット	・S! Quick News
・ソフトバンクモバイルグルメ	・Top3
・ウィジェットストア	・Mini player
・Analog clock	・Wallpaper
・Digital clock	・Menu list
・Dual clock	・My Softbank
・Calendar	・Machi-Uta
・Task	・S-1 BATTLE
・Alarm	・Content Value Package
・Memo (Yellow)	・Easy movie
	・Easy music

- Drag and drop widgets between Widget Bar and Standby Display.



Standby



Widget Appears in Standby

Tap

Drag & Drop



Widget Bar


## Window Operations

Widgets and Widget Menu appear in Widget Bar. Scroll Widget Bar for more widgets.

Tap Widget list button to open Widget list.

Tap Widget Menu to access following functions.

- ・ Widget Store (P.9-14)
- ・ Widget list (P.9-14)
- ・ Updating View (P.9-23)
- ・ Yahoo! JAPAN log in (P.9-23)
- ・ Settings (P.14-20)

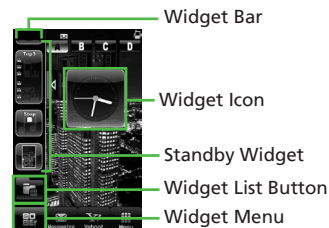

## Text Entry

Tap or write with stylus to enter Kanji, Hiragana, Katakana (single-/double-byte), alphanumerics (single-/double-byte), symbols (single-/double-byte), pictograms, emoticons or Hangul.

Icon	Entry Mode	Icon	Entry Mode
	Kanji or Hiragana (P.2-10)		Symbols (double-byte) (P.2-11)
	Katakana (double-byte) (P.2-11)		Symbols (single-byte) (P.2-11)
	Katakana (single-byte) (P.2-11)		Pictograms (P.2-11)
	Alphanumerics (double-byte) (P.2-11)		Emoticons (P.2-11)
	Alphanumerics (single-byte) (P.2-11)		Hangul (P.2-13)
	Number (double-byte) (P.2-11)		Alphanumerics (double-byte, lower case) (P.2-11)
	Number (single-byte) (P.2-11)		Alphanumerics (single-byte, lower case) (P.2-11)


See "Changing Entry Mode" (P.2-9) about toggling Entry mode.

## Text Entry Window

Use Keypad or Handwriting to enter text.  
To toggle Entry mode, see "Changing Entry Methods" (P.2-9).

### Text Entry with Keypad


Tap Keypad.

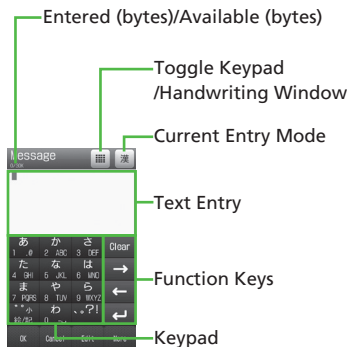

Keypad Entry Window

## Text Entry with Handwriting

Enter characters directly into Handwriting window.

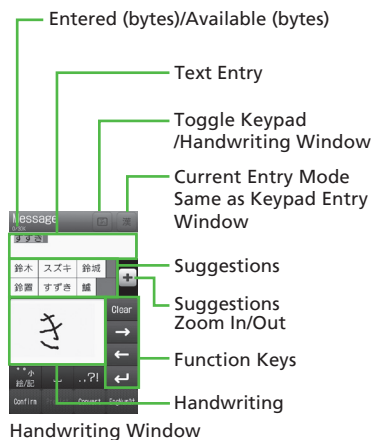

Handwriting Window



## Suggestions



Text Entry Field

Suggestions\*  
Japanese Kana  
Conversion  
Alternatives

\* Suggestions do not appear in Katakana, Alphanumeric, and Number entry modes. If **Prediction** is set to **Off** in 漢かな input mode, suggestions appear when Convert or EngNum カナ is tapped.

- Only numbers can be entered in Date & Time or Alarm time. Number keys, **Clear**, **←** / **→** appear.
- When Voice Call or Video Call arrives while entering text, simply answer the call. When the call ends, text entry window returns. When Alarm is activated, end Alarm to return to text entry window.


## Text Entry Flow

Select entry method → Select text entry mode →  
Enter text → Suggestion → Select suggestion

## Changing Entry Methods

Toggle Keypad/Handwriting. Status may limit entry method.

### 1 In text entry window,

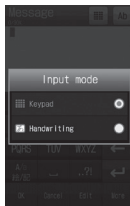

### 2 Select text entry methods from *Keypad* or *Handwriting*

## Changing Entry Mode

Toggle text entry mode: Kanji, Hiragana, Katakana (single-/double-byte), Alphanumerics (single-/double-byte), Symbols (single-/double-byte), Pictograms, Emoticons or Hangul.

### 1 In text entry window,



### 2 Select entry mode

• In text entry window, tap for / / for Symbols, for Pictograms, or for Emoticons.

## Kana/Kanji

Use predictive entry to convert and enter characters. Alternatively, directly convert entered hiragana. Katakana or pictograms may appear in Suggestions. Example: Enter 鈴木

### Using Keypad

#### 1 Changing to Keypad (ⓈP.2-9)

#### 2 Ab → 漢かな

#### 3 Tap さ three times

- す is entered.

#### 4 →

- To enter same character continuously, tap → to move cursor to the right.

#### 5 Tap さ three times → さ

- す is entered.

#### 6 Tap か twice



- き is entered.

#### 7 Tap 鈴木

## Using Handwriting

Enter text in Handwriting mode.

#### 1 Change to Handwriting (ⓈP.2-8)

#### 2 Ab → 漢かな

 
#### 3 In Handwriting field, enter す, ず and き continuously



 
 
 
 



 




#### 4 Tap 鈴木

- After entering hiragana, tap へん to add ° or °.
- After entering hiragana, tap へん to toggle size.
- Tap Clear or press CLEAR to cancel a misentry.
- If you over-toggle target character, press へん / へん to toggle in reverse.
- To set as Hiragana, tap Confirm.
- If no suggestions appear, tap Convert → へん / へん to change conversion range → Tap target conversion alternatives → Repeat steps for other characters.
- If many suggestions appear, tap へん to expand Suggestions. To restore default size, tap へん.
- If conversion fails, try another reading. For multiple Kanji words, try converting characters separately.
- While suggestions appear, tap Convert for conversion alternatives. While conversion alternatives appear, tap Predict to return to Suggestions.
- Kanji cannot be entered directly in Handwriting.
- In Handwriting mode, suggestions appear in Function field. If a character is mistakenly converted, select correction from Suggestions. Tap へん to close Suggestions.
- In Handwriting mode, 漢かな entry, entering other non-Hiragana, yields most similar Hiragana.

## Katakana/Alphabet/Number

- 1 In text entry window,  → カナ / かな / Ab / Ab / 12 / 12
- 2 Enter target katakana/alphabet/number to use


- After entering katakana, tap  to add \* or \*.
- After entering katakana, tap  to toggle case.
- In Alphabet entry mode (, , , ), enter a letter then tap  to toggle case.
- Tap  or press  to cancel a misentry.
- If you over-toggle target character, press  /  to toggle in reverse.
- To enter same character continuously, tap  to move cursor to the right.
- In Kanji/Kana entry mode, enter characters and tap EngNum カナ to toggle Katakana/Alphanumerics/Numbers entry mode.

Example: Enter くも and tap EngNum カナ. クモ, C, or 2227777 appears in Suggestions.




- In Handwriting mode, any characters written in the field will be recognized as one of the characters within the specified entry mode.

## Symbol

Alternatively, enter symbols such as \ or ! (☞P.15-11).

- 1 In text entry window,  → ! @ # / ! @ #



- Switch text entry mode from  →  / .
- Tap Prev. page/Next page until target symbol appears.

 
## 2 Select target character

- Enter symbols continuously. To cancel Symbols entry, tap Keypad.

- Once entered symbols remain as history and appear in Suggestions at first.
- In Kanji/Kana entry mode, enter characters and tap Convert to convert to symbols.  
Example: Enter てん and tap Convert, . or ... appear in Suggestions.

## Pictograms/Emoticons

Combine symbols to enter emoticons as well as pictograms (☞P.15-11).



- 1 In text entry window,  → *Pictogram/Emoticon*



- Tap  →  /  /  to switch text entry mode.
- Tap Prev. page/Next page until the target pictogram or emoticon appears.

## 2 Select target pictogram/emoticon

- You can continuously enter pictograms and emoticons. To stop entering pictograms or emoticons, tap Keypad.

- Select  in Message window/Subject window only. Select  when using Pict Common.
- Once entered pictograms remain as history and appear in Suggestions at first.
- In Kanji/Kana entry mode, enter はーと, でんわ and convert to pictograms. Similarly, わーい or えーん can be converted to emoticons.

## Line Break

Use these steps to enter line break in any entry mode.

### 1 In text entry window,



- Line breaks cannot be inserted in some entry windows (e.g., Subject window in Messaging).

## Entering Space

Entering space varies by Entry mode.


### 漢かな / カナ / かな



### 1 Tap ( / ) five times

- Tap Confirm to enter space.

### A b /Ab

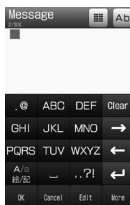

### 1 Tap

## 記 / 記半

 


### 1 Tap Prev. page/Next page and tap

## Hangul



### 1 Tap three times

- When Entry mode is 1/2/12/Pictogram/Emoticon, toggle the above Entry mode and enter.
- When cursor is at the end of a sentence, entering space with  is also available.
- Space cannot be inserted in some entry windows (e.g., Recipient window in Messaging).




## User's Dictionary (Japanese)

Save frequently used words/phrases of up to 20 characters; entries appear in Suggestions when Reading is entered.

### Editing User's Dictionary


- 1 Tap Menu → *Settings* → *Phone settings* → *User's dictionary* → Tap Add new
- 2 Tap Word field → Enter word or sentence → Tap OK
- 3 Tap Reading field → Enter reading → Tap OK

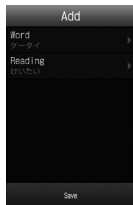

- 4 Tap Save

### Saving to User's Dictionary

- 1 In text entry window, tap More → *Add to dictionary*
- 2 Tap the first letter to add characters → Tap Start point
- 3 Tap the last letter to add characters → Tap End point

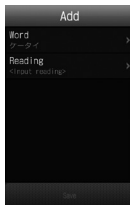

- 4 Tap Reading field → Enter reading → Tap OK
- 5 Tap Save

● If selecting the range which includes a line break, character strings before the line break are saved.

### Advanced

**Advanced Settings** (P.2-20)

- Deleting Entries from User's Dictionary

**Settings**

- Save Entries to User's Dictionary (P.14-2)
- Edit User's Dictionary Entries (P.14-2)
- Delete User's Dictionary Entries (P.14-2)

## Phone Book

Create up to 1,000 entries. Number of savable items per entry varies by USIM Card. Insert USIM Card into compatible SoftBank handsets to access USIM Card entries. Each entry contains these items:

Item/Description	Location
Last name	
Double/single-byte (saved to <b>Name</b> in USIM Card Phone Book)	Handset: Yes (up to 50 bytes) USIM Card: Yes <sup>1</sup>
First name	
Double/single-byte (saved to <b>Name</b> in USIM Card Phone Book)	Handset: Yes (up to 50 bytes) USIM Card: Yes <sup>1</sup>
Reading last name	
Single-byte (saved to <b>Reading name</b> in USIM Card Phone Book)	Handset: Yes (up to 50 bytes) USIM Card: Yes <sup>1</sup>
Reading first name	
Single-byte (saved to <b>Reading name</b> in USIM Card Phone Book)	Handset: Yes (up to 50 bytes) USIM Card: Yes <sup>1</sup>
Phone number	
Saved with area code	Handset: Yes (five entries/up to 32 bytes) USIM Card: Yes <sup>1,2</sup>

Item/Description	Location
Phone icon	
Select one of seven icons	Handset: Yes USIM Card: Yes <sup>3</sup>
E-mail address	
Single-byte alphanumeric	Handset: Yes (five entries/up to 128 bytes) USIM Card: Yes <sup>1</sup> (one entry)
E-mail address icon	
Select one of four icons	Handset: Yes USIM Card: No (one icon)
Picture	
Still image appears for incoming calls	Handset: Yes
Select a Data Folder image or capture with Camera	USIM Card: No
Group	
Select from original five groups including <b>No group</b> , and added group Maximum 16 groups can be added.	Handset: Yes USIM Card: Yes <sup>2</sup>
Birthday	
Date of birth	Handset: Yes USIM Card: No
Blood type	
Select one of four types or <b>None</b>	Handset: Yes USIM Card: No

Item/Description	Location
Address	
Post code (40 bytes), Country (64 bytes), Province, City, Street and Additional information (128 bytes)	Handset: Yes (two entries) USIM Card: No
Address icon	
Select one of two icons	Handset: Yes USIM Card: No
Homepage	
Enter up to 1,024 bytes	Handset: Yes (two entries) USIM Card: No
Homepage icon	
Select one of two icons	Handset: Yes USIM Card: No
Company	
Enter up to 64 bytes	Handset: Yes USIM Card: No
Job title	
Enter up to 64 bytes	Handset: Yes USIM Card: No
Memo	
Enter up to 512 bytes	Handset: Yes USIM Card: No
Secret mode	
On/Off	Handset: Yes USIM Card: No

Item/Description	Location
Ringtone	
Voice Call/Video Call/ Messages/S! Friend's Status Selectable from Data Folder	Handset: Yes  USIM Card: No
Vibration	
Set Vibration for Voice Call/ Video Call/Messages/ S! Friend's Status Selectable from Data Folder	Handset: Yes  USIM Card: No

- 1 Number of savable characters varies depending upon the USIM Card.
- 2 Number of savable items varies depending upon the USIM Card.
- 3 Savable icon types vary depending upon the USIM Card.

- If different USIM Card (with saved entries) is inserted, copy saved USIM entries to handset confirmation appears when handset is first powered on. Choose **Yes** to copy entries.


#### Note

#### Protect Important Information

- Phone Book entries may be lost/altered if battery is removed or left uncharged for an extended period; accidents/malfunctions may also affect entries. Back-up entries and store separately. SoftBank Mobile is not liable for damage from lost information.

## Phone Book Window

Phone Book entries (P.2-15) are divided into three tabs. Tap tabs to view desired information.

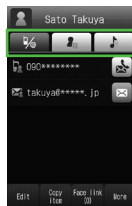

Each Phone Book tab contains items listed below:

Tab	Item
	Phone number 1
	E-mail address 1
	Group
	Birthday
	Blood type
	Address 1
	Homepage 1
	Company
	Job title
	Memo

Tab	Item
	Secret mode
	Tone : Voice call
	Tone : Video call
	Tone : Message
	Tone : S! Friend's Status
	Vibe : Voice call
	Vibe : Video call
	Vibe : Message
	Vibe : S! Friend's Status



## Creating New Entries

Save new Phone Book entries to Phone or USIM Card.

Default: **Phone**.

Set to USIM Card as required (P.14-9).

Create new entry or save from Call Log record.

## Saving Information as a New Entry

Create new entry; save name, reading, phone number, and mail address.

- For other items, see "Adding Information to Phone Book Entry" (P.2-20).

### 1 Tap Phone → *Phone book* → Tap New entry

- If Save setting (P.14-9) is set to *Ask each time*, save location prompt appears. Select *Phone* or *USIM*.



New Entry  
Items

### 2 Tap Name field

### 3 Enter last name → Tap OK

### 4 Enter first name → Tap OK

### 5 Confirm entry → Tap OK

### 6 Tap Phone number field → Enter number → Tap OK → Tap Type field → Select phone type → Tap OK

### 7 Tap E-mail address field → Enter mail address → Tap OK → Tap Type field → Select address type → Tap OK

### 8 Tap Save

- 0 through 9, #, \*, -, P (pause), and + (International Code) can be registered for entering in the Phone number field. Tap **P-X** to toggle \*, - and P. Touch and hold **+0** to enter +.

- If a Memory Card file is selected for incoming image or Ringtone, copy file to handset confirmation appears. For a copy protected file, move file to handset first confirmation appears. Choose **Yes** to complete setting.


- When using Samsung New PC Studio to synchronize Phone Book entries with a PC, secret entries are not synchronized to PC. If an entry is changed to a secret entry, it can no longer be synchronized and is deleted from the PC. Samsung New PC Studio is available for download from SAMSUNG Website (<http://jp.samsungmobile.com/pc/lineup/940download.html>).

## Saving Entries from Call Log Records

Save numbers in Call Log records to new or existing entries.

1  / Tap Phone and *Call log*

2 Tap a record

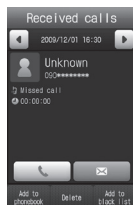

3 Tap Add to entry

- If save setting (P.14-9) is set to *Ask each time*, a message appears to prompt you to specify a saving location. Tap *Phone/USIM*.

4 Select saving method

### To Save as a New Entry

*New* → (P.2-17 Creating New Entries 2)


### To Update Existing Entry

*Update* → Search and select entry (P.2-18)  
→ Save a number to Phone Book (P.2-17)

## Entry Search

Use *ABC/Group/Reading* to search entries.


1 Tap Phone → *Phone book*

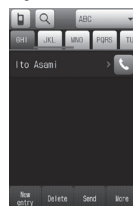

Phone Book List

2 Tap  /  /  to switch to Search field (P.2-23)

3 Tap pulldown menu for search methods

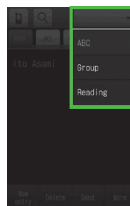

Pulldown menu





4 *ABC/Group/Reading*

- Selected search method is saved.

5 Search entry


### To Search by ABC

Tap target tab  ~  /  /  /   
/  → Select target entry

- Touch and hold  ~  to view letters;  etc. Select these letters to search entry.
- Alternatively, tap  and enter first part of reading in Text field.





### To Search by Group


Select a group → View target entry from search result

- Alternatively, after selecting a group, tap  and enter first part of reading in Text field.

### To Search by Reading

View target entry from search result

- Tap  /  or scroll  to search entry.
- Alternatively, tap  and enter first part of reading in Text field.

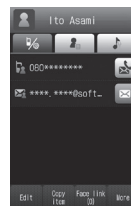

Entry Details


- If *Security* → *Secret mode* is set to *Hide*, secret entries do not appear. In Phone Book search window, tap More → *Unlock temporarily* → Enter Phone Password → Tap OK to see secret entries.

## Calling from Phone Book

### 1 Search and select entry (☞P.2-18)



- If entry contains multiple phone numbers, tap beside target number.

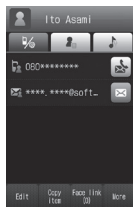

### 2 Place a call

#### ■ To Place a Voice Call

*Voice call*

#### ■ To Place a Video Call

*Video call*

#### ■ To Place an International Call

*International call* (☞P.3-13 International Calling)

#### ■ To Place a Call before Editing Number

*Copy to dial* → Edit selected phone number → **Call**/Tap Int. call (☞P.3-13 International Calling)/Tap Video call

- In Phone Book list, tap beside target entry for Voice Call. If multiple numbers are saved for that entry, Number selection window appears.

## Deleting Phone Book Entries

### 1 Tap Phone → *Phone book* → Tap Delete

### 2 Delete entries

#### ■ To Delete an Entry

Check entries to delete → Tap Delete → *Yes*

#### ■ To Delete All Entries

*Mark all* → Tap Delete → Enter Phone Password → Tap OK → *Yes*

- Alternatively, in Entry details window, tap More → *Delete* → *Yes*.

## Advanced

### Advanced Settings (☞P.2-20)

- Adding Information to Phone Book Entry
- Sending Phone Book Entry as vFile
- Specifying Saving Destination for Phone Book Entries
- Viewing USIM Card Service Number
- Temporarily Canceling Phone Book Secret Mode
- Editing Phone Book Entry
- Copying Item
- Saving Face Link to Phone Book Entry
- Adding Phone Book Entry to Favorites
- Adding S! Friend's Status Member from Phone Book
- Viewing S! Friend's Status
- Creating & Saving vFiles
- Printing Phone Book Details via Bluetooth®
- Entering and Saving Phone Number

### Settings



- Select Phone Book Save Location (☞P.14-9)
- Change Phone Book Preference (Phone/USIM) (☞P.14-9)
- Change Search Method (☞P.14-9)
- Copy All Phone Book Records & Save on Handset & USIM Card (☞P.14-9)

## Advanced Settings

### Advanced Settings



#### Standby

##### Enlarging & Viewing Still Image

Tap Menu → **Settings** → **Display settings** → **Wallpapers** → **Set image on each sheet** ( → Select sheet) / **Set one image** → Select a file location → Select a file → Tap Zoom →  or  to adjust zoom level → Tap Set

- To restore default view, tap Undo.

##### Rotating Still Images

Tap Menu → **Settings** → **Display settings** → **Wallpapers** → **Set image on each sheet** ( → Select sheet) / **Set one image** → Select a file location → Select a file → Tap Rotate →  or  → Tap Set

- To restore the default, tap Undo.

##### Editing Slide Show

Tap Menu → **Settings** → **Display settings** → **Wallpapers** → **Slide show**

#### To Replace Image

Select image to change → **Replace** → Select an image → Tap Save → **Yes** or **No**

- With Memory Card inserted, select a file from Pictures or Digital Camera folder.

#### To Change Image Order

Tap Change order → Drag image to desired position → Tap OK → Tap Save → **Yes** or **No**

#### To Delete Image

Select image to delete → **Reset** → **Yes** → Tap Save → **Yes** or **No**

- Choose **Yes** to fit image to Display, or **No** for original proportion.

## Text Entry

### Specifying Range to Copy/Cut

In text entry window, tap Edit → **Copy** or **Cut** → Tap the first character of the range to cut/copy → Tap Start point → Tap the last character to specify the range → Tap End point

- To copy or cut all text in text entry window, tap All.
- Copied or cut text remains even after powering off.

### Pasting Copied or Cut Text

In text entry window, move cursor to the position to paste → Tap Edit → **Paste**

### Undoing Text Entry

In text entry window, tap Edit → **Undo**

- In Kanji/Kana entry mode, undo operations immediately after performing **Cut**, **Paste**, or **Delete**. Undoing conversion is also available.

### Enlarging Enter Text Field

In text entry window, tap Edit → **Hide Keypad**

## User's Dictionary

### Deleting Entries from User's Dictionary

Tap Menu → **Settings** → **Phone settings** → **User's dictionary** → Tap Delete → Check entries to delete → Tap Delete → **Yes**

- If **Mark all** is selected, tap Delete → Enter Phone Password → Tap OK → **Yes**.

### Resetting User's Dictionary

In text entry window, tap More → **Conversion** → **Reset learning** → Enter Phone Password → Tap OK → **Yes**

## Phone Book


### Adding Information to Phone Book Entry

Tap Phone → **Phone book** → Tap New entry


#### To Save Group

 → Tap Group field → Select an item → Tap Save


#### To Save Birthday

 → Tap Birthday field → Enter birthday → Tap Save


#### To Save Blood Type

 → Tap Blood type field → Select an item → Tap Save


**To Save Address**

 → Tap Address field → Tap Type field → **Private/Business** → Tap Zip code field → Enter zip code → Tap OK → Tap Country field → Enter country name → Tap OK → Tap Province field → Enter province name → Tap OK → Tap City field → Enter city name → Tap OK → Tap Street field → Enter street name → Tap OK → Tap Additional info field → Enter additional information → Tap OK → Tap OK → Tap Save

**To Save URL**

 → Tap Homepage field → Enter URL → Tap OK → Tap Type field → **Private/Business** → Tap OK → Tap Save


**To Save Company**

 → Tap Company field → Enter company → Tap OK → Tap Save

**To Save Job Title**

 → Tap Job title field → Enter job title → Tap OK → Tap Save

**To Save Memo**



 → Tap Memo field → Enter text → Tap OK → Tap Save

**To Set Secret Mode**

 → **On or Off** → Tap Save

- Items other than Group are unavailable in USIM Card Phone Book.

**Setting Incoming Image to Phone Book Entry**

Tap Phone → **Phone book** → Tap New entry →   
Or Search entry (ⓂP.2-18) → Tap Edit → 

**To Set from Saved Still Image**

**Pictures** → Select a file → Tap Save

- With Memory Card inserted, select a file from Pictures or Digital Camera folder.

**To Set by Capturing Still Image**



**Take photo** → Capture still image → Tap Save

**To Cancel Set Incoming Image**

**Off** → Tap Save

- If a Memory Card file is set as incoming image, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose **Yes** to complete setting.

**Setting Ringtone to Phone Book Entry**

Tap Phone → **Phone book** → Tap New entry →  → Tap Ringtone settings field  
Or  
Search entry (ⓂP.2-18) → Tap Edit →  → Tap Ringtone settings field

**To Set Ringtone for Voice Call or Video Call**

**Tone: Voice call** or **Tone: Video call** → Select a file location → Select a file → Tap Save



**To Set Ringtone for Message or S! Friend's Status**


**Tone: Message** or **Tone: S! Friend's Status** → **Ringtone** → Select a file location → Select a file → **Duration** → Enter duration → Tap OK → Tap Save

- While selecting a file, tap  to playback the file.



- If a Memory Card file is set as Ringtone, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose **Yes** to complete setting.

**Setting Vibration to Phone Book Entry**

Tap Phone → **Phone book** → Tap New entry →  → Tap Vibration settings field  
Or  
Search entry to set Vibration (ⓂP.2-18) → Tap Edit →  → Tap Vibration settings field → Select Vibration pattern → Tap Save

- While selecting a Vibration pattern, tap  to check the pattern.

**Creating Message from Phone Book Entry**

Tap Phone → **Phone book** → Search and select entry to send message (ⓂP.2-18) →  for recipient phone number or  for recipient address




**Create message** → **S! Mail** or **SMS** → (ⓂP.4-5 S! Mail , P.4-7 SMS )



Create S! Mail message (ⓂP.4-5 S! Mail )

**Opening Website from Phone Book Entry**

Tap Phone → **Phone book** → Search and select entry with homepage saved (ⓂP.2-18) →  beside homepage address to connect → **Yes**

- To browse website with PC Site Browser, tap **PC Site Browser**.

## Sending Phone Book Entry as vFile

Tap Phone → **Phone book** → Tap Send

- In Entry details window, tap More → **Send**.

### ■ To Send via Message

**Via message** → Check entry to send → Tap Send → (📧P.4-4 S! Mail ②)

### ■ To Send via Bluetooth®

**Via Bluetooth** → Check entry to send → Tap Send → (📶P.13-6 Sending One Item at a Time ②)

### ■ To Send via Infrared

**Via infrared** → Check entry to send → Tap Send → (📡P.13-3)

### ■ To Send via IC Transmission

**Via IC transmission** → Check entry to send → Tap Send → (📡P.13-8)

## Copying Entries between Phone & USIM

Tap Phone → **Phone book**

### ■ To Copy Selected Entries

Tap More → **Copy to USIM** or **Copy to phone** → Check entries to copy → Tap Copy → **Yes**

- For both Phone and USIM Card entries, tap More → **Copy each entry** → Select entry → **Yes**.
- In Entry details window, tap More → **Copy to USIM** or **Copy to phone** → **Yes**.
- If search method is **Group**, search and select entry to copy → Tap More → **Copy to USIM** or **Copy to phone** → **Yes**.

### ■ To Copy All Entries from Phone to USIM/USIM to Phone

Tap More → **Copy all** → **Phone to USIM/USIM to Phone** → **Yes**

## Specifying Saving Destination for Phone Book Entries

Tap Phone → **Phone book** → Tap More → **Save to** → **Phone/USIM/Ask each time**

## Viewing USIM Card Service Number

Tap Phone → **Phone book** → Tap More → **Service number**

- The item **Service number** may not appear for some USIM Cards.

## Temporarily Canceling Phone Book Secret Mode

Tap Phone → **Phone book** → Tap More → **Unlock temporarily** → Enter Phone Password → Tap OK

- If **Security** → **Secret mode** is set to **Hide**, numbers set as **Secret mode - On** appear temporarily in Phone Book.

## Editing Phone Book Entry

Tap Phone → **Phone book** → Search and select entry (📶P.2-18) → Tap Edit → (📶P.2-17 Creating New Entries ②)

- To edit secret Phone Book entry, set **Secret mode** to **Show**.

## Copying Item

Tap Phone → **Phone book** → Search and select entry (📶P.2-18) → Tap Copy item → Select item

## Saving Face Link to Phone Book Entry

Tap Phone → **Phone Book** → Search and select entry (📶P.2-18) → Tap Face link

### ■ To Save Face Link from a Saved Still Image

**Face registration** → Select from **Image 1** to **Image 5** → **Pictures** → Select file → Frame on Face

- Memory Card files cannot be set as Face Link.

### ■ To Save Face Link by Capturing a Still Image

**Face registration** → Select from **Image 1** to **Image 5** → **Take photo** → Capture still image

### ■ To Remove Face Link

**This person's photo** → Tap Release → Check Face link to remove → Tap Release → **Yes**

## Adding Phone Book Entry to Favorites

Tap Phone → **Phone book** → Search and select entry (📶P.2-18) → Tap More → **Add to Favorites** → **Call/Mail**

- Alternatively, tap Phone → **Favorites/** In Standby, swipe downward → Tap Add → Select Number field to add.

## Adding S! Friend's Status Member from Phone Book

Tap Phone → **Phone book** → Search and select entry (📶P.2-18) → Tap More → **Add to S! Friend's Status** → Select a phone number → **Yes**

## Viewing S! Friend's Status

Tap Phone → **Phone book** → Search and select entry (📶P.2-18) → Tap More → **View S! Friend's Status** → Select a phone number

## Creating & Saving vFiles




Tap Phone → **Phone book** → Search and select entry (ⓅP.2-18) → Tap More → **Save to Data Folder** → **Phone/Memory card** → **Yes**

- To save a file to **Memory card**, insert Memory Card.

## Printing Phone Book Details via Bluetooth®

Tap Phone → **Phone book** → Search and select entry (ⓅP.2-18) → Tap More → **Print via Bluetooth** → (ⓅP.7-17 Printing via Bluetooth® ⑤)

## Toggling Phone Book View between USIM & Phone

Tap Phone → **Phone book** →  /  /  → **Phone/USIM/Phone & USIM**

- Change remains even if handset is powered off.

## Entering and Saving Phone Number

Tap Phone → **Dial** → Enter phone number → **Add**

### To Save New Entry

**New** → (ⓅP.2-17 Creating New Entries ②)

### To Update Entry


**Update** → Search and select entry (ⓅP.2-18) → Enter each item (ⓅP.2-17)

- Only name, reading, mail address, and group can be saved to USIM Card.

## Adding Groups

Tap Phone → **Phone book** → Tap the pull down menu for search methods → **Group** → Tap Group setting → **Add**

### To Set Incoming Image

 → **Pictures/Take photo/Off** → Set incoming image → Tap Save

- If **Pictures** is selected, select files.
- If **Take photo** is selected, capture a still image.
- If **Off** is selected, incoming image will not be set.

### To Set Group Names

Tap Group name field → Enter group name → Tap Save

### To Set Group Icon

Tap Group icon Field → Select icon → Tap Save

### To Set Ringtone

- To set Ringtone for Voice Call or Video Call  
**Tone: Voice call/Tone: Video call** → Select a file location → Select a file → Tap Save
- To set Ringtone for message or S! Friend's Status  
**Tone: Message/Tone: S! Friends Status** → **Ringtone** → Select a file location → Select a file → **Duration** → Enter duration → Tap OK → Tap OK → Tap Save

### To Set Vibration

Tap Vibe field → Select Vibration pattern → Tap Save

- For USIM Card, only group name and icon can be set.
- Images and Ringtones set for individual entries take priority over Group setting.

## Changing Group Settings

Tap Phone → **Phone book** → Tap pulldown menu for search methods → **Group** → Tap Group setting → **Edit** → Select group → Edit each item the same way as items are added (ⓅP.2-23).

# Memo

Handwriting practice lines consisting of 12 horizontal dotted lines.