

# Media Player



<b>Using Media Player</b> .....	<b>8-2</b>
<b>Downloading Media Files</b> .....	<b>8-3</b>
Downloading Music & Movies.....	8-3
Saving WMA/WMV Media Files from Handset to Memory Card .....	8-3
Saving other Media Files to Phone or Memory Card.....	8-3
<b>Playing Music</b> .....	<b>8-4</b>
Media Player Music Window.....	8-4
Playing Music.....	8-5
<b>Playing Movie</b> .....	<b>8-6</b>
Media Player Movie Window .....	8-6
Playing Movie.....	8-7
<b>Using Playlist</b> .....	<b>8-7</b>
Creating Playlist .....	8-7
Playing Playlist .....	8-8
<b>Streaming</b> .....	<b>8-8</b>
Streaming from Page Link .....	8-8
Entering URL .....	8-8
Accessing from Bookmark.....	8-8
Accessing from History.....	8-8
<b>Advanced Settings</b> .....	<b>8-9</b>
Music Playback.....	8-9
Movie Playback .....	8-11
Streaming.....	8-12

## Using Media Player

This handset features a Media Player.

Download media files via Yahoo! Keitai or create personal playlists.

### Playing Media Files



Play music or movies via Media Player (P.8-5, P.8-7).  
Select a music or movie file from folders or playlists.

### Downloading Media Files



Access Yahoo! Keitai to download music or movies.  
Download movie content or play it back in Streaming (P.8-3).

### Creating Playlists



Add your favorite music or movie to a playlist and create your own music or movie album (P.8-7).

Player	File (Extension)
Music	MPEG4 Audio (mp4, m4a, or 3gp (sound only)), SoftBank Music Contents (smc), Windows Media® Audio (wma)
Movie	MPEG4 (mp4, 3gp), H.263, H.264, Windows Media® Video (wmv)

- To play a music file in a format other than above, select it from **Ring songs · tones**. Even compatible files must be saved in **Ring songs · tones** to play.

#### Note

Movie files exceeding 640 x 480 (mp4 or 3gp) or 320 x 240 (wmv) in resolution cannot be played.

## Downloading Media Files

Access Yahoo! Keitai to download music or movies and copy them to handset.

### Downloading Music & Movies

#### 1 Tap Menu → *Media*

#### 2 Download music or movie

##### ■ To Download Music

*Music* → *All music* → *Download music*

##### ■ To Download Movie

*Movie* → *All movies* → *Download movies*

#### Note

- Downloading music or movies may incur high Packet Communication charges since they contain a large volume of data.

## Saving WMA/WMV Media Files from Handset to Memory Card

### 1 Insert Memory Card into handset

- Tap Menu → *Data Folder* →  to confirm folders are created.

### 2 Connect handset to a PC via USB

### 3 Tap Menu → *Settings* → *Connectivity* → *USB mode* → *MTP synch mode* → *Yes*

### 4 Enter Phone Password → Tap OK

### 5 Save PC WMA/WMV Files to the specified Memory Card folder

### 6 While connecting, tap Exit

### 7 Remove USB cable

- Receiving calls or messages is not available in the *MTP synch mode*.
- Save files to the following folders by type:
  - WMA file : WMAudio
  - WMV file : WMVideo

## Saving other Media Files to Phone or Memory Card

To convert music or movie file formats, software is necessary.

- SoftBank Mobile does not guarantee proper operation with any specific software.
- For software specifications or operations, see SoftBank Mobile Website.

### 1 Insert Memory Card into handset

- Follow instructions (☎P.12-10).

- Save files to the following folders by type:

Music file: PRIVATE/MYFOLDER/My Items/Music  
PRIVATE/MYFOLDER/My Items/Sounds & Ringtones

Movie file: PRIVATE/MYFOLDER/My Items/Movie

- If you copy WMA/WMV music or movie directly to Memory Card, you may not be able to play them. Make sure to save them to Memory Card through the *MTP synch mode* (☎P.8-3).
- After saving files, insert Memory Card into handset and load saved files to play the files.


## Playing Music

Folder structure is as follows.

Folder	Description
Last played/Now playing	Last played or currently played file
All music	Up to 9999 music files
Playlists	View playable file in Music in created folders
Artists	All music files by Artist
Albums	All music files by Album
Genres	All music files by Genre
Folder	All files in Ring songs·tones and Music folders of Data Folder and Memory Card, as well as WMAudio on Memory Card
Recent music	100 most recently played files (most recent first)
Most played music	100 most frequently played files (most frequent first)

- Files on Memory Card may take longer to load.

## Media Player Music Window

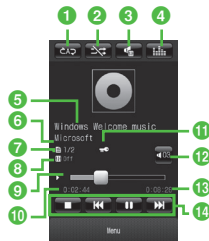

Music Playback

- 1 Repeat mode**  
 Tap to toggle settings.  
 [Right arrow] : Off  
 [Circular arrow] : One  
 [Double circular arrow] : Repeat all
- 2 Setting Shuffle**  
 Tap to toggle settings.  
 [Shuffle icon] : Shuffle On  
 [No shuffle icon] : Shuffle Off
- 3 Setting Sound effects**
  - Tap to set Sound effects and mood.
  - This is not available when using Bluetooth®-compatible stereo headphone.
- 4 Spectrum analyzer**
  - Tap to toggle spectrum analyzer.
  - This is not available when using Bluetooth®-compatible stereo headphone.

- 5 Title (file name when title is unknown)
- 6 Artist's name
- 7 File number/Total number of files
- 8 Sound effects
- 9 Progress bar  
 Drag or tap to specify start point.
- 10 Elapsed playing time
- 11 Copy protection
- 12 Volume level  
 Tap to adjust volume.
- 13 Total playing time
- 14 Operation keys

- [Stop icon] : Stop
- [Play icon] : Play
- [Pause icon] : Pause
- [Previous icon] : Cue/Previous song
  - Tap within three seconds after playback starts to play previous song. Tap after three seconds to play beginning of current song.
- [Rewind icon] : Rewind
- [Next icon] : Next song
- [Fast forward icon] : Fast forward

- Rotate handset 90 degrees to automatically rotate Display image into Landscape view. Operations are the same as those in Portrait view.

## Playing Music

### 1 Tap Menu → *Media* → *Music*

### 2 Play a file

#### ■ To Play Most Recently Played File

*Last played*

- While playing, *Last played* will be *Now playing*.

#### ■ To Select from All Files

*All music* → Select a file

#### ■ To Select from Playlists

*Playlists* → Select a playlist → Select a file

#### ■ To Select from List of Artists

*Artists* → Select an Artist → Select a file

#### ■ To Select from List of Albums

*Albums* → Select an Album → Select a file

#### ■ To Select from List of Genres

*Genres* → Select a genre → Select a file

#### ■ To Select from Folder List







*Folder* → Select a folder → Select a file

#### ■ To Select from List of Recently Played Files

*Recent music* → Select a file

#### ■ To Select from List of Often Played Files

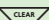*Most played music* → Select a file

- Tap  next to *All music* or a playlist name to play all files in the list.
- When Memory Card is inserted, Memory Card files appear in All music list and Folder list with .
- While Media Player is active, press  repeatedly to hide Music playback window. Also, press  to choose whether to exit Music playback window or keep playing the music as BGM.  
In Standby, press  to end Media Player. End confirmation appears, choose *Yes*.
- When a list appears while playing music, tap  to return to Music playback window.
- If a call arrives while playing music in Music playback window, playback pauses and handset rings. After call ends, paused Music playback window returns. For BGM, playback resumes automatically after call ends.
- Alarm time arrives during playing music in Music playback window, playback pauses, Alarm sounds and indicator appears. Press any key to stop Alarm and to clear the indicator. For BGM, playback resumes.

## Advanced

### **Advanced Settings** (P.8-9)

- Searching File by Text
- Adding Files to Playlist
- Sending Files
- Setting Files to Ringtone in Normal Mode
- Sorting Files
- Purchasing/Downloading Content Key
- Viewing File Details
- Deleting Files from Playlist
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Stopping Playback
- Switching to Bluetooth® -Compatible Stereo Headphone during Playback

### **Settings**


- Set Repeat Mode (P.14-19)
- Set Shuffle (P.14-19)
- Set Sound Effects (P.14-19)
- Set Mood (P.14-19)

## Playing Movie

Folder structure is as follows.

Folder	Description
Last played	Play most recently played file
All movies	View all playable file in Movie up to 9999
Playlists	View playable file in Movie in created folders
Folder	View files in Movie folders of <b>Data Folder</b> and Memory Card, as well as WMVideo on Memory Card
Recent movie	View up to 100 most recently played file (most recently played file appears first)
Most played movie	View up to 100 most frequently played file (most frequently played file appears first)

## Media Player Movie Window

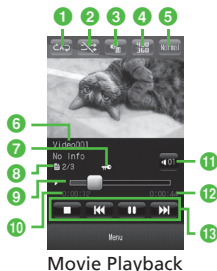

- Repeat mode  
Tap to toggle settings.  
 [Off] : Off  
 [One] : One  
 [All] : Repeat all
- Setting Shuffle  
Tap to toggle settings.  
 [On] : Shuffle On  
 [Off] : Shuffle Off
- Setting Sound effects  
Tap to change Sound effects/ mood settings.
- Display size  
Tap to change setting.
- Playback speed  
Tap to change setting.

- Movie title (or file name if no title) and author

- Copy protection

- File number/Total number of files

- Progress bar  
Drag or tap to specify start point.

- Elapsed playing time

- Volume level  
Tap to adjust volume.

- Total playing time

- Operation keys

[Stop] : Stop

[Play] : Play

[Pause] : Pause

[Cue/Previous] : Cue/Previous movie

- Tap within three seconds after playback starts to play previous movie. Tap after three seconds to play beginning of current movie.

Touch and hold [Rewind] : Rewind

[Next] : Next movie

Touch and hold [Fast forward] : Fast forward

- Rotate handset 90 degrees to automatically rotate Display image into Landscape view. Operations are the same as those in Portrait view.

- In Portrait view, tap movie for icons 1 to 5. In Landscape view, tap movie for items other than image, including playback navigation or progress bar.

## Playing Movie

1 Tap Menu → *Media* → *Movie*

2 Play a file

■ **To Play Most Recently Played File**

*Last played*

■ **To Select from All Files**

*All movies* → Select a file

■ **To Select from Playlists**

*Playlists* → Select a playlist → Select a file

■ **To Select from Folder List**



*Folder* → Select a folder

■ **To Select from List of Recently Played Files**

*Recent movie* → Select a file

■ **To Select from List of Often Played Files**

*Most played movie* → Select a file

- Tapping  next to *All movies* or a playlist name plays all files in the list.
- When Memory Card is inserted, Memory Card files appear in All movies list and Folder list with .

## Advanced

 **Advanced Settings** (P.8-11)

- Searching File by Text
- Adding Files to Playlist
- Sending Files
- Setting Files to Ringtone in Normal Mode
- Sorting Files
- Purchasing/Downloading Content Key
- Viewing File Details
- Deleting Files from Playlist
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Stopping Playback
- Switching to Bluetooth® -Compatible Stereo Headphone during Playback

 **Settings**

- Set Repeat Mode (P.14-19)
- Set Shuffle (P.14-19)
- Set Backlight (P.14-20)
- Set Portrait Style (P.14-20)
- Set Landscape Style (P.14-20)
- Show/Hide Movie Thumbnails (P.14-20)
- Access/Ignore Linked Information (P.14-20)

## Using Playlist

Create Playlist to make your own album.

### Creating Playlist

Create up to 20 playlists and 100 files in each playlist.

1 Tap Menu → *Media* → *Music* or *Movie* → *Playlists* → Tap Create

2 Enter playlist name

3 Select created playlist

4 Tap Add

5 Check files to save → Tap Add to playlist

## Playing Playlist

- 1 Tap Menu → *Media* → *Music* or *Movie* → *Playlists*
- 2 Select a playlist
- 3 Select a file

• Playlist cannot be played if included file has been deleted, or file is added from Memory Card and Memory Card is removed. Insert Memory Card and load file to play.

## Streaming

Enjoy audio visual media while it is being downloaded. Access compatible files via page links, etc.

### Streaming from Page Link

- 1 Open a page containing a page link
- 2 Select a link

### Entering URL

- 1 Tap Menu → *Media* → *Streaming* → *Enter URL*
  - Default: "rtsp://" is set.
- 2 Enter URL



Streaming

• Operation while streaming is the same as that of Media Player (P.8-4, P.8-6).

#### Note

• Even if streaming is paused, Internet connection remains active, incurring Packet Communication charges.

### Accessing from Bookmark

Save up to 20 links in Streaming Bookmark.

- 1 Tap Menu → *Media* → *Streaming* → *Bookmark*
- 2 Select a bookmark

### Accessing from History

Hold 20 previously accessed links.

- 1 Tap Menu → *Media* → *Streaming* → *History*
- 2 Select history



### Advanced Settings P.8-12

- Saving File to Bookmark while Streaming
- Accessing Streaming Saved as Bookmark
- Accessing Previously Accessed Stream
- Editing Streaming Bookmark URL
- Saving Streaming Bookmark via Direct Entry
- Deleting Streaming Bookmark URL
- Editing History of Streaming
- Deleting History of Streaming

## Advanced Settings

### Advanced Settings

#### Music Playback

##### Searching File by Text

Tap Menu → **Media** → **Music** → **All music** → Tap Search files → Check **Title** or **Artist** → Tap Search field → Enter title or artist name → Tap Search

##### Adding Files to Playlist

Tap Menu → **Media** → **Music** → **All music** → Tap Add to playlist → Check a file to add → Tap Add to playlist → Select a playlist

- To create a new playlist and add files to it. Tap Create in the window to add files → Enter playlist name → Select a created playlist.



##### Sending Files

Tap Menu → **Media** → **Music** → **All music** → Tap Send

#### To Send via Message

*Via message* → Select a file →  P.4-4 S! Mail 


#### To Send via Bluetooth®

*Via Bluetooth* → Check files → Tap Send  P.13-6 Sending One Item at a Time 

#### To Send via Infrared

*Via infrared* → Check files → Tap Send  P.13-3

#### To Send via IC Transmission

*Via IC transmission* → Check files → Tap Send  P.13-8

#### Setting Files to Ringtone in Normal Mode

Tap Menu → **Media** → **Music** → **All music** → Tap More → **Set as** → Select a file → Select an item

- Alternatively, tap Menu → **Set as** while music is paused in Music playback window.
- This operation is not available for files that cannot be added to Ringtone.

#### Sorting Files

Tap Menu → **Media** → **Music** → **All music** → Tap More → **Sort by** → Select an item

- Perform the same operation to files in **Folder**.
- After returning to Standby, files will be resorted to default.

#### Purchasing/Downloading Content Key

Tap Menu → **Media** → **Music** → **All music** → Tap More → **Download Content key** → Select a file

#### Viewing File Details

Tap Menu → **Media** → **Music** → **All music** → Tap More → **Details** → Select a file

- Alternatively, during playback, Tap Menu → **Details**.
- Perform the same operation in other folders.

### Deleting Files from Playlist

Tap Menu → **Media** → **Music** → **Playlists** → Select a playlist → Tap Delete → Check file to delete → Tap Delete → **Yes**

### Changing Order of Files in Playlist

Tap Menu → **Media** → **Music** → **Playlists** → Select a playlist → Tap Change order → Confirmation appears, **Never show this** → **OK** as required → Touch and hold file to select → Drag to desired location → Tap OK

### Renaming Playlist

Tap Menu → **Media** → **Music** → **Playlists** → Tap Rename → Select a playlist → Enter playlist name

### Deleting Playlist


Tap Menu → **Media** → **Music** → **Playlists** → Tap Delete → Check a playlist → Tap Delete → **Yes**


- If **Mark all** is selected, tap Delete → Enter Phone Password → Tap OK → **Yes**.

### Stopping Playback

During playback, tap 

### Switching to Bluetooth®-Compatible Stereo Headphone during Playback

In Music playback window, tap Menu → **Transfer to headset** → Drag device to connect to .

- When no device is registered, search and register new device.
- When **Transfer to headset** is set, volume adjustment on handset is unavailable. Adjust with the headphones.
- Volume may change depending on volume settings with headphones.
- Playback with monaural headphones is unavailable.
- Some files may not be played.
- To switch output to handset while playing music, tap Menu → **Transfer to phone**.
- When headphone is registered or connected before, switching to Bluetooth®-compatible stereo headphone is available without dragging device to connect to .

### Setting Repeat Mode


In Music playback window, tap Menu → **Settings** → **Repeat mode** → Select an item

### Setting Shuffle

In Music Playback window, tap Menu → **Settings** → Under **Shuffle, On** or **Off**


### Setting Sound effects

In Music playback window, tap Menu → **Settings** → **Sound effects** → Select an item → Tap OK

- This is not available when you use a Bluetooth®-compatible stereo headphone.
- Alternatively, in Music playback window, tap  to set.

### Setting Mood

In Music playback window, tap Menu → **Settings** → Adjust Mood in Mood field

- If **Sound effects** is set to **Off** or **Manual**, Mood can not be set.
- Alternatively, in Music playback window, tap  to set.

### Connecting Web Link

In Music playback window, tap Menu → **Connect web link** → **Yes**

- This is not available when web link does not exist.

### Viewing Lyrics

In Music playback window, tap Menu → **View lyrics**

- This is not available when music file is compatible with this function.

## Movie Playback

### Searching File by Text

Tap Menu → **Media** → **Movie** → **All movies**  
 → Tap Search files → Check **Title** or **Author**  
 → Tap Search field → Enter title or author's  
 name → Tap Search

### Adding Files to Playlist

Tap Menu → **Media** → **Movie** → **All movies** →  
 Tap Add to playlist → Check a file to add →  
 Tap Add to playlist → Select a playlist

- To create a new playlist and add files to it, tap  
 Create in the window to add files → Enter playlist  
 name → Select playlist.

### Sending Files

Tap Menu → **Media** → **Movie** → **All movies** →  
 Tap Send

#### ■ To Send via Message

*Via message* → Select a file → (ⓂP.4-4 S! Mail ②)

#### ■ To Send via Bluetooth®

*Via Bluetooth* → Check a file → Tap Send (ⓂP.13-6  
 Sending One Item at a Time ②)

#### ■ To Send via Infrared

*Via infrared* → Check a file → Tap Send (ⓂP.13-3)

#### ■ To Send via IC Transmission

*Via IC transmission* → Check files → Tap Send  
 (ⓂP.13-8)

### Setting Files to Ringtone in Normal Mode

Tap Menu → **Media** → **Movie** → **All movies** →  
 Tap More → **Set as** → Select a file → Select an  
 item

- Alternatively, tap Menu → **Set as** in Movie  
 playback window.
- This operation is not available for files that cannot  
 be added to Ringtone.

### Sorting Files

Tap Menu → **Media** → **Movie** → **All movies** →  
 Tap More → **Sort by** → Select an item

- Perform the same operation to files in **Folder**.

### Purchasing/Downloading Content Key

Tap Menu → **Media** → **Movie** → **All movies** →  
 Tap More → **Download Content key** → Select  
 a file

### Viewing File Details

Tap Menu → **Media** → **Movie** → **All movies** →  
 Tap More → **Details** → Select a file

- Alternatively, in Movie playback window, tap Menu  
 → **Details**.
- Perform the same operation in other folders.

### Deleting Files from Playlist

Tap Menu → **Media** → **Movie** → **Playlists** →  
 Select playlist → Tap Delete → Check file to  
 delete → Tap Delete → **Yes**

### Changing Order of Files in Playlist

Tap Menu → **Media** → **Movie** → **Playlists**  
 → Select a playlist → Tap **Change order** →  
 Confirmation appears, **Never show this** → **OK**  
 as required → Touch and hold file to select →  
 Drag to desired location → Tap OK

### Renaming Playlist


Tap Menu → **Media** → **Movie** → **Playlists**  
 → Tap Rename → Select a playlist → Enter  
 playlist name

### Deleting Playlist

Tap Menu → **Media** → **Movie** → **Playlists** →  
 Tap Delete → Check a playlist → Tap Delete  
 → **Yes**


- If **Mark all** is selected, tap Delete → Enter Phone  
 Password → Tap OK → **Yes**.

### Stopping Playback

During playback, tap 

---

### Switching to Bluetooth® -Compatible Stereo Headphone during Playback

In Movie playback window, tap Menu → **Transfer to headset** → Drag device to connect to 

- When no device is registered, search and register new device.
- When **Transfer to headset** is set, volume adjustment on handset is unavailable. Adjust with the headphones.
- Volume may change depending on volume settings on headphones.
- Playback with monaural headphones is unavailable.
- Some files may not be played.
- To switch output to handset while playing movie, tap Menu → **Transfer to phone**.

---

### Setting Repeat Mode

In Movie playback window, tap Menu → **Settings** → **Repeat mode** → Select an item

---

### Setting Shuffle

In Movie playback window, tap Menu → **Settings** → Under **Shuffle**, **On** or **Off**

---

### Setting Backlight

In Movie playback window, tap Menu → **Settings** → **Backlight** → Select an item

---

### Setting Portrait Style

In Movie playback window, tap Menu → **Settings** → **Portrait style** → Select an item

---

### Setting Landscape Style

In Movie playback window, tap Menu → **Settings** → **Landscape style** → Select an item

---

### Setting Thumbnail Display

In Movie playback window, tap Menu → **Settings** → Under **Thumbnail display**, **On** or **Off**

---


### Accessing/Ignoring Linked Information

In Movie playback window, tap Menu → **Settings** → Under **Web link**, **On** or **Off**

---

### Setting Sound Effect


In Movie playback window, tap Menu → **Settings** → **Sound Effect** → Select an item

- This is not available when you use a Bluetooth®-compatible stereo headphone.
- Alternatively, in Movie playback window, tap 

---

### Setting Mood

In Movie playback window, tap Menu → **Settings** → Adjust Mood in Mood field

- If **Sound effects** is set to **Off** or **Manual**, Mood can not be set.
- Alternatively, in Movie playback window, tap 

---

## Streaming

---

### Playing the Last Played Stream

Tap Menu → **Media** → **Streaming** → **Last played**

---

### Saving File to Bookmark while Streaming

While streaming, tap Menu → Tap Add bookmark → Tap Title field → Enter title → Tap URL field → Enter URL → Tap Save

---

### Accessing Streaming Saved as Bookmark

While streaming, tap View bookmark → Select bookmark

---

### Accessing Previously Accessed Stream

While streaming, tap Menu → Tap View history → Select history

---

### Editing Streaming Bookmark URL

Tap Menu → **Media** → **Streaming** → **Bookmark** → Tap Edit bookmark → Select bookmark to edit → Tap Title field → Edit title → Tap URL field → Edit URL → Tap Save

- Alternatively, while streaming, tap Menu → Tap View bookmark → Edit bookmark → Select a bookmark to edit → Tap Title field → Edit title → Tap URL field → Edit URL → Tap Save.

---

### Saving Streaming Bookmark via Direct Entry

Tap Menu → **Media** → **Streaming** → **Bookmark** → Tap Add bookmark → Tap Title field → Enter title → Tap URL field → Enter URL → Tap Save

- Alternatively, while streaming, tap Menu → Tap View bookmark → Tap Add bookmark → Tap Title field → Enter title → Tap URL field → Enter URL → Tap Save.

---

### Deleting Streaming Bookmark URL

Tap Menu → **Media** → **Streaming** → **Bookmark** → Tap Delete → Check bookmarks to delete → Tap Delete → **Yes**

- Alternatively, while streaming, tap Menu → Tap View bookmark → Tap Delete → Check bookmarks to delete → Tap Delete → **Yes**.
- If **Mark all** is selected, tap Delete → Enter Phone Password → Tap OK → **Yes**.

---

### Editing History of Streaming

Tap Menu → **Media** → **Streaming** → **History** → Tap Edit history → Select history to edit → Tap Title field → Edit title → Tap URL field → Edit URL → Tap Save

- Alternatively, while streaming, tap Menu → Tap View history → Tap Edit history → Select history to edit → Tap Title field → Edit title → Tap URL field → Edit URL → Tap Save.

---

### Deleting History of Streaming

Tap Menu → **Media** → **Streaming** → **History** → Tap Delete → Check URL to delete → Tap Delete → **Yes**

- Alternatively, while streaming, tap Menu → Tap View history → Tap Delete → Check URL to delete → Tap Delete → **Yes**.
- If **Mark all** is selected, tap Delete → Enter Phone Password → Tap OK → **Yes**.

