

Entertainment

9

Entertainment Functions	9-2	Near Chat (Japanese)	9-10
S! Applications (Japanese)	9-3	About Near Chat	9-10
Downloading S! Appli.	9-3	Using Near Chat	9-11
Activating S! Appli	9-3	Sending Near Chat Request	9-11
Exiting S! Appli.	9-3	Receiving Near Chat Request	9-11
Games	9-3	BookSurfing® (Japanese)	9-12
Crayon Physics	9-3	Downloading e-Books	9-12
Number Place World.	9-4	e-Books Viewer	9-12
Touch Golf Pangya	9-4	Biorhythm	9-12
Hidden Catch4	9-4	Registering Birthday	9-12
Dice	9-4	Checking Biorhythm	9-12
Random Ball.	9-4	Registering Friend's Birthday.	9-13
S! Quick News (Japanese)	9-5	Checking Friend's Biorhythm.	9-13
Opening List	9-5	Widgets (Japanese)	9-13
Viewing Update Information	9-5	Downloading Widgets	9-14
Registering S! Quick News List	9-5	Deleting Downloaded Widget	9-15
Refreshing Entries Manually	9-5	Using Widget Display Packages	9-15
Deleting Entries	9-5	Adding to Standby Display	9-15
Free Content	9-6	Adding from Widget List.	9-16
S! Contents Store	9-6	Wallpaper Widget.	9-16
S! Information Channel	9-6	S! Friend's Status Widget	9-17
Service Registration	9-6	S! Quick News Widget	9-17
New Received Information	9-6	Mini Player Widget.	9-18
Using Weather Indicator	9-7	Dual Clock Widget	9-18
S! Friend's Status	9-7	S! Information Channel Widget.	9-18
Saving Members.	9-7	Weather Widget.	9-18
Changing My Status	9-9	Calendar Widget	9-19
Deleting Member	9-10	Alarm Widget.	9-19
		Tasks Widget	9-19
		Memo Widgets.	9-19
		Top 3 Widget	9-19
		Using Standby Widgets as Shortcuts	9-20

Advanced Settings	9-20
S! Quick News	9-20
S! Information Channel	9-21
S! Friend's Status	9-21
Widgets	9-23

 
Entertainment Functions

Access the Internet to view or download content. Subscribe to content for automatic updates. Learn how to download and use content.

Note


These services require separate subscriptions:

- S! Quick News
- S! Information Channel/Weather
- S! Friend's Status

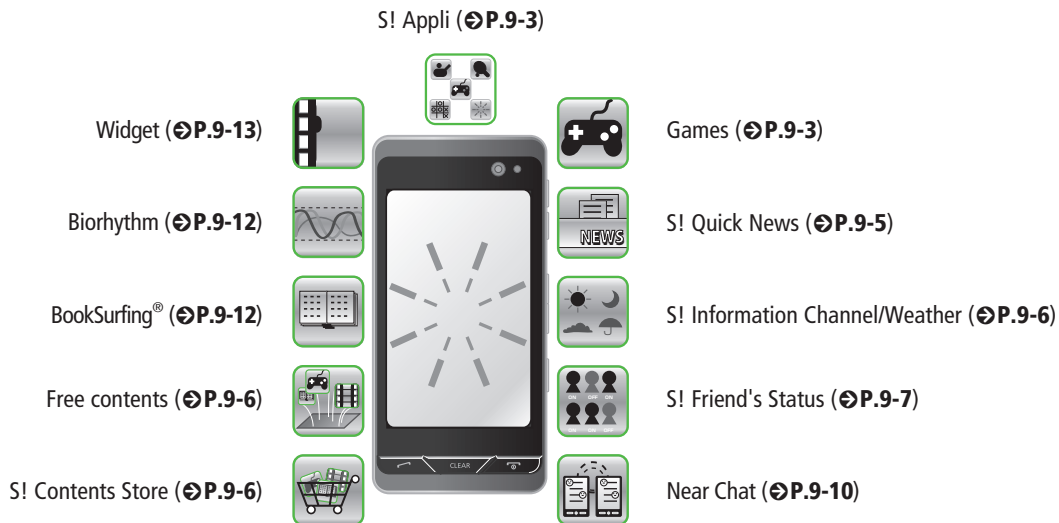

S! Applications (Japanese)

Play downloaded or preinstalled SoftBank S! Appli games.

When S! Appli is active on full screen, press  to view icon for Battery level, etc.

- For detailed instructions, see S! Appli Help or information on Internet download site.

Downloading S! Appli

- 1 Tap Menu → *S! Appli* → *S! Appli List* → *Download S! Appli*

- Follow onscreen instructions.

Activating S! Appli

- 1 Tap Menu → *S! Appli* → *S! Appli List*

- 2 Select S! Appli item

Play Network connection type S! Appli

- Network (Internet) access confirmation appears. Follow onscreen instructions.

Incoming call while S! Appli is activated

- S! Appli will be paused and Incoming call window appears.

To check S! Appli Demand history

- Tap Menu → *S! Appli* → *Demand history*

Exiting S! Appli

- 1 While S! Appli is activated



- 2 *Exit*

To pause S! Appli

- While S! Appli is active,  → *Pause*

To resume paused S! Appli

- Tap Menu → *S! Appli* → *Resume*

To end paused S! Appli

- Tap Menu → *S! Appli* → *Exit*

Games

The following games are preinstalled on handset.

Note

 
- Some games require shaking handset. If shaken too hard, handset may impact a person or object, causing damage/injury. Do not shake handset too hard. Hold firmly in a safe place while playing games.

Crayon Physics

Trace pictures on the screen that become falling objects. Use those objects to guide the ball up to the star.

- 1 Tap Menu → *Entertainment* → *Crayon Physics*


- 2 Follow onscreen instructions

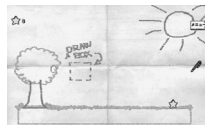

Number Place World

Fill out 81 grids with numbers. Fill out all 9x9 grid with numbers one through nine. One through nine can be used only once in each column, row and box with 3x3 grid.

 - 1 Tap Menu → *Entertainment* → *Number Place World*
- 2 Follow onscreen instructions

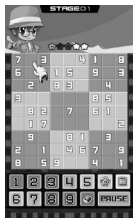

Touch Golf Pangya

This is a golf game anyone can enjoy without being knowledgeable about golf.

- 1 Tap Menu → *Entertainment* → *Touch Golf Pangya*
- 2 Follow onscreen instructions



Hidden Catch4

Clear three stages: *間違い探し* Find the differences between two images; *変わる絵* Find changes that occur as time elapses; *隠し絵* Find hidden spirits.

- 1 Tap Menu → *Entertainment* → *Hidden Catch4*
- 2 Follow onscreen instructions



Dice

Shake handset to cast two dice in the window.

 
- 1 Tap Menu → *Entertainment* → *Dice*
- 2 Shake handset



Random Ball

Set a range of numbers and number of balls to use for playing bingo.

- 1 Tap Menu → *Entertainment* → *Random Ball*
- 2 *Range* → *Set Min(0 ~) and Max(~ 50)* → Tap OK → *Balls* → Enter quantity → Tap OK → Tap OK
- 3 Shake handset

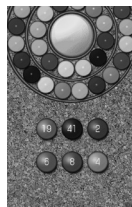


S! Quick News (Japanese)

View Yahoo! Keitai content update information.

- Check for updates of items saved in S! Quick News (P.9-17).
- S! Quick News requires a separate subscription.

Opening List

 - 1 Tap Menu → *Entertainment* → *S! Quick News*

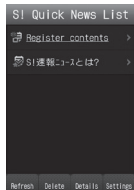

S! Quick News List

- : Unread Special News : Unread News Flash
 : Unread General News : Read Special News
 : Read News Flash : Read General news

Note

- Using S! Quick News incurs Packet Communication charges apply.

Viewing Update Information

- 1 Tap Menu → *Entertainment* → *S! Quick News*
- 2 Select content
- 3 Select an entry
 - Tap List/Index to return to S! Quick News list/Contents list.
 - To connect to Internet and check for update, select an item → *Yes*.
 - To view information on the previous page, tap Previous.
 - To view information on the next page, tap Next.
 - Tap Show keypad to show Keypad.

Registering S! Quick News List

Register up to one special and five general news/newsflash in S! Quick News list.

- 1 Tap Menu → *Entertainment* → *S! Quick News*
- 2 Register contents → *Yes*
- 3 Select content → Follow onscreen instructions

Refreshing Entries Manually

- 1 Tap Menu → *Entertainment* → *S! Quick News*
- 2 Tap Refresh → Select contents to refresh → Tap OK
 - Tap Cancel to cancel refresh in process.

Deleting Entries

- 1 Tap Menu → *Entertainment* → *S! Quick News*
- 2 Tap Delete → Select contents to delete → Tap Delete → *Yes*

Advanced

Advanced Settings (P.9-20)

- Viewing Content Details
- Refreshing S! Quick News List
- Viewing S! Quick News from List

Free Content

Access free content in *S! Contents Store*.

- 1 Tap Menu → *Entertainment*
→ *Free contents*
- 2 *Tada-Melody (Ringtones)*/
Tada-Deco (Graphic Mail)/
Tada-Komi (Comics)/*Tada-Gamel*/
Tada-Utaban (Music Programs)
→ Follow onscreen instructions

S! Contents Store

Search and download digital content (e.g. music, games, comics) via this site. Browse a large variety of featured/free content and media charts/reviews.

- 1 Tap Menu → *Entertainment*
→ *S! Contents Store*
- 2 Follow onscreen instructions

S! Information Channel

S! Information Channel delivers subscribed content such as overnight news. Weather Indicator appears in Standby.

- This service is only available in Japan.
- S! Information Channel requires a separate subscription.

Service Registration

- 1 Tap Menu → *Entertainment*
→ *S! Information Channell*
Weather → *Register/Cancel*
- 2 Follow onscreen instructions

New Received Information

S! Information Channel content is received automatically; notification appears in Standby.

- 1 Tap a notification
- 2 Follow onscreen instructions
 - Operations are same as Yahoo! Keitai.

Using Weather Indicator

Upon subscription to S! Information Channel, Weather Indicator appears in Standby.

- ☀️ : Clear (daytime)
- 🌙 : Clear (nighttime)
- ☁️ : Cloudy
- ☔️ : Rain
- ❄️ : Snow
- ⚡️ : Thunderstorm
- ⌚ : Later
- / : Intermittent

Example: ☁️ / ☔️ → Cloudy, Intermittent rain

- In addition to the above, other information such as rainfall probability or seasonal information appears.

Note

- Using S! Information Channel incurs Packet Communication charges.

Advanced

 
Settings

- Set Weather Indicator Update Notification (☎️ P.14-20)
- Set Weather Indicator Automatic Update (☎️ P.14-20)

S! Friend's Status

Check members' current mood or availability.

- S! Friend's Status requires a separate subscription.
- Available on S! Friend's Status-compatible models.

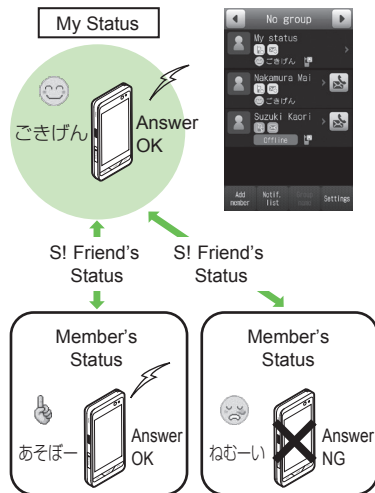

- Add Phone Book entries to Members List to make their status available. Status is updated automatically.

Note

 
- Confirm **IP service setting** (☎️ P.14-22) is set to **On** before using this service.

Saving Members

Add a member to S! Friend's Status members list to share information with other members.

- Add up to 30 members.

Registering Flow

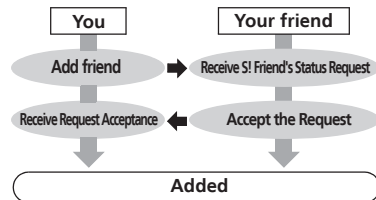

- When added to member list, your S! Friend's Status (My Status) will be sent, and information will be shared with each other.
- Notification is sent to person added or removed from S! Friend's Status members list.


See S! Friend's Status Notification types below:

Type	Description
S! Friend's Status Request	You are added to S! Friend's Status members list.
Request Acceptance	Your request for S! Friend's Status members list is accepted.
Request Rejection	Your S! Friend's Status members list request is rejected or no reply has been received within two hours.
Cancel Request	You are removed from S! Friend's Status members list.
Offline Notification	S! Friend's Status is not available due to network trouble.


Note

- When network connection status (☞P.9-21) is **Offline**, adding members to the list is not available. When adding members, make sure to set network connection status to Online.

 Opening Member Status

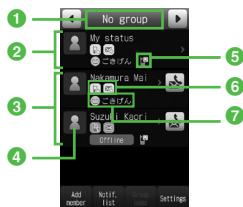

Members List Window

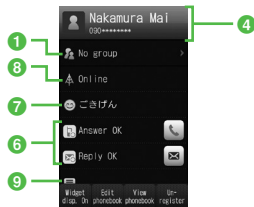 

Member Status Window

- Group name of S! Friend's Status
- Your information (My Status) (☞P.9-9)
- Member's information
- Image saved in Account Details appears in My Status. Image, name, and phone number saved in Phone Book appears in Member Status.

- S! Friend's Status widget setting status Appears when Widget disp. On is set to **Yes**.
- Answer status Call or message answer status
- Status icon and status label indicates your/member's status.
- Network connection status indicates your/member's connection status
- Comment

Registering from Phone Book

- Tap Menu → **Entertainment** → **S! Friend's Status**
 - When no member is saved, choose **Yes** and go to 3.
- Tap Add member
- Add members

To Use Phone Book

From phonebook → Search and select entry (☞P.2-18) → Select phone number

To Enter Phone Number

New entry → Enter phone number → Tap OK

4 Send request confirmation appears, choose *Yes*

- After request is accepted and Request Acceptance received, member is added.
- S! Friend's Status information changes to *Waiting* and status to *Unknown*.

• If you do not wish to show your status upon initial registration by default, change My Status first.

Note

- When 30 members are saved, none can be added. Delete members to add new ones.
- If handset is incompatible, Request Rejection Notification appears.

Registering from Received Request

Add members via S! Friend's Status Request.

- When received, add sender confirmation appears.



S! Friend's Status Request Window

1 Tap notification list → Select **S!** Friend's Status Request

2 **S!** Friend's Status Request appears, choose *Yes*

- Request Acceptance received and new member is added to the list.
- Choose *No* to reject the request. Request Rejection is sent (member is not added).
- To check later, select *Check Later*.

- Request Rejection is automatically sent:
 - Not available to reply within two hours.
 - 30 members are already saved.

Note

 
- For *No*, Request Rejection is sent. The person who sent Request cannot be added to members list for 24 hours.
- If Request Rejection is not received within 24 hours, Request is resent.

Changing My Status

Set S! Friend's Status information as follows.

My Status Details Window

1 Tap Menu → *Entertainment* → *S! Friend's Status* → *My status*

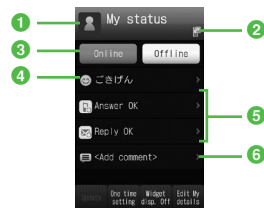

My Status Details Window

- 1 Image
Show images saved in Account Details.
- 2 S! Friend's Status widget setting status
Appears when Widget disp. On is set to *Yes*.
- 3 Network connection status (P.9-21)
- 4 Status icon and status label
Change pictograms (status icon) and short sentence (status label). Change status icon and label in Status setting by tapping Edit (P.9-22).
- 5 Answer status
Change Answer status of call or message.
- 6 Comment
Edit Short message (up to 15 characters).

Changing My Status Information

- 1 Open My Status Details window → Select item to change (except network connection status) → Change setting → Tap Update

- Changed My Status is sent to members.

Set following items.

Item	Settings
Status setting	16 combinations of status icons and labels
One time setting	
	All OK Call: Answer OK Mail: Reply OK
	Mail only OK Call: Answer NG Mail: Reply OK
	All NG Call: Answer NG Mail: Check later
	User Setting _*
Call	Answer OK, Urgency only, Answer NG
Mail	Reply OK, Check later
Comment	Max. 15 characters

*Change answer settings in **One time setting** (P.9-22).

Deleting Member

- 1 Tap Menu → *Entertainment* → *S! Friend's Status* → Select member to delete → Tap Unregister → Yes

- The removed member cannot be added again to the list for 24 hours.

Advanced

Advanced Settings (P.9-21)

- Toggling My Status in Widget Screen On/Off
- Adding S! Friend's Status Member to Widget
- Viewing S! Friend's Status Notification
- Deleting S! Friend's Status Notification
- Adding Members to Phone Book
- Editing Members in Phone Book
- Editing Group Names
- Setting My Image
- Setting S! Friend's Status Member Images

Settings

- Set IP Service Setting (P.14-22)

Near Chat (Japanese)

- This application employs a function that enables supervising adults to restrict usage by children under 18 years old.
- For details on password restriction, see Near Chat S! Appli instructions.
- Users may receive unsolicited connection requests from unknown sources, as Near Chat employs Bluetooth® technology. You can reject such requests.

About Near Chat

Exchange real-time text messages wirelessly with compatible devices within ten meters.

- This application employs Bluetooth® technology. Therefore, connection fees do not apply.
- Near Chat S! Appli is required. This application is pre-installed in handset.

Note

- Near Chat range may vary depending upon ambient conditions.
- The pre-installed Near Chat S! Appli cannot be deleted.
- Near Chat might not connect, operate differently, or be unable to send and receive data due to the features and specifications of the other parties' handsets.

Using Near Chat

Setup

First, activate these settings.

- Bluetooth
- Bluetooth Visibility
- S! Appli request setting

- Activating Near Chat activates Bluetooth.
Bluetooth remains active even after Near Chat ends.

Note

- When Bluetooth® is *Off*, you cannot use Near Chat S! Appli.
- When Bluetooth® is *On* and *My phone's visibility* in Bluetooth settings is *Show my phone*, handset is visible to other Bluetooth® devices. Connection requests from other devices may be received.
- When *My phone's visibility* is *Hide my phone* and *S! Appli request* is *Off*, Near Chat will not start from other device requests.

S! Appli Request

- 1 Tap Menu → *Settings* → *Connectivity* → *Bluetooth*
- 2 Tap More → *Settings*
- 3 Under *S! Appli request*, *On* or *Off*

Sending Near Chat Request

- 1 Tap Menu → *S! Appli* → *S! Appli List* → *ちかチャット* → *はし*



- If *Bluetooth On/Off* is *Off*, choose *Yes*.

- 2 Send Near Chat request via *S! Appli*
- 3 To exit Near Chat, exit *S! Appli* (⊕P.9-3)

Receiving Near Chat Request

For details on Near Chat operations, see Near Chat S! Appli instructions.

- 1 When Near Chat request appears, choose *Yes*



- 2 When a confirmation appears, choose *Yes*
- 3 To exit Near Chat, exit *S! Appli* (⊕P.9-3)

- After 30 seconds of inactivity, notification appears.

BookSurfing® (Japanese)

Download and view e-books, comics, photobooks (CCF files) saved in Books. Enlarge/reduce images, scroll pages, browse images with Vibration/Sound effects.

To browse CCF files, acquire Content Key.

After changing phone models, move CCF files via Memory Card. Re-download Content Key to browse those files. Note that some contents may require re-downloading CCF files.

Downloading e-Books

1 Tap Menu → *S! Appli* → *S! Appli List* → ブックサーフィン

2 作品をさがす (Web から) → はい

- Follow onscreen instructions.

e-Books Viewer

1 Tap Menu → *S! Appli* → *S! Appli List* → ブックサーフィン

- For operation after activation, see BookSurfing® help.

Biorhythm

People have rhythms of 23-day physical cycles, 28-day emotional cycles, and 33-day intellectual cycles. Register birthday for a graph of that person's monthly biorhythm. Graph shows peak and off days for the month.

- In Biorhythm window, tap *What's biorhythm?* for description.

Registering Birthday

1 Tap Menu → *Entertainment* → *Biorhythm* → *Input birthday*

2 Enter birthday

 
- Birthday Registration window appears only if birthday is unregistered. If birthday is registered, (Graph/Attention!) Biorhythm for current day or month appears.

Checking Biorhythm

Today

1 Tap Menu → *Entertainment* → *Biorhythm*

- Tap *My Birthday* → Enter birthday to change *My Birthday*.

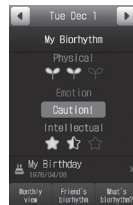

- Tap ◀ / ▶ to change biorhythm date.

 
Monthly View

- 1 Tap Menu → *Entertainment* → *Biorhythm* → Tap Monthly view → ◀ / ▶

- Tap *My Birthday* → Enter birth date.



- Tap ◀ / ▶ to change biorhythm month.

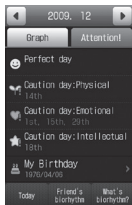

- Tap *Graph/Attention!* to change view.

Registering Friend's Birthday

- 1 Tap Menu → *Entertainment* → *Biorhythm* → Tap Friend's biorhythm

- 2 Enter birthday

- Birthday Registration window appears only if birthday is unregistered. If birthday is registered, (Graph/Attention!) biorhythm for current day or month appears.

Checking Friend's Biorhythm

- 1 Tap Menu → *Entertainment* → *Biorhythm* → Tap Friend's biorhythm

- Tap *Friend's Birthday* field → Enter birthday to add birthday.
- To change Friend's Biorhythm view, follow steps to change My Biorhythm view (➡P.9-12).
- Tap My biorhythm to return to your own.

Widgets (Japanese)

Tap widgets to access associated functions. Download widgets via Widget Store. These widgets are pre-installed:

Widget	Description
美女暦 (BJJO ごよみ)	Activate Bijo Goyomi
とくするクーポン	Download Coupons
ぐるなびウィジェット	Activate Gnavi widget
mixi	Open mixi login page
myspace @アーティストと友達に♪	Activate MySpace widget
お父さんウィジェット	Open Otousan widget. Animated Otousan appears in Standby
ソフトバンクモバイルグルメ	Search for restaurants
ウィジェットストア	Download latest widget information
Analog Clock	Show Analog Clock
Digital Clock	Show Digital Clock
Dual Clock	Show two clocks as specified in world map. Tap Clock to set area (➡P.9-18)
Calendar	Show Calendar/ choose view

Widget	Description
Tasks	Show all tasks
Alarm	Show Alarm settings
Memo (Yellow)	Open Yellow Memo
Memo (Blue)	Open Blue Memo
Memo (Red)	Open Red Memo
Countdown timer	Activate Countdown Timer
Light	Illuminate Backlight for 30 seconds
S! Information Channel	Access S! Information Channel
S! Friend's Status	Access S! Friend's Status
S! Quick News	Access S! Quick News
Top3	Show three most frequently called/messaged parties
Mini player	Use Music Player in Standby
Wallpaper	Open Data Folder to set Wallpaper
Menu list	Open Yahoo! Keitai Menu list information
My Softbank	Open My SoftBank information
Machi-Uta	Open Machi-Uta information
S-1 BATTLE	Open S-1 battle information
Content Value Package	Open Content Value Package information
Easy movie	Open Simple Select Video information
Easy music	Open Easy Music information

 
Note

- Separate subscription required to use S! Friend's Status/S! Quick News.

Downloading Widgets

Download up to 999 widgets.

1 Tap Menu → *Widget*

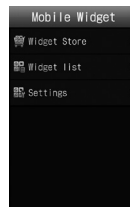


- Follow onscreen instructions.

2 *Widget Store*



- Alternatively, in Standby, tap Menu → *Widget* → *Widget list* → *Widget Store*.
- Manual installation may be necessary depending on widget downloaded. In Widget list, select widget → If confirmation appears, choose *Yes*.

 Deleting Downloaded Widget

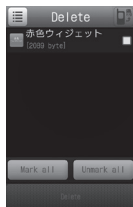- 1 Tap Menu → *Widget* → *Widget list* → Tap Delete



- 2 Check widgets to delete → Tap Delete → *Yes*

- To delete all downloaded widgets, perform 1 → *Mark all* → Tap Delete → Enter Phone Password → Tap OK → *Yes*.
- To switch between list and thumbnail, tap  / .
- If widget is saved on Widget Bar, confirmation message appears after 2. Choose *Yes* to confirm.

Using Widget Display Packages

There are four Widget Display Packages: A, B, C and D. Assign widgets to each Package.

- 1 Tap A, B, C, or D



A Package

B Package

- Handset retains Package widget assignments even if Package content is changed or handset powers off.
- Swipe left/right to toggle Packages.

Adding to Standby Display

Select widgets from Widget list or drag from Widget Bar to add them to Standby Display. Add up to five widgets to each Package.

- Tap Digital Clock or Analog Clock widgets to show in Standby. These widgets have no other function.
- Each Package contains pre-assigned widgets.

Adding from Widget Bar

- 1 Tap Widget Bar tab



Widget Bar Tab

 
- 2 Drag widget to Standby Display



- Standby widget may overlap.
- To move widget assignments in Standby, touch and hold widget; drag & drop to desired location.
- Change widget order in Widget Bar. Drag widgets to rearrange them.

Adding from Widget List


- 1 Tap **Menu** → **Widget** → **Widget list**
- 2 Tap **Preset widget** as required → Tap **Add to standby**

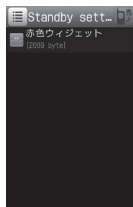

- 3 Select widget to add

- If saved to Standby Display, **Y** appears next to widget in Widget list.
- Alternatively, in Standby, tap **Menu** → **Widget** → **Widget list** → Tap **Move** → Check widgets to remove from Standby → Tap **Move** → **Yes** to remove widgets from Standby.
- When Memory Card is inserted and **Preset widget** is not selected, tap / to toggle handset/Memory Card.
- When adding widget from Memory Card to Standby Display, save to handset first confirmation appears. Choose **Yes** to confirm.
- Alternatively, tap **Widget Bar** tab → **Widget list** button.

 Wallpaper Widget

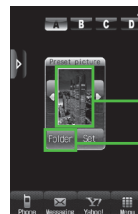

File

Folder Icon

 
- 1 **Folder**
- 2 Select **Preset picture/Pictures**
- 3 Tap / to select a file
- 4 **Set**

S! Friend's Status Widget

Check or operate S! Friend's Status in Standby. Add up to six people including yourself.



Member Standby Widget

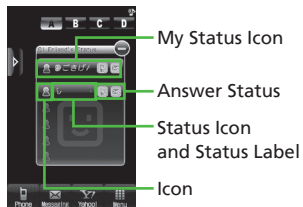

Member List Standby Widget

- 1 Tap Widget Bar tab
- 2 Drag *S! Friend's Status* widget to Standby Display
 - S! Friend's Status widget is shown in Standby.
- 3 Tap S! Friend's Status icon
 - S! Friend's Status member list appears.

Adding My Status Widget Icon

 
- 1 Tap
- 2 Tap My Status disp. On
 - To hide your status, tap My Status disp. Off.

Registering Member Widget Icon

- 1 Tap
- 2 Tap Add → Tap a field to register a member
- 3 Add a member
 - From Phone Book
 - From phonebook → Search and select entry (P.2-18) → Select the number
 - From S! Friend's Status Member List
 - S! Friend's Status → Choose an S! Friend's Status member


S! Quick News Widget

Default: S! Quick News widget appears in Standby.

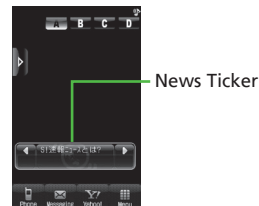

- 1 Tap News Ticker
 - Contents list appears.
- 2 Check news (P.9-5)

 Mini Player Widget

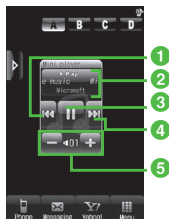

- 1 Cue/Previous track
Tap within three seconds after playback begins to go to previous track, tap three seconds after playback commences to cue the start of current track.
 - 2 Title (or file name is shown if there is no title), Artist name/Launch Media Player.
 - 3 Play/Pause
 - 4 Next track
 - 5 Volume level
 - Press / to adjust the volume.
 - In Standby, press → **Yes** to stop playback.
- Playback with Mini player widget starts from first song in **All music** or last played point.

Dual Clock Widget



- To change the region for Clock, tap Clock → Tap a city to register → **Set as 1st clock/Set as 2nd clock** → Tap OK.

S! Information Channel Widget



 
- Tap for S! Information Channel/Weather menu.
- For details on subscribing to S! Information Channel, see "Service Registration" (➔P.9-6).

Weather Widget



- Tap Weather Indicator for weather information. Tap for S! Information Channel/Weather menu.
- If unsubscribed, tap ticker or for S! Information Channel/Weather menu. Upon subscription to S! Information Channel, Weather Indicator appears in Standby. For details on subscribing to S! Information Channel, see "Service Registration" (➔P.9-6).
- See "Using Weather Indicator" (➔P.9-7).

Calendar Widget

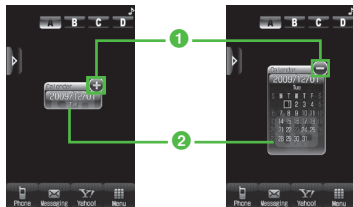

Daily View

Monthly View

 
- 1 / : Toggle view
Tap to toggle Daily view/Monthly view
- 2 Calendar
Tap this to launch Calendar.

Alarm Widget



- Time set for Alarm appears. If more than one Alarm is set, the Alarm set closest to current time appears.
- Tap widget to activate Alarm (☞P.10-3).

Tasks Widget

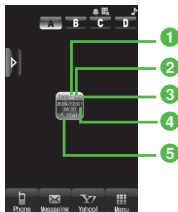

- 1 Priority
 - 2 Status
:Complete :Incomplete :Expired
 - 3 Alarm set
 - 4 Due date
 - 5 Title
- If multiple tasks are set, the Alarm set closest to current time appears.

Memo Widgets



- Show yellow/blue/red memos.
- Tap widgets to edit contents.

Top 3 Widget



- Show three most frequently called/messaged contacts.

Placing a Video Call

- 1 Tap tab
- 2 Tap name
 - Tap name to dial.

Creating/Sending Mail

- 1 Tap tab
- 2 Tap name
 - Tap name to open Message creation window.

Using Standby Widgets as Shortcuts

Tap these widgets to launch corresponding functions:

- 美女暦 (BUO ごよみ) *
- とくするクーポン *
- ぐるなびウィジェット *
- mixi*
- マイスペース@アーティストと友達に♪ *
- お父さんウィジェット *
- ソフトバンクモバイルグルメ *
- ウィジェットストア *
- Task
- Alarm
- Countdown timer
- Light
- Menu list*
- My Softbank*
- Machi-Uta*
- S-1 BATTLE*
- Contents Value Package*
- Easy movie*
- Easy music*

* This widget may access the Internet incurring communications charges.

Advanced

Advanced Settings (P.9-23)

- Opening Downloaded Widget Detail
- Sending Downloaded Widgets
- Rearranging Downloaded Widgets

Settings

- Set Downloaded Widget Automatic Update (P.14-20)
- Set Roaming Automatic Connection (P.14-20)
- Show/Hide Confirmation When Using Overseas (P.14-20)
- Accept/Reject Cookies (P.14-20)
- Deleting Cookies (P.14-20)

Advanced Settings

Advanced Settings

S! Quick News

Viewing Content Details

In S! Quick News list, tap Details → Select content

Refreshing S! Quick News List

In S! Quick News list, select content → Tap Refresh

- Tap Cancel to cancel.

Viewing S! Quick News from List

In S! Quick News list, select content → **Website** → **Yes**

- Tap List or  to view S! Quick News List.

Refreshing S! Quick News List Automatically

Tap Menu → **Entertainment** → **S! Quick News** → Tap Settings → **Auto refresh**

■ To Refresh Newsflash Automatically

Flash news → Select an item

■ To Refresh General News Automatically

General → **On** or **Off**

■ To Refresh Special Automatically

Special → **On** or **Off**

- Auto refresh is executed based on the set time. To view next refresh time, in S! Quick News list, tap Details → Select content.

- Set **General** to **On** to refresh automatically once a day.
- Setting **Special** to **On** may incur high Packet Communication charges.
- Set **Special** to **On** to refresh automatically once every four hours.
- **Special** and **Flash news** auto refresh is not executed between midnight and early AM. If **General** is set, news is refreshed automatically during that period.
- Auto refresh is not performed while roaming. Instead, refresh manually (⊕P.9-5).
- Auto refresh may fail outside service area or where signal conditions are poor.
- If auto refresh fails, update news manually (⊕P.9-5).
- Removing/replacing USIM Card cancels auto refresh.

Deleting S! Quick News List

Tap Menu → **Entertainment** → **S! Quick News**
 → Tap Settings → **Delete S! Quick News List**
 → Enter Phone Password → Tap OK → **Yes**

S! Information Channel

Viewing after Indicator Disappears

Tap Menu → **Entertainment** → **S! Information Channel/Weather** → **What's New?**

Viewing Information Previously Received

Tap Menu → **Entertainment** → **S! Information Channel/Weather** → **History** → Select an item

Receiving Disrupted Information Again

Tap Menu → **Entertainment** → **S! Information Channel/Weather** → **Get Latest Contents** → **Yes**

Displaying Weather Indicator

Tap Menu → **Entertainment** → **S! Information Channel/Weather** → **Weather Indicator** → **Weather**

Updating Weather Indicator Manually

Tap Menu → **Entertainment** → **S! Information Channel/Weather** → **Weather Indicator** → **Manual update** → **Yes**

S! Friend's Status

Setting S! Friend's Status Connection

Open My Status details → **Online/Offline** in Network connection status field → **Yes**

- Set to **Online** to edit or update My Status.

Toggling My Status in Widget Screen On/Off

Open My Status details → Tap Widget disp. On or Widget disp. Off → **Yes** or **No**

- Choose Widget disp. On/Widget disp. Off → **Yes** to show or hide My status in Widget screen respectively.

Adding S! Friend's Status Member to Widget

Tap Menu → **Entertainment** → **S! Friend's Status** → select a member to set → Tap Widget disp. On → **Yes** → Select save location

- If widget is full, add members by overwriting the existing one.

Viewing S! Friend's Status Notification

Tap Menu → **Entertainment** → **S! Friend's Status** → Tap Notif. list → Select a notification list to view

- Tap each notification to check notification details.
- Request notification can also be selected (⊕P.9-9).


Deleting S! Friend's Status Notification

Tap Menu → **Entertainment** → **S! Friend's Status** → Tap Notif. list → Tap Delete → Check notification to delete → Tap Delete




Placing Voice/Video Call & Messaging

Tap Menu → **Entertainment** → **S! Friend's Status** → select a member

■ To Place a Call

Tap  of Answer status → Voice Call/Video Call

■ To Send a Message

Tap  of Answer status → S! Mail or SMS → (ⓂP.4-5 S! Mail , P.4-7 SMS )

- Alternatively, in S! Friend's Status members list, tap  to place Voice Call/Video Call or message.

Adding Members to Phone Book

Tap Menu → **Entertainment** → **S! Friend's Status** → Select a member → Tap Add to phonebook → (ⓂP.2-23 Entering and Saving Phone Number)

Editing Members in Phone Book

Tap Menu → **Entertainment** → **S! Friend's Status** → Select a member → Tap Edit phonebook → Edit entry (ⓂP.2-22)

Setting Actions When Saving

Tap Menu → **Entertainment** → **S! Friend's Status** → Tap Settings → **Request reply** → Select an item

- If **Do not answer** is selected, Request Rejection is always returned.

Setting Answer Status

Tap Menu → **Entertainment** → **S! Friend's Status** → Tap Settings → **One time setting** → **User Settings** → Select answer status → Select answer status icon → Tap Save

Changing Status Icons or Status Labels

Tap Menu → **Entertainment** → **S! Friend's Status** → Tap Settings → **Status setting** → Select an icon to change → **Status icon** → Select an icon → **Status label** → Enter text → Tap OK → Tap Save

- Selectable icons in **Status icon** is same as those for pictograms.
- Enter up to four characters in **Status label**.

Setting List View



Tap Menu → **Entertainment** → **S! Friend's Status** → Tap Settings → **List display setting** → Select an item

Updating Lists

Tap Menu → **Entertainment** → **S! Friend's Status** → Tap Settings → **Update list**

- Information in **S! Friend's Status** is basically updated automatically.

Editing Group Names

Tap Menu → **Entertainment** → **S! Friend's Status** →  /  to switch to group to edit name → Tap Group name → Enter group name

Changing Groups

Tap Menu → **Entertainment** → **S! Friend's Status** → Select a member to change group → Tap Group field → Select a group to change

Removing a Member

Tap Menu → **Entertainment** → **S! Friend's Status** → Select a member to remove → Tap Unregister → **Yes**

- The removed member cannot be added to the list again for 24 hours.
- If Cancel Notification is not received by the removed member within 24 hours, the S! Friend's Status Request is sent from the member.

Editing Names

Tap Menu → **Entertainment** → **S! Friend's Status** → Select a member to edit name

■ To Add Unregistered Members


Tap Add to phonebook → (ⓂP.2-23 Entering and Saving Phone Number)

■ To Edit Registered Members

Tap Edit phonebook → Edit Phone Book entries (ⓂP.2-22)

- The name in Phone Book is also changed.

Setting My Image

Open My Status Details Window → Tap Edit My details → 

■ To Set from Saved Still Image

Pictures → Select a file

- With Memory Card inserted, files can be selected from Digital Camera folder.

■ To Set by Capturing Still Image

Take photo → Capture still image (☎P.7-6 Normal 2 to 3)

■ To Cancel Set Image

Off

- The image in Account Details is also changed.

Setting S! Friend's Status Member Images

Tap Menu → **Entertainment** → **S! Friend's Status** → Select a member to change the incoming image → Tap Edit Phone Book → 

■ To Set from Saved Still Image

Pictures → Select a file

- With Memory Card inserted, files can be selected from Digital Camera folder.

■ To Set by Capturing Still Image

Take photo → Capture still image (☎P.7-6 Normal 2 to 3)

■ To Cancel Incoming Image Set

Off

- To add unsaved members to Phone Book, tap Add phonebook (☎P.2-23 Entering and Saving Phone Number). To edit members saved in Phone Book, tap Edit phonebook → Edit Phone Book entries (☎P.2-22).
- The incoming image in Phone Book is also changed.

Widgets

Opening Downloaded Widget Detail

Tap Menu → **Widget** → **Widget list** → Tap More → **Details** → Select widget

- Alternatively, tap Menu → **Widget** → **Widget list** → Select widget → **Details**.

Sending Downloaded Widgets

Tap Menu → **Widget** → **Widget list** → Tap More → **Send**

■ To Send via Message

Via message → (☎P.4-4 S! Mail 2)

■ To Send via Bluetooth®

Via Bluetooth → (☎P.13-6 Sending One Item at a Time 2)

■ To Send via Infrared

Via Infrared → (☎P.13-3)

■ To Send via IC Transmission

Via IC transmission → (☎P.13-8)

Rearranging Downloaded Widgets

Tap Menu → **Widget** → **Widget list** → Tap More → **Change order** → Touch and hold widget to move → Drop widget → Tap OK

Updating View

Tap Widget Bar tab → **Widget Menu** → **Update view**

Logging in to Yahoo! JAPAN

Tap Widget Bar tab → **Widget Menu** → **Yahoo!JAPAN log in**


- **Yahoo!JAPAN log in** becomes **Yahoo!JAPAN log out**.

Installing Widgets Manually

Tap Menu → **Widget** → **Widget list** → Select widget to install → **Yes**

- When installing new version of installed widget, Upgrade confirmation appears. Choose **Yes** to upgrade.

Removing S! Friend's Status Member

 → Tap Release → Choose an S! Friend's Status member → **Yes**

Changing S! Friend's Status Icon

 → Tap More → **Change image** → Choose an S! Friend's Status member → Select an icon

Calling/Messaging S! Friend's Status Member

 → 

■ To Place a Voice Call

Voice call

■ To Place a Video Call

Video call

■ To Message

S! Mail or **SMS** → (☎P.4-5 S! Mail 5, P.4-7 SMS 5)

Memo

A series of 15 horizontal dotted lines for writing.