

Handset Customization

14

Phone Settings	14-2
Handset Settings	14-2
Touch Panel Settings	14-3
Sounds & Vibration & External Light Settings	14-3
Sounds & Vibration	14-3
External Light Settings	14-4
Display & Font Settings	14-4
Manner Mode Settings	14-5
Call Settings	14-5
Phone Book Settings	14-9
Messaging Settings	14-10
Custom Mail Address	14-10
S! Mail & SMS	14-10
S! Mail	14-12
SMS	14-13
Internet Settings	14-13
Yahoo! Keitai	14-13
PC Site Browser	14-14
Digital TV Settings	14-15
TV Alarm	14-15
Data Broadcast	14-16
Display & Sound	14-16
Recording	14-17
Incoming Calls & Alarms	14-17
Auto Power Off	14-17
Camera Settings	14-17
Camera & Video	14-17
Photo	14-18
Video	14-19

Media Player Settings	14-19
Music	14-19
Movie	14-19
Entertainment Setting	14-20
Widgets	14-20
S! Information Channel	14-20
S! Applications	14-21
OsaiFu-Keitai®	14-21
S! GPS Navi	14-21
Security Settings	14-22
Memory Settings	14-23
Connectivity Settings	14-24
Bluetooth	14-24
Infrared	14-25
IC Transmission	14-25
USB	14-25
Network	14-25

Phone Settings

Handset Settings

Start Here

Tap Menu → *Settings* → *Phone settings*

Change User Interface Language	Default 日本語	言語選択 → Select an item
Set Time Zone Updating	Default Ask when update	Date & Time → Set time zone → Time zone updating → Select an item
Set Time		Date & Time → Set date & time → Time → Enter time → Tap OK <ul style="list-style-type: none"> Some functions are disabled when time is not set.
Set Date		Date & Time → Set date & time → Date → Enter date → Tap OK <ul style="list-style-type: none"> Some functions are disabled until date is set.
Change Home Zone Time	Default GMT+09:00	Date & Time → Set time zone → Home zone → Scroll a window and tap a target city → Tap Save <ul style="list-style-type: none"> Alternatively, tap the tab located at the top of the window to change the zone. Select the zone closest to your locality. Complete this setting before selecting <i>Dual Clock</i> in <i>Widget setting</i>.
Activate/Cancel Daylight Savings Time	Default	Date & Time → Set time zone → Home zone → Scroll a window and tap a target city → → Tap Save <ul style="list-style-type: none"> Tap to switch to .
Change Date Format	Default YYYY/MM/DD	Date & Time → Set format → Date format → Select an item
Change Time Format	Default 24 hour	Date & Time → Set format → Time format → Select an item
Set Time Correction	Default On	Date & Time → Set date & time → Time correction → Under <i>Auto correction</i> , <i>On</i> or <i>Off</i> <ul style="list-style-type: none"> To specify when to correct the time, tap <i>Correction timing</i> → Check an item to set → Tap Save. Tapping <i>Manual correction</i> → <i>Yes</i> immediately corrects the time.
Set Function to Activate with Built-in Stand	Default Empty	<i>Auto activation settings</i> → Select item
Set Earphone Settings	Default Earphone	<i>Earphone settings</i> → Select item
Save Entries to User's Dictionary		<i>User's dictionary</i> → Tap Add new → <i>Word</i> → Enter word and sentence → <i>Reading</i> → Enter reading → Tap Save
Edit User's Dictionary Entries		<i>User's dictionary</i> → Select entry to edit → Edit word and reading → Tap Save
Delete User's Dictionary Entries		<i>User's dictionary</i> → Tap Delete → Check word to delete → Tap Delete → <i>Yes</i>

Touch Panel Settings

Start Here Tap Menu → *Settings* → *Touch panel*

 





Set Lock Key	Default Lock	<i>Lock key</i> → <i>Lock / Screen off</i>
Set Auto Lock	Default On	Under <i>Auto lock</i> , <i>On</i> or <i>Off</i>
Set Touch Panel Tone Volume Level & Vibration Level for Operating Touch Panel	Default Volume: Level 0, Touch vibration: Level 3	<i>Operation feedback</i> → Adjust volume/Set strength of Vibration
Calibrate Touch Panel		<i>Touch calibration</i> → Tap Start → Follow onscreen instructions to sequentially tap the + signs <ul style="list-style-type: none"> • Tap Cancel to exit.

Settings

Sounds & Vibration & External Light Settings

Sounds & Vibration

Start Here Tap Menu → *Settings* → *Sound settings*

Adjust Volume	Default Voice call/Video call/Message/S! Friend's Status/Missed call notif./Delivery report/System sounds: Level 3, S! Quick News: Level 0	<i>Volume</i> → Adjust volume <ul style="list-style-type: none"> • If <i>Ringtone reducer</i> is <i>On</i> (⊕P.14-9), Ringtone volume is reduced to Level 1 for the first four seconds, regardless of Ringtone volume set for Voice/Video Call. • Use  /  to adjust Ringtone volume while handset rings. • To mute Voice/Video Call or Message tones, set <i>Volume 0</i> and <i>Vibration</i> to <i>Off</i>.  appears.
Set Ringtone for Voice Call/Video Call	Default Voice call: Young hopefuls, Video call: Samsung Tune	<i>Ringtone</i> → <i>Voice call</i> , or <i>Video call</i> → Select save location for a file → Select a file <ul style="list-style-type: none"> • Tap  to playback.
Set Ringtone to Something Other than Voice Call	Default A Toy Box	<i>Ringtone</i> → Tap a Ringtone field to set → Select save location for a file → Select a file <ul style="list-style-type: none"> • Tap  to playback.
Set Ringtone Duration to Something Other than Voice Call	Default 5 Seconds	<i>Ringtone</i> → Select an item → <i>Duration</i> → Enter duration
Set Vibration	Default Off	<i>Vibration</i> → Select an item → Select a pattern <ul style="list-style-type: none"> • Tap  to view a pattern.
Set System Sounds	Default Popup box alerts/Call end tone/Alerts on call: On, Minute minder/Call connect tone/Power On/Power Off: Off	<i>System sounds</i> → Check an item to check → Tap Save <ul style="list-style-type: none"> • Available items vary by mode.

• Open *Sound settings* to change sounds for Normal mode. Settings cannot be changed for other modes.

External Light Settings


Start Here

Tap Menu → *Settings* → *Sound settings*

Set External Light Color for Incoming Transmissions

Default Voice call/Video call/Message/S! Friend's Status/Missed call notif./Alarm/Delivery report: Green, S! Quick News: Off


Incoming light → Select an item → Select a Color

- When selecting *Off*, Notification light does not blink.
- Tap  to blink a light.

Set External Light Color for Missed Calls

Default Missed call/Missed call notif.: Blue, Message/Delivery report: Green, S! Friend's Status: Light blue, Answering machine: White, Missed alarm: Pink

Notification light → Select an item → Select a color

- When selecting *Off*, Notification light does not blink.
- Tap  to view color.

Settings

Display & Font Settings

Start Here

Tap Menu → *Settings* → *Display settings*

Change Main Menu Settings

Default Standard

Main menu style → Select an item → Select a style → Tap Select

Set the Color Theme of Menu

Default Orange

Color theme → Select an item

Change Wallpaper

Default Tokyo night view.jpg, Salty Dog.jpg, The Light of Shrine.jpg, Clownfish.jpg

Wallpaper → (P.2-6 Wallpaper )

Set Wallpaper for Lock Screen

Default Tokyo night view.jpg

Lock screen → Select file → Tap Set

Set Font Type

Default Font 1

Font type → Select an item

Change Message Text Font Size

Default Standard

Font size → *Messages* → Select an item

Set Text Size in Yahoo! Keitai Pages

Default Standard

Font size → *Yahoo! Keitai* → Select an item

Set Text Size in PC Site Browser

Default Standard

Font size → *PC site browser* → Select an item

Adjust Display Brightness

Default Auto

Backlight → *Backlight on* → *Brightness* → Under *Auto/Manual*, *Auto* or *Manual*

- When *Manual* is selected, adjust brightness on Level field.

Set Backlight Time

Default 15 seconds

Backlight → *Backlight on* → *Duration* → Select an item

- When Backlight time is set to *Off*, Display becomes dim.
- Display becomes dimmer when Backlight time elapses.

Set Dimmer Time of Backlight

Default 15 seconds

Backlight → *Backlight dim duration* → Select an item

- When Backlight time elapses, Display turns off.

Set Operator Name

Default Off


Under *Operator name*, *On* or *Off*


Manner Mode Settings




Switch Manner Mode	Tap Menu → <i>Settings</i> → <i>Manner mode settings</i> → Select an item <ul style="list-style-type: none"> To edit each settings in Manner mode, tap Edit → Select a mode → Set each item.
--------------------	--

Call Settings


Start Here Tap Menu → *Settings* → *Call settings*

Forward All Calls to Voicemail (Handset Does Not Ring)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail On</i> → <i>Always (0 sec.)</i>
Forward Unanswered Calls to Voicemail (Specify Ring Time)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail On</i> → <i>No reply (5 - 30 sec.)</i>
Activate & Set Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Call forwarding On</i> → Select a call type → Select a setting → Select an item → Set number to forward
Cancel Voicemail/Call Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Deactivate all</i> → <i>Yes</i>
Confirm Current Voicemail/Call Forwarding Settings	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Get status</i>
Listen to Voicemail Message	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Listen to voice mail</i> →  or tap Call
Activate/Cancel Call Waiting	<i>Optional services</i> → <i>Call waiting</i> → <i>On</i> or <i>Off</i>
Confirm Current Call Waiting Settings	<i>Optional services</i> → <i>Call waiting</i> → <i>Get status</i>
Set Outgoing Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Outgoing call</i> → Select an item → <i>On</i> or <i>Off</i> → Enter Network Password → Tap OK
Activate/Cancel Incoming Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Incoming call</i> → Select an item → <i>On</i> or <i>Off</i> → Enter Network Password → Tap OK
Cancel All Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Cancel all barring</i> → Enter Network Password → Tap OK → <i>Yes</i>
Confirm Current Call Barring Settings	<i>Optional services</i> → <i>Call barring</i> → <i>Get status</i> → Select an item
Change Network Password	<i>Optional services</i> → <i>Call barring</i> → <i>Set security code</i> → Enter current Network Password → Tap OK → Enter new Network Password → Tap OK → Enter new Network Password again → Tap OK

Set Missed Call Notification		<i>Optional services</i> → <i>Missed call notif.</i> →  or tap Call
Switch Network Mode	Default Automatic	<i>Optional services</i> → <i>International call</i> → <i>Select network</i> → Select an item ● If <i>Manual</i> is set, select from <i>3G/GSM</i> , <i>3G</i> , or <i>GSM</i> .
Save International Code	Default 0046010	<i>Optional services</i> → <i>International call</i> → <i>International code</i> → Enter Phone Password → Tap OK → Enter an international code
Add/Change/Delete Country Number	Default 日本 (Japan), 韓国 (KOR), イギリス (GBR), イタリア (ITA), スイス (CHE), スペイン (ESP), ドイツ (DEU), ポルトガル (PRT), オランダ (NLD), フランス (FRA), モナコ (MCO), アメリカ合衆国 (USA), スウェーデン (SWE), オーストラリア (AUS), 中国 (CHN), 香港 (HKG), 台湾 (TWN)	<i>Optional services</i> → <i>International call</i> → <i>Country number</i> → Add, change, or delete item ● To add, tap Add → <i>Country name</i> → Enter country name → <i>Country code</i> → Enter country code → Tap Save. ● To change, select an item from country code → <i>Country name</i> → Enter country name → <i>Country code</i> → Enter country code → Tap Save. ● To delete, tap Delete → Select item → Tap Delete → <i>Yes</i> .
Select Network to Access	Default Automatic	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Select Auto/Manual</i> → Select an item ● When you set <i>Manual</i> , select a network.
Select Preferred Network from List		<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Set priority</i> → Tap Add → <i>Network list</i> → Select a Network
Add a New Preferred Network		<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Set priority</i> → Tap Add → <i>New Network</i> → <i>Country code</i> → Enter country code → <i>Network code</i> → Enter Network code → <i>Network name</i> → Enter Network name → <i>Network type</i> → Select an item → Tap Add
Set Roaming Dial Assistant	Default On	<i>Optional services</i> → <i>International call</i> → Under <i>Roaming dial assistant</i> , <i>On</i> or <i>Off</i> ● If <i>Roaming dial assistant</i> is set to <i>On</i> , popup appear while dialing. If you add international number before phone number, popup does not appear.
Check Call Time/Cost		<i>Call time & cost</i> → <i>All calls</i> ● To reset call time/cost, tap Reset → Enter PIN2 → Tap OK.
Check Last Call Time/Cost		<i>Call time & cost</i> → <i>Last call</i> ● To reset last call time/cost, tap Reset.
Check Data Counter		<i>Call time & cost</i> → <i>Data counter</i> ● To reset sent/received data counter, tap Reset.
Show/Hide Call Time/Cost after Calls	Default Off	<i>Call time & cost</i> → Under <i>Show charge after call</i> , <i>On</i> or <i>Off</i> ● This function may not be available.

Change Call Cost Currency		<i>Call time & cost</i> → <i>Set currency</i> → Enter PIN2 → Tap OK → Tap Price field → Enter rate to the yen → Tap Currency field → Enter currency unit → Tap Save
Set Call Cost Limit		<i>Call time & cost</i> → <i>Set max cost limit</i> → <i>Edit</i> → Enter PIN2 → Tap OK → Tap New upper limit field → Enter upper limit → Tap Save <ul style="list-style-type: none"> After reaching the Call Cost Limit, only emergency calls can be placed; messaging, web connections (fee-based operations) are disabled. When <i>Show charge after call</i> is not available, this function is also unavailable.
Cancel Call Cost Limit		<i>Call time & cost</i> → <i>Set max cost limit</i> → <i>Reset</i> → Enter PIN2 → Tap OK
Activate/Cancel Answering Machine	Default Off	<i>Answering machine</i> → Under <i>On/Off</i> , <i>On</i> or <i>Off</i>
Set Answering Machine Response Time	Default 18seconds	<i>Answering machine</i> → <i>Ringing duration</i> → Select an item <ul style="list-style-type: none"> If <i>Other</i> is selected, enter time.
Play Answering Machine Records		<i>Answering machine</i> → <i>Play answering machine</i> → Select a record <ul style="list-style-type: none"> To delete record, in list, tap Delete → Check a record to delete → Tap Delete → <i>Yes</i>.  → <i>Received</i> → Select a record →  → Message is also available.
Set Answering Machine Response Language	Default 日本語	<i>Answering machine</i> → <i>Sound language</i> → Select an item <ul style="list-style-type: none"> Tap  to play message.
Set Preset Picture to Appear in Place of Your Own Image		<i>Video call</i> → <i>Alternative picture</i> → <i>Preset picture</i> → Tap OK
Set Alternative Picture to Appear in Place of My Image		<i>Video call</i> → <i>Alternative picture</i> → <i>Pictures</i> → Select a file → Tap OK <ul style="list-style-type: none"> When Memory Card is inserted, <i>Digital camera</i> is selectable.
Adjust Incoming Video Quality	Default Standard	<i>Video call</i> → <i>Incoming video quality</i> → Select an item
Adjust Outgoing Video Quality	Default Standard	<i>Video call</i> → <i>Outgoing video quality</i> → Select an item
Set Preset Picture to Appear When Video Call is on Hold		<i>Video call</i> → <i>Hold setting</i> → <i>Hold during call</i> → <i>Preset picture</i> → Tap OK
Set Hold Setting		<i>Video call</i> → <i>Hold setting</i> → <i>Hold during call</i> → <i>Pictures</i> → Select a file → Tap OK <ul style="list-style-type: none"> When Memory Card is inserted, <i>Digital camera</i> is selectable.
Set Preset Picture to Appear When Video Call is on Hold without Answering		<i>Video call</i> → <i>Hold setting</i> → <i>Hold answer</i> → <i>Preset picture</i> → Tap OK
Set Hold Answer Setting		<i>Video call</i> → <i>Hold setting</i> → <i>Hold answer</i> → <i>Pictures</i> → Select a file → Tap OK <ul style="list-style-type: none"> When Memory Card is inserted, <i>Digital camera</i> is selectable.
Activate/Cancel Mute for Video Call	Default Off	<i>Video call</i> → Under <i>Mute my voice</i> , <i>On</i> or <i>Off</i> <ul style="list-style-type: none"> If <i>On</i>, tap Unmute to temporarily send voice.

Activate/Cancel Speakerphone during Video Call	Default On	<i>Video call</i> → Under <i>Speaker, On</i> or <i>Off</i>
Set Backlight	Default On	<i>Video call</i> → Under <i>Backlight, On</i> or <i>Off</i> <ul style="list-style-type: none"> When <i>Off</i> is set, Display becomes dim.
Set Handset Response When Video Call Cannot Be Connected	Default Ask each time	<i>Video call</i> → <i>Retry with</i> → Select an item <ul style="list-style-type: none"> <i>None</i>: Calls are disconnected with no notification. When a Video Call cannot be connected, prompt appears to retry with the selected setting.
Answer Video Call from Specified Party Automatically	Default Off	<i>Video call</i> → <i>Auto answer</i> → Under <i>On/Off, On</i> or <i>Off</i> <ul style="list-style-type: none"> When a Video Call arrives from the specified party, a tone sounds and the call is automatically answered.
Create Auto Answer List		<i>Video call</i> → <i>Auto answer</i> → <i>Auto answer list</i> → Tap Add → Select an item → Enter Phone Password → Tap OK → Add an entry <ul style="list-style-type: none"> To delete the specified party, after selecting <i>Auto answer list</i>, tap Delete → Check an entry to delete → Tap Delete → <i>Yes</i>.
Show/Hide Your Own Image for Video Calls	Default On	<i>Video call</i> → Under <i>Show my image, On</i> or <i>Off</i>
Accept/Reject Calls from Specified Phone Numbers	Default Off	<i>Reject incoming calls</i> → <i>Set reject number</i> → Under <i>On/Off, On</i> or <i>Off</i> <ul style="list-style-type: none"> When a call from Black list arrives, a caller hears a busy tone and call is not connected. <i>Missed call</i> appears in Standby. Select the message to check missed call.
Create/Edit Black List		<i>Reject incoming calls</i> → <i>Set reject number</i> → <i>Black list</i> → Tap Add → Select an item → Add an entry <ul style="list-style-type: none"> To delete saved phone numbers, select <i>Black list</i> → Tap Delete → Check phone numbers to delete → Tap Delete → <i>Yes</i>.
Accept/Reject Calls from Unknown Numbers	Default Off	<i>Reject incoming calls</i> → Under <i>Unknown, On</i> or <i>Off</i>
Accept/Reject Calls When Number is Withheld	Default Off	<i>Reject incoming calls</i> → Under <i>Withheld, On</i> or <i>Off</i>
Accept/Reject Calls from Payphones	Default Off	<i>Reject incoming calls</i> → Under <i>Payphone, On</i> or <i>Off</i>
Accept/Reject Calls When Number is Unavailable	Default Off	<i>Reject incoming calls</i> → Under <i>Unavailable, On</i> or <i>Off</i>
Activate/Cancel Offline Mode	Default Off	Under <i>Offline mode, On</i> or <i>Off</i>
Show/Hide Your Own Number		<i>Show my number</i> → <i>On</i> or <i>Off</i> <ul style="list-style-type: none"> To check current status, select <i>Get status</i>.

Set Handset to Automatically Redial Busy Numbers	Default Off	Under <i>Auto redial, On or Off</i> <ul style="list-style-type: none"> ● On: Handset automatically disconnects call and redials busy numbers. Auto redial repeats up to ten times until Cancel is tapped or  is pressed. ● Auto redial setting takes priority when Video Call retry setting is selected. ● If called party uses Call Forwarding or Voicemail, call is forwarded accordingly.
Activate/Cancel Automatic Ringer Reduction	Default On	Under <i>Ringtone reducer, On or Off</i> <ul style="list-style-type: none"> ● When Ringtone volume level is high, the volume level is reduced to Level 1 for the first four seconds, then returns to the set level.
Enable/Disable Calling via Stereo Earphone Microphone	Default Off	<i>Earphone call</i> → <i>Call number</i> → Select an item → Add a phone number → Under On/Off, <i>On or Off</i> <ul style="list-style-type: none"> ● On: Press Stereo Earphone Microphone (optional) switch for 1 + seconds to call specified number. To change specified number, repeat setup operation, saving the new number.
Set Clear Talk	Default Off	<i>Clear talk</i> → Select item
Set High-tone Setting	Default Off	<i>High-tone setting</i> → Select item
Adjust Earpiece Volume	Default Level 5	Adjust volume in Hearing volume field

Settings

Phone Book Settings

Start Here

Tap Menu → *Phone func.* → *Settings*

Select Phone Book Save Location	Default Phone	<i>Save to</i> → Select an item <ul style="list-style-type: none"> ● Ask each time: A confirmation appears each time a new entry is saved.
Change Phone Book Preference (Phone/USIM)	Default Phone	<i>Change view</i> → Select an item
Change Search Method	Default ABC	<i>Search method</i> → Select an item
Copy All Phone Book Records & Save on Handset & USIM Card		<i>Copy all</i> → <i>Phone to USIM/USIM to Phone</i> → <i>Yes</i>

Messaging Settings

Custom Mail Address

Customize/Change Handset Mail Address	<p>Tap Messaging → <i>Settings</i> → <i>Custom mail address</i> → Follow onscreen instructions</p> <ul style="list-style-type: none"> Change mail account name (alphanumerics before @). <p>Default: Account name consists of random alphanumerics</p>
---------------------------------------	---

S! Mail & SMS

Start Here

Tap Messaging → *Settings* → *Universal settings*

Request/Cancel Delivery Report	Default Off	<p><i>Sending settings</i> → Under <i>Delivery report, On or Off</i></p> <ul style="list-style-type: none"> On: Receive a message confirming successful delivery of a sent message.
Quote Text From Received Message	Default On(Except SMS & Graphic mail)	<p><i>Sending settings</i> → <i>Reply with history</i> → Select an item</p> <p><i>Sending settings</i> → Under <i>Reply setting, On or Off</i></p> <p>On: Replies to sent messages are automatically addressed to "<i>Reply to</i>" address</p> <p>Off: Replies to sent messages are addressed to handset number/mail address</p> <ul style="list-style-type: none"> Set address that appears in To: field of replies to messages sent from handset.
Select Reply Setting	Default Off	<p><i>Sending settings</i> → "<i>Reply to</i>" address → Enter an item → Enter address</p> <p><i>Sending settings</i> → <i>Quick reply setting</i> → Select items → Enter message</p>
Set "Reply to" Address		
Change Quick Reply Message		
Show/Hide Transmission Progress Bar	Default On	<p><i>Sending settings</i> → Under <i>Sending progress setting, On or Off</i></p>
Set Received Message Notice Content/Hide Notice	Default From	<p><i>Receiving settings</i> → <i>Message notice</i> → <i>View setting</i> → Select an item</p> <ul style="list-style-type: none"> Received message notice scrolls above active function windows.
Select Secret Folder Message Notice Setting	Default Show	<p><i>Receiving settings</i> → <i>Message notice</i> → <i>Secret folder</i> → Enter Phone Password → Tap OK → <i>Secret folder</i> → Select an item</p> <ul style="list-style-type: none"> Not show: Incoming message notice window for messages sorted to secret folders or <i>Message notice</i> does not appear.
Adjust 3D Pictograms Auto Play Setting		<p><i>Receiving settings</i> → <i>3D Pictograms</i> → <i>3D Picto. Auto play</i> → Select an item</p> <p>Always: Show 3D Pictogram for all messages</p> <p>Only unread: Show 3D Pictograms for unread messages only</p> <p>Disable: Hide 3D Pictograms</p> <ul style="list-style-type: none"> The first time a received message is viewed <i>3D Picto. Auto play</i> confirmation appears.

Select 3D Pictograms Color Settings Default Random	<i>Receiving settings</i> → <i>3D Pictograms</i> → <i>Color settings</i> → ◀ or ▶ to show target pattern → Tap OK
Select 3D Pictograms Display Speed Default Normal	<i>Receiving settings</i> → <i>3D Pictograms</i> → <i>Display speed</i> → Select an item
Link External Light to Incoming Feeling Mail Default On	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Light color</i> → Under <i>On/Off</i> , <i>On</i> or <i>Off</i>
Link External Light Color to Incoming Feeling Mail Default Happy/Glad: Pink, OK/Good: Green, Sad/Sorry: Blue, NG/Bad: Red, Important/Notice: Yellow	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Light color</i> → <i>Light color</i> → Select a feeling → Select a color ● Tap ▶ to view color.
Link Vibration to Incoming Feeling Mail Default On	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Vibration pattern</i> → Select an item
Set Whether to Sound Handset When Feeling Mail Arrives Default Off	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → Under <i>On/Off</i> , <i>On</i> or <i>Off</i>
Link Ringtone to Incoming Feeling Mail Default Happy/Glad: One Fine Day.mp4, OK/Good: Sunny day.mp4, Sad/Sorry: Jazzy House_Pleasure.mp4, NG/Bad: Vintage Cinema.mp4, Important/Notice: On my way home.mp4	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → <i>Assign tone</i> → Select a feeling → Select a save location → Select a Ringtone ● Tap ▶ to playback the file.
Set Feeling Mail Ringtone Duration Default 5 Seconds	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → <i>Duration</i> → Enter time → Tap OK
Change Font Size Default Standard	<i>Display settings</i> → <i>Font size</i> → Select an item
Change Scroll Unit Default Single line	<i>Display settings</i> → <i>Scroll unit</i> → Select an item
Show/Hide Navigation Bar Default On	<i>Display settings</i> → Under <i>Navigation bar</i> , <i>On</i> or <i>Off</i>
Change Received Message View Default Folder view	<i>Display settings</i> → <i>Received msg. view</i> → Select an item
Change Sent Message View Default Folder view	<i>Display settings</i> → <i>Sent msg. view</i> → Select an item
Set/Cancel Auto Delete for Received Messages When Received Memory is Full Default On (Except protected)	<i>Auto delete</i> → <i>Received msg.</i> → Select an item <i>On (Except protected)</i> : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is <i>Off</i> , memory full confirmation appears. Delete messages and retry. <i>On (Only read)</i> : Unprotected messages are automatically deleted from the oldest one to make room for new ones. If <i>Auto delete</i> is <i>Off</i> , memory full confirmation appears. Delete messages and retry. <i>Off</i> : Memory full confirmation appears. Delete messages and retry.
Set/Cancel Auto Delete for Sent Messages When Sent Memory is Full Default On (Except protected)	<i>Auto delete</i> → <i>Sent msg.</i> → Select an item <i>On (Except protected)</i> : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is <i>Off</i> , memory full confirmation appears. Delete messages and retry. <i>Off</i> : Memory full confirmation appears. Delete messages and retry.

Sort Unregistered Mobile Address as Spam	Default Off	<i>Anti-spam measures</i> → Enter Phone Password → Tap OK → <i>Unregistered</i> → <i>On</i>
Sort Message with Spam Filter	Default Off	<i>Anti-spam measures</i> → Enter Phone Password → Tap OK → <i>Spam filter</i> → <i>On</i> <ul style="list-style-type: none"> To specify list, <i>Permitted list</i> → Tap Edit → (If address already exists in the list, tap Add filter) → <i>Sender/Sender(Partial match)/Subject</i>.
Add Address to Permitted List	Default Off	<i>Anti-spam measures</i> → Enter Phone Password → Tap OK → <i>Permitted list</i> → <i>On</i> <ul style="list-style-type: none"> To specify list, <i>Spam filter</i> → Tap Edit → (If address already exists in the list, tap Add filter) → <i>Sender/Sender(Partial match)/Subject</i>. Available only when <i>Unregistered/Spam filter</i> is <i>On</i>.
Set Address for Report Spam	Default stop@meiwaku.softbankmobile.co.jp	<i>Anti-spam measures</i> → Enter Phone Password → Tap OK → <i>Address for report spam</i> → Enter mail address

S! Mail

Start Here

Tap Messaging → *Settings* → *S! Mail settings*

Set Max Creation Size	Default 1MB	<i>Sending options</i> → <i>Max creation size</i> → Select an item <ul style="list-style-type: none"> In S! Mail creation window, tap <i>Settings</i> → <i>Sending options</i> → <i>Max creation size</i> can change maximum size temporarily.
Set Message Sending Priority	Default Normal	<i>Sending options</i> → <i>Priority</i> → Select an item
Set S! Mail Receiving Options	Default Auto DL (All)	<i>Receiving options</i> → <i>Home auto settings</i> → Select an item <i>Auto DL (All)</i> : Mail Service Center sends complete S! Mail messages automatically. <i>Auto DL (Specified)</i> : Tap <i>Edit</i> to set <i>Registered address/Specified address</i> . <i>Registered address</i> is set to <i>On</i> send message using number in Phone Book is received. <i>Specified address</i> is set to <i>On</i> , tap <i>Edit</i> → Select address to set message to receive. <i>Manual retrieval</i> : Mail Service Center sends S! Mail Notice; retrieve complete message.
Set S! Mail Receiving Options during Roaming	Default Auto DL (All)	<i>Receiving options</i> → <i>Roaming auto settings</i> → Select an item <i>Auto DL (All)</i> : Mail Service Center sends complete S! Mail messages automatically. <i>Auto DL (Specified)</i> : Tap <i>Edit</i> to set <i>Registered address/Specified address</i> . <i>Registered address</i> is set to <i>On</i> send message using number in Phone Book is received. <i>Specified address</i> is set to <i>On</i> , tap <i>Edit</i> → Select address to set message to receive. <i>Manual retrieval</i> : Mail Service Center sends S! Mail Notice; retrieve complete message. <ul style="list-style-type: none"> When you set <i>Auto DL (All)</i>, an entire message including any attachments will be automatically downloaded, resulting in high Packet Communication charges for your messaging overseas.

Set Max Receiving Size	Default 1MB	<i>Receiving options</i> → <i>Max receiving size</i> → Select an item
Insert/Hide Signature	Default Off	<i>Signature</i> → <i>Auto insert</i> → Select an item
Edit Signature		<i>Signature</i> → <i>Signature texts</i> → Enter a signature
Set Attached Image Appearance	Default Double-sized	<i>Picture appearance</i> → Select an item
Set Attached Image Auto Playback	Default On	<i>Auto play file</i> → Under <i>Picture</i> , <i>On</i> or <i>Off</i>
Set Attached Sound Auto Playback	Default Off	<i>Auto play file</i> → Under <i>Sound</i> , <i>On</i> or <i>Off</i>

SMS

Start Here

Tap Messaging → *Settings* → *SMS settings*

Set Mail Service Center Message Expiry Time	Default None	<i>Expiry time</i> → Select an item ● Upon expiry Mail Service Center SMS messages are automatically deleted.
Set Message Center Number	Default Setting 1 +819066519300	<i>Message center</i> → Select an item
Change Character Code	Default Unicode	<i>Char-code</i> → Select an item

Settings

Internet Settings

Yahoo! Keitai

Start Here

Tap Menu → Tap Yahoo! → *Browser settings*

Show/hide Navigation Bar in a Page	Default On	Under <i>Navigation bar</i> , <i>On</i> or <i>Off</i>
Change Page Font Size	Default Standard	<i>Font size</i> → Select an item
Set Page Scroll Unit	Default Single line	<i>Scroll unit</i> → Select an item
Show/Hide Page Images	Default On	<i>Downloads</i> → Under <i>Display image</i> , <i>On</i> or <i>Off</i> ● Set <i>Off</i> to help reduce download time.
Play/Mute Page Sounds	Default On	<i>Downloads</i> → Under <i>Play sounds</i> , <i>On</i> or <i>Off</i> ● Set <i>Off</i> to help reduce download time.
Set Save Location for Images in a Page, etc	Default Phone	<i>Save to</i> → <i>Phone/Memory card/Ask each time</i> ● To save a file to Memory Card, insert Memory Card.

Delete Cache/Cookie/Certificates		<i>Memory manager</i> → Select an item → <i>Yes</i>
Show/Hide Manufacture Number	Default On	<i>Security</i> → Under <i>Manufacture number, On or Off</i> ● <i>On</i> : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send/Hide Referrer	Default Send	<i>Security</i> → <i>Send referer</i> → Select an item ● Referrer is a link source URL information. It is sent to Web server when accessing websites.
Select Cookie Setting	Default Enabled	<i>Security</i> → <i>Cookies</i> → Select an item ● Select <i>Confirm</i> for acceptance confirmation every time before a Cookie is saved. ● Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.
Select Script Setting	Default On	<i>Security</i> → <i>Script</i> → Select an item
Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate ● View electronic certificate preinstalled on handset.
Set Certificate Retention Period	Default Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Show/Hide Secure Prompt	Default On	<i>Security</i> → Under <i>Secure prompt, On or Off</i>
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → Tap OK → <i>Yes</i> ● Initialize browser settings or information such as Bookmarks or Saved pages.
Reset Settings		<i>Reset settings</i> → Enter Phone Password → Tap OK → <i>Yes</i>

PC Site Browser

Start Here



 Tap Menu → Tap Yahoo! → *PC site browser* → *PC site browser settings*

Change Page Font Size	Default Standard	<i>Font size</i> → Select an item
Show/Hide Page Navigation When Zooming	Default On	Under <i>Page navigation, On or Off</i>
Show/Hide Page Images	Default On	<i>Downloads</i> → Under <i>Display image, On or Off</i> ● Set <i>Off</i> to help reduce download time.
Play/Mute Page Sounds	Default On	<i>Downloads</i> → Under <i>Play sounds, On or Off</i> ● Set <i>Off</i> to help reduce download time.
Set Save Location for Images in a Page, etc	Default Phone	<i>Save to</i> → <i>Phone/Memory card/Ask each time</i> ● To save a file to Memory Card, insert Memory Card.
Delete Cache/Cookie/Certificates/RSS Feed List		<i>Memory manager</i> → Select an item → <i>Yes</i> ● To delete RSS Feed list, select <i>Delete RSS feed list</i> → Enter Phone Password → Tap OK → <i>Yes</i> .

Show/Hide Manufacture Number	Default On	<i>Security</i> → Under <i>Manufacture number, On or Off</i> ● <i>On</i> : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send/Hide Referrer	Default Send	<i>Security</i> → <i>Send referer</i> → Select an item ● Referrer is a link source URL information. It is sent to Web server when accessing websites.
Select Cookie Setting	Default Enabled	<i>Security</i> → <i>Cookies</i> → Select an item ● Select <i>Confirm</i> to show acceptance confirmation every time before Cookie is saved. ● Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.
Select Script Setting	Default On	<i>Security</i> → <i>Script</i> → Select an item
Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate ● View electronic certificate preinstalled on handset.
Set Certificate Retention Period	Default Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Show/Hide Secure Prompt	Default On	<i>Security</i> → Under <i>Secure prompt, On or Off</i>
Show/Hide Warning	Default On	Under <i>Warning messages, On or Off</i> ● Show or hide PC Site Browser activation, or Yahoo! Keitai/PC Site Browser switching warning.
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → Tap OK → <i>Yes</i> ● Initialize browser settings or information such as Bookmarks or Saved pages.
Reset Settings		<i>Reset settings</i> → Enter Phone Password → Tap OK → <i>Yes</i>

Settings

Digital TV Settings


TV Alarm	Start Here	Tap Menu → <i>TV</i> → <i>Settings</i> → <i>TV alarm</i>
Set Alarm	Default On	Under <i>Alarm, On or Off</i>
Set Alert Tone	Default Samsung Tune	<i>Alert tone</i> → Select a save location → Select a file ● Tap  to playback.
Set Volume	Default Level 3	Adjust Volume on Volume field
Set Vibration	Default Off	<i>Vibration</i> → Select an item ● Tap  to view a pattern.

Set Notification Light	Default On	Under <i>Light, On</i> or <i>Off</i>
Set Reminder Time	Default 1 minute before	<i>Reminder time</i> → Select an item
Set Alarm Duration	Default 10 seconds	<i>Duration</i> → Select an item
Set Alarm Sound/Vibration in Manner Mode	Default Alarm sound:Off, Vibration:On	<i>Manner mode setting</i> → Under <i>Alarm sound/Vibration, On</i> or <i>Off</i>

Data Broadcast

Start Here

Tap Menu → *TV* → *Settings* → *Set broadcast data*

Set Recording Type	Default Image+Text	<i>Set recording</i> → Select an item
Select Save Location	Default Phone	<i>Image location</i> → Select an item
Select Connection Notification Type	Default Ask each time	<i>Notify connection</i> → Select an item
Show/Hide Manufacture Number	Default On	Under <i>Manufacture number, On</i> or <i>Off</i>
Delete Station Data		<i>Delete station data</i> →  → <i>Yes</i> <ul style="list-style-type: none"> ● To delete all stations, tap <i>Delete all</i> → Enter Phone Password → Tap OK → <i>Yes</i>.

Display & Sound

Start Here

Tap Menu → *TV* → *Settings*

Show/Hide Indicators in Landscape View	Default On	<i>Display</i> → Under <i>Display pict, On</i> or <i>Off</i>
Set Whether to Show 4:3 Videos in Landscape View	Default Normal	<i>Display</i> → <i>Landscape style</i> → Select an item
Set Whether to Show 4:3 Videos in Portrait View	Default Normal	<i>Display</i> → <i>Portrait style</i> → Select an item
Adjust Display Brightness	Default Level 3	<i>Display</i> → Adjust brightness on Setting field <ul style="list-style-type: none"> ● This setting is only effective when the Backlight brightness is set to <i>Manual</i>.
Adjust Sound Quality	Default Off	<i>Sound</i> → <i>Sound mode</i> → Select an item
Select Language	Default Main	<i>Sound</i> → <i>Sound language</i> → Select an item
Set Smart Volume Control	Default On	<i>Sound</i> → Under <i>Smart volume control, On/Off</i>
Select Output Device	Default Phone/Earphone	<i>Sound</i> → <i>Sound output</i> → Select an item

Recording

Set Save Location

Default Memory card



Tap Menu → *TV* → *Settings* → *Save recording to* → Select an item

Incoming Calls & Alarms

Handle Incoming Calls & Alarms

Default Voice call/Video call: Call priority, Alarms: Alarm priority

Tap Menu → *TV* → *Settings* → *Calls & Alarms* → Select an item → Select action

- When *Call priority* or *Alarm priority* is set, TV window pauses temporarily and Incoming call window or Alarm window appears.
- When *Notice a call* or *Alarm notice* is set, a notification appears at top of Display and handset vibrates (TV reception continues). Press  to accept a call; press  to hold a call.

Auto Power Off

End TV after Setting Duration

Default Off

Tap Menu → *TV* → *Settings* → *Auto power off* → Select an item

 Settings

Camera Settings

Camera & Video

Start Here

 (2 + seconds) →  → 

Set Anti-Shake

Default Off

Under *Anti-shake*, *On* or *Off*

- Anti-Shake is not available when Wide Dynamic Range is set to *On*.

Set Contrast

Default 0

Contrast → Select an item

Set Saturation

Default 0

Saturation → Select an item



Set Sharpness



Default 0

Sharpness → Select an item

Photo

Start Here

 (2 + seconds) → 

Add/Eliminate Location Info	Default Off	Under <i>Add location info</i> , On or Off <ul style="list-style-type: none"> Add captured location information to image.
Select Quality	Default Fine	<i>Quality</i> → Select an item
Set ISO	Default Auto	<i>ISO</i> → Select an item
Set Exposure Metering	Default Center-weight	<i>Exposure metering</i> → Select an item
Set Wide Dynamic Range	Default Off	Under <i>Wide dynamic range</i> , On or Off <ul style="list-style-type: none"> Setting this to On automatically adjusts your image captured in a backlit situation or environment where the brightness difference is extreme that would otherwise be too bright or too dark. Wide Dynamic Range is not available when Anti-Shake is set to On.
Activate/Cancel Auto Save	Default On (Preview off)	<i>Auto save</i> → On (Preview off) / On (2 sec) / On (Preview manual) / Off <ul style="list-style-type: none"> On (Preview off): Image is automatically saved. After saving, handset returns to Capture window without showing preview. On (2 sec): Image is automatically saved. After saving, preview appears for two seconds, and handset returns to Capture window. On (Preview manual): After capturing, tap Set as/Edit/Send/Rename to save automatically. Handset returns to Capture window. Off: Select save or cancel the image. To redo, press . To save, tap .
Set Save Location When Memory Card is Inserted	Default Phone	<i>Save to</i> → Select an item <ul style="list-style-type: none"> When image size is set to Mail, Digital camera is unselectable. This setting is active with Memory Card inserted. If Memory Card is not inserted, images are automatically saved to Phone.
Show/Hide Guideline	Default Off	Under <i>Guideline</i> , On or Off
Set Face Link Display	Default Off	Under <i>Face link display</i> , On or Off <ul style="list-style-type: none"> When you set this On, after the face you captured is recognized, the name linked to Face Link appears.
Set Shutter Sound	Default Pattern1	<i>Shutter sound</i> → Select an item
Set Timer Sound	Default Pattern1	<i>Timer sound</i> → Select an item

Video

Start Here  (2 + seconds) →  → *Video* → 



Select Quality	Default Fine	<i>Quality</i> → Select an item
Activate/Cancel Auto Save	Default On	Under <i>Auto save</i> , <i>On</i> or <i>Off</i>
Set Save Location	Default Phone	Under <i>Save to</i> , <i>Phone</i> or <i>Memory card</i> <ul style="list-style-type: none"> To save a file to Memory Card, insert Memory Card.
Show/Hide Guideline	Default Off	Under <i>Guideline</i> , <i>On</i> or <i>Off</i>
Set Shutter Sound	Default Pattern1	<i>Shutter sound</i> → Select an item
Set Timer Sound	Default Pattern1	<i>Timer sound</i> → Select an item

Settings

Media Player Settings

Music



Start Here Tap Menu → *Media* → *Settings* → *Music*

Set Repeat Mode	Default All	<i>Repeat mode</i> → Select an item <ul style="list-style-type: none"> Play a single track repeatedly, all music, or all files in playlist randomly repeatedly.
Set Shuffle	Default Off	Under <i>Shuffle</i> , <i>On</i> or <i>Off</i>
Set Sound Effects	Default Off	<i>Sound effects</i> → Select an item → Tap OK <ul style="list-style-type: none"> Set <i>Sound effects</i> only when using Stereo Earphone Microphone or Bluetooth® -compatible stereo headphone.
Set Mood	Default Normal	Under <i>Mood</i> , tap  / 

Movie

Start Here Tap Menu → *Media* → *Settings* → *Movie*

Set Repeat Mode	Default All	<i>Repeat mode</i> → Select an item <ul style="list-style-type: none"> Play a single file repeatedly, all movies, or all files in playlist repeatedly.
Set Shuffle	Default Off	Under <i>Shuffle</i> , <i>On</i> or <i>Off</i>

Set Backlight	Default Always On	<i>Backlight</i> → Select an item
Set Portrait Style	Default 480*360	<i>Portrait style</i> → Select an item
Set Landscape Style	Default Normal	<i>Landscape style</i> → Select an item
Show/Hide Movie Thumbnails	Default On	Under <i>Thumbnail display</i> , On or Off
Access/Ignore Linked Information	Default On	Under <i>Web link</i> , On or Off <ul style="list-style-type: none"> ● On: After playing a file with linked info, access confirmation appears.
Set Sound Effects	Default Off	<i>Sound effects</i> → Select an item → Tap OK <ul style="list-style-type: none"> ● Set <i>Sound effects</i> only when using Stereo Earphone Microphone or Bluetooth® -compatible stereo headphone.
Set Mood	Default Normal	Under <i>Mood</i> , tap  / 

Settings

Entertainment Setting

Widgets

Start Here Tap Menu → *Widget* → *Settings*

Set Downloaded Widget Automatic Update	Default On	Under <i>Auto refresh</i> , On/Off
Set Roaming Automatic Connection	Default Off	Under <i>Roaming auto connect</i> , On/Off
Show/Hide Confirmation When Using Overseas	Default On	Under <i>Roaming confirmation</i> , On/Off
Accept/Reject Cookies	Default On	Under <i>Cookies</i> , On/Off
Deleting Cookies		<i>Delete cookies</i> → Yes



S! Information Channel

Start Here Tap Menu → *Entertainment* → *S! Information Channel/Weather*
→ *Weather Indicator* → *Settings*

Set Weather Indicator Update Notification	Default On	Under <i>Weather notification</i> , On or Off
Set Weather Indicator Automatic Update	Default On	Under <i>Icon update</i> , On or Off

S! Applications

Start Here Tap Menu → *S! Appli* → *Settings*

Set S! Appli Volume	Default 3	Adjust volume on Volume field
Adjust Display Backlight Setting	Default Normal settings	<i>Backlight</i> → <i>Always On/Always Off/Normal settings</i> <ul style="list-style-type: none"> When <i>Normal settings</i> is set, settings of <i>Backlight</i> in <i>Display settings</i> is applied.
Set S! Appli Vibration Settings	Default On	Under <i>Vibration, On or Off</i>
Set Operation of Incoming Call/Alarm/S! Appli Start Request	Default Voice call/Video call: Call Priority, Alarms: Alarm priority, Start demand: Start notice	<i>Calls & Alarms</i> → Select an item → Select action <ul style="list-style-type: none"> When <i>Call Priority</i> or <i>Alarm priority</i> or <i>Start priority</i> is set, S! Appli pauses temporarily and incoming call, Alarm or Start request window appears. When <i>Notice a call, Alarm notice</i> or <i>Start notice</i> is set, Call, Alarm or Start request Notification appears in the top of Display. Press  to receive a call. Press  to hold a call. Even when <i>Notice a call</i> is set, if Answering machine is <i>On</i>, S! Appli pauses and Answering machine activates after the response time.
Reset Settings of S! Appli		<i>Set to default</i> → Enter Phone Password → Tap OK → <i>Yes</i>

Osaifu-Keitai®

Start Here Tap Menu → *Data Folder* → *Lifestyle-Appli* → Tap More → *Permission*

Set Security to Lifestyle-Appli		Select an item → Select an item
---------------------------------	--	---------------------------------

S! GPS Navi

Start Here Tap Menu → *Tools* → *S! GPS Navi* → *Navi settings*

Select Navi Appli to Activate		<i>Select Navi appli</i> → Select Navi appli
Register URL to View Map	Default Default URL	<i>Map URL settings</i> → <i>Map URL 1/Map URL 2</i> → Enter URL → Tap OK
Activate Positioning Lock	Default Off	Under <i>Positioning lock, On</i> → Enter Phone Password → Tap OK
Hide Confirmation When Sending Location Information	Default Always ask	<i>Send location info</i> → <i>Always ask/Send/Not send</i>
Hide Information When Providing Location Information Automatically	Default Show	<i>Notification setting</i> → <i>Show/Not show</i>

Security Settings

Start Here Tap Menu → Settings → Security

Activate/Cancel Phone Lock	Default Off	Under <i>Phone lock, On or Off</i> → Enter Phone Password → Tap OK
Activate/Cancel Password Lock	Default Off	<i>Password lock</i> → Select an item → Enter Phone Password → Tap OK
Change Phone Password	Default 9999	<i>Change password</i> → Enter current password → Tap OK → Enter new password → Tap OK → Enter new password again
Activate/Cancel Facial Recognition	Default Off	<i>Facial recognition</i> → Enter Phone Password → Tap OK → Under <i>On/Off, On or Off</i> → Tap OK
Save Facial Recognition User	Default Empty	<i>Facial recognition</i> → Enter Phone Password → Tap OK → <i>User registration</i> → Enter Phone Password → Tap OK → <i>User 1 to User 5</i> → Select image 1 to image 5 → Tap Start → Tap Save
Show/Hide Guidance	Default Preview	<i>Facial recognition</i> → Enter Phone Password → Tap OK → <i>Guidance</i> → Select an item
Set Security Level	Default Normal	<i>Facial recognition</i> → Enter Phone Password → Tap OK → <i>Security level</i> → Select an item
Activate/Cancel Function Lock	Default Off	<i>Function lock</i> → Check an item to lock → Tap Save → Enter Phone Password → Tap OK
Activate/Cancel Secret Mode	Default Hide	<i>Secret mode</i> → Enter Phone Password → Tap OK → Select an item
Activate/Cancel USIM Lock	Default Off	Under <i>USIM lock, On or Off</i> → Enter USIM password (four- to eight-digit) → Tap OK → Enter USIM password again as required → Tap OK
Activate/Cancel PIN Certification	Default Off	Under <i>PIN certification, On or Off</i> → Enter PIN → Tap OK
Change PIN		<i>Change PIN</i> → Enter current PIN → Tap OK → Enter new PIN → Tap OK → Enter new PIN again → Tap OK <ul style="list-style-type: none"> To change PIN code, set <i>PIN certification</i> to <i>On</i>.
Change PIN2		<i>Change PIN2</i> → Enter current PIN2 → Tap OK → Enter new PIN2 → Tap OK → Enter new PIN2 again → Tap OK
Set IP Service Setting	Default On	Under <i>IP service setting, On or Off</i> <ul style="list-style-type: none"> Some functions are only available when you set IP service setting to <i>On</i>.
Delete Phone Book Entries, Messages, etc.		<i>All reset</i> → Enter Phone Password → Tap OK → <i>Yes</i>
Restore Settings to Default Values		<i>Reset settings</i> → Enter Phone Password → Tap OK → <i>Yes</i>

Memory Settings

Start Here Tap Menu → *Settings*



Check Memory Card Details	<p><i>Memory settings</i> → <i>Memory card</i></p> <ul style="list-style-type: none"> ● Check Memory Card name, memory capacity, or remaining memory.
Rename Memory Card	<p><i>Memory settings</i> → <i>Memory card</i> → <i>Name</i> → Enter name</p>
Format Memory Card	<p><i>Memory settings</i> → <i>Memory card</i> → Tap Format → Enter Phone Password → Tap OK → <i>Yes</i></p>
Confirm Total/Remaining Phone Memory	<p><i>Memory settings</i> → <i>Phone memory</i></p> <ul style="list-style-type: none"> ● View Phone memory capacity or remaining memory.
Clear Phone Memory	<p><i>Memory settings</i> → <i>Phone memory</i> → Tap Clear → Check an item to clear → Tap Clear → Enter Phone Password → Tap OK → <i>Yes</i></p>
Set Default Memory to Phone/Memory Card	<p><i>Memory settings</i> → <i>Set default memory</i> → Select an item</p> <ul style="list-style-type: none"> ● With Memory Card inserted, select Phone or Memory card. Available when editing images, saving S! Mail attachments, downloading files, receiving files via Bluetooth®, etc. ● Even when <i>Ask each time</i> is selected with no Memory Card inserted, files are automatically saved to handset.
View Memory Status	<p><i>Memory settings</i> → <i>Memory status</i> → Select an item</p> <ul style="list-style-type: none"> ● If <i>Data Folder</i> is selected, select Phone memory/Memory card. ● To delete viewed memory, tap Delete (P.12-14 Deleting Registered/Saved Data).
Backup Memory	<p><i>Backup & Restore</i> → <i>Backup</i> → <i>Yes</i> → Enter Phone Password → Tap OK → Select an item → <i>Yes</i></p>
Restore Memory	<p><i>Backup & Restore</i> → <i>Restore</i> → <i>Yes</i> → Enter Phone Password → Tap OK → Select an item → Select a file → <i>Add or Overwrite</i></p>

Connectivity Settings

Bluetooth®

Start Here

Tap Menu → Settings → Connectivity → Bluetooth

Activate/Cancel Bluetooth® Functions	Default Off	Tap On, Tap Off
Search for a New Bluetooth® Device		Tap Search → Device responds, drag it to  → Enter Authorization Code (four- to 16-digit) → Tap OK → Enter same code on device within 30 seconds
Transfer All Phone Book Entries, Calendar/Tasks, Bookmarks, Notepads, Received msg., Drafts, Sent msg. at Once		Tap Transfer all → Drag device to connect to  → Enter Phone Password → Tap OK → Select an item
Edit Handset Name	Default 9405C	Tap More → Settings → Tap Bluetooth name → Edit name
Confirm Handset Device Address		Tap More → Settings <ul style="list-style-type: none"> Address appears on Bluetooth address field.
Search/Save from Bluetooth® Devices	Default Show my phone	Tap More → Settings → My phone's visibility → Select an item <ul style="list-style-type: none"> To search and save from other Bluetooth® devices, make handset visible.
Set Default Output Device While Watching TV	Default Phone/Earphone	Tap More → Settings → Sound output setting → Phone/Earphone/Bluetooth device
Set Secure Mode	Default On	Tap More → Settings → Under Secure mode, On or Off <ul style="list-style-type: none"> On: A confirmation appears before transfers.
Adjust Handsfree Setting	Default Private mode	Tap More → Settings → Handsfree → Select an item <p>Private mode: Use Microphone for handset calls or handsfree device for device calls.</p> <p>Handsfree mode: Talk via handsfree device.</p>
Set Answering Mode	Default Normal	Tap More → Settings → Answering mode → Select an item
Set Answer Time	Default 4 seconds	Tap More → Settings → Answer time → Select an item <ul style="list-style-type: none"> To set Answer time, select Automatic in Answering mode.
Activate/Cancel S! Appli Confirmation	Default On	Tap More → Settings → Under S! Appli request, On or Off
Confirm Available Bluetooth® Functions		Tap More → Settings → Bluetooth services → Select an item

Infrared

Start Here Tap Menu → *Settings* → *Connectivity* → *Infrared*

Activate/Cancel Infrared Transmission	Default Off	Under <i>On/Off, On</i> or <i>Off</i>
Transfer Account Details		<i>Transfer account details</i>
Transfer Files		<i>Transfer files</i> → Select Data Folder → Select files → <i>Send</i>
Transfer All Phone Book Entries, Calendar/Tasks or Bookmarks at Once		<i>Transfer all</i> → Enter Phone Password → Tap OK → Select an item → Enter Authorization Code (four-digit) → Tap OK <ul style="list-style-type: none"> ● For <i>Phonebook</i>, choose <i>Yes</i> to transfer images.

IC Transmission

Start Here Tap Menu → *Settings* → *Connectivity* → *IC transmission*

Activate/Cancel IC Transmission	Default Off	Under <i>Receive setting, On</i> or <i>Off</i> → <i>Yes</i>
Transfer All Phone Book Entries, Calendar/Tasks, Bookmarks, Notepads, Received msg., Drafts or Sent msg. at Once		<i>Transfer all</i> → Enter Phone Password → Tap OK → Select items → Enter Authorization Code (four- to 16-digit) → Tap OK <ul style="list-style-type: none"> ● For <i>Phonebook</i>, choose <i>Yes</i> to transfer images.

USB

Start Here Tap Menu → *Settings* → *Connectivity*

Activate Mass Storage		<i>USB mode</i> → <i>Mass storage</i> → <i>Yes</i> → Enter Phone Password → Tap OK → Exchange files with PC <ul style="list-style-type: none"> ● You need to connect handset and your PC before this operation.
Activate Synch Mode to PC		<i>USB mode</i> → <i>MTP synch mode</i> → <i>Yes</i> → Enter Phone Password → Tap OK → Exchange files with PC <ul style="list-style-type: none"> ● You need to connect handset and your PC before this operation.
Enable/Disable USB Charger	Default Enable	USB charger → Enable/Disable

Network

Start Here Tap Menu → *Settings* → *Network settings*

Retrieve Network Information Manually		<i>Retrieve NW info</i> → <i>Yes</i> or <i>No</i>
Seek the Most Prioritized Network		<i>Re-search signal</i> → <i>Yes</i> or <i>No</i>

Memo

Dotted lines for writing content.