

# Appendix



<b>Troubleshooting</b> .....	<b>15-2</b>
<b>Software Update</b> .....	<b>15-4</b>
<b>Function List</b> .....	<b>15-5</b>
Tool Bar Menu.....	15-5
Main Menu .....	15-6
<b>Text Entry Window Key Assignments</b> .....	<b>15-8</b>
Text Entry Window Keys .....	15-8
Text Entry Keys .....	15-9
<b>Symbols</b> .....	<b>15-11</b>
Double-byte Symbols .....	15-11
Single-byte Symbols.....	15-11
Symbol Conversions.....	15-11
<b>Pictograms</b> .....	<b>15-12</b>
<b>Memory</b> .....	<b>15-13</b>
<b>Specifications</b> .....	<b>15-13</b>
SoftBank 940SC .....	15-13
Battery .....	15-14
<b>Index</b> .....	<b>15-15</b>
<b>Objective Index</b> .....	<b>15-22</b>
<b>Advanced Settings Index</b> .....	<b>15-25</b>
<b>Warranty &amp; Service</b> .....	<b>15-26</b>
Warranty.....	15-26
Repair Requests.....	15-26
<b>Customer Service</b> .....	<b>15-27</b>

## Troubleshooting

### Handset does not turn on

- ☑ Is battery empty?
  - ➔ Replace or charge battery.
- ☑ Is battery installed in handset?
  - ➔ Install battery correctly.

### When power is turned on, PIN entry window appears

- ☑ Is *PIN certification* set to *On*?
  - ➔ If *PIN certification* is *On*, enter PIN.

### When power is turned on, USIM password entry window appears

- ☑ Is *USIM lock* set to *On*?
  - ➔ If *USIM lock* is *On*, enter USIM password.

### Please insert USIM card, Incorrect USIM or USIM card failed appears when handset is turned on or executing a function

- ☑ Is USIM Card correctly installed?
  - ➔ Check to see if USIM Card is correctly installed. If the message appears even though USIM Card is correctly installed, it may be damaged.
- ☑ Is USIM Card still being loaded?
  - ➔ Try again after a while.
- ☑ Is an incorrect USIM Card being used?
  - ➔ Check to see if correct USIM Card is being used. Use USIM Card specified by SoftBank.
- ☑ Is there debris on USIM Card IC chip?
  - ➔ Remove debris with a clean, dry cloth, and then install USIM Card correctly.

### 圏外 or OUT appears and no calls can be placed

- ☑ Handset is out-of-range.
  - ➔ Move to a place where the signal is stronger and try again.

### Calls are interrupted or disconnected

- ☑ Does 圏外 or OUT appear?
  - ➔ Move to a place where the signal is stronger and try again.
- ☑ Is battery empty?
  - ➔ Replace or charge battery.

### Unable to place a call

- ☑ Is Call Barring set?
  - ➔ Deactivate Call Barring.
- ☑ Is *Offline mode* set to *On*? (📵 appears)
  - ➔ Set *Offline mode* to *Off*.

### Unable to open Phone Book entry, Data Folder, Call Log, Calendar, or Messaging

- ☑ Is *Function lock* set?
  - ➔ Cancel *Function lock*.

### Clicking noise is heard during a call

- ☑ Noise may be generated when signal is weak or while moving between coverage areas.

### Unable to charge battery

- ☑ Is AC Charger Connector securely inserted into handset?
  - ➔ Insert AC Charger Connector securely.
- ☑ Is AC Charger plug securely inserted?
  - ➔ Insert AC Charger plug securely.
- ☑ Is battery installed in handset?
  - ➔ Install battery correctly.
- ☑ Are handset terminals and AC Charger clean?
  - ➔ Clean contacts with a dry cotton swab.
- ☑ Was battery charged in ambient temperature below 5 °C or above 40 °C?
  - ➔ Charge battery in ambient temperature between 5 °C and 40 °C.
- ☑ Battery may need to be replaced.
  - ➔ Install a new battery.
- ☑ Does battery always lose its charge quickly after being charged?
  - ➔ Battery life has expired. Replace with a new battery.
- ☑ Does handset or battery become very warm during charging?
  - ➔ If the temperature rises too much, charging may stop. After handset and battery are cool, retry charging.

### Devices become hot

- ☑ During charging, AC Charger may heat up.
- ☑ Handset may heat up during charging/long calls.
  - ➔ If handset is safe to touch, heat level is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (☎P.15-27).

### Battery drains quickly

- ☑ Battery may drain quickly depending on the operating environment (ambient temperature, charging conditions, or Signal Strength), operations, and settings.
- ➔ Use handset in an appropriate environment and reduce operations requiring high power (ⓄP.1-9).

### Unable to watch TV

- ☑ Is USIM Card removed?
- ➔ Unable to watch TV with no USIM Card inserted. Insert USIM Card.
- ☑ Is subscription terminated?
- ➔ TV is enabled only during subscription period.

### Display flickers

- ☑ Is handset used near fluorescent light?
- ➔ Use handset as far away from fluorescent light as possible.

### Display is dim or unlit

- ☑ This may be due to the characteristics of Display and not a problem. The time until Display is dimmed or unlit can be changed by adjusting the Backlight time.

### Unable to play music via speaker

- ☑ Is *Manner mode* set?
- ➔ Cancel *Manner mode*.
- ☑ Is the Stereo Earphone Microphone connected?
- ➔ Disconnect the connector for the Stereo Earphone Microphone (optional) from handset.

### Too many applications are already running, appears

- ☑ Too many functions are active.
- ➔ Close some.

### Unable to establish Bluetooth® or USB connections using Samsung New PC Studio

- ☑ Is the USB driver installed? (for USB connection)
- ➔ If communications are executed connecting to a personal computer with USB cable, installing the driver is required. Download USB Driver Installer from SAMSUNG Website (<http://jp.samsungmobile.com/pc/lineup/940download.html>) and install the driver.
- ☑ Is the connection method set correctly on the personal computer?
- ➔ Set the connection method to *USB* or *Bluetooth* on the Connection Manager of Samsung New PC Studio or the Connection Wizard for the communication in use.
- ☑ Are Bluetooth® or PC USB connection port and Samsung New PC Studio the same?
- ➔ Make sure port settings match those set for Samsung New PC Studio Connection Manager or Connection Wizard.

### Phone Book entry, Message folder, schedule event in Calendar, or Tasks do not appear

- ☑ In *Security*, is *Secret mode* set to *Hide*?
- ➔ In *Security*, set *Secret mode* to *Show*.
- ☑ Is *Secret* under each function set to *On*?
- ➔ Select *Unlock temporarily* from More on the window to display information.

### Sending message failed appears

- ☑ If send fails, error message and reason appear.
- ➔ Confirm reason and try again.

### Service not allowed appears

- ☑ Handset is outside the service area.
- ➔ Send from within the service area.

### Sending operation cannot be operated in offline mode appears

- ☑ In *Offline mode*, handset transmissions are disabled.
- ➔ Set *Offline mode* to *Off* (ⓄP.1-15).

### Storage space short by \* \* bytes. Edit data folder files? appears

- ☑ Handset memory is full.
- ➔ Delete unnecessary files and try again.

### Cannot download. File corrupt. appears

- ☑ File cannot be downloaded; cancel download.

### Unable to call via Stereo Earphone Microphone (Optional) or Bluetooth®

- ☑ Is *Earphone call* set to *Off*?
- ➔ Even if *Earphone call* number is saved, if *Earphone call* is set to *Off* it will not be dialed. Set *Earphone call* to *On* (ⓄP.14-9).

## Software Update

SoftBank releases firmware updates. Download as required. Choose *Update* or *Schedule update*.


- 1 Tap Menu → *Tools* → *Convenient* → *Software update*
- 2 Tap Yes
  - Handset connects to network.
- 3 Read Terms of Use → *Agree*
  - Read Terms of Use before selecting *Agree*.
- 4 Tap PIN Code entry field → Enter Center Access Code (☎P.1-20) → Tap OK → Tap OK
- 5 Confirm result → Tap OK

## 6 Choose update method

### To Update Immediately

#### *Update now*

- Update starts. When complete, handset powers off and restarts; notification appears.

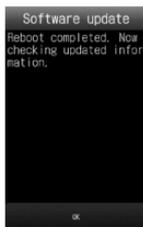

### To Schedule Later Update

- Schedule update* → Tap Yes → Select schedule date → Select schedule time → Confirm schedule date & time → Tap OK

- For procedures, contact SoftBank Mobile Customer Service.
- Confirming/downloading updates does not incur fees.
- At scheduled update time, message appears. Tap OK or wait ten seconds. Update will not start while handset is in use. When operation ends, a Message window appears. However if operation does not end within ten minutes of scheduled update time, scheduled update is automatically canceled.



- To cancel Schedule update, perform 1 to 4 and tap Yes → Tap Cancel schedule → Tap Yes on the check result screen.

## Note

- Charge battery beforehand; if low, update may fail.
- If Scheduled update time arrives while handset is out-of-range, Software Update is canceled.
- Remain within strong, stable signal conditions.
- Handset Phone Book entries, media files, and other contents are not affected by software updates, but always back-up important information (note that some files cannot be copied). SoftBank Mobile is not liable for damage from lost information, etc.
- Handset transmissions are disabled during update.
- Update may take some time to complete.
- Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance.
- If updated handset fails to restart, remove and reinsert battery then power on. If this fails, call SoftBank Mobile Customer Center, Customer Assistance (P.15-27).

## Function List

### Tool Bar Menu

Below are menu items shown on Toolbar in Standby.

Toolbar Menu Item	Page
Phone	
Call log	P.3-10
Account details	P.1-13
Favorites	P.3-7
Dial	P.3-2
Phone book	P.2-15
	P.2-18
Messaging	
Received msg.	P.4-9
	P.4-12
Create new	P.4-4
Retrieve new	P.4-22
Drafts	P.4-12
	P.4-24
Templates	P.4-12
	P.4-19
Sent msg.	P.4-12
Unsent msg.	P.4-12
Server mail	P.4-25
Create new SMS	P.4-7
Settings	P.14-10
Memory status	P.12-11

Toolbar Menu Item	Page
Yahoo!*	
Yahoo! Keitai	P.5-3
Menu list	P.5-3
Bookmarks	P.5-8
Saved pages	P.5-8
Web search	P.5-10
Enter URL	P.5-3
	P.5-4
History	P.5-10
	P.5-12
PC site browser	P.5-4
Browser settings	P.14-13

\* Tap Menu → Tap Yahoo! to open menu items (table). Tap Yahoo! to access Yahoo! Keitai main menu.

## Main Menu

To show the below items in Standby, tap Menu.

Main Menu Item	Page
Oekaki	
Oekaki anime	P.7-13
Oekaki pict	P.7-14
Photo Library	
Photo album	P.7-15
Photo movie	P.7-16
Create Flash@ slide	P.7-16
S! Appli	
S! Appli List	P.9-3
Osaifu-Keitai	P.10-6
Settings	P.14-21
Demand history	P.9-3
Entertainment	
S! Information Channel/ Weather	P.9-6
S! Quick News	P.9-5
Free contents	P.9-6
S! Contents Store	P.9-6
S! Friend's Status	P.9-7
S! Addressbook Back-up	P.13-15
Crayon Physics	P.9-3
Biorhythm	P.9-12
Number Place World	P.9-4
Touch Golf Pangya	P.9-4
Hidden Catch4	P.9-4
Dice	P.9-4
Random Ball	P.9-4

Main Menu Item	Page
Camera	
Camera	P.7-6
Sub camera	P.7-6
Video camera	P.7-12
Bar code reader	P.10-14
Media	
Music	P.8-5
Movie	P.8-7
Streaming	P.5-7
MTP synch mode	P.8-3
Settings	P.14-19
Tools	
Life	
Alarm	P.10-3
Calendar	P.10-4
Tasks	P.10-5
Osaifu-Keitai	P.10-6
S! GPS Navi	P.10-8
Expense manager	P.10-9
World clock	P.10-10
Stopwatch	P.10-10
Countdown timer	P.10-10
Good night timer	P.10-11
Convenient	
Calculator	P.10-11
Converter	P.10-12
Notepad	P.10-13
Infrared	P.13-3
Bluetooth	P.13-5
Voice recorder	P.10-13

Main Menu Item	Page
Bar code reader	P.10-14
File viewer	P.10-16
Dictionary	P.10-17
Dummy call	P.10-17
Software update	P.15-4
Data Folder	
Pictures	P.12-2
Ring songs · tones	P.12-2
S! Appli	P.12-2
Widget	P.12-2
Music	P.12-2
Videos	P.12-2
Lifestyle-Appli	P.12-2
Books	P.12-2
Message Templates	P.12-2
Flash@	P.12-2
Other Documents	P.12-2
Memory status	P.12-3
Widget	
Widget Store	P.9-14
Widget list	P.9-14
Settings	P.14-20
TV	
Watch TV	P.6-5
Program guide	P.6-6
TV links	P.6-7
TV player	P.6-9
TV image	P.6-9
Reservation list	P.6-9
Settings	P.14-15

Main Menu Item	Page
Phone func.	
Phonebook	P.2-15
Create new entry	P.2-17
Call log	P.3-10
Play answering machine	P.3-9
Call voice mail	P.3-16
Account details	P.1-13
S! Addressbook Back-up	P.13-15
Mail group	P.4-14
Favorites	P.3-7
Settings	P.14-9
Memory status	P.14-23
Settings	
Sound settings	P.14-3
Display settings	P.14-4
Phone settings	P.14-2
Touch panel	P.14-3
Security	P.14-22
Call settings	P.14-5
Manner mode settings	P.14-5
Connectivity	P.14-24
Network settings	P.14-25
Memory settings	P.14-23
Backup & Restore	P.14-23



## Text Entry Keys


Key	Kanji/Hiragana	Key (Double-/Single-byte)	Katakana
	あいうえおあいうえお 1		アイウエオアイウエオ 1
	かきくけこ 2		カキクケコ 2
	さしすせそ 3		サシスセソ 3
	たちつてと 4		タチツテト 4
	なにぬねの 5		ナニヌネノ 5
	はひふへほ 6		ハヒフヘホ 6
	まみむめも 7		マミムメモ 7
	やゆよやゆよ 8		ヤユヨヤユヨ 8
	らりるれる 9		ラリルレロ 9
	わをんー〈スペース〉 0		ワヲンー〈スペース〉 0
	., .? !		
	<ul style="list-style-type: none"> <li>● Add * / * to unfixed, convertible kana</li> <li>● Switch Upper case and lower case. (only when conversion is possible)</li> <li>● Switch to Pictograms/Single-byte Symbols/Double-byte Symbols/Emoticons entry mode</li> </ul>		

Key	Alphanumerics	Key (Double-/Single-byte)	Numbers
(double-byte) /  (single-byte) <sup>1</sup>	.@_/:~ 1	/	1
/	ABCabc2	/	2
/	DEFdef3	/	3
/	GHIghi4	/	4
/	JKLjkl5	/	5
/	MNOmno6	/	6
/	PQRSpqrs7	/	7
/	TUVtuv8	/	8
/	WXYZwxyz9	/	9
(double-byte) /  (single-byte) <sup>1</sup>	<space>0	/	0
(double-byte) /  (single-byte) <sup>1</sup>	.,?!#	/	#
/	<ul style="list-style-type: none"> <li>• Switch Upper case and lower case. (only when conversion is possible)</li> <li>• Switch to Pictograms/Single-byte Symbols/ Double-byte Symbols/Emoticons entry mode</li> </ul>		Switch to Pictograms/Single-byte Symbols/Double-byte Symbols/ Emoticons entry mode

<sup>1</sup> Both when upper-/lower-case, the same key indicates.



# Pictograms

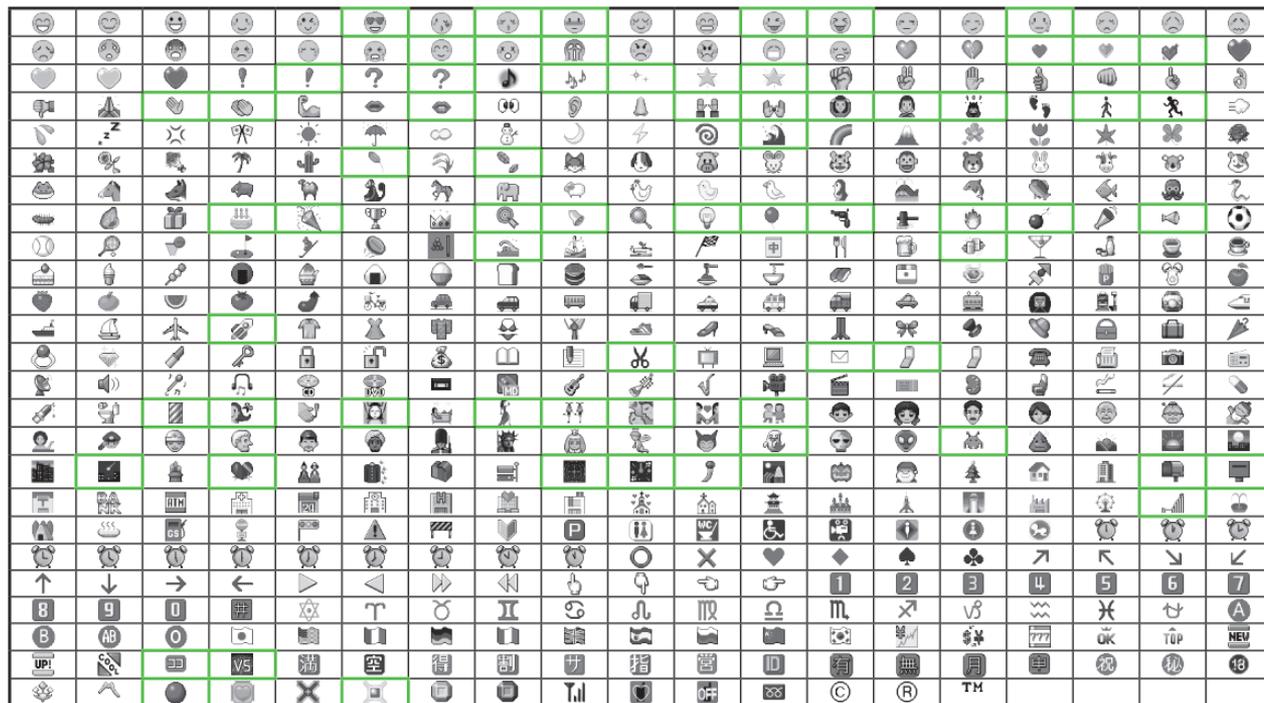

- Pictograms with  are animated.
- Some pictograms and animated pictograms may not appear properly on some models of SoftBank handsets or other devices.

## Memory

S! Mail/ SMS (Phone memory)	Received msg.	Up to 1000 messages or 10MB
	Drafts	Up to 20 messages or 3MB
	Sent msg.	Up to 500 messages or 5MB
	Unsent msg.	Up to 20 messages or 3MB
SMS	USIM Card	Up to ten messages
Data Folder	Pictures	Up to 9999 items (files/subfolders) per folder or 100 MB
	Ring songs · tones	
	S! Appli	
	Widget	
	Music	
	Videos	
	Lifestyle-Appli	
	Books	
	Message Templates	
	Flash®	
Other Documents		
Calendar/ Tasks	Up to 500 schedules/tasks	
Notepad	Up to 100 memos	
Phonebook	Handset	Up to 1000 members
	USIM Card	Up to 50 members

## Specifications

Handset specifications may change without prior notice.

### SoftBank 940SC

Item	Specification
Weight*	143 g
Continuous Talk Time*	3G Voice Call: 400 minutes/ GSM Network: 440 minutes 3G Video Call: 150 minutes
Continuous Standby Time* (Display off)	3G Network: 600 hours/ GSM Network: 480 hours
Dimensions (W x H x D) *	57x115.9x13.50 mm
Maximum Output	0.25 W

\* Approximate value

- Handset with battery installed.
- Battery Time is calculated by SoftBank Mobile under stable signal conditions. Calling in poor signal conditions or leaving handset on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent handset operations requiring Backlight (e.g., Yahoo! Keitai) may reduce Continuous Talk Time and Continuous Standby Time.
- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Time.
- Continuous Talk Time is an average measured with a battery in stable signal conditions. Continuous Standby Time is an average measured with a new, fully charged battery with handset closed without calls or operations, in Standby, in stable signal conditions. Alternating between usage and Standby shortens Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may vary by environment (battery status, ambient temperature, etc.).

## Battery

Item	Specification
Voltage	3.7 V
Type	Lithium-ion
Capacity	1500 mAh
Dimensions (W x H x D)	Approximately 64.5 x 44.0 x 5.0 mm (without protruding parts)

## Index

### A

AC Charger	1-11
Account Details	1-13
Reset	1-21
Add location info	14-18
Adjust Volume	3-3
Alarms	10-3
All Reset	11-9
Answering Machine	3-8
Cancel	3-8
Delete records	3-9
Play records	3-9
Set	3-8
Auto answer	3-23, 14-8
Auto answer list	
Add	3-23
Delete	3-23
Auto Lock	11-4
Auto redial	14-9

### B

Barcode Reader	10-14
Create QR Code	10-15
Scanning	10-14, 10-15, 10-26

Battery	1-9, 1-10
Inserting & Removing	1-10
Biorhythm	9-12
Black List	3-9
Bluetooth®	13-5
Activate/Cancel	13-5
Address	14-24
Answering mode	14-24
Applicable profiles	13-5
Authorization Code	13-6
Bluetooth services	14-24
Connectivity	13-6
Delete paired devices	13-6
Device	13-6
Edit device name	14-24
Paired device	13-6
Paired Devices Indicators	13-6
Print	12-12
Receive files	13-7
Search Devices	13-15
Secure mode	14-24
Send files	13-6
Visibility	14-24
Bookmark	5-8
Delete	5-16
Internet connection	5-8
Save	5-8
Send URL	5-16
BookSurfing®	9-12
Built-in Stand	2-4

### C

Calculator	10-11
Calendar	10-4
Delete schedule	10-19
Save schedule	10-5, 10-18
Schedule	10-4
View schedule	10-5, 10-19
Calibrate Touch Panel	14-3
Call	
Phone Book	2-19
Call Barring service	3-15, 3-19
Caller ID service	3-15, 3-21
Call Forwarding service	3-15, 3-17
Call Log	3-10
Check	3-10
Delete	3-12
Call time & cost	
Check	3-12
Reset	3-12
Set max cost limit	14-7
Show charge after call	14-6
Call Waiting service	3-15, 3-18
Camera	7-3
Anti-Shake	14-17
Attach to message for sending still image	7-18
Capture video	7-12
Editing Still Images	7-13

Effects	7-18, 7-20
Macro	7-18, 7-20
Multi shot	7-7
Panorama shot	7-8
Photo combination	7-8
Quick Play	7-9, 7-12
Scene	7-6
Send a still image via Bluetooth®	7-18
Send a still image via IC transmission	7-18
Send a still image via infrared	7-18
Settings	14-18, 14-19
Smile shot	7-7
Sub Camera	7-6
Timer	7-18, 7-20
Viewfinder	7-3, 7-10
Wide dynamic range	14-18
<b>Cancel PIN lock</b>	<b>11-4</b>
<b>Center Access Code</b>	<b>1-20</b>
<b>Change mode settings</b>	<b>1-15</b>
<b>Changing PIN/PIN2</b>	<b>11-3</b>
<b>Charge Battery</b>	<b>1-11</b>
<b>Charger Port</b>	<b>1-3</b>
<b>Clear memory</b>	<b>11-8</b>
<b>Conference Call service</b>	<b>3-15, 3-18</b>
<b>Content Key info</b>	<b>12-13</b>
<b>Convenient tools</b>	<b>10-2</b>
<b>Converter</b>	<b>10-12</b>
<b>Countdown Timer</b>	<b>10-10</b>

<b>Country number</b>	<b>14-6</b>
<b>Crayon Physics</b>	<b>9-3</b>

## D

<b>Data Folder</b>	<b>12-2</b>
<b>Date &amp; Time</b>	<b>14-2</b>
<b>Default mode settings</b>	<b>1-17</b>
<b>Dice</b>	<b>9-4</b>
<b>Dictionary</b>	<b>10-17</b>
<b>Digital TV</b>	<b>6-2</b>
Alarm	14-15
Area Setup	6-4
Auto power off	14-17
Calls & Alarms	14-17
Data Broadcast	6-6
Delete station data	14-16
Display brightness	14-16
Duration	14-16
Image location	14-16
Light	14-16
Manufacture Number	14-16
Notify connection	14-16
One Seg	6-2
Record programs	6-8
Reminder time	14-16
Save Location	14-17
Set alert tone	14-15
Set recording	14-16

Settings	6-12, 14-15
Sound language	14-16
Sound mode	14-16
Sound output	14-16
Subtitle Display	6-12
Timer recording	6-9
TV Links	6-7
TV player	6-9
TV Window	6-5
Vibration	14-15
Volume	14-15
Watch TV	6-5
<b>Display</b>	<b>1-3</b>
Backlight	14-4
Brightness	14-4
Operator name	14-4
Wallpaper	2-6
<b>Display language</b>	<b>14-2</b>
<b>Download Content Key</b>	<b>8-9, 12-11</b>
<b>Dummy Call</b>	<b>10-17</b>

## E

<b>Earphone call</b>	<b>14-9</b>
<b>Emergency call</b>	<b>3-8</b>
<b>Emergency Location Report</b>	<b>3-8</b>
<b>Expense Manager</b>	<b>10-9</b>
<b>External Device Port</b>	<b>1-3</b>

## F

<b>Face Link</b>	
Save .....	12-5
Use .....	12-6
<b>Facial Recognition</b> .....	<b>11-5</b>
Settings .....	11-5
User registration .....	11-6
<b>Favorites</b> .....	<b>3-7</b>
<b>File</b> .....	<b>12-4, 12-7</b>
Copy .....	12-8
Delete .....	12-8
Icon .....	12-4
Lock/Unlock .....	12-13
Rename .....	12-7
Set images as Wallpaper etc. ....	12-13
Set Ringtone .....	12-14
Sort .....	12-12
<b>File Viewer</b> .....	<b>10-16</b>
<b>Folder</b> .....	<b>12-7</b>
Copy .....	12-8
Create .....	12-7
Delete .....	12-8
Rename .....	12-7
<b>Free Contents</b> .....	<b>9-6</b>
<b>Function Lock</b> .....	<b>11-7</b>

## G

<b>Games</b> .....	<b>9-3</b>
<b>Global Roaming</b> .....	<b>3-13</b>
<b>Good Night Timer</b> .....	<b>10-11, 10-24</b>

## H

<b>Hidden Catch4</b> .....	<b>9-4</b>
<b>History</b> .....	<b>8-8</b>
Delete .....	5-11, 5-13, 8-13
Delete (S! Mail) .....	4-17
Delete (SMS) .....	4-21
Internet connection .....	5-3, 5-4
Media Player .....	8-8
S! Addressbook Back-up .....	13-15
S! Mail .....	4-17
SMS .....	4-20
Streaming .....	8-8
<b>Hold</b> .....	<b>1-5</b>
<b>Hold incoming call</b> .....	<b>3-3, 3-22</b>
<b>Hold Video Call</b> .....	<b>3-22</b>

## I

<b>Icon</b>	
Attached file .....	4-5
Call Log Record .....	3-11
Data Folder .....	12-2
Device .....	13-6

Display .....	1-3
File list .....	12-4
Message .....	4-10
Message list .....	4-9
Mode .....	1-16
Movie window .....	8-6
Music window .....	8-4
My Status .....	9-9
Oekaki Anime .....	7-13, 7-14
Oekaki Pict. ....	7-14
Schedule .....	10-4
S! Friend's Status .....	9-8
Shooting mode (still image) .....	7-3
Shooting mode (video) .....	7-10
Video Call .....	3-5
Weather .....	9-7
Widget .....	2-2
<b>IC transmission</b> .....	<b>13-8</b>
<b>Image Viewer</b> .....	<b>12-4</b>
<b>Incoming light</b> .....	<b>1-18</b>
<b>Infrared</b> .....	<b>13-3</b>
Authorization Code .....	13-3
Receive files .....	13-4
Send files .....	13-3
<b>International Code</b> .....	<b>14-6</b>
<b>Internet</b> .....	<b>5-2</b>
<b>Internet page</b> .....	<b>5-2, 5-5</b>
Font size .....	5-11, 5-13

**K****Key Lock** ..... 1-14**L****Language** ..... 14-2**lifestyle tools** ..... 10-2**Location Navi** ..... 10-9**Lock** ..... 11-3

Auto Lock ..... 11-4

Call Remote Lock ..... 10-7

Facial ..... 11-5

Function lock ..... 11-7

IC Card Lock ..... 10-7

Message Remote Lock ..... 10-7

Password Lock ..... 11-4

Phone Lock ..... 11-3

PIN ..... 11-4

Touch Panel and Key ..... 1-14

USIM Lock ..... 11-5

**Log**

Call Log ..... 3-10

**M****Mailbox** ..... 4-12

Drafts ..... 4-12

Received message ..... 4-12

Sent message ..... 4-12

Templates ..... 4-12

Unsent ..... 4-12

**Mail Group** ..... 4-14**Manner mode** ..... 1-16**Mass Storage** ..... 13-10, 14-25**Media Player** ..... 8-2

Add to playlist ..... 8-9, 8-11

Create playlist ..... 8-7

Download ..... 8-3

Play movie ..... 8-7

Play music ..... 8-5

Play playlist ..... 8-8

Repeat mode ..... 14-19

Settings ..... 14-19

**Memory Card** ..... 12-9

Insert/Remove ..... 12-10

**Memory Card backup** ..... 13-11**Memory Status** ..... 12-3, 12-11**Menu Operations** ..... iii**Message** ..... 4-2

3D Pictograms ..... 4-9, 4-19, 4-21, 4-23, 14-10

Action settings ..... 4-18

Attach file ..... 4-5

Change folder name ..... 4-26

Create folder ..... 4-15

Create (S! Mail) ..... 4-4

Create (SMS) ..... 4-7

Delete ..... 4-14, 4-23

Delete folder ..... 4-26

Delete messages on Server ..... 4-26

Delete templates ..... 4-14

Details ..... 4-23

Draft message icon ..... 4-10

Feeling settings ..... 4-18

Font size ..... 4-23

Forward ..... 4-11

Forward messages on Server ..... 4-26

Graphic Mail ..... 4-6, 4-19

Icon (attached file) ..... 4-5

Location Information ..... 4-13

Lock/Unlock ..... 4-14

Mail Service ..... 4-9

Maximum Size ..... 4-19

Memory Status ..... 4-26

Message notice ..... 14-10

Move ..... 4-16

Move SMS ..... 4-24

Received message icon ..... 4-10

Receive Server Mail ..... 4-25

Receiving mail list message ..... 4-25

Reply ..... 4-11

Retrieve all mail ..... 4-25

Save attachment ..... 4-14, 4-22

Save templates ..... 4-20

Save to drafts ..... 4-18, 4-21

Send draft message ..... 4-24

Sending options ..... 4-19, 4-21

Send unsent message ..... 4-24

Sent message icon	4-10
Server Mail	4-25
Server Mail memory	4-26
Set Secret	4-26
Setting address	4-4
S! Mail	4-2
S! Mail Send Reservation	4-19
SMS	4-2, 4-20
SMS Send Reservation	4-21
Sort	4-16, 4-24
Spam	4-16
Unsent message icon	4-10
Use templates	4-8
View	4-8, 4-9
View Attachment	4-22

<b>Motion Control</b>	<b>1-7</b>
-----------------------	------------

<b>Mute</b>	<b>2-5, 3-21, 3-22</b>
-------------	------------------------

## N

<b>Near Chat</b>	<b>9-10</b>
------------------	-------------

<b>Network mode</b>	<b>3-13</b>
---------------------	-------------

<b>Network Password</b>	<b>1-20</b>
-------------------------	-------------

Change	3-20
--------	------

<b>Notepad</b>	<b>10-13</b>
----------------	--------------

<b>Notification light</b>	<b>1-19</b>
---------------------------	-------------

<b>Number Place World</b>	<b>9-4</b>
---------------------------	------------

## O

<b>Oekaki</b>	<b>7-13</b>
---------------	-------------

Oekaki Anime	7-13
--------------	------

Oekaki Pict.	7-14
--------------	------

### Oekaki Anime

Send	7-22
------	------

### Offline Mode

	1-15
--	------

### Osaifu-Keitai®

Activate Lifestyle-Appli	10-6
--------------------------	------

Download Lifestyle-Appli	10-6
--------------------------	------

## P

### Password Lock

	11-4
--	------

### PC Site Browser

Certificate retention	14-15
-----------------------	-------

Copy text	5-12
-----------	------

Delete certificates	14-14
---------------------	-------

Details	5-13
---------	------

Enter URL	5-4
-----------	-----

Font size	14-4
-----------	------

Manufacture Number	14-15
--------------------	-------

PC screen	5-14
-----------	------

Script	14-15
--------	-------

Search	5-13
--------	------

Send URL	5-13
----------	------

### Phone Book

Copy	2-22
------	------

Create Message	2-21
----------------	------

Delete	2-19
--------	------

Edit	2-22
------	------

Entry	2-17
-------	------

Search	2-18
--------	------

Set Secret mode	2-21
-----------------	------

### Phone Lock

	11-3
--	------

### Phone Number (Account Details)

	1-13
--	------

### Phone Password

	1-20, 11-3
--	------------

### Photo Album

	7-15
--	------

### Photo Library

	7-15
--	------

Flash® Slide	7-16
--------------	------

Photo Album	7-15
-------------	------

Photo movie	7-16
-------------	------

### PIN

	11-4
--	------

### PIN2 Code

	1-20
--	------

### PIN Certification

	11-4
--	------

### PIN Code

	1-20
--	------

### PIN lock

	11-4
--	------

### Place a call

	3-2
--	-----

### Place a Video Call

	3-5
--	-----

### Place International calls

	3-13
--	------

### Power On/Off

	1-13
--	------

### Preferred network

	3-14
--	------

### Print Still Images

	7-17
--	------

### PUK Code

	11-4
--	------

## R

<b>Random Ball</b> .....	9-4
<b>Receive a call</b> .....	3-2
<b>Receive a Video Call</b> .....	3-6
<b>Record</b> .....	3-4
<b>Reject incoming calls</b>	
Black List .....	3-24
Edit black list .....	14-8
Payphone .....	3-10
Set reject number .....	3-9
Unavailable .....	3-10
Unknown .....	3-10
Withheld .....	3-10
<b>Reset settings</b> .....	11-8
<b>Ringtone</b> .....	1-17
<b>Ringtone reducer</b> .....	14-9
<b>Ringtone/Vibration</b> .....	2-5
<b>RSS Feed</b> .....	5-9
Delete .....	5-18
Register .....	5-9
Send .....	5-18
Update .....	5-9
View .....	5-9

## S

<b>S! Addressbook Back-up</b> .....	13-12
Sync log .....	13-15
Sync mode .....	13-13
<b>S! Applications</b> .....	9-3
<b>Saved Pages</b> .....	5-8
Delete .....	5-18
Rename .....	5-17
Save .....	5-8
View .....	5-8
<b>S! Contents Store</b> .....	9-6
<b>Secret mode</b> .....	11-7
<b>Security Code</b> .....	1-20
<b>Select 3G/GMS</b> .....	3-13
<b>Sending DTMF</b> .....	3-23
<b>Set default memory</b> .....	14-23
<b>S! Friend's Status</b> .....	9-7
Members list .....	9-7
My Status .....	9-7, 9-9
S! Friend's Status notification .....	9-8
<b>S! GPS Navi</b> .....	10-8
Check Current Location .....	10-9
My location .....	10-22
View location history .....	10-23
<b>Shortcut Icon</b> .....	2-4
<b>Shortcuts Key</b> .....	2-4

<b>S! Information Channel</b> .....	9-6
Register .....	9-6
View update information .....	9-6
Weather Indicator .....	9-7

**S! Information Channel/Weather**

Settings .....	14-20
----------------	-------

**Slide show** .....

2-6, 12-12
------------

**Software update** .....

15-4
------

**Sounds & Vibration** .....

14-3
------

**Speakerphone call** .....

3-21, 3-22
------------

**S! Quick News** .....

9-5
-----

Delete .....	9-5
--------------	-----

Refresh .....	9-5
---------------	-----

Register .....	9-5
----------------	-----

**SSL/TLS** .....

5-2
-----

**Stopwatch** .....

10-10
-------

**Streaming** .....

5-7
-----

**Swipe** .....

1-5, 2-4
----------

**Symbols** .....

15-11
-------

**System sounds** .....

1-18
------

## T

**Tap** .....

1-5
-----

**Tasks** .....

10-5
------

Delete .....	10-21
--------------	-------

**Text Entry** .....

2-8
-----

Copy .....	2-20
------------	------

Cut	2-20
Delete	2-13
Edit	2-13
Emoticons	2-11
Entry mode	2-9
Handwriting	2-10
Keypad	2-10
Line Break	2-12
Paste	2-20
Pictograms	2-11
Space	2-12
Symbol	2-11
Undo	2-20
<b>Time zone</b>	<b>14-2</b>
<b>Toolbar</b>	<b>ii</b>
<b>Touch Golf Pangya</b>	<b>9-4</b>
<b>Touch Panel &amp; Key Lock</b>	<b>1-14</b>
<b>Touch Panel Operations</b>	<b>ii, 1-5, 1-6</b>
<b>TV</b>	
Capturing still image	6-8

## U

<b>Unanswered Call</b>	<b>3-2</b>
<b>USB connection</b>	<b>13-10</b>
<b>User's Dictionary</b>	<b>2-14</b>
Delete	2-20
Save	2-14

<b>USIM Card</b>	<b>1-7</b>
Inserting & Removing	1-8
<b>USIM Lock</b>	<b>11-5</b>
<b>USIM Password</b>	<b>11-5</b>
<b>Using Main Menu</b>	<b>2-3</b>
<b>Using Toolbar</b>	<b>2-2</b>
<b>Using widgets</b>	<b>2-2</b>

## V

<b>vFile</b>	<b>12-2, 12-14</b>
<b>Vibration</b>	<b>1-18, 2-5</b>
<b>Video</b>	
Attach to message for sending video	7-20
Send video via Bluetooth®	7-20
Send video via IC transmission	7-20
Send video via Infrared	7-20
<b>Video Call</b>	<b>3-5</b>
Adjust volume	3-6
Alternative picture	14-7
Auto answer	14-8
Mute	3-22
Put a Video Call on hold	3-22
Retry with	14-8
Show My Image	14-8
Speakerphone call	3-22
<b>View Graphics/Animation</b>	<b>12-5</b>

<b>Voice Call</b>	<b>3-2</b>
Adjust ringer volume	3-2
Adjust volume	3-3
Hold incoming call	3-3
Mute	3-21
Speakerphone call	3-21
Whisper	3-21
<b>Vicemail service</b>	<b>3-15</b>
<b>Voice Recorder</b>	<b>10-13</b>
Lock/Unlock sound files	10-26
Play sound files	10-14
Record sound	10-13
Send sound files	10-25
<b>Volume</b>	<b>1-17</b>

## W

<b>Widgets</b>	<b>2-7, 9-13</b>
Add	9-15, 9-16
Mini Player	9-18
SI Friend's Status	9-17
Shortcut	9-20
SI Quick News	9-17
Wallpaper	9-16
Window Operations	2-7
<b>Window</b>	
Calendar	10-4
Member States window	9-8
Movie window	8-6

Music window . . . . .	8-4
Standby Display . . . . .	1-15
Still Image Viewer . . . . .	7-3
TV window . . . . .	6-5
Video Viewfinder . . . . .	7-10
Voice Recorder . . . . .	10-13

### Window Operations

Phone Book window . . . . .	2-16
Text Entry Window . . . . .	2-8
Widget . . . . .	2-7

### World Clock . . . . .10-10

## Y

<b>Yahoo! Keitai . . . . .</b>	<b>5-3</b>
Copy text . . . . .	5-10
Delete Certificate . . . . .	14-14
Details . . . . .	5-11
Enter URL . . . . .	5-3
Font size . . . . .	14-4
Manufacture Number . . . . .	14-14
Refresh . . . . .	5-10
Root Certificates . . . . .	14-14
Script . . . . .	14-14
Search . . . . .	5-10
Send URL . . . . .	5-11

## Number

<b>3G/GSM . . . . .</b>	<b>14-6</b>
-------------------------	-------------

## Objective Index

### Add

Favorites . . . . .	3-7
Widget . . . . .	9-15, 9-16

### Adjust volume

Hearing volume . . . . .	14-9
Ringtone volume . . . . .	3-2

### Backup

Memory Card . . . . .	13-11
Phone Book . . . . .	13-12

### Cancel/Unlock

Answering Machine . . . . .	3-8
Auto Lock . . . . .	11-4
Bluetooth® . . . . .	13-5
Call Barring . . . . .	3-20
Caller ID . . . . .	3-21
Call Forwarding . . . . .	3-17
Call Waiting . . . . .	3-18
Facial Recognition . . . . .	11-5
File Lock . . . . .	12-13
Infrared . . . . .	14-25
Key Lock . . . . .	1-14
Manner mode . . . . .	1-16
Message Lock . . . . .	4-24
Messages . . . . .	4-14
Near Chat . . . . .	9-11
Offline Mode . . . . .	1-15
Password Lock . . . . .	11-4

Phone Lock . . . . .	11-3
PIN Lock . . . . .	11-4
Secret mode . . . . .	11-7
Vibration . . . . .	2-5
Voicemail . . . . .	3-16
Whisper . . . . .	3-21

### Change

Font size in page . . . . .	5-11, 5-13
Mail address . . . . .	4-4
Mode . . . . .	1-16
Network Password . . . . .	3-20
Phone Password . . . . .	11-3
PIN . . . . .	11-3
PIN2 . . . . .	11-3

### Check

Current Location . . . . .	10-9
----------------------------	------

### Copy

File/Folder . . . . .	12-8
Message content . . . . .	4-23
Scanned characters . . . . .	10-26
Text . . . . .	2-20
Text in page . . . . .	5-10, 5-12

### Create

Flash® Slide . . . . .	7-16
Photo movie . . . . .	7-16

### Delete/Clear

Call Log . . . . .	3-12
Favorites . . . . .	3-7
File/Folder . . . . .	12-8

History . . . . .	4-17, 4-21	Memory Card . . . . .	12-10	Near Chat . . . . .	9-11
Memory . . . . .	11-8	USIM Card . . . . .	1-8	USB connection . . . . .	13-10
Messages . . . . .	4-14, 4-23, 4-26	<b>Place a call</b>		<b>Register</b>	
Motions . . . . .	7-22	Emergency call . . . . .	3-8	RSS Feed . . . . .	5-9
Notepad . . . . .	10-25	International call . . . . .	3-13	<b>Reset</b>	
Phone Book . . . . .	2-19	Video Call . . . . .	3-5	Account Details . . . . .	1-21
Recorded programs . . . . .	6-9	Voice Call . . . . .	3-2	Alarm . . . . .	10-3
Records (Answering Machine) . . . . .	3-9	<b>Play</b>		All Reset . . . . .	11-9
Reject Number . . . . .	14-8	Flash@ . . . . .	5-11, 5-13	Call Time & Cost . . . . .	3-12
RSS Feed . . . . .	5-18	Movie . . . . .	8-7	Ranking . . . . .	3-12
Schedule . . . . .	10-19	Music . . . . .	8-5	Reset settings . . . . .	11-8
S! Friend's Status member . . . . .	9-10	Photo movie . . . . .	7-16	<b>Save</b>	
Tasks . . . . .	10-21	Playlist . . . . .	8-7	Expense information . . . . .	10-9
Text . . . . .	2-13	Recorded programs . . . . .	6-9	Face Link . . . . .	12-5
User's Dictionary . . . . .	14-2	Records (Answering Machine) . . . . .	3-9	Facial Recognition . . . . .	11-6
Widget . . . . .	9-15	Sound . . . . .	5-11, 5-13	Mail address . . . . .	4-4
<b>Edit</b>		Voice Recorder . . . . .	10-14	Message . . . . .	4-20
Account Details . . . . .	1-14	<b>Protect/Lock</b>		Phone Book entry . . . . .	2-15, 2-17
Phone Book entry . . . . .	2-22	File . . . . .	12-13	S! Friend's Status . . . . .	9-7, 9-8
Schedule . . . . .	10-19	Files . . . . .	10-27	Tasks . . . . .	10-5
Still images . . . . .	7-13	Function Lock . . . . .	11-7	User's Dictionary . . . . .	2-14
Tasks . . . . .	10-22	Message . . . . .	4-24	<b>Search</b>	
Text . . . . .	2-13	Messages . . . . .	4-14	Bluetooth® . . . . .	13-6
<b>Initialize</b>		<b>Receive</b>		Characters in page . . . . .	10-27
Browser . . . . .	5-12, 5-14	Bluetooth® . . . . .	13-7	Notepad . . . . .	10-25
<b>Initiate</b>		IC transmission . . . . .	13-9	Phone Book entry . . . . .	2-18
Memory Card . . . . .	12-9	Infrared . . . . .	13-4	Tasks . . . . .	10-21
<b>Insert/Remove</b>		Message . . . . .	4-9	<b>Send</b>	
Battery . . . . .	1-10	Messages . . . . .	4-9, 4-25	Bluetooth® . . . . .	13-6

Favorites	3-7
Files	12-12
IC transmission	13-8
Infrared	13-3
Manufacture Number	14-16
Message (SMS)	4-7
Message (S1 Mail)	4-4
Notepad	10-25
Oekaki	7-22
RSS Feed	5-18
Tasks	10-21
URL	5-11, 5-13
USB connection	13-10

### Set/Activate

Alarm	10-3
Answering Machine	3-8
Auto Lock	11-4
Black List	3-9
Bluetooth®	13-5
Call Barring	3-20
Caller ID	3-21
Call Forwarding	3-17
Call Waiting	3-18
Camera	14-17, 14-18
Channel	6-4
Date & Time	14-2
Digital TV	6-12, 14-15
Display	14-4
Dummy Call	10-17
Facial Recognition	11-5

File Lock	12-13
Font	14-4
Font size	4-23
Font size in Message	14-11
Infrared	14-25
International Code	14-6
Key Lock	1-14
Manner mode	1-16
Media Player	14-19
Message Lock	4-24
Missed Call Notification	3-17
Near Chat	9-11
Offline Mode	1-15
Operator	3-14
Password Lock	11-4
Phone Book	2-19
Phone Lock	11-3
PIN Lock	11-4
Reject incoming calls	14-8
Ringtone	2-5
Secret mode	2-21, 11-7
Sounds & Vibration	14-3
Still images	7-18, 12-13
Vibration	2-5
Video	7-20, 12-14, 14-17, 14-19
Voicemail	3-16
Wallpaper	2-6
Whisper	3-21

### Show

Calendar	10-5
----------	------

Call Log	3-10
Cost after call	14-6
Records (Answering Machine)	3-9

### Update

RSS Feed	5-9
----------	-----

### View

Account Details	1-13
Call Log	3-10
Call time & cost	3-12
Captured Pictures	7-9
Data Folder	12-4
Data on Memory Card	12-10
Expense Manager	10-9
Location history	10-23
Memory status	4-26, 12-11
Message	4-8, 4-9, 4-22, 4-25
Photo Album	7-15
Ranking	3-11
Recorded Video	7-12
Reservation	6-10
RSS Feed	5-9
Scanned Barcode	10-15
Schedule	10-5
Tasks	10-5

## Advanced Settings Index

Account Details . . . . .	3-24	Page Operations . . . . .	5-15	Voice Call . . . . .	3-21
Alarm . . . . .	10-24	PC Site Browser . . . . .	5-12	Voice Recorder . . . . .	10-25
Barcode Reader . . . . .	10-26	Phone Book . . . . .	2-20	While Watching TV . . . . .	6-11
Bluetooth® . . . . .	13-14	Photo Library . . . . .	7-23	Widgets . . . . .	9-23
Bookmarks . . . . .	5-15	Received Messages . . . . .	4-22	World Clock . . . . .	10-24
Calculator . . . . .	10-24	Recording Videos . . . . .	7-20	Yahoo! Keitai . . . . .	5-10
Calendar . . . . .	10-18	RSS Feed . . . . .	5-18		
Call Log Records/Ranking . . . . .	3-24	S! Addressbook Back-up . . . . .	13-15		
Capturing Still Images . . . . .	7-18	Saved Pages . . . . .	5-17		
Conference Call . . . . .	3-24	Sending S! Mail . . . . .	4-17		
Countdown Timer . . . . .	10-24	Sending SMS . . . . .	4-20		
Currency/Unit Conversion . . . . .	10-24	S! Friend's Status . . . . .	9-21		
Dictionary . . . . .	10-28	S! GPS Navi . . . . .	10-22		
Expense Manager . . . . .	10-23	S! Information Channel . . . . .	9-21		
Facial Recognition . . . . .	11-9	S! Quick News . . . . .	9-20		
File Viewer . . . . .	10-27	Standby . . . . .	2-20		
Managing Files/Folders . . . . .	12-12	Stopwatch . . . . .	10-24		
Managing Folders . . . . .	4-26	Streaming . . . . .	8-12		
Memory Status . . . . .	12-14	Tasks . . . . .	10-21		
Movie Playback . . . . .	8-11	Text Entry . . . . .	2-20		
Music Playback . . . . .	8-9	TV Timer/TV Timer Recording . . . . .	6-13		
Notepad . . . . .	10-25	User's Dictionary . . . . .	2-20		
Oekaki . . . . .	7-21	Using/Managing Messages . . . . .	4-22		
OsaiFu-Keitai® . . . . .	10-22	Video Call . . . . .	3-22		
		Viewing Files . . . . .	12-11		

## Warranty & Service

Headset specification may change without prior notice.

### Warranty

Handset purchase includes Warranty.

- Confirm shop name and date of purchase.
- Read through the contents of the Warranty and keep it in a safe place.
- The warranty period can be found in the Warranty.

SoftBank Mobile is not liable for damage to you or a third party from missed calls, etc. due to handset failure or malfunction, etc.

### Repair Requests

Before submitting handset for repair, consult the "Troubleshooting" (☎P.15-2) for a solution. If a problem persists, contact SoftBank Mobile Customer Center, General Information (☎P.15-27) or the nearest SoftBank Shop; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

#### Note

- Handset files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. like Phone Book entries. SoftBank Mobile is not liable for damage resulting from accidental loss or alteration of handset files (Phone Book, Data Folder, etc.) or settings.
- Disassembling or modifying this product may be a violation of the Radio Law. Note that SoftBank Mobile will not accept repair requests for disassembled or modified products.

## Customer Service

For SoftBank Mobile handset or service information, call General Information. For repairs, call Customer Assistance.

### SoftBank Mobile Customer Center

From a SoftBank handset, dial 157 for General Information, or 113 for Customer Assistance, toll free.

### SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491.  
(Please take care to dial correctly. International charges will apply.)

Call these numbers toll free from landlines.

Subscription Areas	Contact	
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113



# SoftBank 940SC User Guide

---

November 2009, First Edition

SOFTBANK MOBILE Corp.



モバイル・リサイクル・ネットワーク  
携帯電話・PHSのリサイクルにご協力を。

**To help protect the environment and recycle valuable resources, mobile phone, and PHS shops displaying the above mark accept mobile phones, batteries, and chargers of all manufacturers.**

- Mobile phones, batteries, and chargers collected for recycling cannot be returned.
- To protect your privacy, delete any personal information (telephone numbers, call log records, messages, etc.) beforehand.
- For more information, please visit your nearest SoftBank Shop.

**Model Name: SoftBank 940SC**

**Manufacturer: Samsung Electronics Co., Ltd.**

---