

<b>Handset Interface .....</b>	<b>2-2</b>
Accessing Functions.....	2-3
<b>Touch Panel .....</b>	<b>2-4</b>
Using Touch Panel.....	2-4
<b>Menu Operations.....</b>	<b>2-6</b>
Main Menu.....	2-6
Using Simplified Menus (Simple Menu)	
.....	2-9
<b>Spinguru Menu.....</b>	<b>2-10</b>
Using Spinguru Menu.....	2-11
<b>Accessing Functions.....</b>	<b>2-13</b>
Shortcuts Menu & Key Shortcut ....	2-13
Toggling Active Functions (Multi Job)	
.....	2-14
Standby Shortcuts .....	2-15

<b>Motion Control .....</b>	<b>2-16</b>
<b>Viewer Position .....</b>	<b>2-18</b>
Viewer Position Setup .....	2-18
<b>Keypad Lock .....</b>	<b>2-19</b>
Activating/Canceling Keypad Lock ....	2-19
<b>Mobile Manners.....</b>	<b>2-20</b>
<b>Security Codes .....</b>	<b>2-21</b>
<b>Basic Tools.....</b>	<b>2-22</b>
My Details & Basic Tools .....	2-22
<b>Double Number.....</b>	<b>2-23</b>
Using Double Number.....	2-23
Modes.....	2-24
<b>Additional Functions.....</b>	<b>2-26</b>

# 2

## Basic Operations



## Handset Interface

### Handset Operations

Use handset keys, Touch Panel or Motion Control.

#### Handset Keys

Use Keypad, etc. with clamshell open; supports all handset operations.



#### Vector Pad

Multi Selector touch sensor area. Adjust finger pressure to control scroll speed, or make circular motion for Spinguru Menu.



Use center area for operations; using edges may inhibit cursor movement/scroll speed.

 
### Touch Panel

Touch menu items, Softkeys or icons in clamshell open or Viewer position.



### Motion Control

Move handset (e.g., shake it left or right, turn it over, etc.) to access functions, enlarge/reduce fonts or images, navigate functions, and more. (Complete setup beforehand.)

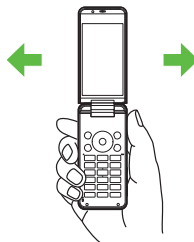


### Viewer Position

Use handset in the following styles in Viewer position.

#### Digital Camera & Portable TV

 Hold handset in landscape; press Keypad Lock & Camera Key to release shutter, or watch TV in widescreen.

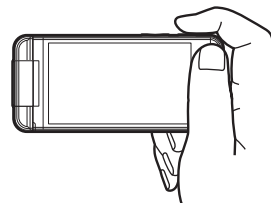

#### Compact Touch Panel Device

Intuitive Touch Panel interface supports most handset operations.



# Accessing Functions

Use the following methods as needed.

 
## Main Menu



Repeat menu item selection.

Select menu items

Use shortcuts

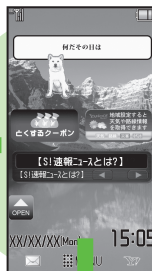

Circle finger around Vector Pad

## Spinguru Menu



Access recommended/frequently used functions or operation history, etc.

## Shortcuts



 
Access assigned functions (changeable).

## Standby Shortcuts



Save functions to Standby.

## Quick Operations

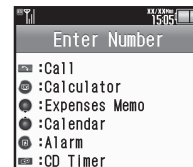

Enter numbers to access functions. To activate functions, press the corresponding key.

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.



## Using Touch Panel

2

Basic Operations

Touch Display to select menu items, open functions, scroll pages, etc.  
Available in clamshell open or Viewer position (regardless of orientation).

### Basic Operations

#### Tap



Tap item to open corresponding function; execute Softkey functions/operations.

#### Double Tap

Tap Display twice in rapid succession (within approximately 0.6 seconds).

#### Long Touch



Touch item for 1+ seconds to execute corresponding function/operation.

#### Drag



 
Touch Display and drag finger to move item or scribble/sketch; release finger when complete.

#### Swipe



Swipe a finger across Display to scroll.

#### Spread & Pinch

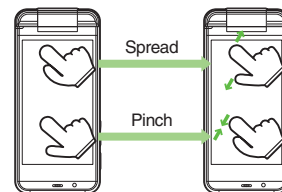

Spread or pinch your fingers across Display to enlarge or reduce images, etc.



### Advanced

● Adjusting Touch vibration (P.2-26)

## Operational Examples

## Selection &amp; Execution

 
Tap item to open or execute corresponding function/operation.

Tap **Data Folder**

The result is the same as selecting an item with and pressing .

## Two Taps

When corresponding Options menu is available, etc., tapping item may only select (highlight) it; tap the item again to execute function/operation.

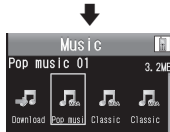Tap **Music** twice

Music folder opens

## Screen Scroll

To see items outside Display area, swipe a finger across Display in opposite direction.



Swipe right



Left portion appears

Alternatively, drag finger across Display.

## Enlarge &amp; Reduce

Spread or pinch your fingers across Display to enlarge or reduce images, etc.



Enlarged

- Double-tapping images, etc. may also enlarge/reduce them.
- On Internet page or before saving captured image, Long Touch area/portion to enlarge it.

## Open Menus

Tap **Options** or Long Touch Display to open menu.



Long Touch Display



Menu opens

 
## Important Touch Panel Usage Notes

- Touch Panel may not respond in these situations:
  - Use with gloved fingers/fingernails
  - Use of pens, pencils or other sharp objects
  - Use with objects placed on/against Display
- To prevent malfunctions, do not:
  - Touch Display with wet fingers
  - Subject Display to force/pressure
  - Place labels or stickers over Display
- Calibrate Touch Panel (P.2-8) to improve response.



## Main Menu

## Opening Main Menu

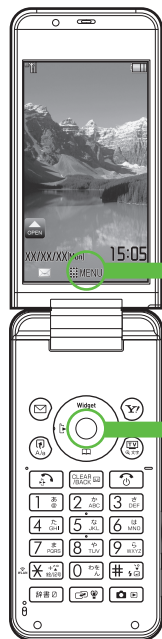

## Window Description



 
 
## Main Menu Items

<b>Messaging</b>	Open/create messages, etc.
<b>Yahoo!</b>	Browse the Internet
<b>S! Appli</b>	Use S! Applications including games
<b>Entertainment</b>	Receive news, play/download media files, etc.
<b>Camera</b>	Capture images or record video
<b>Videos/Music</b>	Access various media services
<b>Tools</b>	Manage schedules, set Alarm, scan QR Codes, etc.
<b>Data Folder</b>	Open files saved on handset/Memory Card
<b>Widget</b>	Use Mobile Widgets
<b>TV</b>	Watch/record TV programs
<b>Phone</b>	Search contacts, add entries, etc.
<b>Settings</b>	Customize handset interface, sounds, etc.



Follow these steps to open **World Clock** via handset keys or Touch Panel:  
(Touch Panel navigation screenshots are based on Viewer position.)


### Menu Navigation (Handset Keys)

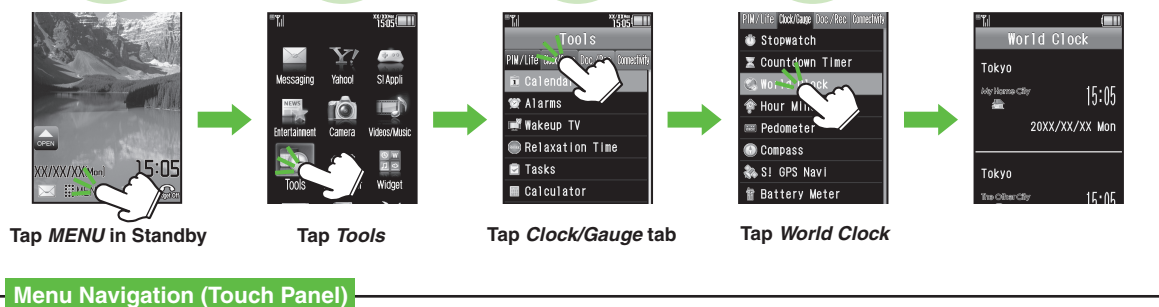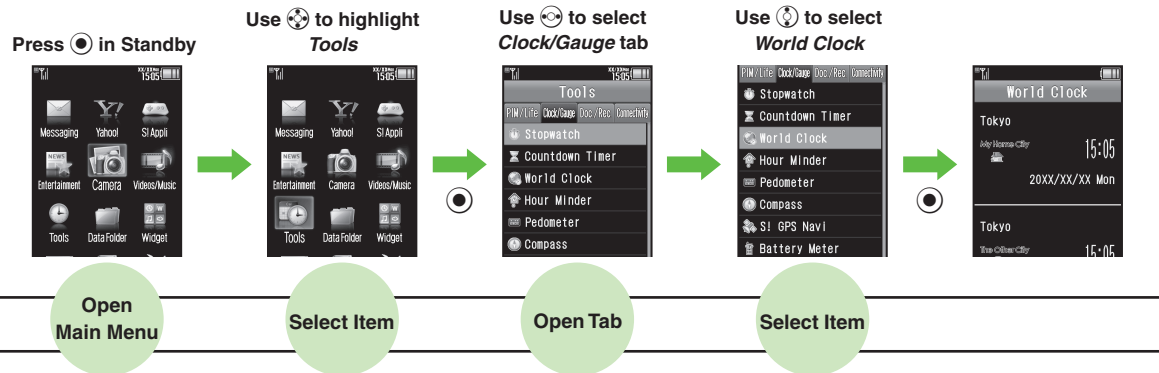

## Escape/Return (Handset Keys)

Press Press   
(Standby returns)Navigate  
BackReturn to  
Standby

 Tap CLEAR/BACK

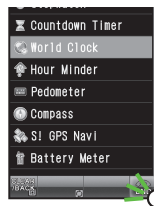

Tap END








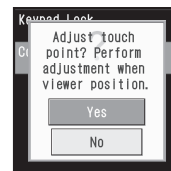 
Standby returns

## Escape/Return (Touch Panel)

## Calibrating Touch Panel

Calibrate Touch Panel to improve response.  
Hold handset normally during calibration.

- 1  ➔ **Settings** ➔  ➔   
**Phone**
- 2 **Touch Panel** ➔ 
- 3 **Correct Touch Panel** ➔ 



- 4 **Yes** ➔ 
- Follow onscreen instructions.

## Undo Calibration

- If calibration does not improve response,  
follow these steps to restore default setting:

**After 4,** 

 




# Using Simplified Menus (Simple Menu)

## Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.

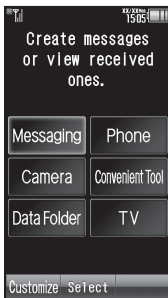

- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).


## Menu Items
 
<b>Messaging</b>	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
<b>Phone</b>	Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Call Voicemail, My Details, Speed Dial/Mail
<b>Camera</b>	Photo Camera, Video Camera, Album, Scan Barcode, Scan Card, Kanji Grabber, Review
<b>Convenient Tool</b>	Calendar, Alarms, Calculator, Assignment, Dictionary, Notepad, S! GPS Navi, Pedometer, Compass, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
<b>Data Folder</b>	-
<b>TV</b>	-

Key assignments are largely the same as those in Standard Menu.

## Activating Simple Menu

### 1 (Long)



### 2 Simple Menu ➔

#### While Using an Incompatible Function

- End the function before activating Simple Menu.

#### Canceling Simple Menu


(Long) ➔ Standard Menu ➔



## Spinguru Menu

### Basics

Circle finger around Vector Pad; keep moving finger to select functions suitable for time of day/situation, or frequently used/recently opened files/records, etc.

- Available in Standby and while using functions.
- Alternatively, make a circle on Standby Display to open Spinguru Menu; repeat motion for further operations.
- Alternatively, in Viewer position, Long Touch Softkey with  to open Spinguru Menu.

 



Spinguru Menu

- Spinguru Menu is available in landscape orientation as well.





### Menu Description

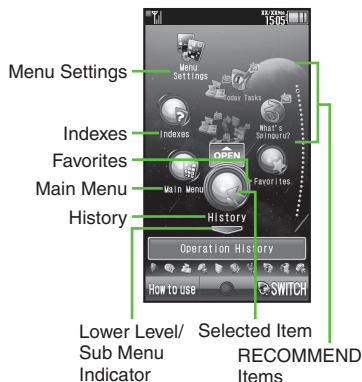
Example: Spinguru Menu opened in Standby




- If Spinguru Menu is opened while using functions, corresponding menu items also appear.
- Favorites (gateway to frequently used functions) appears from the second day after the first use of handset.
- Press  in Spinguru Menu to open operational instructions.

### Menu Navigation

  
Press  when  appears to access lower level/Sub Menu; press  (when  appears) to return.



Lower level items added

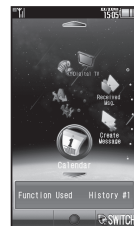 

Lower level opens

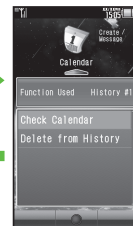 

Sub Menu opens




# Using Spinguru Menu
 
## Opening Functions

### General Items

#### 1 Circle finger around Vector Pad

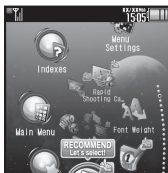

- Spinguru Menu opens.

#### 2 Circle finger further to select icon



3

- Menu/window opens.

### Deleting Functions from Spinguru Menu

After 2, 3 → *Delete Convenience*  
→ 4 → Yes → 5

### Favorites & History

#### 1 In Spinguru Menu, select *Favorites or History* icon



2



- Lower level opens.

#### 3 Select icon

4

- Follow onscreen instructions.

### Deleting Functions from Favorites or History

After 3, 4 → *Delete from Favorites or Delete from History* → 5 → Yes → 6

### Main Menu

#### 1 In Spinguru Menu, select *Main Menu* icon



2

#### 3 Select icon → 4

- Follow onscreen instructions.

## Advanced

- Sorting Favorites items ● Deleting all Favorites items ● Deleting all History items ● Restoring deleted general items (P.2-26)

2

Basic Operations



## Indexes (Japanese)

 
Search for functions by initial character of terms or keywords.

# 1 In Spinguru Menu, select *Indexes* icon



## 2 Character icons appear.

## 3 Select icon ➡

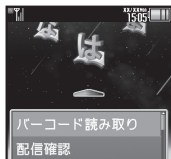

## 4 Use to select function ➡

• Follow onscreen instructions.

 
## Spinguru Menu Settings

Follow these steps to reset Spinguru Menu:

# 1 In Spinguru Menu, select *Menu Settings* icon



## 2

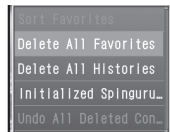


## 3 *Initialized Spinguru Menu* ➡


## 4 Yes ➡

## Toggling View

 Press to toggle Spinguru Menu between linear and spiral views. In linear view, press to access lower level items/Sub Menu; press to return.

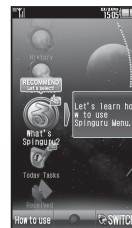

Spinguru Menu  
(linear view)

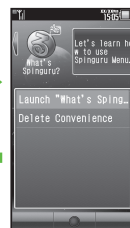 

Lower level/  
Sub Menu opens

## Advanced

- Changing scroll speed
- Setting Spinguru Menu opening method
- Changing Spinguru Menu spin speed
- Calibrating Vector Pad (P.2-26)

# Shortcuts Menu & Key Shortcut

## Shortcuts Menu

Access assigned functions via Shortcuts menu.

1



Shortcuts Menu

2 **Select function** →

- Menu/window opens.

### Changing Default Shortcuts

In , select numbered function →  
 → **Assign Function** → →  
 Select menu item → → Select  
 new item →

■ To assign menu items, select one and press .

### Assigning Files & Folders

In , select numbered function →  
 → **Assign Data** → → Select  
 file/folder →

■ For folders, select **Set this folder** and press .

## Key Shortcut

In Standby, Long Press , or to access assigned functions.

	Open S! Mail Composition window
	Open PC Site Browser menu
	Create new Phone Book entries
	Activate/cancel Bluetooth®
	Activate/cancel Infrared
	Activate Familink Remote

## Changing Assigned Functions

Follow these steps to assign Calculator to (Long Press):

1 → **Settings** → → →

2 **Set Key Shortcut** →



Key Shortcut Menu

3 **Long press** →



4 **From Appli** →

5 **Tools** → → In PIM/Life menu, **Calculator** →

### Bookmark

In 4, **From Bookmark** → →  
 Select title → → Yes →   
 Infrared, Show Secret Data, Etc. On/Off  
 In 4, **From Other** → → Select  
 item →   
**Canceling Assigned Function**  
 In 4, **Off** →

## Advanced

Changing item order Restoring default shortcuts (P.2-26)

 


# Toggling Active Functions (Multi Job)


## Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet

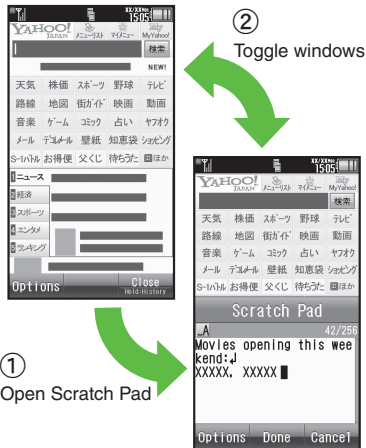


Jot down information

- Multi Job may not activate from some menus/windows (e.g., ringtone/ringvideo selection, etc.).
- Multi Job is disabled while  (gold) appears.

## Using Multi Job

- 1 In a function window,**    
In text entry/dial windows, Long Press .

 



- 2 Select function**  



- Menu/window opens.

- 3 To toggle active windows,**  

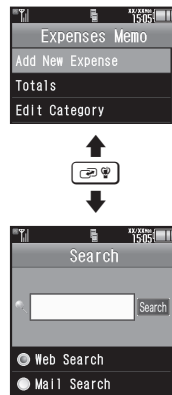

- 4  Multi Job ends**
  - If a confirmation appears, follow onscreen prompts.



## Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

### Saving Shortcuts to Standby

- 1
- 2 Use to select (OPEN)
- 3
- 4 Select item
  - Corresponding icon appears in Standby.
  - >> appears when more items are available.



### 5 Use to specify target location

#### Saving from Menu/Window

- In Options menu, select **Set as StbyShortcut** (may not appear for some items); select sheet as needed.

#### Using Pointer

- After 1, Long Press to activate pointer navigation; select widgets, etc. (To cancel pointer navigation, Long Press .)

### Using Shortcuts

- 1 Use to select icon
- Menu/window opens or command is executed.

### Toggling Sheets

Toggle sheets to use Standby Shortcuts and widgets pasted on each sheet.

- 1
  - To toggle further, press or .
  - Sheet name appears at the top, then disappears.
  - Save Standby Shortcuts as needed; corresponding icons appear on the current sheet.

### Using Locked Sheets

- Select Enter  
 Handset Code

### Removing Shortcuts from Standby

- 1 Use to select icon
- 2 Operation
- 3 Remove
- 4 Yes

### Advanced

- Sorting icons ● Moving icons ● Moving icons to front/back ● Removing icons at once ● Editing sheet names ● Locking sheets (P.2-26 - 2-27)



## Motion Control

 
2

Basic Operations

Sensor detects handset orientation or movement. Move handset to navigate pages, access functions, etc.

- Cancel Keypad Lock and activate Display first. (Not necessary for activating Quick Silent.)
- Adjust Motion Control sensor (**P.2-28**) before using Motion Control for the first time.
- Activate Motion Control by function beforehand.

### Turn Over

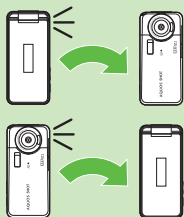

### Activate Quick Silent

Turn handset over to instantly mute ringer and stop vibration.

#### Ringer

Incoming Calls,  
Alarms, etc.

#### Vibration

Incoming Calls,  
Alarms, etc.

- Some tones may not be silenced.

### Open Quick Shortcut

 
Shake handset left and right approximately three times in Standby to access assigned functions.

- Change assigned functions as needed.

### Re-search Signal

Portrait Orientation  
Landscape Orientation

### Shake Left/Right

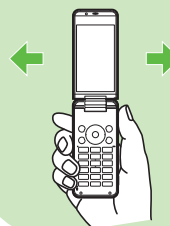

### Navigate Functions

Shake to the left to navigate back, or right to navigate forward.

#### Music

Music Player

#### Channels

TV

#### Images

Data Folder  
(Pictures)

#### Pages

Document  
Viewer

### Multi Job

Shake to the left or right to toggle active windows.

 
#### Toggle Windows

Multi Job





## Shake Forward or Backward

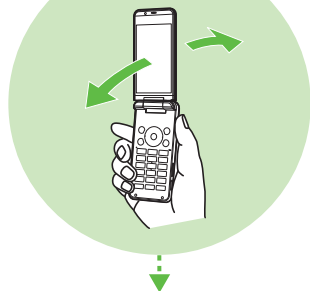

## Zoom In/Zoom Out

Shake forward to enlarge, or backward to reduce.

## Fonts

Yahoo! Keitai  
Message Window

## Zoom Image

Data Folder  
(Pictures)

## Zoom Page

 
PC Site Browser  
Direct Browser  
Document Viewer

## Toggling Motion Control On/Off

1 ➔ **Settings** ➔ ➔

**Phone/**

2 **Motion Control** ➔

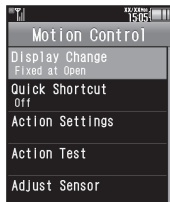

Motion Control Menu

3 **Action Settings** ➔

4 **Select function** ➔

5 **On or Off** ➔

## Enabling Quick Shortcut

1 In Motion Control menu,  
**Quick Shortcut** ➔

2 **Switch On/Off** ➔

3 **On** ➔

## Activating Show Secret Data Temporarily

Enter Handset Code ➔ Shake handset left or right

- Close handset (clamshell closed) in Standby to cancel Show Secret Data.

## Important Motion Control Usage Notes

- Hold/shake handset correctly to avoid unintended results.
- Motion Control may be unavailable while handset is ringing/vibrating.
- Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently to avoid injury/breakage. Do not shake handset roughly; handset may slip, resulting in injury or damage.

 
## Advanced

- Changing Display rotation method
- Changing Quick Shortcut items
- Deleting Quick Shortcut items
- Restoring default Quick Shortcut items
- Practicing Motion Control actions
- Adjusting Motion Control sensor (P.2-27 - 2-28)



## Viewer Position Setup

Menu below appears the first time Display is rotated to Viewer position; set handset to automatically execute one of the following actions upon rotating Display to Viewer position:

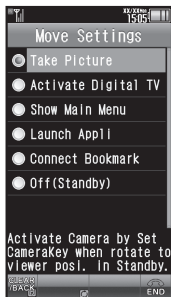

Viewer Position Menu

### Actions

Take Picture	Activate mobile camera
Activate Digital TV	Activate TV
Show Main Menu	Open Main Menu
Launch Appli	Access assigned function
Connect Bookmark	Access saved URL
Off(Standby)	Keep Standby

### 1 In Viewer Position Menu, tap item

- Setting is applied and Viewer position setup option confirmation appears.

### 2 Tap Yes or No

- Selection appears.

#### Take Picture

- In Photo Viewfinder, Mobile Light may illuminate automatically depending on ambient light level. Follow these steps to turn setting off:

**[Photo Viewfinder] Tap MENU ➔ Tap Mobile Light twice ➔ Tap Off twice Launch Appli or Connect Bookmark**

- Handset accesses the assigned function or URL; change function/URL as needed.

#### From Standby

● ➔ Settings ➔ ● ➔ Phone/☎ ➔ Viewer Position ➔ ● ➔ Move Settings ➔ ● ➔ Select item ➔ ●

### Advanced

- Changing function assigned to Launch Appli in Move Settings ● Changing URL assigned to Connect Bookmark in Move Settings (P.2-27)



## Activating/Canceling Keypad Lock

### Activating

Prevent accidental operation/function activation in Viewer position.

#### 1 In Viewer position,

- Display goes dark and Keypad Lock activates.

#### When Keypad Lock is Active

- Handset keys and Touch Panel are locked.

### Canceling

Open handset (clamshell open). To cancel Keypad Lock in Viewer position, follow these steps:

#### 1

- Display activates.

#### 2

- Keypad Lock deactivates.
- Alternatively, swipe down on ▼ **Unlock**.

#### Automatic Keypad Lock (Viewer Position)

- In Viewer position, Display goes dark and Keypad Lock activates after a period of inactivity; follow the steps above to cancel it.

### Advanced



- Canceling Keypad Lock upon Display activation
- Changing Keypad Lock cancellation method (P.2-28)



## Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

### Manner Mode

Mutes most handset function sounds.




#### 1 (Long)



 
- Manner mode is set.

#### When Manner Mode is Active

- Ringtones and other sounds are muted.
- 940SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
- To unmute Speaker temporarily while playing music, etc., follow these steps:

During playback,  ➔  ➔ **Yes or No** ➔ 

#### Canceling Manner Mode

 (Long)


### Offline Mode

 Temporarily suspends all transmissions.

#### 1 ➔ **Settings** ➔ ➔ **Network**



#### 2 **Offline Mode** ➔

#### 3 **On** ➔

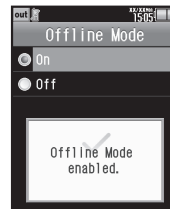

- Offline Mode is set.

#### Canceling Offline Mode

 In , **Off** ➔ 

### Advanced

-  • Changing handset modes • Creating a custom mode • Resetting Mode Settings (P.2-28)



## Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

<b>Handset Code</b>	<b>9999</b> by default; use or change some functions
<b>Administrator Code</b>	<b>9999</b> by default; required for Reset Settings, Reset All, Direct Browser Lock, Proxy Setting, etc.
<b>Center Access Code</b>	4-digit code selected at contract; access Optional Services via landlines or change contract details
<b>Network Password*</b>	4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring)

\*Change as needed.

### Incorrect Code Entry

 
- Message appears for incorrect code entries; retry.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.

### Changing Security Codes

Enter four to eight digits.

#### Changing Handset Code

- 1 ➔ **Settings** ➔ ➔
- 2 **Locks** ➔

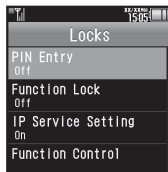

Locks Menu

- 3 **Chg. Handset Code** ➔

- 4 **Enter current Handset Code** ➔

- 5 **Enter new Handset Code** ➔

- 6 **Re-enter new Handset Code** ➔
  - To change Administrator Code subsequently, choose **Yes** and press .


#### Changing Administrator Code

 - 1 In **Locks** menu, **Administrator Setting** ➔
- 2 **Change Administrator Code** ➔
- 3 **Enter current Administrator Code** ➔
- 4 **Enter new Administrator Code** ➔
- 5 **Re-enter new Administrator Code** ➔






 
## My Details & Basic Tools
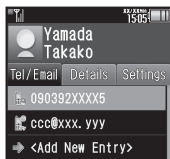
### My Number



- Handset phone number and the name entered at initial setup appear.

### Editing My Details

 
After 1,  (select tab) ➡ Select item ➡  ➡ Select item ➡  ➡ Edit ➡ 

### VeilView

Activate VeilView to prevent peeking.



### Canceling VeilView



### Pen Light



- Mobile Light illuminates.



### Important Pen Light Usage Note

- Do not point Pen Light at people or look at it directly.

### Battery Meter

 



- Approximate battery strength appears.

### Battery Strength %





- 100% may not appear even when battery is full. This is by design; not a malfunction.

### Phone Help



- For *Indicators*, select category and press .

## Advanced

-  Clearing My Details
-  Selecting My Details items to send
-  Toggling My Details in Dual Mode
-  Changing battery strength indicator pattern
-  Changing VeilView pattern/density (P.2-28 - 2-29)

 


## Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- Outside Japan, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.17-42).

### Two Phone Numbers & Two Mail Addresses

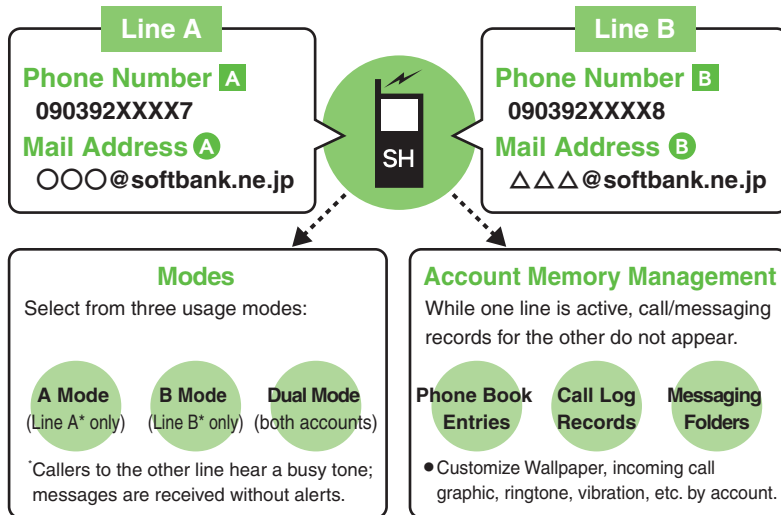

### Activating Double Number

Make sure signal is stable.

- 1 ➔ **Settings** ➔ ➔ ➔ **Phone/**
- 2 **Double Number** ➔
- 3 **Switch On/Off** ➔
- 4 **On** ➔
- 5 **Enter Handset Code** ➔ ➔ **Yes** ➔

### Canceling Double Number

In 4, **Off** ➔ ➔

- When Double Number is canceled:
  - Line B calls and SMS messages are redirected to Line A Phone Number.
  - Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
  - Double Number account is not affected.



# Modes

Activate **A Mode** to use Line A only, **B Mode** to use Line B only, or **Dual Mode** to use both accounts.

## A Mode

### Receive Calls to Line A Only

- Place calls or send messages via Line A.

#### A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

## B Mode

### Receive Calls to Line B Only

- Place calls or send messages via Line B.

#### B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status, S! Circle Talk and Decoration Call are unavailable.

## Advanced

- Omitting Handset Code entry when switching modes
- Renaming Double Number modes
- Showing indicator for calls missed or new mail on idle line
- Hiding Internet connection confirmation (**P.2-29**)





## Dual Mode

## Receive Calls to Both Accounts

- Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

## Phone Book Entries

Specify A, B or Dual.

## Messaging

 
Select Line A or Line B.  
Sender Address changes accordingly.

## Calling

Select Line A or Line B.  
Caller ID changes accordingly.


- Line type indicators appear in Phone Book entries, message lists, Call Log records, etc.

## Switching Modes

-  (Long)
- Enter Handset Code ➡ ●
- Select mode ➡ ●
  - For *B Mode*, a confirmation appears.
- Yes ➡ ●

## In Dual Mode

 During an operation, if prompt window below appears, select a line and press ●.



If customizable by line, line indicator appears bottom right; press ⌂ to switch.



If line selection is otherwise required, follow onscreen prompts.

## Advanced

-  Rejecting calls to either line in Dual Mode
-  Setting main line for Dual Mode (P.2-29)



## Touch Panel

Adjusting Touch vibration	<p>Start Here → Settings → Touch Panel → Touch Reaction → See below</p> <p>Touch Vibration Off in Manner Mode On(Except Manner Mode)</p> <p>Touch Vibration Always Off Off</p>

## Spinguru Menu

Sorting Favorites items	Open Spinguru Menu → Select Menu Settings icon → Sort Favorites → Yes
Deleting all Favorites items	Open Spinguru Menu → Select Menu Settings icon → Delete All Favorites → Yes
Deleting all History items	Open Spinguru Menu → Select Menu Settings icon → Delete All Histories → Yes
Restoring deleted general items	Start Here Open Spinguru Menu → Select Menu Settings icon → See below
	All Items Undo All Deleted Convenience → Yes
	One Item Select Undo XX → Yes
Changing scroll speed	Settings → Phone/Pad Settings → Scroll Speed → Select speed

Setting Spinguru Menu opening method	Settings → Phone/Pad Settings → Launch Spinguru Menu by → Select method
Changing Spinguru Menu spin speed	Settings → Phone/Pad Settings → Jog Speed → Select speed
Calibrating Vector Pad	Settings → Phone/Pad Settings → Correct Vector Pad → (Long)

## Shortcuts

Changing item order	R → Select numbered function → Move → Select target location
Restoring default shortcuts	R → Select numbered function → Set to Default → Yes

## Standby Shortcut

### Operations in Standby

Sorting icons	Sort Icon → Select option • Widgets may also be sorted depending on the size.
Moving icons	Use to select icon → Operation → Change Layout → Specify target location



Moving icons to front/back	➔ Use  to select icon ➔  ➔ <i>Operation</i> ➔ <i>To Front</i> or <i>To Back</i> ➔
Removing icons at once	<div>  ➔  ➔ <i>Operate from List</i> ➔  ➔ <i>Remove</i> ➔  ➔ See below         </div> <p><b>All Icons</b>  <i>Remove All</i> ➔  ➔  ➔ <i>Shortcut</i> ➔ Select sheet ➔  ➔ <i>Yes</i> ➔ </p> <p><b>Selected Icons</b>  <i>Select &amp; Remove</i> ➔  ➔  ➔ <i>Shortcut</i> ➔ Select icon ➔  (✓) ➔ Complete selection ➔  ➔ <i>Yes</i> ➔ </p>

## Sheets

Editing sheet names	<div>  ➔  ➔ <i>Settings</i> ➔  ➔ <i>Sheet Settings</i> ➔  ➔ <i>Change Sheet Name</i> ➔  ➔ See below         </div> <p><b>Renaming</b>  <i>Select sheet</i> ➔  ➔ Enter name ➔ </p> <p><b>Resetting All Sheet Names</b>   ➔ <i>Yes</i> ➔ </p>
Locking sheets	<div>  ➔  ➔ <i>Settings</i> ➔  ➔ <i>Sheet Settings</i> ➔  ➔ <i>Set Sheet Lock</i> ➔ Enter Handset Code ➔  ➔ See below         </div> <p><b>Activating Lock</b>  <i>Select sheet</i> ➔  ➔ <i>On</i> ➔ </p> <p><b>Changing Method for Temporary Access</b>  <i>Unlock Method</i> ➔  ➔ <i>No Password</i> ➔           • Press , then select  and press  to unlock sheet temporarily.       </p>

## Viewer Position Setup

Changing function assigned to Launch Appli in Move Settings	➔ <i>Settings</i> ➔  ➔ <i>Phone/Phone</i> ➔ <i>Viewer Position</i> ➔  ➔ <i>Set Appli</i> ➔ Select menu item ➔  ➔ Select new item ➔
Changing URL assigned to Connect Bookmark in Move Settings	➔ <i>Settings</i> ➔  ➔ <i>Phone/Phone</i> ➔ <i>Viewer Position</i> ➔  ➔ <i>Set Bookmark</i> ➔ Select title ➔  ➔ <i>Yes</i> ➔

## Motion Control

Changing Display rotation method	➔ <i>Settings</i> ➔  ➔ <i>Phone/Phone</i> ➔ <i>Motion Control</i> ➔  ➔ <i>Display Change</i> ➔ Select method ➔
Changing Quick Shortcut items	➔ <i>Settings</i> ➔  ➔ <i>Phone/Phone</i> ➔ <i>Motion Control</i> ➔  ➔ <i>Quick Shortcut</i> ➔ <i>Shortcut Entry</i> ➔  ➔ <i>Portrait or Landscape</i> ➔ Select menu item ➔  ➔ Select new item ➔ • To assign menu items, select one and press .
Deleting Quick Shortcut items	➔ <i>Settings</i> ➔  ➔ <i>Phone/Phone</i> ➔ <i>Motion Control</i> ➔  ➔ <i>Quick Shortcut</i> ➔ <i>Shortcut Entry</i> ➔  ➔ <i>Portrait or Landscape</i> ➔  ➔ <i>Delete</i> ➔  ➔ <i>Yes</i> ➔



Restoring default Quick Shortcut items	● → <b>Settings</b> → ● → <b>Phone/</b> <b>Motion Control</b> → ● → <b>Quick Shortcut</b> → ● → <b>Shortcut Entry</b> → ● → <b>Reset Settings</b> → ● → <b>Enter Handset Code</b> → ● → <b>Yes</b> → ●
Practicing Motion Control actions	● → <b>Settings</b> → ● → <b>Phone/</b> <b>Motion Control</b> → ● → <b>Action Test</b> → ● → <b>Select item</b> → ● • Follow onscreen instructions.
Adjusting Motion Control sensor	● → <b>Settings</b> → ● → <b>Phone/</b> <b>Motion Control</b> → ● → <b>Adjust Sensor</b> → ● • Follow onscreen instructions. • Avoid adjusting sensor near metal/magnetic objects or aboard trains or in vehicles.

## Keypad Lock

Canceling Keypad Lock upon Display activation	● → <b>Settings</b> → ● → <b>Phone/</b> <b>Touch Panel</b> → ● → <b>Keypad Lock</b> → ● → <b>Set Keypad Lock</b> → ● → <b>Simple Lock</b> → ●
Changing Keypad Lock cancellation method	● → <b>Settings</b> → ● → <b>Phone/</b> <b>Touch Panel</b> → ● → <b>Keypad Lock</b> → ● → <b>Keypad Unlock</b> → ● → <b>Select method</b> → ●

## Mode

	<b>Start Here</b> → ● → <b>Settings</b> → ● → <b>In Sound/Display menu, Mode Settings</b> → ● → <b>See below</b>
Changing handset modes	<b>Selecting a Handset Mode</b> <b>Select mode</b> → ● <b>Customizing Handset Modes</b> <b>Select mode</b> →  → <b>Select item</b> → ● → <b>Adjust settings</b> • Not available for Normal mode.
Creating a custom mode	● → <b>Settings</b> → ● → <b>In Sound/Display menu, Mode Settings</b> → ● → <b>Original</b> →  → <b>Select item</b> → ● → <b>Adjust settings</b>
Resetting Mode Settings	● → <b>Settings</b> → ● → <b>In Sound/Display menu, Mode Settings</b> → ● → <b>Select mode</b> →  → <b>Enter Handset Code</b> → ● → <b>Yes</b> → ●

## My Details

Clearing My Details	● →   → <b>Reset My Details</b> → ● → <b>Yes</b> → ●
Selecting My Details items to send	● →   → <b>Set Send Items</b> → ● → <b>Select item</b> → ● (  /  ) → <b>Complete selection</b> →
Toggling My Details in Dual Mode	● →   → <b>Switch to B or Switch to A</b> → ●



## Battery Meter

Changing battery strength indicator pattern

- ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ● ➔ **Mini Battery** ➔ ● ➔ **Select pattern** ➔ ●
- Battery strength (shown as a percentage) is for reference only.

## VeilView

Changing VeilView pattern/density

- Start Here** ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ● ➔ **VeilView** ➔ ● ➔ See below
- Pattern**
- Pattern Setting** ➔ ● ➔ **Select pattern** ➔ ● ➔ **Select scale or Animation** ➔ ●
- Density**
- Density Setting** ➔ ● ➔ **Select density** ➔ ●
- Not available when pattern is set to **Animation**.

## Double Number

## ■ All Modes

- Omitting Handset Code entry when switching modes**
- ➔ **Settings** ➔ ● ➔ Phone/☎ ➔ **Double Number** ➔ ● ➔ **Password Entry** ➔ ● ➔ **Off** ➔ ● ➔ **Enter Handset Code** ➔ ●
- Renaming Double Number modes**
- ➔ **Settings** ➔ ● ➔ Phone/☎ ➔ **Double Number** ➔ ● ➔ **Mode Name** ➔ ● ➔ **Select mode** ➔ ● ➔ **Enter name** ➔ ● ➔ **Select icon** ➔ ●

## ■ A Mode &amp; B Mode

- Showing indicator for calls missed or new mail on idle line**
- ➔ **Settings** ➔ ● ➔ Phone/☎ ➔ **Double Number** ➔ ● ➔ **Show Missed** ➔ ● ➔ **On** ➔ ●
- Hiding Internet connection confirmation**
- ➔ **Settings** ➔ ● ➔ Phone/☎ ➔ **Double Number** ➔ ● ➔ **Packet Warning** ➔ ● ➔ **Off** ➔ ●
- Available for B Mode.

## ■ Dual Mode

- Rejecting calls to either line in Dual Mode**
- ➔ **Settings** ➔ ● ➔ Phone/☎ ➔ **Double Number** ➔ ● ➔ **Reject By Line** ➔ ● ➔ **Select line** ➔ ● ➔ **On** ➔ ●
- Setting main line for Dual Mode**
- ➔ **Settings** ➔ ● ➔ Phone/☎ ➔ **Double Number** ➔ ● ➔ **Send Priority** ➔ ● ➔ **Select option** ➔ ●

