

Videos/Music	9-2
Accessing Webcasting Sites (Japanese).....	9-2
Media Player	9-3
Media Player Basics	9-3
Music	9-5
Playing Music.....	9-5

Video	9-6
Playing Video	9-6
Playlists	9-7
Using Playlists	9-7
Additional Functions	9-8
Troubleshooting	9-12

9

Video & Music

 


Accessing Webcasting Sites (Japanese)

Access Yahoo! Streaming and other webcasting sites.

- Subscription to Keitai Wi-Fi may be required to use some services/content.
- Read information on the source site.

1  ➔ **Videos/Music** ➔ 

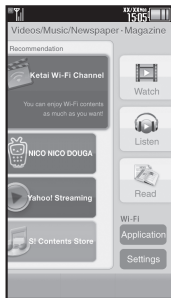

- If an update message appears, follow onscreen prompts.

2  **Select item** ➔ 

- Follow onscreen instructions.

Menu Updates


Information window opens for Videos/Music menu update notice. Follow these steps to open it:

1  **In Information window, Menu Update Notif.** ➔ 

2 **Yes** ➔ 

- Follow onscreen instructions.

Suppressing Information Window for Menu Updates

 
-  ➔ **Settings** ➔  ➔ **Phone/** 
- ➔ **Video/Music Menu Updates** ➔ 
- ➔ **Notification Off** ➔ 

Streaming

Most media on webcasting sites are provided as streams; handset plays media while it downloads.

Playing Media Streams

1  **Select file** ➔ 

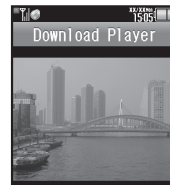


- Playback starts.
- For playback window description, see P.9-6 "Video Playback Window Description."

Stopping Playback

During playback,  ➔ **Back** ➔ 

Playback Sound

- Streaming sound is heard from Speaker/Headphones regardless of  Sound Output setting in Media Player.



Media Player Basics

Use Media Player to play music/video on 940SH.

- Download media files from Mobile Internet sites via Media Player or transfer files from PCs or AQUOS Blu-ray Disc recorders (hereafter "Blu-ray Disc recorders").
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)
Downloads/Transferred Files

SD AUDIO

(Memory Card)
Transferred SD-Audio Files

WMA

(Memory Card)
Transferred WMA Files

Video File Support

My Videos

(Handset/Memory Card)
Downloads/Recorded Files

Recorder Contents/ SD VIDEO

(Memory Card)
Transferred SD-Video Files

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download). Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.

Compatibility

 
- Files transferred from PCs cannot be used as ringtones or System Sounds.



Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

- 1 **Entertainment** **Media Player**

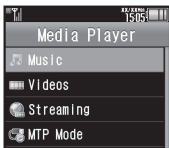

Media Player Menu

- 2 **Music or Videos**

- 3 **Download Music or Download Videos**

- Follow the links to download media.

Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

 
Saving AAC Files

Convert PC music files to 940SH-compatible format (P.17-20), then save to corresponding Memory Card folder (P.17-24) via Mass Storage. Install USB Cable driver beforehand.

Saving WMA Files

Follow these steps to save WMA files via compatible software:
(Copy protected files can only be played on the handset with which the files were transferred.)

- 1 **Connect handset to a PC via USB Cable**

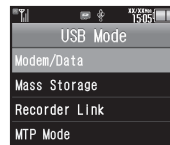

- 2 **MTP Mode**

- Copy music from PC. Refer to the software's help menu for operational instructions.

- 3 **Yes**
- Connection ends**

- Disconnect USB Cable.

If Menu in 1 Does Not Appear

- Follow these steps:
 - Tools** **Connectivity** **USB Mode** **From**
 - Operations on the PC may be required; if prompted, follow onscreen instructions.



Playing Music

- 1
- 2 **Media Player**
- 3 **My Music** **Select tab (folder)**



Music Playlists Window

- 4 **All Music**
- 5 **Select file**



Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files. (WMA album art is not supported.)

Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

Playing SD AUDIO or WMA Files

In , **SD AUDIO** or **WMA** From

Searching Music Files

After , Enter search text

Lyric Display-Compatible Files


- Press to display lyrics.

Music Playback Operations

Replay	(Long Press: Rewind*)
Skip Forward	(Long Press: Fast Forward*)
Volume Down	(Long Press: Mute)
Volume Up or Cancel Mute	
Pause	
Stop	In Pause,
Switch Sound Output	(Long)
Open Help	

*Release for playback.

 Music Playback Window Description

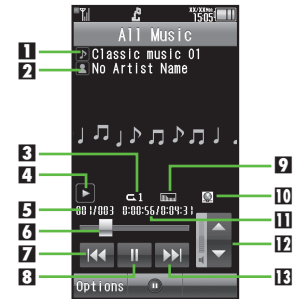

1	Title	8	Pause
2	Artist name	9	Sound Effects
3	Playback Mode	10	Information link
4	Status	11	Elapsed time
5	Track number	12	Volume control
6	Playback slider	13	Skip forward
7	Replay		

Advanced

- Resuming from stopped point Specifying start point Playing repeatedly or randomly Changing Sound Effects (And more on P.9-8)

 


Playing Video

1 **Entertainment**

2 **Media Player Videos**


3 **My Videos Phone Memory or Memory Card**

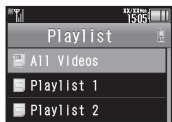

Video Playlists Window

4 **All Videos**

 5 **Select file**

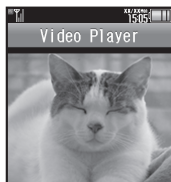

Video Playback Window

6 **Playback stops**

Playing Video Files Transferred from Blu-ray Disc Recorders

In **Recorder Contents**

Playing SD VIDEO Files

In **SD VIDEO**

Searching Video Files

After **Search** Enter search text

At Alarm Time

- Playback pauses.

Video Recorded on Other Devices

- Video image may appear rotated.

Video Playback Operations

For pause, volume up/down, sound output or help, see P.9-5 "Music Playback Operations."

Replay	(Long Press: Rewind')
Skip Forward	(Long Press in Pause: Advance Frame, Long Press: Fast Forward')
Toggle Display Size	

'Release for playback.

Video Playback Window Description



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode	10	Pause

Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Switching audio output to wireless device
- Playing repeatedly or randomly
- Changing Sound Effects
- Changing playback size
- Setting Backlight status
- Hiding linked information (P.9-8 - 9-9)



 
Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.


Adding to Playlist

Follow these steps to add a music file to **プレイリスト1**:

- 1 → **Entertainment** →
- 2 **Media Player** → → **Music**
→

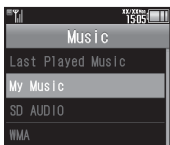

 
- 3 **My Music** →
- 4 **All Music** → → **Select file**
→

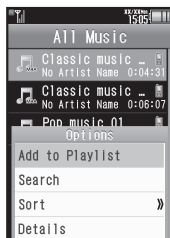

- 5 **Add to Playlist** → → **プレイリスト1** →

Renaming Playlists

 - 1 **In Playlists window, select Playlist** →

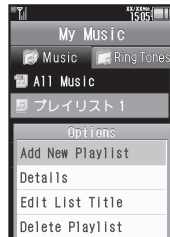

- 2 **Edit List Title** → → **Enter name** →



Advanced

- Organizing Playlists ● Sorting files ● Opening properties ● Deleting/editing SD AUDIO files ● Deleting All WMA files ● Downloading Contents Keys (P.9-9 - 9-10)
- Organizing Playlists ● Sorting files ● Downloading Contents Keys ● Opening properties ● Deleting SD VIDEO files ● Renaming files transferred from Blu-ray Disc recorders (And more on P.9-10 - 9-11)



Media Playback

■ Music & Video

Resuming from stopped point	<ul style="list-style-type: none"> ● ➔ Entertainment ➔ ● ➔ Media Player ➔ ● ➔ Music or Videos ➔ ● ➔ Last Played Music or Last Played Video ➔ ●
Specifying start point	<ul style="list-style-type: none"> During playback, (⏮) ➔ Time Search ➔ ● ➔ Enter time ➔ ●
Accessing linked information	<ul style="list-style-type: none"> During playback, (i) ➔ Access Web Link ➔ ● ➔ Yes ➔ ●
Switching audio output to wireless device	<ul style="list-style-type: none"> ● ➔ Entertainment ➔ ● ➔ Media Player ➔ ● ➔ Music or Videos ➔ ● ➔ Settings ➔ ● ➔ Sound Output ➔ ● ➔ Bluetooth Device ➔ ●

■ Music

Playing repeatedly or randomly	(Start Here) During playback, (⏻) ➔ Playback Mode ➔ ● ➔ See below
	Repeat One File Repeat ➔ ●
	Repeat All Files Repeat All ➔ ●
	Play Randomly Random ➔ ●
Changing Sound Effects	During playback, (⏮) ➔ Sound Effects ➔ ● ➔
	Select effect ➔ ●

Changing illumination settings

(Start Here) ● ➔ Entertainment ➔ ● ➔ Media Player ➔ ● ➔ Music ➔ ● ➔ Settings ➔ ● ➔ Music Illumination ➔ ● ➔ See below

Enabling Illumination

Switch On/Off ➔ ● ➔ On ➔ ● ➔ (Y)

Changing Illumination Pattern

Illumi. Pattern ➔ ● ➔ Select pattern ➔ ● ➔

Select color ➔ ● ➔ (Y)

• Light color is unselectable for some patterns.

Changing Key Illumination Pattern

Key Pattern ➔ ● ➔ Select pattern ➔ ● ➔ (Y)

■ Video

Some functions may be unavailable depending on file.

Playing repeatedly or randomly

(Start Here) During playback, (⏻) ➔ Settings ➔ ● ➔ Playback Mode ➔ ● ➔ See below

Repeat One File

Repeat ➔ ●

Repeat All Files

Repeat All ➔ ●

Play Randomly

Random ➔ ●



Changing Sound Effects	During playback, → Settings → → Sound Effects → → Select effect →
Changing playback size	During playback, → Settings → → Display Size → → Select size →
Setting Backlight status	During playback, → Settings → → Backlight → → Select option → <ul style="list-style-type: none"> Selecting Normal Settings applies Display Backlight settings.
Hiding linked information	During playback, → Settings → → Web Link Setting → → Off →

Managing Music Files

Organizing Playlists	→ Entertainment → → Media Player → → Music → → My Music → → Select tab (folder) → See below
	Adding New Playlists → Add New Playlist → → Enter name →
	Deleting Playlists Select Playlist → → Delete Playlist → → Yes →
	Deleting Playlist Files Select Playlist → → Select file → → Delete → → Yes →
	Changing File Order Select Playlist → → Select file → → Change Order → → Select target location →

Sorting files	→ Entertainment → → Media Player → → Music → → My Music → → Select tab (folder) → All Music → → Sort → → Select option →
	→ Entertainment → → Media Player → → Music → → See below
Opening properties	SD AUDIO Files SD AUDIO → → All Music → → Select file → → Details →
	Other Files My Music → → Select tab (folder) → Select Playlist → → Select file → → Details →
Deleting/editing SD AUDIO files	→ Entertainment → → Media Player → → Music → → SD AUDIO → → See below
	Deleting Single Files All Music → → Select file → → Delete Track → → Yes → <ul style="list-style-type: none"> Source files will be deleted.
	Deleting All Files All Music → → Delete All Tracks → → Yes → → Yes → <ul style="list-style-type: none"> Source files will be deleted.
	Editing Title/Artist All Music → → Select file → → Edit → → Select item → → Enter title or name →



Deleting All WMA files	<p> ● → Entertainment → ● → Media Player → ● → Music → ● → Settings → ● → Delete All WMA → ● → Enter Handset Code → ● → Yes → ● • Source files will be deleted. </p>
Downloading Contents Keys	<p> ● → Entertainment → ● → Media Player → ● → Music → ● → My Music → ● → ☺ Select tab (folder) → Select Playlist → ● → Select file (with 🗨) → ● → Yes → ● • Follow onscreen instructions. </p>

Managing Video Files

Organizing Playlists	<p> [Start Here] ● → Entertainment → ● → Media Player → ● → Videos → ● → My Videos → ● → Phone Memory or Memory Card → ● → See below </p>
	<p> Adding New Playlists ☺ → Add New Playlist → ● → Enter name → ● </p>
	<p> Deleting Playlists Select Playlist → ☺ → Delete Playlist → ● → Yes → ● </p>
	<p> Deleting Playlist Files Select Playlist → ● → Select file → ☺ → Delete → ● → Yes → ● </p>
	<p> Changing File Order Select Playlist → ● → Select file → ☺ → Change Order → ● → Select target location → ● </p>

Sorting files	<p> ● → Entertainment → ● → Media Player → ● → Videos → ● → My Videos → ● → Phone Memory or Memory Card → ● → All Videos → ● → ☺ → Sort → ● → Select option → ● </p>
Downloading Contents Keys	<p> ● → Entertainment → ● → Media Player → ● → Videos → ● → My Videos → ● → Phone Memory or Memory Card → ● → All Videos → ● → Select file (with 🗨) → ● → Yes → ● • Follow onscreen instructions. </p>
Opening properties	<p> [Start Here] ● → Entertainment → ● → Media Player → ● → Videos → ● → See below </p>
	<p> SD VIDEO Files SD VIDEO → ● → Select file → ☺ → Details → ● </p>
	<p> Files Transferred from Blu-ray Disc Recorders Recorder Contents → ● → Select file → ☺ → Details → ● </p>
Deleting SD VIDEO files	<p> Other Files My Videos → ● → Phone Memory or Memory Card → ● → Select Playlist → ● → Select file → ☺ → Details → ● </p>
	<p> ● → Entertainment → ● → Media Player → ● → Videos → ● → SD VIDEO → ● → Select file → ☺ → Delete → ● → Yes → ● • Source files will be deleted. </p>



Renaming files transferred from Blu-ray Disc recorders	<p>● → Entertainment → ● → Media Player → ● → Videos → ● → Recorder Contents → ● → Select file → ☰ → Rename → ● → Enter name → ●</p>
Checking Memory Card memory status	<p>● → Entertainment → ● → Media Player → ● → Videos → ● → Recorder Contents → ● → ☰ → Memory Remaining → ●</p>
Deleting files transferred from Blu-ray Disc recorders	<p>Start Here ● → Entertainment → ● → Media Player → ● → Videos → ● → Recorder Contents → ● → See below</p> <p>Single Files Select file → ☰ → Delete → ● → Yes → ●</p> <p>All Files ☰ → Delete All → ● → Enter Handset Code → ● → Yes → ●</p>



Music

? How do I delete files in All Music?

- Delete All Music files in My Music via Data Folder (Music or Ring Songs:Tones).

? WMA files do not appear (WMA files are not transferable)

- Did you use 940SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform **Delete All WMA** and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)
- WMA files may be corrupted; perform **Delete All WMA** and retry.

? Cannot play WMA files

- Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform **Delete All WMA** and retry.

Video

? How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

? Cannot play video files

- Files created with PC software, etc. may not play.

