S! Appli

Before Using S! Appli	16-2
Downloading S! Appli	
Using S! Appli	16-3
Activating S! Appli	
Terminate/Suspend & Resume	
Using S! Appli Startup History	
Managing Applications	16-4

Before Using S! Appli

S! Appli are JavaTM-based applications designed to run on SoftBank handsets. Download games and other real-time applications for use on handset.

- Separate subscription required to use downloaded applications (not required for pre-installed S! Appli).
- For usage on pre-installed applications, see Help menu for each S! Appli.

Note

• For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Network S! Appli

Network S! Appli requires Network connection.

• Connection fees apply.

License Information

> Main Menu > S! Appli > Information

Downloading S! Appli

Download up to 100 S! Appli files to handset/microSD Card.

 End suspended S! Appli if any. However, S! Appli may not be ended during calls.

Main Menu 🕨 S! Appli 🕨 S! Appli List

Download S! Appli → YES

Handset connects to the Network, and download site appears.

- 2 Select an S! Appli Properties appear.
- **3** Follow onscreen instructions
- **4** Select a save location

Downloaded S! Appli is saved to Data Folder automatically.

- Download may take some time.
- 5 YES to activate

Downloaded S! Appli starts.

- To exit: *NO*
- Download Lifestyle-Appli
- > Main Menu > Tools or S! Appli > Osaifu-Keitai
 - ▶ Lifestyle-Appli ▶ Download ▶ YES ▶ Select a Lifestyle-Appli
- Lifestyle-Appli: 🖙 P.13-10

Using S! Appli

Activating S! Appli

Main Menu 🕨 S! Appli 🕨 S! Appli List

Select an S! Appli

Application starts and \bigotimes appears.

- See application Help menu for usage information.
- Confirmation appears when selecting Network S! Appli.
- For a microSD Card S! Appli, press 👜 [microSD] before Step 1.

Note

- Activate an S! Appli; Main Menu > Data Folder > S! Appli > Select an S! Appli
- Incoming transmissions pause S! Appli.
- AV output compatible applications may be viewed on a TV set (C→P.11-18).

Tip

Settings ●Volume ●Backlight On/Off ●Deactivate Vibration ●Update S! Appli Information on microSD Card from Another Handset (17-P.18-26)

Terminate/Suspend & Resume

Terminating/Pausing S! Appli

- While running an S! Appli, 🗩

Resuming/Terminating Paused S! Appli

Main Menu 🕨 S! Appli 🕨 S! Appli List

Replayed or Stopped

Resumed application starts from paused point.

Using S! Appli Startup History

- Main Menu 🕨 S! Appli 🕨 S! Appli History
- 1 Highlight a record → ∑ [Menu] → Start, S! Appli info or Delete

Managing Applications

Moving S! Appli between Handset and microSD Card

Main Menu 🕨 S! Appli 🕨 S! Appli List

- Highlight an S! Appli → \Im [Menu] → *Move to microSD* or *Move to phone*
 - Some S! Appli may not be moved to microSD Card.

Deleting S! Appli

Main Menu 🕨 S! Appli 🕨 S! Appli List

- 1 Highlight an S! Appli → [Y][Menu] → Delete → YES
 - Some pre-installed S! Appli may not be deleted.

Viewing S! Appli Properties

Main Menu 🕨 S! Appli 🕨 S! Appli List

1 Highlight an S! Appli $\rightarrow \Im$ [Menu] \rightarrow S! Appli info

Setting Security Level while Running S! Appli

• Security Level cannot be set for some applications.

Main Menu 🕨 S! Appli 🕨 S! Appli List

- 1 Highlight an S! Appli $\rightarrow \Im$ [Menu] \rightarrow Security level
- 2 Select an item (See below)

Item	Operation/Description
Network Access	Connect to the Network
Auto Invocation	Activate S! Appli
Multimedia Recording	Activate Camera
Data Reading Access	Read data in Data Folder
Data Rewrtng Accss	Write/delete data in Data Folder
Location Access	Retrieve Location information

3 Always Allowed, Ask First Time*, Ask Every Time or Not Allowed

* Confirmation appears the first time application is activated.

Reset Security Level Settings

Reset security level settings to default or condition when downloading. > In Step 2, *Reset Sec. Setting* \rightarrow *YES*

S! Appli

16